


# EPSON PROJECTOR

## Setup and Front/Rear Projection

Make sure all settings are set then go to EXTENDED.

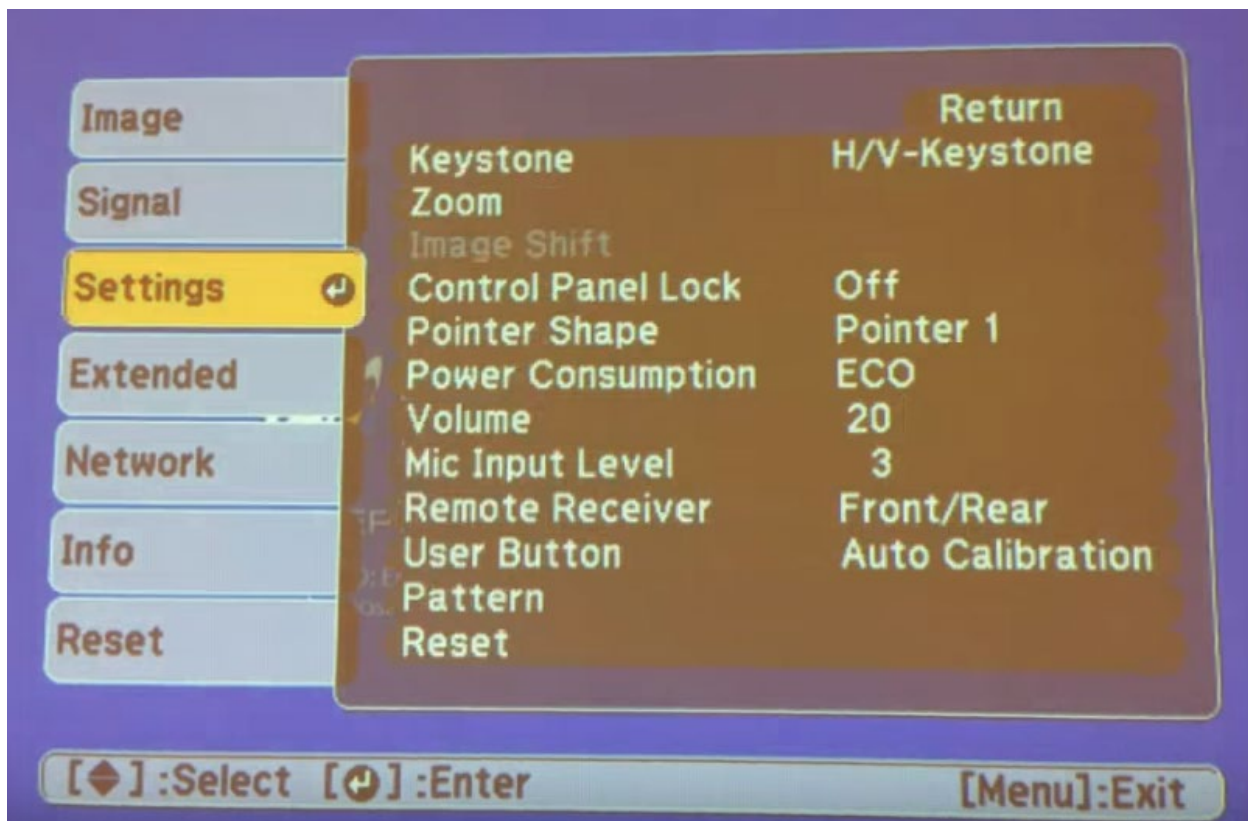

To FLIP the screen select EXTENDED

Projection: Choose Front/Up side down