




SLE-ANTEXT-ISO

Ground Fault Isolation Plate

Installation Instructions

The **SLE-ANTEXT-ISO** can be used for new or existing installations to eliminate the possibility of ground fault system troubles in Commercial Fire applications. Use the four holes in the mounting surface to secure the **SLE-ANTEXT-ISO**, then secure the L-bracket to the **SLE-ANTEXT-ISO** with the four supplied screws ($\frac{1}{2}$ " Phillips pan head). If needed, eight screw holes are available for securing the **SLE-ANTEXT-ISO** to the mounting surface.

To shed rain water, the face of the **SLE-ANTEXT-ISO** includes grooves, and its angled top should always be mounted so that rainwater runs **AWAY** from the installed L-bracket, as shown.

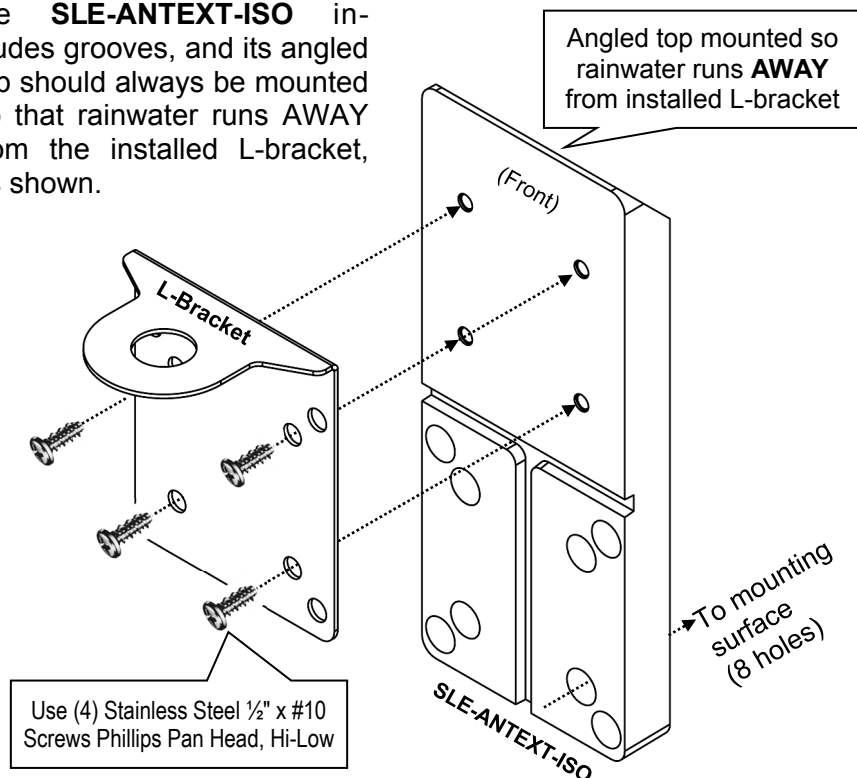

333 Bayview Avenue, Amityville, New York 11701

For Sales and Repairs, (800) 645-9445

For Technical Service, (800) 645-9440 or visit us at

<http://tech.napcosecurity.com/>

(Note: Technical Service is for security professionals only)

Publicly traded on NASDAQ Symbol: NSSC