 


# ZAP

## Zaap TX-3000 Motorized Treadmill

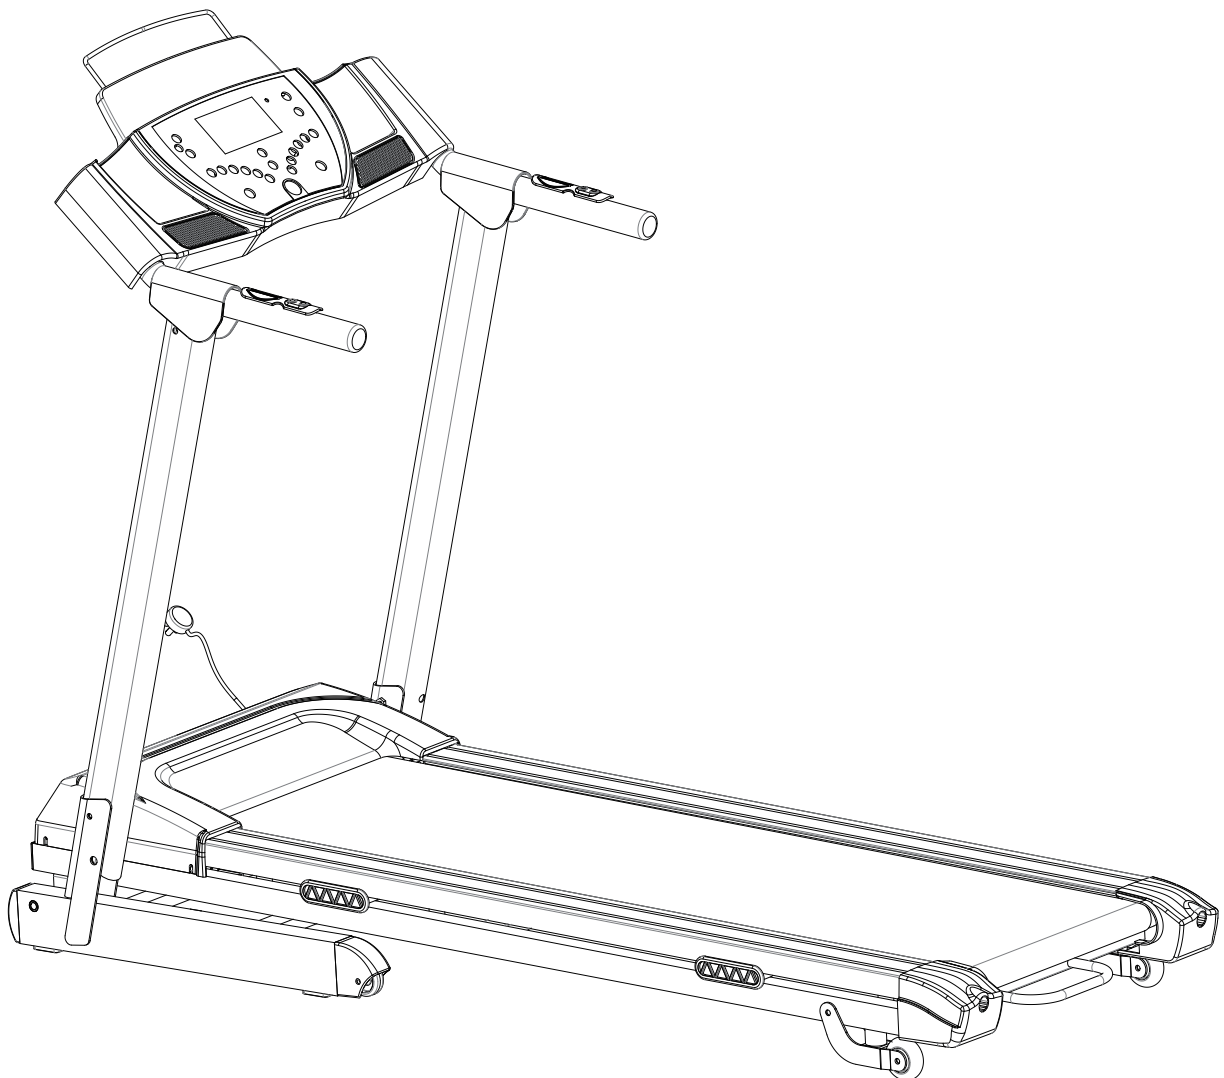

**Note:**

**Before installation and operation, please read this operation manual carefully and save this manual for future reference.**

# Safety Precautions

Please keep this manual for future reference.

1. Before commencing assembly and use of your new Treadmill, carefully read the instruction manual to understand the information provided. The correct installation, maintenance and use of your Treadmill is important to ensure you get the safest and most effective fitness workout.
2. Please ensure the equipment has been assembled according to the assembly manual.
3. If you are over 45 years old, have health or medical problems and/or this is your first time exercising in over 12 months, please consult your local Doctor or Medical Professional before use.
4. Should you experience any of the following symptoms including: headache, chest tightness, irregular heartbeat, shortness of breath, dizziness, nausea or any sharp muscle or joint pain, immediately stop training and consult your Doctor or Medical Professional.
5. Ensure that young children and pets are kept away from the equipment to prevent injury, the equipment is for adult use only.
6. The equipment should be placed on a hard, flat surface and at least 0.5 meters away from any obstacles.
7. Before using the equipment, please check all nuts and bolts of the Treadmill are tightened securely.
8. Do not place the treadmill in rooms or areas that are exposed to high levels of moisture i.e. outside, near heated indoor pools/spas, non-insulated garages or rooms.
9. It is strongly recommended you wear appropriate clothing and footwear when using your Treadmill for your own personal comfort.
10. The equipment is not suitable for use as a medical device.

## Directions for Use

In order to avoid an accident, please ensure you have the treadmill safety key securely attached to your clothing. In the event, that you accidentally trip or slip whilst walking or running on the treadmill, removing the safety key from the console will ensure the power is paused to the motor bringing the belt to a stop. Re-attach the safety key to commence your workout.

When exercising on the treadmill concentrate on looking straight ahead and not at your feet, to avoid any risk of tripping or falling. Increase the speed gradually allowing yourself to adapt to the speed setting before making any further speed adjustments.

To pause or stop your treadmill use the emergency stop button or safety key when necessary.

 
Once you have completed installation of the treadmill and the motor cover is securely on, you may plug in the power cord. It is recommended you use a good quality surge protector device.

1. Position the treadmill on a clean and level surface, close to a dedicated wall socket power point. A rubber floor mat is recommended to assist with maintenance and protection of your floor.
2. For your safety, never start the treadmill while you are standing on the running belt. Place your feet on either side of the running belt side rails and press the start button. Increase the speed gradually to the desired speed level before standing on the belt surface.
3. Wear appropriate clothing and footwear when exercising on the treadmill. Do not wear long, loose fitting clothing that could become caught in any of the moving parts of the treadmill.
4. Always wear the safety key attachment.
5. The motor cover should never be removed while in use. A qualified electrical technician must be in attendance should any maintenance work need to be carried out. Always unplug the power cord should the cover ever need to be removed for maintenance reasons.
6. Young children should be kept away from the treadmill whilst it is in use to avoid injury and safety concerns.


## Assembly Instructions

We recommend 2 people assist in assembling this unit. Place all parts of the Treadmill in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed. Before you start installation inspect and prepare all parts and screws featured in this manual. When you open the carton, you will find the following parts.


**S1**

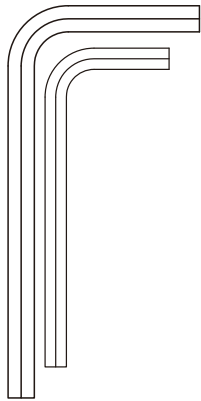


**S2**

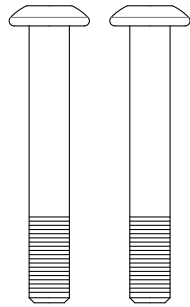 


**S4**

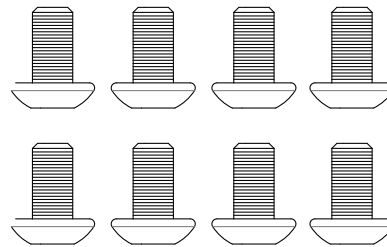 

**S6**

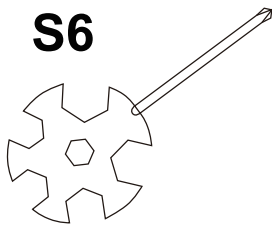 


**S7**

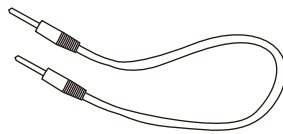 


**S8**



 
**S14**

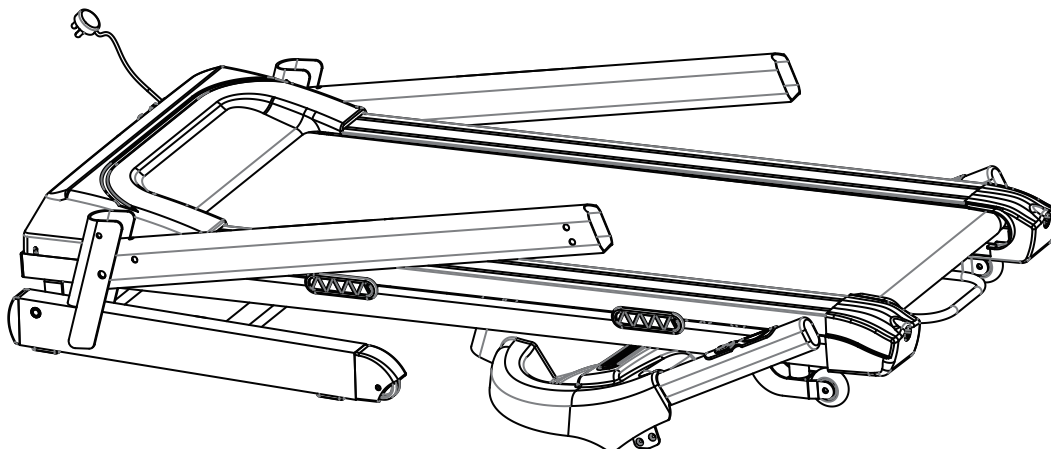


### Step 1

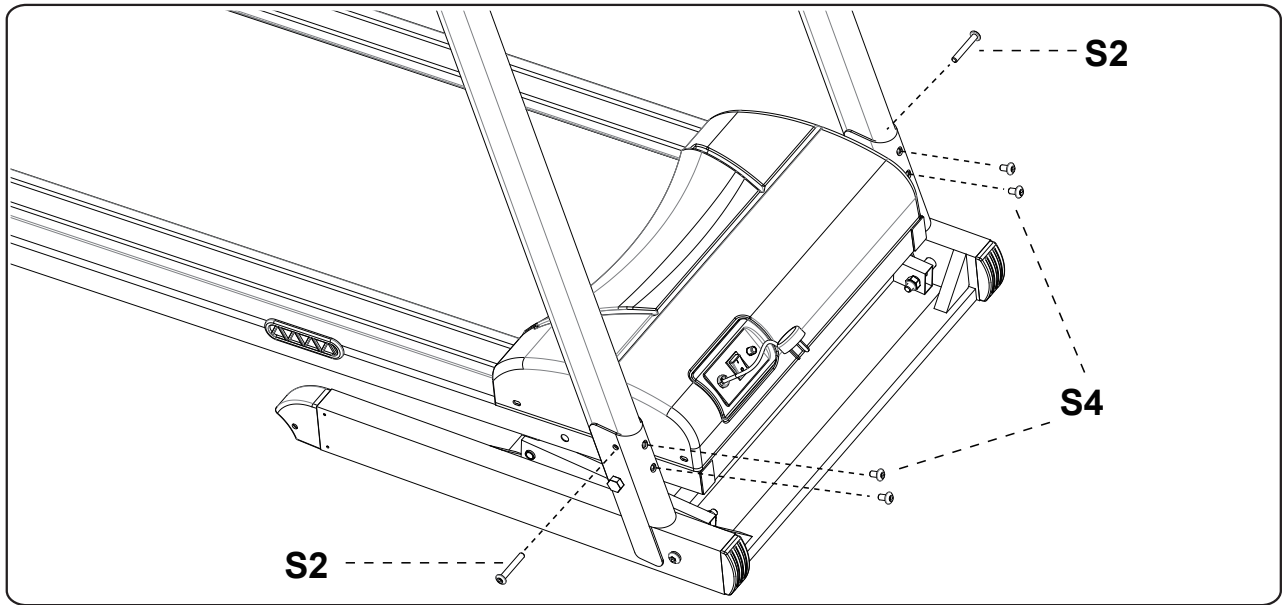 

### Step 2

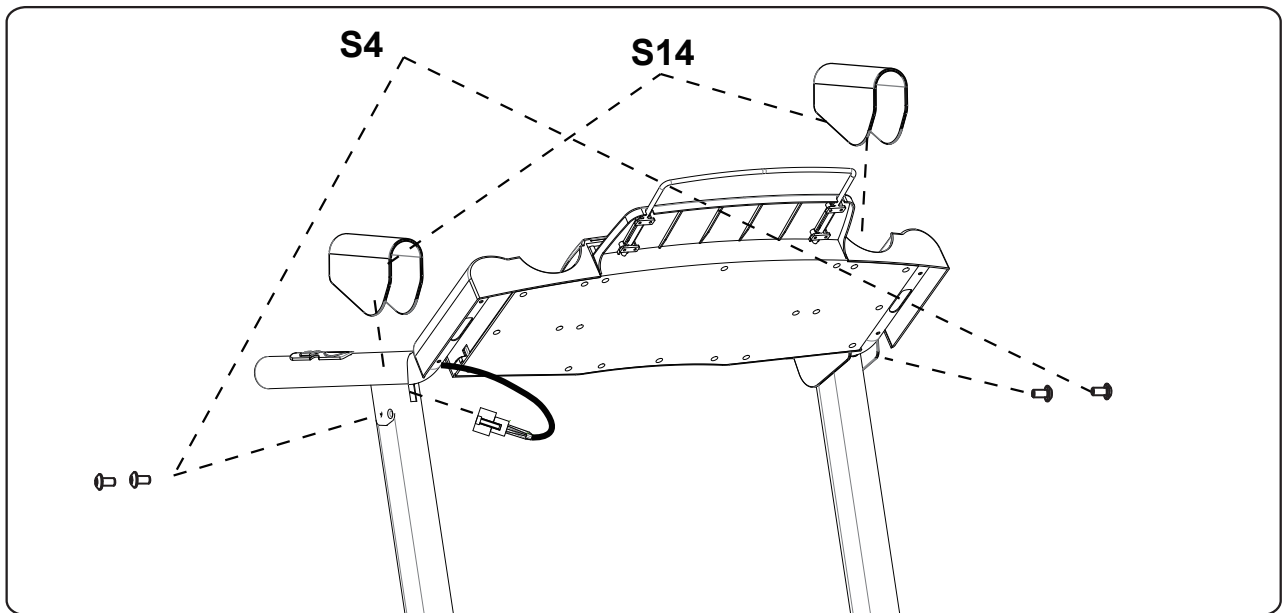 

## Moving & Storage Instructions

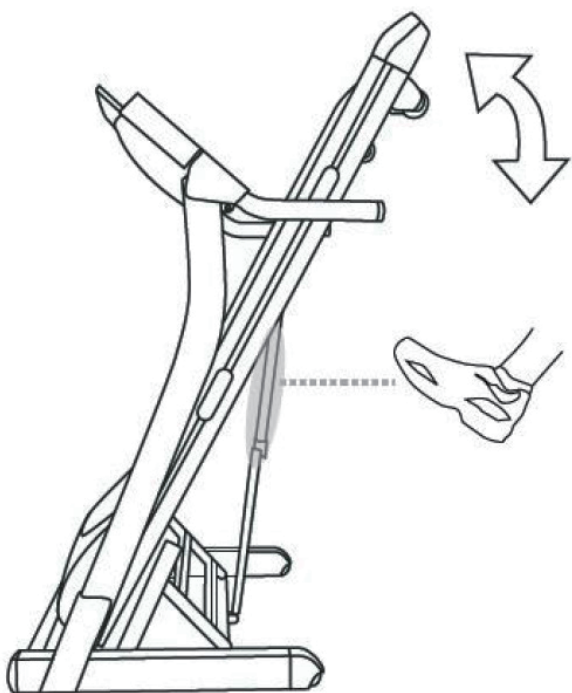 

### Folding away your Treadmill

A.) Turn off the treadmill, switch off at the main power switch and pull out the plug.

 
B.) Lift the treadmill deck up towards the main console. You should feel the treadmill gas spring system engage.

C.) To lower the treadmill deck, press the gas spring system in with your foot to disengage the lock. The treadmill deck can now be lowered to the ground.


### Moving your Treadmill

The treadmill can then be moved by tilting the treadmill deck towards you onto its transportation wheels.

(Please ensure the power cord cable has been disconnected from the treadmill before attempting to move it).

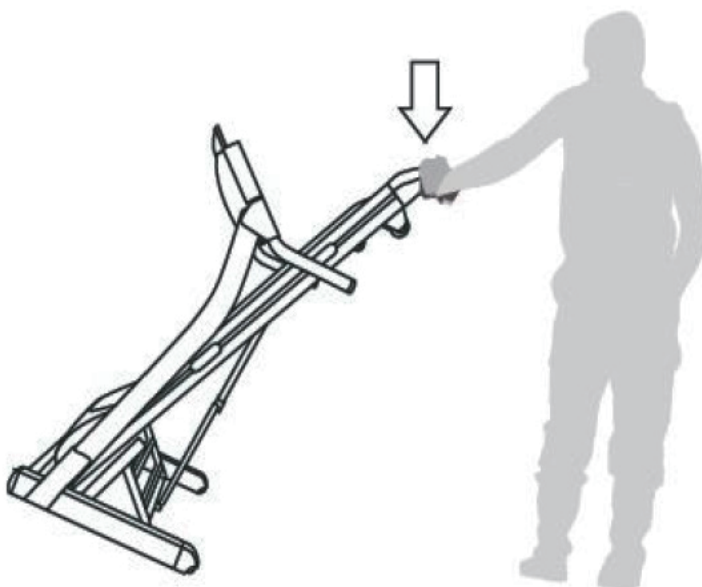

## Operation Instructions

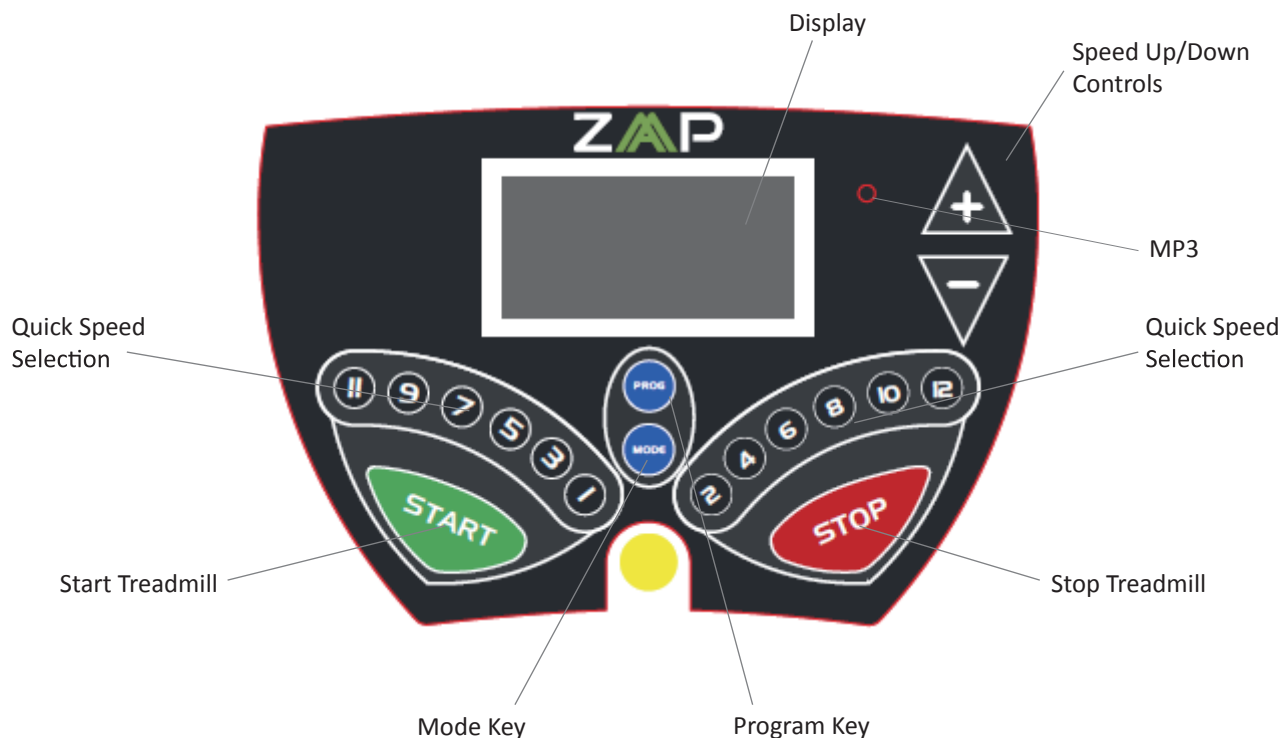 

## Display Functions

TIME	No Set Target Time - TIME will count up from 00:00 to maximum 99:00 with each increments is one minute. Using Set Target Time - TIME will count down from Preset Value . Each preset Increment is one minute between 5:00 to 99:00 minutes.
SPEED	Display current training speed from 1.0 to a maximum of 12.0 km/h.
DISTANCE	No Set Target Distance - DISTANCE will count up from 0.00 to a maximum of 99.5km with each increment 0.1 KM. Using Set Target Distance - DISTANCE will count down from preset Value. Each preset increment is 0.5 KM between 0.5 to 99.5.
CALORIES	No Set Target Calories - CALORIES will count up from zero to maximum 995 with each increment 1 cal. Using Set Target Calories - CALORIES will count down from preset value. Each preset increment is 5 cal from 10 to 995 cal.
PULSE	Hold the hand sensor tight and the console will detect your pulse signal. When monitor is reading your heart tare signal, the HEART SYMBOL will flash on the console.

## Function Buttons

1. **MODE:** To confirm all settings and to enter exercise modes.
2. **Speed +:** To select training mode and adjust the function value up.
3. **Speed -:** To select training mode and adjust the function value down.
4. **START/STOP:** To start or stop your workout.

### POWER ON:

Plug the main power cord in a grounded wall outlet, please make sure the power matched. Ensure the 'Safety Key' is in the correct position and inserted properly in the console.

### QUICK WORKOUT:

User can start a workout by pressing the 'Quick Select' for Speed







 





There are 12 'Quick Select' buttons for Speed – 1km/h to 12km/h for speed options.

You can use Quick Workout (the speed) during your workout, press 'START' to beginning your workout.

If you need to stop the treadmill during your workout, press 'STOP' or pull out the Safety Key.

### PROGRAM MODE

This treadmill console has 12 Preset Workout Programs to choose from (see below for breakdown of each Program). When in PROGRAM mode, use PROGRAM button to select your chosen workout – P1 TO P12. Press START button to confirm and start your workout.

<b>P1</b>		<b>WARM- UP</b>	<b>P7</b>		<b>TIME GOAL</b>
<b>P2</b>		<b>RANDOM</b>	<b>P8</b>		<b>DISTANCE GOAL</b>
<b>P3</b>		<b>5K RUN</b>	<b>P9</b>		<b>CALORIES GOAL</b>
<b>P4</b>		<b>COMPETITION</b>	<b>P10</b>		<b>MOUNTAIN CLIMB</b>
<b>P5</b>		<b>WEIGHT - LOSS</b>	<b>P11</b>		<b>BEACH SPORT</b>
					



## Getting Started

### **PREPARE:**

If you are over 45 years old, have health or medical problems, or this is your first time exercising, please consult your local Doctor or Medical Professional before use.

Before using your treadmill, become familiar with the console operation buttons by reading the operation manual carefully. To start, place both feet either side of the running belt surface on the plastic side rails and press the 'Start' button, making sure you have attached the treadmill safety key to your clothing. Never attempt to start the treadmill whilst standing stationary on the running belt surface. Once the running belt is in motion, use the +/- speed adjustment buttons to increase the speed before stepping onto the running belt. After adapting to the walking speed, you can now adjust the speed to the desired pace you wish to exercise it.

### **EXERCISE FREQUENCY:**

Depending on your fitness level, start your workout programme with a gradual warm-up for at least 5-10 minutes before increasing the speed or elevation on your treadmill. Maintaining frequency and durations of your workouts each week is an important first step in your workout programme. Aim to complete 3 x 20-30 minute workouts per week, increasing the intensity of the workouts as your fitness level allows.

As your fitness level improves, you can either: increase the frequency and/or duration of your workouts, or adjust the speed levels to increase your workout intensity each session. Consult a professional trainer for further information on training programmes and/or goal specific workouts on your treadmill.

Should you feel any discomfort, dizziness, nausea, tightening of the chest stop your workout immediately and seek medical attention.

### **AMOUNT OF EXERCISE:**

**SHORTCUT---**The best way to save time is to exercise for 15-20 minutes.

 
Warm up for 2 minutes at 4.8 km/h, gradually add 0.3 km/h to your speed per 2mins, until you feel your breath quickening but without having difficulty breathing. Keep this speed, if it feels uncomfortable, please reduce by 0.3 km/h. Use the last 4 minutes to reduce speed as a warm down. If you feel it is hard to increase speed, then you can add more intensity to your workout.

### **CLOTHING:**

Please wear comfortable clothing and footwear suitable for exercise.

## Warm-Up Exercise

Warm up exercise is important in preparing the muscles for activity whilst minimising the risk of injury. You may choose to warm up with a light/brisk walking pace for 5-10 minutes before stopping and performing some simple stretches. (As shown in the pictures below)

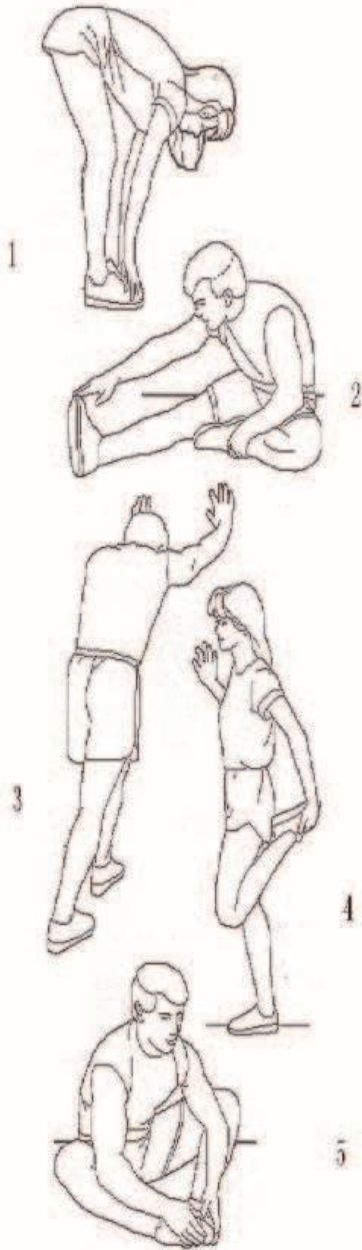

**1. Hamstring Stretch (Standing)**- Keep your knees slightly bent and slowly lean forward, back and shoulders relaxed, reaching towards your toes. You should feel the tension and slight discomfort in your hamstring muscles. Hold for 15 - 20 seconds. Repeat 2-3 times.

**2. Hamstrings Stretches (Seated)** - Sitting on the floor preferably on a mat, put one leg straight, the other inward and close to the inside of the straight leg. Lean forward from the hips, reaching towards your toes. Hold for 10-15 seconds, and relax. Repeat 3 times for each leg (See picture 2).


**3. Calf Stretches**- Standing with two hands on the wall or tree, one leg behind. Keeping your legs straight and the heel on the ground, lean forward towards the wall or tree. Hold for 10 -15 seconds, and relax. Repeat 3 times for each leg (See picture 3).

**4. Quadriceps Stretches** - Keeping your balance with your left hand holding onto a wall or stationery fixture, grasp your right foot with your right hand and stretch your right heel toward your buttocks slowly, until you feel the stretch in the front of your thigh. Hold for 10 - 15 seconds, and relax. Repeat 3 times for each leg (See picture 4).


**5. Sartorius (Inner Muscles of the Thigh) Muscle Stretches**- Sitting down with the soles of your feet or shoes together and your knees positioned outward. Pull your feet towards your groin until you can feel the stretch. Hold for 10 -15 seconds, and relax. Repeat 3 times (See picture 5).

**BELT ADJUSTMENT:**

 - Place treadmill on a level surface.
- Run the treadmill at 6-8km/h.
- If the belt has drifted to the right, turn the right bolt clockwise a 1/2 turn and turn the left bolt anticlockwise a 1/2 turn (Picture C).
- If the belt has drifted to the left, turn the right bolt anticlockwise a 1/2 turn and turn the left bolt clockwise a 1/2 turn (Picture D).

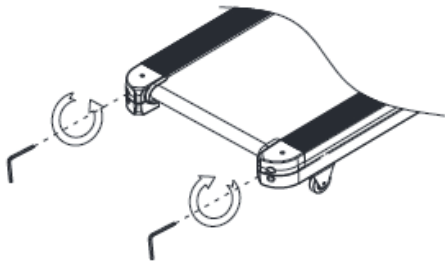

PICTURE C

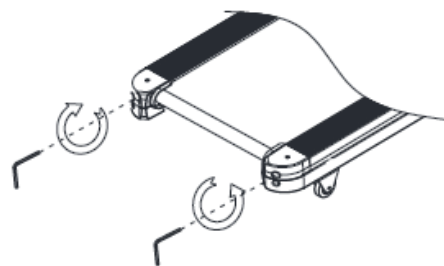 

PICTURE D

- Test for at least 15 seconds at 4km/h (check and adjust a further quarter or half turn until the belt is centred).

NOTE: The running belt should not be tightened too hard as this can cause noise and damage the machine.

**STORAGE:**

Remember to store the treadmill in a dry place and not to pile things on top of it.

## Technical Specification

Zaap TX-3000 Motorized Treadmill

Item No.:HSM-MT080

Rated Voltage: 110V ~

Frequency:60Hz

Rated power:1.5HP



**Distributed globally by**

**UK & Europe**

**Shop 247  
Units 3 & 4 Lower Park Farm  
Storage Lane  
Alvechurch, Worcestershire B48 7ER  
United Kingdom  
Telephone: 01527 598388**

**USA – West Coast**

**Shop247.com Inc  
Suite 110-120  
16 Sunset Way  
Henderson, Nevada 89014  
Telephone: 1-800-603-0004**

**USA – East Coast**

**Shop247.com Inc  
6965-K Northpark Blvd,  
Charlotte,  
North Carolina 28216  
Telephone: 1-800-603-0004**

**AUS/NZ**

**Shop247.com.au Pty Ltd  
Unit 7/350 Edgar Street  
Condell Park, NSW 2018  
Australia  
Phone: 1300 795 828**

