

# Accessories for overload relay

 
Metasol MS

## Separate mounting units

These accessories are used to mount the relays separately from contactors.  
If a relay is combined with a unit, it can be mounted on DIN rail or panel by fixing screws.



Relay	Unit	
	Type	Weight
MT-12/2H□ MT-12/3H□ MT-12/3K□ MT-12/3D□	UZ-12	35g
MT-32/2H□ MT-32/3H□ MT-32/3K□ MT-32/3D□	UZ-32	68g
MT-63/2H□ MT-63/3H□ MT-63/3K□ MT-63/3D□	UZ-63S/L	134g
MT-95/2H□ MT-95/3H□ MT-95/3K□ MT-95/3D□	UZ-95S/L	230g
MT-150/2H□ MT-150/3H□ MT-150/3K□ MT-150/3D□	UZ-150S/L	284g

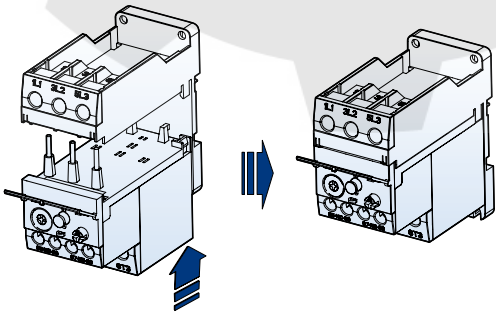

### Terminal cover units for overload relays

Relay	Remarks
MT-225	2 pcs
MT-400	

# Accessories for overload relay

 
## Remote reset units



These accessories are used to reset the relays on the panel door.


Type	Cable length (L)
UM-4R	400 mm
UM-5R	500 mm
UM-6R	600 mm
UM-7R	700 mm
UM-9R	900 mm

- 1. Make the reset bar straight at least 55mm from the panel door and 35mm from the bracket.
- 2. The bending radius of the flexible reset bar should not be less than 15mm.

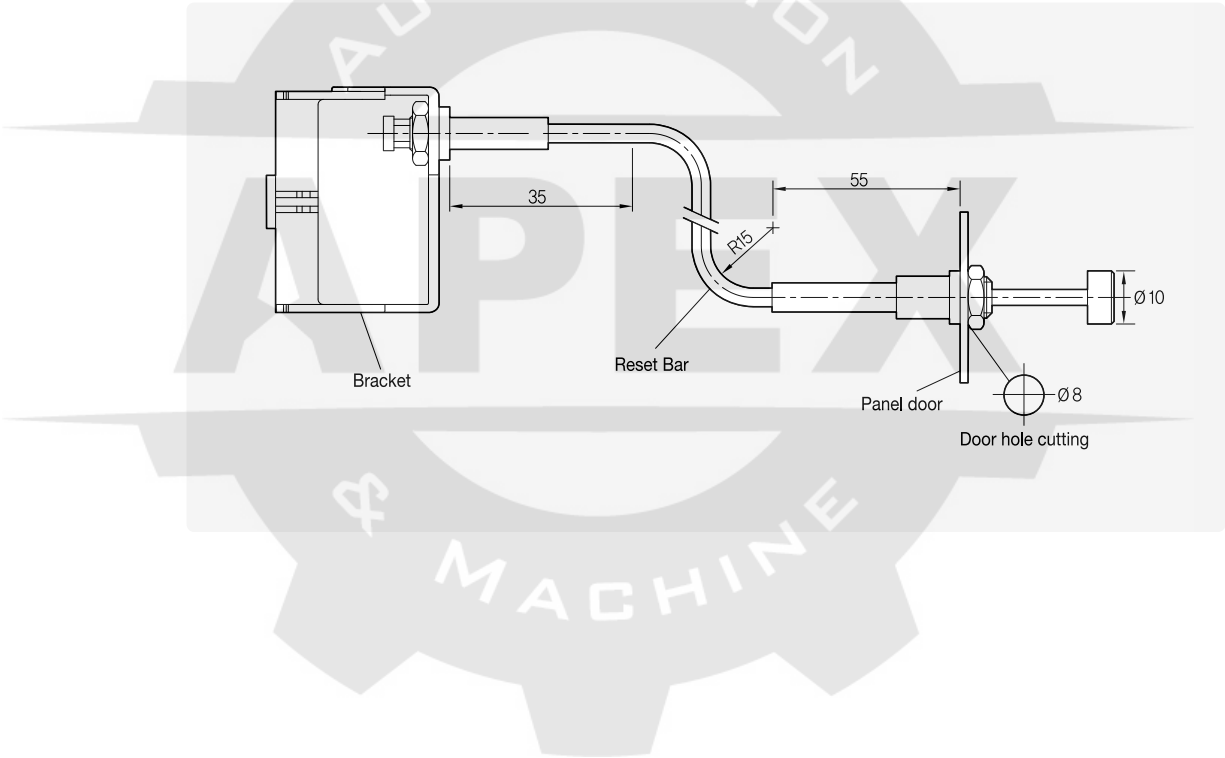

### Installation

 
1. Fit the bracket with the relay as indicated(\*1) below.
2. Separate Nut(\*3) and Head cap(\*4) from the reset bar first.  
Insert the reset bar into the panel hole and then fix it with the Nut and Head.
3. To separate the bracket from the relay lift the \*2 part as shown in the fig.

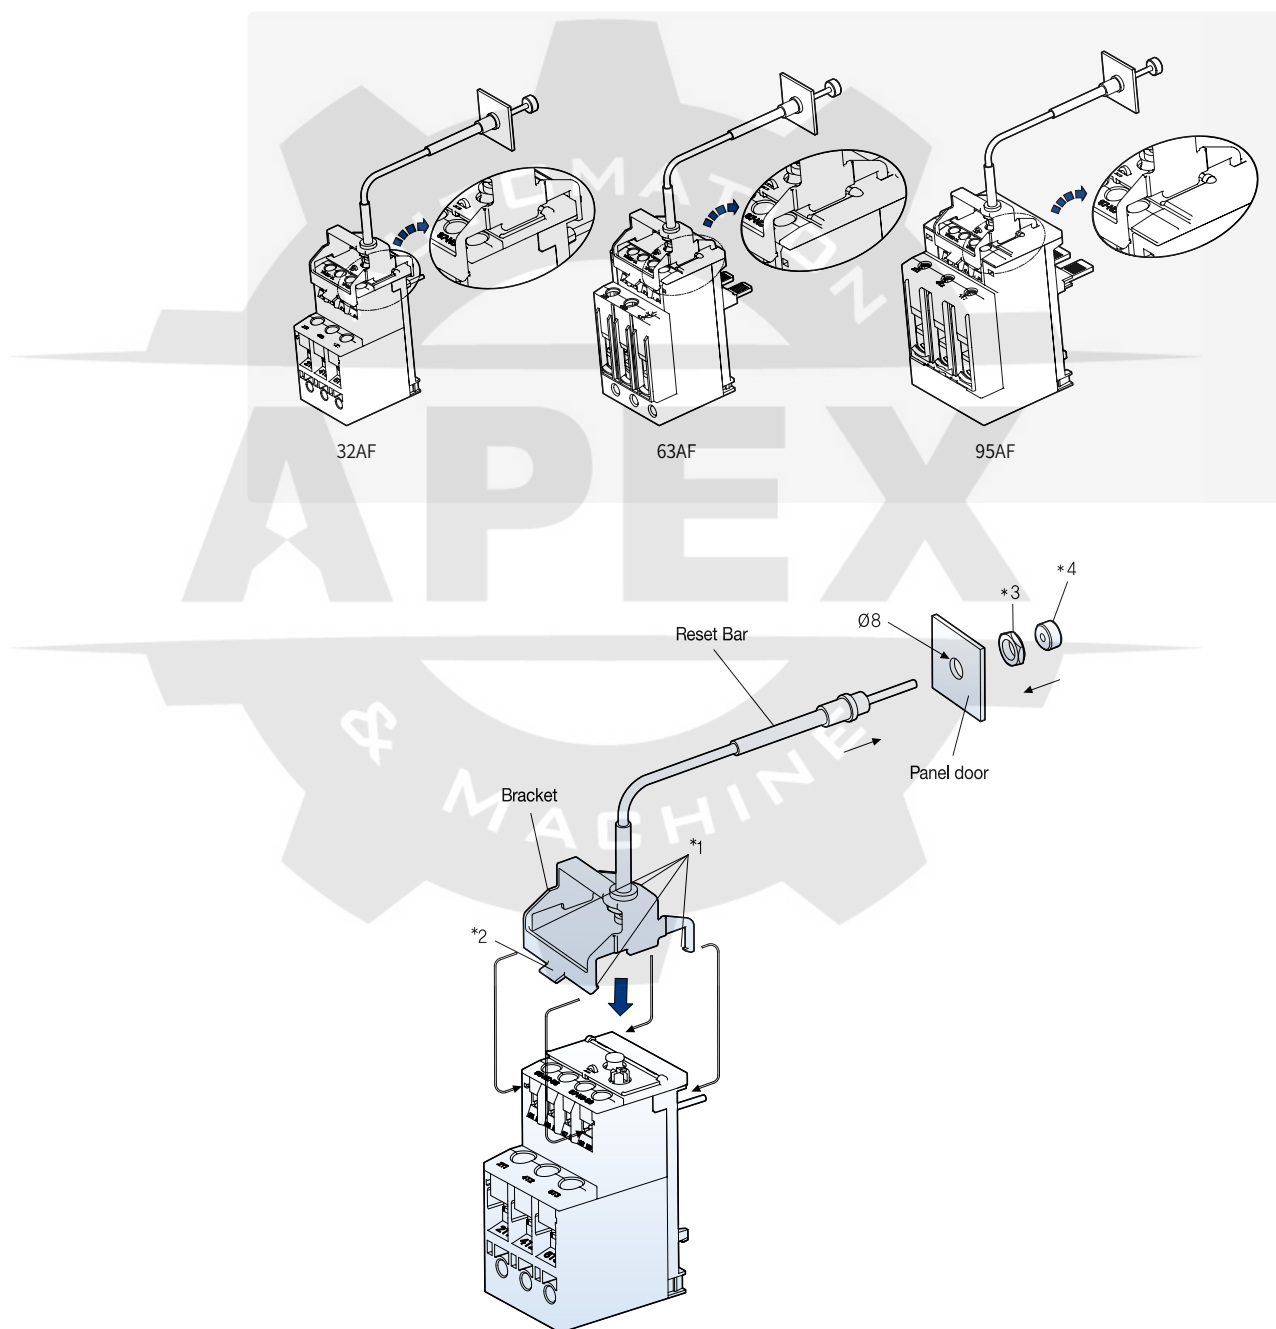


# Accessories for overload relay

## Remote reset units

 
MT-32

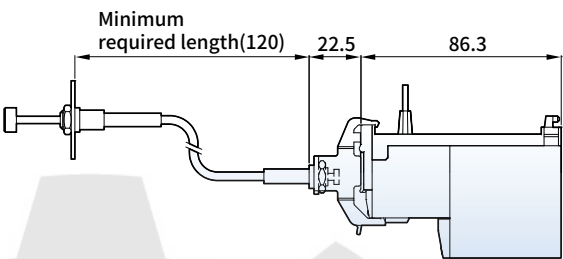


MT-63

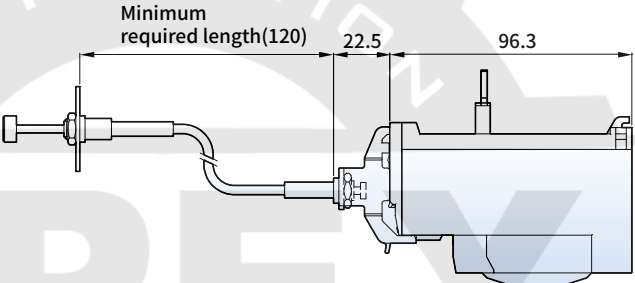 


MT-95

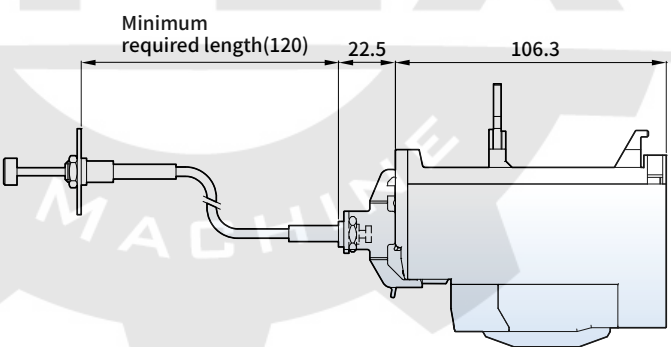 


MT-150

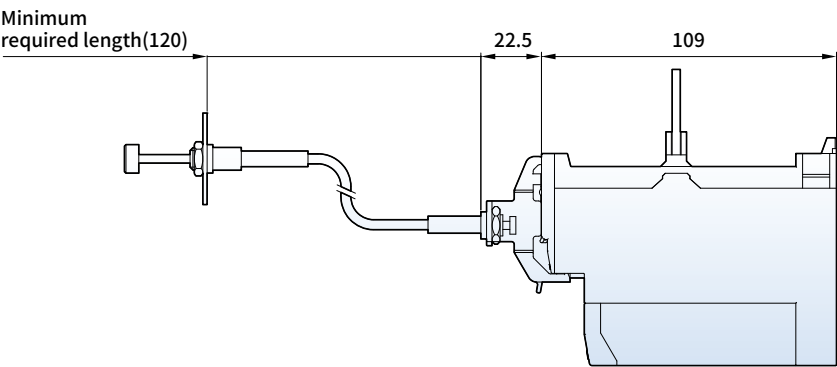 

MT-225

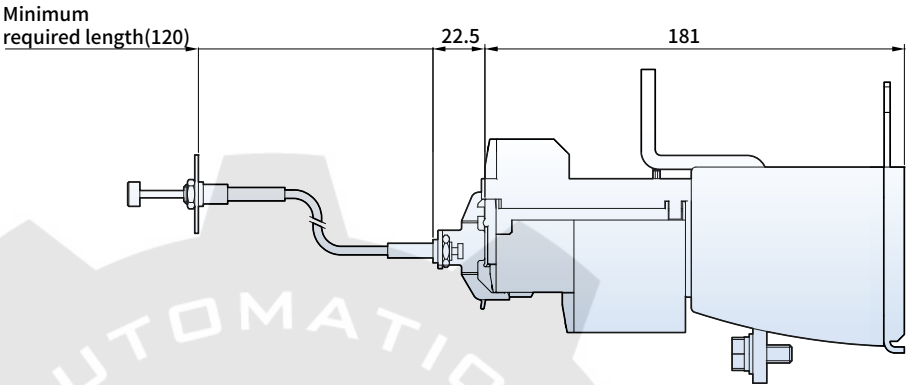 

MT-400

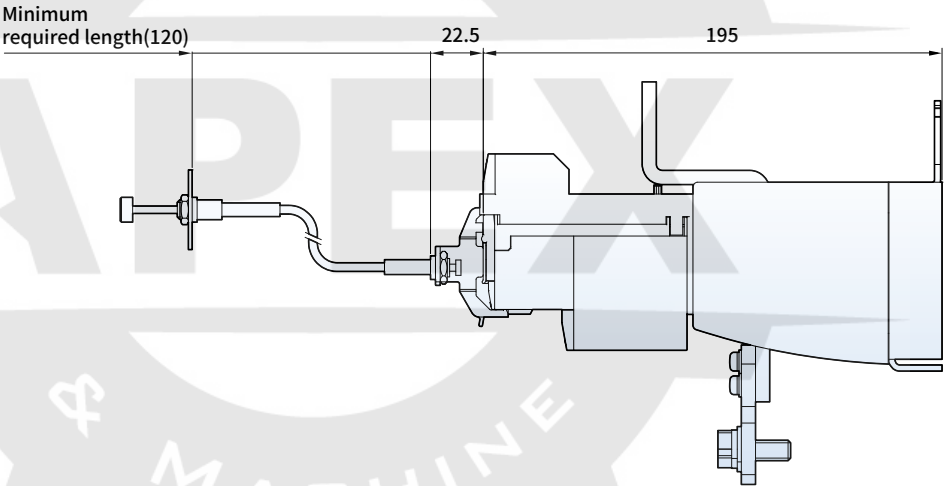 

MT-800

