

Data sheet | Item number: 210-836

Push-button marker; for frames, to be snapped in or glued in place; 27 x 17.5 mm; silver-colored

www.wago.com/210-836



Color: 

Data

Technical data

Suitable	for Siemens
Marking	plain
Pre-assembly	350 markers/reel
Marking device	Smart Printer (Thermal Transfer Printer)

Physical data

Height	27 mm
Width	17.5 mm
Depth	0.65 mm
Marking surface	27 x 17.5 mm

Subject to changes. Please also observe the further product documentation!

WAGO Corporation
Germantown, WI 53022
Phone: 1-800-DIN-RAIL (346-7245) | Fax: (262) 255-6222
Email: info.us@wago.com | Web: www.wago.us

Do you have any questions about our products?
We are always happy to take your call at (262) 255-6222 or 1 800-DIN-RAIL.



Mechanical data

Mounting type	Snap-in or adhesive mounting
Smear resistance	smudge-proof in conjunction with 258-5005 Ink Ribbon

Material data

Color	silver-colored
Material	Polyester
Adhesive information	Acrylic; permanent; foamed
Halogen-free	Yes
Weight	110 g

Environmental requirements

Surrounding air temperature (storage)	≥22 °C
Relative humidity	40 ... 50 %

Commercial data

Packaging type	bag
Country of origin	DK
GTIN	4055143965422
Customs tariff number	3926909985

Required accessories

Cover	
Item no.: 210-837	
Cover; for frames, snap-in type, 27 x 17.5 mm; halogen-free; transparent	www.wago.com/210-837

Downloads

Documentation

Operating Instructions

210-852 Information on handling print material	1 Aug 28, 2020	pdf 1.0 MB	Download
--	-------------------	---------------	----------

Environmental Product Compliance

Compliance Search

Subject to changes. Please also observe the further product documentation!

WAGO Corporation
Germantown, WI 53022
Phone: 1-800-DIN-RAIL (346-7245) | Fax: (262) 255-6222
Email: info.us@wago.com | Web: www.wago.us

Do you have any questions about our products?
We are always happy to take your call at (262) 255-6222 or 1 800-DIN-RAIL.

Installation Notes

Stick on frame



Remove the push-button label from the carrier film.




Stick the push-button label onto the push-button frame.



WAGO's push-button label is attached to the push-button frame. A cover cannot be applied.

Snap into frame

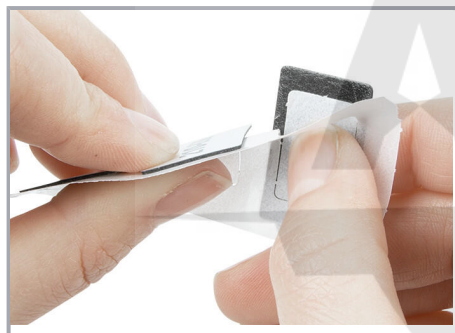

Remove the push-button label from the carrier film. Press and hold the pre-punched carrier film to do this.



Snap the push-button label, with the carrier film on the back, on to the push-button frame. Only the area of the push-button label outside the remaining carrier film is adhesive.



Optional: A cover may also be installed on a push-button frame equipped with latches.

Subject to changes. Please also observe the further product documentation!



Push-button label and cover are snapped on to the push-button frame.



Subject to changes. Please also observe the further product documentation!

WAGO Corporation
Germantown, WI 53022
Phone: 1-800-DIN-RAIL (346-7245) | Fax: (262) 255-6222
Email: info.us@wago.com | Web: www.wago.us

Do you have any questions about our products?
We are always happy to take your call at (262) 255-6222 or 1 800-DIN-RAIL.