

FIREPLACE

Damper must be **OPEN** before you start a fire.

Damper must be **CLOSED** when the fire is out and when you are leaving.

How do I know if the damper is open or closed?

Handle is pulled down = OPEN

Handle is pushed UP = CLOSED

Before lighting a fire, you can **tell if the damper is open** by placing your hand into the fireplace. **If** you feel a draft coming down the chimney, it is a good indicator that the **damper is open**. **If** you do not feel any cold air coming down the chimney, it means that the **damper is closed**.

Handle is DOWN to OPEN



Handle is UP to CLOSE



Need more info?

www.11Kirkland.com or

<https://youtu.be/SnHdioWju14>