
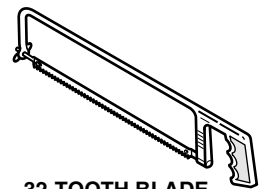


Wall Channels can be cut to extend to the top of the base trim.

OR

Wall Channels can be cut to extend to the floor.

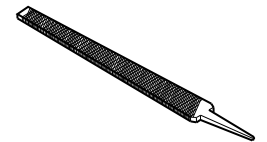

32-TOOTH BLADE  
HACKSAW

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)

Or visit our website: [www.steelcase.com](http://www.steelcase.com)

© 2004 Steelcase Inc.

Grand Rapids, MI 49501

U.S.A.

Printed in U.S.A.

**1.** There are (2) two different ways you can install your wall channel. Measure from the top of the panel to the appropriate location you want your wall channel to stop at the floor.

**2.** Remove the material from the bottom of the wall channel (2a) and deburr. Slide the wall channel over the end of a solid wall (2b).

**3.** After panel has been installed, slide wall channel snug against building wall.

**NOTE:** If the wall channel does not fit tightly against the wall, you can add a screw in a discreet location to hold the wall channel to the wall.

