 


The established Steelcase Environmental Partnership Program helps our customers fully leverage their furniture assets to the greater benefit of society, the planet, and their own bottom line by facilitating, refurbishing, reselling, donating, and recycling end-of-life furniture. These disassembly directions are provided for recycling when the Steelcase Environmental Partnership Program is not utilized.



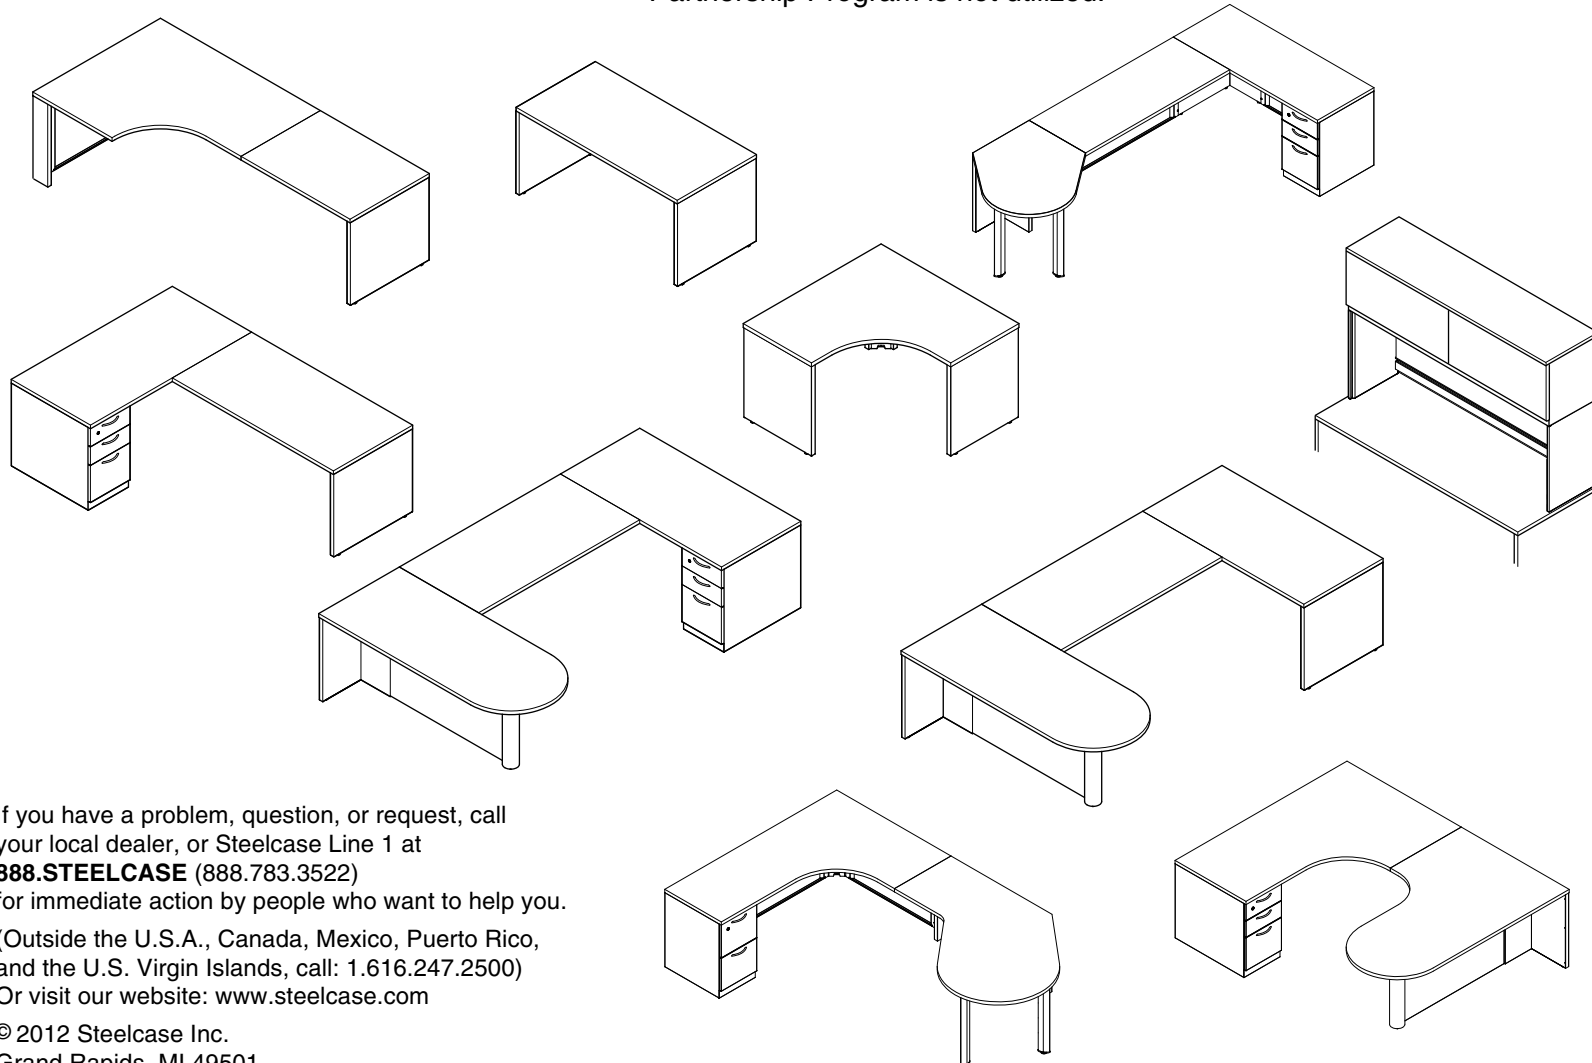


If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)
Or visit our website: www.steelcase.com


© 2012 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.

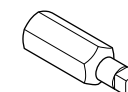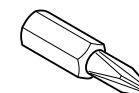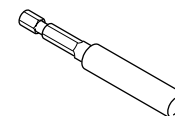


Remove Worksurface from
Workstation Configuration:

 Desk

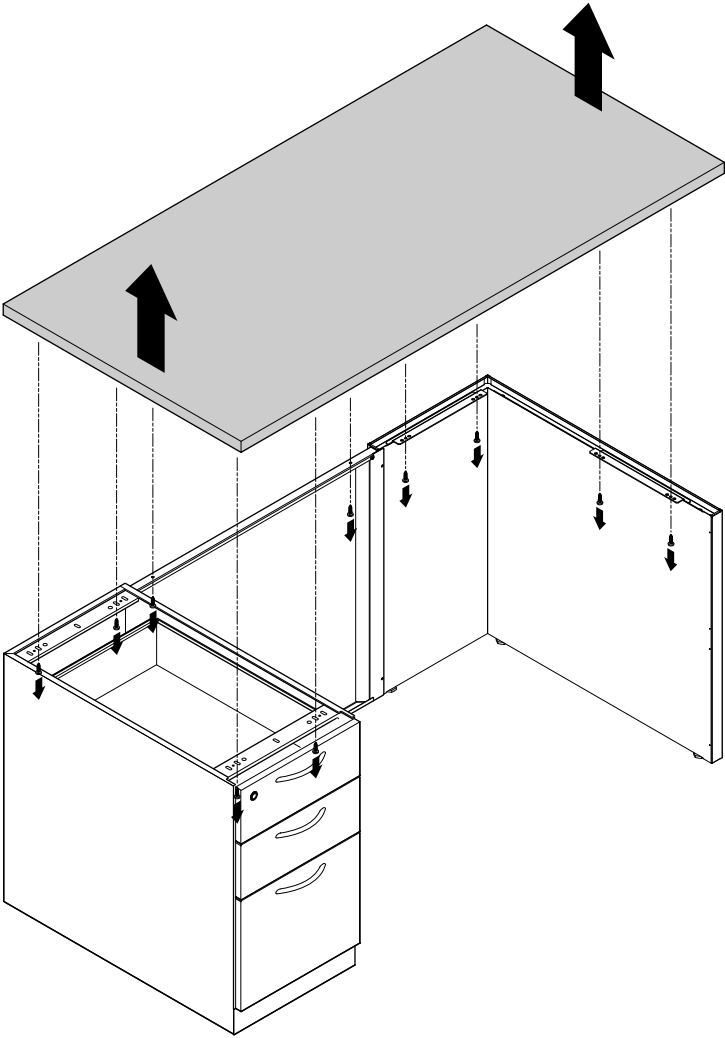


Bins for
components removed

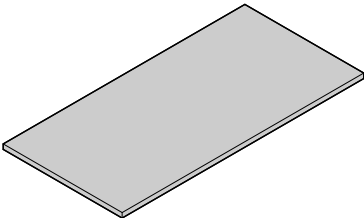 STEEL	SCRAP
	



Now that the worksurface
have been removed, the rest
of the product can be placed
into a shredder, so you can
separate the steel from the
(scrap) plastic items.

Remove Worksurface from
Workstation Configuration:

Corner Desk

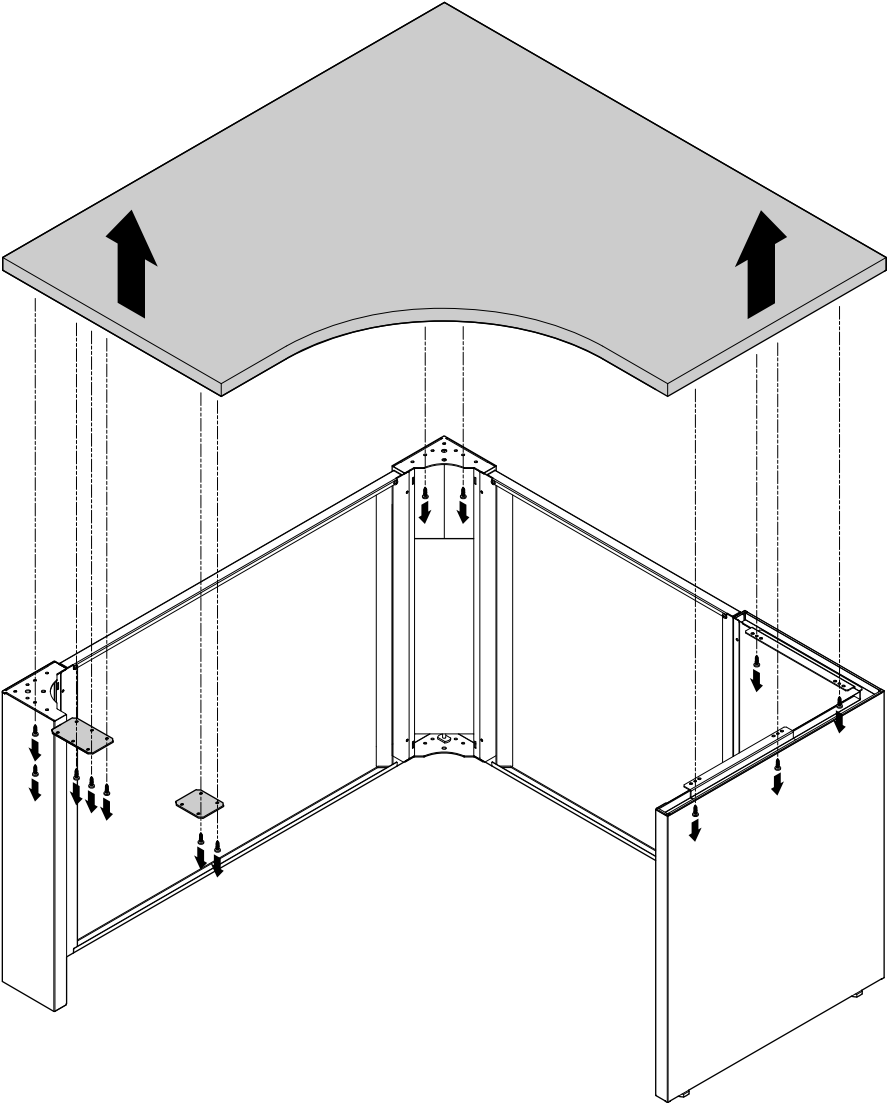


Bins for
components removed

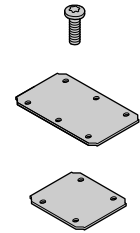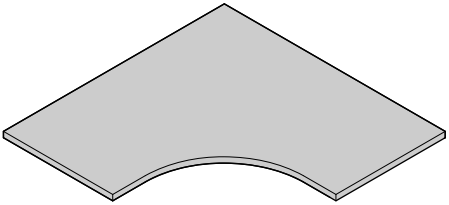STEEL	SCRAP
	

Now that the worksurface have been removed, the rest of the product can be placed into a shredder, so you can separate the steel from the (scrap) plastic items.

Remove Worksurface from
Workstation Configuration:

Bullet Peninsula

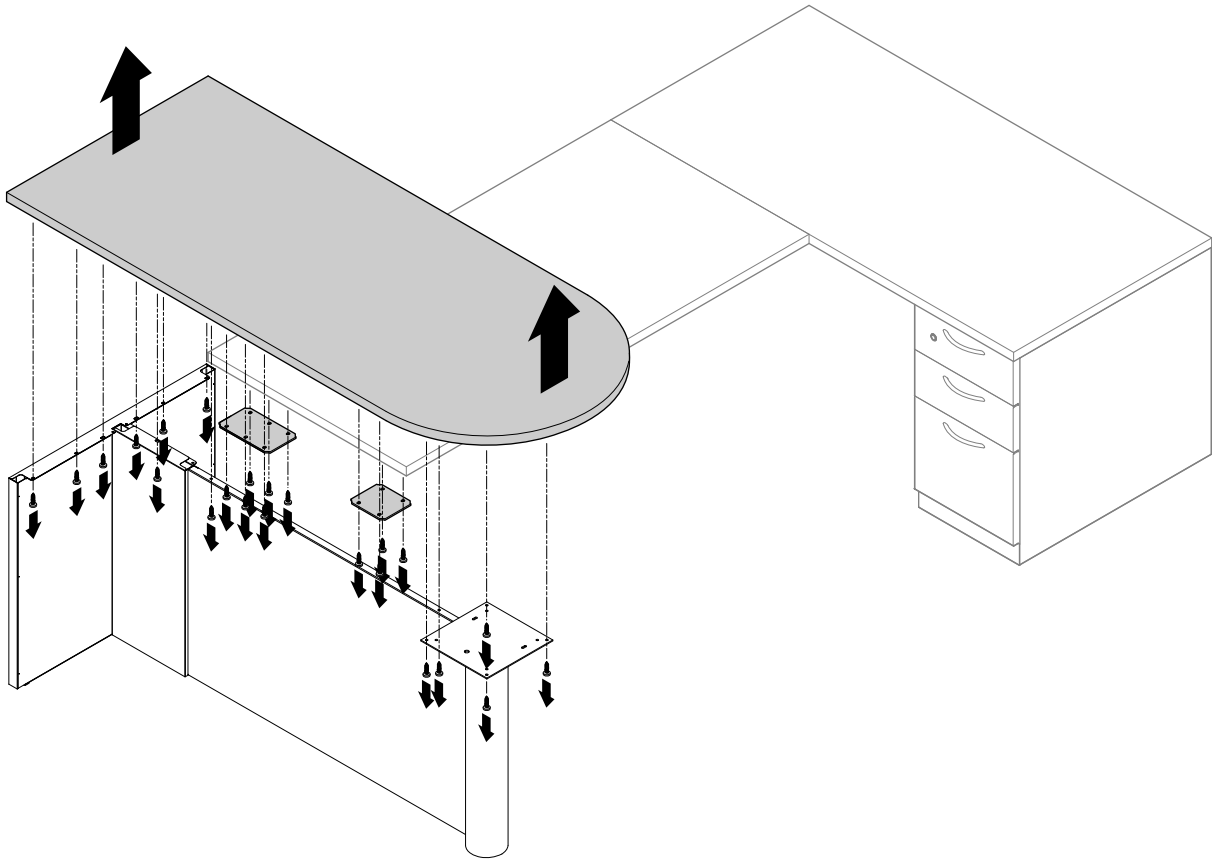


Bins for
components removed

STEEL	SCRAP



Now that the worksurface have been removed, the rest of the product can be placed into a shredder, so you can separate the steel from the (scrap) plastic items.

Remove Worksurface from Workstation Configuration:

Jetty

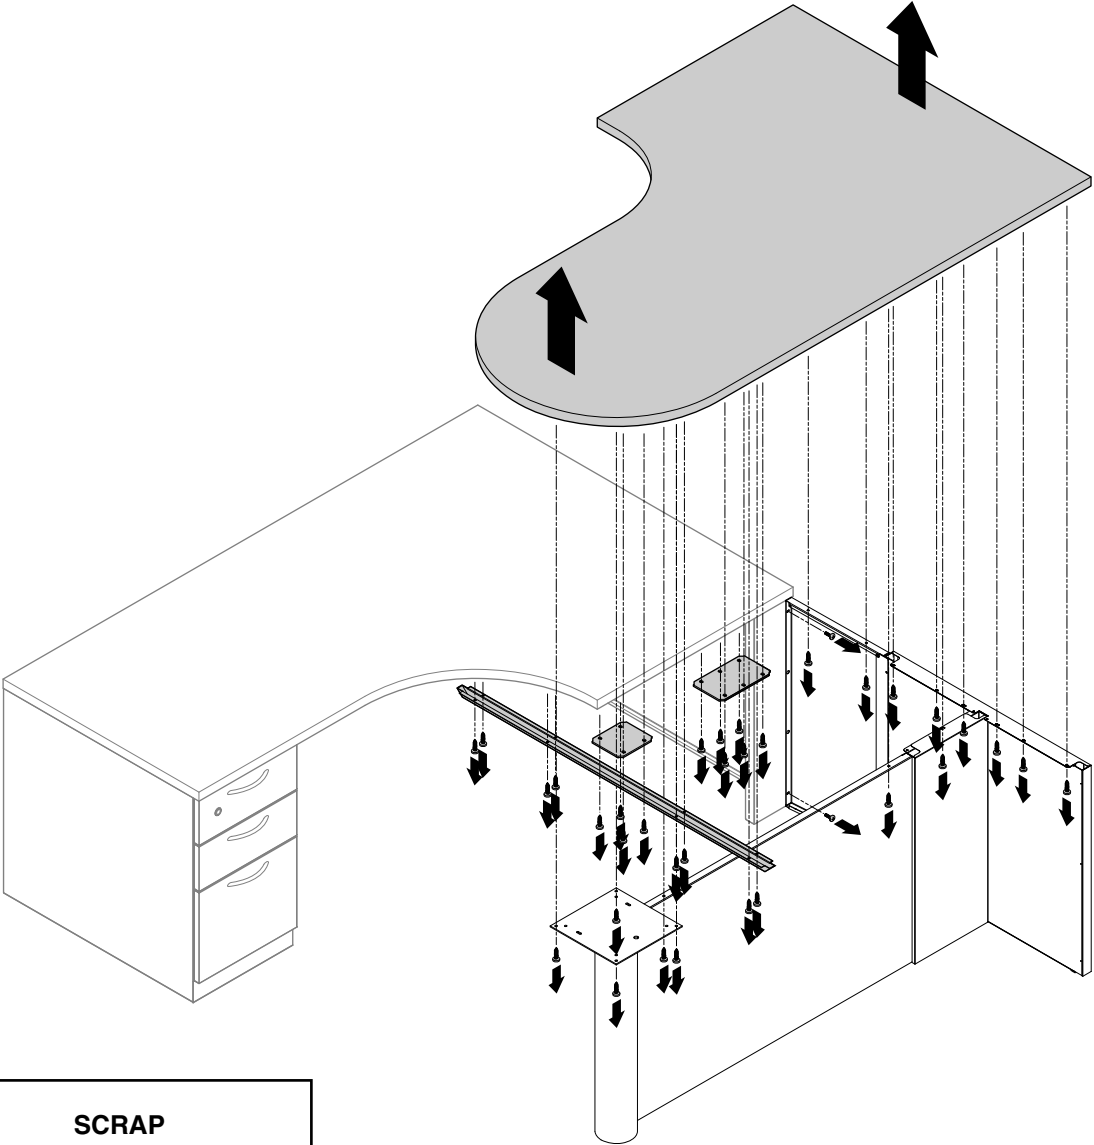


Bins for components removed

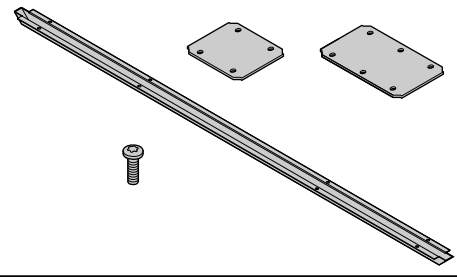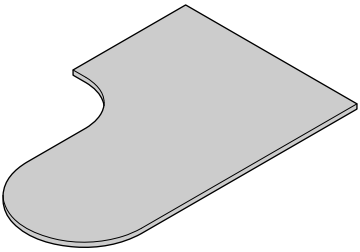STEEL	SCRAP
	



Now that the worksurface have been removed, the rest of the product can be placed into a shredder, so you can separate the steel from the (scrap) plastic items.

Remove Worksurface from
Workstation Configuration:

Bubble Jetty

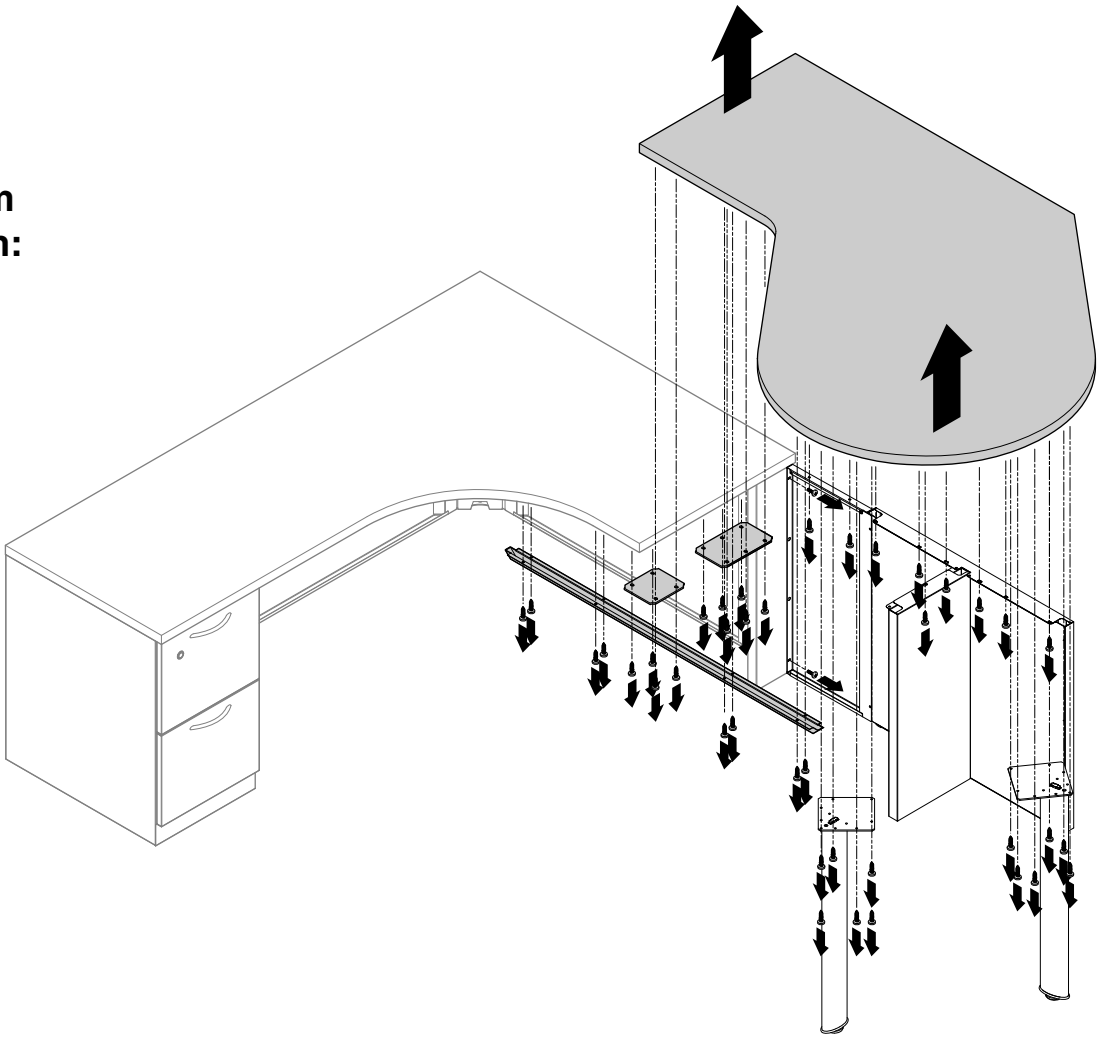


Bins for
components removed

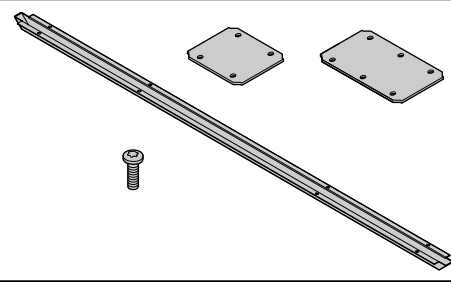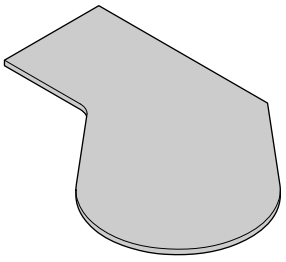STEEL	SCRAP
	



Now that the worksurface have been removed, the rest of the product can be placed into a shredder, so you can separate the steel from the (scrap) plastic items.

Remove Worksurface from
Workstation Configuration:

Angled Peninsula

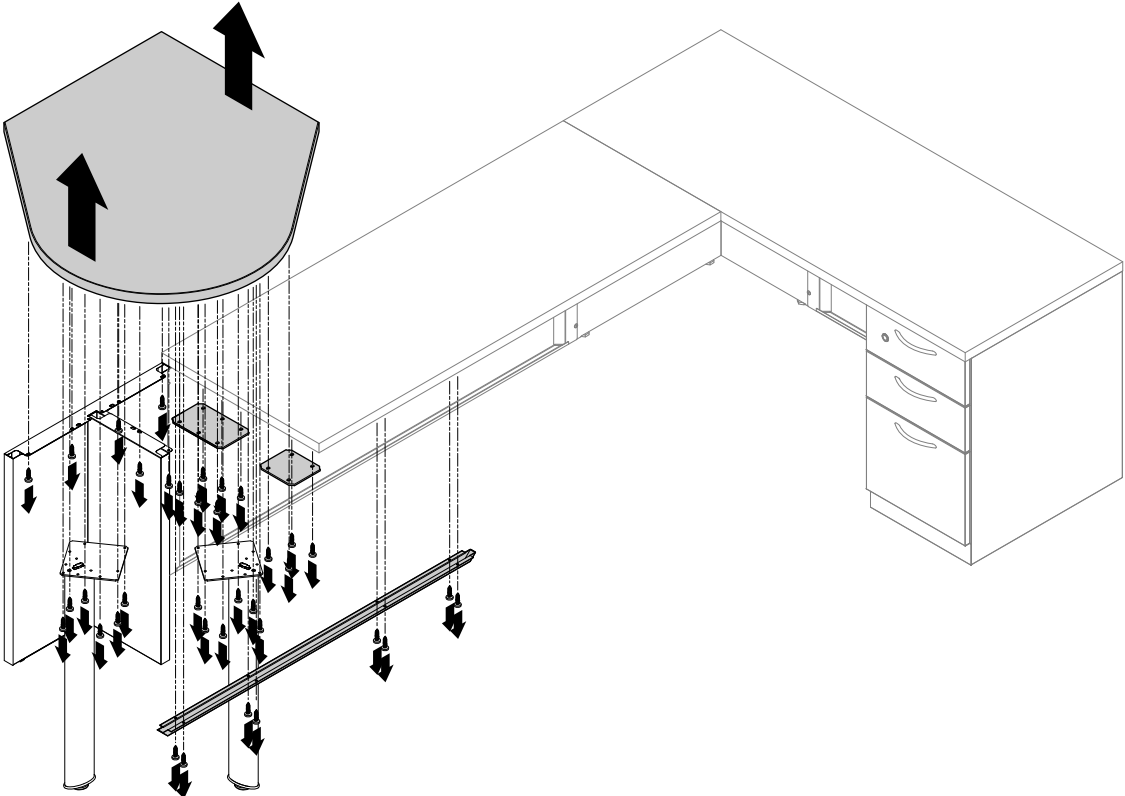


Bins for
components removed

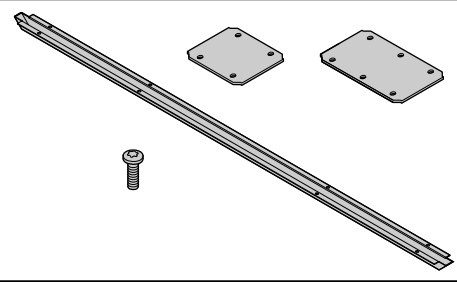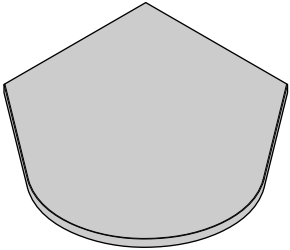STEEL	SCRAP
	

Now that the worksurface have been removed, the rest of the product can be placed into a shredder, so you can separate the steel from the (scrap) plastic items.

Remove Worksurface from
Workstation Configuration:

Return with an End Support

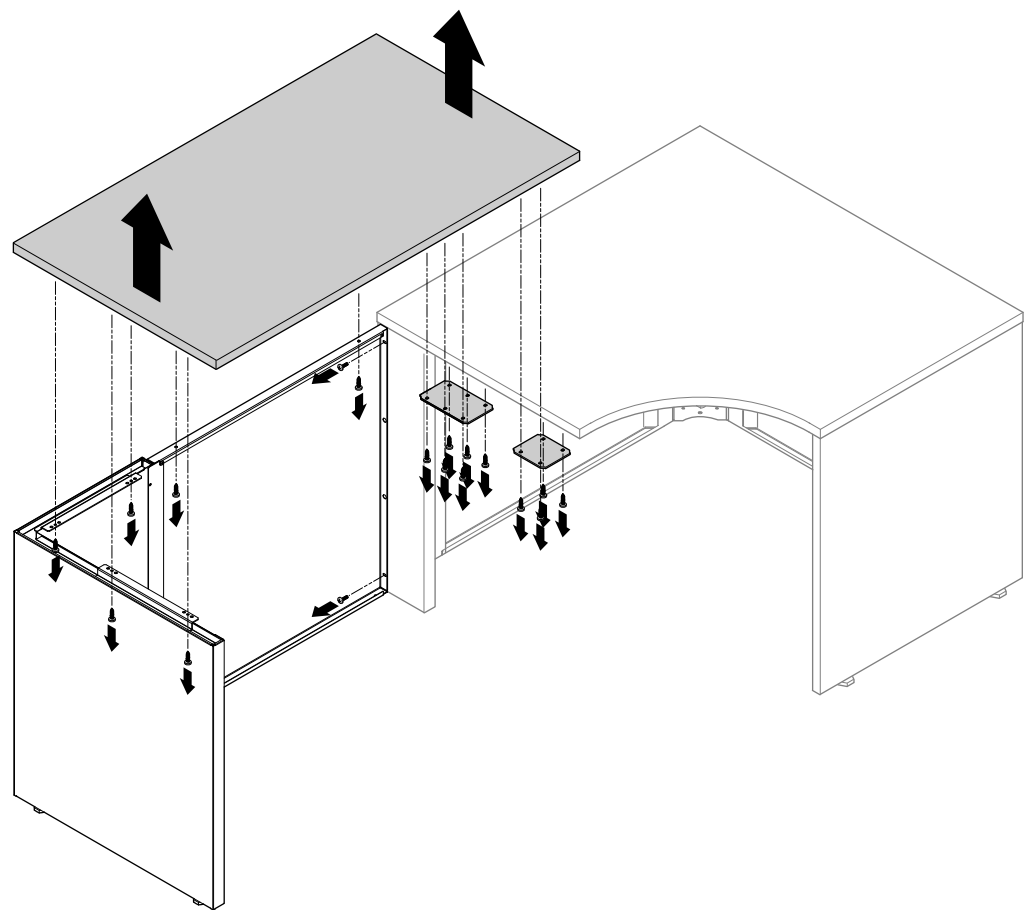


Bins for
components removed

STEEL	SCRAP

Now that the worksurface have been removed, the rest of the product can be placed into a shredder, so you can separate the steel from the (scrap) plastic items.

Remove Worksurface from
Workstation Configuration:

Return with Storage

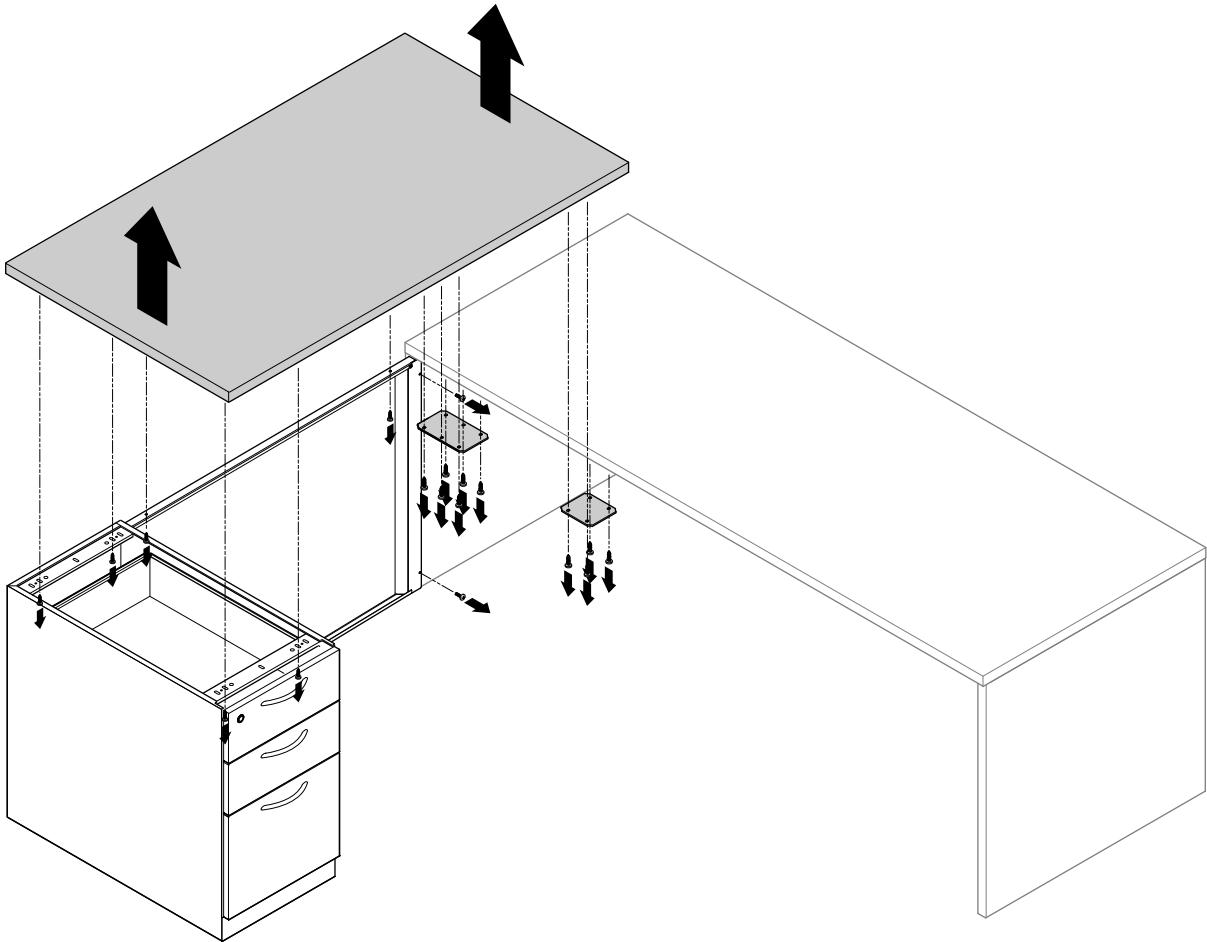


Bins for
components removed

STEEL	SCRAP

Now that the worksurface have been removed, the rest of the product can be placed into a shredder, so you can separate the steel from the (scrap) plastic items.

**Remove Worksurface from
Workstation Configuration:**


Bridge

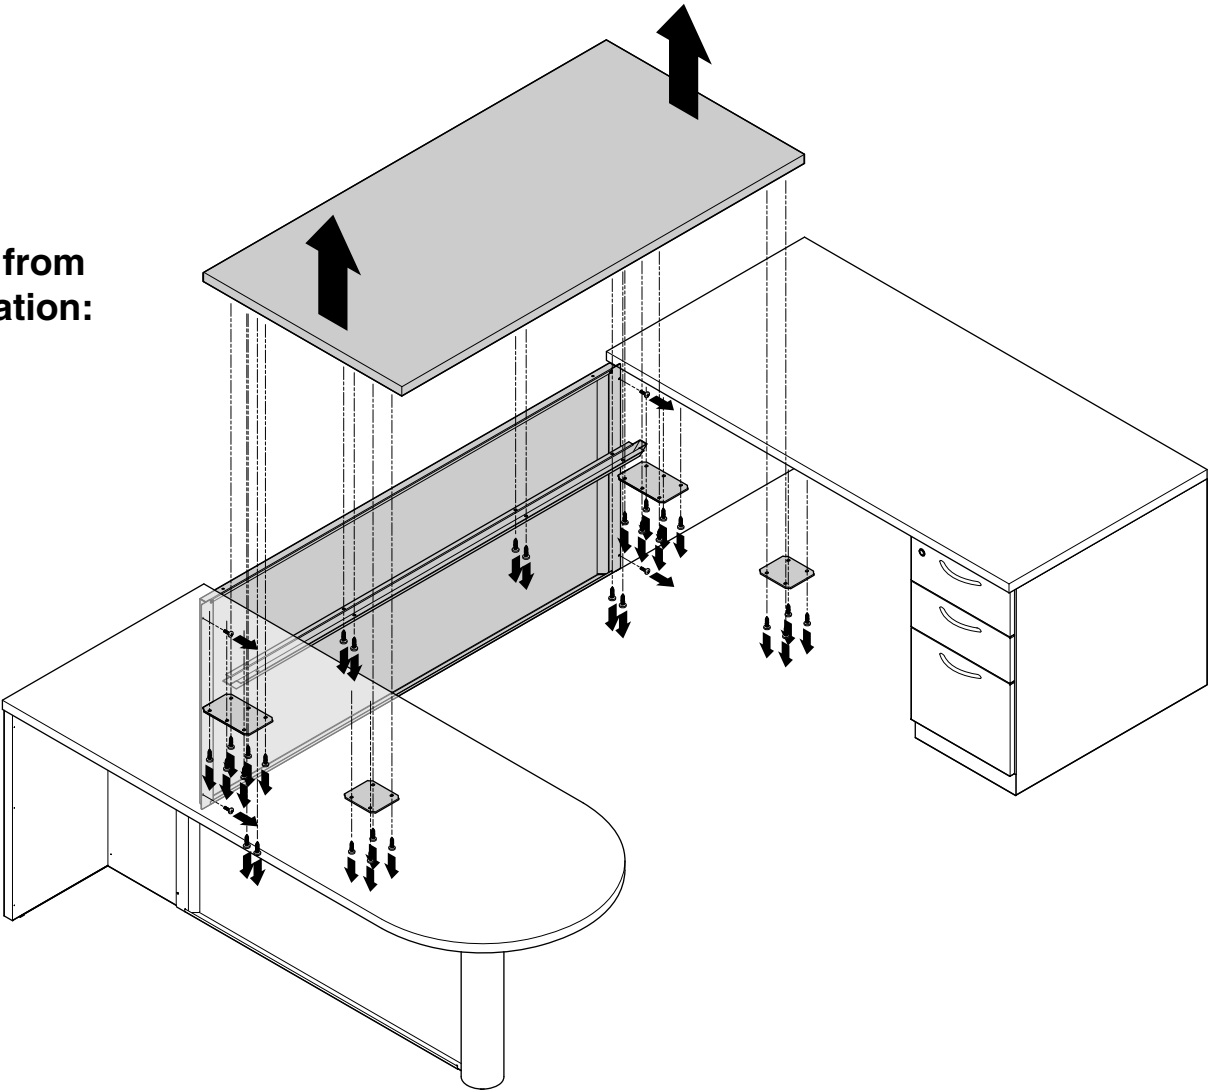



**Bins for
components removed**


STEEL	SCRAP

Hutch Kit

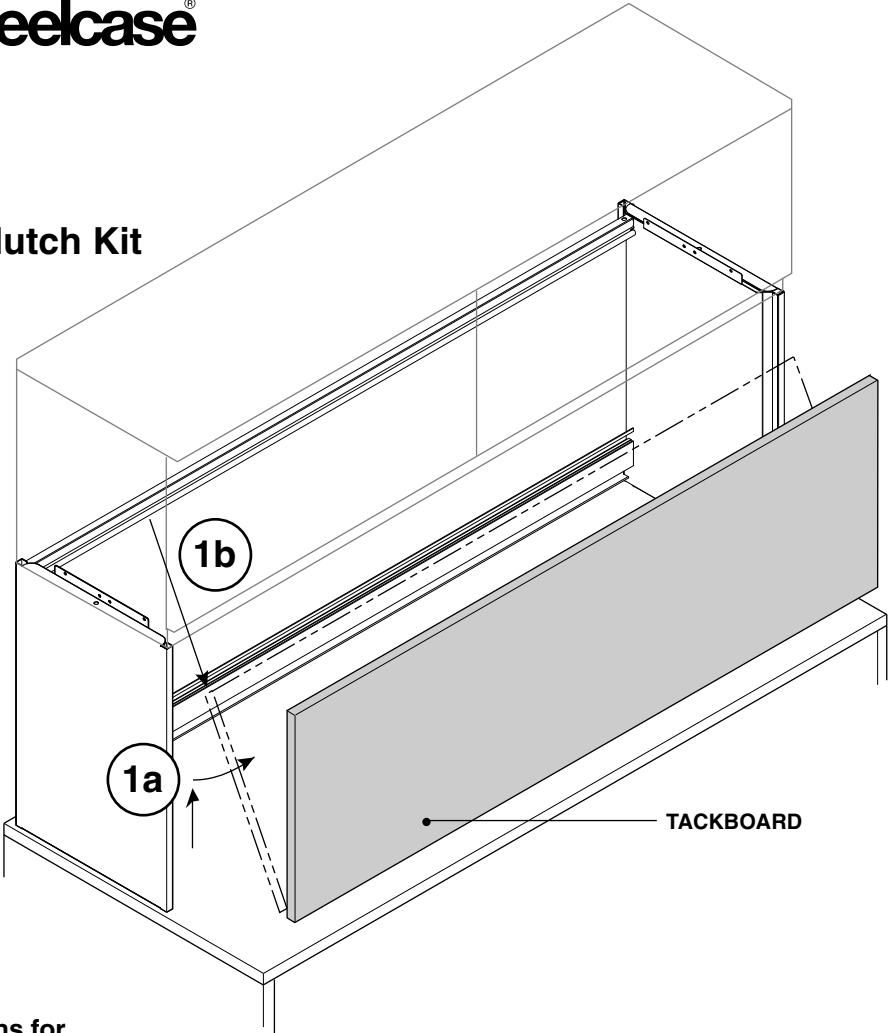


Bins for components removed

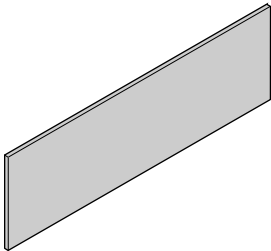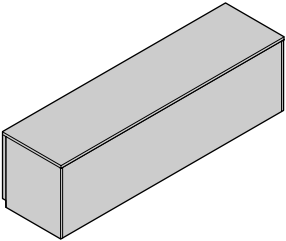STEEL	SCRAP	Place into a shredder, so you can separate the steel from the (scrap) plastic items.
		

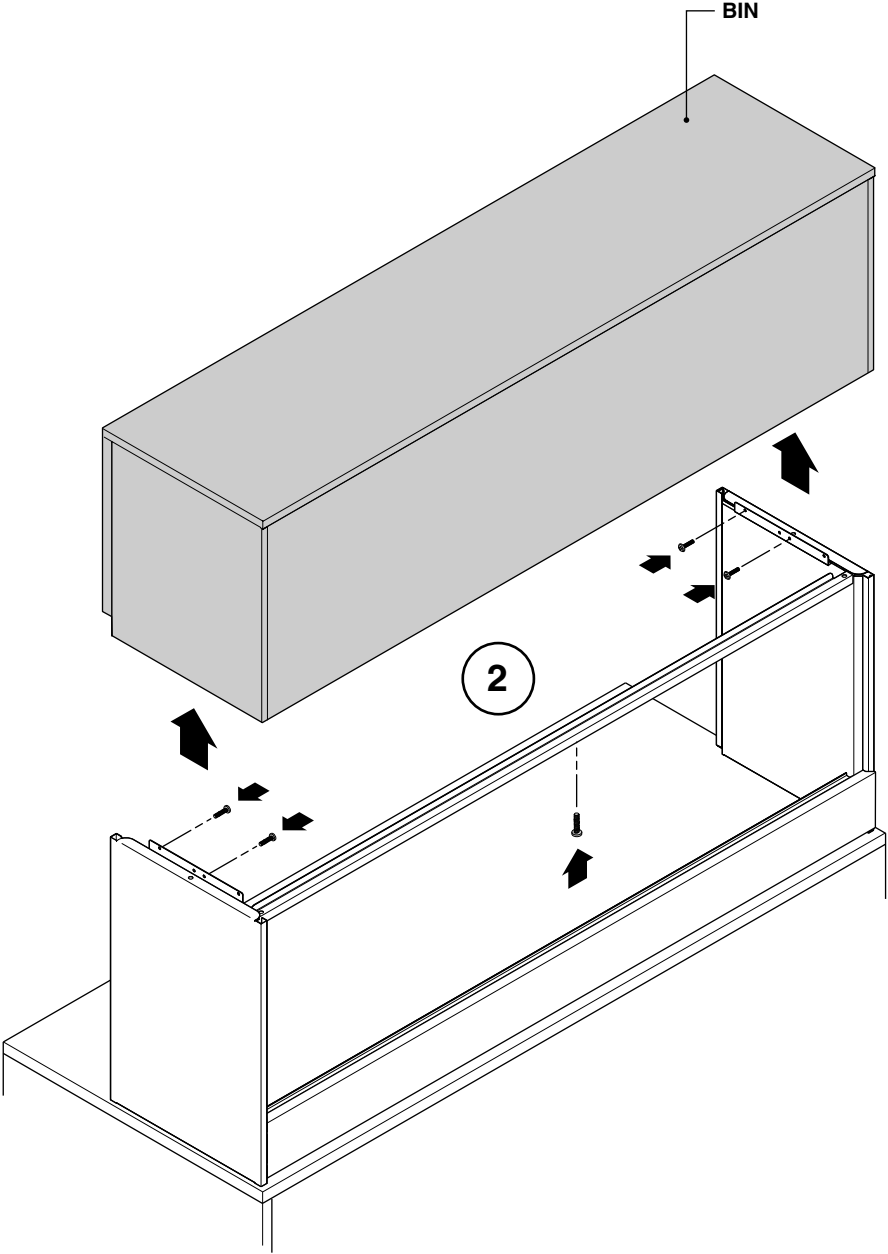

Hutch Kit

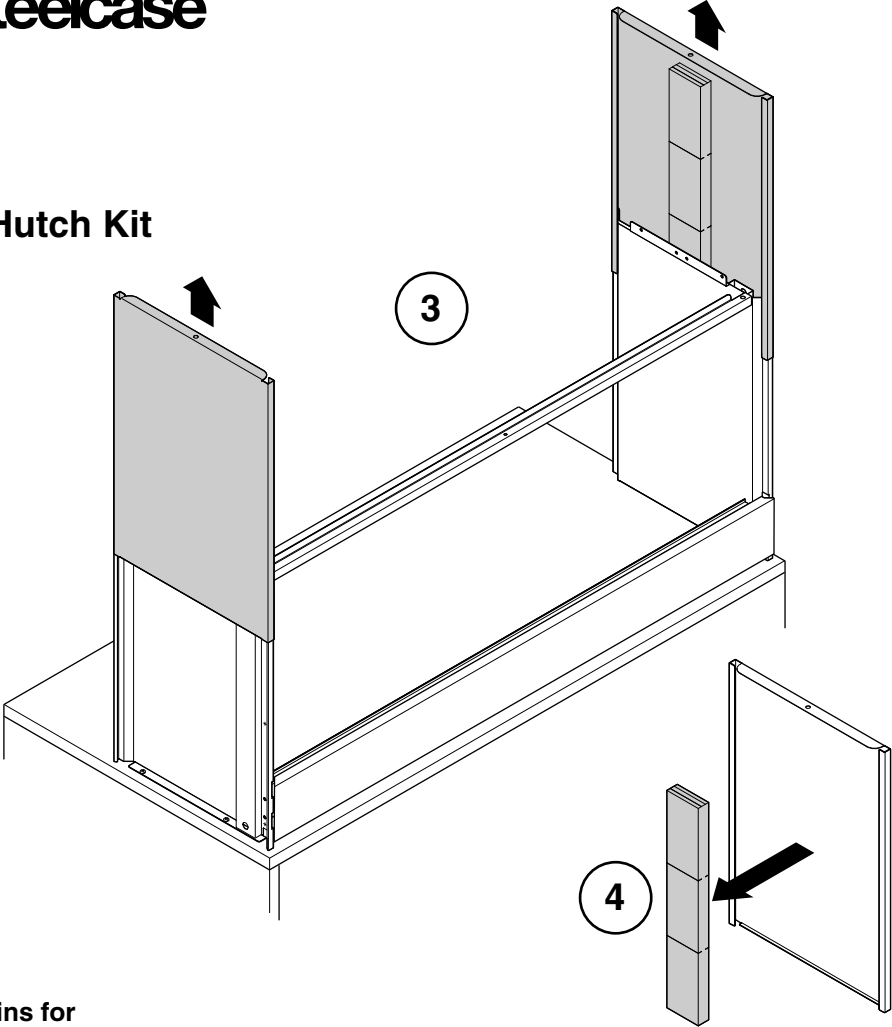

Bins for components removed

STEEL	SCRAP

