 
 


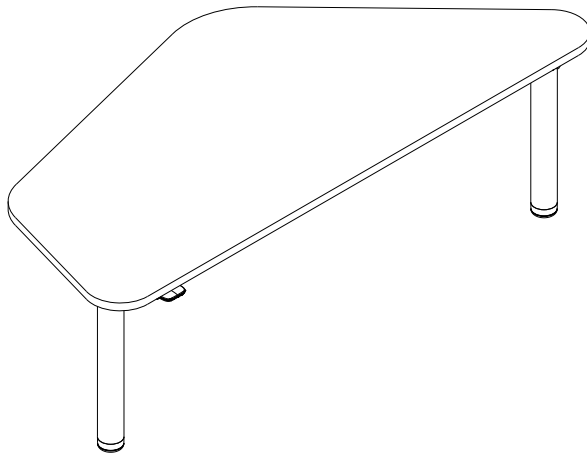



120 Straight

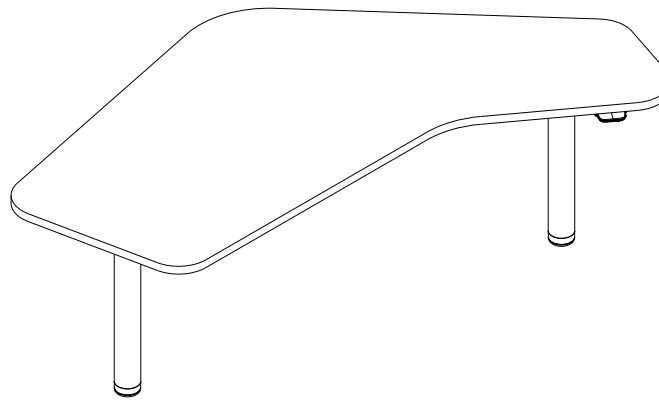


120 Corner



  120 with Modesty Panel

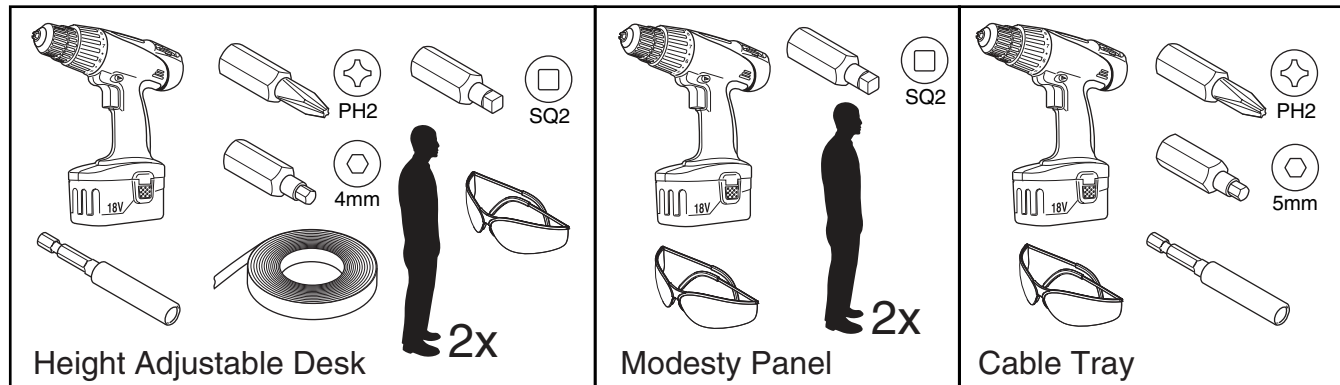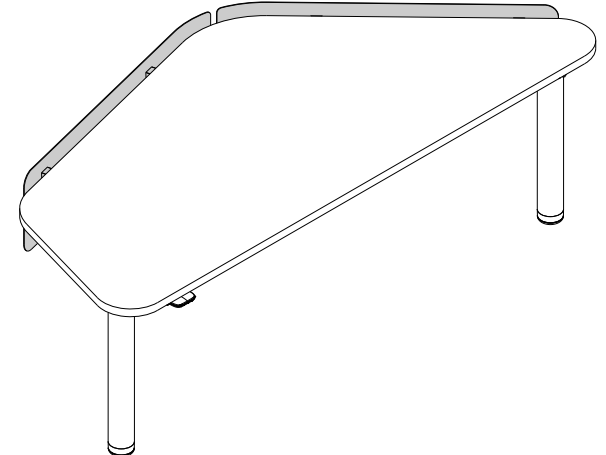

Cable Tray

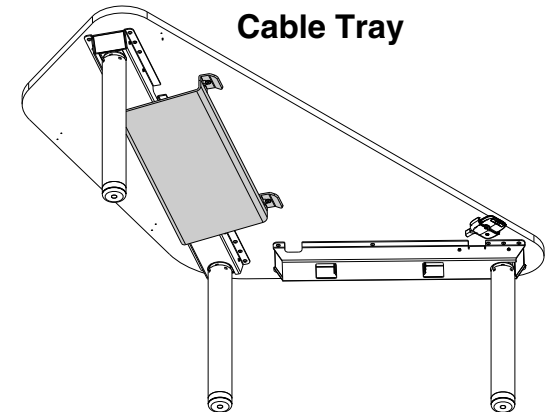 


IMPORTANT SAFETY INSTRUCTIONS:

Read all instructions before using this furnishing. Please save these instructions.



 WARNING RISK OF SERIOUS INJURY DUE TO PINCH POINTS, TIPOVER, OR POTENTIAL COLLAPSE.

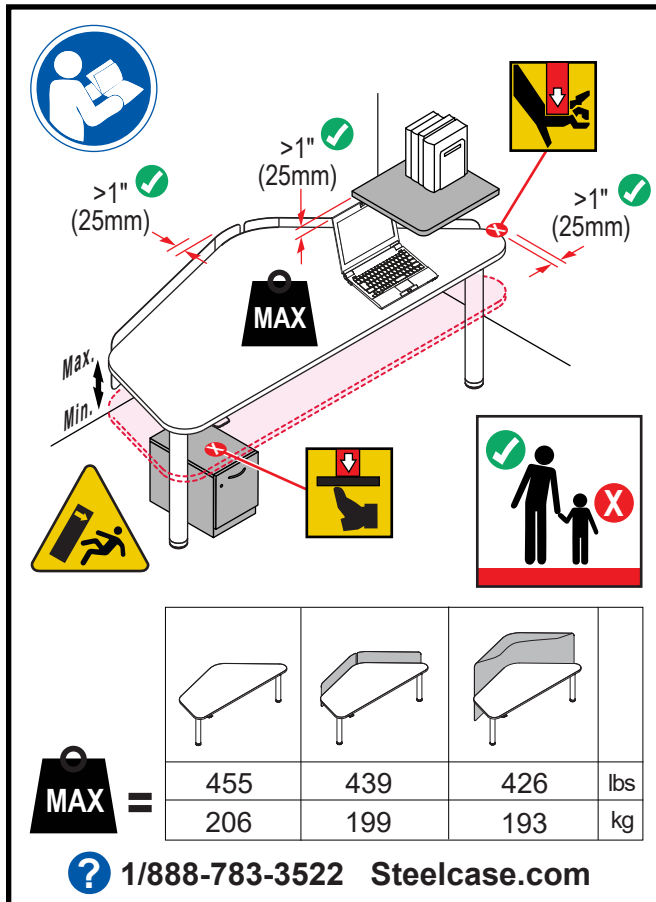

This powered, adjustable height desk appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- **RISK OF DEATH OR SERIOUS INJURY.** Raising or lowering desk can trap, pinch or crush body parts or property.
- **CRUSH HAZARD - DO NOT PLACE FEET, LEGS OR OTHER BODY PARTS ON OBJECTS PLACED UNDER TABLE TOP OR BELOW MODESTY PANEL.**
- **DO NOT OPERATE THIS EQUIPMENT** Unless Properly Trained.
- **DO NOT ALLOW USE BY CHILDREN** or people unable to understand the risks and to safely adjust the desk height.
- **INSPECT REGULARLY.** Stop using if product is damaged or has loose parts. Only repair with Steelcase authorized parts and methods.
- **MAINTAIN >1" (25mm) GAP ABOVE OBJECTS ON DESK AT MAX HEIGHT AND BETWEEN THE DESK & ADJACENT OBJECTS.** Locate desk, accessories, and nearby objects to allow movement of desktop through full range without pulling cords, trapping body parts, or colliding with anything (shelves, electrical plugs and cords, door knobs, window sills, storage cabinets, etc.)

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interface when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Important: Changes or modifications to this product not authorized by Steelcase could void your authority to operate the product.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using this furnishing.

PLEASE SAVE THESE INSTRUCTIONS, AND THE USER GUIDE, IN AN OBVIOUS PLACE FOR THE END USER AFTER ASSEMBLY.

Products with Polarized Plugs

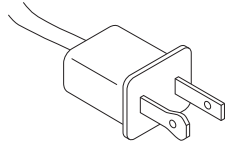 


Figure 1
Polarized Plug

Products with Grounded Plugs

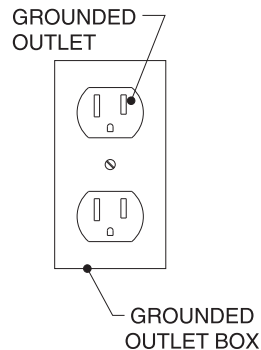 
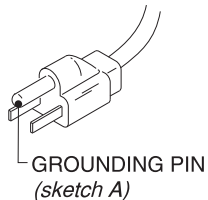 


Figure 2
Grounding methods

WARNING


To reduce the risk of burns, fire, electric shock or injury to persons:

1. Always unplug this furnishing from the electrical outlet before cleaning.
2. Use this table only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
3. Never operate this table if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
4. Keep the cord away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not use outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. For loading always put heavier items at the bottom and not near the top in order to help prevent the possibility of the furnishing tipping over.
9. Do not sit/stand on product.
10. Inspect regularly, stop using if damaged or loose parts found.

The desk or table shall be installed near power socket & the plug shall be easily accessible.

WARNING - Risk of electrical shock.

POLARIZED PLUG INSTRUCTIONS (Only for Products with Polarized Plug) - To reduce the risk of electrical shock, some furnishings have a polarized plug (one blade is wider than the other) like the plug illustrated in Figure 1. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

INSTRUCTIONS FOR DOUBLE INSULATED PRODUCTS: No grounding means is provided on a double-insulated product. Nor is a means for grounding to be added to the product. The plug looks like the plug illustrated in Figure 1. A double insulated product is marked with the words “double insulation”, “double insulated” or .

GROUNDING INSTRUCTIONS (For Grounded Products only) - Some products must be grounded. Connect these types of appliances to a properly grounded outlet in accordance with all local codes and ordinances.

For products sold in North America and other 120V regions: the product is for use on a nominal 120-V circuit. These products use a grounding plug that looks like the plug illustrated in sketch A in Figure 2. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

WARNING - Risk of fire and shock. Use only type SJT 18 AWG cord.

PLUG ILLUSTRATION DISCLAIMER - Illustrations shown here may not match your product. Depending on your region, the plug pin size and shape may change.

OPERATING INSTRUCTIONS

Please refer to the provided User Guide, which is also available at www.steelcase.com

Desk Component List

These drawings identify the parts included with your Height Adjustable Table. Some of these parts are considered by regulatory bodies to be critical components.

 
If any parts shown here do not match your order, please contact Steelcase at www.steelcase.com/contact-us

Worksurface

1466349001-2
1468895001-4


1466348001-2
1468894001-4

Optional Magnetic Cable Clips

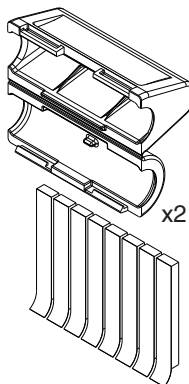

Optional Modesty Panel Component List

 
1467485001

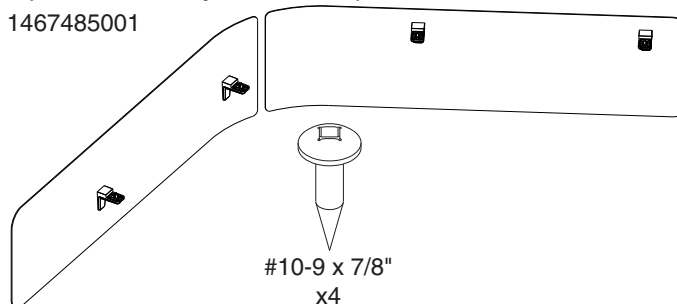

Optional

1246992002 (Power Bar - 5 plug)

 
1246992004 (Power Bar - 5 plug, Chicago)

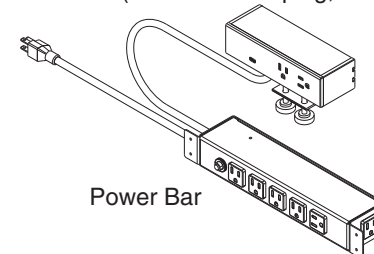


Power Bar

Optional Cable Tray Component List

 
1422396001

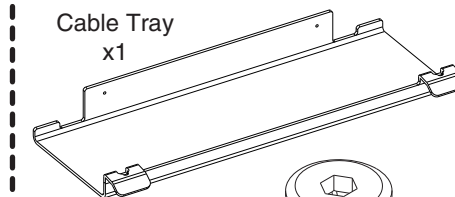


Cable Tray
x1

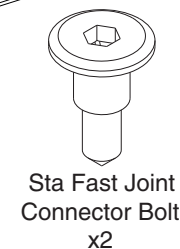 

Sta Fast Joint
Connector Bolt
x2


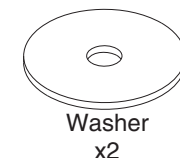 


Washer
x2

 


#10-16 x 1/2"
x2

  Channel Pkg 1444414001-4

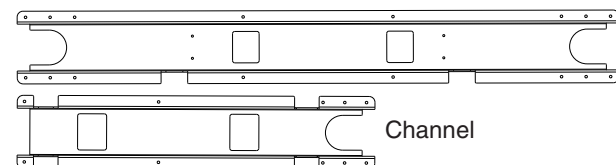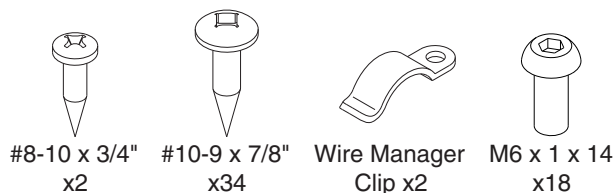


Channel

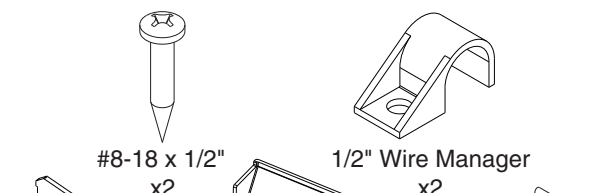 

#8-18 x 1/2"
x2

 1/2" Wire Manager
x2




Cantilever Set x4

End Cap x4


Adjustable Clamp x2

1422394001 (Electrical Package - Extended Height)

 
1422395001 (Electrical Package - Basic Height)




Lifting Column x3

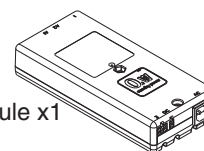 


Control Module x1

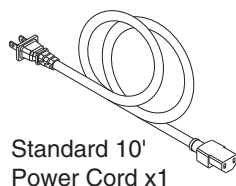 


Standard 10'
Power Cord x1

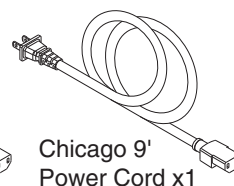 


Chicago 9'
Power Cord x1
(For Illinois)

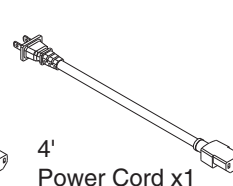 

 
4'
Power Cord x1
(When Power Bar is ordered)

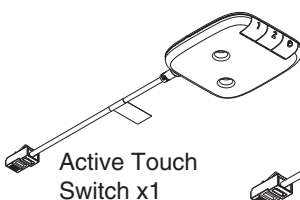

Active Touch
Switch x1

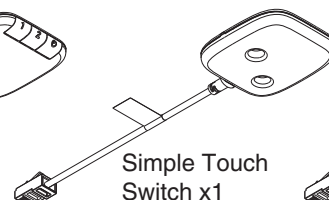 

Simple Touch
Switch x1

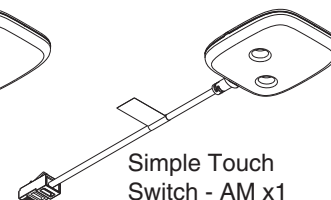 


Simple Touch
Switch - AM x1



Long Cable
Package x2



 
Short Cable
Package x1




User Guide x1




  Troubleshooting
Guide x1

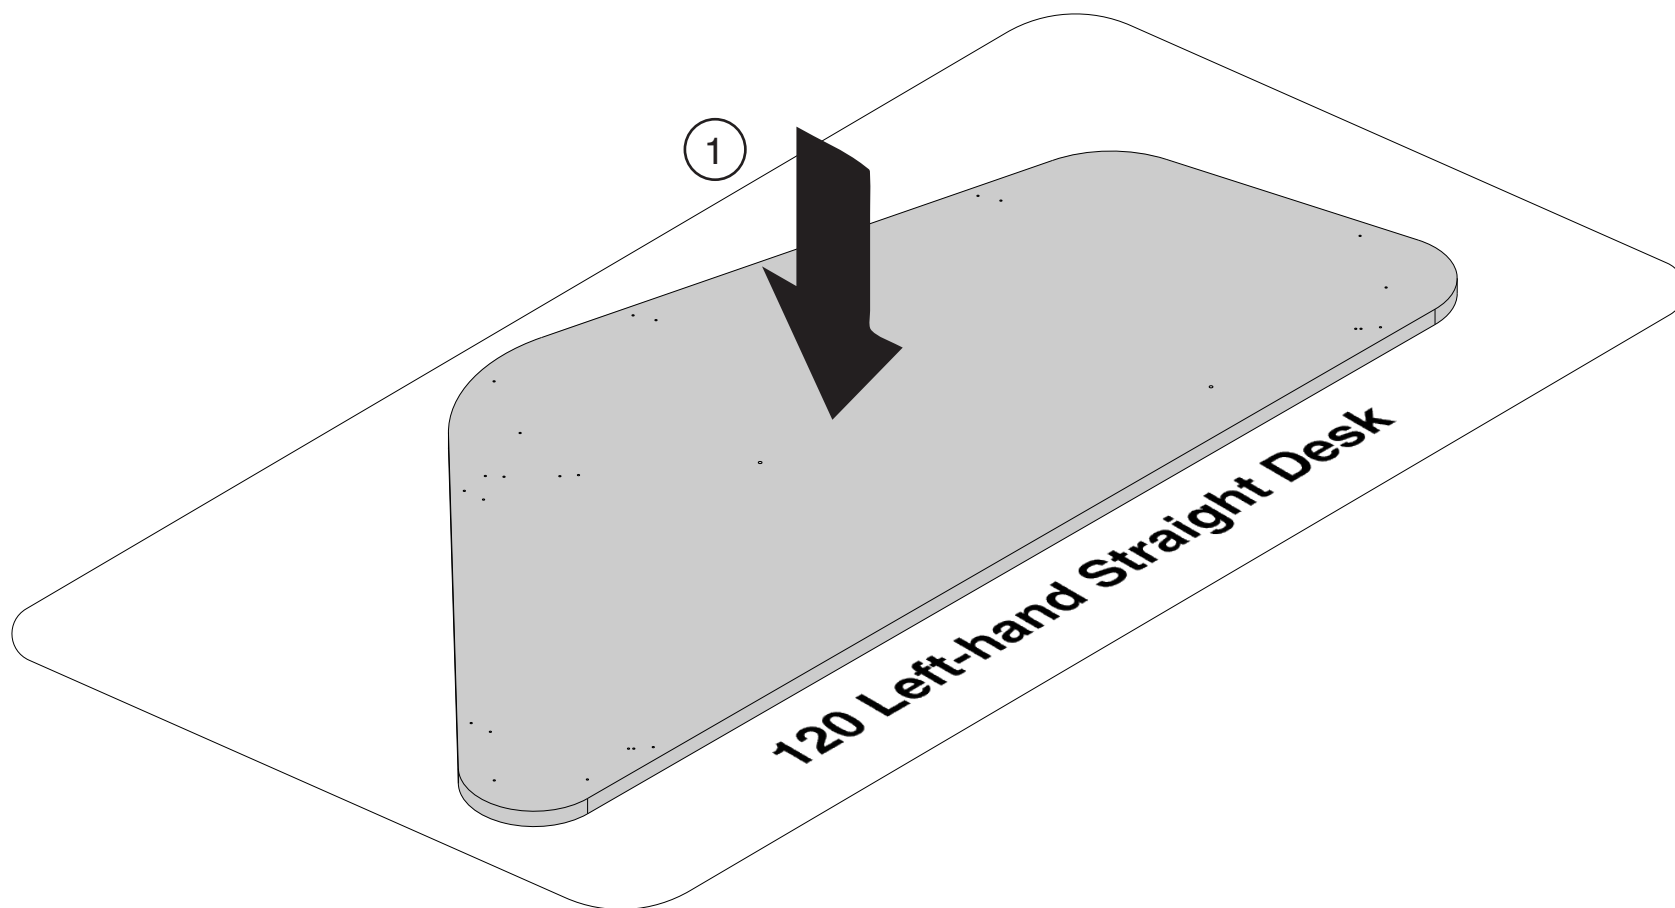

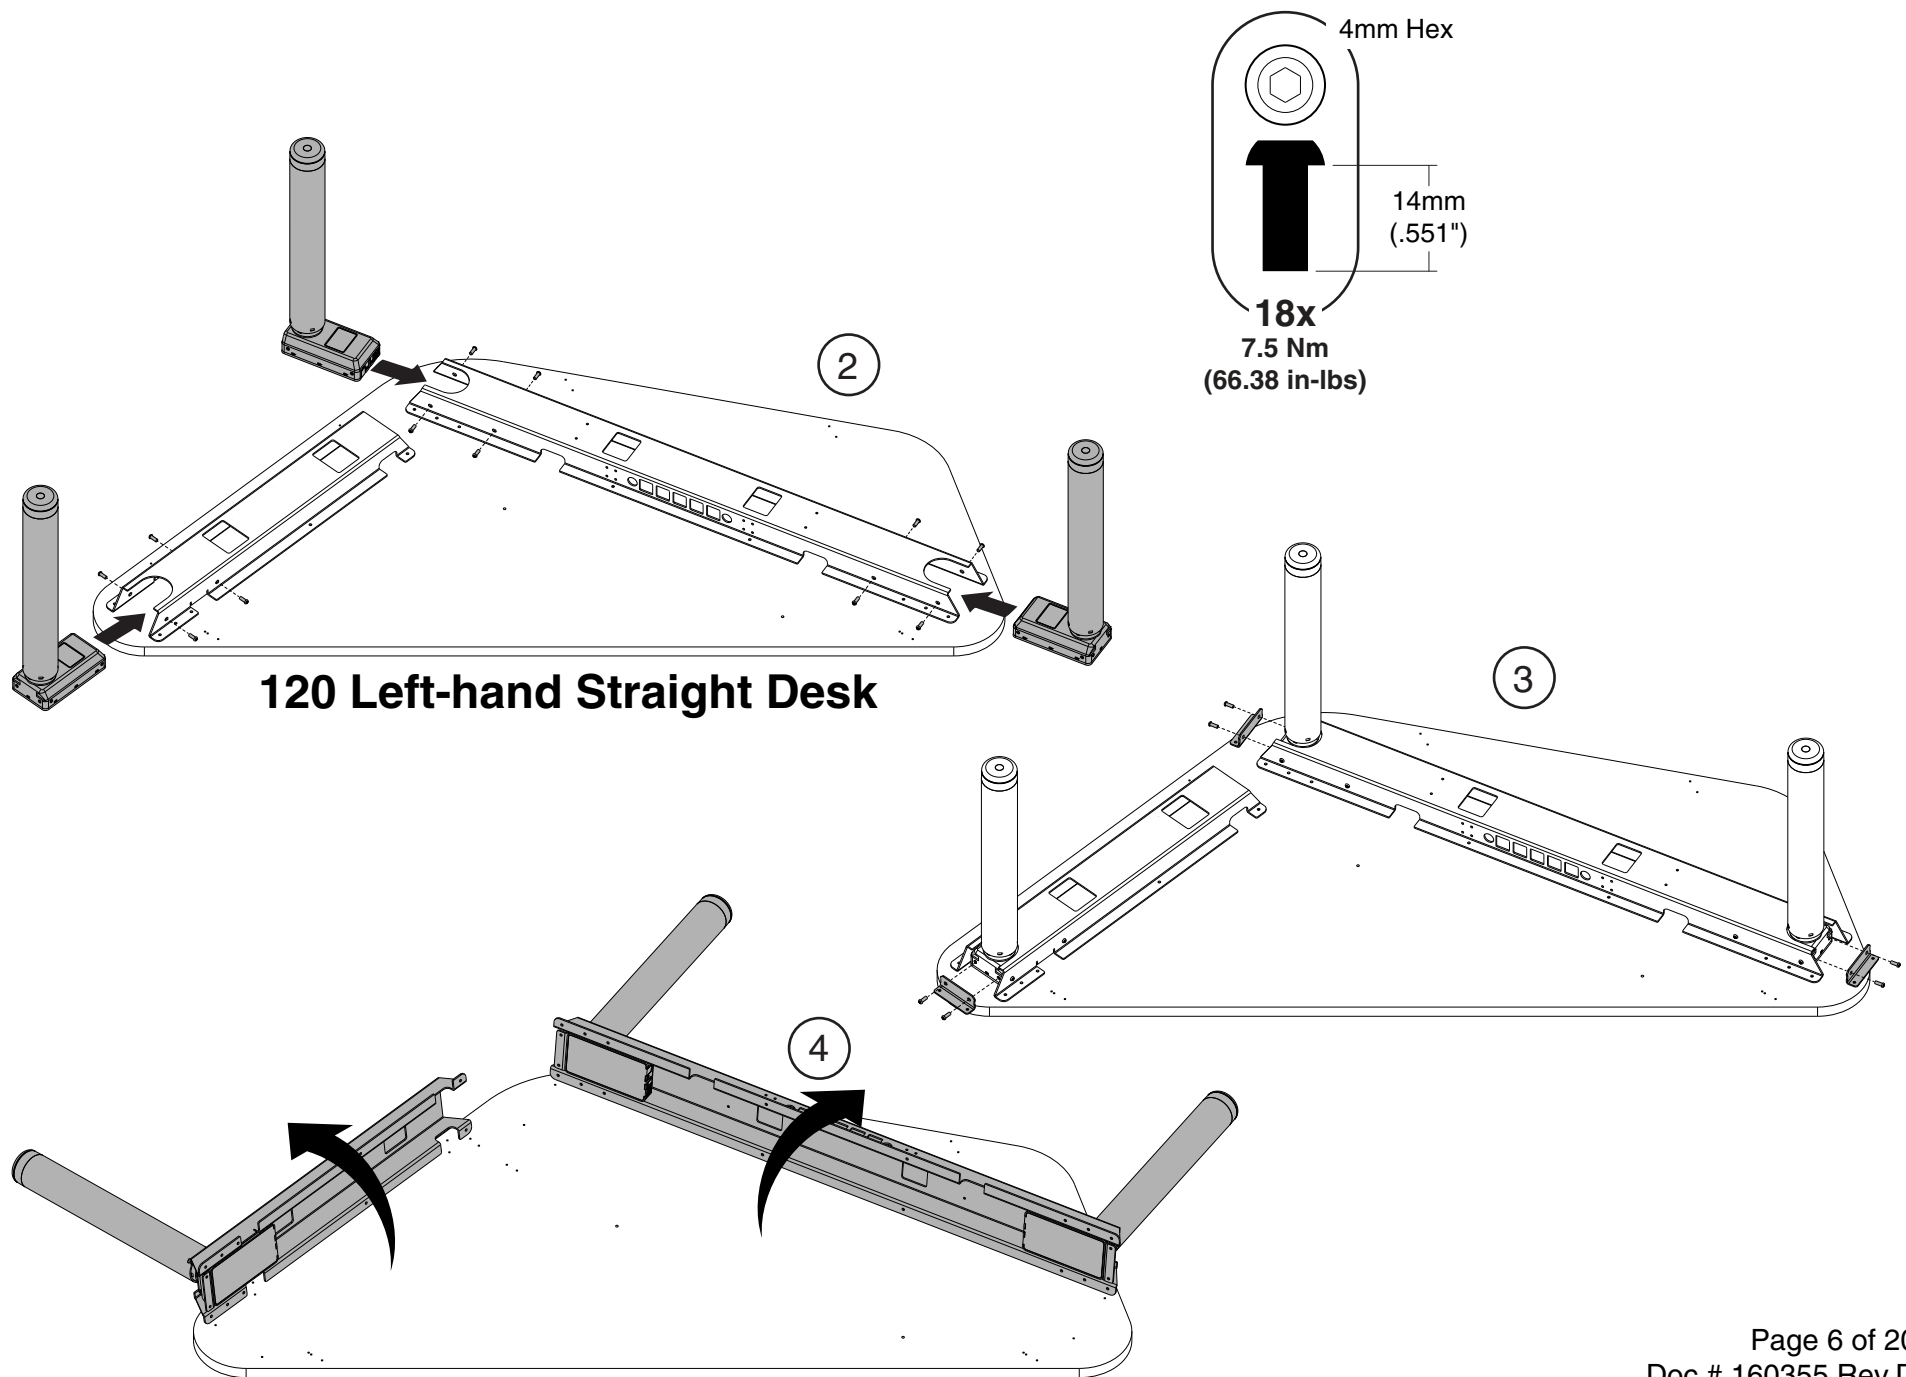


Desk With Under Worksurface Power




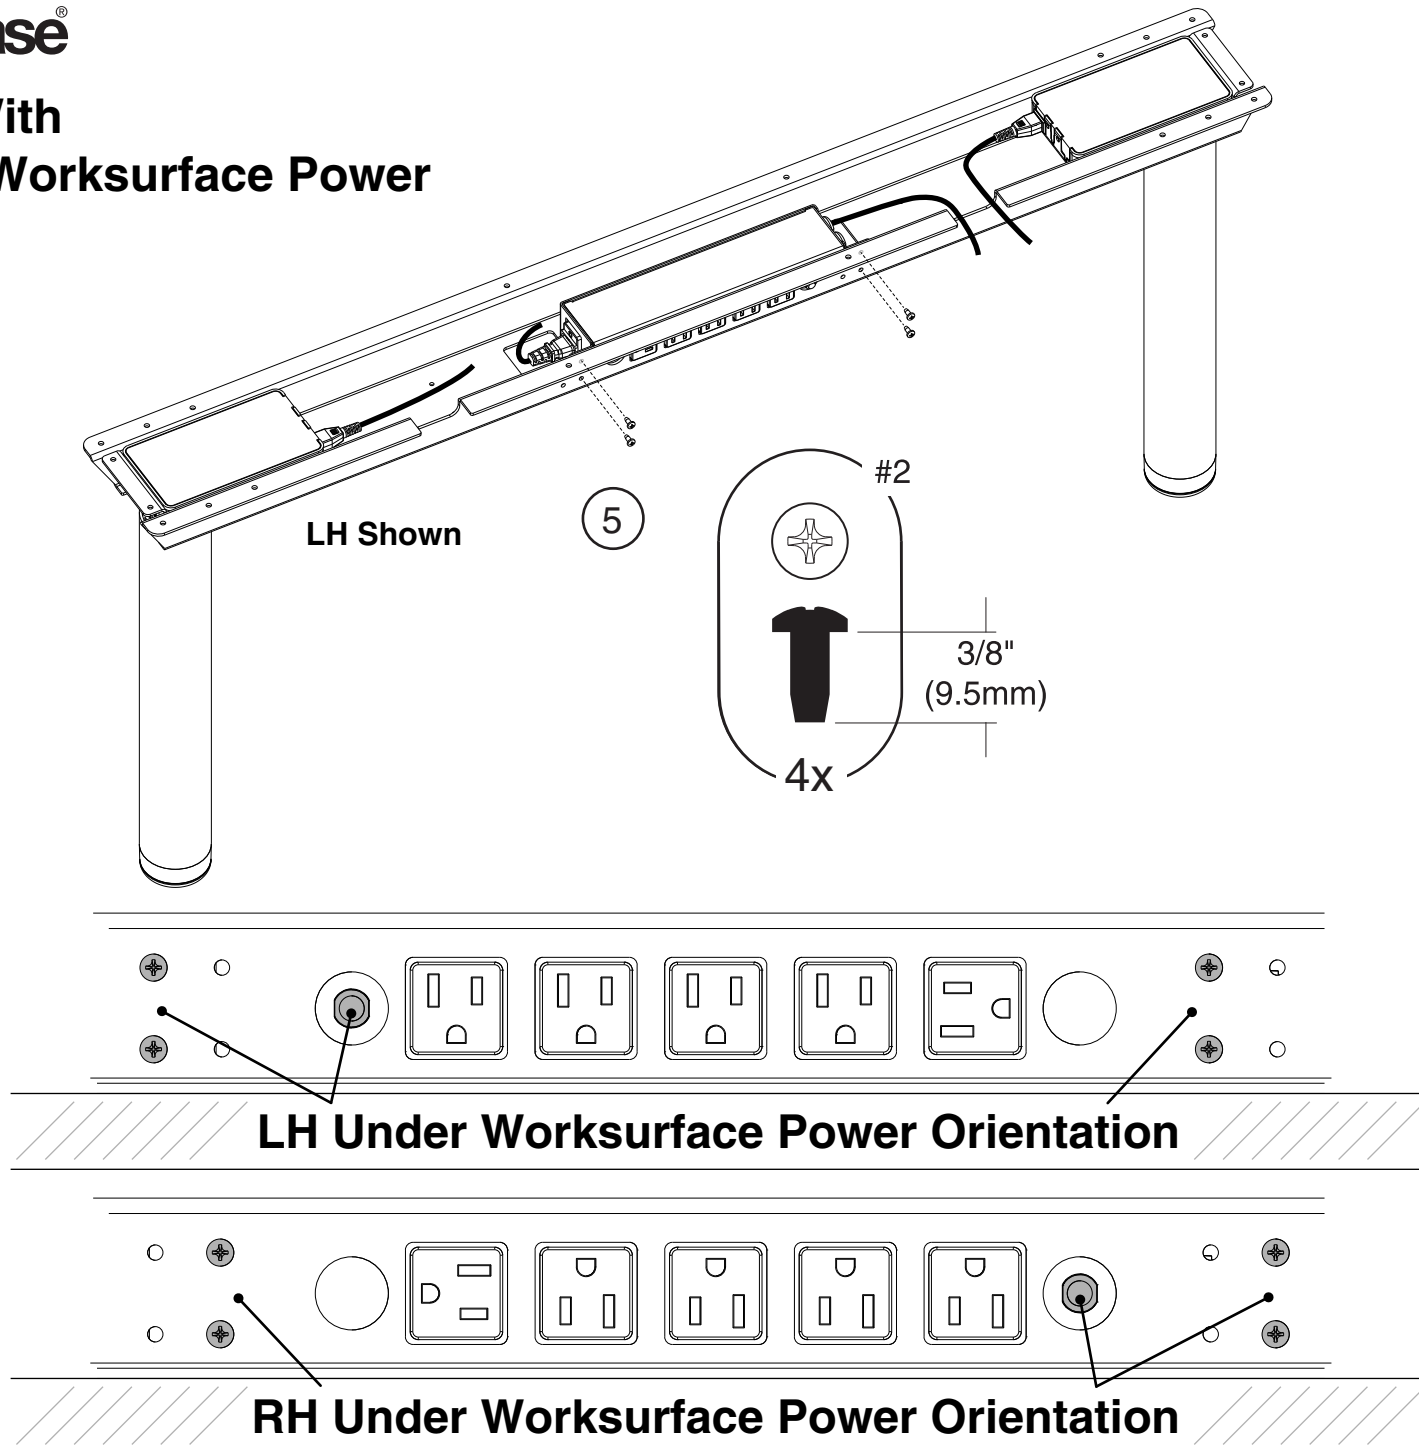 


Cable Routing




 
NOTE: See following two pages for all cable routing options

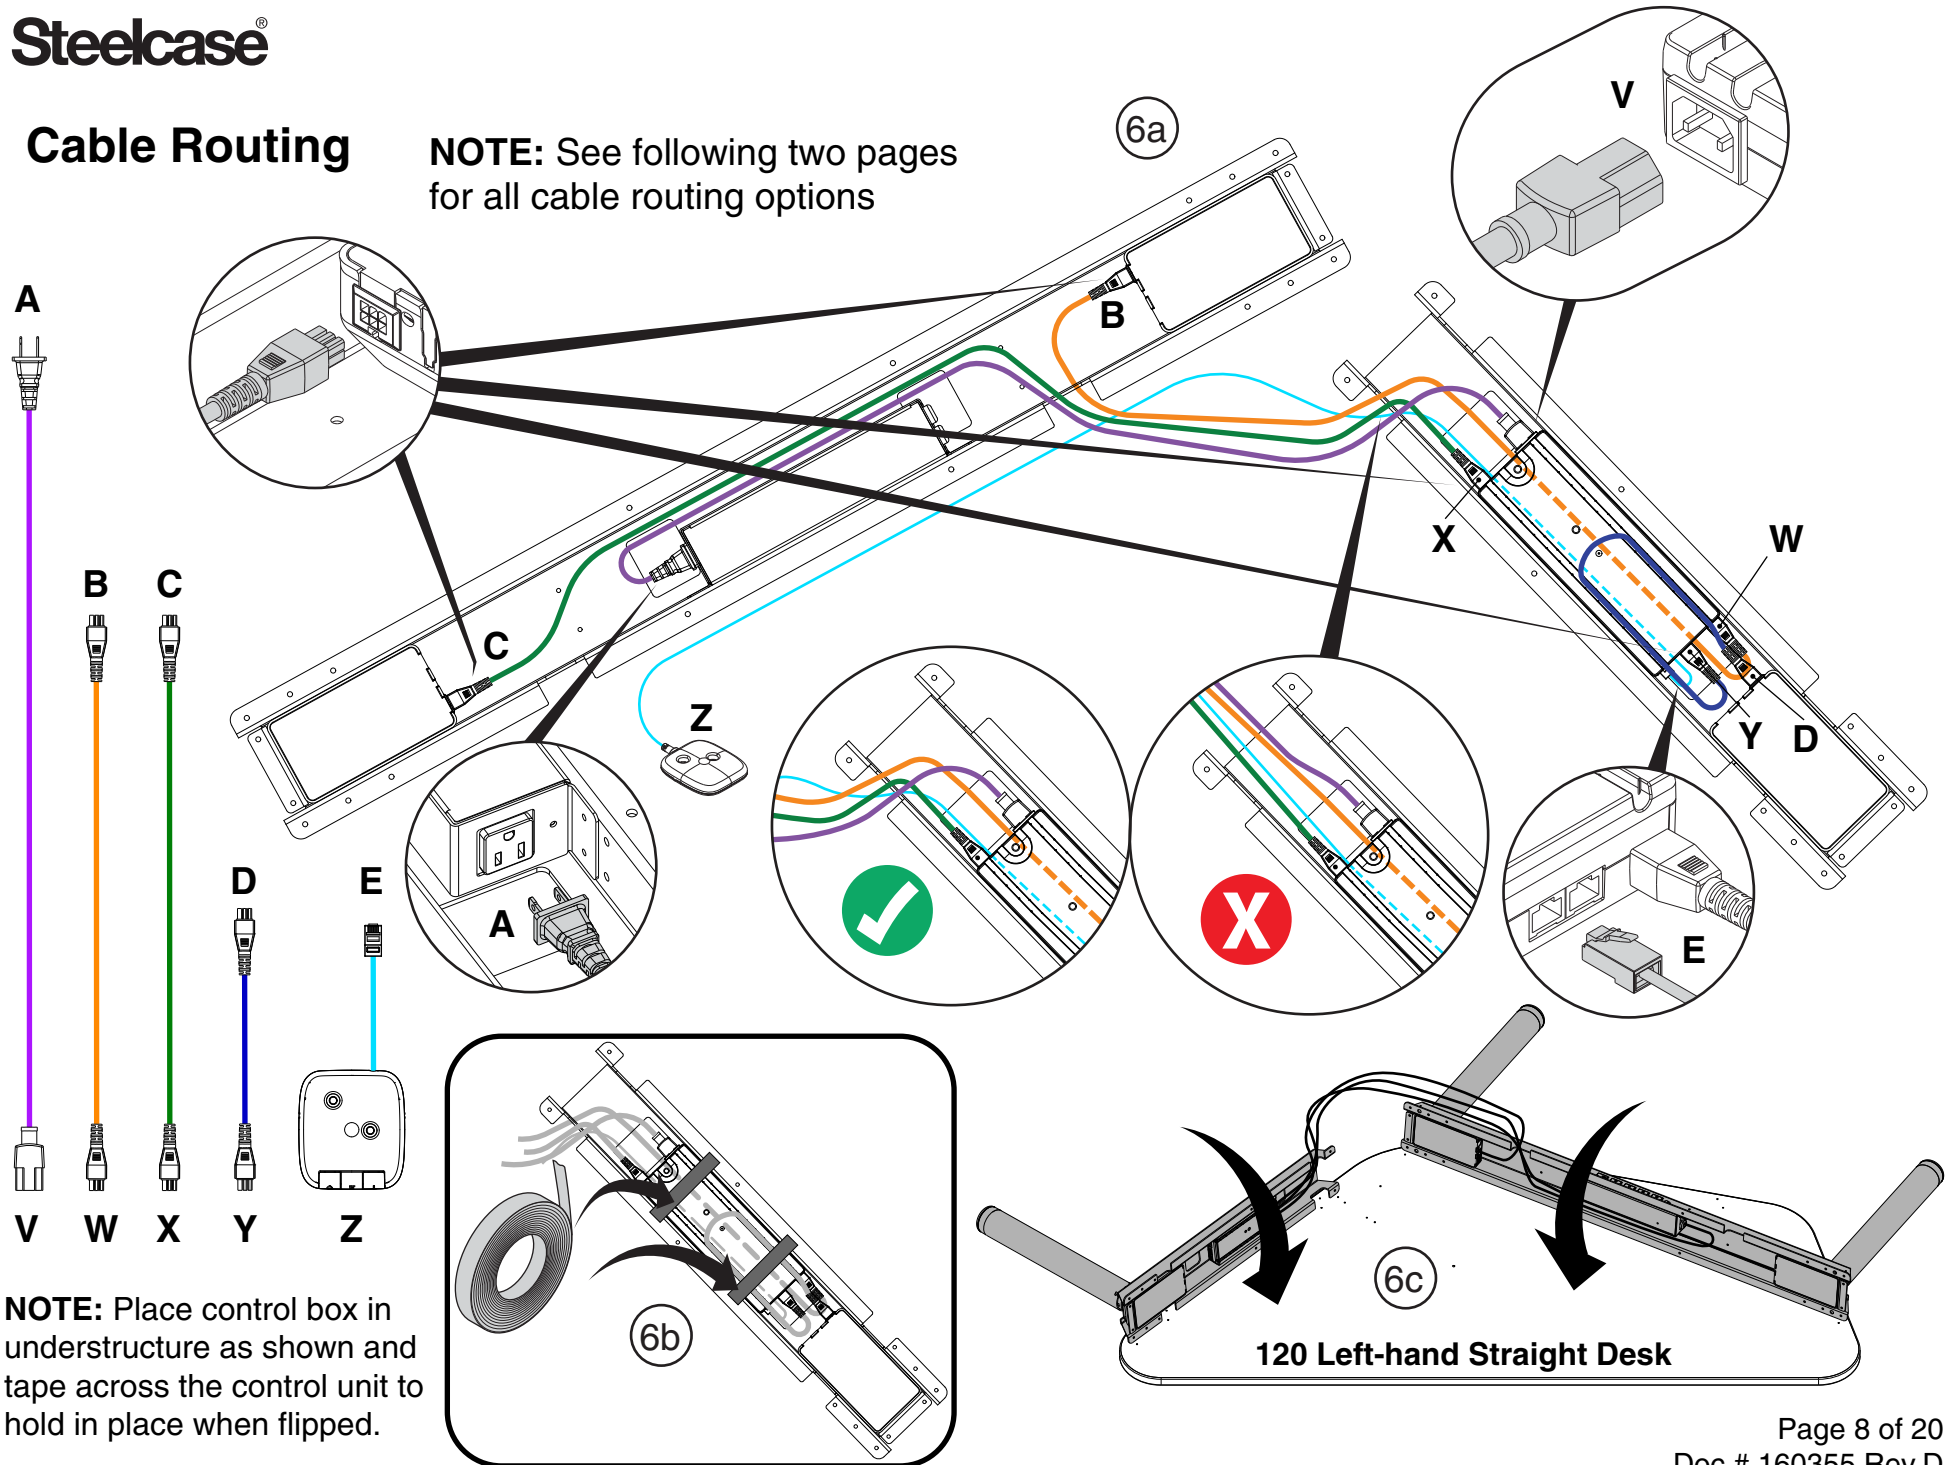

120 Straight

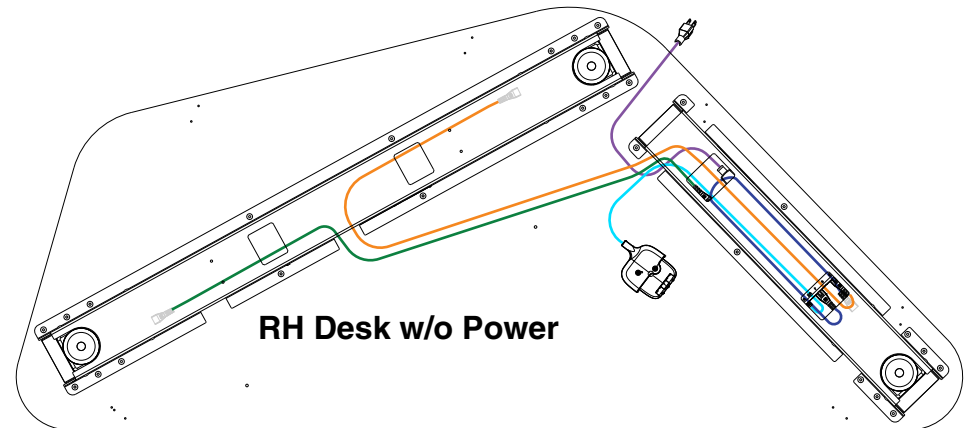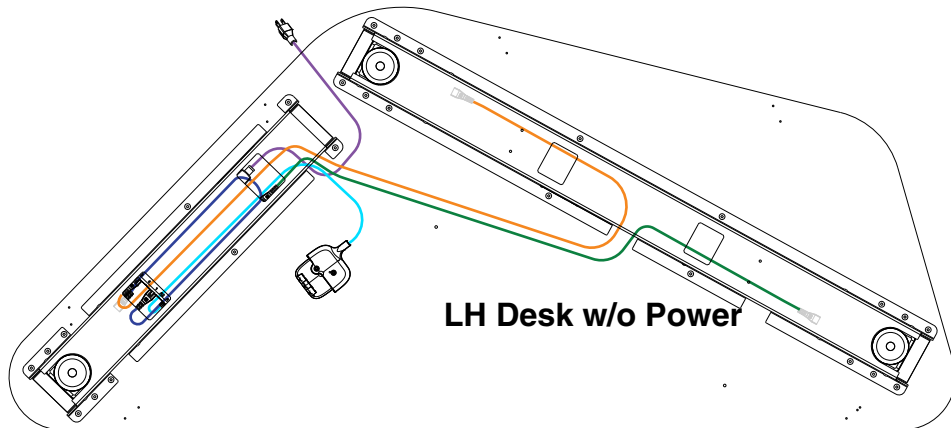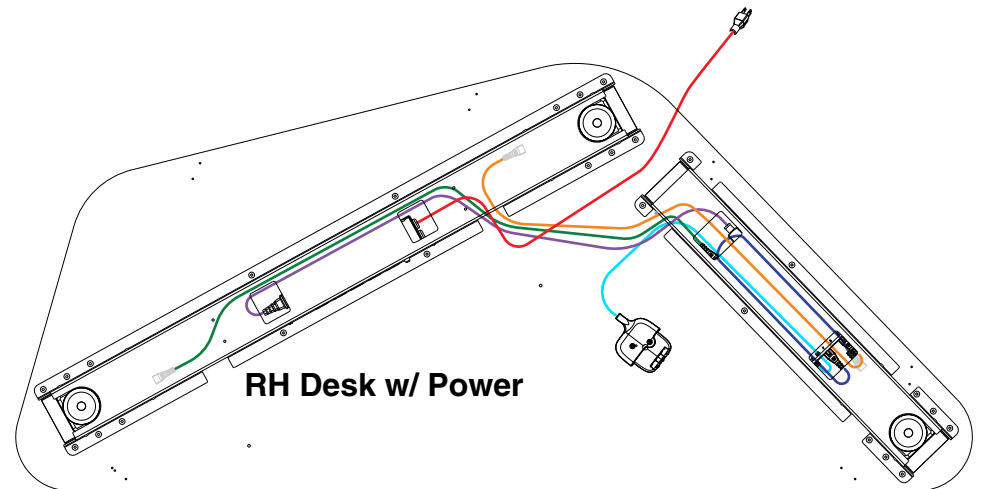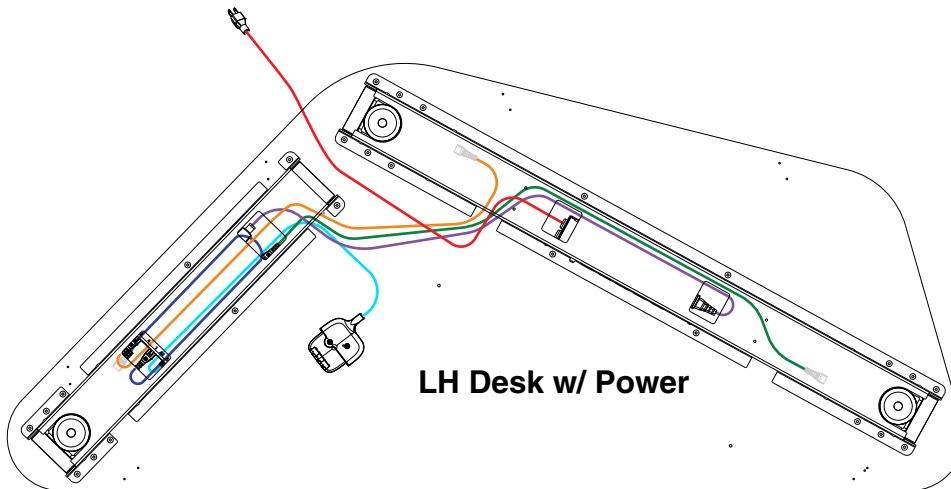    

120 Corner

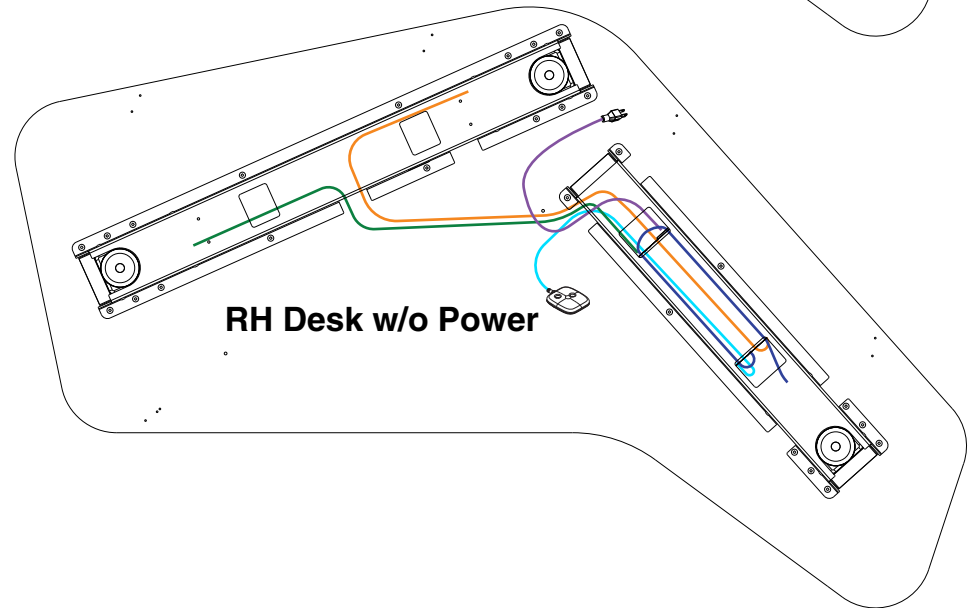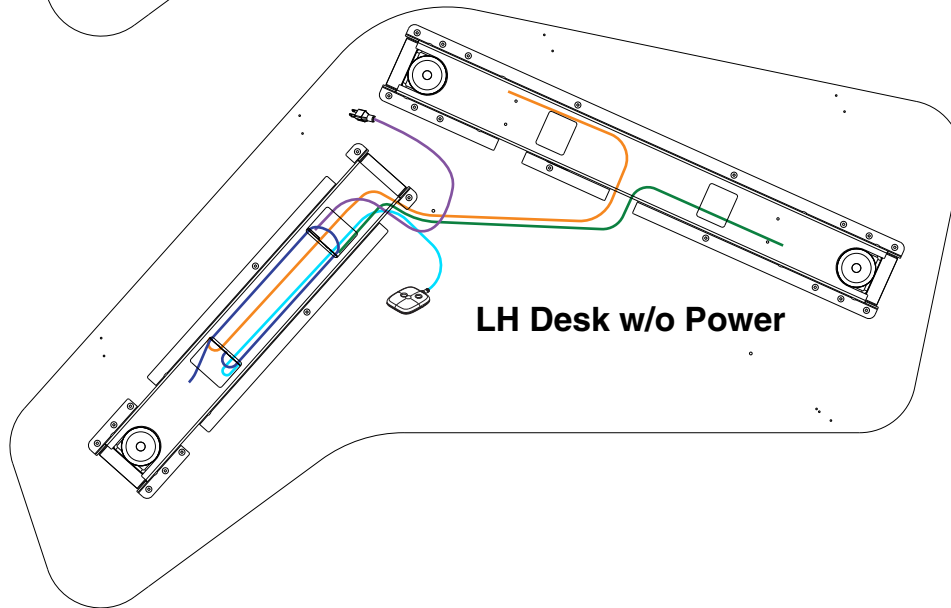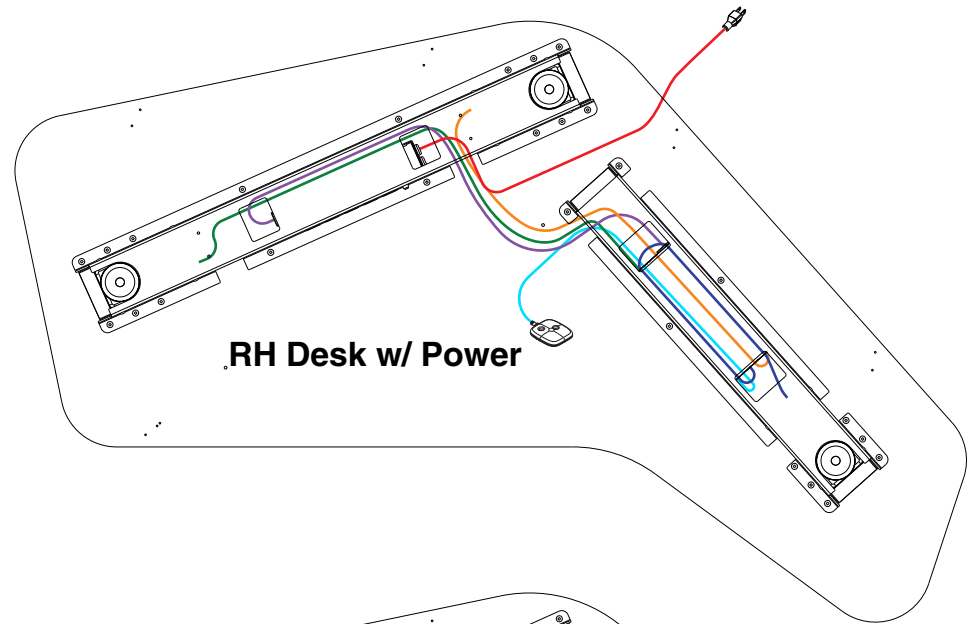   
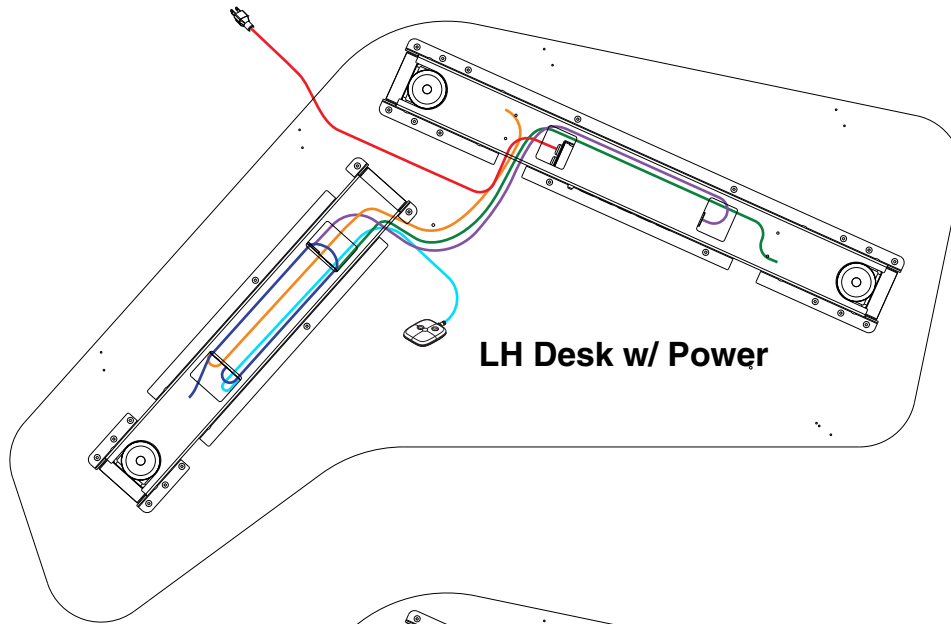 



Above Worksurface Mounted Power Cable Routing

NOTE: To optimize the above worksurface power block reach, follow the Blue/A and Green/B diagrams.


NOTE: The above worksurface power block needs to be mounted to the worksurface before installing a Modesty Panel or Privacy Wrap. Make sure the block is clear from the Modesty or Privacy Wrap mounting holes if either of those are to be added.

   NOTE: Above worksurface power can be mounted anywhere along specified edge. Yellow marks are pilot hole locations for Modesty Panel or Privacy Wrap and should be avoided.

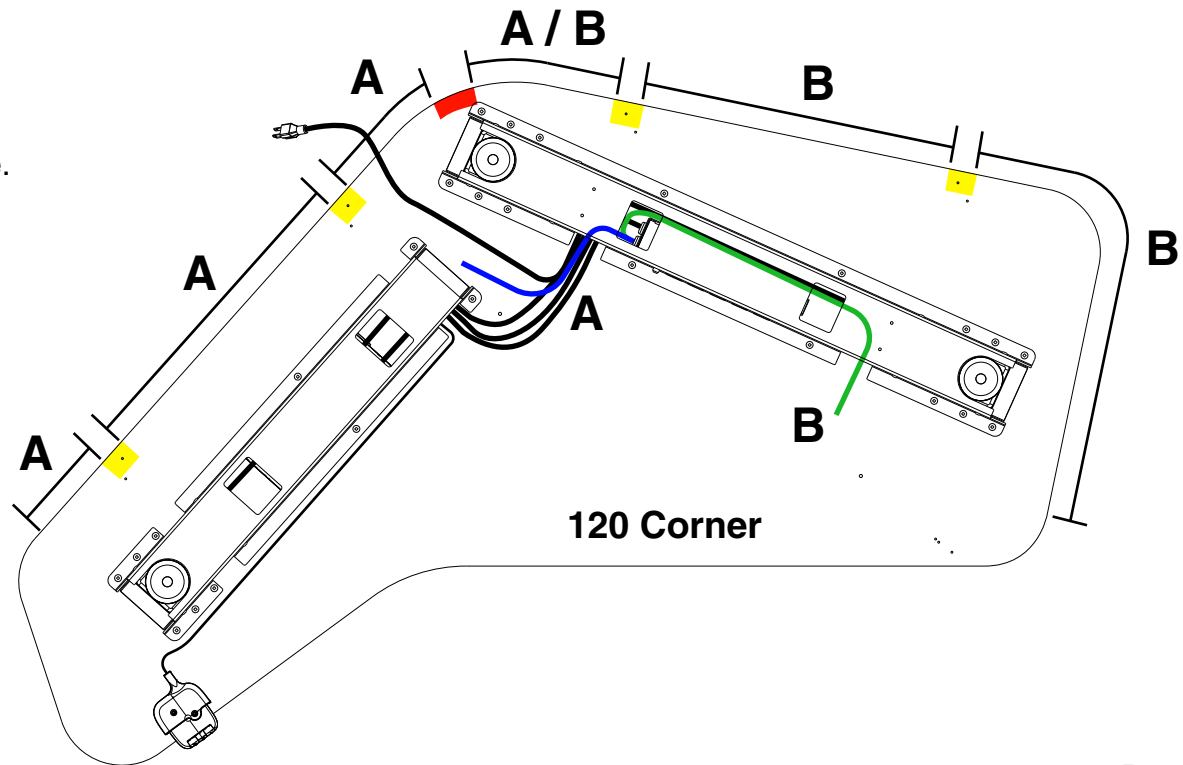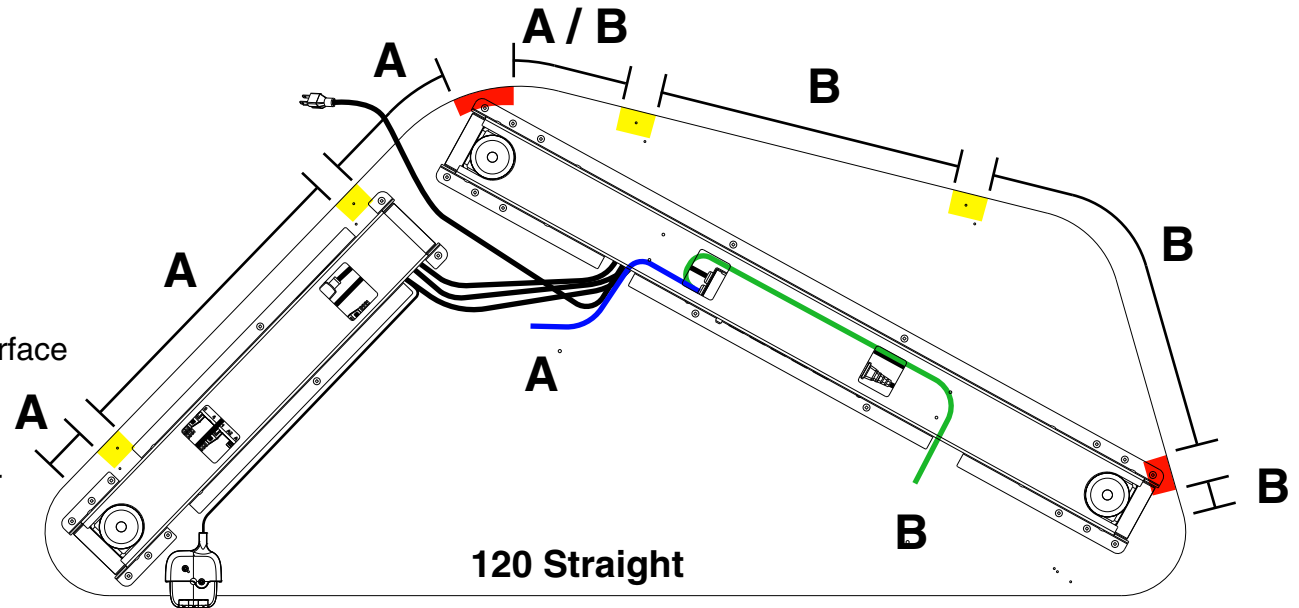


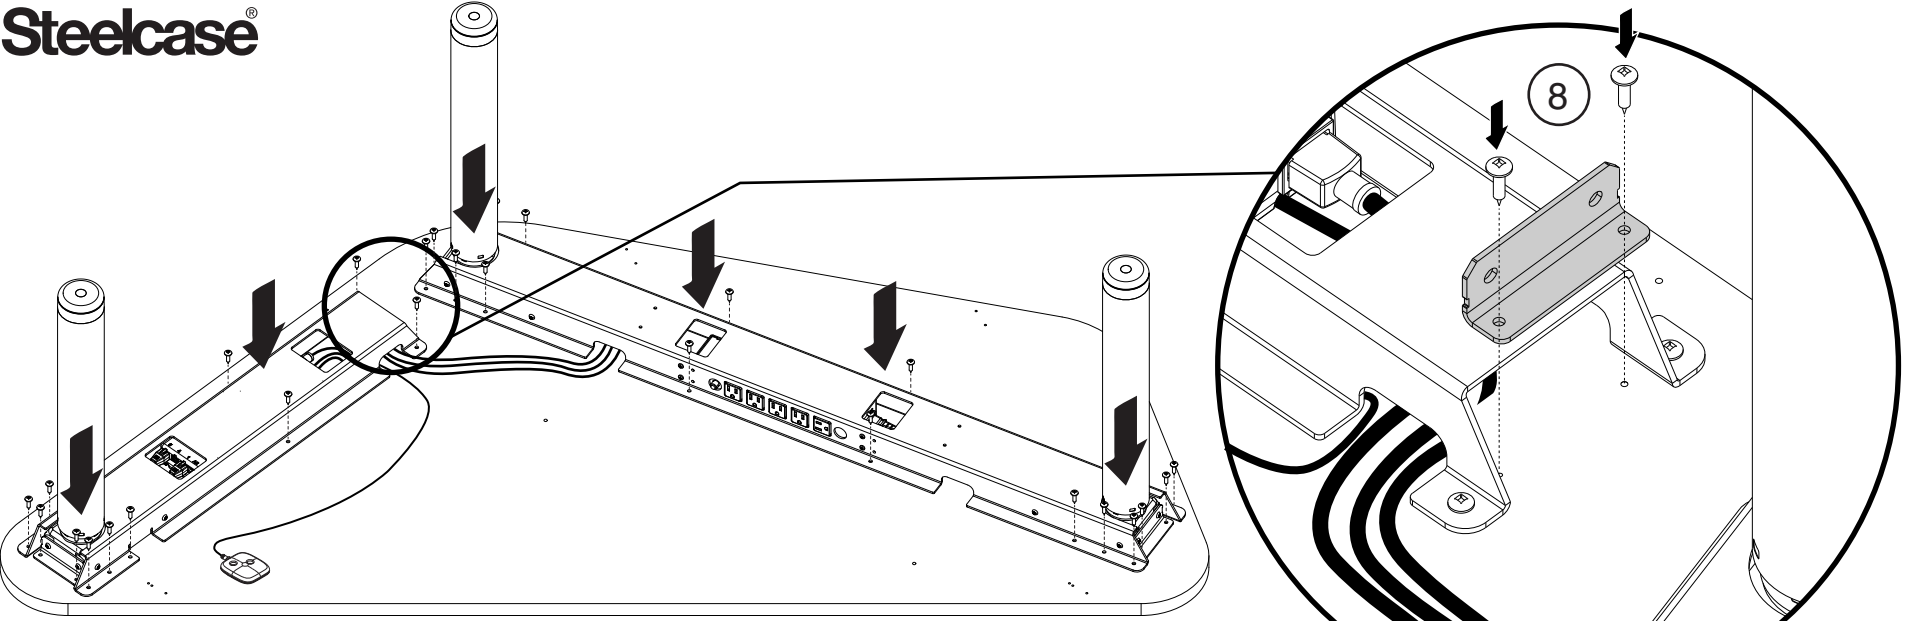


120 Left-hand Straight Desk

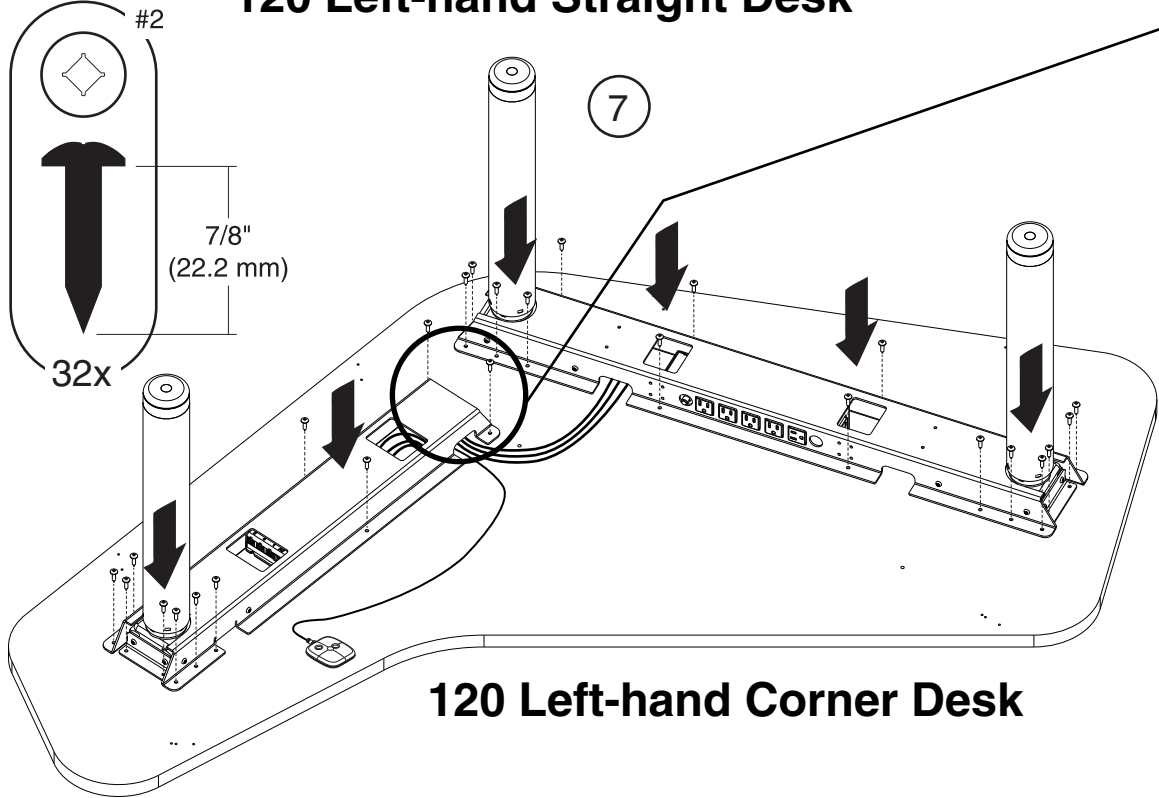 




120 Left-hand Corner Desk

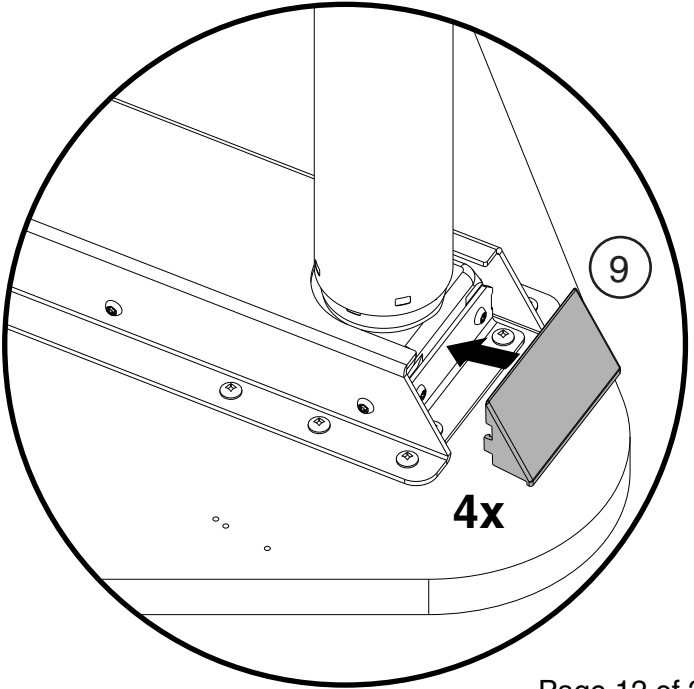 

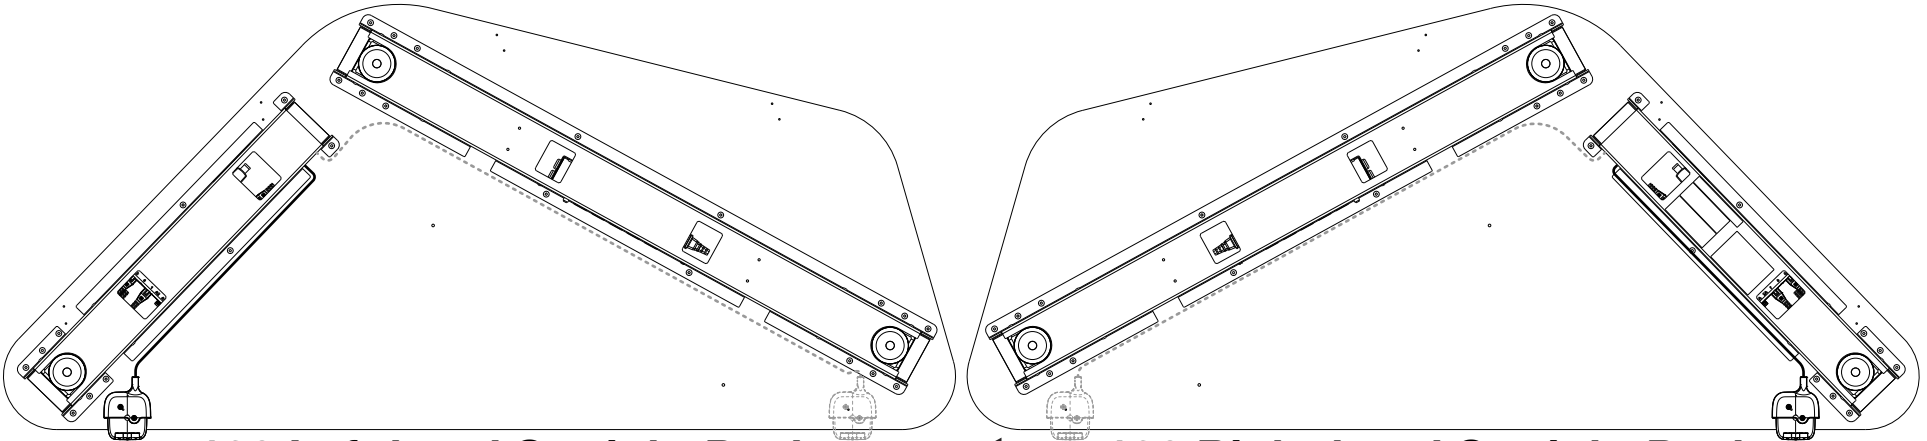 

120 Left-hand Straight Desk

   120 Right-hand Straight Desk

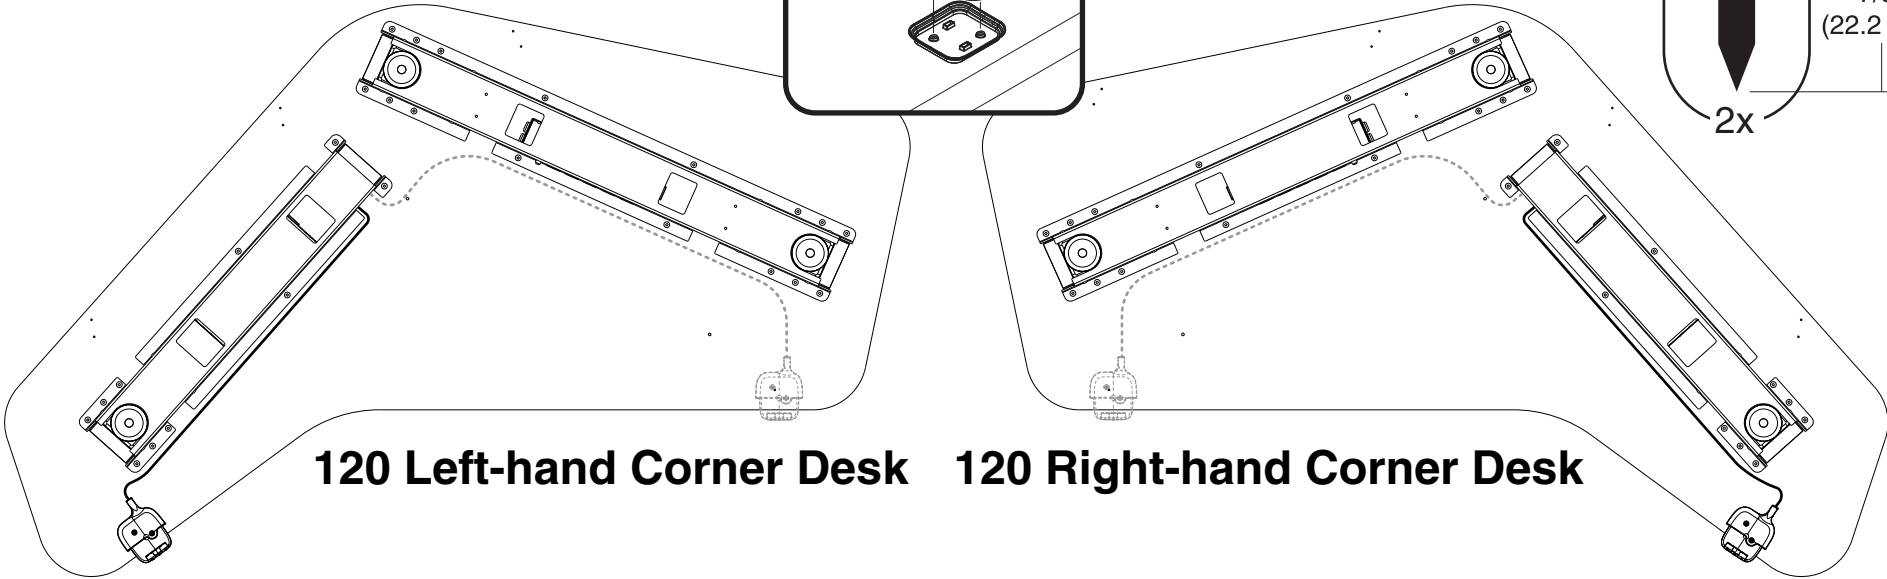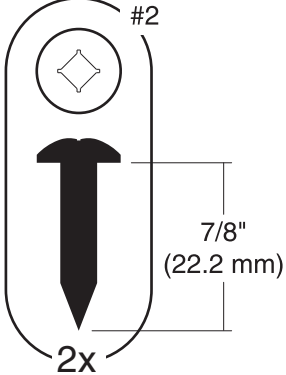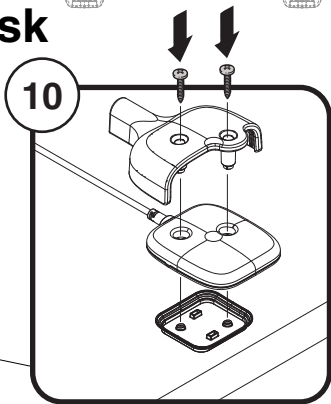

120 Left-hand Corner Desk

120 Right-hand Corner Desk

 
 
 
NOTE: Use provided cable clips to manage wires.

The “yellow” clip is for the switch cable.


The “purple” clip is for the leg or power cables.

The “green” clip can be adhered to the understructure surface to route cable optimized for desk power cord.


TIP: Keep cables close to understructure.

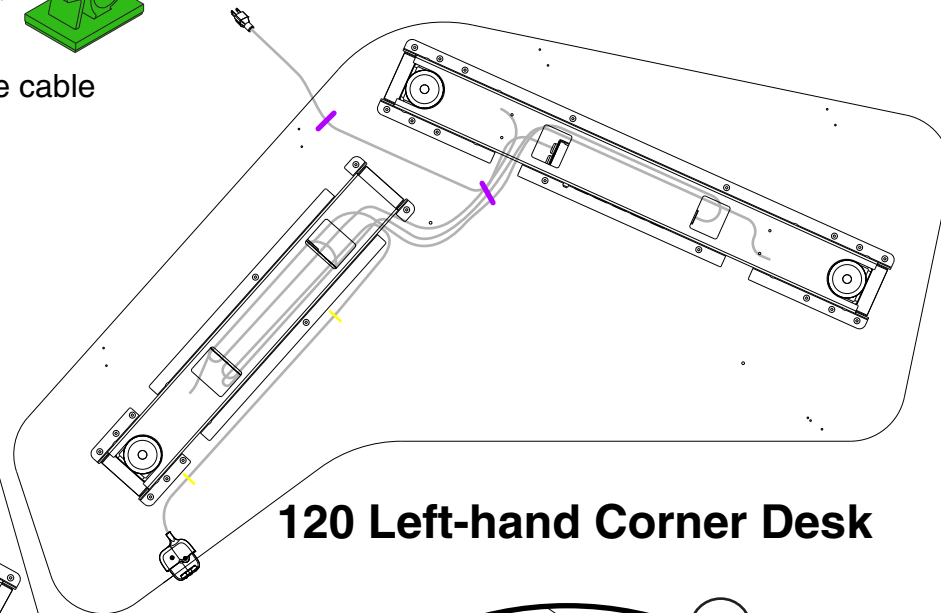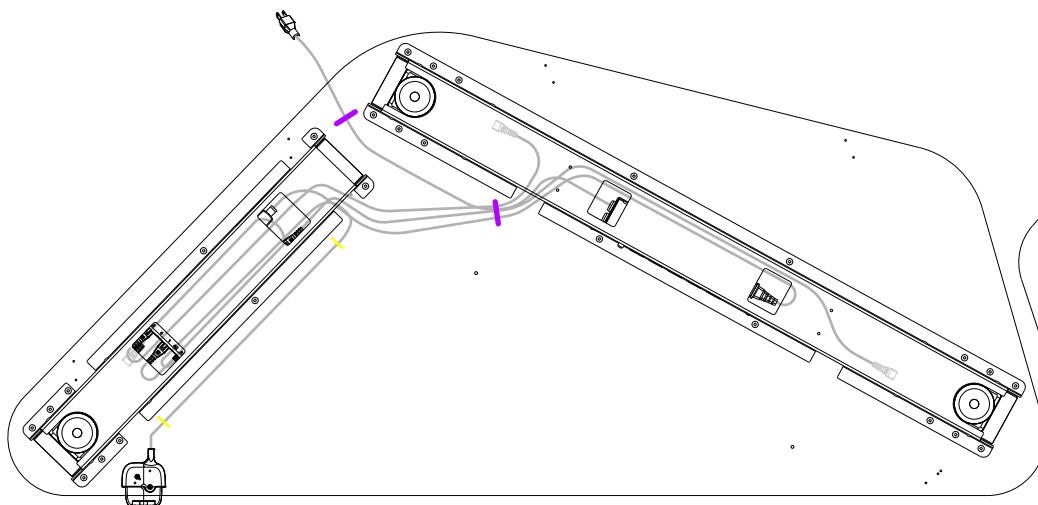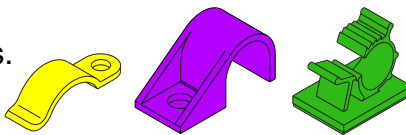

120 Left-hand Corner Desk

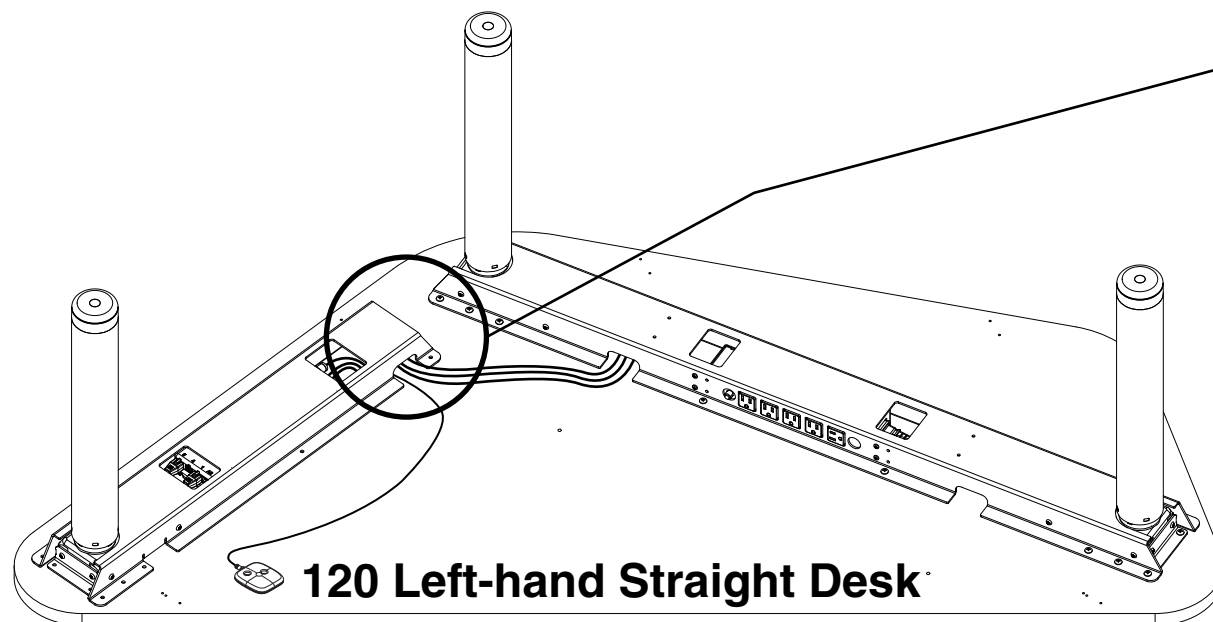 


120 Left-hand Straight Desk

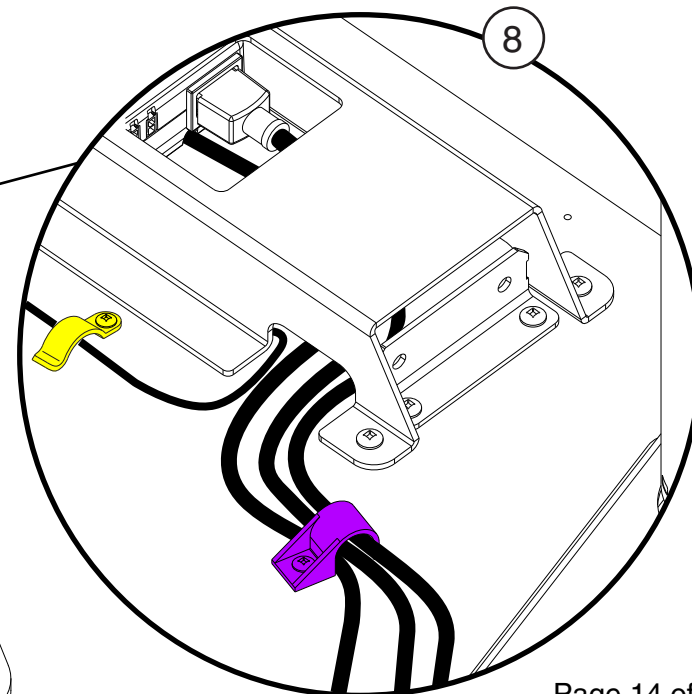 


Optional Cable Tray

 
120 Left-hand Straight Desk

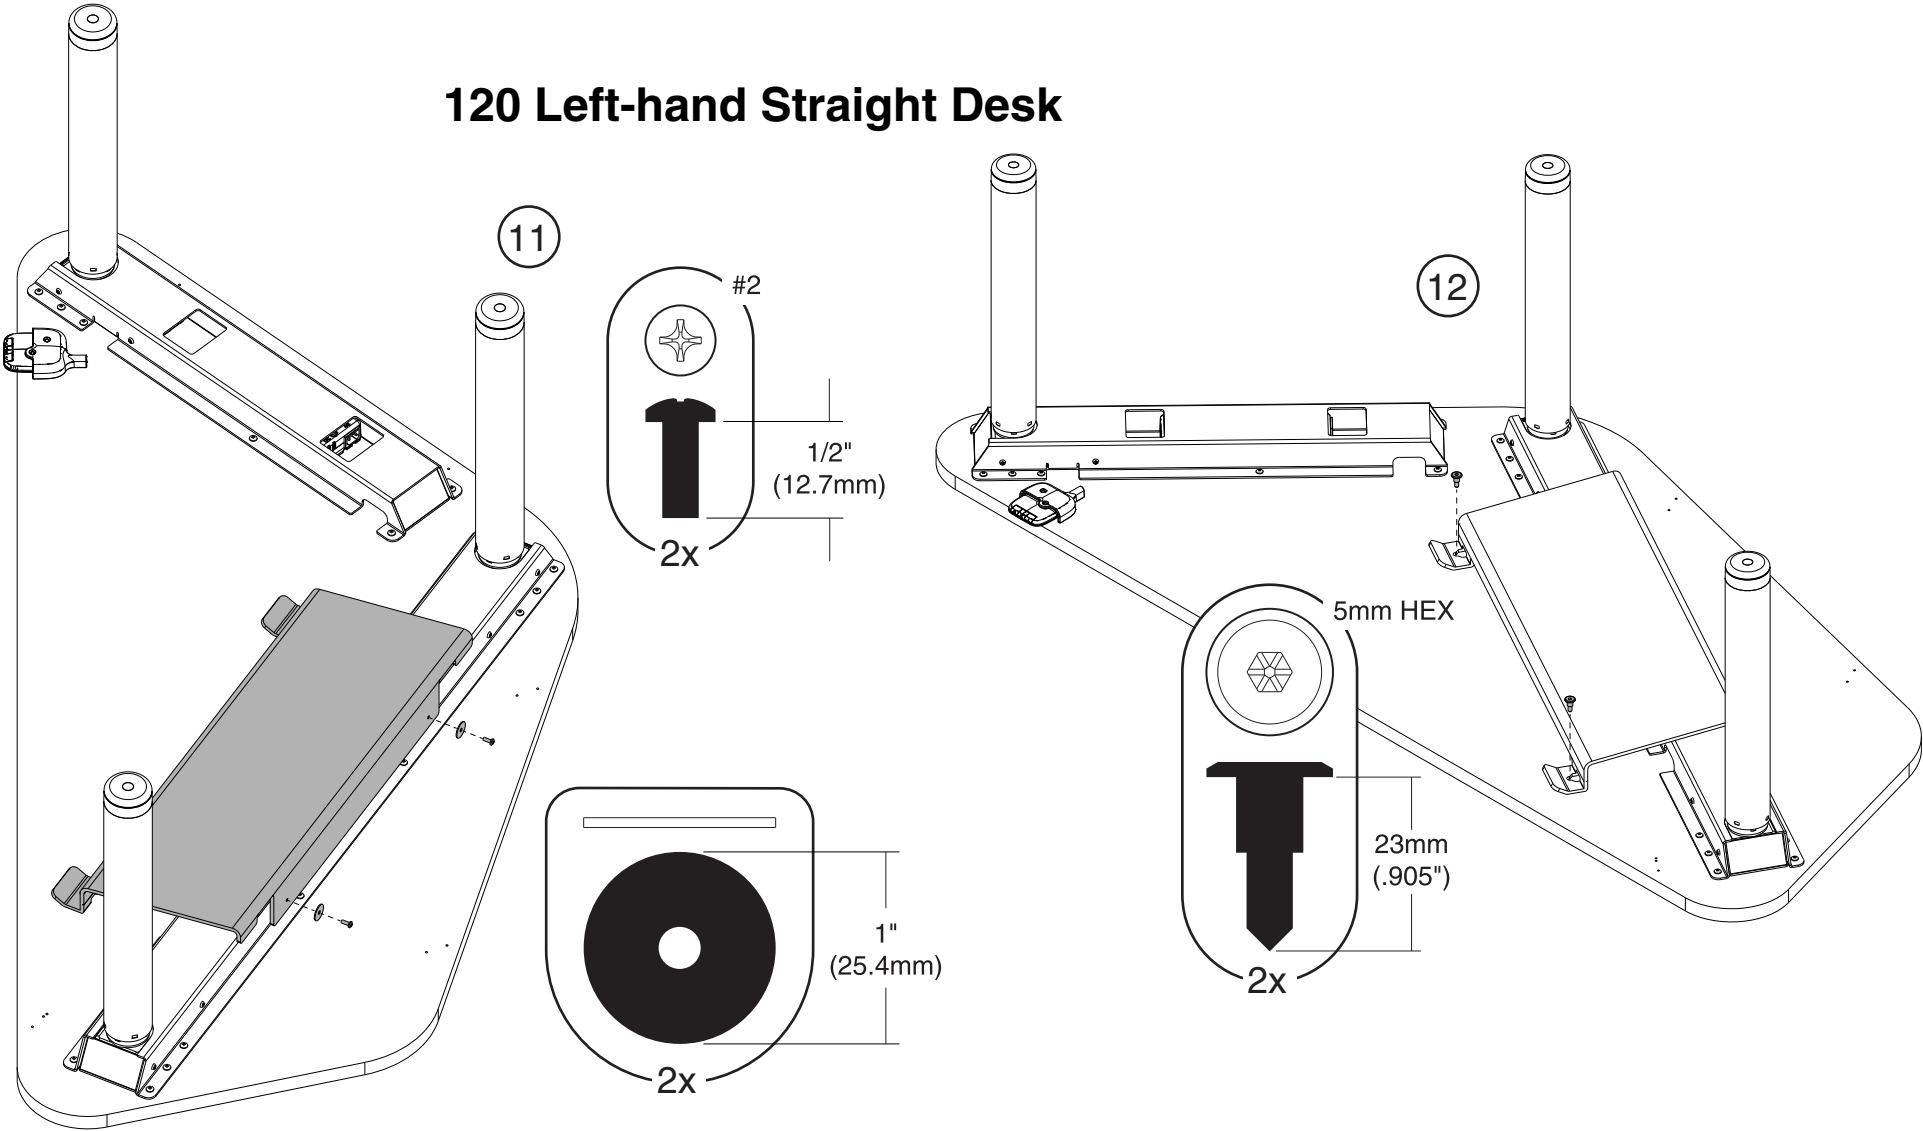



Magnetic Cable Clips

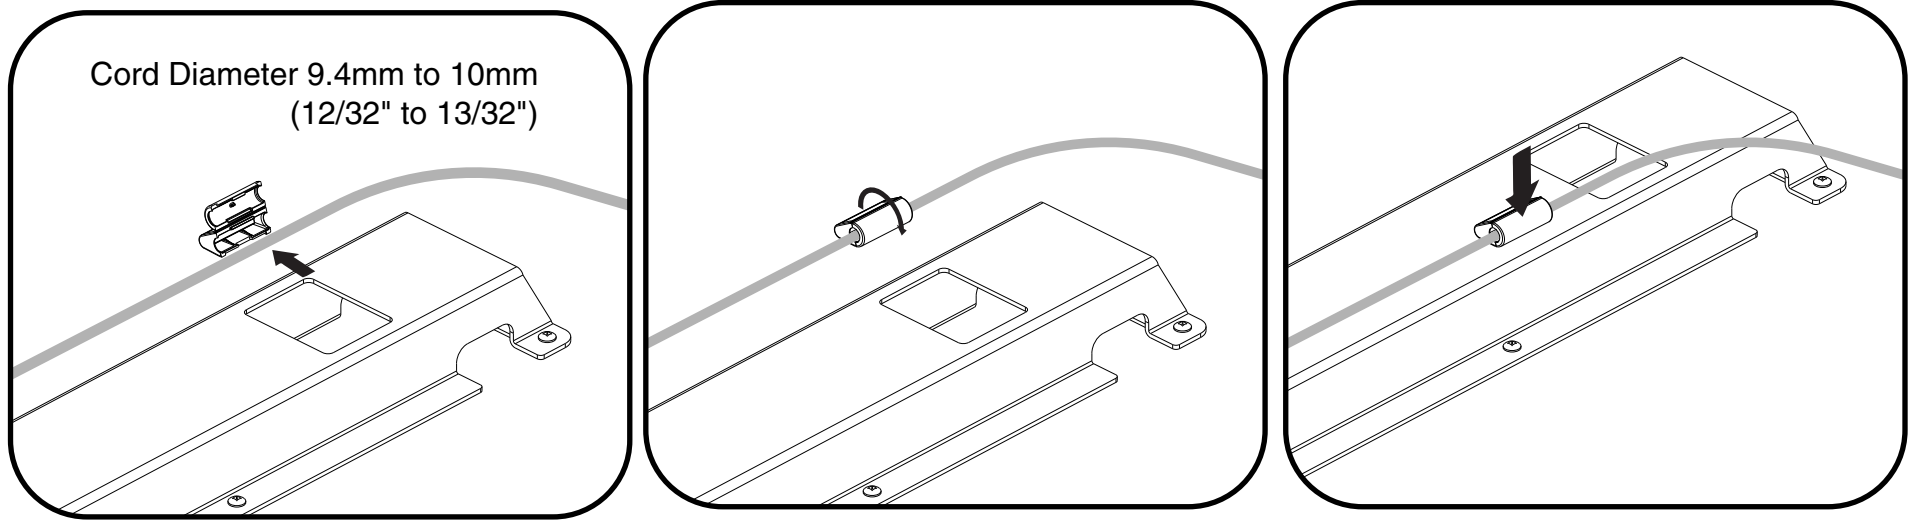 

  
 
Note: Magnetic cable clips can be used on the beam structure as well as the optional modesty panel.

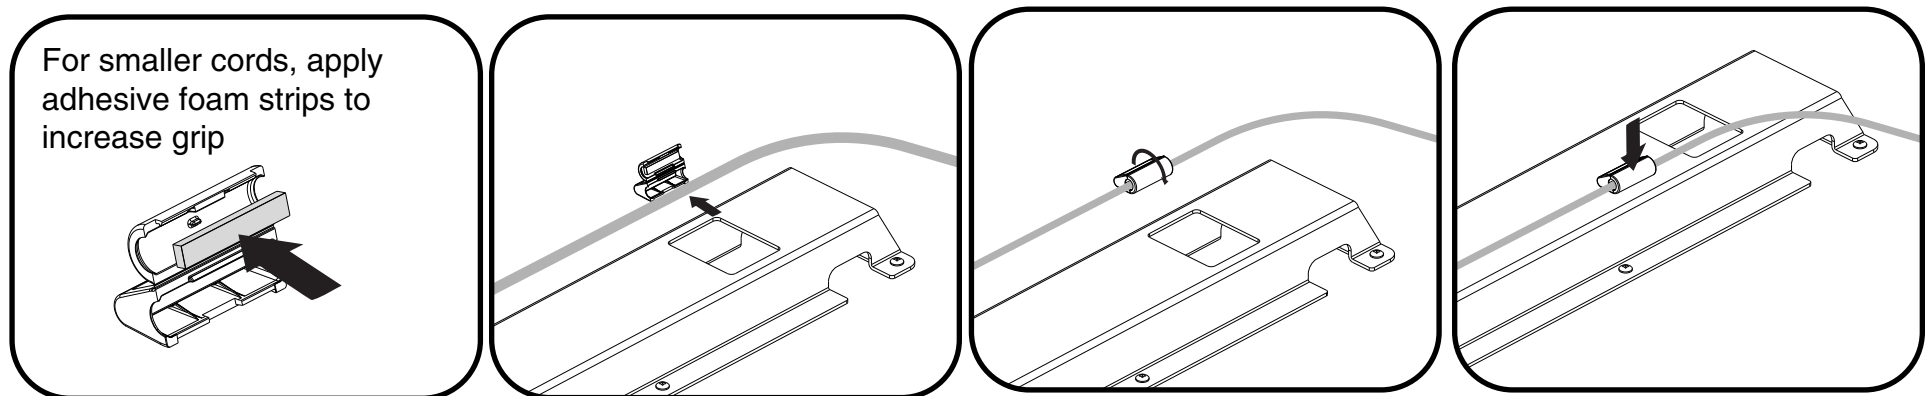

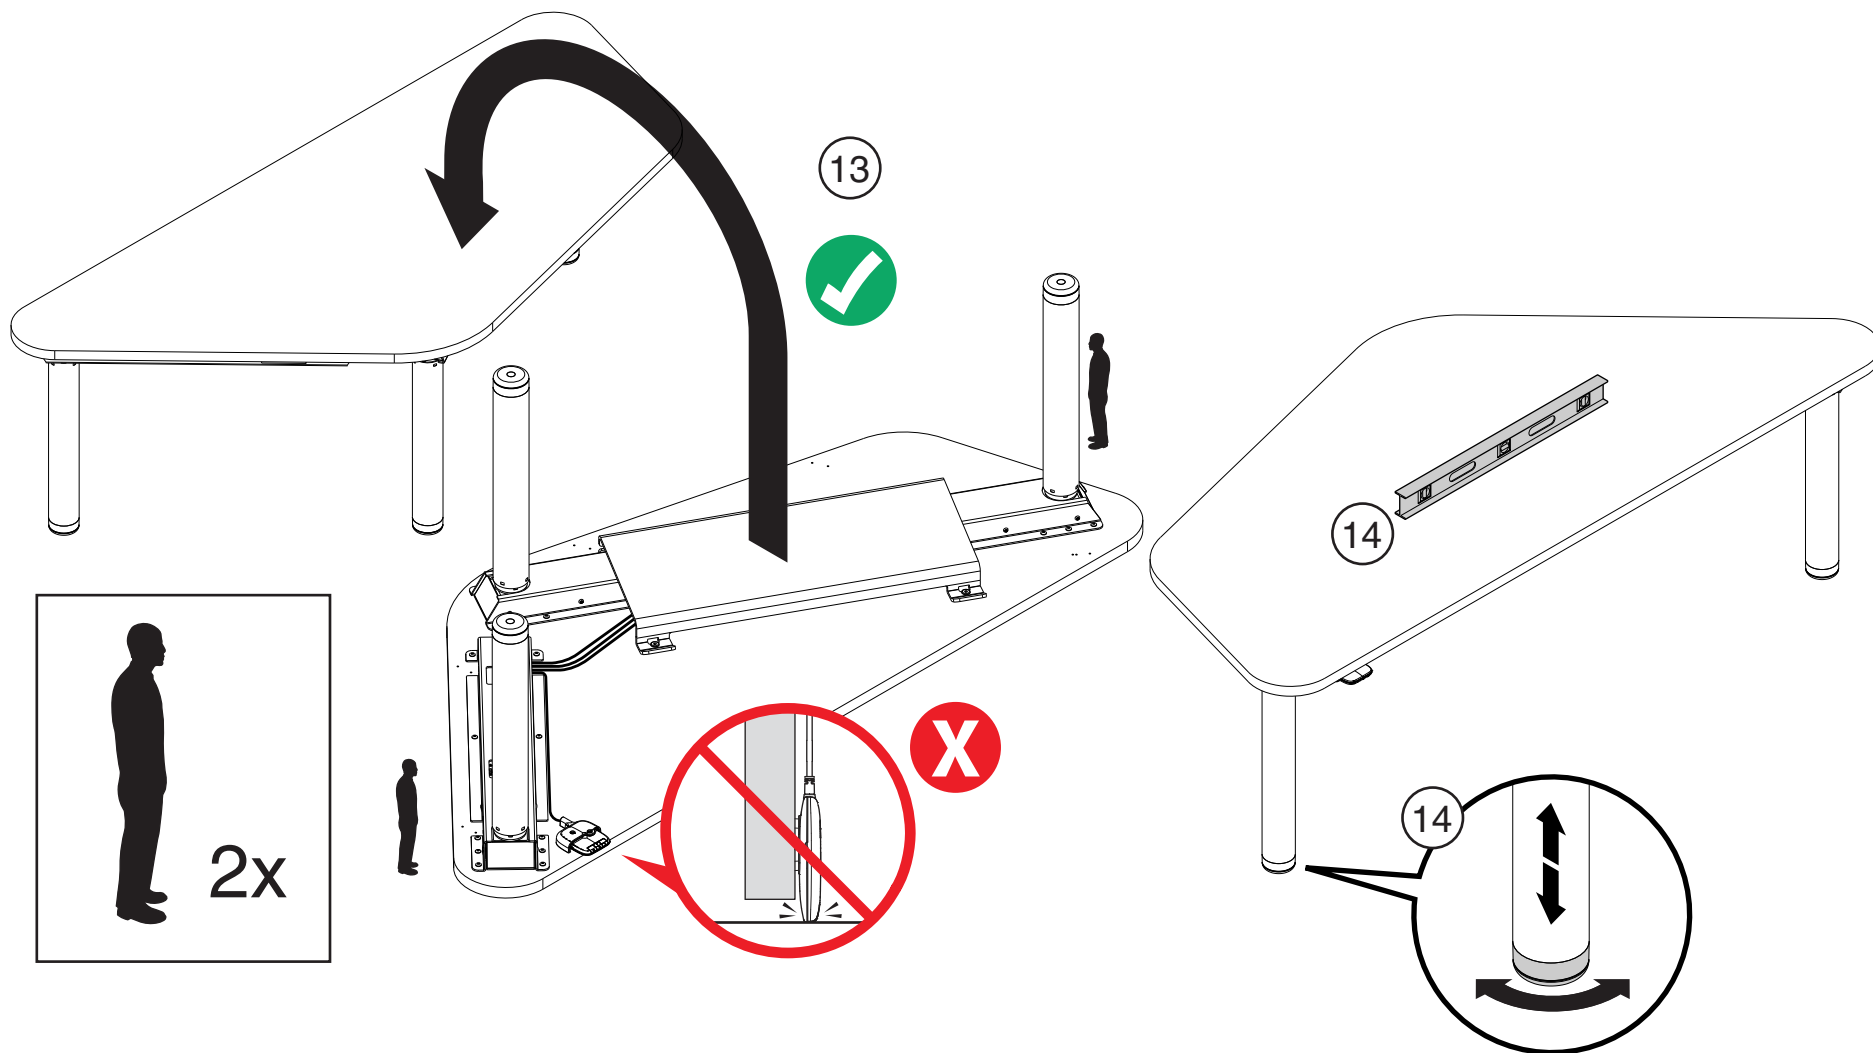

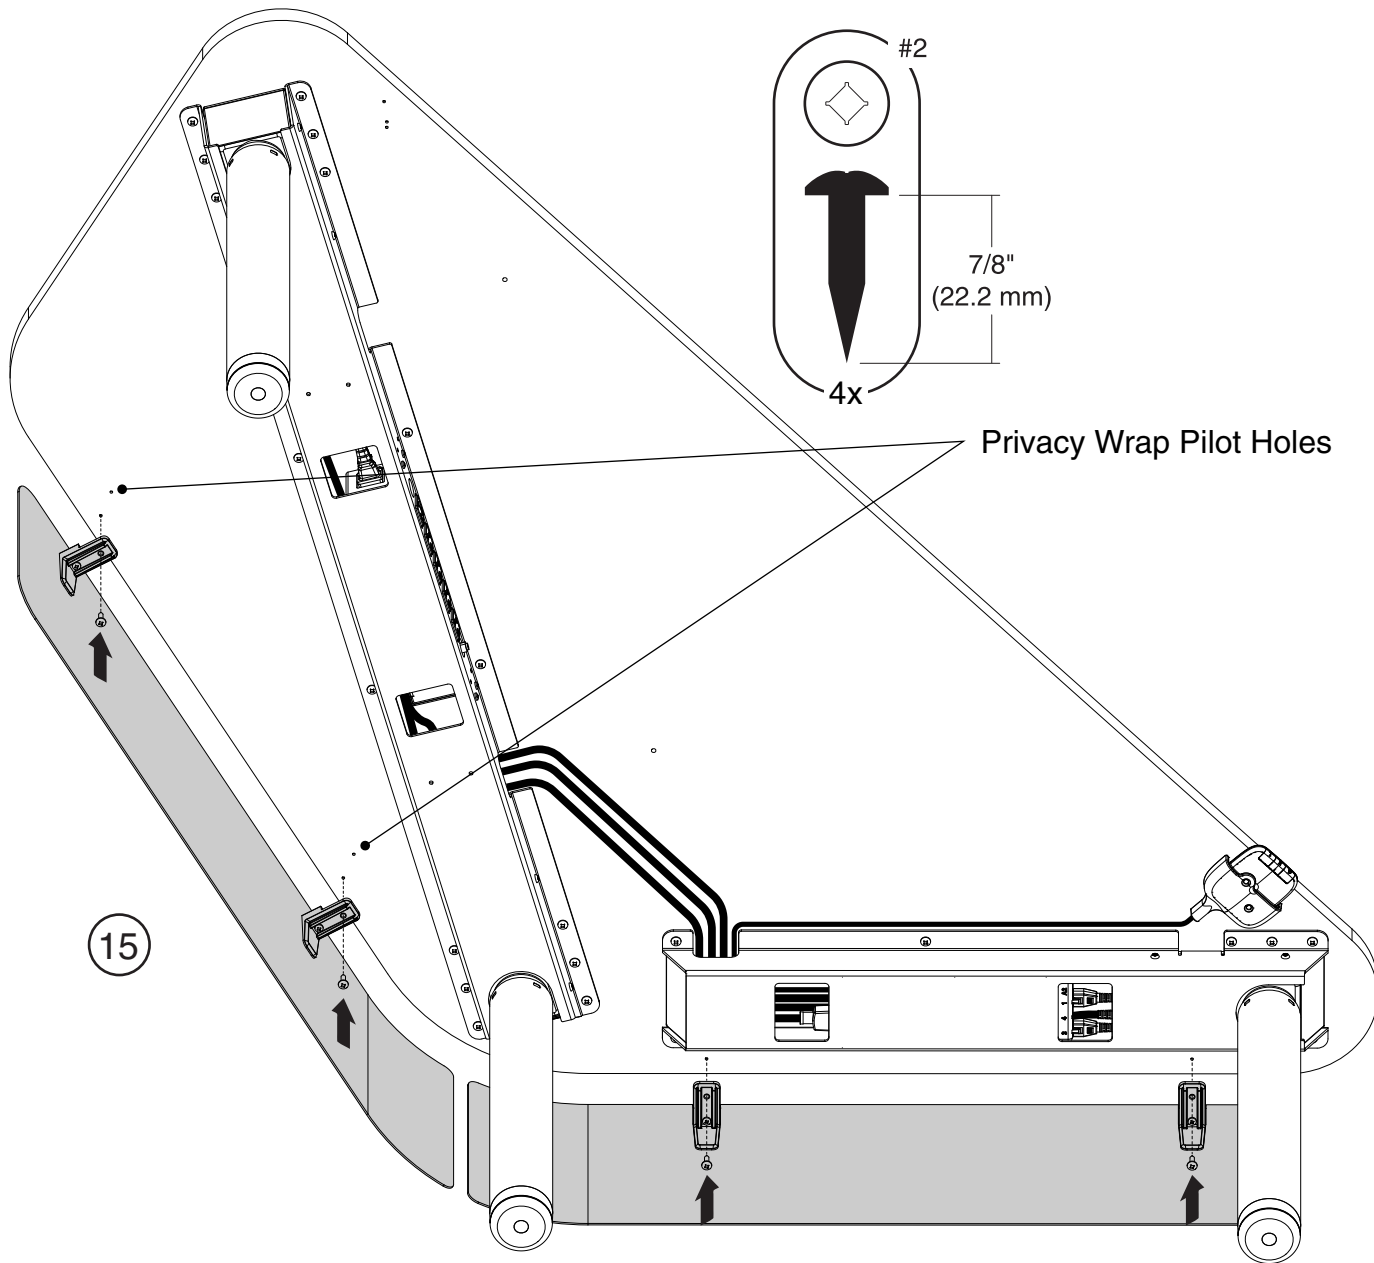

  Note: Reference the Privacy Wrap - Flex Personal Spaces assembly direction for Privacy Wrap installation on 120 Height-Adjustable Desks. Document Number 159636

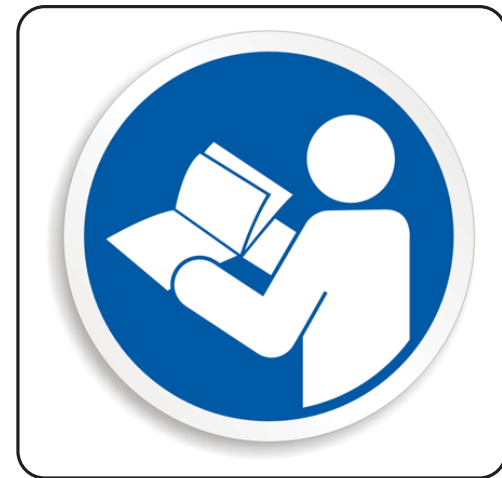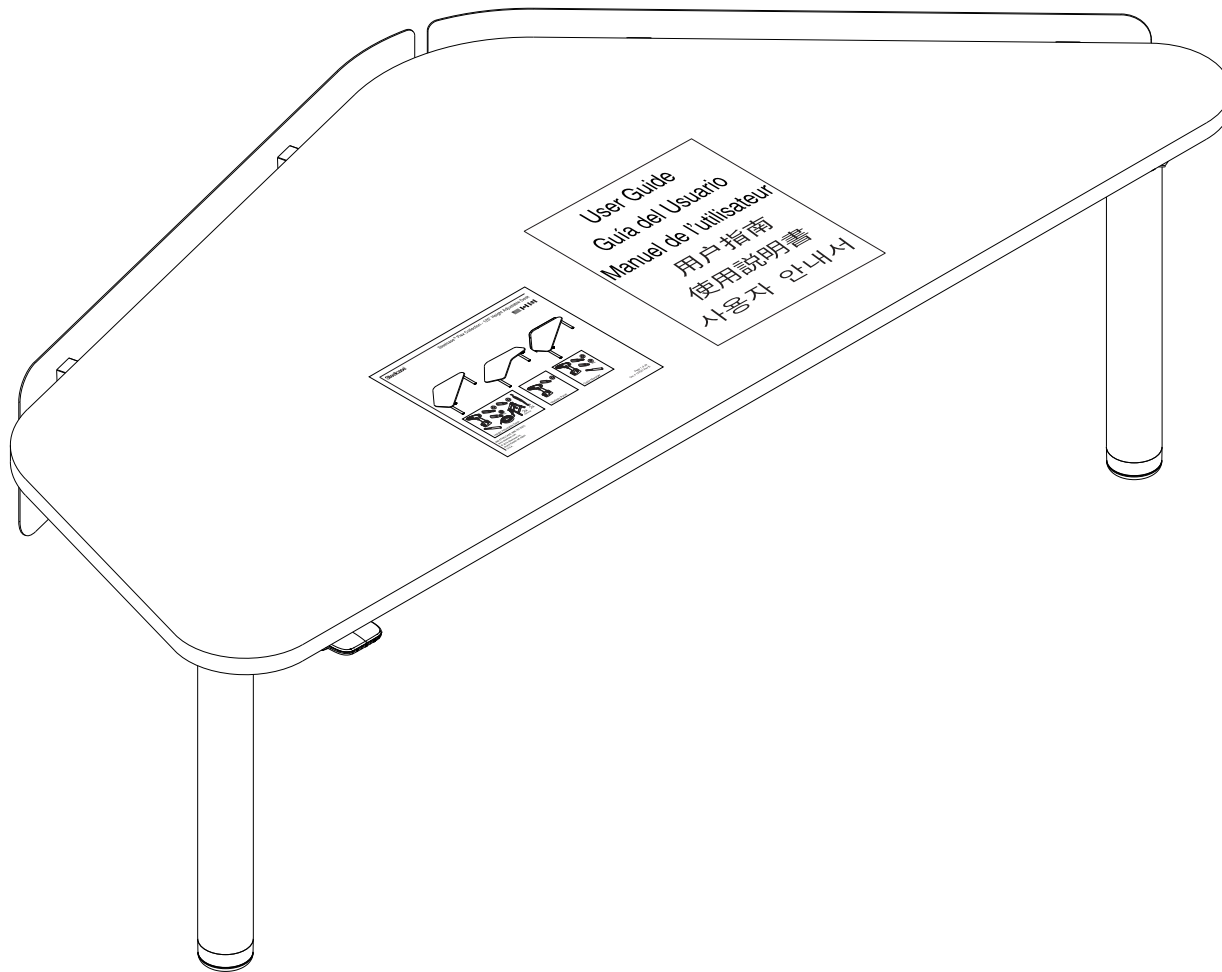

8

