


462 Leap® Task Chair Base Replacement

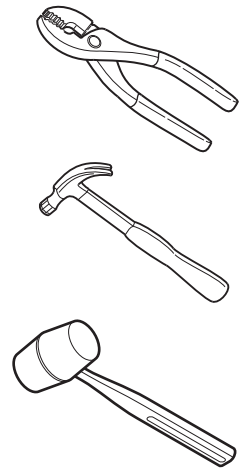

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you. (Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: www.steelcase.com

© 2005 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.
Printed in U.S.A.

1. Turn chair upside down or set on its side.

2. To remove the pneumatic cylinder from the base, hit the bottom of the pneumatic cylinder with a hammer while pulling on the base.

3. To remove casters, tap base with a rubber mallet while pulling on the caster.

4. If the caster pulls off without the stem, use pliers to pull on the stem while tapping the base with a mallet.

5. Use a mallet to install casters into the new base.

6. Attach new base assembly to cylinder, turn chair right side up and seat taper fit joints by sitting in the chair.

NOTE: DO NOT hit the inner cylinder rod with the hammer. Hit the outer rim of the cylinder.

