


# 462 Leap® Plus Chair Seat Replacement

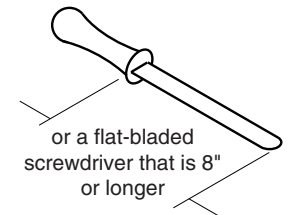

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you. (Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: [www.steelcase.com](http://www.steelcase.com)

© 2005 Steelcase Inc.  
Grand Rapids, MI 49501  
U.S.A.  
Printed in U.S.A.

1. Slide seat fully forward while holding the seat slide lever.
2. Locate the metal quick release tab located on the left hand side of the chair (as you sit in it) between the plates.
3. Lift the quick release tab while pulling the seat slide lever and sliding the seat forward.
4. Reassemble with new seat assembly.

