



If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: www.steelcase.com

© 2014 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.

1. Using a pencil and a tape measure, determine desired height for the coat hook locations.

2. Mark center line at a desired location from each side of the base unit.

3. Align the top of the coat hook with the horizontal pencil mark and center the coat hook with the vertical pencil mark. Mark holes with a pencil.

4. Remove coat hook and drill two (2) 3/32" diameter pilot holes per coat hook.

TIP: Wash off pencil marks at this point.

5. Attach the coat hooks to the base unit using two (2) screws provided per coat hook.

