

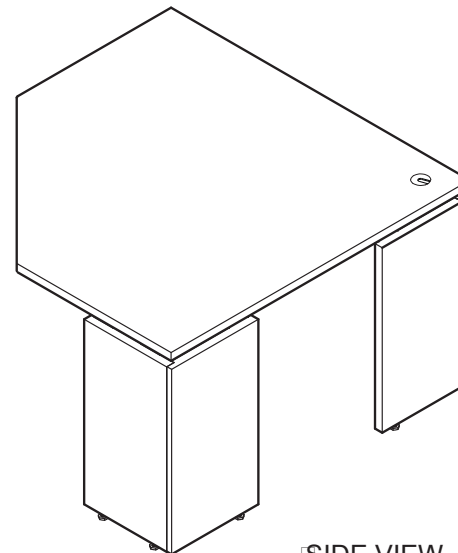


FRONT VIEW

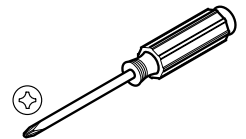

SIDE VIEW

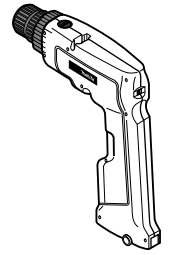

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at 888.STEELCASE (888.783.3522) for immediate action by people who want to help you. (Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: www.steelcase.com



© 2002 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.

NOTE: It is critical that all parts are identified and assembled in the proper orientation.

PARTS LIST

- A □ Worksurface
- B □ Support panel, front left only
- C □ Support panel, front left only
- D □ Support panel, rear and front right
- E □ Support panel, rear and front right
- F □ (18) Leg Brackets
- G □ (36) Screws

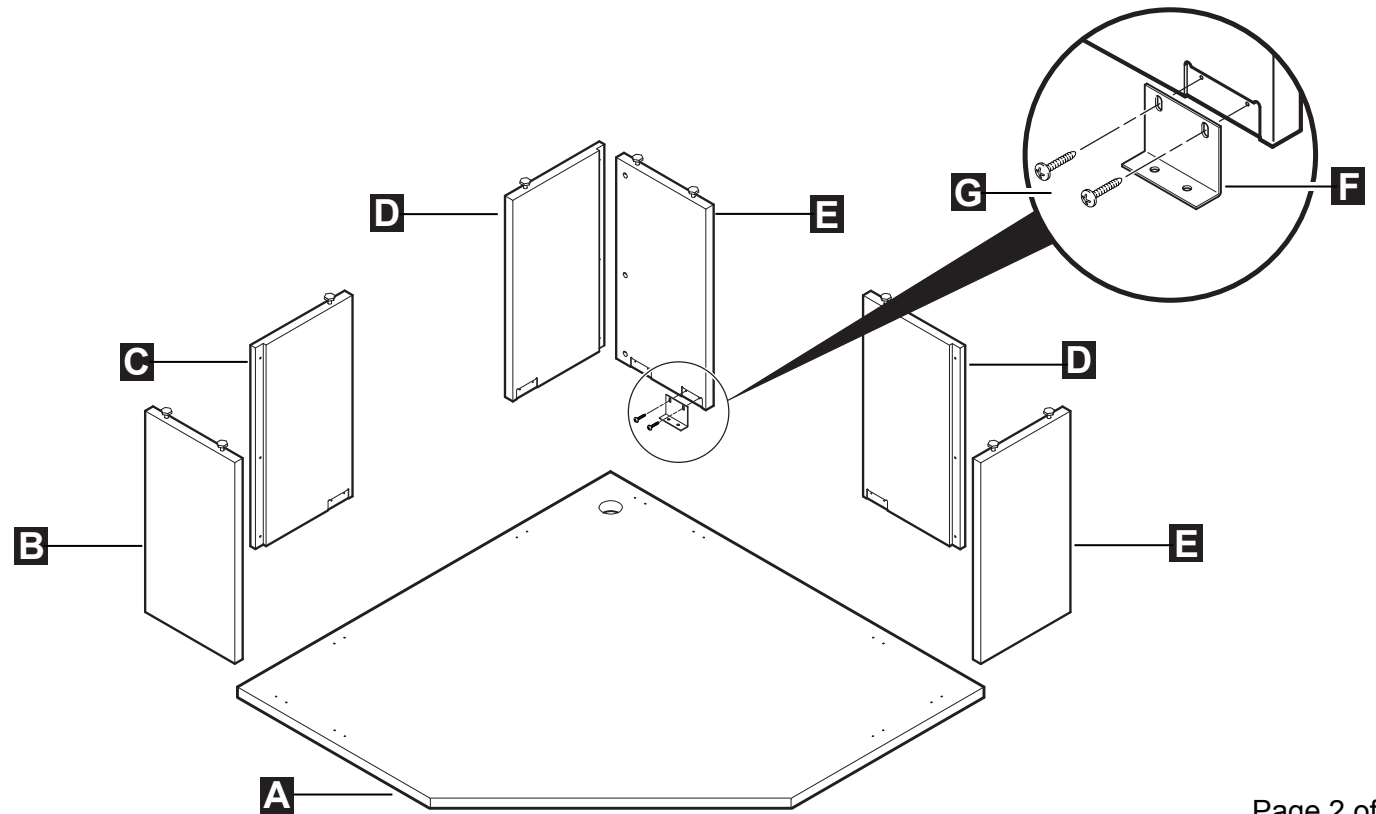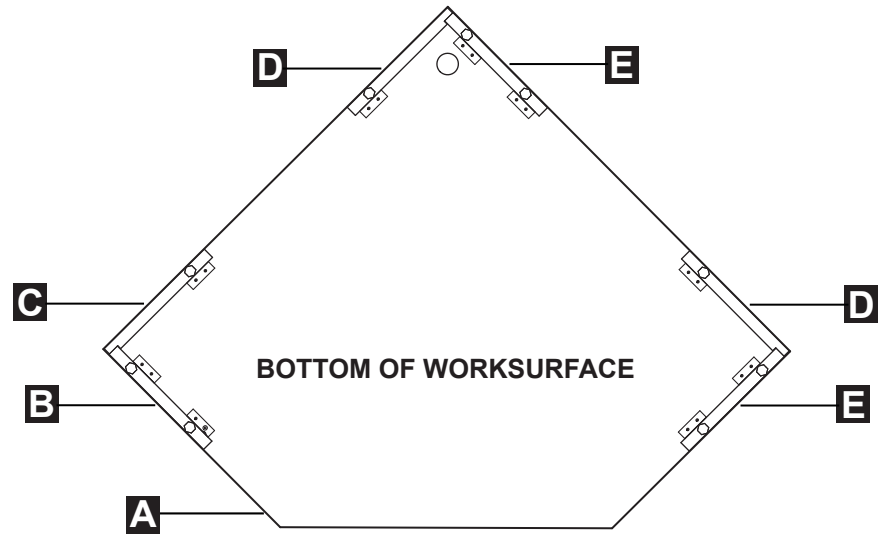


1. Locate brackets into routed recesses of support panels and secure as shown.

2. Assemble the (3) separate leg supports.

A. Install (3) steel dowels into holes in panel.


B. Insert (3) cam locks into openings in adjacent panel.

C. Position the panels together and secure with a half turn of cam lock.

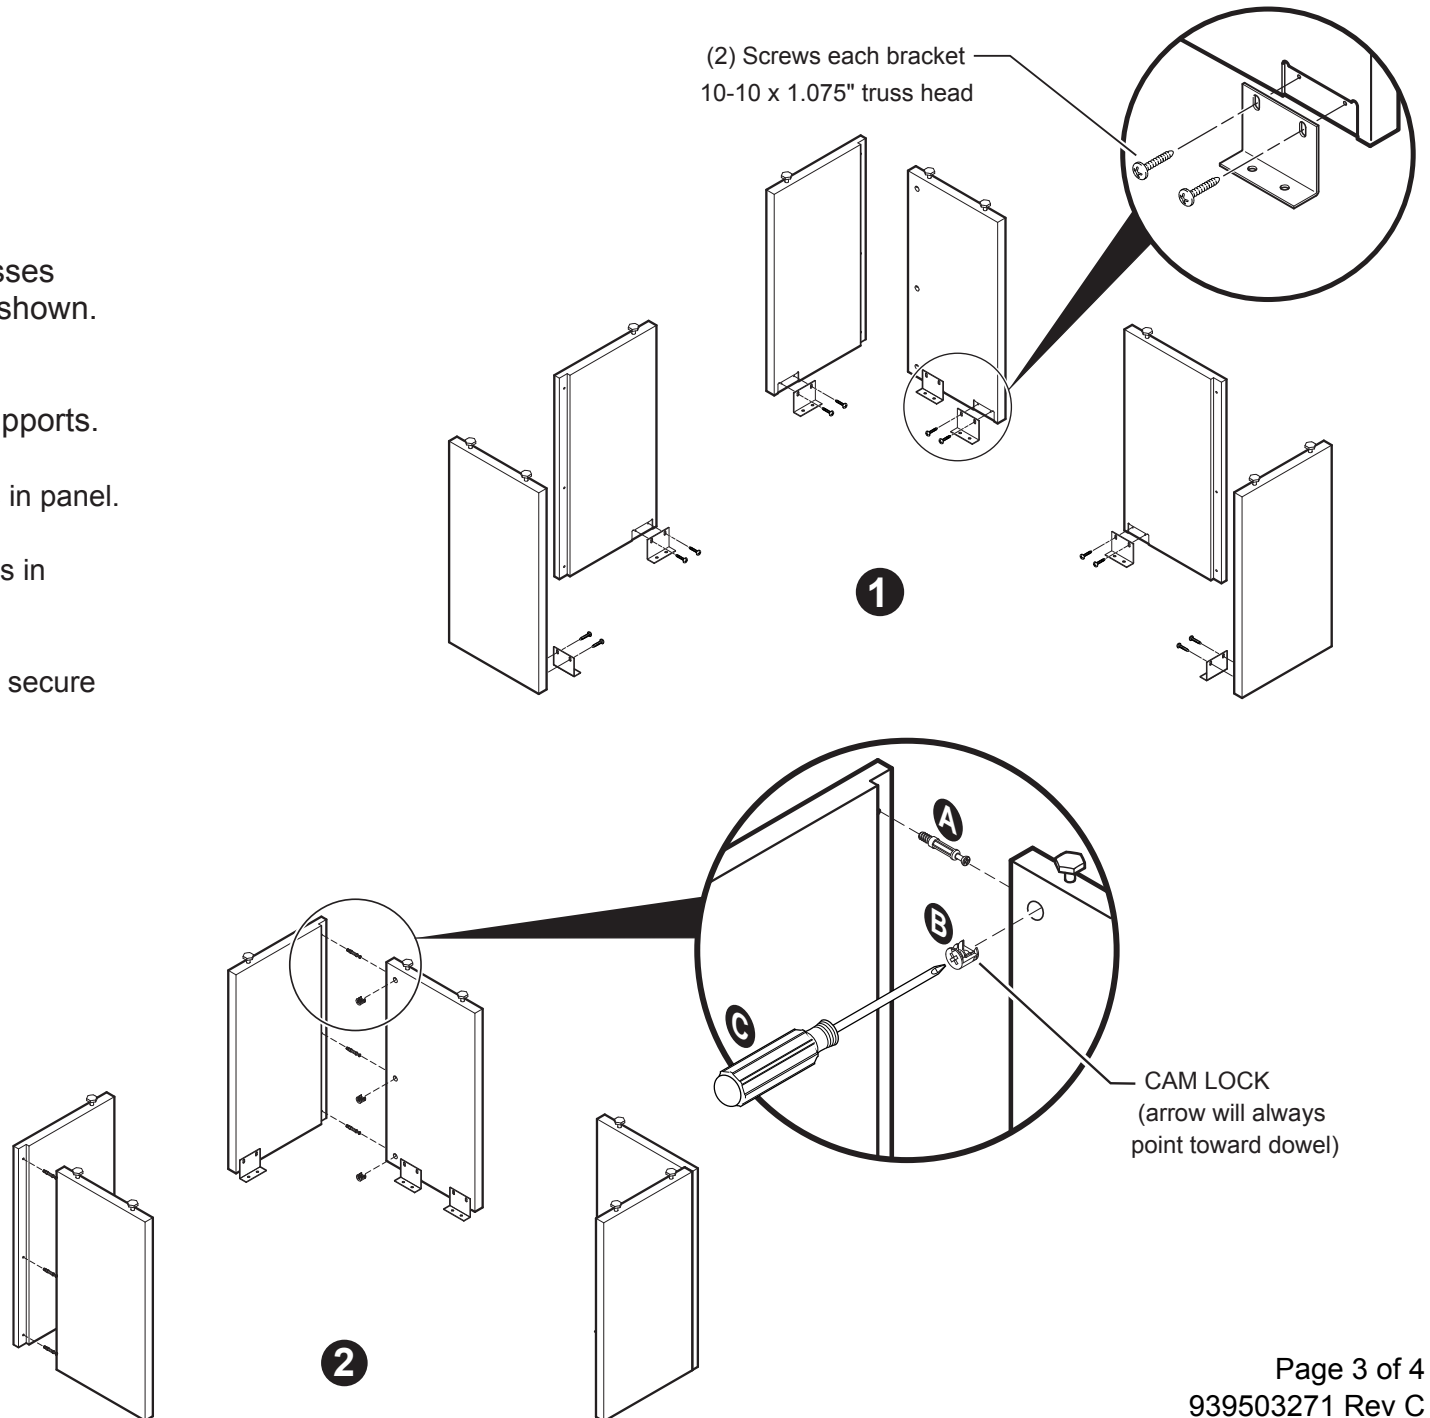

Steelcase

3. Carefully place worksurface onto carpet or other soft material.
4. Position assembled support panels with predrilled holes in top and install as shown.
5. (Two persons) carefully turn unit over and put into place.

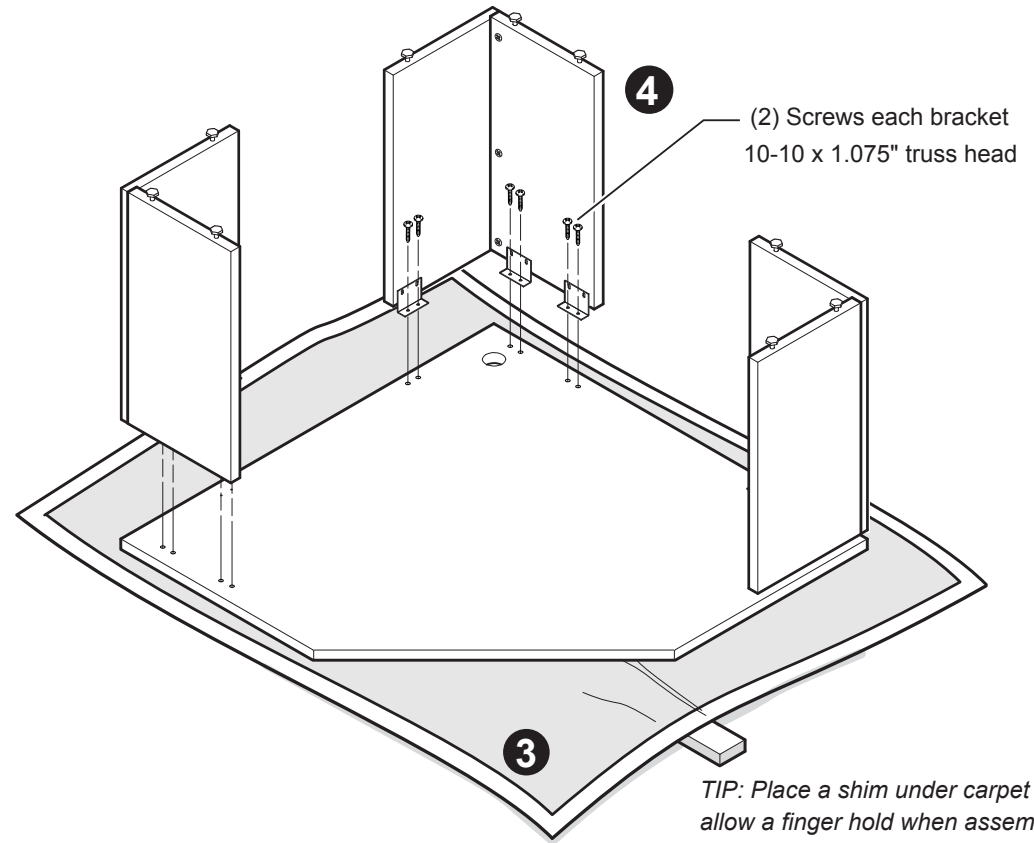

TIP: Place a shim under carpet to allow a finger hold when assembled unit is ready to upright.

