



 **T-10**

If you have a problem, question, or request, call  
your local dealer, or Steelcase Line 1 at  
**888.STEELCASE** (888.783.3522)  
for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico,  
and the U.S. Virgin Islands, call: 1.616.247.2500)

Or visit our website: [www.steelcase.com](http://www.steelcase.com)

© 2017 Steelcase Inc.  
Grand Rapids, MI 49501  
U.S.A.

Printed in U.S.A.

## Arm Cap Replacement

**NOTE:** Flip chair onto back before starting.

**1.** For arm cap replacement, remove screw under the arm cap (1a), then pull the arm cap backward using downward pressure until it releases from the arm (1b). Reverse this process to install.

**2.** Position cap on lower arm cap with downward pressure on cap (in line with four snap features) and slide forward until it stops.

**3.** Reinstall screw and look at edge for proper fit. Repeat on opposite side.

