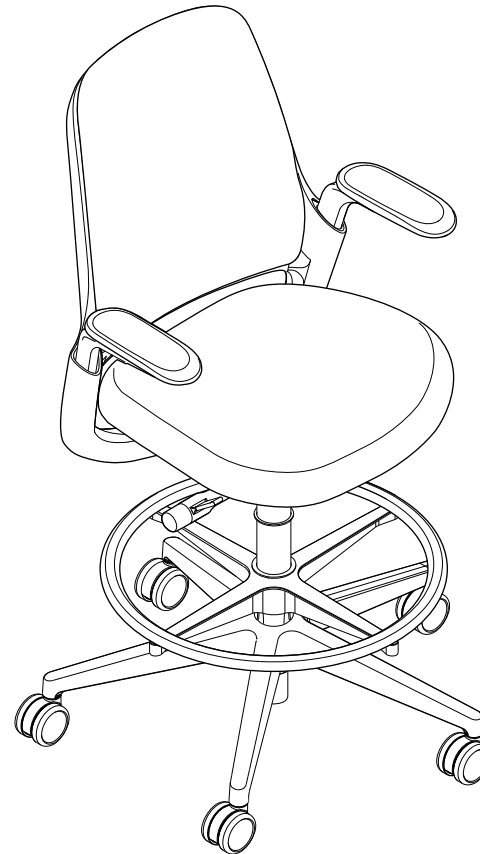
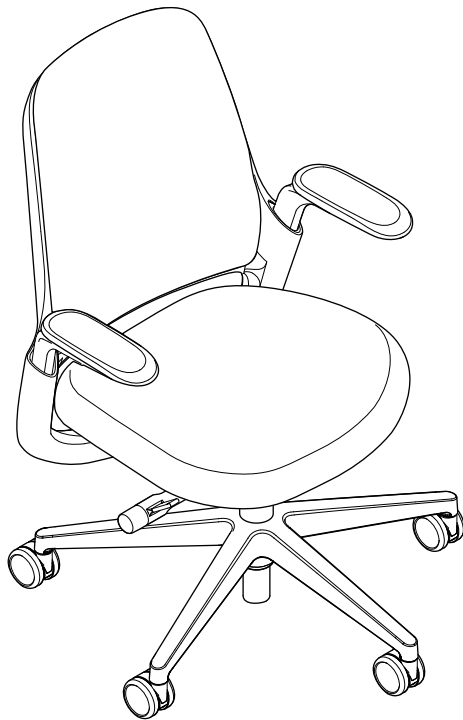


 **T-15**

If you have a problem, question, or request, call
your local dealer, or Steelcase Line 1 at
888.STEELCASE (888.783.3522)
for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico,
and the U.S. Virgin Islands, call: 1.616.247.2500)

Or visit our website: www.steelcase.com

© 2017 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.

Replacing Lumbar Assembly

1. Remove two (2) bottom screw (1a), and pull out bottom edge of Flexor assembly (1b). The lumbar support may fall out during this action.

2. Push the lumbar handles forward to remove lumbar support.

3. To reassemble, push lumbar support back into the sliding channel.

4. Check to assure logo is facing toward back of chair and upright.

5. Remove Flexor assembly for easier access. Fixed lumbar support comes with a locking plastic part, in which case, place lumbar support in the sliding channel.

Then pick the fixed lumbar position and insert the locking plastic part into the channel over the lumbar sliders.

6. Replace Flexor assembly and make sure the black plastic strip is hooked onto the flexor rib (6a) and two (2) bottom screws while holding the flexor tight to the frame (6b).

NOTE: Do not over tighten or strip.

