


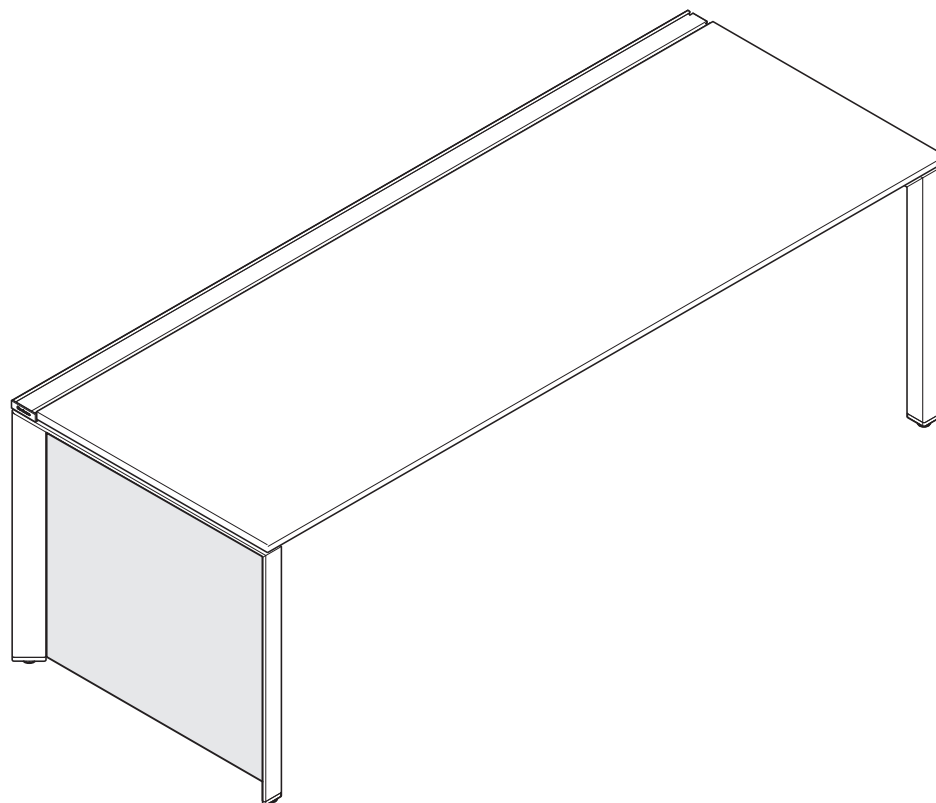

If you have a problem, question, or request, call
your local dealer, or Steelcase Line 1 at
888.STEELCASE (888.783.3522)
for immediate action by people who want to help you.




(Outside the U.S.A., Canada, Mexico, Puerto Rico,
and the U.S. Virgin Islands, call: 1.616.247.2500)
Or visit our website: www.steelcase.com

© 2010 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.







5/32" Dia.

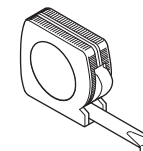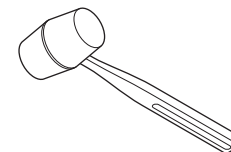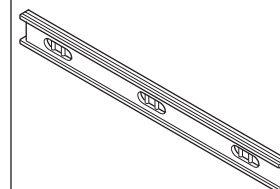

1. Drill out indent on leg to .156 (5/32") diameter.
NOTE: Post Leg shown, Loop Leg assembly is the same.

2. a) Attach (4) brackets to Infill Panel as shown.
 b) **DO NOT** fully tighten screws.

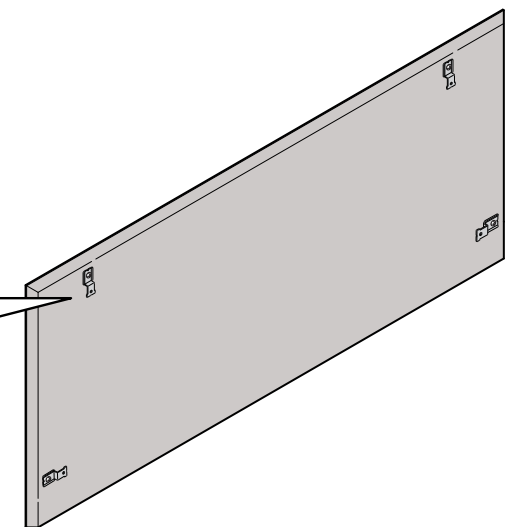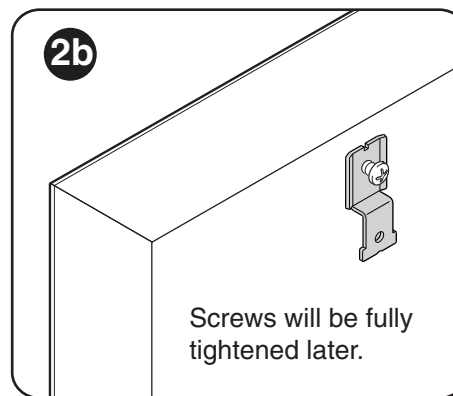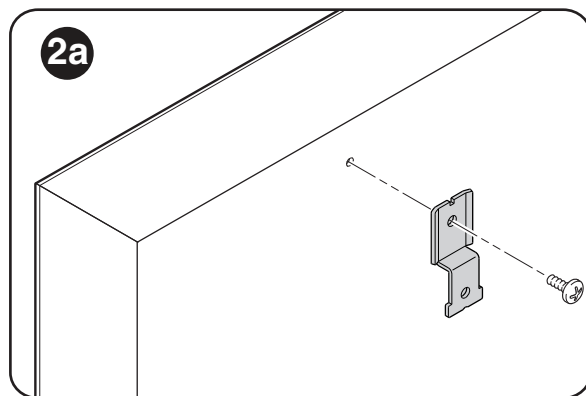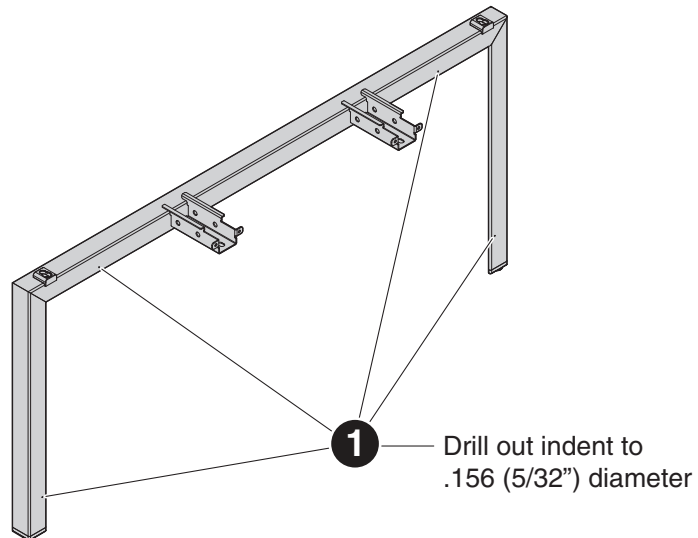

3. Position infill under desk and onto leg.

4. Rotate mounting brackets onto leg, align with holes and install screws.

5. Install top screws first, then the screws in the sides. **Fully tighten all screws.**

NOTE: With Loop Leg Infills, ignore the upper vertical hole on the leg.

6. Snap on plastic covers.

