



U.S.A./CANADA


EN Instructions for use

ES Instrucciones de uso


FR Notice d'emploi

aria twin 60-40


1

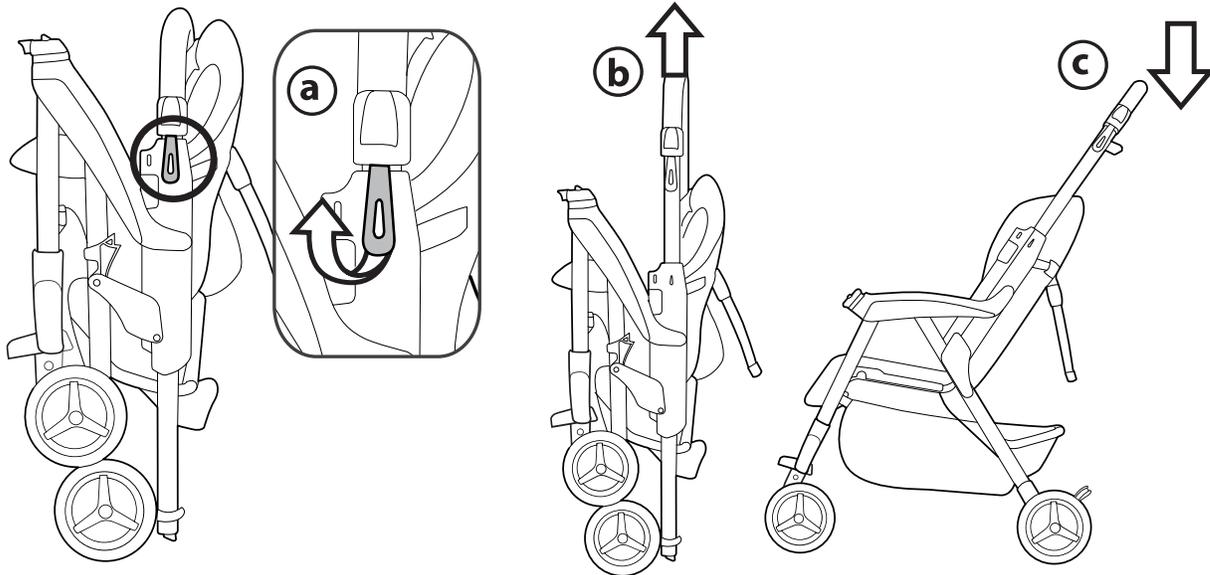


2

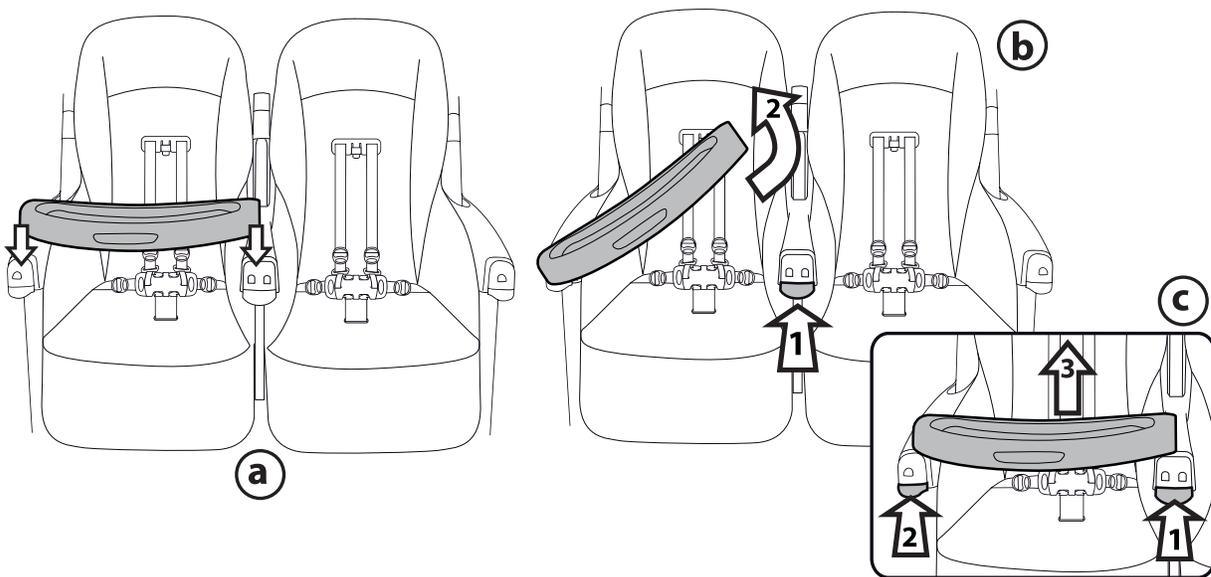


3

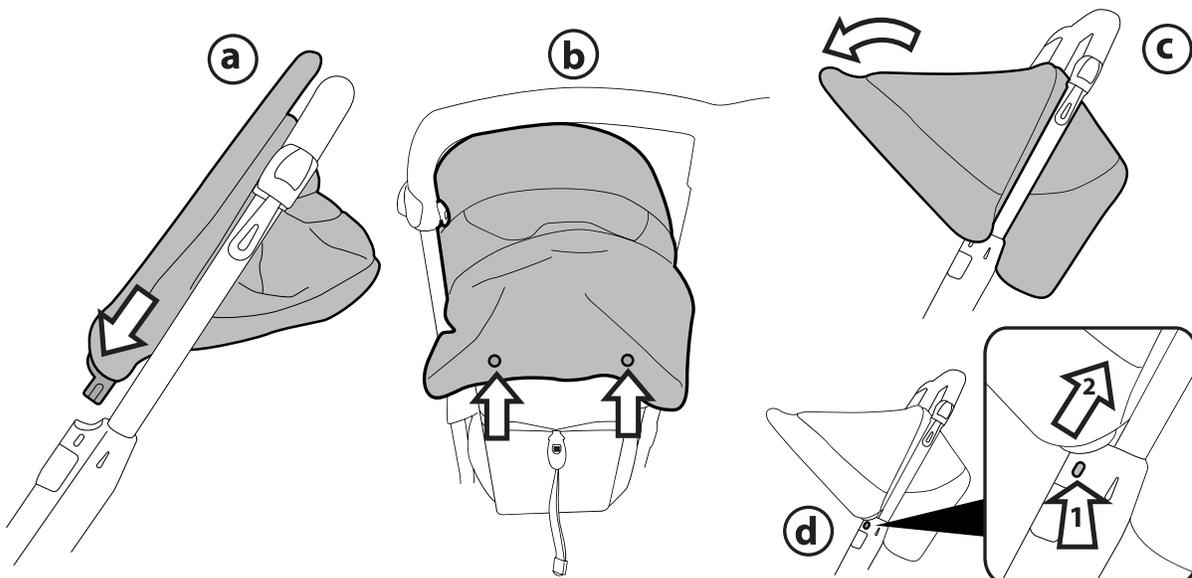


4

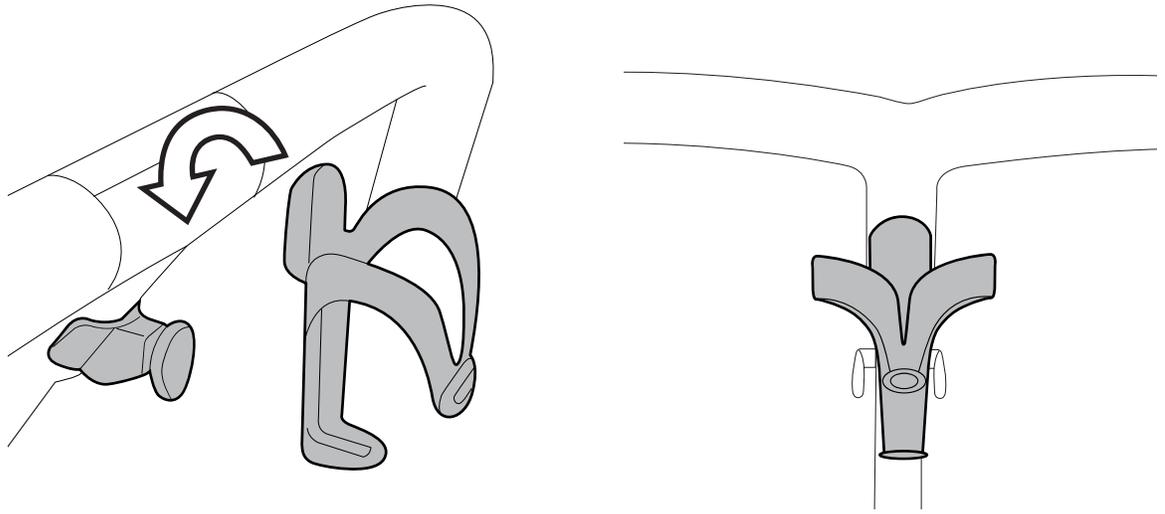


5

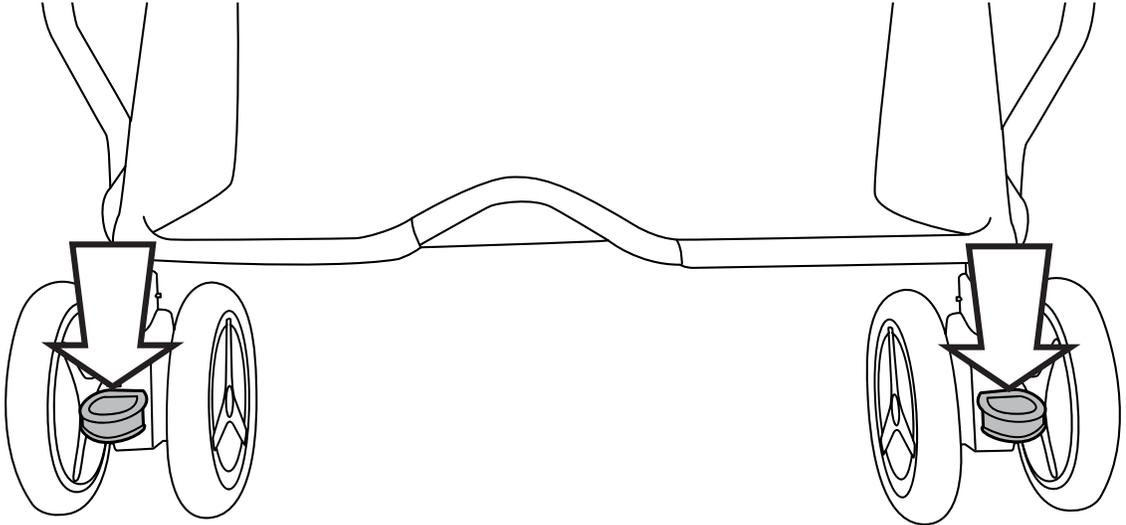


6

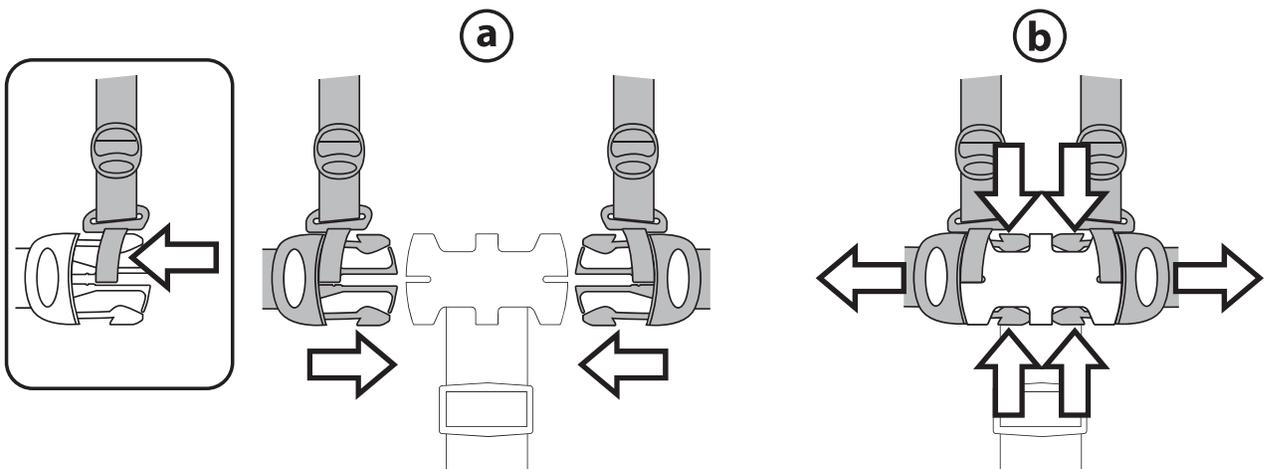


7

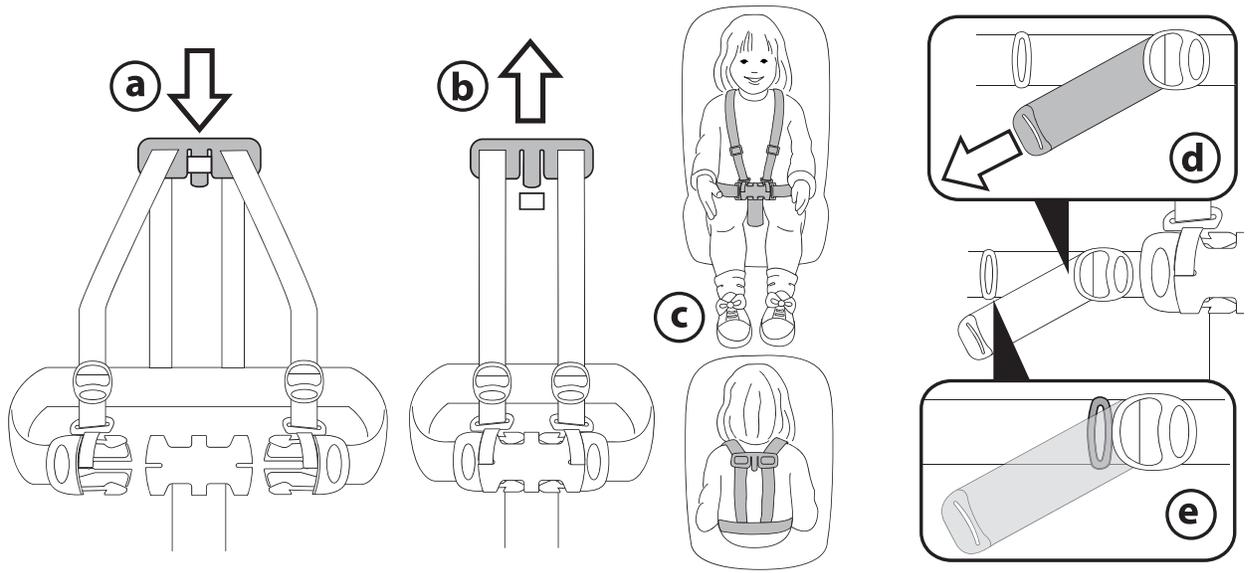



8

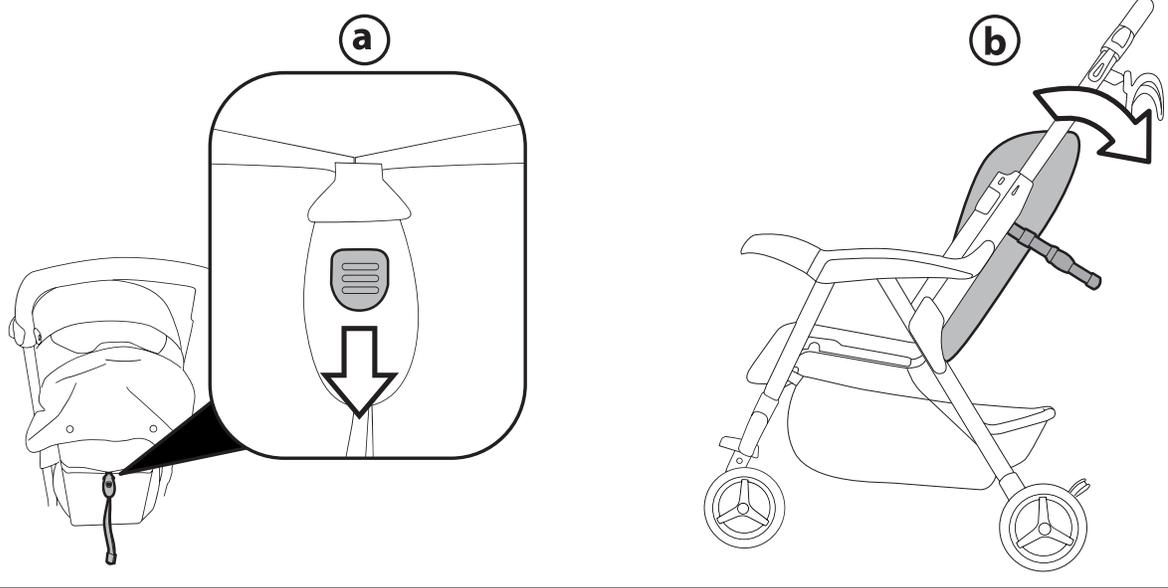



9

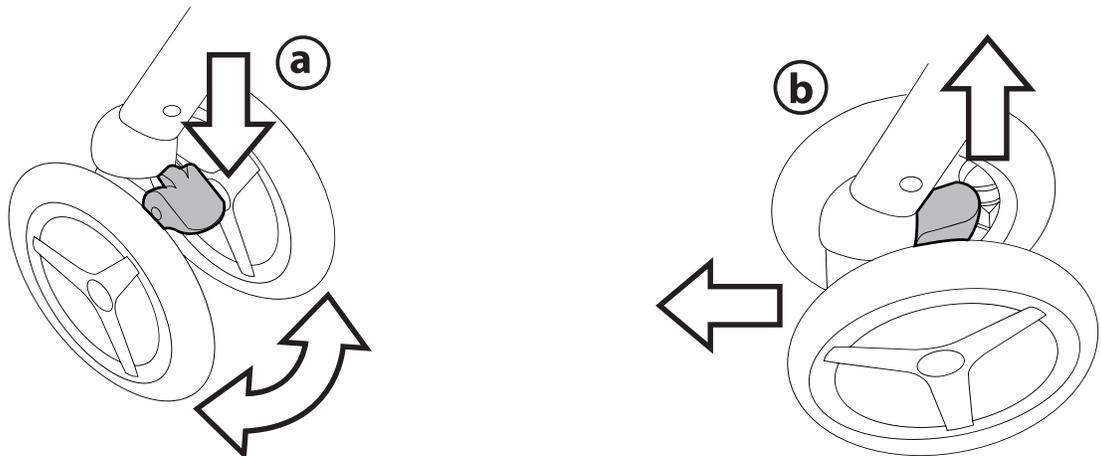



10

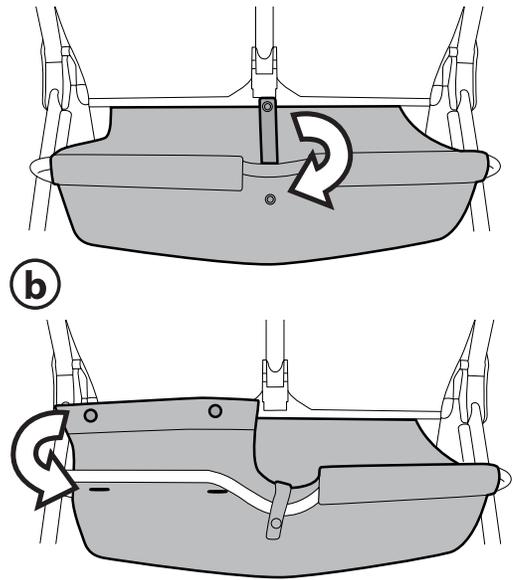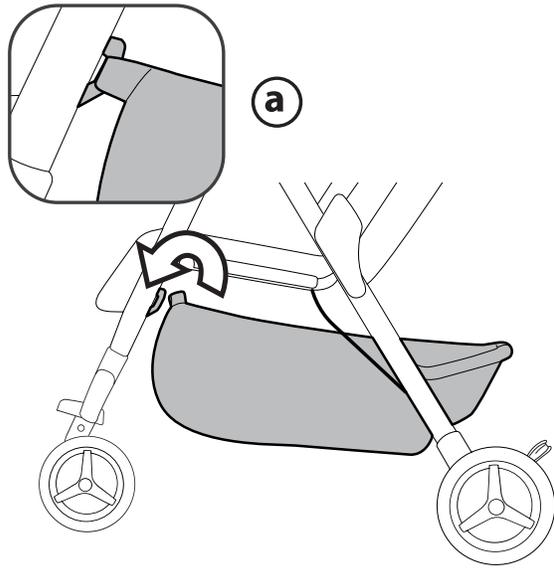


11

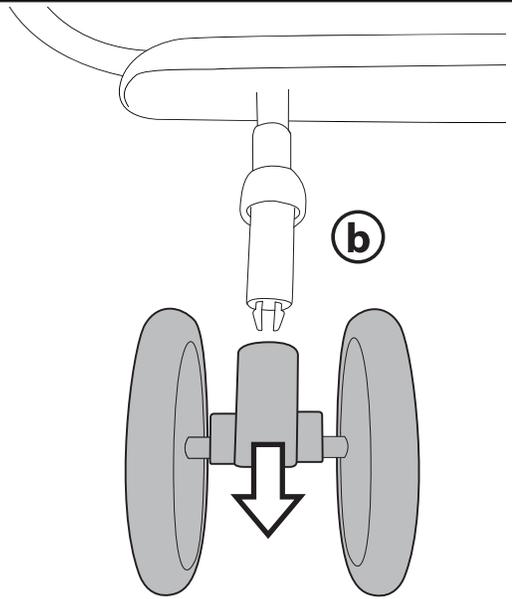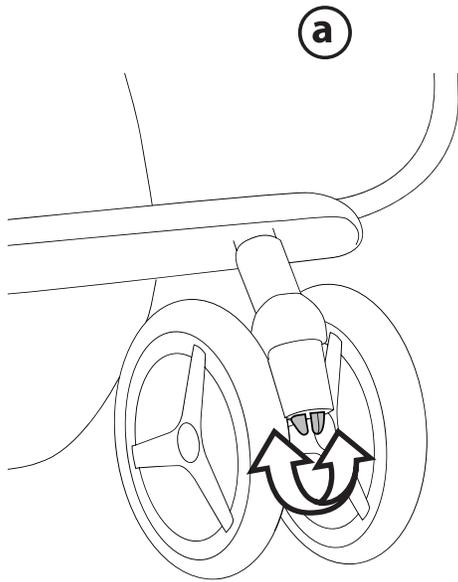


12

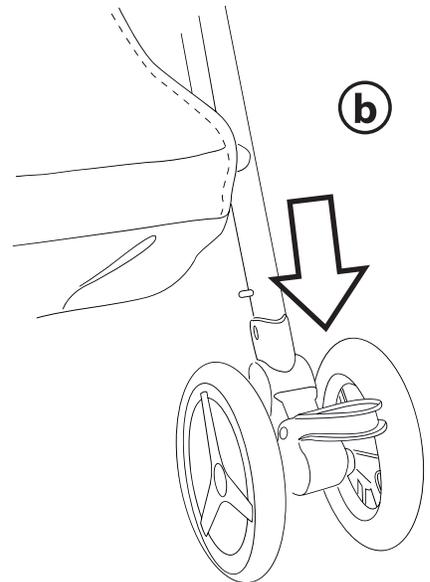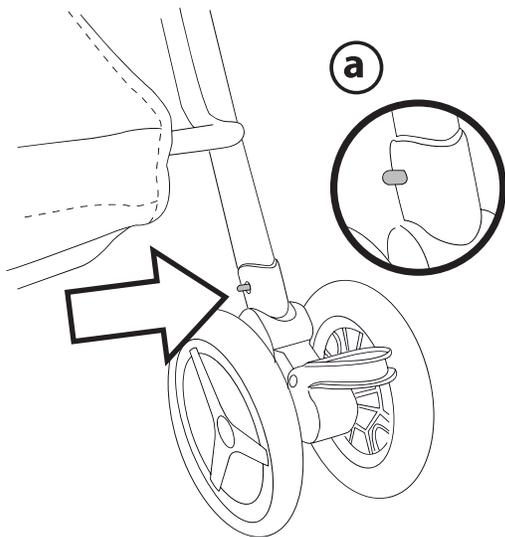


13

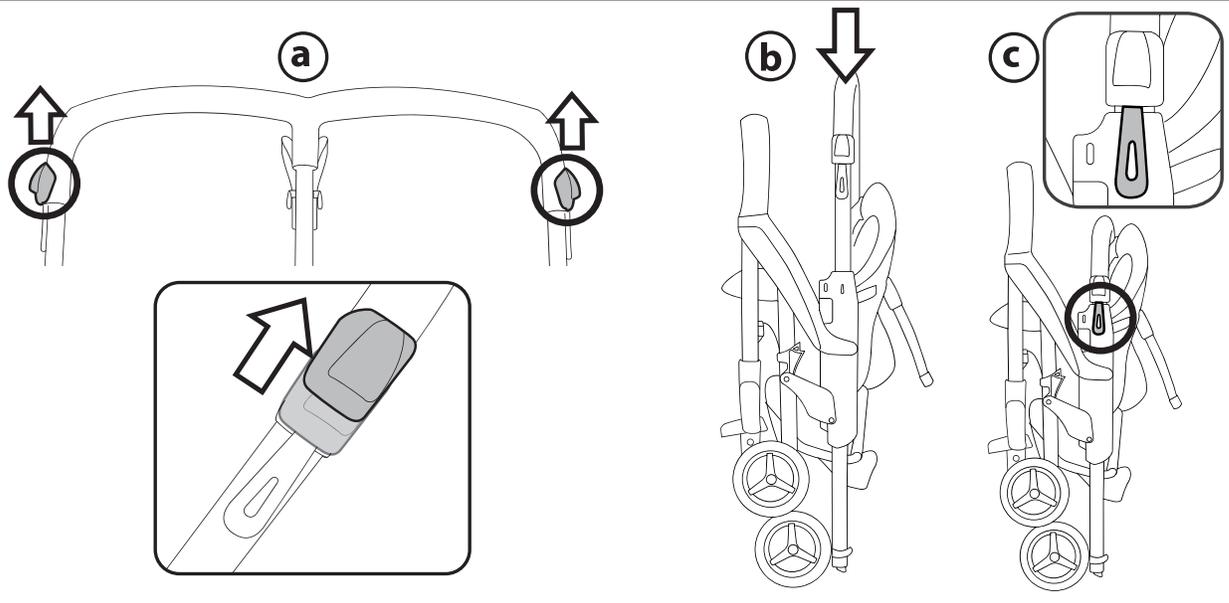


14

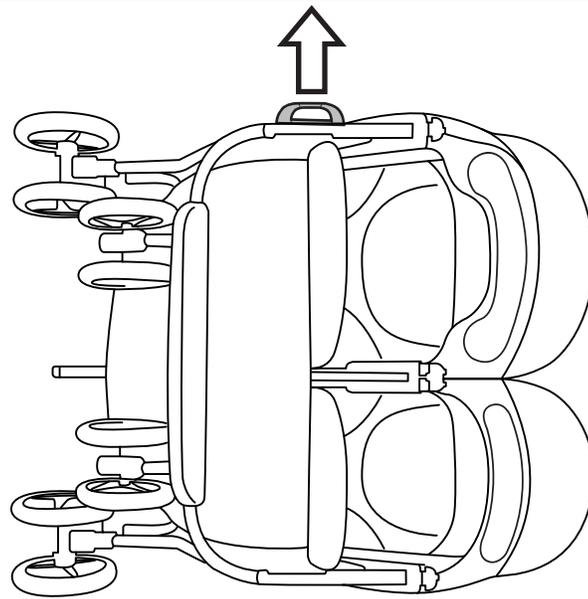


15

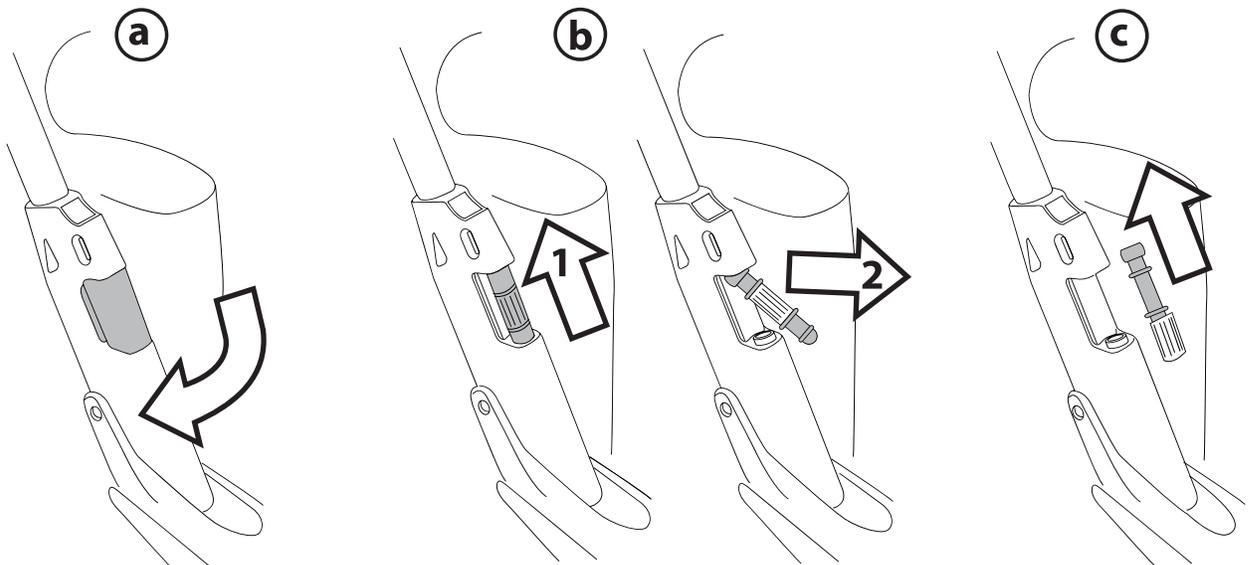


16

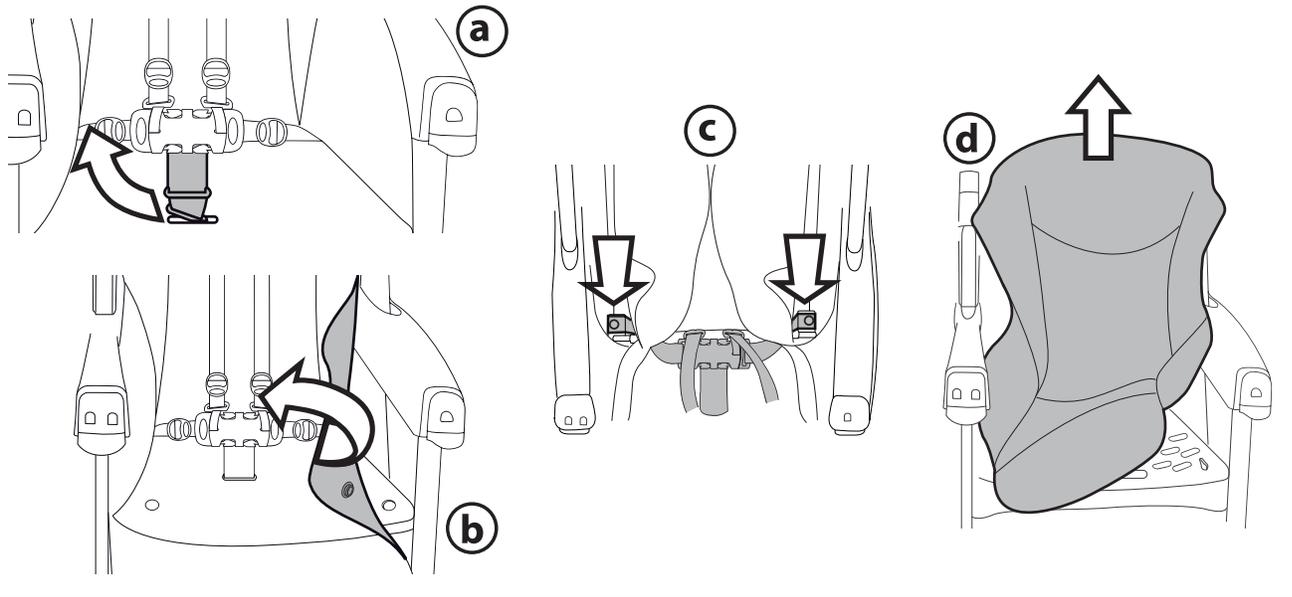


17

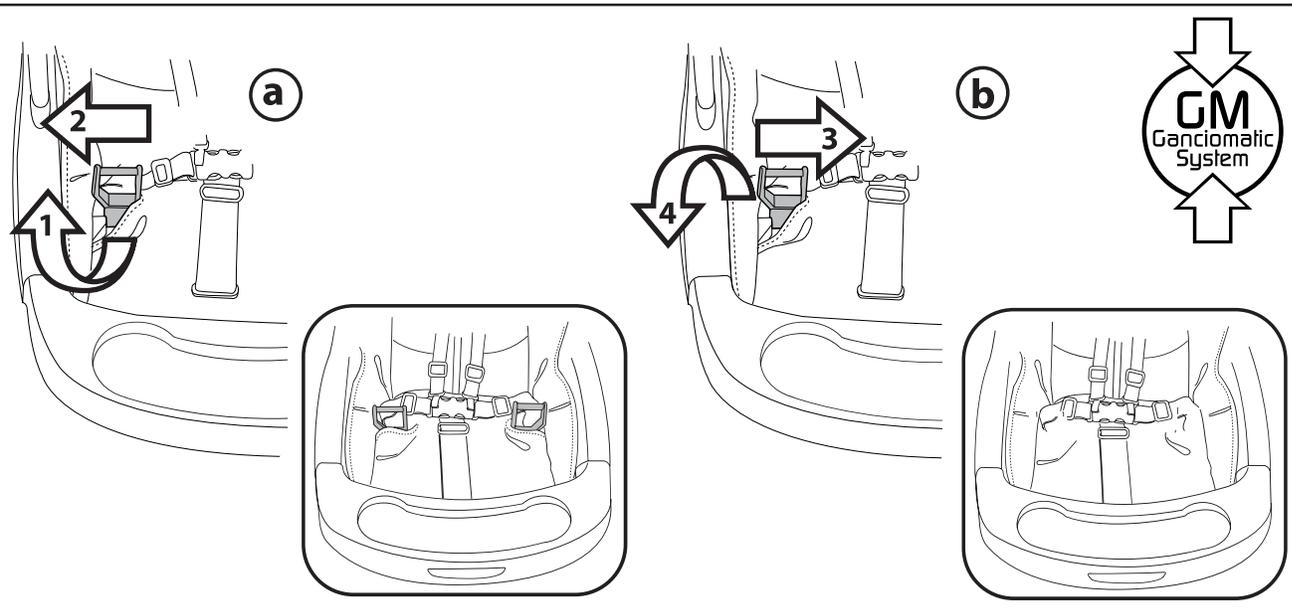


18

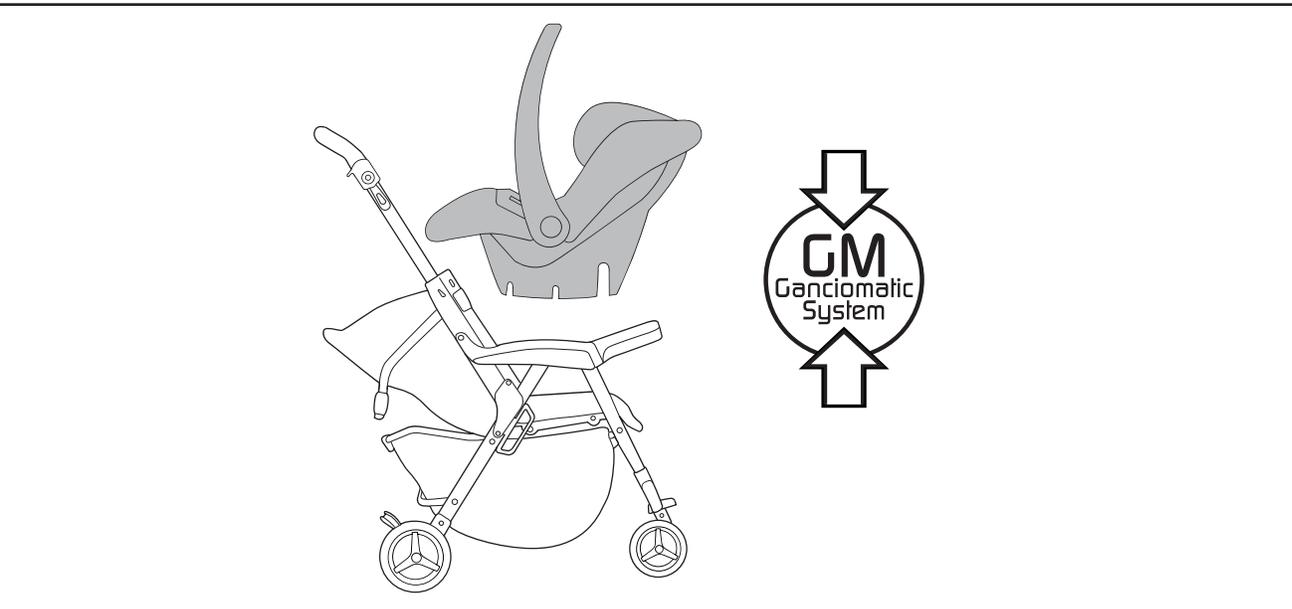


19

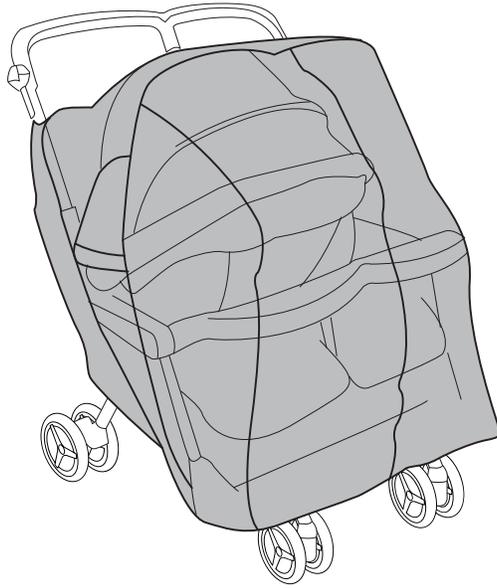


20

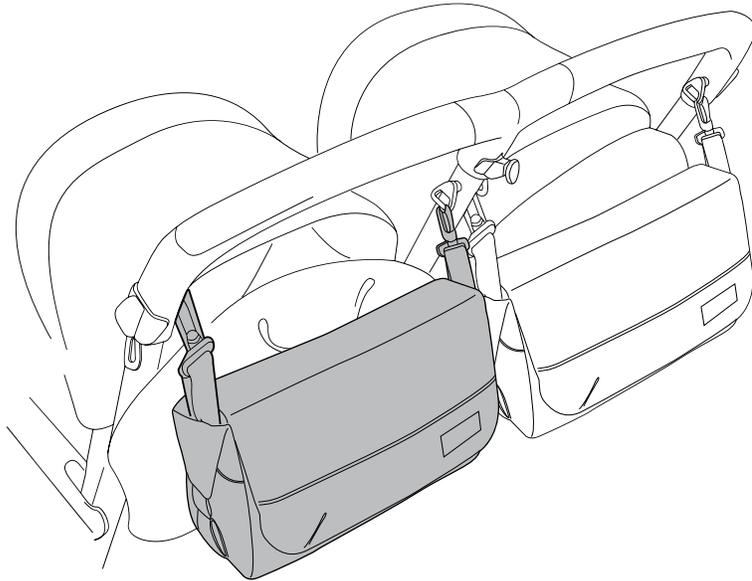

21

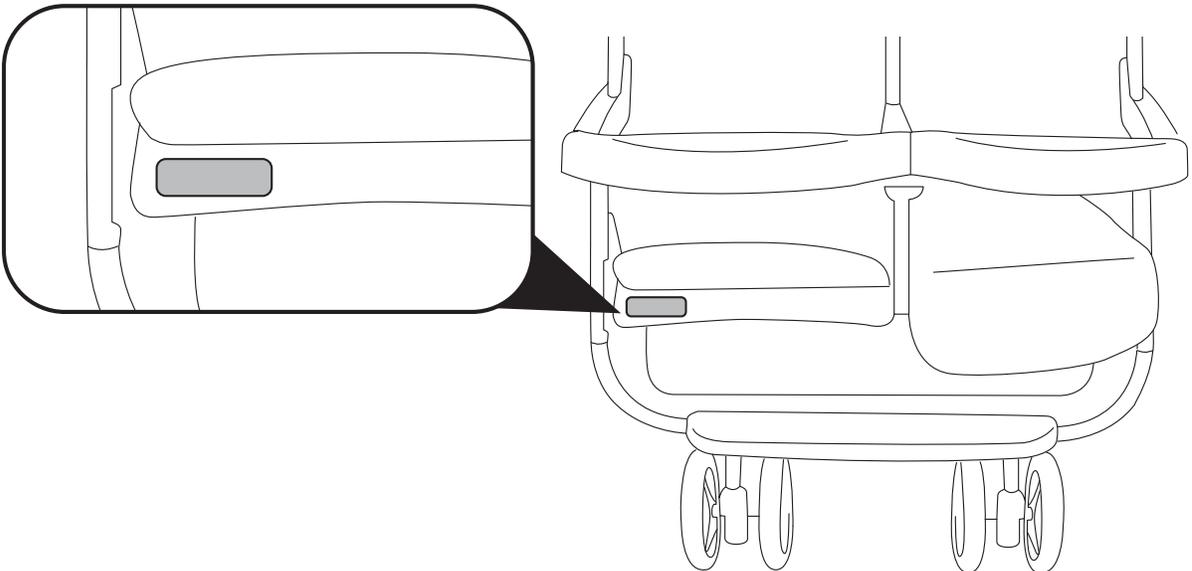

Aria Twin 60-40

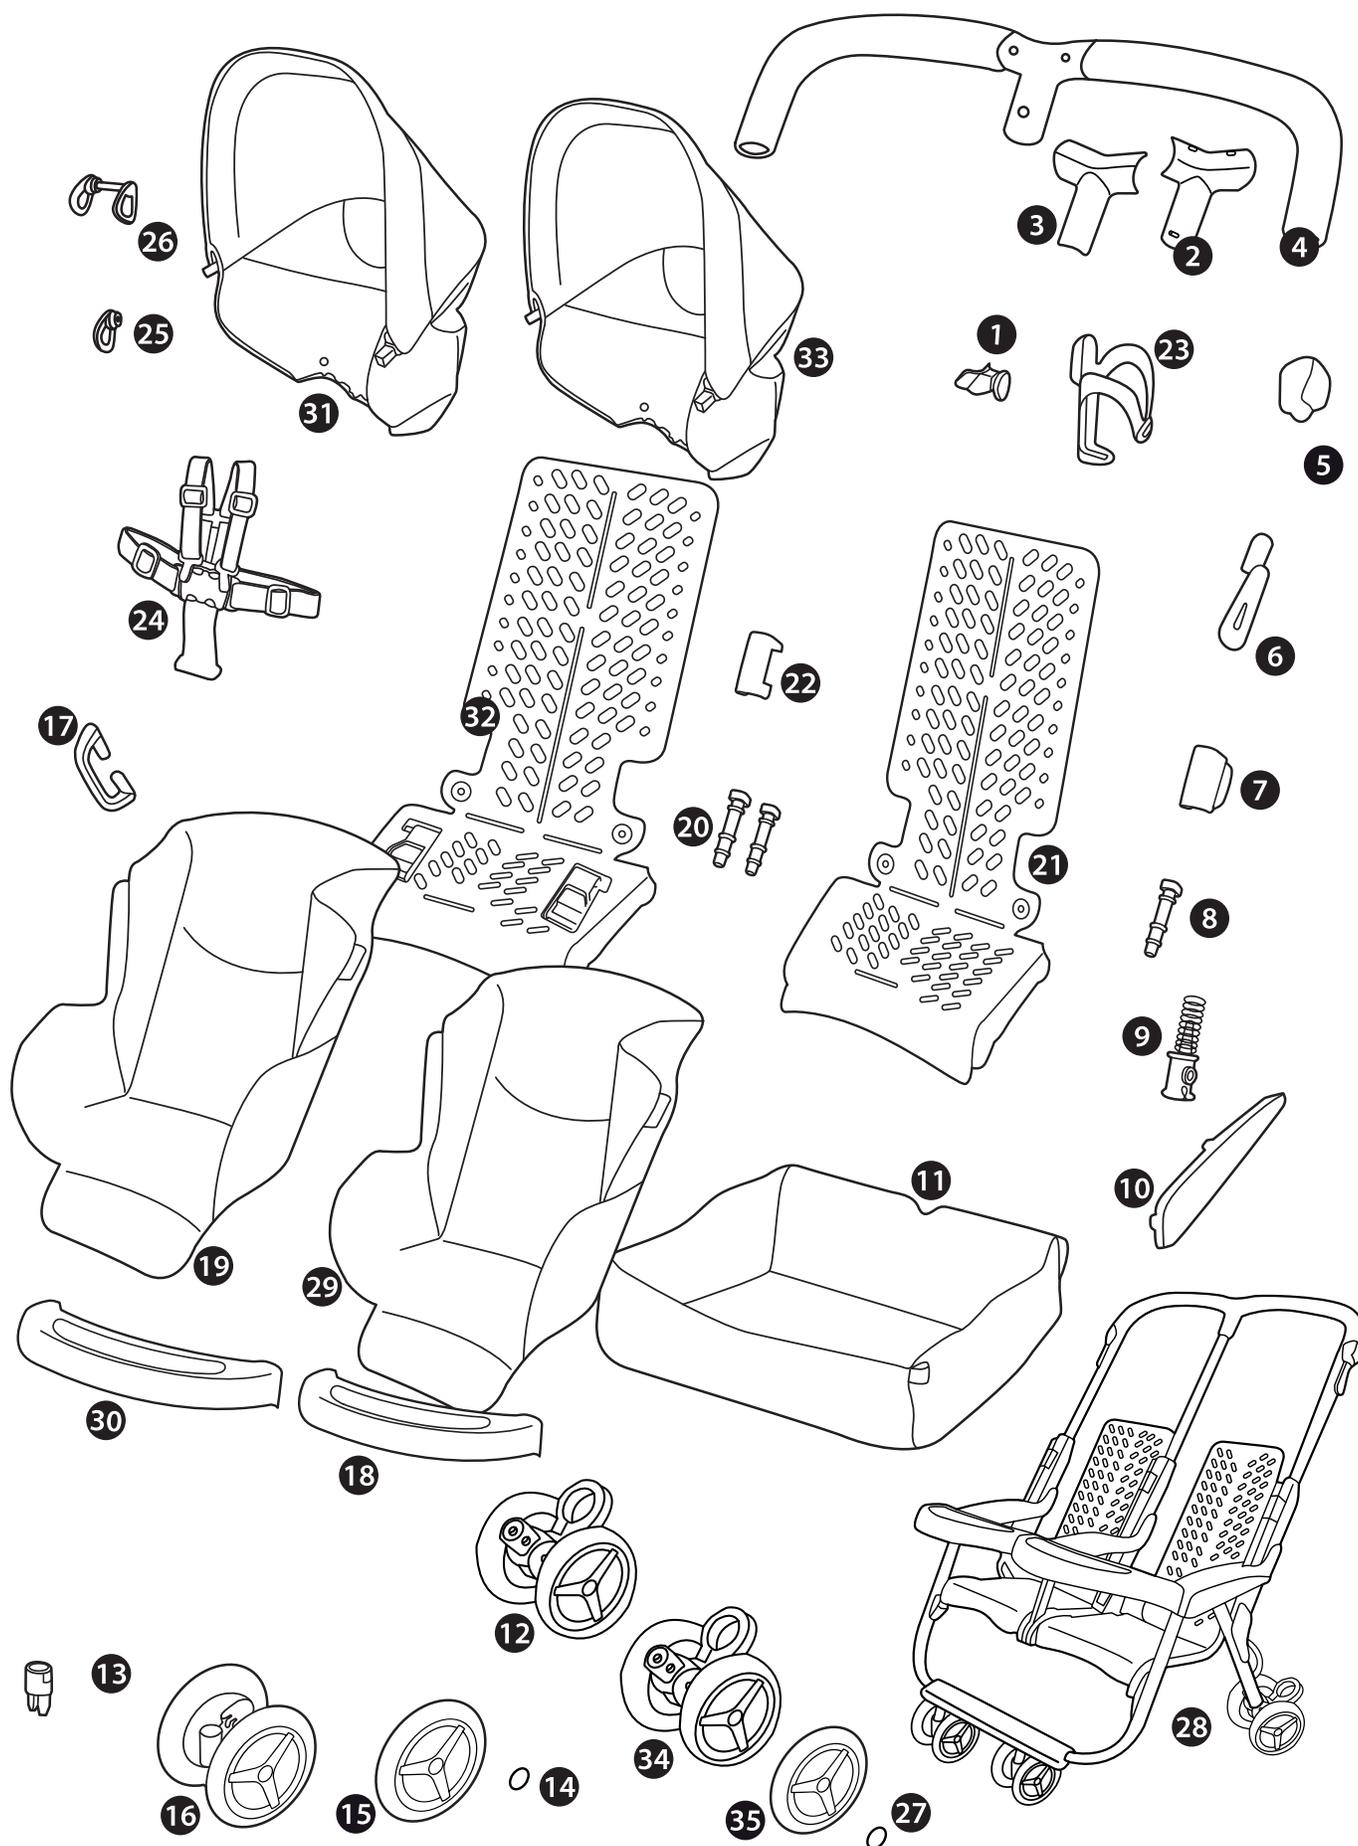

Aria Twin 60-40

1	SPST6443N	18	SAPI6187SNPEG
2	SPST5239JN	19	BSAA60•
3	SPST5239KN	20	SAPI5631GL
4	ARPI0439N	21	SPST5225XN
5	SPST5119GRS	22	SPST5632GR
6	SPST5120N	23	SAPI6430NGR
7	SPST5474DGR	24	MUCI5P14NERO
7	SPST5474SGR	25	SPST5149N
8	SPST5475GL	26	ASPI0039N
9	ASPI0028	27	SPST6692SN
10	SPST5115DGRNS	28	ITART6NANL65
10	SPST5115SGRNS	29	BSAA40•
11	ERSHAD00--NY01RE53	30	SAPI6187DNPEG
12	SAPI6692DNGR	31	BCAA60•
13	SPST5096GL	32	ARPI0537NGR
14	SPST6681N	33	BSAA40•
15	SAPI6682GRN	34	SAPI6692SNGR
16	SAPI6681NGR	35	SAPI6691GRN
17	SPST5198N		

- EN _ Spare parts available in different colours to be specified when ordering.
ES _ Repuestos disponibles en otros colores que se especificarán en el pedido.
FR _ Pièces de rechange disponibles en plusieurs couleurs à spécifier dans la demande.

EN_English

Thank you for choosing a Peg-Pérego product.

WARNING

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY AND KEEP THEM FOR FUTURE REFERENCE. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD PUT THE CHILD'S SAFETY AT RISK.

THIS PRODUCT IS DESIGNED FOR CHILDREN WHOSE MAXIMUM WEIGHT IS 45 POUNDS (20 KG) AND WHOSE MAXIMUM HEIGHT IS 43 INCHES (110 CM). THIS SHOPPER BASKET IS DESIGNED TO CARRY A MAXIMUM WEIGHT OF 11 POUNDS (5 KG). ANY CUPHOLDER EVENTUALLY PROVIDED WITH THIS UNIT IS DESIGNED TO CARRY A MAXIMUM WEIGHT SPECIFIED ON THE CUPHOLDER ITSELF. ANY POACH OR POCKET PROVIDED WITH THIS UNIT IS DESIGNED TO CARRY A MAXIMUM WEIGHT OF 0.44 POUNDS (0.2 KG).

FAILURE TO FOLLOW MANUFACTURER'S SPECIFICATIONS OR USE OF ACCESSORIES OTHER THAN THOSE APPROVED BY THE MANUFACTURER MAY CAUSE THE UNIT TO BECOME UNSTABLE.

AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE COMPLETE 5 POINT SEAT BELT. NEVER LEAVE YOUR CHILD UNATTENDED.

ALWAYS USE ALL THE BRAKES WHENEVER PARKED.

TO AVOID SERIOUS INJURY, WHEN MAKING ADJUSTMENTS ENSURE THE CHILD'S BODY IS CLEAR OF ALL MOVING PARTS.

ALL OPERATING AND ASSEMBLY PROCEDURES SHOULD BE PERFORMED BY AN ADULT.

DO NOT LIFT THE STROLLER BY GRIPPING THE FRONT BAR. THE FRONT BAR IS NOT DESIGNED TO

WITHSTAND LOADS.

ENSURE THAT THE STROLLER IS OPENED CORRECTLY AND LOCKED IN POSITION OF USE.

CHECK TO MAKE SURE THAT THE CAR SEAT OR THE BABY CARRIAGE IS CORRECTLY FASTENED TO THE STROLLER (WHERE APPLICABLE).

DO NOT DRIVE THIS PRODUCT AROUND STAIRS OR STEPS; CARE MUST BE TAKEN IF UNIT IS USED ON STAIRS OR ESCALATORS.

DO NOT USE THE PRODUCT IF IT HAS BROKEN OR MISSING PARTS.

DO NOT USE NEAR FIRE OR EXPOSED FLAME.

NOTICE: THIS ARTICLE MEETS OR EXCEEDS ALL REQUIREMENTS COVERED IN ASTM F833 STANDARD AND LATEST REVISIONS.

INSTRUCTIONS

- 1 **OPENING:** to open the stroller, simultaneously release the two fasteners (fig_a) and firmly lift the handlebar (fig_b), before pushing it down until the final click (fig_c).
- 2 **FRONT BAR-CHILD TRAY:** insert the front bars (fig_a). The front bar and child tray are independent, to meet the needs of any child; it is possible to open one at a time or remove one. To open the front bar-child tray on one side only, push the button and pivot the front bar outwards (fig_b). To remove the front bar-child tray, first push the central button and simultaneously lift the front bar; next push the side button and simultaneously pull out the front bar (fig_c). Do not place hot drinks on the front bar-child tray as this could be dangerous.
- 3 **HOODS:** the hoods are independent. One or both may be lowered at any one time. Insert the hood clips into the appropriate housing (fig_a), button the hoods to the rear of the backrests (fig_b) and open by pulling forward (fig_c). To remove the hoods, push the side buttons and simultaneously slip the hood upwards (fig_d).
- 4 **CUP-HOLDER:** to attach the cup-holder to the centre of the handlebar, place it in the appropriate housing, as in the figure.
- 5 **BRAKE:** Press down on the brake lever situated on the rear wheel unit to set the brake on the stroller. Lift the lever to release the brake. Always set the brake when the stroller is at a standstill.
- 6 **5-POINT SAFETY HARNESS:** to fasten, insert the two waist strap buckles (with shoulder

- straps attached) into the leg divider strap until you hear a click (fig_a). To release, press the sides of the buckle and simultaneously pull the waist strap outwards (fig_b).
- 7 To put on the safety harness, insert the strap adjuster into the slot in the backrest (fig_a) and remove it after fastening the harness to allow the child to move freely (fig_b). Place the strap adjuster just beneath child's shoulder level so the shoulder straps do not slide off (fig_c). To tighten the waist strap, pull in the direction of the arrow on both sides (fig_d). To loosen it do the opposite. The waist strap may be tightened up to the safety stop (fig_e).
 - 8 **BACKREST ADJUSTMENT:** to recline the backrest, lower the backrest adjuster (fig_a) and simultaneously push the backrest down (fig_b). To lift the backrest, push the backrest adjuster up.
 - 9 **SWIVEL WHEELS:** to make the front wheels swivel, lower the lever (fig_a). To fix them in place, lift the lever (fig_b).
 - 10 **BASKET REPLACEMENT:** Should the basket need to be replaced, fasten it to the clips at the front (fig_a) and button it to the rear (fig_b).
 - 11 **WHEEL REMOVAL:** the stroller wheels may be removed. To remove the front wheels, turn them to swivel position, push the levers (fig_a) and simultaneously push the wheel downwards until it is released (fig_b).
 - 12 To remove the rear wheels, press the button (fig_a) and at the same time push the wheels down until they come off (fig_b).
 - 13 **FOLDING:** before folding the stroller, close the hoods (if attached). To fold the stroller, lift the buttons on the sides of the handlebar (fig_a) and rotate the handlebar forward until it clicks. Push the backrest and the hoods towards the stroller and lower the handlebar until it slots into its housing (fig_b). Ensure the stroller is fully folded by checking the safety fastener (fig_c). The stroller is freestanding when folded up.
 - 14 **TRANSPORT:** thanks to the carrying handle, transporting the folded stroller is very simple.
 - 15 **REMOVABLE LINING:** to remove the stroller lining, first remove the hoods, then the cover on the side (fig_a). Push the pin upwards and then outwards (fig_b), and finally slip it out of the eyelet in the sack (fig_c). Do this on both sides and in the middle.
 - 16 To detach the sack from the seat, remove the leg divider strap from under the seat (fig_a), and unbutton it (fig_b). Unscrew the safety harness from both sides (fig_c) and slip the sack off the seat (fig_d).

GANCIOMATIC SYSTEM

Ganciomatic is the practical, fast system

- for attaching the Primo Viaggio car seat to the stroller. The car seat is fitted with the Ganciomatic System, and is sold separately.
- 17 **STROLLER GANCIOMATIC FASTENERS:** To raise the Ganciomatic fasteners on the stroller, pull the sack up in the seat corners and lift the two fasteners. They will automatically move outwards (fig_a). To lower the Ganciomatic fasteners, push them inwards and then down (fig_b).
 - 18 **STROLLER + CAR SEAT:** To fasten the car seat to the stroller: set the brake on the stroller, remove the hood, completely lower the backrest and raise the Ganciomatic fasteners. Place the car seat, facing the adult, on the stroller and push down until it clicks into place. Do not remove the front bar from the stroller when attaching the car seat. See the car seat's user manual for instructions on how to detach it from the stroller.

ACCESSORIES

- 19 **RAIN COVER:** transparent rain cover for the ARIA TWIN 60-40 stroller.
- 20 **CHANGING BAG:** bag with pad for changing the baby. Can be attached to the stroller.

SERIAL NUMBERS

- 21 The information about the date of production of ARIA TWIN 60-40 is indicated under the seat.
 - _ Product name, date of manufacture and serial number of the product.
 This information is essential in the event of any complaints.

CLEANING AND MAINTENANCE

PRODUCT MAINTENANCE: protect from the weather: water, rain, or snow; prolonged and continuous exposure to bright sunlight may give rise to colour changes of various different materials; store this product in a dry place.

CLEANING THE CHASSIS: periodically clean all plastic parts with a damp cloth. Do not use solvent or similar cleaning products; keep all metal parts dry to prevent rusting; keep moving parts clean (adjustment mechanisms, locking mechanisms, wheels, ...) and free of dust and sand and, if necessary, lubricate with light machine oil.

CLEANING THE RAIN CANOPY: wash with a sponge and soapy water; do not use detergents.

CLEANING FABRIC PARTS: brush fabric parts to remove dust and wash by hand at a maximum temperature of 30°C; do not wring; do not use chlorine bleach, do not iron; do not dry clean; do not apply solvent-based stain removers and do not dry in a tumble

dryer.



PEG-PÉREGO S.p.A.

Peg Pérego can make changes at any time to the models described in this publication for technical or commercial reasons.

PEG-PÉREGO AFTER-SALES SERVICE

If any parts of the item get lost or damaged, only use genuine Peg Pérego spare parts. For any repairs, replacements, information on the products and sales of genuine spare parts and accessories, contact the Peg Pérego Assistance Service and state the serial number of the product, if present.

USA

tel. 800.671.1701 fax 260.471.6332
call us toll free 1.800.671.1701
website www.pegperego.com

CANADA

tel. 905.839.3371 fax 905.839.9542
call us toll free 1.800.661.5050
website www.pegperego.com

ES_Español

Le agradecemos haber elegido un producto Peg-Pérego.

ADVERTENCIA

**IMPORTANT: LIRE CES
INSTRUCTIONS AVEC ATTENTION
ET LES CONSERVER POUR TOUTE
RÉFÉRENCE FUTURE. LA SÉCURITÉ
DE VOTRE ENFANT POURRAIT ÊTRE
MENACÉE SI CES INSTRUCTIONS NE
SONT PAS RESPECTÉES.**

ESTE PRODUCTO HA SIDO DISEÑADO PARA NIÑOS CON UN PESO MÁXIMO DE 20 KG Y UNA ALTURA MÁXIMA DE 110 CM. LA CESTILLA HA SIDO REALIZADA PARA SOPORTAR UN PESO MÁXIMO DE 5 KG. LOS POSIBLES PORTABEBIDAS QUE VAN CON ESTE PRODUCTO ESTÁN CONCEBIDOS PARA SOPORTAR EL PESO MÁXIMO ESPECIFICADO EN EL PORTABEBIDAS EN CUESTIÓN. CUALQUIER BOLSA ENTREGADA JUNTO AL PRODUCTO ESTÁ REALIZADA PARA SOPORTAR UN PESO MÁXIMO DE 0,2 KG.

SI NO SE RESPETAN LAS INDICACIONES ESPECIFICADAS O SI SE USAN ACCESORIOS DIFERENTES DE LOS HOMOLOGADOS POR EL FABRICANTE, EL PRODUCTO PUEDE SER INESTABLE.

PARA EVITAR LESIONES GRAVES POR CAÍDAS O SI ESCAPA EL NIÑO DE LA SILLA DE PASEO, USAR SIEMPRE UN CINTURÓN DE SEGURIDAD DE 5 PUNTOS COMPLETO.

NO DEJAR NUNCA AL NIÑO SIN VIGILANCIA.

USAR SIEMPRE TODOS LOS DISPOSITIVOS DE BLOQUEO CADA VEZ QUE LA SILLA DE PASEO NO ESTÉ EN MOVIMIENTO.

PARA EVITAR LESIONES GRAVES, ASEGURARSE DE QUE EL NIÑO NO PUEDA MOVERSE PELIGROSAMENTE MIENTRAS SE REGULA EL PRODUCTO.

TODAS LAS OPERACIONES DE

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.