

# PEAK BANNER SETUP INSTRUCTIONS



# THANK YOU FOR YOUR PURCHASE!

 
If you have questions about installation, maintenance, or take down, please call us at (800)426-9496. Our goal is that you are completely satisfied with our products. Please read this installation manual carefully and follow all instructions contained herein. Please note that the installer is responsible for the site selection, installation and use. Do not erect during inclement weather and follow all safety procedures during the installation and take down process.

Please contact all utility companies for underground services. In many states, the utilities work together and have formed a Utility Locating Service. It is your responsibility to locate all the underground services, including speaking to the owner about irrigation, pool and other special services that they may have installed. Also, please note that special precautions should be taken such that any overhead powerlines are duly noted and avoided during the tent erection process.



**TentCraft Inc in no way represents the estimated holding power to be true in all cases. It is an estimate, and as such, does not imply that the figures are sufficient to hold any tent securely in windy or adverse weather conditions. The tent installer accepts sole responsibility for the safe installation, teardown, and maintenance of any tent. TentCraft does not represent in any way that the materials provided with the purchase of the tent are sufficient enough to hold it up in windy or adverse weather conditions. There is no way for TentCraft to know the site conditions or the weather conditions at the event. This leaves us unable to recommend the adequate amount of holding power needed to hold the tent safely in position. Furthermore, we are not responsible for the methods which the installer uses to erect the tent or anchor it in position. Installers **MUST** be empowered to deem the tent unsafe for occupancy if/when the weather becomes unstable.**

## Step 1

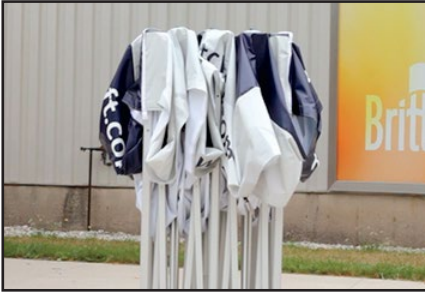


Install the peak banner before the tent has been opened and the legs have been extended.

## Step 2



 Remove the metal poles from the drawstring bag and combine the three sets of poles together to create three longer poles by slipping the top poles down over the skinnier peg on the bottom pole.

## Step 3

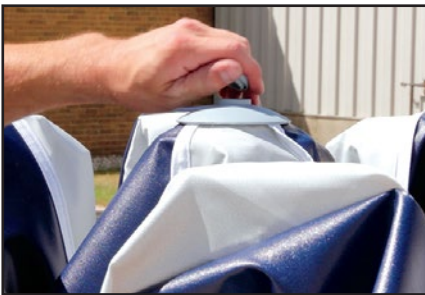

Locate the peak caps on the top of the un-opened tent and uncap them to reveal the opening.


## Step 4



 Place each of the poles down into the peak cap holes.

**\*Be sure to insert the thicker end of the poles down into the peak caps.**

## Step 5

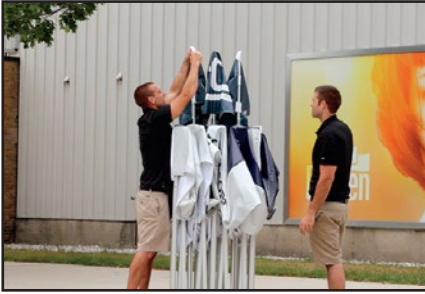

Unfold the peak banner. If the banner is for a 10x20, 13x20 or 13x26, locate the pole pocket that runs vertically through the middle of the banner. The bottom edge of this pole pocket will be open – slide it down over the middle pole.

## Step 6



Next, slip the elastic loops sewn into each side of the peak banner over the poles.

## Step 7



Open the tent according to that model's instructions to fully extend the peak banner.