


Kitchen - SERIES-VARIOUS
 AIR SWITCH Control button - Chrome
 Article number: 10 713 970-00

Spare parts list - Product version from 10/1/2024

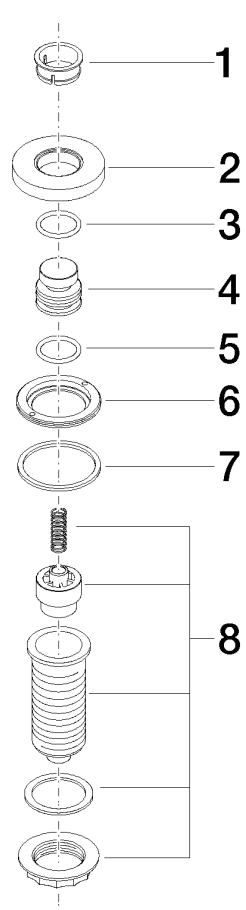



Kitchen - SERIES-VARIOUS
AIR SWITCH Control button - Chrome
Article number: 10 713 970-00

Spare parts list - Product version from 10/1/2024

Position	Quantity used	Item Number	Spare part	Delivery time (Working days)
1	1.00	09 28 10 141 90	sleeve	2
2	1.00	09 27 87 012-00	rosette	10
3	1.00	09 14 10 507 90	seal	2
4	1.00	09 21 33 045-00	insert	10
5	1.00	09 14 10 015 90	seal	2
6	1.00	09 24 01 030 90	ring	2
7	1.00	09 14 05 037 90	seal	2
8	1.00	04 30 01 186 00 90	sleeve	2



Kitchen - SERIES-VARIOUS

AIR SWITCH Control button - Chrome

Article number: 10 713 970-00



Kitchen - SERIES-VARIOUS
AIR SWITCH Control button - Chrome
Article number: 10 713 970-00

Product version from 10/1/2024