



LG 500G | Quick Start Guide



- Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- Depending on your country, your phone and accessories may appear different from the picture in this guide.

Bluetooth QD ID B000000 P/N: MMBB0000000 (1.0) H



*Many of the features and services described are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Other conditions and restrictions may apply. See carrier for more information.

© 2010 LG Electronics, Inc.

Phone Components & Features

 


Phone Components & Features

- Easy-to-read LCD screen with status icons.
- Messaging, voicemail, and caller ID.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any Key answer, Auto Redial and Speed Dials (with 9 locations).
- Bilingual (English and Spanish) capabilities.
- Internal Antenna.

Display


Standby mode is when you are not on a call or using a menu. You must be in Standby mode to enter a phone number to dial.

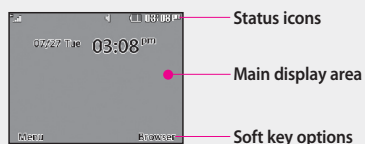

Installing the SIM and Battery


Installing the SIM card

 Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards (as shown below). To remove the SIM card, pull it gently in the reverse direction.

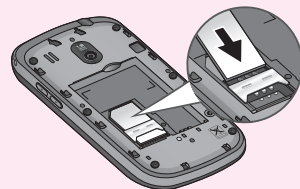

Installing the Battery

 1. To install the battery, align the battery contacts (1) with those in the battery compartment. Press the battery down until it clicks into place (2).
2. With the battery in position in the phone, replace the battery cover on the back of your phone.

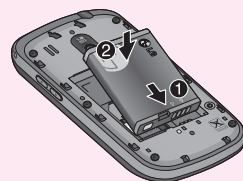


Installing the SIM and Battery

Removing the Battery

1. With your phone turned off, push the button above the battery cover in (1) and lift off the battery cover to remove it.



 2. Lift the battery up (1) and away (2) from the phone, as shown.

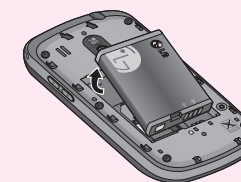

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Installing the SIM and Battery

Charging your phone

Pull out the cover of the charger slot on the top left side of your LG500G. Plug in the charger, making sure that the 'B' side is facing you (as displayed below), and plug the other end into a wall socket. Your LG900G will need to be charged until a message reading "Battery full" appears on screen.



Changing the display language

Allows you to use the bilingual feature according to your preference. Choose between English and Spanish.

1. In Standby mode, press the Left soft key **Menu**.
2. Press **V** → **H** → **T**.
3. Use **Left Soft Key** to highlight **Automatic, English or, Español**, then press **Select**.

Making Calls

1. Make sure the phone is turned on.
2. Enter the phone number (include the area code if needed).
3. Press **Call** to dial.
4. Press **End Call** to end the call.

Recent Calls

The Recent Calls menu displays a list of the last phone numbers or Contacts entries for calls missed, received, or dialed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Note: To view a quick list of all your recent calls, press **Call** Key while in standby mode.

1. All Calls : Allows you to view the list of the most recent missed, received and dialed calls. Press the Left Soft Key **Call** → **F** → **R** → **R**.

Icon	Description
	Indicates the strength of the network signal.
	Indicates that GPRS service is available.
	Indicates the status of the battery charge.
	Indicates a call is in progress.
	Indicates the alarm has been set and is on.
	Indicates a Calendar event for the day.
	Indicates a new message.
	Indicates a new voicemail message.
	Indicates that the Normal Profile has been set.
	Indicates that the Silent Profile has been set.
	Indicates the TTY has been set and is on.

Turning the Phone On or Off

1. Make sure a charged battery is installed.
2. Then press **Power** until the LCD screen lights up.
3. To turn off, press and hold **Power** until the display turns off.

Sound

Options to customize your phone's sounds:

Ringers

1. Press the Left Soft Key **Call** → **F** → **R** → **R**.
2. Use **Left Soft Key** to highlight the ringtone among Ringtone, Voice Recordings or Default Sounds folder.
3. Press **Play** to play the ringtone, or press the Left soft key **Options** and select **Use As** to set the ringtone to your phone.

Sound

Volume

- Press the Left Soft Key .
- Use to highlight **Normal/Silent/Outdoor/ Flight Mode/ Meeting Mode/Customise 1/Customise 2/Customise 3**, press the Left Soft Key **Options**, and choose **Edit**.
- Use to highlight the volume function and use to adjust the volume, then press the Right soft key **Done** to save the setting.

Using the menus

Selecting or Modifying a Menu or Feature :

- Press the Left soft key **Menu** to access the Main menu.
- Use the Navigation keys to reach a desired menu and then press the key.
- If the menu contains any submenus, locate the one you want by using the Navigation keys . Press the key to enter the submenu.

If the selected menu contains additional submenus, repeat this step.

Menu map

- | | | |
|---|---|--|
| 1. Prepaid
For more information about the Prepaid menu, please refer to the Quick Activation Guide. | 4.5 Call Duration
4.6 Packet Data Counter | 8. Settings
8.1 Profiles
8.2 Display
8.3 Date & Time
8.4 Connectivity
8.5 Call
8.6 Phone
8.7 Security
8.8 Memory Info
8.9 Restore Factory Settings |
| 2. Contacts
2.1 Names
2.2 Settings
2.3 Groups
2.4 Speed Dials
2.5 Own Number
2.6 My Business Card | 5. My Folder
5.1 My Memory Card
5.2 Pictures
5.3 Sounds
5.4 Videos
5.5 Other Files
5.6 Camera
5.7 Video
5.8 Music
5.9 Voice Recorder | 9. Browser
9.1 Home
9.2 Bookmarks
9.3 Facebook
9.4 Twitter
9.5 Orkut
9.6 Last Web Address
9.7 Settings
9.8 Go to Address
9.9 Saved Pages |
| 3. Messages
3.1 Create New Message
3.2 Inbox
3.3 Drafts
3.4 Outbox
3.5 Sent Items
3.6 Saved Items
3.7 Emoticons
3.8 Message Settings | 6. Games & Apps
7.Tools
7.1 Alarm Clock
7.2 Calendar
7.3 To-Do List
7.4 Notes
7.5 Secret Notes
7.6 Calculator
7.7 Stopwatch
7.8 Date Finder
7.9 Converter
7.10 World Time
7.11 Go to
7.12 Settings | |
| 4. Recent Calls
4.1 Call Log
4.2 Missed Calls
4.3 Received Calls
4.4 Dialed Numbers | | |

Entering text

In a text input field, press the key to toggle between capitalization. To switch between **123** and **Abc** modes, press the key. To access Symbols, press and select the desired symbols.

Using ABC mode

Press the keys labeled with the letter you want.

Using 123 mode

Press the keys that correspond with the digits you want to enter.

Tips for entering text

- To move the cursor, use the navigation keys .
- To delete characters one by one, press the Clear key . To delete all of the characters, press and hold the Clear key .
- To insert a space between characters, press .

Sending an SMS message

Allows you to send text and email messages.

- Press the Left soft key and .
- Search for and enter a recipient.
Press **Add** to enter a phone number or email address not in your Contact List.
- Enter your message.
- Press **Send** to send the message.

Quick feature reference

This section provides instructions on how to access some of your phone's features (Not all options are listed below).

Menu	Description
	For more information about the Prepaid menu, please refer to the Quick Activation Guide.
	Add New allows you to add a new contact to your Contact List.
	Settings allows you to configure settings for Contacts.
	Groups allows you to view your grouped Contacts, add new group, change the name of a group, or delete a whole group.
	Speed Dials allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.
	Allows you to check your own number.
	My Business Card allows you to view, enter and edit more of your personal Contact information, including name and phone numbers. You can also send this Business Card via Text or Multimedia message, or Bluetooth.
	Create New Message allows you to send text and e-mail messages.
	Inbox allows you to view your received messages.
	Drafts allows you to view your saved (message) Drafts.
	Outbox allows you to view your sending or failed essages.
	Sent Items allows you to view your sent messages. Access to view contents of sent messages and verify whether the transmission was successful.

Menu	Description
	Saved Items allows you to view saved message, text templates or multimedia templates.
	Emoticons allows you to edit, delete, and add emoticons to your emoticons list.
	Settings allows you to configure settings for Messaging.
	All Calls allows you to view the list of the most recent missed, dialed, and received calls.
	Missed Calls allows you to view the list of the most recent missed calls.
	Received Calls allows you to view the list of the most recent received calls.
	Dialed Calls allows you to view the list of the most recent dialed calls.
	Call Duration allows you to view the duration of calls by call type.
	Allows you to check packet data counter.
	Allows you to check my memory card.
	Allows you to buy graphics, check default images and taken pictures.
	Allows you to buy ringtones, check default ringtone, voice recordings or default sounds.
	Allows you to check videos saved in phone.
	Allows you to check other files save in phone.
	Allows you to take pictures.
	Allows you to take videos.
	Allows you to play music.

Menu	Description
	Allows you to record voice.
	Allows you to buy games, play preloaded games.
	Alarms allows you to set up to five alarms. At the alarm time, any set alarm will sound (depending on your Master Volume settings) the tone of your choice, and an alarm message will be displayed on the LCD screen.
	Calendar allows you to access your Calendar appointments. Simply enter your appointments in the Calendar, and your phone can alert you with a reminder.
	Allows you to add to do list as a schedule.
	Allows you to add, read, edit and erase notes.
	Allows you to check secret notes. Default code is 0000.
	Calculator allows you to perform simple mathematical calculations.
	Stopwatch allows you to use your phone as a stopwatch.
	Allows you to find date.
	Converter allows you to convert units of Currency, Surface, Length, Weight, Temperature, Volume and Velocity.
	World Time allows you to determine the current time in nother time zone or city.
	Allows you quick access to your favorite menus.
	Settings allows you to configure settings for Calendar.
	Allow you to configure profiles settings.

Menu	Description
	Allows you to configure display settings.
	Allows you to configure date & time.
	Allows you to configure connectivity.
	Allows you to configure call settings.
	Allows you to configure phone settings.
	Allows you to configure security settings.
	Allows you to configure memory info.
	Allows you to configure restore factory settings.
	Allows you to connect home browser.
	Allows you to check bookmarks.
	Allows you to use facebook.
	Allows you to use twitter.
	Allows you to connect with friends and family using scraps and instant messaging.
	Allows you to check last web address.
	Allows you to configure web settings.
	Allows you to enter url and connect new web address.
	Allows you to check saved web pages.

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

⚠ Caution

Violation of the instructions may cause minor or serious damage to the product.

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

- Promptly dispose of used batteries in accordance with local regulations. Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- For those host devices that utilize a USB port as a charging source, the host device's user manual shall include a statement that the phone shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.

Consumer Information on SAR

This phone model meets the government's requirements for exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile hones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC

that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 0.00 W/kg and when worn on the body, as described in this user guide, is 0.00W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJLG500G. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

For Your Safety

Body-worn Operation

This device has been tested for typical body-worn operations with the distance of 0.79inches (2.0cm) from the user's body.

To comply with FCC RF exposure requirements, a minimum separation distance of 0.79inches(2.0cm) must be maintained from the user's body. For example, this device must be maintained from the user's body with an appropriatebelt-clip accessory.[More than 0.79inches(2.0cm)]

Additionally, Belt clips, holsters & other body-worn accessories may not contain metallic components.

Part 15.21 statement

Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.19 statement

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.