

INSTALLATION INSTRUCTIONS FOR RXPX & RXXR ROOFCURB ADAPTERS

▲ Recognize this symbol as an indication of Important Safety Information!

▲ WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT AND OPERATION OF THIS UNIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING ADJUSTMENT OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE, POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

The following instructions are for RXPX-BACCA20, RXXR-BACDB20, RXPX-BACCA21 & RXXR-BACDB21 models roofcurb adapters. Instructions for RXPX-BACCA22, RXPX-BCCCA22, RXXR-BACDB22, RXXR-BCCDB22, RXPX-BACCA23, RXXR-BCCCA23, RXXR-BACDB23 & RXXR-BCCDB23 models begin on Page 3.

1. Remove any old gasket material or caulking material that may have been left on top of the sealing surface of the curb.
2. Install the two flanges with the self-drilling screws provided as shown.

NOTE: If the unit is not provided with a base/duct sealing gasket, install the gasket provided as shown. **DO NOT** use two layers of gasket. When lowering the unit onto the roofcurb be careful not to dislodge or damage the gasket.

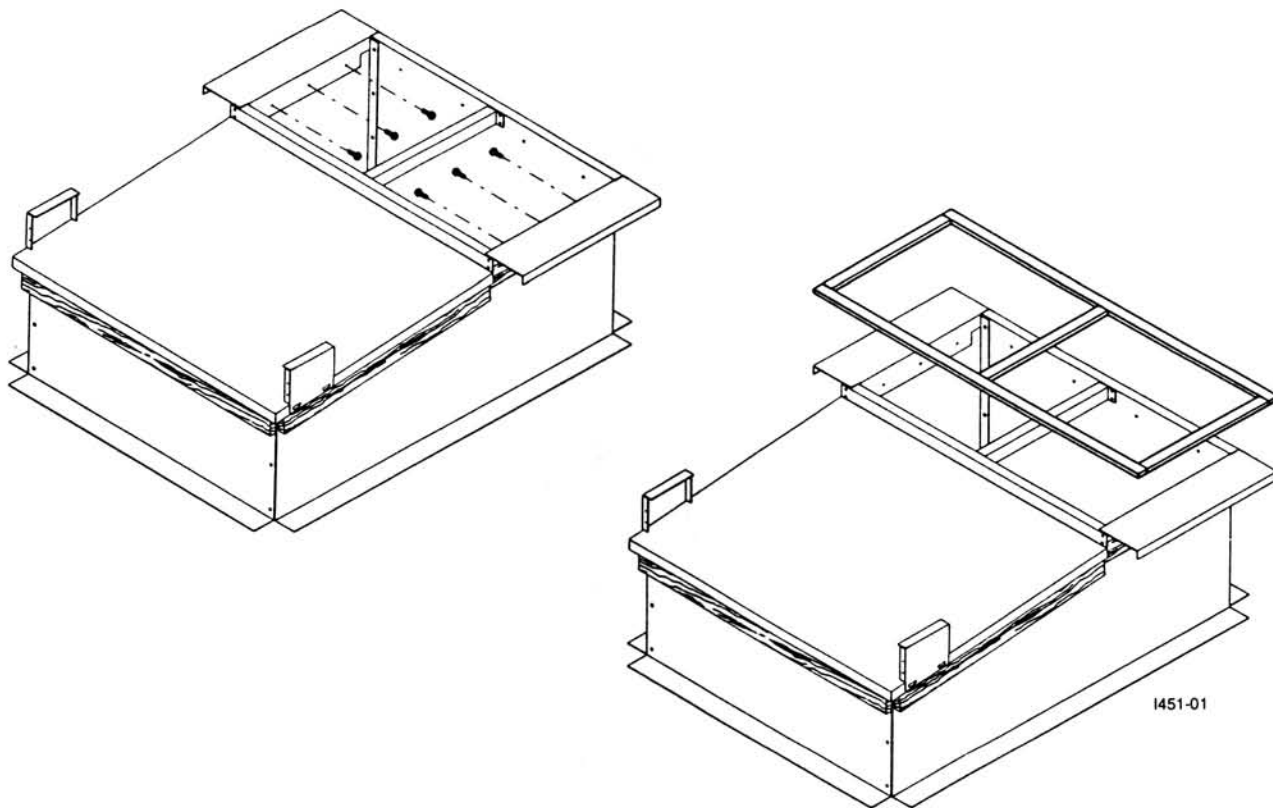


Figure 1. RXPX-BACCA20

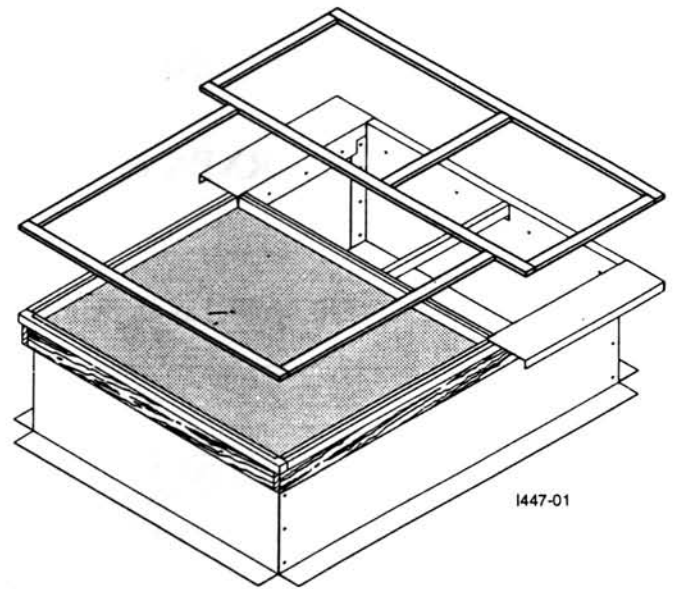
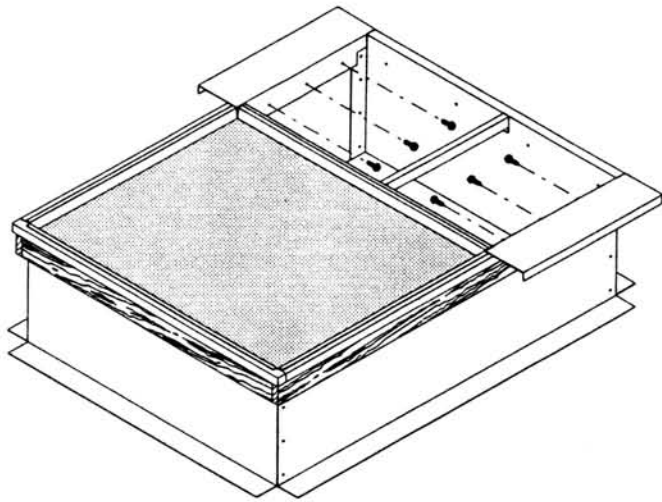


Figure 2. RXXR-BACDB20

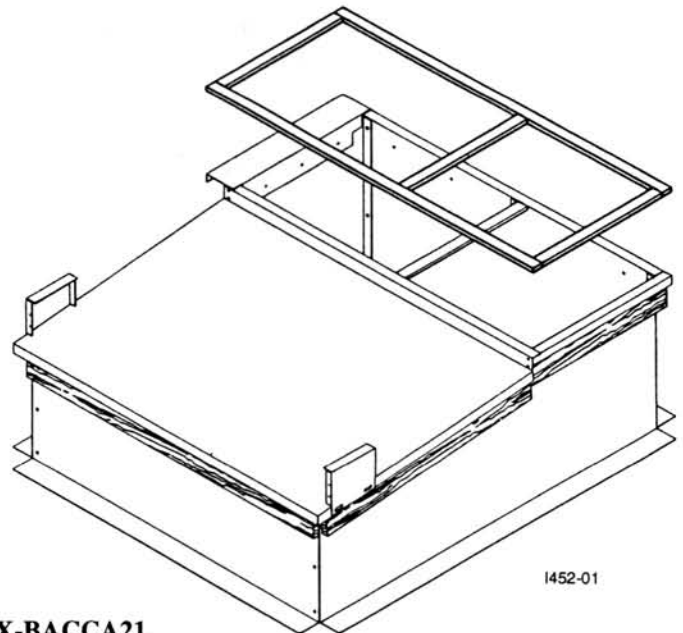
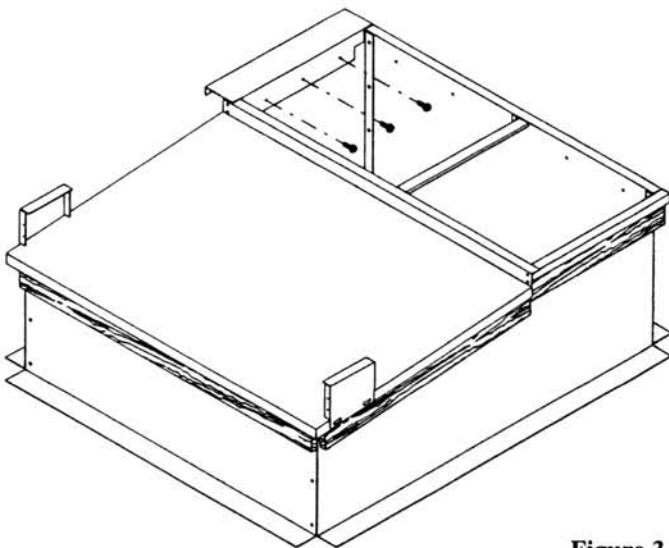


Figure 3. RXPX-BACCA21

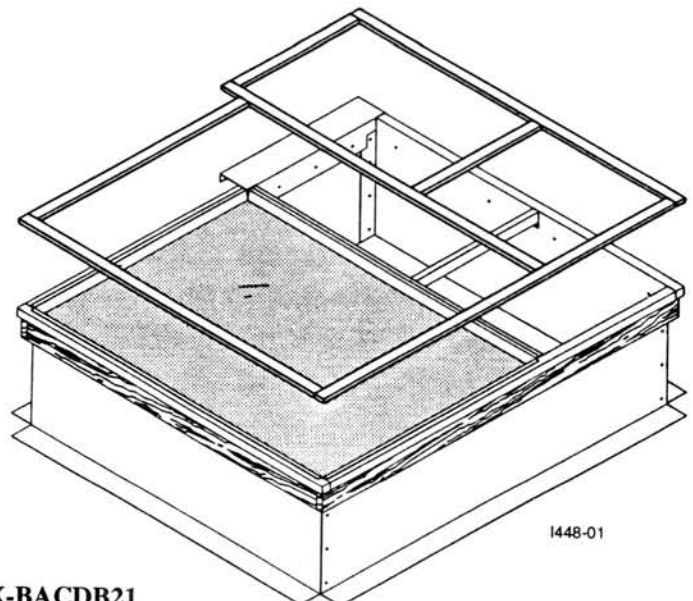
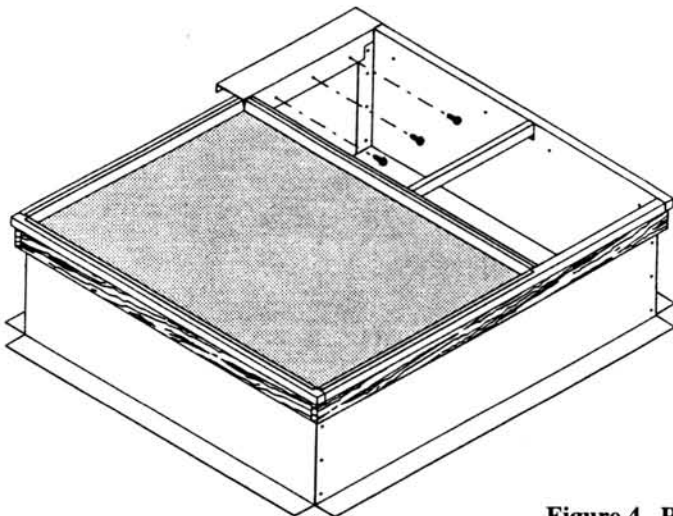


Figure 4. RXXR-BACDB21

The following instructions are for RXPX-BACCA22, RXPX-BCCCA22, RXXRX-BACDB22, RXXRX-BCCDB22, RXPX-BACCA23, RXPX-BCCCA23, RXXRX-BACDB23 & RXXRX-BCCDB23 models.

1. Remove any old gasket material or caulking material that may have been left on top of the sealing surface of the curb.
2. Install the unit support channel with the self-drilling screws provided as shown.

NOTE: If the unit is not provided with a base/duct sealing gasket, install the gasket provided as shown. **DO NOT** use two layers of gasket. When lowering the unit onto the roofcurb be careful not to dislodge or damage the gasket.



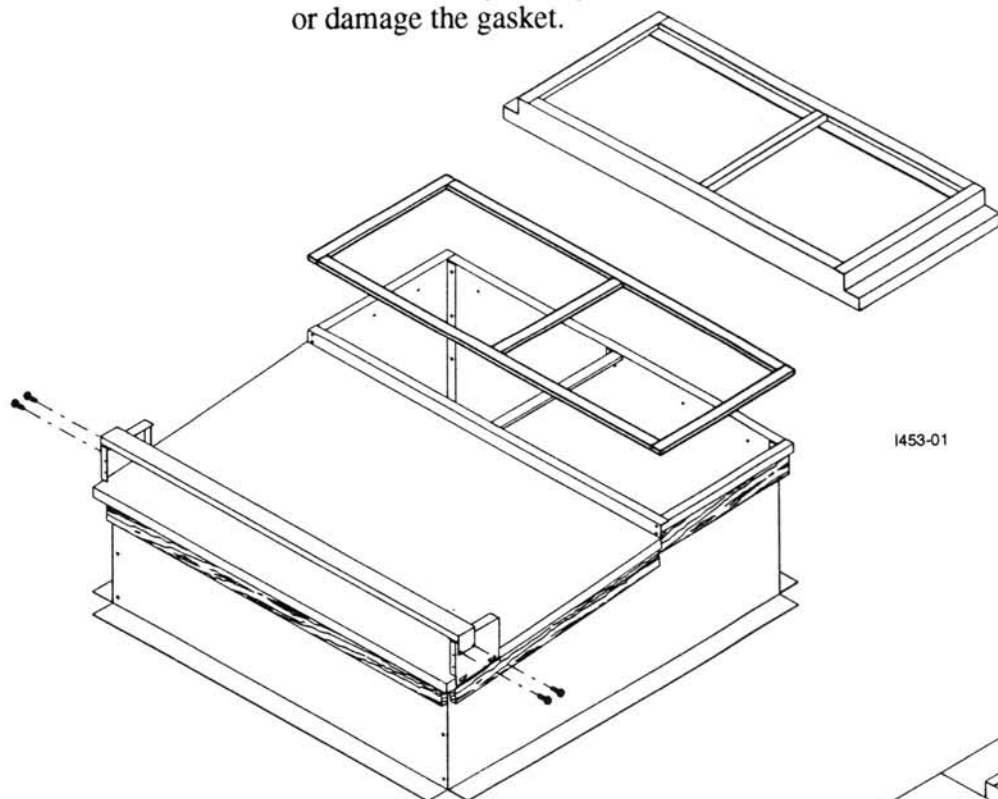


Figure 5. RXPX-BACCA22
RXPX-BCCCA22

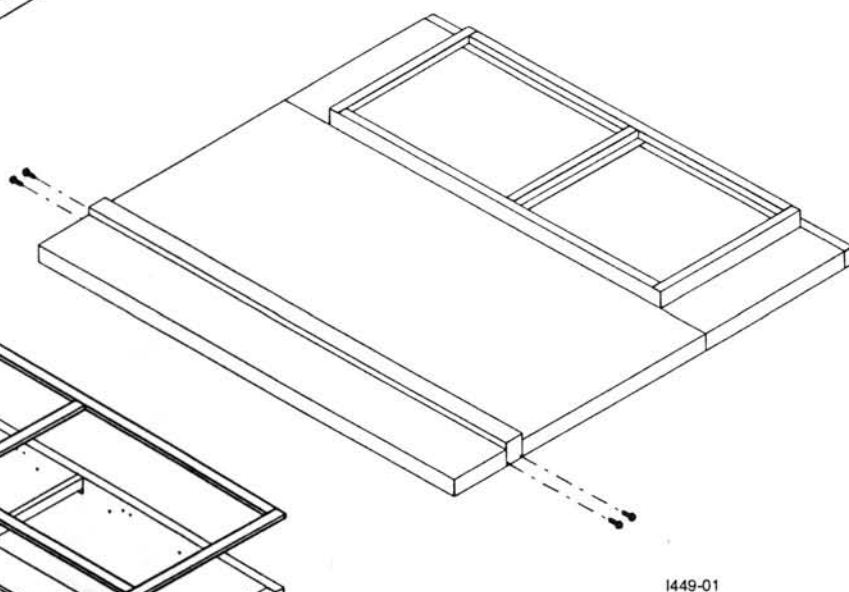


I449-01

Figure 6. RXXRX-BACDB22
RXXRX-BCCDB22

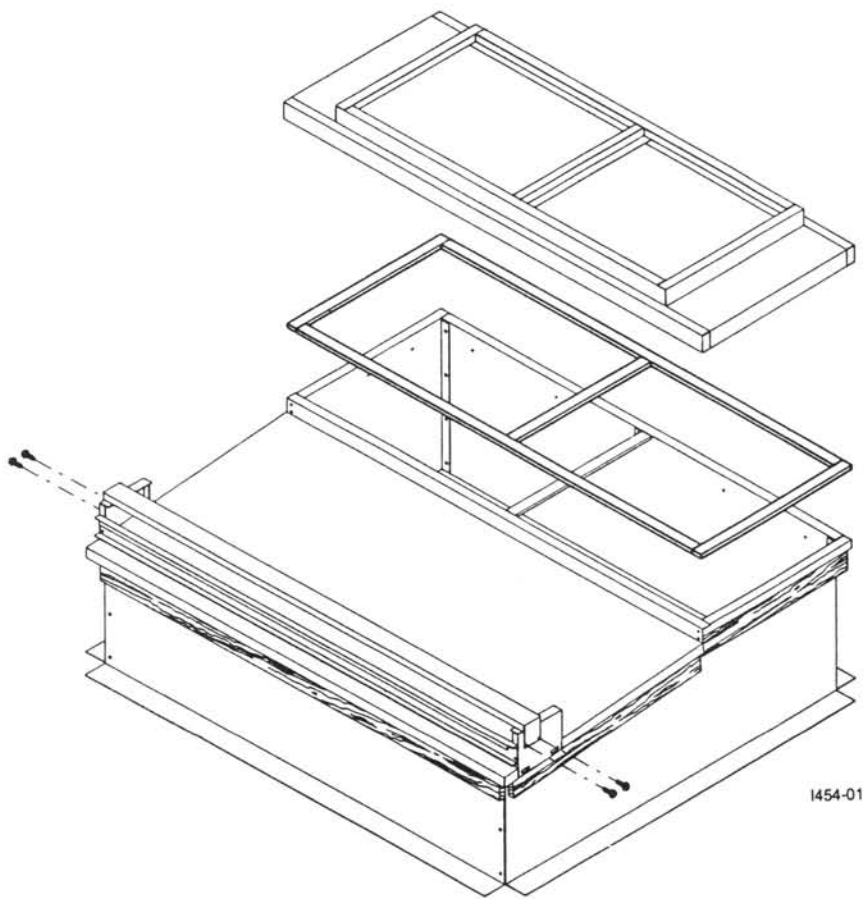

**Figure 7. RXPX-BACCA23
RXPX-BCCCA23**

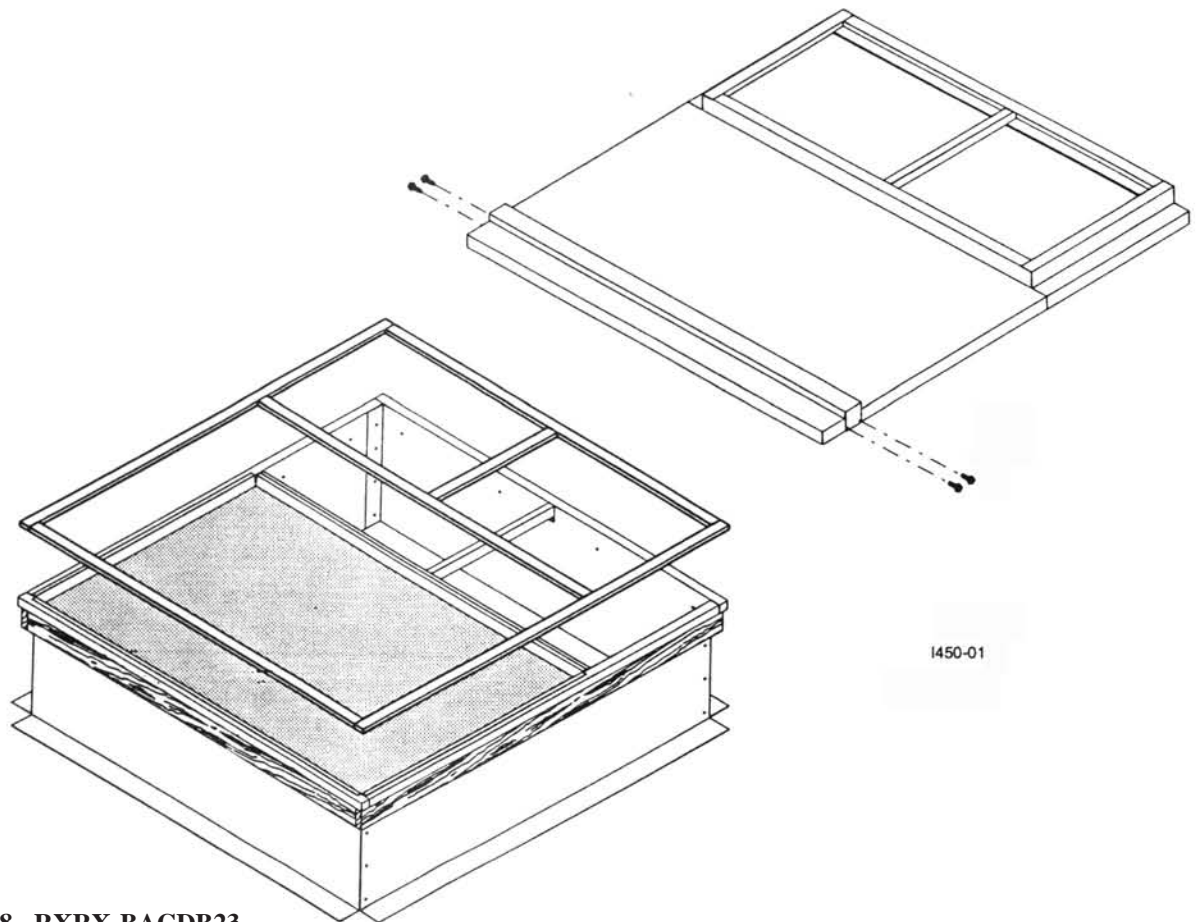

**Figure 8. RXRX-BACDB23
RXRX-BCCDB23**