




WMS 11.4 Tutorial

Images

Import images in a variety of formats and register the images to a coordinate projection

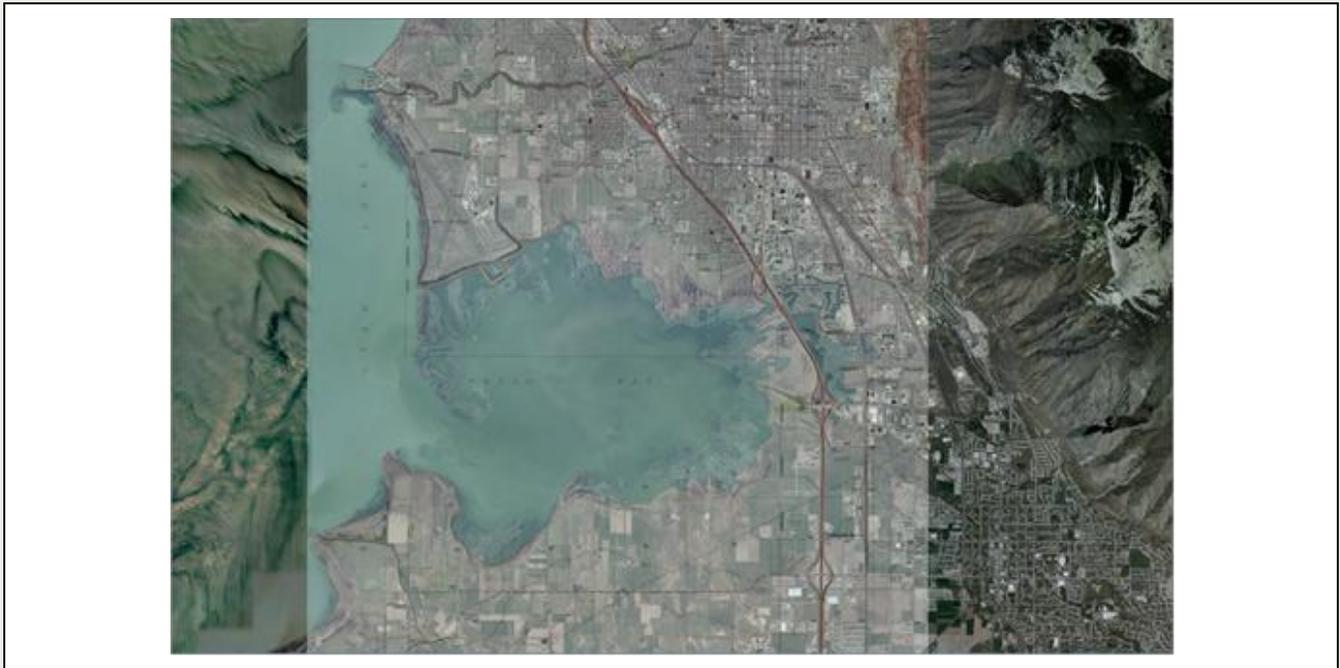

Objectives

Import various types of image files from different sources. Learn how to work with online maps in the WMS interface. Register the images to a real-world projection and save an image world file.

Prerequisite Tutorials

- None

Required Components

- Data
- Map

Time

- 15–30 minutes

1	Introduction	2
1.1	Getting Started.....	2
2	GeoTIFF Files	3
2.1	Tiling Images	3
3	Online Images	3
3.1	Getting Online Images	3
3.2	Exporting Images	4
4	World Files.....	5
5	Image Resolution	6
6	Working With Scanned Images	7
6.1	Importing and Registering a Scanned Image	7
6.2	Registering Geographic Coordinates	8
6.3	Setting the Geographic Projection	9
6.4	Setting the Display Projection.....	9
7	Conclusion	10

1 Introduction

Images are an important part of most projects developed using WMS. An image is composed of pixels. The size and number of pixels in an image determines the level of detail visible in the image.

WMS uses images to derive data such as roads, streams, confluences, land use, and soils, as well as to provide a base map—or backdrop—to a watershed. Images must be georeferenced in order to be useful in WMS. Georeferencing an image defines appropriate *x* and *y* coordinates so that distances and areas computed from the image will be accurate.

Because images are commonly used in Geographic Information System (GIS) programs and modeling systems like WMS, data developers often store the georeferencing information as either part of the image file (a GeoTIFF file for example), or in a separate file commonly referred to as a “world” file.

This tutorial gives an overview of the primary ways to import and georeference (or register) images in WMS. Using GeoTIFF files, online images, and world files will be discussed and demonstrated. Image resolution and registering scanned images will also be discussed and demonstrated.

1.1 Getting Started

To reset the data, display options, and other WMS settings to their defaults, do the following:

1. If necessary, launch WMS.
2. If WMS is already running, Press *Ctrl-N*, or select *File | New...* to ensure that the program settings are restored to their default state.
3. A dialog may appear asking to save changes. Click the **Don't Save** button to clear all data.

The graphics window of WMS should refresh to show an empty space.

2 GeoTIFF Files

GeoTIFF image files include georeferencing information. This means it is not necessary to specify coordinates when images are read in because it is done automatically. Multiple images can be tiled together and shown as a single image.

2.1 Tiling Images

1. From the *Menu* bar, select the *File | Open...* menu item to bring up the *Open* dialog.
2. Browse to the *images\images* directory.
3. Select the “redridge.TIF” image file.
4. Click the **Open** button to import the image and exit the *Open* dialog.

The image of a topographic map will appear in the *Graphics Window* and “ redridge.TIF” will appear under the “ GIS Data” folder in the Project Explorer.

5. From the *Macro* bar, click the **Open**  macro to bring up the *Open* dialog.
6. Select the image file “josephspeak.TIF”.
7. Click the **Open** button to import the image and exit the *Open* dialog.

A different topographic map should appear adjacent to the “ redridge.TIF” image in the *Graphics Window*. Notice that the adjacent images are georeferenced. This can be determined by the latitude and longitude information to the right of the *Cursor Coordinates* bar below the *Graphics Window*.


3 Online Images

WMS has tools for loading various types of online images from the internet that are both high-quality and seamless (they do not contain collars). Online images require an internet connection.

This tool uses a web map service to download and view various types of images in the WMS Graphics Window. These images are pre-registered to the display projection (or if no data exists, the projection is set to the image’s native projection) and more than one online image can be imported at a time.

The advantages of online images are that they are seamless, data is available throughout the world, and that they can be reprojected to the display projection without needing to georeference the image. The disadvantage of online images is that the image can take longer to refresh when zooming or panning the display in the Graphics Window.

3.1 Getting Online Images

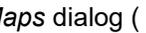1. From the *Macro* bar, click the **Get Online Maps**  macro to bring up the *Get Online Maps* dialog ( Figure 1).
2. While pressing the **Ctrl** key, select both the *World Imagery* and *USA Topo Map* items (if necessary, scroll to the right).
3. Click the **OK** button to load the *World Imagery* and *USA Topo Maps* online maps into WMS and close the *Get Online Maps* dialog.

The process of loading the maps may take a few minutes.

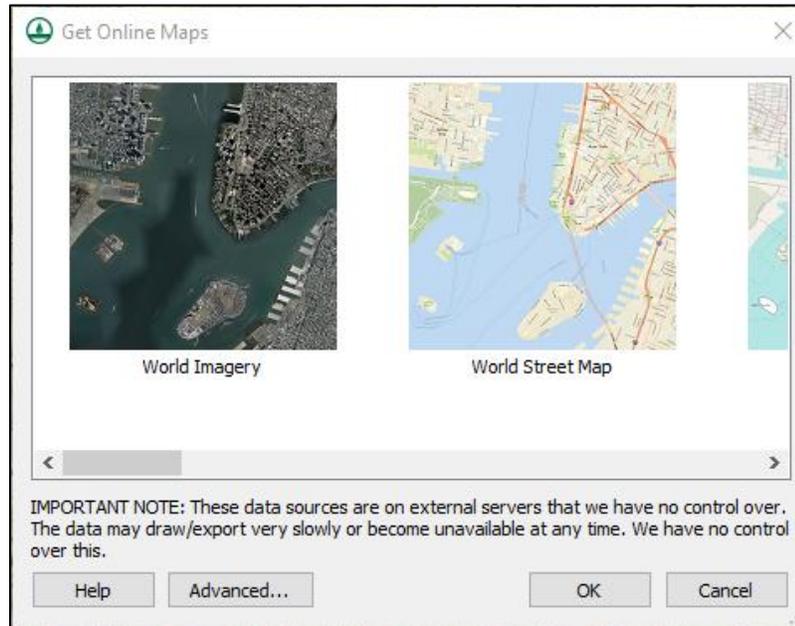


Figure 1: Get Online Maps dialog

Notice that the online images are imported and displayed based on the current screen coordinates. Two new layers, “ World Imagery” and “ USA Topo Map” were created in the Project Explorer under the “ GIS Data” folder. Images can be turned on and off by unchecking the box next to the image in the *Project Explorer*.

4. In the Project Explorer, under the “ GIS Data” folder, turn off the “ World Imagery” checkbox.
5. Use the **Zoom** tool from the *Static* tool bar to zoom into various areas of the USA Topo Maps image.
6. Compare the USA Topo Map with the topographic map image imported earlier in this tutorial by turning on and off each image layer.

Notice that the display of the online images takes time to update when panning or zooming in and out. The display takes time to update because WMS downloads an updated image from the internet every time zooming in or framing the image. While the image is downloading, it is possible to continue to work, but some or all of the current view of the image may not be shown until the image is downloaded.

7. From the *Macro* bar, click on the **Frame** macro to zoom to the extents of the project.

This centers and redraws all the data in the graphics window so that all currently visible objects fit and can be seen at once.

8. In the Project Explorer, turn on the “ World Imagery” checkbox.

3.2 Exporting Images

Online images can be exported as static image files to the computer, so the display updates faster.

1. In the Project Explorer, right-click on  "World Imagery" data and select the  **Export...** context menu item to bring up the *Resample and Export Raster* dialog.
 2. For the *Resampling ratio*, enter "2.0".
 3. Turn on the *Add to project after saving* checkbox.
 4. Click the **OK** button to export the raster, close the *Resample and Export Raster* dialog, and bring up the *Save As* dialog.
 5. Select the desired destination folder.
-  It is recommended to save related files (those from a specific project) in the same location. This ensures that needed files are easily found.
6. From the *Save as type* drop-down, select the "GeoTIFF Files (*.tif)" drop-down menu item.
 7. For the *File name*, enter "Sample_exported_raster_world.tif".
 8. Click the **Save** button to save the file and close the *Save As* dialog, .
- It may take a few minutes for WMS to download the higher-resolution image.
9. Repeat steps 1 – 8 for the *USA Topo Maps* online image, entering "Sample_exported_raster_usatopo.tif" as the file name.
- After the images have been downloaded, they will automatically open in the graphics window and in the *Project Explorer* under  "GIS Data".
10. In the Project Explorer, turn off both of the  "USA Topo Maps" and  "World Imagery" checkboxes.
 11. Use the **Zoom**  tool from the *Static* tool bar, to zoom in to various sections of the new images, and compare the images with the topographic maps that were opened earlier in this tutorial.

4 World Files

Many image files do not contain georeferencing information. For example, JPEG files do not have georeferencing tags in the file like GeoTIFF images have.

Most organizations that make images available also distribute world files containing the georeferencing information along with the image files. These world files usually have the same name as the corresponding TIFF or JPEG file, but with the extension ".tfw" for TIFF files and ".jgw" or ".jpgw" for JPEG files.

If downloading a world file and asked to supply a name for it, follow the above naming convention. Use the following procedure to open a JPEG file and its corresponding georeferencing information in WMS:

1. From the *Menu* bar, select the *File* |  **New** menu item.
2. If asked to save changes, then click the **Don't Save** button.
3. From the *Macro* bar, click the **Open**  macro to bring up the *Open* dialog.
4. Select the "richfield1.jpg" image file.
5. To import the image and exit the *Open* dialog, click the **Open** button.

Because there is a world file named “richfield1.jpgw” in the same folder as “richfield1.jpg”, the image is automatically registered. If a world file for an image is not named with the TFW extension (or JGW or JPGW extensions), there is an option to import the world file from within the *Registration* dialog.

Properly georeferenced files overlap automatically, thereby avoiding tedious manual tiling of the images). It is not necessary to be exact in obtaining images and files from a source that distributes world files with images, as overlapping is not a problem.

- Repeat steps 3 – 4 for the “richfield2.jpg” and “richfield3.jpg” image files.

Feel free to use the **Zoom**  and **Pan**  tools and turn the different images on and off to explore how they can be viewed and used when overlapping.

Imagery can also be obtained using the **Get Data From Map**  or the **Get Data Tool**  macros in WMS.

5 Image Resolution

Images are usually available in different resolutions. In this part of the exercise, different topographic maps showing the same area at different resolutions will be opened.

- From the *Macro* bar, select the **New**  macro.
- If asked to save changes, click the **Don't Save** button.
- From the *Macro* bar, click the **Open**  macro to bring up the *Open* dialog.
- Select the “tm4m.jpg” image file.
- To import the image and exit the *Open* dialog, click the **Open** button.
- From the *Static* tool bar, use the **Zoom**  tool to zoom in on the image until the individual pixels of the image are visible.
- Repeat steps 3 – 5 for the file “tm16m.jpg”.
- From the *Menu* bar, select *Display | View | Previous View*, or use the **View Previous**  tool from the *Static* tool bar, to switch back to the previous view.
- In the *Project Explorer*, turn on and off the “ tm16m.jpg” checkbox to see the difference in resolution of the two images

Notice how much larger the individual pixels are in the “ tm16m.jpg” image.

- Repeat steps 3 – 5 for the file “tm32m.jpg”.
- Click **View Previous**  to see the difference in resolution.

When zoomed in on the three images, as the map scale increased the map showed less detail. “tm4m.jpg” shows much more detail than either “tm16m.jpg” or “tm32m.jpg”.

Images are commonly available on a scale of 1:24000, 1:100000, or 1:250000. 1:24000 maps cover far less area than 1:100000 or 1:250000 maps, but they show much more detail (higher resolution). It would take thirty-two 1:24000 maps to cover the same area that is covered by one 1:100000 map.

If great detail is needed for a watershed, use the 1:24000 maps. If the watershed is very large, this size of map will provide too much detail. It would be difficult to see the big picture of the watershed, and a 1:100000 or 1:250000 scale map may be more appropriate in such a case.

6 Working With Scanned Images

It is not always possible to obtain a GeoTIFF image or an image with a world file. However, it is possible to make use of a scanned image.

To make the image useful to WMS, the image will need to be imported, registered, assigned a geographic projection and a display projection.

6.1 Importing and Registering a Scanned Image

The scanned image will need to be registered manually. The geographic coordinates, or latitude and longitude—in a projected or geographic system—of three points on the image must be known.

💡 Before scanning a paper image or importing an image from the Internet, mark three known points in order to easily find them when registering the image in WMS.

Here, a part of a soils file is used as a “scanned image”. This file will be used in a later tutorial to develop a soils coverage and to compute a composite curve number.

1. From the *Macro* bar, select the **New**  macro.
2. If asked to save changes, click the **Don't Save** button.
3. From the *Macro* bar, click the **Open**  macro to bring up the *Open* dialog.
4. Select the “soils.tif” image file.
5. To import the image and exit the *Open* dialog, click the **Open** button and bring up the *Register Image* dialog ( Figure 2).

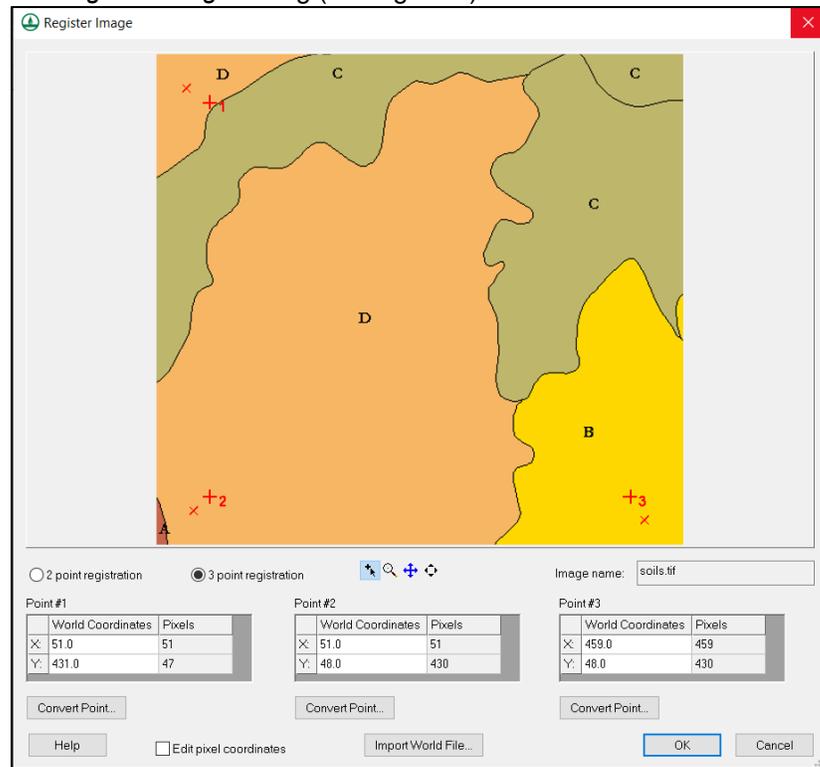


Figure 2: Register Image dialog

6.2 Registering Geographic Coordinates

Registering geographic coordinates will allow WMS to accurately match up the image with location. This requires three known points on the image that can be matched to latitude and longitude points.

1. If the *Register Image* dialog does not appear, in the *Project Explorer*, right-click on the image and select the **Register Image...** context menu item.

An image representing soil types will appear in the *Register Image* dialog. Three small red X's are marked on the image, these are known geographic coordinates. Near each red X is a plus sign with a number "1", "2", or "3" by it, these are registration points.

2. Using the **Zoom**  tool, zoom in over the area containing the red X and the plus sign (+) labeled "1".
3. Using the **Register Points**  tool, drag the plus sign (+) labeled "1" over the nearby X. Make sure that the plus sign is directly over the X.
4. Click the **Frame**  tool to show the extents of the image.
5. Repeat steps 6 – 8 for the plus signs labeled "2" and "3".

The three points are known geographic coordinates, or latitude and longitude. They will be registered that way and then converted to Universal Transverse Mercator (UTM) projection in the following section. Notice that each longitude value is negative due to being west of the prime meridian.

6. For each point, enter the longitude and latitude from the table below into the *World Coordinates* column under each point number.

	Point #1	Point #2	Point #3
Longitude (X)	-112.481944	-112.477222	-112.330277
Latitude (Y)	38.68500	38.57667	38.57611

7. When finished, to close the *Register Image* dialog, click the **OK** button.
8. From the *Macro* bar, click the **Frame**  macro to show the extents of the project.

With the coordinates entered, a slight rotation from true north may be seen, which is expected (Figure 3). It will be rectified later when the display projection is changed to a UTM coordinate system.

If the image appears distorted or extremely crooked, it's possible the coordinates were entered incorrectly, or the plus signs (+) were placed inaccurately. Rectifying the image requires opening the *Register Image* dialog again and adjusting the location of the plus signs (+).

9. To make adjustments, in the *Project Explorer*, right-click on " soils.tif" and select the **Register Image...** context menu item to bring up the *Register Image* dialog.

Note that the plus signs (+) reset to default locations in the dialog when the dialog is closed. This means opening the dialog requires adjusting the plus signs (+) again regardless of how accurately they were installed the first time.

10. Make the needed adjustments to the position of the plus signs over the red Xs and verify the coordinates as shown in the table above.
11. Click the **OK** button when done to close the *Register Image* dialog.

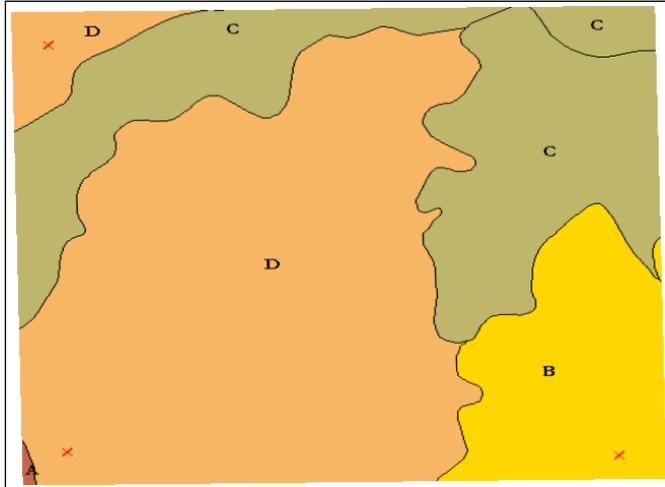


Figure 3: Slight Rotation From True North Visible

6.3 Setting the Geographic Projection

Geographic coordinates are commonly used on maps because they provide a global reference for any point in the world. For engineering work, a planimetric system is necessary.

The Universal Transverse Mercator (UTM) projection is commonly used, so the coordinate system that the image file is currently in (Geographic) will be specified and the display projection will be set to UTM to work in that projection.

1. In the Project Explorer, right-click on the “soils.tif” image and select the *Projection | Projection...* context menu item to bring up the *Projection* dialog.
2. In the *Horizontal* section, select the **Global projection** radio button.
3. The *Horizontal Projection* dialog may appear automatically. If it does not, click **Set Projection...** to bring up the *Horizontal Projection* dialog.
4. In the *Filter strings* text field, enter “Geographic NAD 1983”.
5. From the tree window at the top of the dialog, select “Geographic Coordinate Systems | North America | **NAD 1983**”.
6. To close the *Horizontal Projection* dialog, click the **OK** button.
7. To close the *Projection* dialog, click the **OK** button. A projection warning message will appear.
8. In the warning message about changing the projection of a raster, click the **OK** button. The *Save As* dialog will appear.
9. For the *File name*, enter “soils_exported.tif”.
10. Click the **Save** button to close the *Save As* dialog.
11. Click the **OK** button at the warning message stating the Display Projection needs to be set. The *Display Projections* dialog will appear.

6.4 Setting the Display Projection

The Geographic Projection that the soils image file is in has been set correctly. The Display Projection will now be set to UTM to make it the working projection.

1. If the *Display Projections* dialog does not appear, select *Display* | **Display Projection** menu item to bring up the *Display Projection* dialog.
2. In the *Horizontal* section, select the **Global projection** radio button.
3. Click the **Set Projection...** button to bring up the *Horizontal Projection* dialog.
4. In the *Filter strings* text field, enter “UTM Zone 12”.
5. From the tree window at the top of the dialog, select “Projected Coordinate Systems | UTM | NAD 1983 | **NAD 1983 UTM Zone 12N**”.
6. Click the **OK** button to close the *Horizontal Projection* dialog.
7. In the *Vertical* section, from the *Units* drop-down, select “Meters”.

The Datum and Units area in the *Vertical* section will be set according to the assigned projection.

8. Click the **OK** button to close the *Display Projection* dialog.
9. Click the **Frame**  macro to show the extents of the image.

The original image object projection is still set to geographic and has not been changed, but the display of the image in the WMS display window has changed from geographic to UTM. Now, any measurements taken or data created from the image will have meters for coordinate values.

7 Conclusion

This concludes the WMS “Images” tutorial. The following key concepts were discussed and demonstrated:

- How to use GeoTIFF files.
- How to use online images.
- How to use world files.
- Image resolution.
- How to register images.