

RUGGEDIZED DIGITAL SERVO DRIVE FOR BRUSHLESS/BRUSH MOTORS

R11

RoHS"

FEEDBACK VERSIONS

- Analog Sin/Cos
- Quad A/B digital
- Resolver

CONTROL MODES

- Indexer, Point-to-Point, PVT
- Camming, Gearing, Position, Velocity, Torque

COMMAND INTERFACE

- CANopen
- ASCII and discrete I/O
- Stepper commands
- ±10 Vdc position/velocity/torque command
- PWM velocity/torque command
- Master encoder (Gearing/Camming)
- Digital inputs for indexer control

COMMUNICATIONS

- CANopen
- RS232
- RS-422 (optional)

FEEDBACK

- Digital Quad A/B encoder
- Analog sin/cos encoder (-S versions)
- Resolver (-R versions)
- Secondary encoder / emulated encoder out
- Digital Halls

I/O - DIGITAL

• 14 inputs, 4 outputs

REGEN

Internal

DIMENSIONS: mm [in]

• 126 x 90 x 53 [5.0 x 3.5 x 2.1]

CANOPOR



Model	Vac	Ic	Ip
R11-230-02	100-240	1	2
R11-230-06	100-240	3	6
R11-230-10	100-240	5	10

Add "-S" to part number for Sin/Cos version Add "-R" for Resolver version

DESCRIPTION

Xenus R11 is a compact, ruggedized, AC powered servo drive for position, velocity, and torque control of AC brushless and DC brush motors. It operates on a distributed control network, as a stand-alone indexing drive, or with external motion controllers. Indexing mode simplifies operation with PLC's that use outputs to select and launch indexes and inputs to read back drive status. A single serial port on the PLC can send ASCII data to multiple drives to change motion profiles as machine requirements change. CAN bus operation supports Profile Position, Profile Velocity, Profile Torque, Interpolated Position, and Homing. Up to 127 Xenus R11 drives can operate on a single CAN bus and groups of drives can be linked via the CAN so that they execute motion profiles together. Operation in torque (current), velocity, and position modes with external motion controllers is supported. Input command signals are ±10 Vdc (torque, velocity, position), PWM/Polarity (torque, velocity), or Step/Direction (position).

RUGGEDIZED STANDARDS CONFORMANCE

-50°C to 85°C -40°C to 70°C -40°C to 70°C in 1 minute **Ambient Temperature** Non-Operating Operating Thermal Shock Operating Non-Operating 95% non-condensing at 60°C Relative Humidity 95% non-condensing at 60°C 5 Hz to 500 Hz, up to 3.85 grms Operating Operating Vibration Non-Operating -400 m to 12,200 m Altitude Operating -400 m to 5,000 m Shock Crash Safety 75 g peak acceleration 40 *g* peak acceleration 461, 704, 810, 1275, 1399 Operating MIL-STD specifications MIL-STD-60068, 60079 IEC specifications

Copley Controls, 20 Dan Road, Canton, MA 02021, USA Tel: 781-828-8090 Fax: 781-828-6547 Tech Support: E-mail: sales@copleycontrols.com, Internet: http://www.copleycontrols.com Page 1 of 24



RUGGEDIZED DIGITAL SERVO DRIVE FOR BRUSHLESS/BRUSH MOTORS R 1 1

GENERAL SPECIFICATIONS				
	Wye connect	ed load: 2 mH	+ 2 Ω line-line. Aml	bient temperature = 25°C, $+HV = HV_{max}$
MODEL R	11-230-02	R11-230-06	R11-230-10	
OUTPUT POWER Peak Current Peak time Continuous current	2 (1.4) 1 1 (0.7)	6 (4.2) 1 3 (2.1)	10 (7.1) 1 5 (3.5)	Adc (Arms, sinusoidal), ±5% Sec Adc (Arms, sinusoidal), ±5%
INPUT POWER HV _{min} ~HV _{max} +24 Vdc	+20 to +3	85 to 264 Vac 2 Vdc @ 500 mAc	dc maximum	1 Ø, 50~60 Hz Logic & control power, required for operation
PWM OUTPUTS Type PWM ripple frequency	3-phase MC	OSFET inverter, 15	5 kHz center-weighted P 30 kHz	WM, space-vector modulation
REGENERATION Type Power dissipation Cut-In Voltage Drop-Out Voltage Tolerance Hysteresis		Vdc	Regen output is on, (Regen output is off, (For either Cut-In or D	optional external) regen resistor is dissipating energy optional external) regen resistor not dissipating energy prop-Out voltage Cut-In & Drop-Out voltage
DIGITAL CONTROL Digital Control Loops Sampling rate (time) Commutation Bandwidth HV Compensation Minimum load inductance	Dual loop p Current loo Sinusoidal Current loo	position control us p: 15 kHz (66.7 the field-oriented con p: 2.5 kHz typica bus voltage do n	00% digital loop control ing secondary encoder us) Velocity, position loo trol or trapezoidal for bi l, bandwidth will vary w ot affect bandwidth	input ops: 3 kHz (333 us)
COMMAND INPUTS CAN ASCII Digital position reference Digital torque & velocity Analog torque, velocity, position Indexing Camming	Single RS-2 Step/Direct Quad A/B E PWM/Polari PWM/50% PWM freque PWM minin 1 ±10 Vdc, 5 Index addr	232 connection pa ion or CW/CCW incoder ty ency range num pulse width kΩ differential in ess, index-start, μ	sses messages to multi Stepper co 20 Mcount PWM = 0~ PWM = 50°	
DIGITAL INPUTS Number Type GP, HS HSD Pull-up, pull-down control	8 General- $_{1}$ 74HC14 Sc 10 k $_{\Omega}$ to + +10 Vdc m 1.5 MHz m Differential 5 MHz max GP & HS in	ourpose (GP), 3 h hmitt trigger oper 5 Vdc or ground (ax for HS inputs, aximum pulse fred , 121 Ω line-line, imum pulse frequ puts are divided i	igh-speed single-ended rating from 5.0 Vdc with programmable), Vin-LO +24 Vdc max for GP in quency for HS inputs wi 100 ns RC filters to RS- tency when driven by di	0 < 1.35 Vdc, Vin-HI >3.65 Vdc puts nen driven by active (not open-collector) sources -422/RS-485 line receivers, +10 Vdc max fferential line-drivers electable connection of input pull-up/down resistor
DIGITAL OUTPUTS Number [OUT1], [OUT2], [OUT3] Ratings Brake [OUT4]	250 mAdc i External fly	max, +30 Vdc ma back diode requir	n 1 kΩ pull-up to +5 Vd IX red if driving inductive l Ig with flyback diode to	pads
RS-232 PORT Mode Signals Protocol Multi-Drop	RxD, TxD, (Binary or A ASCII com	Gnd SCII formats munications to mi	nunication port for drive ultiple Copley drives via n daisy-chain to Drive_1	
RS-422 PORT (O) Signals Mode Protocol	XMT-A, XM ⁻ Full-duplex	T-B, RCV-A, RCV-		ntact RJ-11 style modular connector

Copley Controls, 20 Dan Road, Canton, MA 02021, USA Tel: 781-828-8090 Fax: 781-828-6547 Tech Support: E-mail: sales@copleycontrols.com, Internet: http://www.copleycontrols.com Page 2 of 24



RUGGEDIZED DIGITAL SERVO DRIVE FOR BRUSHLESS/BRUSH MOTORS

CAN PORT

Format CAN V2.0b physical layer for high-speed connections compliant

Data CANopen Device Profile DSP-402

Signals CANH, CANL, Gnd

CAN interface circuit and +5 Vdc supply are optically isolated from drive circuits Isolation

Address selection Selectable by logic inputs or programmable in flash memory

MOTOR CONNECTIONS

Power U-V-W phases for brushless, U-V for brush motors Commutation Digital Halls, or sin/cos feedback from ServoTube motors Feedback Digital quadrature A/B/(X) encoders; differential inputs

Analog sin/cos encoders, 1 Vpeak-peak, differential inputs with 121 Ω terminating resistor Digital output, isolated, 1 Adc, +30 Vdc max, programmable, with flyback diode to +24 Vdc Brake

Digital input, non-isolated, 4.99 k Ω pull-up to +5 Vdc, programmable Overtemp sensor

MULTI-MODE ENCODER PORT

Digital quadrature encoder (A, /A, B, /B, X, /X), 20 M counts/sec, post-quadrature (5 M lines/sec) As Secondary Encoder Input

Quadrature encoder emulation with programmable resolution to 4096 lines (65,536 counts) per rev As Emulated Encoder Output

from analog sin/cos encoders. 18 M counts/sec, post-quadrature (4.5 M lines/sec)

Buffered signals from digital quad A/B/X primary encoder. 20 M counts/sec, post-quadrature (5 M lines/sec) As Buffered Encoder Output

A, /A, B, /B, X, /X, signals from 26LS31 differential line driver

LED INDICATORS

Drive Status Bicolor LED, drive status indicated by color, and blinking or non-blinking condition **CAN Status**

Bicolor LED, status of CAN bus indicated by color and blink codes to

CAN Indicator Specification 303-3

PROTECTIONS

+HV > 400 VdcDrive PWM outputs disabled **HV** Overvoltage Drive PWM outputs disabled HV Undervoltage +HV < 60 VdcHeatplate > 80 °C ±3 °C Drive over temperature Drive PWM outputs disabled Short circuits Output to output, output to ground, internal PWM bridge faults

12T Current limiting Programmable: Current foldback to continuous limit when I2T threshold is exceeded

Drive PWM outputs disabled when [IN14] changes state (programmable) Motor over temperature

Feedback power loss Fault occurs if feedback +5 Vdc output is < 85% of nominal value

MECHANICAL & ENVIRONMENTAL

126 x 89 x 53 [5.0 x 3.5 x 2.1] mm [in] Size

0.67 lb (0.30 kg) -40 °C to +70 °C Weight Ambient Temperature Range Ambient Temperature Storage -50 °C to +85 °C Contaminants Pollution degree 2 IEC68-2:1990 Environment

AGENCY STANDARDS CONFORMANCE

EN 55011: 1998 CISPR 11 (1997) Edition 2/Amendment 2:

Limits and Methods of Measurement of Radio Disturbance Characteristics of Industrial, Scientific, and

Medical (ISM) Radio Frequency Equipment

EN 61000-6-1: 2001 Electromagnetic Compatibility Generic Immunity Requirements

Following the provisions of EC Directive 89/336/EEC:

EN 61010-1 2nd Ed.: 2001 Safety Requirements for Electrical Equipment

for Measurement, Control, and Laboratory use

Following the provisions of EC Directive 2006/95/EC

UL 508C 3rd Ed.: 2002 UL Standard for Safety for Power Conversion Equipment

Copley Controls, 20 Dan Road, Canton, MA 02021, USA Tel: 781-828-8090 Fax: 781-828-6547 Tech Support: E-mail: sales@copleycontrols.com, Internet: http://www.copleycontrols.com

Page 3 of 24



RUGGEDIZED DIGITAL SERVO DRIVE FOR BRUSHLESS/BRUSH MOTORS R11 RoHS (E

FEEDBACK SPECIFICATIONS

ENCODERS

DIGITAL ENCODER

Type Quadrature, differential line driver outputs
Signals A, /A, B, /B, (X, /X, index signals optional)

Frequency 5 MHz line frequency, 20 MHz quadrature count frequency

ANALOG ENCODER (-S VERSIONS)

Type Sin/cos, differential line driver outputs, 1.0 Vpeak-peak differential centered about 2.5 Vdc typical. Common-mode voltage 0.25 to 3.75 Vdc

Signals Sin(+), sin(-), cos(+), cos(-)

Frequency 230 kHz maximum line (cycle) frequency

Interpolation 10 bits/cycle (1024 counts/cycle)

DIGITAL HALLS

Type Digital, single-ended, 120° electrical phase difference

Signals U, V, W

Frequency Consult factory for speeds >10,000 RPM

ENCODER POWER SUPPLY

Power Supply +5 Vdc @ 400 mA to power encoders & Halls Protection Current-limited to 750 mA @ 1 Vdc if overloaded

Encoder power developed from +24 Vdc so position information is not lost when AC mains power is removed

RESOLVER (-R VERSIONS)

RESOLVER

Type Brushless, single-speed, 1:1 to 2:1 programmable transformation ratio

Resolution 14 bits (equivalent to a 4096 line quadrature encoder)

Reference frequency 7.5 kHz

Reference voltage 2.8 Vrms, auto-adjustable by the drive to maximize feedback

Reference maximum current 100 mA Maximum RPM 10,000+


ENCODER EMULATION

Resolution Programmable to 16,384 counts/rev (4096 line encoder equivalent)

Buffered encoder outputs 26C31 differential line driver

Copley Controls, 20 Dan Road, Canton, MA 02021, USA Tel: 781-828-8090 Fax: 781-828-6547 Tech Support: E-mail: sales@copleycontrols.com, Internet: http://www.copleycontrols.com Page 4 of 24

DIMENSIONS

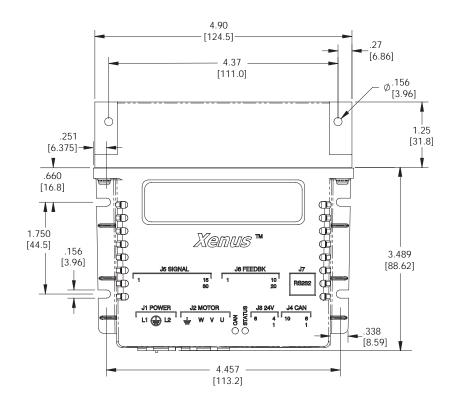



Notes

- 1. Dimensions shown in inches [mm].
- 2. Use external tooth lockwashers between mounting screw head and drive chassis for safety and CE compliance. Recommended screws are #6-32 (M3.5) torqued to 8~10 lb·in (0.79~1.02 N·m).

Weights:

Drive: 0.67 lb (0.30 kg) Heatsink: 0.56 lb (0.25 kg)

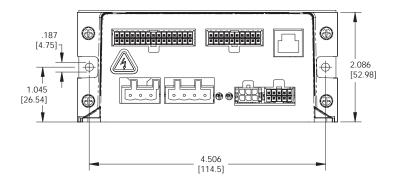

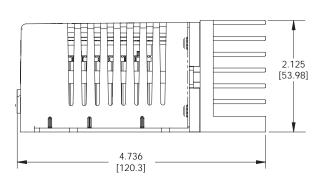

Fax: 781-828-6547

Page 5 of 24

RUGGEDIZED DIGITAL SERVO DRIVE FOR BRUSHLESS/BRUSH MOTORS R11 (E

COMMUNICATIONS

CME 2 SOFTWARE

 
Drive setup is fast and easy using *CME 2* software. All of the operations needed to configure the drive are accessible through this powerful and intuitive program. Auto-phasing of brushless motor Hall sensors and phase wires eliminates "wire and try". Connections are made once and *CME 2* does the rest thereafter. Encoder wire swapping to establish the direction of positive motion is eliminated.

Motor data can be saved as .ccm files. Drive data is saved as .ccx files that contain all drive settings plus motor data. This eases system management as files can be cross-referenced to drives. Once a drive configuration has been completed systems can be replicated easily with the same setup and performance.

When operating as a stand-alone drive that takes command inputs from an external controller, *CME 2* is used for configuration. When operated as a CAN node, *CME 2* is used for programming before and after installation in a CAN network. *Xenus R11* can also be controlled via *CME 2* while it is in place as a CAN node. During this process, drive operation as a CAN node is suspended. When adjustments are complete, *CME 2* relinquishes control of the drive and returns it to the CAN node state.

RS-232

Xenus R11 is DTE device configured via a three-wire, full-duplex RS-232 port operating from 9,600 to 115,200 Baud, with 8 data-bits, no parity, and one stop-bit. The RS-232 specification makes no allowance for more than two devices on a serial link. But, multiple Xenus R11 drives can communicate over a single RS-232 port by daisy-chaining a master drive to other drives using CAN cables. In the CAN protocol, address 0 is reserved for the CAN master and thereafter all other nodes on a CAN network must have unique, non-zero addresses. When the Xenus R11 CAN address is set to 0, it acts as a CAN master, converting the RS-232 data into CAN messages and passing it along to the other drives which act as CAN nodes, each having a unique non-zero CAN address.



CAN

Xenus R11 uses the CAN physical layer signals CANH, CANL, and GND for connection, and CANopen protocol for communication. The default address is 0 which is produced by [IN5~8] programmed to pull-down to ground, and a flash address of 0. Before installing the drive in a CAN system, it must be assigned a non-zero CAN address. A maximum of 127 CAN nodes are allowed on a single CAN bus. For installations with sixteen or more CAN nodes on a network CME 2 can be used to configure Xenus R11 to use a combination of digital inputs and programmed offset in flash memory to configure the drive with a CAN node address.

ASCII COMMUNICATIONS

The Copley ASCII Interface is a set of ASCII format commands that can be used to operate and monitor Copley Controls Accelnet, Stepnet, and Xenus series amplifiers over an RS-232 serial connection. For instance, after basic amplifier configuration values have been programmed using CME 2, a control program can use the ASCII Interface to:

- Enable the amplifier in Programmed Position mode.
- · Home the axis.
- Issue a series of move commands while monitoring position, velocity, and other run-time variables.


Additional information can be found in the ASCII Programmers Guide on the Copley website:

 $http://www.copleycontrols.com/motion/downloads/pdf/ASCII_ProgrammersGuide.pdf$

RS-422 (OPTIONAL)


The drive is configured for full-duplex operation as a RS-422 slave. Because RS-422 allows only one driver per signal-pair, it is possible to have other RS-422 receive-only nodes connected to the cable from the Master's transmit port. The data protocol is the same as that of the RS-232 port. The diagram below shows connections using a wiring adapter from QVS, model CC436 to convert the modular cable for the drive to a Dsub-9M connector. The RS-422 signals are shown sourced from a model 422PP9R RS-232 to RS-422 converter from B&B Electronics.

RS-422 CONNECTIONS

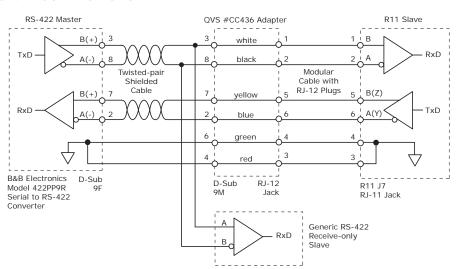

RS-422 ADAPTER (USER SUPPLIED)

This shows the connections to make using a QVS CC436 adapter. This comes with the connections to the RJ-12 already made and the pins for the D-sub uncommitted. Insert these into the D-sub as shown.

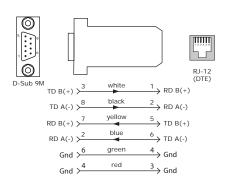

Copley Controls, 20 Dan Road, Canton, MA 02021, USA Tel: 781-828-8090
Tech Support: E-mail: sales@copleycontrols.com, Internet: http://www.copleycontrols.com

Fax: 781-828-6547 Page 6 of 24



RUGGEDIZED DIGITAL SERVO DRIVE FOR BRUSHLESS/BRUSH MOTORS

R11 Roll

DRIVE STATUS LED

A single bi-color LED gives the state of the drive by changing color, and either blinking or remaining solid. The possible color and blink combinations are:

• Green/Solid: Drive OK and enabled. Will run in response to reference inputs or CANopen commands.


• Green/Slow-Blinking: Drive OK but NOT-enabled. Will run when enabled.

• Green/Fast-Blinking: Positive or Negative limit switch active. Drive will only move in direction not inhibited by limit switch.

Red/Solid: Transient fault condition. Drive will resume operation when fault is removed.

Red/Blinking: Latching fault. Operation will not resume until drive is Reset

CAN STATUS LED

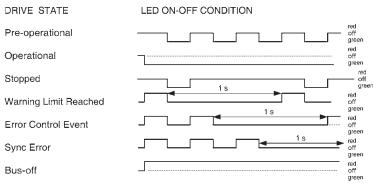

Note: Red & green led on-times do not overlap.

LED color may be red, green, off, or flashing of either color.

Drive Fault conditions:

 
- Over or under-voltage
- Motor over-temperature
- Encoder +5 Vdc fault
- Short-circuits from output to output
- · Short-circuits from output to ground
- Internal short circuits
- Drive over-temperature

Faults are programmable to be either transient or latching

COMMAND INPUTS

ANALOG TORQUE, VELOCITY, POSITION


A single ± 10 Vdc differential input connects to controllers that use PID or similar compensators, and output a current or velocity command to the drive. Drive output current or velocity vs. reference input voltage is programmable. In position-mode, the analog command is converted to a digital position reference based on a programmable ratio of encoder counts vs. input volts. When this is greater than the deadband, which is programmable down to 0 V, it is passed through velocity, acceleration, and deceleration limiters after which it becomes the input to the position loop.




DIGITAL TORQUE, VELOCITY

Digital torque or velocity commands can be in either single-ended or differential format. Single-ended signals should be sourced from devices with active pull-up and pull-down to take advantage of the high-speed inputs. Differential inputs have 121 Ω line-terminators.

 
SINGLE-ENDED PWM & DIRECTION




DIFFERENTIAL PWM & DIRECTION

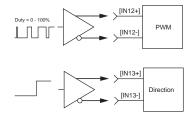

SINGLE-ENDED 50% PWM

 

DIFFERENTIAL 50% PWM

 


Fax: 781-828-6547

COMMAND INPUTS (CONT'D)


DIGITAL POSITION

Digital position commands can be in either single-ended or differential format. Single-ended signals should be sourced from devices with active pull-up and pull-down to take advantage of the high-speed inputs. Differential inputs have 121 Ω line-terminators.

 
SINGLE-ENDED PULSE & DIRECTION




DIFFERENTIAL PULSE & DIRECTION

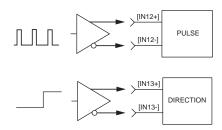


SINGLE-ENDED CU/CD

 


DIFFERENTIAL CU/CD

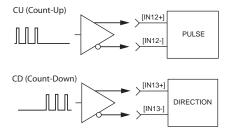

QUAD A/B ENCODER SINGLE-ENDED

 

QUAD A/B ENCODER DIFFERENTIAL

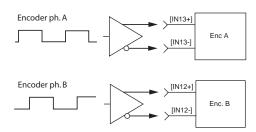

Fax: 781-828-6547

Page 8 of 24


MULTI-MODE ENCODER PORT

This port consists of three differential input/output channels that take their functions from the Basic Setup of the drive.

On drives with quad A/B encoder feedback, the port works as an output buffering the signals from the encoder. With resolver or sin/cos encoder versions, the feedback is converted to quad A/B signals with programmable resolution. These signals can then be fed back to an external motion controller that closes the position or velocity loops. As an input, the port can take quad A/B signals to produce a dual-loop position control system or use the signals as master-encoder feedback in camming mode. In addition, the port can take stepper command signals (CU/CD or Pulse/Direction) in differential format.


AS BUFFERED OUTPUTS FROM A DIGITAL QUADRATURE FEEDBACK ENCODER

When using a digital quadrature feedback encoder, the A/B/X signals drive the multi-mode port output buffers directly. This is useful in systems that use external controllers that also need the motor feedback encoder signals because these now come from J7, the Control connector. In addition to eliminating "Y" cabling where the motor feedback cable has to split to connect to both controller and motor, the buffered outputs reduce loading on the feedback cable that could occur if the motor encoder had to drive two differential inputs in parallel, each with it's own 121 ohm terminating resistor.

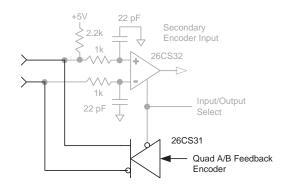

AS EMULATED QUAD A/B/X ENCODER OUTPUTS FROM AN ANALOG SIN/COS FEEDBACK ENCODER OR RESOLVER

Analog sin/cos or resolver signals are interpolated in the drive with programmable resolution. The incremental position data is then converted back into digital quadrature format which drives the multi-mode port output buffers. Some analog encoders also produce a digital index pulse which is connected directly to the port's output buffer. The result is digital quadrature A/B/X signals that can be used as feedback to an external control system. Resolver signals are interpolated with programmable resolution up to 14-bits per revolution (single-speed resolver).

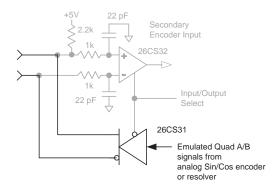


AS A MASTER OR CAMMING ENCODER INPUT FROM A DIGITAL QUADRATURE ENCODER

When operating in position mode the multi-mode port can accept digital command signals from external encoders. These can be used to drive cam tables, or as master-encoder signals when operating in a master/slave configuration.

AS DIGITAL COMMAND INPUTS IN PULSE/DIRECTION, PULSE-UP/PULSE-DOWN, OR DIGITAL QUADRATURE ENCODER FORMAT

The multi-mode port can also be used when digital command signals are in a differential format. These are the signals that typically go to [IN9] and [IN10] when they are single-ended. But, at higher frequencies these are likely to be differential signals in which case the multi-mode port can be used.

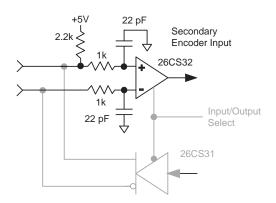

Copley Controls, 20 Dan Road, Canton, MA 02021, USA Tel: 781-828-8090
Tech Support: E-mail: sales@copleycontrols.com, Internet: http://www.copleycontrols.com

Page 9 of 24

Fax: 781-828-6547


DIGITAL INPUTS


There are fourteen digital inputs, thirteen of which have programmable functions. Input [IN1] is dedicated to the drive Enable function. This is done to prevent accidental programming of the input in such a way that the controller could not shut it down.


Two types of RC filters are used: GP (general purpose) and HS (high speed). Input functions such as Pulse/Dir, CW/CCW, Quad A/B are wired to inputs having the HS filters, and inputs with the GP filters are used for general purpose logic functions, limit switches, and the motor temperature sensor. Programmable functions of the digital inputs are:

- Amplifier Enable
- Positive Limit switch
- Negative Limit switch
- Drive Reset
- · Motor over-temperature
- Home switch
- Motion Abort

- PWM Sync Input
- CAN address
- PWM/Polarity or PWM 50% commands for current/velocity control
- Pulse/Direction or CW/CCW stepper pulses, or quad A/B encoder signals for position control and camming
- Reference input attenuation select (zero or divide by eight)

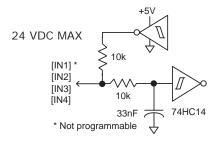

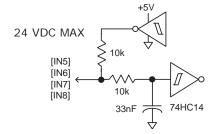

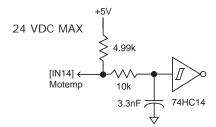

HS (HIGH SPEED) DIGITAL INPUTS


These are single-ended inputs with all the programmable functions of the GP inputs plus these additional functions on [IN9] & [IN10]:

- Position or Camming modes: Pulse/Direction, CU/CD, or A/B Quad encoder inputs
- Velocity or Current modes: PWM 50%, PWM & Direction
- PWM Svnc

HSD (HIGH SPEED DIFFERENTIAL) DIGITAL INPUTS

These are differential inputs with programmable functions.


- Pulse/Direction, CU/CD, or A/B Quad encoder inputs
- · Home switch
- Camming: Single-ended master encoder Cam-table start input

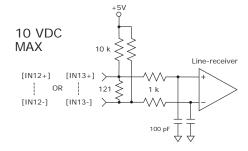

DIGITAL OUTPUTS


The digital outputs are open-drain MOSFETs with 1 k Ω pull-up resistors in series with a diode to +5 Vdc. They can sink up to 250 mAdc from external loads operating from power supplies to +30 Vdc. The output functions are programmable. The active state of the outputs is programmable to be on or off.

 When driving inductive loads such as a relay, an external fly-back diode is required. The internal diode in the output is for driving PLC inputs that are opto-isolated and connected to +24 Vdc. The diode prevents conduction from +24 Vdc through the 1 k Ω resistor to +5 Vdc in the drive. This could turn the PLC input on, giving a false indication of the drive output state.



MOTOR BRAKE OUTPUT

 This is an optically isolated output with a higher current rating for driving motor brakes. It can sink 1 Adc and has a flyback diode that is connected to the AuxHV input (+24 Vdc). Brake timing and function is programmable.




OUTPUT VOLTAGE LIMITS

The R11 rectifies the AC mains power to produce an internal DC supply (HV). The rectified mains power is stored temporarily in a capacitor. As the load power increases, energy is drawn from the capacitor, discharging it until re-charged by the next cycle of the mains. Because the capacitor is only charged for a brief time at 2X the line frequency, the voltage will decrease between these charges producing "ripple" on the DC supply. As the motor voltage increases (a combination of BEMF (Back ElectroMotive Force) and voltage-drop across the motor's resistance) it eventually hits the bottom of the ripple voltage waveform on the DC supply.


This is called "clipping" as the output voltage can no longer increase to control motor current. The graph below shows the clipping voltages for the R11 when operated at some common mains voltages over the range of output currents.

In order to avoid clipping, select a motor winding to provide some headroom between the clipping voltage and the expected terminal voltage to allow for low-line conditions on the mains, resistance changes in the motor due to heating, etc.

DC SUPPLY VOLTAGE AT LOW OUTPUT CURRENT AND POWER

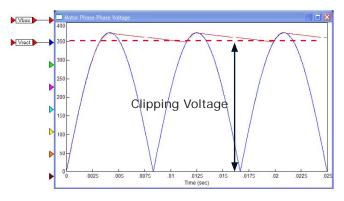

DC SUPPLY VOLTAGE AT HIGH OUTPUT CURRENT AND POWER

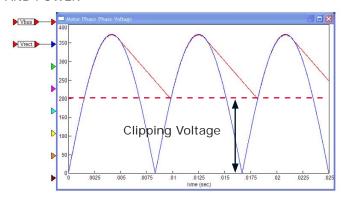

EXAMPLE

Assume 8 Adc is required to accelerate a linear motor to 2.5 m/s. Motor resistance is 12 Ω and BEMF constant is 36 V/m/s. The motor is brushless driven with sinusoidal commutation:

1) Find I*R voltage drop:

8 Adc * 12 Ω * 0.75 = 72 Vdc.

The 0.75 factor converts the line-line resistance of the motor to the effective resistance when commutating sinusoidally.


- 2) Find BEMF at 2.5 m/s: 36 V/m/s * 2.5 m/s = 90 Vdc
- 3) Find motor terminal voltage:

I*R + BEMF = 72 + 90 = 162 Vdc

4) The dotted lines on the graph to the right show the clipping voltages at 8 Adc. Operation at 240 Vac would give about 28 V of headroom. But, at 200 Vac, either the motor velocity or accelerating current would have to be reduced to avoid clipping.

Finally, note that the motor resistance will increase 29% if it heats from 25C to 100C. That would change the required terminal voltage to 183 Vdc. In general, allow $20 \sim 30\%$ headroom between motor terminal voltage demand and the clipping voltage. Using the oscilloscope in CME 2 software, the bus voltage and motor terminal voltage can be displayed for a final determination of the headroom in the working machine.

CLIPPING VOLTAGE VS. OUTPUT CURRENT

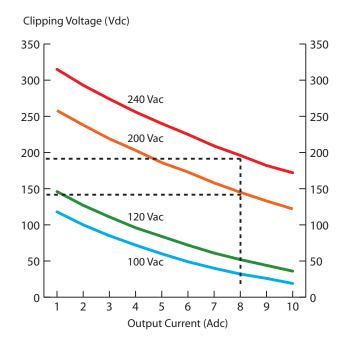

Fax: 781-828-6547

Page 11 of 24

Copley Controls, 20 Dan Road, Canton, MA 02021, USA


Tel: 781-828-8090
Tech Support: E-mail: sales@copleycontrols.com, Internet: http://www.copleycontrols.com

Fax: 781-828-6547

Page 12 of 24

QUAD A/B

DRIVE CONNECTIONS

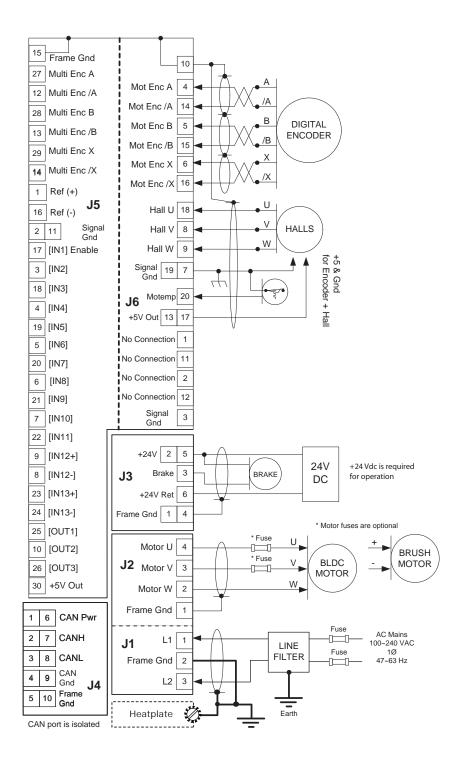

NOTES

- 1. The functions of input signals on J5-3,4,5,6,7,8-9,18,19,20,21,22,23-24, and are programmable.
- 2. The function of [IN1] on J5-17 is always Drive Enable and is not programmable. The active level of [IN1] is programmable, and resetting the drive or clearing faults with `changes on the enable input is programmable.
- 3. Pins J5-30, J6-13, and J6-17 connect to the same +5 Vdc @ 250 mAdc power source. Total current drawn from all pins cannot exceed 250 mAdc.



RUGGEDIZED DIGITAL SERVO DRIVE FOR BRUSHLESS/BRUSH MOTORS

QUAD A/B

CONNECTORS & SIGNALS

J1 Power		
Signal	Pin	
L1	1	
Frame Ground	2	
L2	3	

J1 CABLE CONNECTOR:

Euro-style 5,0 mm pluggable male terminal block:

Wago: 721-103/026-047/RN01-0000 Insert/extract lever: Wago: 231-131

J2 Motor				
Signal	Pin			
Frame Ground	1			
Motor W	2			
Motor V	3			
Motor U	4			

J2 MOTOR CABLE CONNECTOR:

Euro-style 5,0 mm pluggable male terminal block:

Wago: 721-104/026-047/RN01-0000 Insert/extract lever: Wago: 231-131

J3 Brake, 24V Power					
Signal	P	in	Signal		
Brake	3	6	24V Return		
+24Vdc	2	5	+24Vdc		
Frame Gnd	1	4	Frame Gnd		

J3 AUXHV/BRAKE CABLE CONNECTOR:

6-position poke/crimp

Housing: Molex 43025-0600 Contact: Molex 43030-0008 Crimping tool: Molex 63811-2800 Contact extractor: Molex 11-03-0043


							
ı	J4 CAN						
L	Signal Pin Signal						
	Frame Ground	5	10	Frame Ground			
ı	Signal Ground	4	9	Signal Ground			
	CANL	3	8	CANL			
	CANH	2	7	CANH			
ı	CAN Power	1	6	CAN Power			

CAN circuits are optically-isolated from drive circuits

J4 CAN CABLE CONNECTOR:

10-position poke/crimp

Housing: Samtec IPD1-5-D Contacts(20): Samtec CC79L-2024-01-F Crimping tool: Samtec CAT-HT-179-2024-11 Contact Extractor: Samtec CAT-EX-179-01

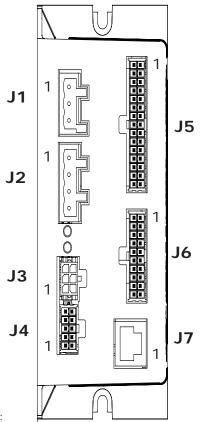

J5 Signal				
Signal	Pin		Signal	
Analog Ref (-)	16	1	Analog Ref (+)	
Enable Input [IN1]	17	2	Signal Ground	
GP Input [IN3]	18	3	GP Input [IN2]	
GP Input [IN5]	19	4	GP Input [IN4]	
GP Input [IN7]	20	5	GP Input [IN6]	
GP Input [IN9]	21	6	GP Input [IN8]	
GP Input [IN11]	22	7	GP Input [IN10]	
HS Input [IN13+]	23	8	HS Input [IN12-]	
HS Input [IN13-]	24	9	HS Input [IN12+]	
GP Output [OUT1]	25	10	GP Output [OUT2]	
GP Output [OUT3]	26	11	Signal Ground	
Multi-Mode Encoder A	27	12	Multi-Mode Encoder /A	
Multi-Mode Encoder B	28	13	Multi-Mode Encoder /B	
Multi-Mode Encoder X	29	14	Multi-Mode Encoder /X	
+5 Vdc Output	30	15	Frame Ground	

J5 CONTROL CABLE CONNECTOR:

30-position poke/crimp Housing: Samtec IPD1-15-D

Contacts(30): Samtec CC79L-2024-01-F Crimping tool: Samtec CAT-HT-179-2024-11 Contact Extractor: Samtec CAT-EX-179-01

J6 Feedback				
Signal	P	in	Signal	
No Connection	11	1	No Connection	
No Connection	12	2	No Connection	
+5 Vdc Output	13	3	Signal Ground	
Encoder /A	14	4	Encoder A	
Encoder /B	15	5	Encoder B	
Encoder /X	16	6	Encoder X	
+5 Vdc Output	17	7	Signal Ground	
Hall U	18	8	Hall V	
Signal Ground	19	9	Hall W	
Motemp [IN14]	20	10	Frame Ground	

J6 FEEDBACK CABLE CONNECTOR:

20-position poke/crimp

Housing: Samtec IPD1-10-D

Contacts(30): Samtec CC79L-2024-01-F Crimping tool: Samtec CAT-HT-179-2024-11 Contact Extractor: Samtec CAT-EX-179-01

Fax: 781-828-6547

Page 13 of 24

J7 RS-232 CABLE CONNECTOR:

RJ-11 Modular type 6-position, 4 used

J7 RS-232

No Connect

TxD Output

Signal Ground

Signal Ground

RxD Input

No Connect

Signal

Pin

6

5

4

3

2


1

SIN/COS (-S OPTION)

Fax: 781-828-6547

Page 14 of 24

DRIVE CONNECTIONS

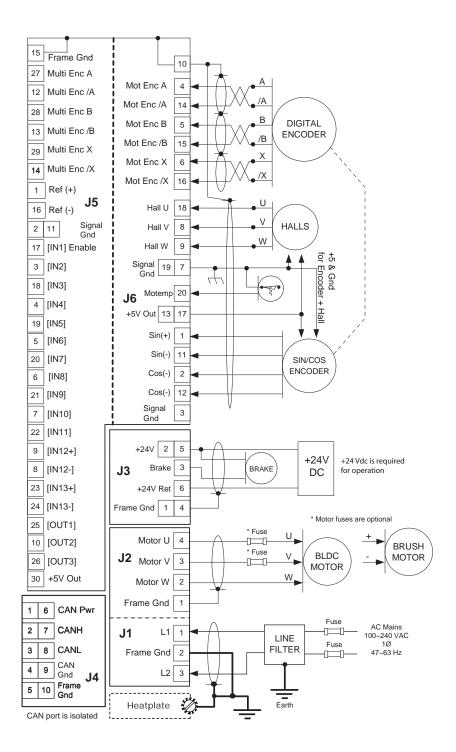

Notes

- 1. The functions of input signals on J5-3,4,5,6,7,8-9,18,19,20,21,22,23-24, and are programmable.
- The function of [IN1] on J5-17 is always Drive Enable and is not programmable.
 The active level of [IN1] is programmable, and resetting the drive or clearing faults with changes on the enable input is programmable.
- 3. Pins J5-30, J6-13, and J6-17 connect to the same +5 Vdc @ 250 mAdc power source. Total current drawn from all pins cannot exceed 250 mAdc.



J1

J₂

J3

J4

1

1

RUGGEDIZED DIGITAL SERVO DRIVE FOR BRUSHLESS/BRUSH MOTORS

R11 CE

SIN/COS (-S OPTION)

CONNECTORS & SIGNALS

J1 Power		
Signal	Pin	
L1	1	
Frame Ground	2	
L2	3	

J1 CABLE CONNECTOR:

Euro-style 5,0 mm pluggable male terminal block:

Wago: 721-103/026-047/RN01-0000 Insert/extract lever: Wago: 231-131

J2 Motor			
Signal	Pin		
Frame Ground	1		
Motor W	2		
Motor V	3		
Motor U	4		

J2 MOTOR CABLE CONNECTOR:

Euro-style 5,0 mm pluggable male terminal block:

Wago: 721-104/026-047/RN01-0000 Insert/extract lever: Wago: 231-131

J3 Brake, 24V Power					
Signal	P	in	Signal		
Brake	3	6	24V Return		
+24Vdc	2	5	+24Vdc		
Frame Gnd	1	4	Frame Gnd		

J3 AUXHV/BRAKE CABLE CONNECTOR:

6-position poke/crimp

Housing: Molex 43025-0600 Contact: Molex 43030-0008 Crimping tool: Molex 63811-2800 Contact extractor: Molex 11-03-0043

г.						
ı	J4 CAN					
ı	Signal	Signal				
ı	Frame Ground	5	10	Frame Ground		
ı	Signal Ground	4	9	Signal Ground		
	CANL	3	8	CANL		
	CANH	2	7	CANH		
	CAN Power	1	6	CAN Power		

CAN circuits are optically-isolated from drive circuits

J4 CAN CABLE CONNECTOR:

10-position poke/crimp Housing: Samtec IPD1-5-D

Contacts(20): Samtec CC79L-2024-01-F Crimping tool: Samtec CAT-HT-179-2024-11 Contact Extractor: Samtec CAT-EX-179-01

J7 RS-232							
Pin	Signal						
6	No Connect						
5	TxD Output						
4	Signal Ground						
3	Signal Ground						
2	RxD Input						
1	No Connect						

J5

J6

J7

J5 Signal					
Signal	Pin		Signal		
Analog Ref (-)	16	1	Analog Ref (+)		
Enable Input [IN1]	17	2	Signal Ground		
GP Input [IN3]	18	3	GP Input [IN2]		
GP Input [IN5]	19	4	GP Input [IN4]		
GP Input [IN7]	20	5	GP Input [IN6]		
GP Input [IN9]	21 6		GP Input [IN8]		
GP Input [IN11]	22 7		GP Input [IN10]		
HS Input [IN13+]	23 8		HS Input [IN12-]		
HS Input [IN13-]	24	9	HS Input [IN12+]		
GP Output [OUT1]	25	10	GP Output [OUT2]		
GP Output [OUT3]	26	11	Signal Ground		
Multi-Mode Encoder A	27	12	Multi-Mode Encoder /A		
Multi-Mode Encoder B	28	13	Multi-Mode Encoder /B		
Multi-Mode Encoder X	29 14		Multi-Mode Encoder /X		
+5 Vdc Output	30	15	Frame Ground		

J5 CONTROL CABLE CONNECTOR:

30-position poke/crimp Housing: Samtec IPD1-15-D

Contacts(30): Samtec CC79L-2024-01-F Crimping tool: Samtec CAT-HT-179-2024-11 Contact Extractor: Samtec CAT-EX-179-01

J6 Feedback							
Signal	Pin		Signal				
Sin(-)	11	1	Sin(+)				
Cos(-)	12	2	Cos(+)				
+5 Vdc Output	13	3	Signal Ground				
Encoder /A	14	4	Encoder A				
Encoder /B	15 5		Encoder B				
Encoder /X	16 6		Encoder X				
+5 Vdc Output	17	7	Signal Ground				
Hall U	18	8	Hall V				
Signal Ground	19	9	Hall W				
Motemp [IN14]	20	10	Frame Ground				

J6 FEEDBACK CABLE CONNECTOR:

20-position poke/crimp

Housing: Samtec IPD1-10-D

Contacts(30): Samtec CC79L-2024-01-F Crimping tool: Samtec CAT-HT-179-2024-11 Contact Extractor: Samtec CAT-EX-179-01

Fax: 781-828-6547

Page 15 of 24


J7 RS-232 CABLE CONNECTOR:

RJ-11 Modular type 6-position, 4 used

Fax: 781-828-6547

Page 16 of 24

DRIVE CONNECTIONS

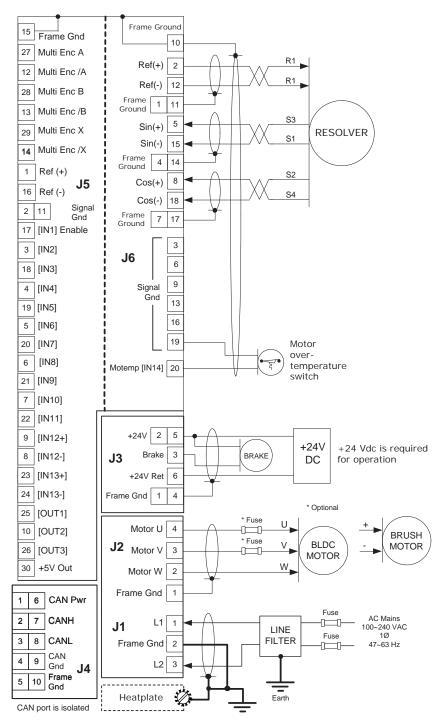

NOTES

- 1. The functions of input signals on J5-3,4,5,6,7,8-9,18,19,20,21,22,23-24, and are programmable.
- The function of [IN1] on J5-17 is always Drive Enable and is not programmable.
 The active level of [IN1] is programmable, and resetting the drive or clearing faults with changes on the enable input is programmable.



J2

J3

J4

RUGGEDIZED DIGITAL SERVO DRIVE FOR BRUSHLESS/BRUSH MOTORS R11 (E

RESOLVER (-R OPTION)

CONNECTORS & SIGNALS

J1 Power					
Signal	Pin				
L1	1				
Frame Ground	2				
L2	3				

J1 Cable Connector:

Euro-style 5,0 mm pluggable male

terminal block:

Wago: 721-103/026-047/RN01-0000 Insert/extract lever: Wago: 231-131

J2 Motor					
Signal	Pin				
Frame Ground	1				
Motor W	2				
Motor V	3				
Motor U	4				

J2 Motor Cable Connector:

Euro-style 5,0 mm pluggable male terminal block:

Wago: 721-104/026-047/RN01-0000 Insert/extract lever: Wago: 231-131

J3 Brake, 24V Power						
Signal	Р	in	Signal			
Brake	3 6		24V Return			
+24Vdc	2 5		+24Vdc			
Frame Gnd	1	4	Frame Gnd			

J3 AuxHV/Brake Cable Connector:

6-position poke/crimp

Housing: Molex 43025-0600 Contact: Molex 43030-0008 Crimping tool: Molex 63811-2800 Contact extractor: Molex 11-03-0043

١.							
	J4 CAN						
	Signal	Pi	in	Signal			
	Frame Ground	5	10	Frame Ground			
	Signal Ground	4	9	Signal Ground			
	CANL	3	8	CANL			
	CANH	2	7	CANH			
	CAN Power	1	6	CAN Power			

CAN circuits are optically-isolated from drive circuits

J4 CAN Cable Connector:

10-position poke/crimp Housing: Samtec IPD1-5-D

Contacts(20): Samtec CC79L-2024-01-F Crimping tool: Samtec CAT-HT-179-2024-11 Contact Extractor: Samtec CAT-EX-179-01

	J7 RS-232						
Pin	Signal						
6	No Connect						
5	TxD Output						
4	Signal Ground						
3	Signal Ground						
2	RxD Input						
1	No Connect						

J5

J6

J7

J5 Signal					
Signal	Pin		Signal		
Analog Ref (-)	16	1	Analog Ref (+)		
Enable Input [IN1]	17	2	Signal Ground		
GP Input [IN3]	18	3	GP Input [IN2]		
GP Input [IN5]	19	4	GP Input [IN4]		
GP Input [IN7]	20	5	GP Input [IN6]		
GP Input [IN9]	21 6		GP Input [IN8]		
GP Input [IN11]	22 7		GP Input [IN10]		
HS Input [IN13+]	23 8		HS Input [IN12-]		
HS Input [IN13-]	24	9	HS Input [IN12+]		
GP Output [OUT1]	25	10	GP Output [OUT2]		
GP Output [OUT3]	26	11	Signal Ground		
Multi-Mode Encoder A	27 12		Multi-Mode Encoder /A		
Multi-Mode Encoder B	28 13		Multi-Mode Encoder /B		
Multi-Mode Encoder X	29 14		Multi-Mode Encoder /X		
+5 Vdc Output	30	15	Frame Ground		

J5 Control Cable Connector:

30-position poke/crimp

Housing: Samtec IPD1-15-D

Contacts(30): Samtec CC79L-2024-01-F Crimping tool: Samtec CAT-HT-179-2024-11 Contact Extractor: Samtec CAT-EX-179-01

J6 Feedback						
Signal	Pin		Signal			
Frame Ground	11	1	Frame Ground			
Output R2 Ref(-)	12	2	Ref(+) Output R1			
Signal Ground	13 3		Signal Ground			
Frame Ground	14 4		Frame Ground			
Input S1 Sin(-)	15 5		Sin(+) Input S3			
Signal Ground	16 6		Signal Ground			
Frame Ground	17 7		Frame Ground			
Input S4 Cos(-)	18 8		Cos(+) Input S2			
Signal Ground	19 9		Signal Ground			
Motemp [IN14]	20	10	Frame Ground			

J6 Feedback Cable Connector:

20-position poke/crimp

Housing: Samtec IPD1-10-D

Contacts(30): Samtec CC79L-2024-01-F Crimping tool: Samtec CAT-HT-179-2024-11 Contact Extractor: Samtec CAT-EX-179-01


J7 RS-232 Cable Connector:

 
RJ-11 Modular type 6-position, 4 used

CABLING FOR COMMUNICATIONS

RS-232


The Serial Cable Kit (SER-CK) is a complete cable assembly that connects a computer serial port (COM1, COM2) to the drive. The adapter plugs into a PC's COMM port that supports RS-232 and accepts a modular cable that connects the adapter to the drive's J7.

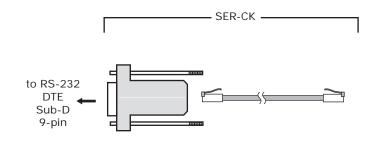




Note: Computers & drives are both DTE devices. RxD (Received Data) signals are inputs. TxD (Transmitted Data) signals are outputs.

CANOPEN

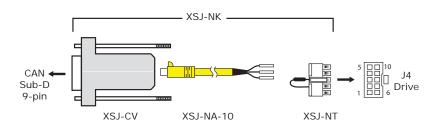

The connector kit for CAN networking (R11-NK) provides the parts to connect to a single drive. To use it, the flying leads must be poked into the R11-NT (see table for pins). The R11-NT comprises the a plug for drive J4 and also a 121 Ω resistor for the CAN bus terminator. The flying leads are left unattached so that the kit can also be used with multiple drives. When this is done, the CAN cables are daisy-chained from drive to drive and the R11-NT is only used on the last drive in the chain. The cables used for the daisy-chain are the R11-NC-10 or R11-NC-01 which have a J4 connector attached to a cable with flying leads and crimps.

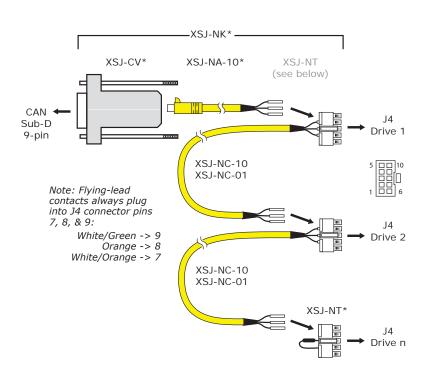

R11-NK Connections						
D-Sub 9F	Wire Color					
CAN_GND 7		White/Green				
CAN_L	3	Orange				
CAN_H	2	White/Orange				

Note: D-Sub 9F connections comply with CAN CiA DR-303-1

R11-NC-01(-10) Connections						
Wire Color	Drive J4 Cable Connector					
	Frame Gnd 5 10 Frame Gnd					
White Green	CAN_GND	4	9	CAN_GND		
Orange	CAN_L	3	8	CAN_L		
White/Orange CAN_H		2	7	CAN_H		
	CAN_V+	1	6	CAN_V+		

R11-NT Connections						
Drive J4 Cable Connector						
Frame Gnd	5	10	Frame Gnd			
CAN_GND	4	9	CAN_GND			
121 Ω Terminator	3	8	CAN_L			
Connects	2	7	CAN_H			
CAN_V+	1	6	CAN_V+			

Fax: 781-828-6547


Page 18 of 24

CABLING FOR COMMUNICATIONS

MULTI-DROP RS-232

The RS-232 specification does not support multi-drop (multiple device) connections as does RS-485 or CAN. However, it is possible to address multiple CAN-enabled Copley drives from a single RS-232 port. First, an RS-232 connection is made between the computer and drive #1 which must be given a CAN address of 0. Under normal CAN operation, this address is not allowed for CAN nodes. But, in this case, drive #1 will act as a CAN master and so address 0 is allowed. Next, CAN connections are made between drive #1, drive #2, and so on in daisy-chain fashion to the last drive. The first and last drives in the chain must have the 121 Ω resistor between the CAN_H and CAN_L signals to act as a line-terminator. Finally, the CAN addresses of the drives downstream from drive #1 are set to unique numbers, none of which can be 0.

When ASCII data is exchanged over the serial port, the commands are now preceded with the node address of the drive. Drive #1 converts the data into CAN data which is then sent to all of the drives in the chain. It now appears as though all drives in the chain are connected to the single RS-232 port in the computer and for that reason we refer it as multi-drop RS-232.

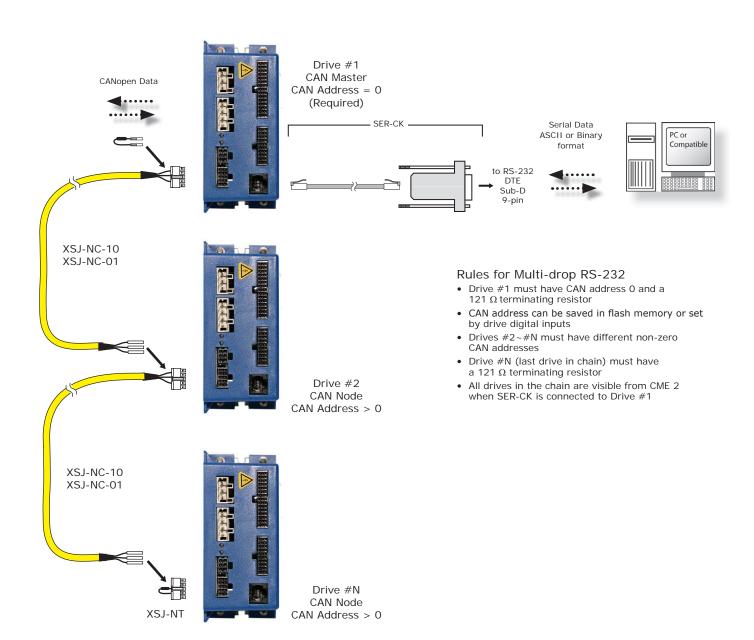


Copley Controls, 20 Dan Road, Canton, MA 02021, USA Tel: 781-828-8090 Tech Support: E-mail: sales@copleycontrols.com, Internet: http://www.copleycontrols.com Fax: 781-828-6547

Page 19 of 24

STAND-ALONE OPERATION

Drive takes digital position commands in Pulse/Direction, or CW/CCW format from an external controller or quadrature encoder signals from a master-encoder for electronic gearing. Velocity or torque control can be from ± 10 Vdc or digital PWM signals. CME 2 used for setup and configuration.

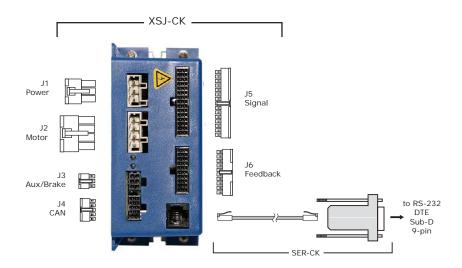

- 1. The XSJ-CK kit contains connector shells and crimp-contacts for J3~J6. 2. Crimp-contacts are not shown
- 3. The SER-CK Serial Cable Kit is not part of the XSJ-CK kit.

SINGLE-DRIVE SETUP FOR CANOPEN CONTROL

Drive operates as a CAN node. All commands are passed on the CAN bus. CME 2 is used for setup and configuration before installation as CAN node.


Rules for Single-Drive CANopen Operation

- Drive CAN address must be > 0
- CAN address can be saved in flash memory or set by drive digital inputs

Fax: 781-828-6547

Page 20 of 24

• Drive must have a 121 Ω terminating resistor

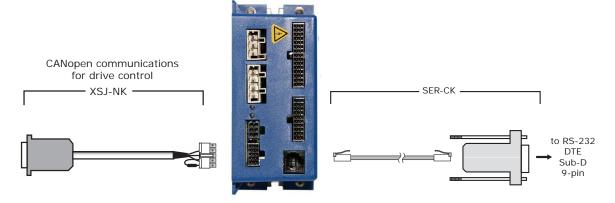


Fax: 781-828-6547

Page 21 of 24

MULTIPLE-DRIVE SETUP FOR CANOPEN CONTROL

Rules for Multiple-Drive CANopen Operation

- All drives must have CAN addresses > 0 and no drives can have the same CAN address
- CAN address can be saved in flash memory or set by drive digital inputs
- Drive #N (last drive in chain) must have a 121 Ω terminating resistor
- CME 2 can only see the drive to which the SER-CK serial cable is connected
- The CAN Master must have a 121 Ω terminating resistor

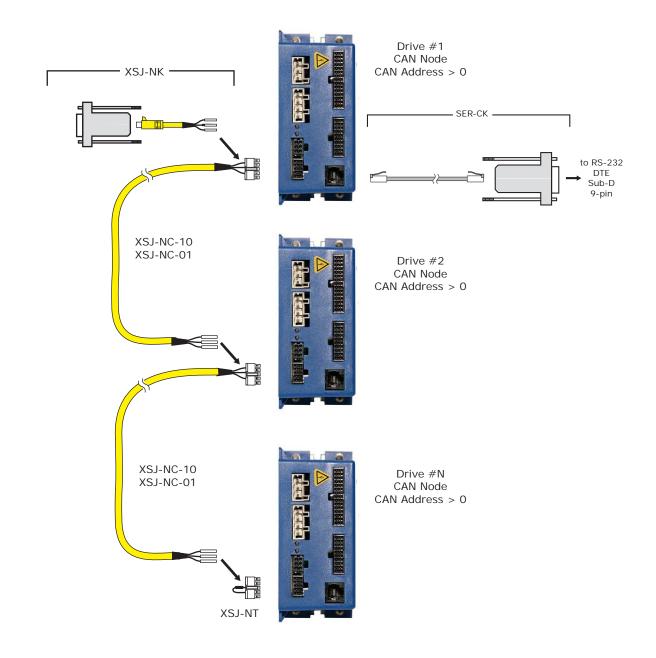

MOUNTING AND COOLING

The ability of the drive to output current at a particular ambient temperature is greatly affected by the way it is mounted and the way that air circulates across the heatplate which is the primary path for heat flow between the internal transistors and the environment. Thermal resistance is a measure of the temperature difference between the transistors and the environment per Watt of power dissipation. The data on this page show the thermal resistance under different mounting and cooling configurations.

INFINITE HEATSINK

The mounting surface is large enough so that its temperature does not change when absorbing the heat from the drive. Thermal grease is applied to the drive heatplate.



Thermal Resistance 0.23 °C-W

FAN COOLED HEATSINK

A fan is mounted close to the heatsink and air velocity is ~ 400 LFM (~ 2 m/s).



Thermal Resistance 0.75 °C/W

FAN COOLED, NO HEATSINK

Forced-air at 400 LFM (Linear Feet/Minute) directed at the heatplate.



Thermal Resistance 2.6 °C/W

HEATSINK, CONVECTION COOLED

A heatsink is mounted to the heatplate and is exposed for convection cooling but is not fan cooled or in contact with a heat sinking surface.



Thermal Resistance 3.7 °C/W

NO HEATSINK OR FAN, CONVECTION COOLED

The heatplate is exposed for convection cooling but is not fan cooled or in contact with a heat sinking surface.



Thermal Resistance: Flat: 6.5 °C/W On edge: 6.0 °C/S

Flat mounting

Copley Controls, 20 Dan Road, Canton, MA 02021, USA Tel: 781-828-8090 Fax: 781-828-6547


Tech Support: E-mail: sales@copleycontrols.com, Internet: http://www.copleycontrols.com Page 22 of 24

MAXIMUM AMBIENT TEMPERATURE VS. OUTPUT CURRENT, MOUNTING, AND COOLING

The graphs below show the maximum ambient operating temperature for the drive vs. output current for the Xenus R11 models at 120 and 240 Vac mains voltages and under different mounting and cooling conditions.

Model: R11-230-02, R11-230-06, R11-230-10

Mains: 120 Vac

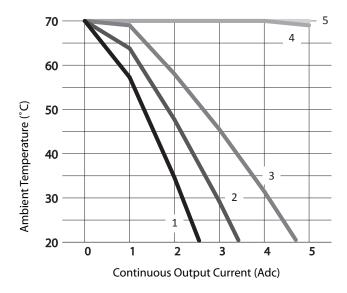

1 = No HS or fan, convection

2 = With HS, convection


3 = No HS, with fan

4 = With HS, with fan

5 = Infinite heatsink

Model: R11-230-02, R11-230-06, R11-230-10

Mains: 240 Vac

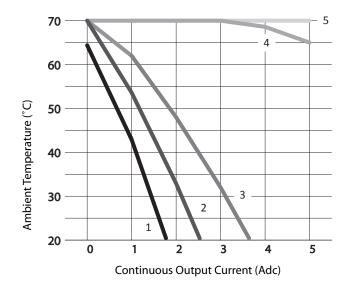

1 = No HS or fan, convection

2 = With HS, convection

3 = No HS, with fan

4 = With HS, with fan

5 = Infinite heatsink

Copley Controls, 20 Dan Road, Canton, MA 02021, USA Tel: 781-828-8090 Tech Support: E-mail: sales@copleycontrols.com, Internet: http://www.copleycontrols.com

Fax: 781-828-6547 Page 23 of 24



RUGGEDIZED DIGITAL SERVO DRIVE FOR BRUSHLESS/BRUSH MOTORS R 11 RoHS

MASTER ORDERING GUIDE

R11-230-02	Xenus R11 Servo drive 1/2 Adc
R11-230-06	Xenus R11 Servo drive 3/6 Adc
R11-230-10	Xenus R11 Servo drive 5/10 Adc

Add -S to model number for Sin/Cos version Add -R to model number for Resolver version Contact factory for RS-422 option

ACCESSORIES

	QTY	REF	DESCRIPTION	MANUFACTURER PART NO.	
Drive Connector Kit R11-CK	1	J1	Plug, 3 position, 5.0mm, female	Wago: 51117974 or 721-103/026-047/RN01-0000	
	1	J2	Plug, 4 position, 5.0 mm, female	Wago: 51118008 or 721-104/026-047/RN01-0000	
	1	J3	Connector housing, 6 position	Molex: Micro-Fit 43025-0600	
	1	J4	Connector housing, 10 position	Samtec: Mini-Mate IPD1-05-D	
	1	J5	Connector housing, 30 position	Samtec: Mini-Mate IPD1-15-D	
	1	J6	Connector housing, 20 position	Samtec: Mini-Mate IPD1-10-D	
	66	J4,J5,J6	Contact, female, for AWG 24~20 wire	Samtec: Mini-Mate CC79L-2024-01-F	
	8	J3	Contact, female, for AWG 24~20 wire	Molex: Micro-Fit 43030-0008	
	2	J1,J2	Wire insertion/extraction tool	Wago: 231-131	
Connector	1		D-Sub 9 position female to RJ-45 female (R11-CV)		
	1	J1	RJ-45 plug to flying leads with crimps (R11-NA-10), 10 ft (3 m)		
R11-NK 1			CANopen terminator (R11-NT) (J1 plug with resistor)		
R11-NA-10		J4	J4 CANopen cable assembly: RJ-45 plug to flying leads with crimps, 10 ft (3 m)		
R11-NC-10 J4 CANopen cable assembly: drive J4 pl		CANopen cable assembly: drive J4 plug to	o flying leads with crimps , 10 ft (3 m)		
R11-NC-01		J4	CANopen cable assembly: drive J4 plug to flying leads with crimps , 1 ft (0.3 m)		
R11-NT		J4	CANopen network teminator (J4 plug with resistor)		
SER-CK		J7	Serial Cable Kit: D-Sub 9F to RJ-11 adapter + 6 ft (1.8 m) modular cable for drive J7		
R11-CV		J4	Cable adapter: D-Sub 9F to RJ-45 female, for CAN cables		
CME 2			CME 2™ CD (CME 2)		
Heatsink Kit R11-HK		1	Heatsink		
		1	Thermal Material		
		A/R	Hardware		

ORDERING EXAMPLE

Example: Order 1 R11-230-06 drive with resolver feedback, heatsink, and associated components:

Qty Item Remarks

1 R11-230-06-R Xenus R11 servo drive with resolver feedback

Note: Specifications subject to change without notice

Fax: 781-828-6547

Page 24 of 24

Rev 5.02_we 01/18/2012

Copley Controls, 20 Dan Road, Canton, MA 02021, USA Tel: 781-828-8090
Tech Support: E-mail: sales@copleycontrols.com, Internet: http://www.copleycontrols.com