

Dishwasher

1. Load dishwasher.
2. Press the button on the left dispenser to open and load with a dishwashing pod, found under the kitchen sink.
3. Close dispenser lid.
4. With the dishwasher ajar, press the on/off button to turn on. All lights will briefly illuminate.
5. Press the select button to choose desired cycle. Once selected, close dishwasher all the way. Selected cycle light will flash then dishwasher will start.

