

Thermostat



To temporarily change the temperature, Press ▲ or ▼ to immediately adjust the temperature. Be sure the system is set appropriately to “Heat” or “Cool”. In Auto, the thermostat automatically selects heating or cooling depending on the indoor temperature.

Fan Settings:

- Auto: Fan runs only when heating or cooling system is on.
- On: Fan runs continuously.

After turning the system off then back on, the compressor waits 5 minutes before restarting. During this time, the display will flash the message “Cool On.”

To restore default settings:

1. Press SET CLOCK/DAY/SCHEDULE
2. Press SET SCHEDULE
3. Press DONE and NEXT at the same time for 4 seconds

