


## Range

**Cooktop:** To use cooktop, turn the burner control knob to desired level of heat.

**Oven:** To control the oven cooking function, use the far left “function” knob. Oven temperature is controlled with the temperature knob on the far right. To turn off oven, turn the function and temperature knobs to “off”.

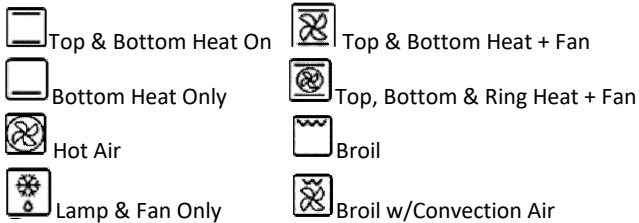

**Kitchen Timer:** The central panel controls the oven timer.

- To set timer, press button 1, then use the “+” and “-“ buttons to set the desired time. The bell symbol will display.
- To display the remaining time, briefly push button 1 again.
- To turn off the alarm, press any button. To cancel the timer, press button 1 and use the arrow keys to decrease the time to 0.00.

