

Range

To use oven, select cooking mode, use numbers to program cooking temperature, press “start”. Use “Cancel/Off” to turn off oven.

Convection Cooking Modes: Convection cooking modes use increased air circulation to improve performance.

Cook Time: Counts down cooking time and turns off the oven when time is complete. Press the “Cook Time” button, use the numbers to program a cooking time, then press “Start”. This can only be used with Bake, Convection Bake, and Convection Roast.

Timer On/Off: Works as a countdown timer. Press “Timer On/Off”, use the number buttons to program the time and press “Start”.

Lock Controls: Locks the controls so pressing the buttons does not activate the controls. Press the “Lock Controls” button for three seconds to lock or unlock the control.

