



GE APPLIANCES

# About the GE Appliances GSWF water filter cartridge

## Water Filter Cartridge

The water filter cartridge is located in the back upper right corner of the refrigerator compartment.

### When to replace the filter on models with a replacement indicator light

**LCD Models:** A pop-up screen will appear on the LCD screen to remind you to replace the water filter. You can check the status of the water filter manually.

**Access By:** Home > Options > Dispenser Options > Reset Water Filter.

**Non-LCD Models:** There is a replacement indicator light for the water filter cartridge on the dispenser. This light will turn orange to tell you that you need to replace the filter soon.

The filter cartridge should be replaced when the replacement indicator light turns red or if the flow of water to the dispenser or icemaker decreases.

### When to replace the filter on models without a replacement indicator light

The filter cartridge should be replaced every **six months** or earlier if the flow of water to the dispenser or icemaker decreases.

## Operating Specifications

- Pressure requirement: 40–120 psi (2.8–8.2 bar), non-shock
- Temperature: 33–100°F (0.6–38°C)
- Flow rate: 0.5 gpm (1.9 lpm)

## General Installation/Operation/Maintenance Requirements

- Flush new cartridge at full flow for 4 gallons (about eight minutes) to purge trapped air.
- Replace cartridge when flow becomes too slow.
- Protect from freezing by removing filter cartridge when temperatures are expected to drop below 40°F (4.4°C). Do not install systems in areas where ambient temperatures may go above 100°F or below 40°F. Do not install on a hot water supply.

---

## ⚠ WARNING

To reduce the risk associated with choking, do not allow children under 3 years of age to have access to small parts during the installation of this product.

To reduce the risk associated with ingestion of contaminants, do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts.

For the maximum benefit of your filtration system, GE Appliances recommends the use of GE-branded filters only. Using GE-branded filters in GE Appliances and Hotpoint® refrigerators provides optimal performance and reliability. GE-branded filters are always the right choice because they are patented and designed specifically for GE Appliances products.

GE Appliances filters meet rigorous industry NSF standards for safety and quality that are important for products that are filtering your water. GE Appliances has not qualified non-GE-branded filters for use in GE Appliances and Hotpoint refrigerators and there is no assurance that non-GE-branded filters meet GE Appliances standards for quality, performance and reliability.

If you have questions, or to order additional filter cartridges, visit our website at [www.gewaterfilters.com](http://www.gewaterfilters.com) or call GE Appliances Parts and Accessories, 877.959.8688.

Customers in Canada call 800.661.1616.

# Removing/Installing Replacement Filter Cartridge

## Removing the Filter Cartridge

If you are replacing the cartridge, first remove the old one by slowly turning it to the left. Pull down gently on the cartridge. A small amount of water may drip down.

**⚠ CAUTION** To reduce the risk associated with property damage due to water leakage read and follow instructions before installation and use of this system. Installation and use **MUST** comply with all state and local plumbing codes. The disposable filter cartridge should be replaced every six months, at the rated capacity or sooner if a noticeable reduction in flow rate occurs.

## Installing the Filter Cartridge

1. On models without a replacement indicator light, apply the month and year sticker to the new cartridge to remind you to replace the filter in **six months**.
2. Remove the protective foil from the end of the cartridge.
3. Position the cartridge inside the cartridge holder and slowly rotate the cartridge to the right (clockwise) until it stops. The cartridge will rotate about a 1/4 turn. When installed correctly, the grip blade on the end of the cartridge should be positioned vertically for top-freezer models and horizontally for bottom freezer models. **DO NOT OVERTIGHTEN.**
4. Close the cartridge cover.
5. On models with a replacement indicator light, press and hold the RESET WATER FILTER PAD on the dispenser for three seconds.

### Models with a Dispenser

Run water from the dispenser for 1-1/2 gallons (approximately three minutes) to clear the system and prevent sputtering.

**NOTE:** A newly installed water filter cartridge may cause water to spurt from the dispenser.

### Filter Bypass Plug

To reduce the risk of property damage due to water leakage, you **MUST** use the filter bypass plug when a replacement filter cartridge is not available. The dispenser and the icemaker will not operate without the filter or filter bypass plug.