


## PROCEDURE FOR FILTER CARTRIDGE INSTALLATION AND REPLACEMENT

### 1 REPLACING THE FILTER CARTRIDGE

If you are replacing the cartridge, first slowly turn the cartridge 1/4 turn to the left and remove.

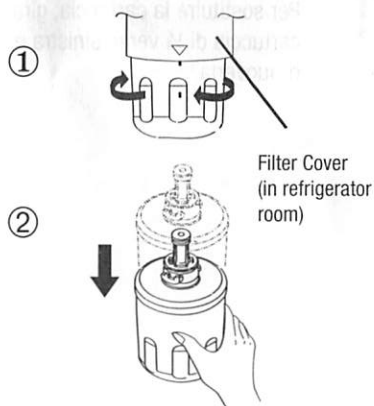



### 2 Apply the month sticker to the cartridge as a reminder to replace the filter within 6 months and remove red cap.



Separation  
of Cap




### 3 Align unlabeled area of filter with the indicator line so that it can be inserted into the filter cover. Turn the cartridge 1/4 turn to the right to lock it into place. You will feel a stop and the locked symbol should now be lined up with the indicator line.

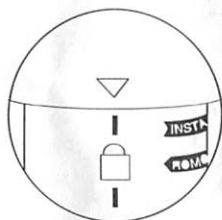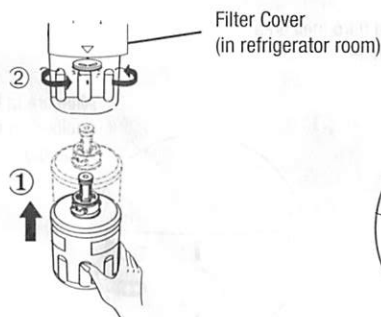

Align with the  
guide  
line and the  
fastening  
indication  
line

### 4

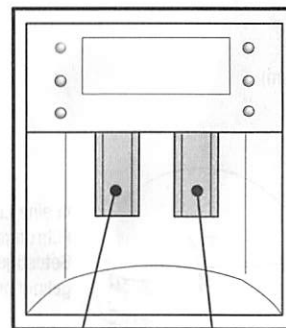


Ice Dispenser

Water Dispenser

Flush 3 gallons through filter before use (flush approximately 5 minutes). When the water filter is replaced, reset the indicator by pressing the Ice Type button and the Child Lock button simultaneously for 3 seconds or by pressing Only Ice Type button for 3 seconds. (Flush the filter until clean water is running. NOTE: The initial dark discoloration of water and ice is normal.)

### 5

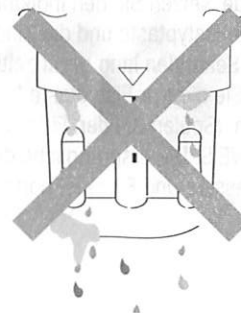

Open the refrigerator door and check the filter area for leaks.

#### Models with a Replacement Indicator Light

There is a replacement indicator light for the water filter cartridge on the digital panel. This light will turn red to tell you that you need to replace the filter soon.

The disposable filter cartridge **MUST** be replaced every 6 months, at the rated capacity or if a noticeable reduction in flow rate occurs.