

apuro

Water Boiler

Instruction manual

INDUSTRY KITCHENS

www.industrykitchens.com.au 1800 611 058



CX876-A



GL347-A



HF150-A

Model:

**GL346-A/GL347-A/GL348-A/GL349-A/HF150-A/HF151-A/
HF152-A/HF153-A/CX876-A/CX877-A/CX878-A/CX879-A**

Safety Instructions

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your product.

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - Fire Precautions
 - Wiring Regulations
 - Building Regulations
- Ensure the location for the appliance can support its weight when full.
- DO NOT fill the appliance above the 'MAX' level.
- DO NOT move the appliance when full.
- DO NOT immerse the appliance in water.
- DO NOT leave the machine unattended during operation.
- DO NOT operate this appliance when less than one third full.

• Danger of burns!

Do not touch hot surfaces and beware of escaping steam.



- For indoor use only. Do not use outdoors or under extremely cold conditions. Freezing up of the unit may pose a safety hazard.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an Apuro agent or a recommended qualified technician in order to avoid a hazard.
- Please ensure that the tap is screwed fully on before use.
- Apuro recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Pack Contents

The following is included:

- Apuro Water Boiler
- Tap adapter (for GL346-A/GL347-A/GL348-A/GL349-A)
- Instruction manual
- Water tray (for HF150-A/HF151-A/HF152-A/HF153-A)

Apuro prides itself on quality and service, ensuring that at the time of unpacking the contents are supplied fully functional and free of damage.


Should you find any damage as a result of transit, please contact your Apuro dealer immediately.

Operation

**Do not install the appliance in an area where a water jet could be used.
Before using for the first time, clean the interior with warm water.**

1. Remove the appliance from the packaging. Make sure that all protective plastic film and plastic coatings are thoroughly removed from all surfaces.
2. Ensure the Temperature Control knob is set to 'OFF'.
3. Remove the lid and fill the appliance to at least half of its capacity.
4. Replace the lid.
5. Connect to the mains power supply.
6. Set the Temperature Control knob to the required temperature setting. The 'BOIL' indicator light illuminates and the appliance begins to heat water.
7. When the water has reached the set temperature the 'BOIL' Indicator light turns off and the 'KEEP WARM' indicator light illuminates.

Model shown: GL346-A

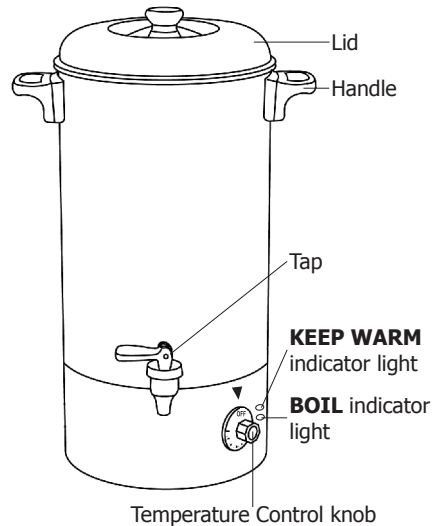

WARNING: Reduce the set temperature if the water begins to boil. DO NOT allow the water to boil constantly.

Note: Once the water temperature drops 5-10°C then the appliance will reheat the water.

WARNING: If the Temperature Control Knob is set to or close to 'HIGH' then the appliance will constantly heat the water until knob is turned to 'OFF' or the temperature is reduced.

Serving

For GL346-A/GL347-A/
GL348-A/GL349-A



For HF150-A/HF151-A/
HF152-A/HF153-A



For CX876-A/CX877-A/
CX878-A/CX879-A



Emptying the Appliance

**GL346-A/GL347-A/GL348-A/GL349-A/
CX876-A/CX877-A/CX878-A/CX879-A:**
Drain the appliance by using the tap to empty.

HF150-A/HF151-A/HF152-A/HF153-A:
Drain the appliance with hand over the hand
sensor until empty.

Thermal Cut-Out Reset

This appliance is fitted with a Thermal Cut-Out safety feature. Should the temperature exceed safe levels the appliance will automatically cut power.

The Safety Cut-out switch is located on the underside of the appliance.

To reset the appliance:

1. Empty the appliance and allow to cool.
2. Press the reset button until it clicks.

WARNING: Ensure the appliance has cooled down and is empty before resetting the switch, as it may need to be tipped slightly to gain access to the switch.

3. The appliance is now reset and can be used as normal.

Cleaning, Care & Maintenance

- **Always turn off and disconnect the appliance from the power supply before cleaning.**
- Use soapy water and a damp cloth to clean the exterior of the appliance.
- Dry thoroughly after cleaning.

De-scaling

For the best water quality, Apuro recommend that a water filter is installed to the mains water supply, particularly in hard water areas. Doing so will reduce the build up of limescale and contaminants in the water tank thus maintaining energy efficiency and prolonging the life of the appliance.

To de-scale the appliance:

1. Pour a solution of de-scaler and water into the appliance.
2. Brush the interior gently with a soft bristled brush.
3. Discard the solution collected in the jug.
4. Fill the appliance with clean water and turn back On to flush out the system. Flush out the system thoroughly to remove any de-scaler residue.
5. The appliance is now ready for use.

Note: Use a suitable de-scaler and always follow the instructions on the container. Apuro recommend that this appliance is de-scaled every 3 months or more frequently in hard water areas.

IMPORTANT: Failure to de-scale or maintain will invalidate your guarantee.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The unit is not working	The unit is not switched on	Check unit is plugged in and switched on
	Plug or lead is damaged	Replace Plug or lead
	Mains power supply fault	Check mains power supply
	Thermal fuse has activated	Reset Thermal fuse
Indicator light comes on but water does not reach temperature	Thermostat fault	Consult a qualified technician
The tap is leaking (for GL346-A series and CX876-A series)	The tap has become loose	Tighten the tap handle
Water not dispensing (for HF150-A series)	Sensor not detecting the cup	Not suited for glass cups, so ensure the cup used is opaque

Technical Specifications

Note: Due to our continuing program of research and development, the specifications herein may be subject to change without notice.

Model	Voltage	Power	Current	Capacity (litres)	Weight (full) (kg)	Heating Time (Max. Temp. when full)	Dimensions h x w x d mm
GL346-A	230-240V~ 50Hz	2020- 2200W	9.36A	10	12.9	30 minutes	470 x 304 x 313
HF150-A					13.2		530 x 313 x 313
CX876-A					15.6	29 minutes	538 x 330 x 330
GL347-A				20	23.8	60 minutes	535 x 361 x 374
HF151-A					24.2		595 x 385 x 374
CX879-A					26.1	59 minutes	587 x 380 x 380
GL348-A				30	34.6	90 minutes	519 x 422 x 439
HF152-A					30.4		579 x 465 x 439
CX877-A					38.6	88 minutes	585 x 490 x 490
GL349-A				40	45	128 minutes	630 x 422 x 439
HF153-A					45.8		690 x 465 x 439
CX878-A					47.5	125 minutes	694 x 490 x 490

Electrical Wiring

The plug is to be connected to a suitable mains socket.
This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E



This appliance must be earthed.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

APURO parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



APURO products have been approved to carry the following symbol:

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of APURO.

Every effort is made to ensure all details are correct at the time of going to press, however, APURO reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

• Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •
• Declaración de conformidad

Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp • Tipo di apparecchiatura • Tipo de equipo			Model • Modèle • Modell • Modello • Modelo		
Manual Fill - 10Ltr Manual Fill - 20Ltr Manual Fill - 30Ltr Manual Fill - 40Ltr	Hands Free - 10Ltr Hands Free - 20Ltr Hands Free - 30Ltr Hands Free - 40Ltr	Energy Efficient - 10Ltr Energy Efficient - 20Ltr Energy Efficient - 30Ltr Energy Efficient - 40Ltr	GL346-A GL347-A GL348-A GL349-A	HF150-A HF151-A HF152-A HF153-A	CX876-A CX879-A CX877-A CX878-A
Application of Territory Legislation & Council Directives(s) Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo		Electrical Safety IEC 60335-1:2010 +A1:2013 +A2:2016 IEC 60335-2-75:2012 +A1:2015 +A2:2018 Electro-Magnetic Compatibility (BS) EN IEC 55014-1:2021 (BS) EN IEC 55014-2:2021 (BS) EN IEC 61000-3-2:2019 +A1:2021 (BS) EN 61000-3-3:2013 +A1:2019 +A2:2021			
Producer Name • Naam fabrikant • Nom du producteur • Name des Herstellers • Nome del produttore • Nombre del fabricante			Apuro		

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus

Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Date • Data • Date • Datum • Data • Fecha

Signature • Handtekening • Signature • Unterschrift Firma • Firma

Full Name • Volledige naam • Nom et prénom • Vollständiger Name • Nome completo • Nombre completo

Position • Functie • Fonction • Position • Qualifica • Posición

Producer Address • Adres fabrikant • Adresse du producteur • Anschrift des Herstellers • Indirizzo del produttore • Dirección del fabricante

20th December 2022

DocuSigned by:

Ashley Hooper

B39382C9FD9C478...

Ashley Hooper

Technical & Quality Manager

Fourth Way,
Avonmouth,
Bristol,
BS11 8TB
United Kingdom

DocuSigned by:

Brendan Denmeade

D052C5837EB7485...

Brendan Denmeade

Commercial Manager/ Responsible Supplier

15 Badgally Road,
Campbelltown
NSW 2560



apuro

GL346-A to GL349-A_HF150-A to HF153-A_CX876-A to CX879-A_A5_v7_2023/03/15