


apuro

Pasta Cooker

Instruction manual

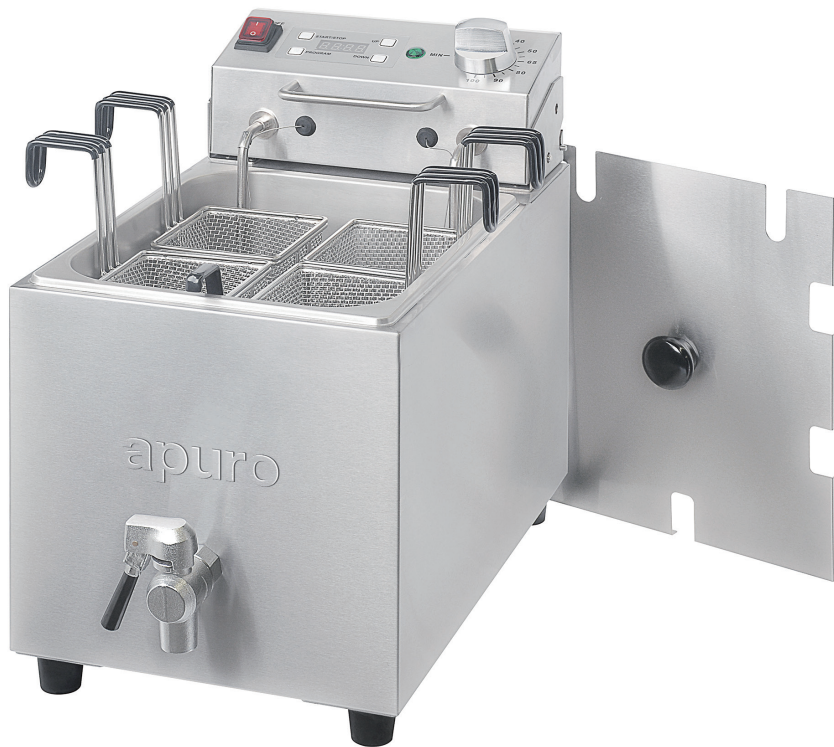

**Model:
DG077-A**

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - Fire Precautions
 - Wiring Regulations
 - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT immerse the appliance in water.
- Do not use the appliance for anything other than its intended use.
- Some surfaces become hot during operation - take care when using the appliance.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an Apuro agent or a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Apuro recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- Ensure water levels are maintained above the minimum indicated level. Failing to do so may result in element failure.
- Switch off power to the appliance, and remove the plug from the power socket while cleaning, draining water, or filling with water.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Apuro product.

Apuro will not accept liability for product failures in the event that:

- The instructions in this manual have not been followed correctly.
- Unqualified or unauthorized personnel have adjusted the pasta cooker.
- Non-original spare parts are used.
- The pasta cooker has not been handled and cleaned correctly.
- The pasta cooker has been used for a purpose for which it was not intended.

Pack Contents

The following is included:

- Pasta cooker
- Basket (x 4)
- Instruction manual

Apuro prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.


Should you find any damage as a result of transit, please contact your Apuro dealer immediately.

Installation

- Remove the pasta cooker from the packaging, ensuring that all protective packaging, plastic and residues are thoroughly cleaned from its surfaces.
- Appliances should always be placed on the table when in use.
- Before locating and operating the pasta cooker, it is the user's responsibility to ensure that all Health & Safety regulations concerning safe positioning, spacing, ventilation, electrical installation, and fire risk, are complied with.

Fitting head unit to the body

- Place the head unit into the right and left support bracket at the rear of the pasta cooker body, then press the spring pin at the right to position the head unit into the pan.

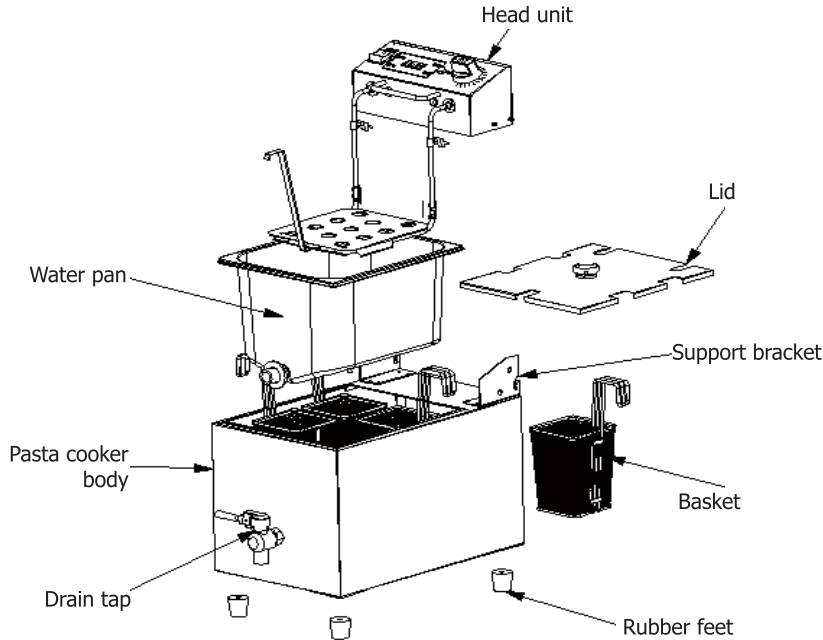

- The pasta cooker can now be filled with water.
- Connect the pasta cooker to the correct power supply and it is ready to operate.

Caution: Do not position and operate the pasta cooker near combustible or flammable materials or objects.

Operation

- Turn the thermostat dial towards the "ON" position. The green light will activate to confirm. Adjust the dial to the required temperature setting.
- While heating up, the indicator light will come on; when the required temperature is reached, the indicator light will go out.
- As the water temperature fluctuates, the thermostat will operate to maintain the set temperature. The indicator light will be lit when the pasta cooker is heating the water.

Using the timer

The digital timer with audible alarm can be set from 1 second to 15 minutes. The timer provides an audible alarm after the set time expires. It provides no electrical control over the unit.

- START/STOP:** Press START/STOP to start timer, press again to stop. The timer will provide an audible alarm after the set time. The alarm will beep 10 times and the display will continue to flash until timer is reset (press the START/STOP button).
- UP:** Press UP to add extra time.
- DOWN:** Press DOWN to reduce time.



- **PROGRAM:** There are a total of 6 programmable timer settings. The default factory program settings are given below.

Program	1	2	3	4	5	6
Factory preset time	00:30	01:00	01:30	02:00	02:30	03:00

- To change the length of a program select the program you want to change by scrolling using the PROGRAM button.
- Adjust the program time by using the UP and DOWN buttons. Press START/STOP to commence the count-down. The new program time will be automatically stored.
- If the unit is left without power for more than 24hrs the timer settings will revert to the factory defaults.

Cleaning, Care & Maintenance

The pasta cooker should be cleaned after each day's operation; however it may require cleaning more often, depending on the volume use.

1. Switch off the power and disconnect from the power supply by removing the plug from the socket.
2. The pasta cooker must be left to cool before cleaning.
3. Empty the water pan by opening the drain tap after use.

- Warm soapy water is recommended for cleaning. Cleaning agents after prolonged use can cause damage to stainless steel.
- The main body can also be cleaned with warm soapy water. Remove the head unit and element before cleaning takes place.
- **The head unit cannot be immersed in water, but can be wiped down with a damp cloth.**
- After cleaning as above, please use a dry cloth to clean the appliance to ensure there is no water on the heating element and in the water pan.

Descaling

In hard water areas lime scale can build up within the appliance after prolonged use. To descale the appliance.

1. Pour a solution of de-scaler and water into the appliance.
2. Follow the manufacturer's instructions on the de-scale solution with reference to the length of time required to soak, agitation, water temperature and on how to dispose of the solution safely.
3. Fill the appliance with clean water and turn back On to flush out the system. Flush out the system thoroughly to remove any de-scale residue.
4. The appliance is ready for use.



Note: Use a suitable descaler and always follow the manufacturer's instructions. Apuro recommend that this appliance is descaled every 3 months or more frequently in hard water areas.

Troubleshooting

Fault	Probable Cause	Solution
Unit not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call Apuro agent or qualified Technician
	Power supply	Check power supply
	Internal wiring fault	Call Apuro agent or qualified technician
Unit does not reach set temperature	Faulty thermostat	Call Apuro agent or qualified technician
	Faulty element	Call Apuro agent or qualified technician
Unit heats up but indicator light not On	Indicator light has expired	Call Apuro agent or qualified technician

Fault	Probable Cause	Solution
Power indicator light comes on but unit does not heat up	Faulty element	Call Apuro agent or qualified technician
	Faulty thermostat	Call Apuro agent or qualified technician
	Thermostat set incorrectly	Check thermostat
No power	Thermal cut-out activated	Press re-set switch on rear of unit

Technical Specifications

Model	Voltage	Power	Current	Dimensions H x W x D mm	Weight
DG077-A	220-240V~, 50Hz	2200W	9.6A	450 x 280 x 510	10.0kg

Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Apuro parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

Apuro products have been approved to carry the following symbol:



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro.

Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

- Conformanceverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •
- Declaración de conformidad • Declaração de conformidade

Equipment Type • Uitrustings-type • Type d'équipement • Gerätetyp • Tipo di apparecchiatura • Tipo de equipo • Tipo de equipamento		Model • Modèle • Modell • Modello • Modelo • Malli
Pasta Cooker 8Ltr with Tap with Timer		DG077-A
Application of Territory Legislation & Council Directives(s) Toepassings van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo • Aplicação de directiva(s) do conselho	Low Voltage Directive (LVD) - 2014/35/EU AS/NZS 60335.1:2011 +A1:2012 +A2:2014 +A3:2015 +A4:2017 IEC 60335-2-47:2002 +A1:2008 EN 62233:2008 Electro-Magnetic Compatibility (EMC) Directive 2014/30/EU - recast of 2004/108/EC EN55014-1:2017 EN55014-2:2015 EN IEC 61000-3-2:2019 EN 61000-3-3:2013 +A1:2019	
Producer Name • Naam fabrikant • Nom du producteur • Name des Herstellers • Nome del produttore • Nombre del fabricante • Nome do fabricante		Apuro

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus.

Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Eu, o abaixo-assinado, declaro que o equipamento anteriormente especificado está em conformidade com a(s) anterior(es) Directiva(s) e Norma(s).

Date • Data • Date • Datum • Data •
Fecha • Data

Signature • Handtekening • Signature
• Unterschrift Firma • Firma •
Assinatura

Full Name • Volledige naam • Nom et
prénom • Vollständiger Name • Nome
completo • Nombre completo • Nome
por extenso

Position • Functie • Fonction • Position
• Qualifica • Posición • Função

Producer Address • Adres fabrikant •
Adresse du producteur • Anschrift des
Herstellers • Indirizzo del produttore •
Dirección del fabricante • Morada do
fabricante

22nd October 2020

DocuSigned by:

Ashley Hooper

B39382C9FD9C478...

Ashley Hooper

Technical & Quality Manager

Fourth Way,
Avonmouth,
Bristol,
BS11 8TB
United Kingdom

DocuSigned by:

Josie Holt

3582E210C4054DA...

Josie Holt

Commercial Manager/ Responsible
Supplier

15 Bagdally Road,
Campbelltown
NSW 2560



apuro

DB191_ML_A5_v2_20201123