



Instructions For Multi-load Grease Gun

CARTRIDGE LOADING (Figure A & B)

1. Remove the grease gun head from the grease gun by unscrewing it
2. While holding barrel assembly pull plunger rod back. Remove lid from the grease cartridge and insert the cartridge into the barrel.
3. Re-attach the grease gun head by screwing it into the barrel assembly so that the cartridge sits well against the follower cup.
4. Once in position, press the secure lock lever & push the plunger rod firmly into the barrel

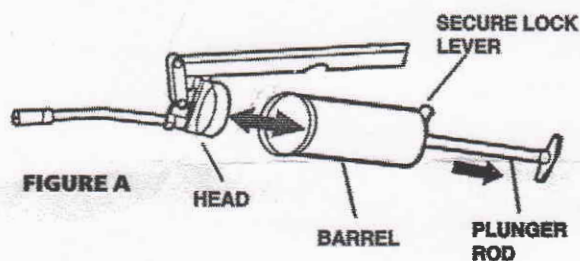


FIGURE A

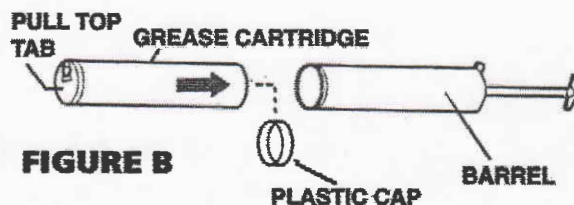


FIGURE B

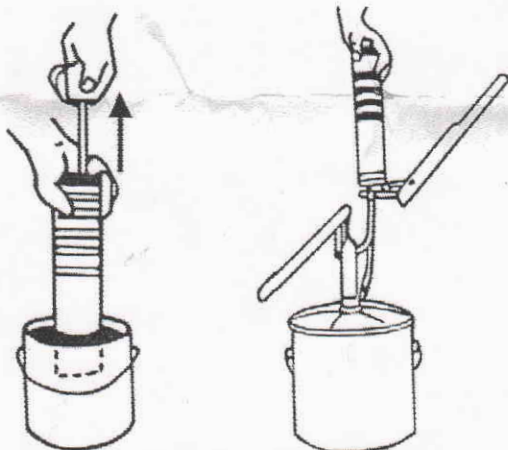


FIGURE C

FIGURE D

DIRECT BULK LOADING (Figure C)

1. Remove the grease gun head from the grease gun by unscrewing it.
2. Insert the open end of the barrel into the bulk grease and pull the plunger rod all the way back until barrel is full.
3. Reattach the grease gun head by screwing it into the barrel assembly.
4. Once in position, press the secure lock lever & push the plunger rod firmly into the barrel

DIRECT BULK LOADING (Figure D)

1. Wipe the loader fitting clean.
2. Connect loader fitting located on the head of the gun to the valve of the loader pump.
3. Run the loader pump until the gun is filled with grease.

TROUBLE SHOOTING

Pump head is not dispensing

A common reason why grease guns DONOT prime or dispense is due to air pockets. In order to get rid of air pockets, Press the 'Air-Bleeder' or alternately loosen the gun head 1/2-a-turn & pump a few strokes & then tighten the head.