


Connecting Multiple Duty Stations to an NHX Series System

The application for more than one Duty Station with the NHX CommuniCare system does not carry the UL 1069 Listing.

Wiring Diagram

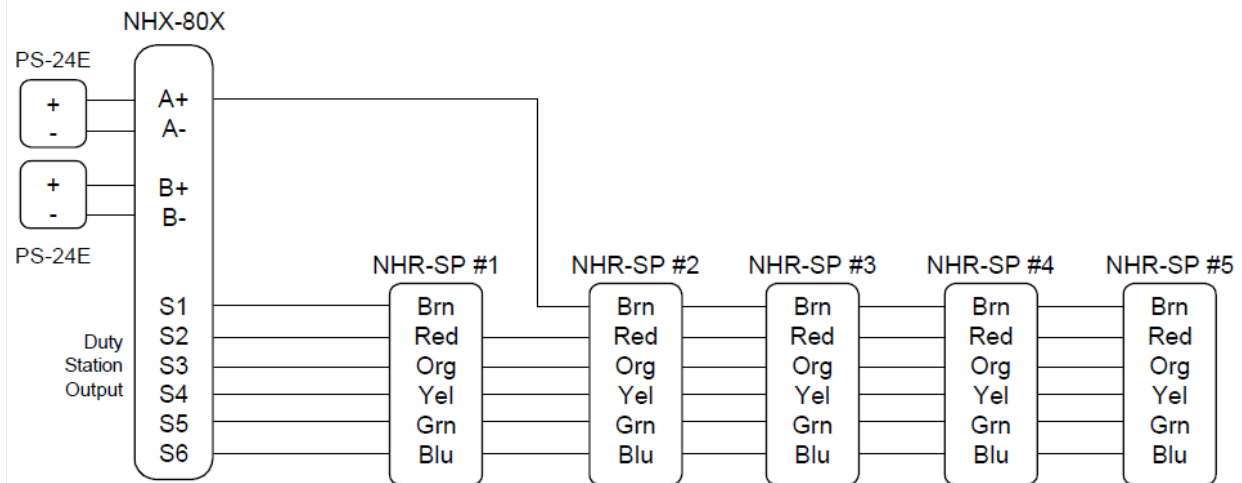

Notes

1. Duty Station #1 is wired directly to NHX-80X.
2. Duty Station #2 through #5 can be homerun or daisy-chained from the CCU. The brown wire connects directly to the A+ terminal, with all other wires paralleled.
3. The total amount of wire used to connect the NHR-SP's must not exceed 400'. If so, the tone volume level will be affected.
4. The TONE OFF button works independently at each Duty Station.
5. If the tone volume at the Duty Stations is too low, increase the main volume control on the back of the master station. If more volume is required, an external amplifier may be required. (Contact Technical Support for more information.)

If more than 5 Duty Stations are required, please contact a Senior Technical Support Representative at one of the extensions listed below.