



THERMOLEC

ELECTRIC BOILER

The Latest In Technology for

**NOW ASME
LISTED!**

HYDRONIC HEATING



Standard Features

Wide Range of kW Sizes Available

- 5 - 40 kW, up to 136,480 BTU output

Fully Modulating

- Ideal for multiple zone systems
- 15% energy savings versus staged boilers

Outdoor Sensor and Reset Control

- Adjusts water temperature based on outdoor temperature to maximize efficiency and comfort

Dual Energy Heating

- All models include load management control connections

Stainless Steel Tank

- Durable, corrosion-resistant heat generator vessel
- ASME H Stamp and CSA approved

Compact and Light Weight Design

- Easy handling
- Minimal space requirements

Electronic Aquastat

- Precise supply water temperature control up to 190°F
- Ideal for radiant floor, baseboard, radiator or hydronic coil systems

Thermolec Electric Boiler Standard Components



Electronic Controller

- Full modulation: maximizes heating efficiency for precise control of supply water temperature.
- Aquastat: fully adjustable up to 190°F.
- Reset control: varies water temperature based on outdoor temperature.

Load Management Control

- Automatically controls boiler based on utility control.

Insulated Stainless Steel Heat Generator Tank

- Corrosion-resistant for long life.
- ASME listed

Solid State Control Relay(s)

- Silent, long lasting control of element switching.

High-Limit Protection

- Built-in manual reset for safety.

Circuit Breakers Included

- Provides safe electrical isolation for service.


One Model for all applications

Outdoor Sensor and Supply Water Temperature Reset





Outdoor Sensor

The outdoor reset control proportionally varies the hot water temperature when the outdoor temperature is between +14°F and +50°F. The result is improved comfort and energy savings on mild days.

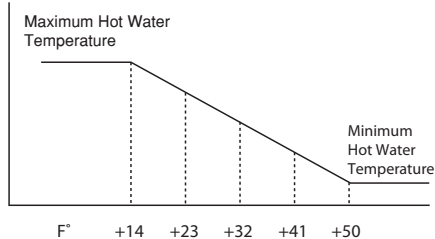

Typical Installations

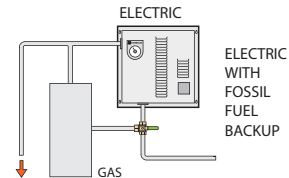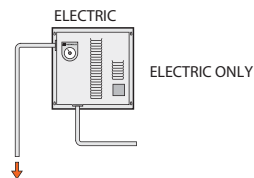

For Fossil Fuel Backup Application Boiler includes:

Dual Fuel Control Switch that allows for manual selection between gas/oil or electric boiler and automatically switches based on utility company's load management signal.

Specifications @ 240v / 1ph

FFB	B-5U-FFB	B-6U-FFB	B-8U-FFB	B-9U-FFB	B-10U-FFB	B-12U-FFB	B-15U-FFB
KW	5	5.75	8	9	10	11.5	15
BTU/HOUR	17,060	19,619	27,296	30,708	34,120	39,238	51,180
TOTAL AMPS	20.83	23.96	33.33	37.50	41.67	47.92	62.50
BREAKER/AMP SIZE	1 x 30A	1 x 30A	1 x 50A	1 x 50A	1 x 60A	1 x 60A	1 x 60A/1 x 30A
SHIPPING WEIGHT	37 lbs.	38 lbs.	39 lbs.	39 lbs.	39 lbs.	40 lbs.	44 lbs.

FFB	B-18U-FFB	B-20U-FFB	B-23U-FFB	B-27U-FFB	B-30U-FFB	B-35U-FFB	B-40U-FFB
KW	18	20	23	27	30	35	40
BTU/HOUR	61,416	68,240	78,476	92,124	102,360	119,420	136,480
TOTAL AMPS	75.00	83.37	95.83	112.50	125.00	145.83	166.67
BREAKER/AMP SIZE	1 x 60A/1 x 50A	2 x 60A	2 x 60A	2 x 50A/1 x 60A	3 x 60A	4 x 50A	4 x 60A
SHIPPING WEIGHT	47 lbs.	47 lbs.	49 lbs.	73 lbs.	73 lbs.	74 lbs.	74 lbs.

NOTE: 3-Phase units available in 18, 24, 30, 35 and 40 KW.

Dimensions

5 - 23 kW: 18" x 18" x 9.5"

27 - 40 kW: 18" x 28" x 9.5"

Limited Warranty

10 years on elements and tank, 2 years on all other components.

Distributed By:



2060 Lucien-Thimens
Montreal, Quebec, Canada
H4R 1L1

Tel.: 514-336-9130 Fax.: 514-336-3270

Web Site: www.thermolec.com





THERMOLEC

TMB BOILER

High Performance, Compact Design

The Thermolec TMB electric boiler is our newest and most affordable model. Without compromising quality, Thermolec has engineered the TMB boiler with quality components and state of the art technology. Designed for all types of hot water heating systems, including applications requiring 190° water temperatures. Ideal for either single or multiple zone applications, the TMB boiler outshines gas boilers in many applications by offering a lower total installed cost, more precise heating with low range BTU output capabilities and less maintenance.

Take advantage of low electric rates available in many areas throughout the US, often resulting in reduced heating costs versus propane or fuel oil boilers.

TMB Boiler Benefits

- **100% Efficient**
- **Lower Install Cost**
- **Less Maintenance**
- **Compact**
- **Light Weight**
- **Easy to Install**
- **Precise Heating**
- **No Venting**



BASEMENTS



WORKSHOPS/GARAGES



Thermolec TMB Electric Boiler Standard Features




- Sturdy aluminum case
- Stainless steel tank
- Compact and light weight design
- Aquastat control: adjustable supply water temperature range up to 190°F
- Full modulation for precise btu demand output
- Thermostat or zone valve end switch connections
- Pump switching relay
- Load management control connections
- Outdoor reset control
- Built-in circuit breaker
- 30 psi pressure relief valve
- Temperature and pressure gauge
- CSA listed



Thermolec TMB Boiler Specifications @ 240v 1ph				
	B-3TMB	B-6TMB	B-9TMB	B-11TMB
kW	3	6	9	11
BTU/H	10,236	20,472	30,708	37,532
Total Amps	12.5	25	37.5	45.8
Breaker Amps	1 @ 20A	1 @ 40A	1 @ 50A	1 @ 60A
Unit Weight	21 lbs.	23 lbs.	25 lbs.	27 lbs.

Outdoor Sensor and Supply Water Temperature Reset

The outdoor reset control proportionally varies the hot water temperature when the outdoor temperature is between +14°F and +50°F. The result is improved comfort and energy savings on mild days.

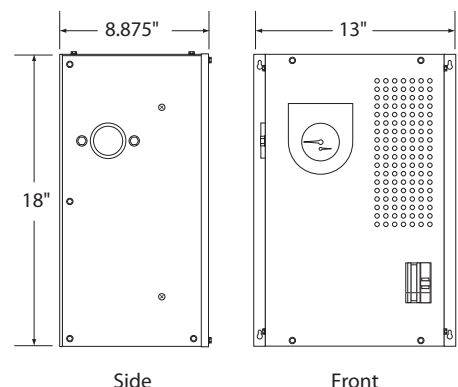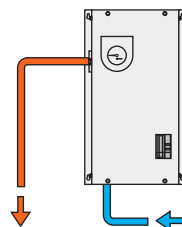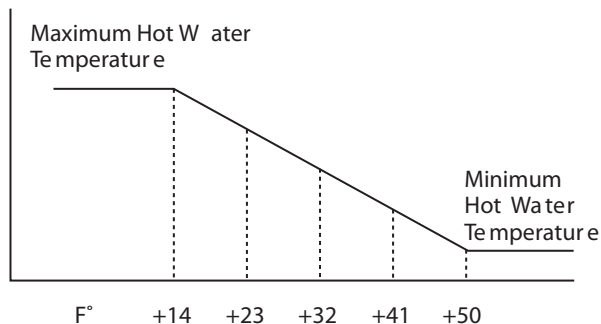

Limited Warranty

10 years on elements and tank, 2 years on all other components.

Distributed By:



2060 Lucien-Thimens
Montreal, Quebec, Canada
H4R 1L1

Tel.: 514-336-9130 Fax.: 514-336-3270



Web Site: www.thermolec.com • Email: sales@thermolec.com

Form TMBUSA 410

Cost Per Million Btu

Electricity 3412 BTU / kWh

	\$ / kWh	0.038	0.040	0.042	0.044	0.046	0.048	0.050	0.052	0.054	0.056	0.058	0.060	0.062	0.064	0.066	0.068	0.070	0.072	0.074	0.076	0.078	0.080	0.090	0.100
System Efficiency (C.O.P. or EF)	100%	11.14	11.72	12.31	12.90	13.48	14.07	14.65	15.24	15.83	16.41	17.00	17.58	18.17	18.76	19.34	19.93	20.52	21.10	21.69	22.27	22.86	23.45	26.38	29.31
	150%	7.42	7.82	8.21	8.60	8.99	9.38	9.77	10.16	10.55	10.94	11.33	11.72	12.11	12.50	12.90	13.29	13.68	14.07	14.46	14.85	15.24	15.63	17.58	19.54
	200%	5.57	5.86	6.15	6.45	6.74	7.03	7.33	7.62	7.91	8.21	8.50	8.79	9.09	9.38	9.67	9.96	10.26	10.55	10.84	11.14	11.43	11.72	13.19	14.65
	250%	4.45	4.69	4.92	5.16	5.39	5.63	5.86	6.10	6.33	6.57	6.80	7.03	7.27	7.50	7.74	7.97	8.21	8.44	8.68	8.91	9.14	9.38	10.55	11.72
	275%	4.05	4.26	4.48	4.69	4.90	5.12	5.33	5.54	5.76	5.97	6.18	6.39	6.61	6.82	7.03	7.25	7.46	7.67	7.89	8.10	8.31	8.53	9.59	10.66
	300%	3.71	3.91	4.10	4.30	4.49	4.69	4.88	5.08	5.28	5.47	5.67	5.86	6.06	6.25	6.45	6.64	6.84	7.03	7.23	7.42	7.62	7.82	8.79	9.77
	325%	3.43	3.61	3.79	3.97	4.15	4.33	4.51	4.69	4.87	5.05	5.23	5.41	5.59	5.77	5.95	6.13	6.31	6.49	6.67	6.85	7.03	7.21	8.12	9.02
	350%	3.18	3.35	3.52	3.68	3.85	4.02	4.19	4.35	4.52	4.69	4.86	5.02	5.19	5.36	5.53	5.69	5.86	6.03	6.20	6.36	6.53	6.70	7.54	8.37
	400%	2.78	2.93	3.08	3.22	3.37	3.52	3.66	3.81	3.96	4.10	4.25	4.40	4.54	4.69	4.84	4.98	5.13	5.28	5.42	5.57	5.72	5.86	6.59	7.33

Natural Gas 100,000 BTU / therm

	\$ / ccf	0.90	0.95	1.00	1.05	1.10	1.15	1.20	1.25	1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05
System Efficiency	75%	12.00	12.67	13.33	14.00	14.67	15.33	16.00	16.67	17.33	18.00	18.67	19.33	20.00	20.67	21.33	22.00	22.67	23.33	24.00	24.67	25.33	26.00	26.67	27.33
	80%	11.25	11.88	12.50	13.13	13.75	14.38	15.00	15.63	16.25	16.88	17.50	18.13	18.75	19.38	20.00	20.63	21.25	21.88	22.50	23.13	23.75	24.38	25.00	25.63
	82%	10.98	11.59	12.20	12.80	13.41	14.02	14.63	15.24	15.85	16.46	17.07	17.68	18.29	18.90	19.51	20.12	20.73	21.34	21.95	22.56	23.17	23.78	24.39	25.00
	85%	10.59	11.18	11.76	12.35	12.94	13.53	14.12	14.71	15.29	15.88	16.47	17.06	17.65	18.24	18.82	19.41	20.00	20.59	21.18	21.76	22.35	22.94	23.53	24.12
	90%	10.00	10.56	11.11	11.67	12.22	12.78	13.33	13.89	14.44	15.00	15.56	16.11	16.67	17.22	17.78	18.33	18.89	19.44	20.00	20.56	21.11	21.67	22.22	22.78
	92%	9.78	10.33	10.87	11.41	11.96	12.50	13.04	13.59	14.13	14.67	15.22	15.76	16.30	16.85	17.39	17.93	18.48	19.02	19.57	20.11	20.65	21.20	21.74	22.28
	95%	9.47	10.00	10.53	11.05	11.58	12.11	12.63	13.16	13.68	14.21	14.74	15.26	15.79	16.32	16.84	17.37	17.89	18.42	18.95	19.47	20.00	20.53	21.05	21.58

Propane 95,500 BTU / gallon

	\$ / gal	1.00	1.10	1.20	1.30	1.40	1.50	1.60	1.70	1.80	1.90	2.00	2.10	2.20	2.30	2.40	2.50	2.60	2.70	2.80	2.90	2.95	3.00	3.05	3.10
System Efficiency	75%	13.96	15.36	16.75	18.15	19.55	20.94	22.34	23.73	25.13	26.53	27.92	29.32	30.72	32.11	33.51	34.90	36.30	37.70	39.09	40.49	41.19	41.88	42.58	43.28
	80%	13.09	14.40	15.71	17.02	18.32	19.63	20.94	22.25	23.56	24.87	26.18	27.49	28.80	30.10	31.41	32.72	34.03	35.34	36.65	37.96	38.61	39.27	39.92	40.58
	82%	12.77	14.05	15.32	16.60	17.88	19.15	20.43	21.71	22.99	24.26	25.54	26.82	28.09	29.37	30.65	31.92	33.20	34.48	35.76	37.03	37.67	38.31	38.95	39.59
	85%	12.32	13.55	14.78	16.01	17.25	18.48	19.71	20.94	22.17	23.41	24.64	25.87	27.10	28.33	29.57	30.80	32.03	33.26	34.49	35.73	36.34	36.96	37.57	38.19
	90%	11.63	12.80	13.96	15.13	16.29	17.45	18.62	19.78	20.94	22.11	23.27	24.43	25.60	26.76	27.92	29.09	30.25	31.41	32.58	33.74	34.32	34.90	35.49	36.07
	92%	11.38	12.52	13.66	14.80	15.93	17.07	18.21	19.35	20.49	21.63	22.76	23.90	25.04	26.18	27.32	28.45	29.59	30.73	31.87	33.01	33.58	34.15	34.71	35.28
	95%	11.02	12.12	13.23	14.33	15.43	16.53	17.64	18.74	19.84	20.94	22.04	23.15	24.25	25.35	26.45	27.56	28.66	29.76	30.86	31.96	32.52	33.07	33.62	34.17

Fuel Oil 138,900 BTU / gallon

	\$ / gal	3.20	3.25	3.30	3.35	3.40	3.45	3.50	3.55	3.60	3.65	3.70	3.80	3.90	4.00	4.10	4.20	4.30	4.40	4.50	4.60	4.70	4.80	4.90	5.00
System Efficiency	75%	30.72	31.20	31.68	32.16	32.64	33.12	33.60	34.08	34.56	35.04	35.52	36.48	37.44	38.40	39.36	40.32	41.28	42.24	43.20	44.16	45.12	46.08	47.04	48.00
	80%	28.80	29.25	29.70	30.15	30.60	31.05	31.50	31.95	32.40	32.85	33.30	34.20	35.10	36.00	36.90	37.80	38.70	39.60	40.50	41.40	42.30	43.20	44.10	45.00
	82%	28.10	28.53	28.97	29.41	29.85	30.29	30.73	31.17	31.61	32.05	32.49	33.36	34.24	35.12	36.00	36.88	37.75	38.63	39.51	40.39	41.26	42.14	43.02	43.90
	85%	27.10	27.53	27.95	28.37	28.80	29.22	29.64	30.07	30.49	30.92	31.34	32.19	33.03	33.88	34.73	35.57	36.42	37.27	38.11	38.96	39.81	40.66	41.50	42.35
	90%	25.60	26.00	26.40	26.80	27.20	27.60	28.00	28.40	28.80	29.20	29.60	30.40	31.20	32.00	32.80	33.60	34.40	35.20	36.00	36.80	37.60	38.40	39.20	40.00
	92%	25.04	25.43	25.82	26.22	26.61	27.00	27.39	27.78	28.17	28.56	28.95	29.74	30.52	31.30	32.08	32.87	33.65	34.43	35.21	36.00	36.78	37.56	38.34	39.13
	95%	24.25	24.63	25.01	25.39	25.77	26.15	26.52	26.90	27.28	27.66	28.04	28.80	29.56	30.31	31.07	31.83	32.59	33.34	34.10	34.86	35.62	36.38	37.13	37.89




Energy Efficiency Terms

5/18/2008

Annual Fuel Utilization Efficiency (AFUE) - The measure of annual efficiency of a residential heating furnace or boiler. Accounts for operation energy losses of the heating unit

Co-efficient of Performance (C.O.P.) - The same as the efficiency stated as a ratio of work or useful energy output of a system vs. the amount of energy inputted into the system.

Energy Factor (EF) - The efficiency or measure of overall efficiency of a variety of appliances. Water heater efficiencies are rated by EF.

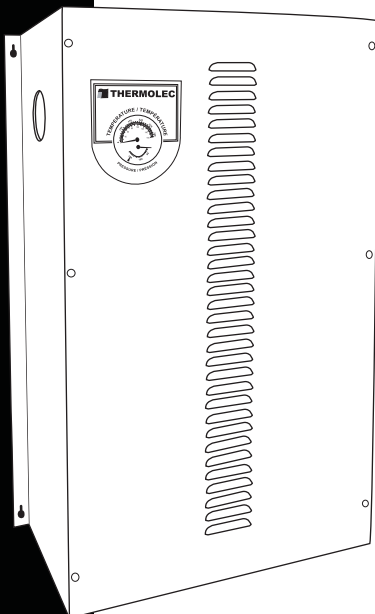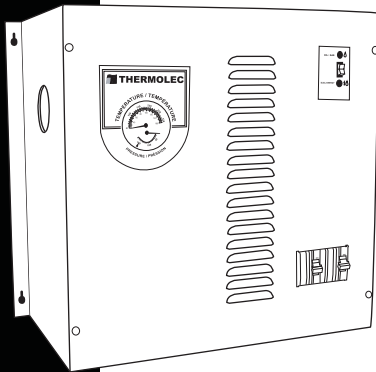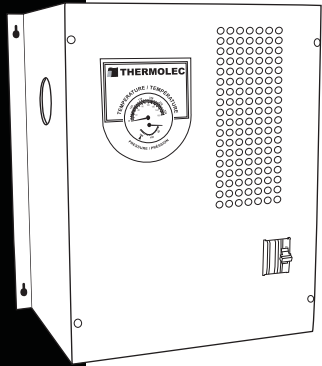

Installation Instructions for Electric Boilers (USA)

**JULY 2010
VERSION 11**

Installation Guidelines for Thermolec Electric Boilers Model B

1 Important

- 1.1 These instructions should be used as a general guide only. Electrical Code and local utility requirements must be followed and take precedence over these instructions.
- 1.2 Thermolec electric boilers are manufactured with quality components for maximum life, durability and minimum service. To ensure a satisfactory installation it is imperative that you read these instructions carefully before installing and operating the heating system.
Failure to do so may result in breach of warranty.

2 Unpacking

- 2.1 Inspect the unit and check whether there are missing parts.
- 2.2 Report any damage or claims to the carrier immediately.
- 2.3 For all returns to be accepted they must be authorized by the manufacturer.

3 Location and dimensions

- 3.1 These boilers are designed for wall mounting. Please see [Table 1](#) below for overall dimensions.
[Table 1](#) also gives the minimum clearances to combustible material as well as recommended distances for ease of service (e.g. replacement of tubular elements).

Table 1

Dimensions and Clearances									
Models	Overall dimensions				Clearances				
	Width	Height	Depth		Front	Back	Top	Right	Others
<u>Short Models</u> up to 23 kW 1ph up to 18 kW 3ph	18"	18"	9"		36"	0"	12"	6"	12"
<u>Long Models</u> up to 40 kW	18"	28"	9"		36"	0"	24"	6"	12"
TMB	13"	18"	9"		36"	0"	12"	6"	12"

- 3.2 The boiler room should be well ventilated as to maintain the temperature below 77°F.
- 3.3 The unit must be mounted level on a vertical wall with the outlet fitting on the left side of the unit.

4 Components

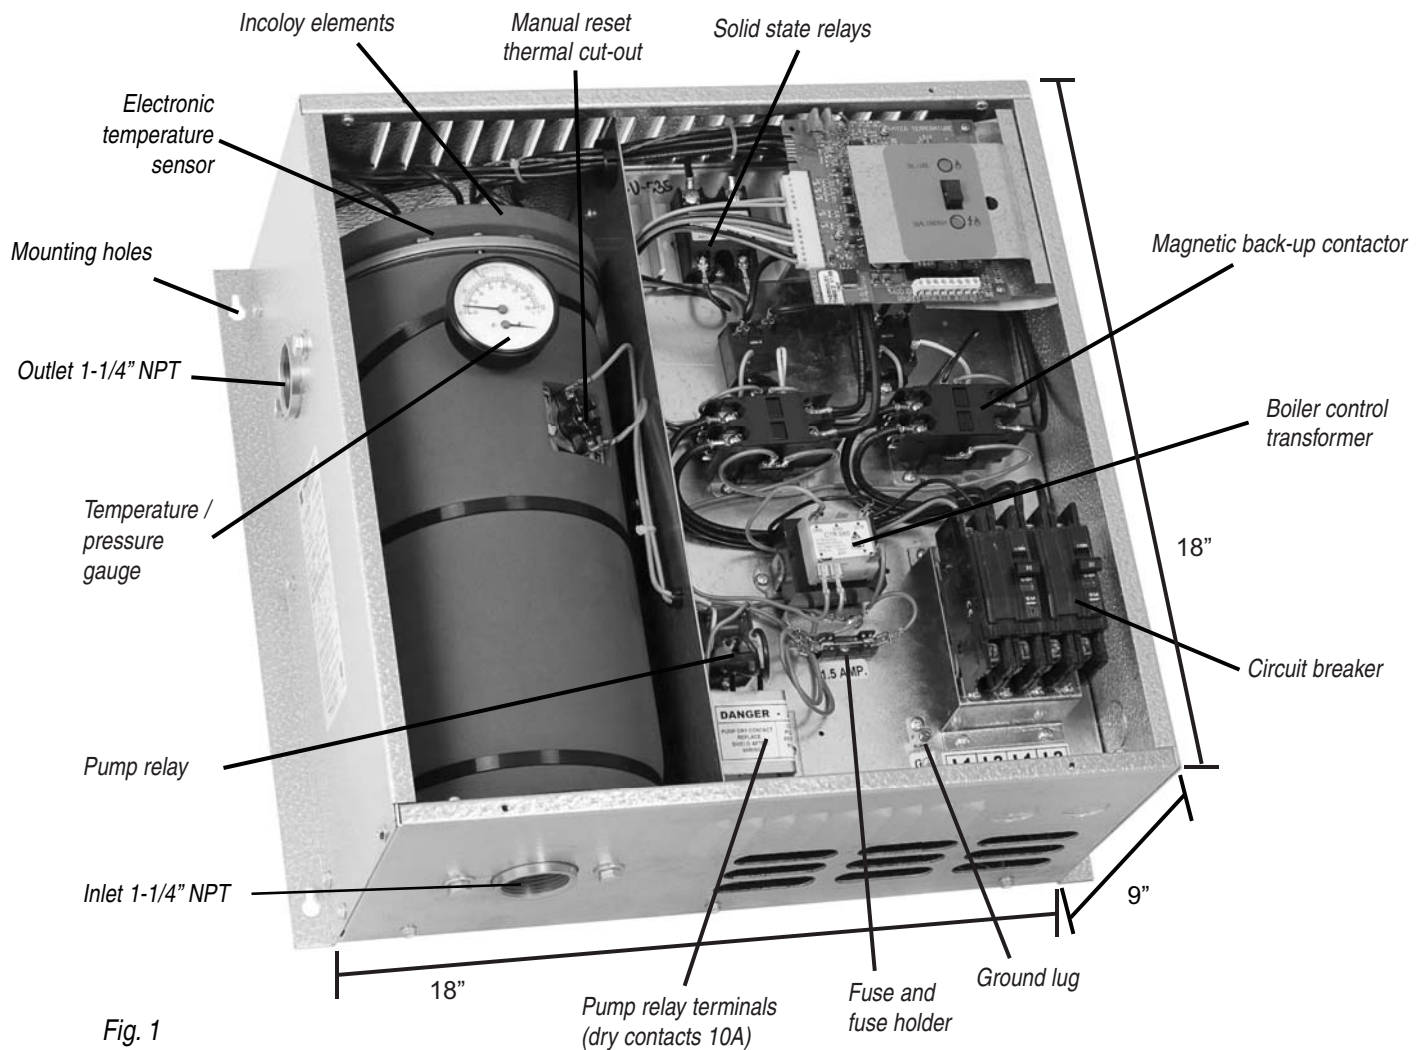



Fig. 1

Note : The model shown above is a typical FFB boiler 15kW / 240 Volts / 1 phase.

Model shown below is a TMB boiler 11kW / 240 / 1 phase.



Outdoor reset sensor Fig. 3

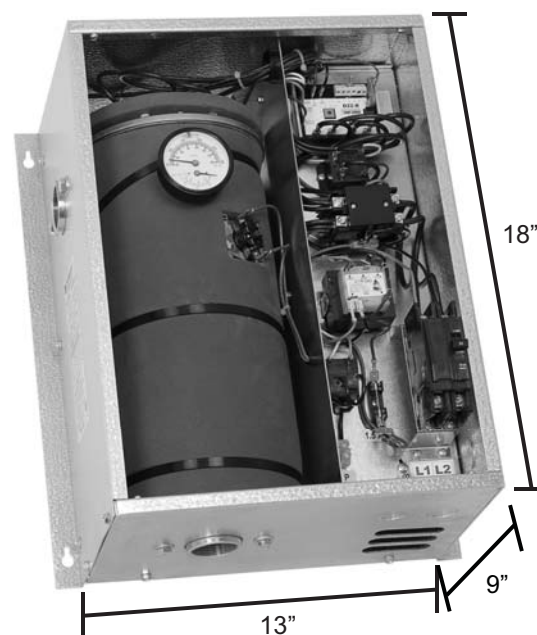

5 Standard specifications for all models

Table 2

Standard Models Specifications @ 240V / 1ph (U.S.A.)							
Dual-Energy Models	B-5U-FFB	B-6U-FFB	B-8U-FFB	B-9U-FFB	B-10U-FFB	B-12U-FFB	B-15U-FFB
kW	5	5.75	8	9	10	11.5	15
BTU / H	17,060	19,619	27,296	30,708	34,120	39,238	51,180
Total Amps	20.83	25.00	33.33	37.50	41.67	47.92	62.50
No. Of Power Supplies (Breaker Size)	1 x 30A	1 x 40A	1 x 50A	1 x 50A	1 x 60A	1 x 60A	1 x 60A 1 x 30A

Dual-Energy Models	B-18U-FFB	B-20U-FFB	B-23U-FFB	B-27U-FFB	B-30U-FFB	B-35U-FFB	B-40U-FFB
kW	18	20	23	27	30	35	40
BTU / H	61,416	68,242	78,479	92,128	102,360	119,420	136,480
Total Amps	75.00	83.37	95.83	112.50	125.00	145.83	166.67
No. Of Power Supplies (Breaker Size)	1 x 60A 1 x 50A	2 x 60A	2 x 60A	2 x 50A 1 x 60A	3 x 60A	4 x 50A	4 x 60A

TMB MONO Model Specifications @ 240V / 1ph (U.S.A.)				
Mono Models	B-3TMBU	B-6TMBU	B-9TMBU	B-11TMBU
kW	3	6	9	11
BTU/H	10,236	20,472	30,708	37,532
Total Amps	12.5	25.0	37.5	45.8
Breaker size	1 x 20A	1 x 40A	1 x 50A	1 x 60A

Standard Model Specifications @ 3ph (U.S.A.)					
Dual-Energy Models	B-18U-FFB	B-24U-FFB	B-30U-FFB	B-35U-FFB	B-40U-FFB
kW	18	24	30	35	40
BTU / H	61,416	81,888	102,360	119,420	136,480
Amps @ 208V / 3ph	48.00	66.69	83.37	96.00	n/a
No. Of Power Supplies (Breaker Size)	1 x 60A	2 x 50A	2 x 60A	2 x 60A	
Amps @ 480V / 3ph	21.68	28.90	36.13	42.15	48.00
Disconnect Switch	30A	30A	60A	60A	60A

NOTE: Other models, voltages and capacities available upon request. Please contact the factory.

Please use Table 3 below to select the wire size for the power supply.

Table 3

Cable Amps Capacity vs Wire Size											
Wire Size	12	10	8	6	4	3	2	1	0	00	000
Amps @ 75°C (167°F)	20	30	45	65	85	100	115	130	150	175	200
Amps @ 90°C (194°F)	20	30	45	65	85	105	120	140	155	185	210

Notes :

- 1- This table should be used as a guide only. Always select the wire size according to the local Electrical Code.
- 2- Always use wire suitable for 75°C (167°F) minimum, 300V or 600V as required.
- 3- All models with suffix "U" over 12 kW at 240V / 1ph require two feeders. Divide the Total Amps by 2 to select the proper wire size.
- 4- COPPER WIRE ONLY.

6 Water circulation and plumbing notes

- 6.1 The system is designed to operate with a maximum output temperature of 190°F or lower and a temperature rise across the unit of 20°F or lower.
Please refer to Table 4 for the minimum flow rate versus the capacity of the boiler.

Table 4

Minimum Water Flow Rate vs Capacity	
Capacity (kW)	US Gallons / min
3	1.1
5	1.8
6	2.0
8	2.8
9	3.1
10	3.5
11	3.9
12	4.2
15	5.3
18	6.2
20	7.0
23	8.0
27	8.8
30	10.4
35	12.2
40	13.9

- 6.2 In order to ensure an adequate flow rate :
- 6.21 Pressure loss (referred as "Head") caused by water friction in the system should not exceed the capacity of the pump.
- 6.22 Please refer to Table 5 below to find the copper pipe diameter (type L) recommended to accommodate the water flow found in Table 4 above.

Table 5

Maximum Flow Rate @ 15 psi	
Maximum Flow Rate	Pipe Diameter (Type L Copper)
US Gallons / min	
4.3	3/4"
10.1	1"
17.3	1-1/4"

- 6.23 Elbows and valves will greatly add to the head loss in the system. An appropriate water flow rate must be maintained to avoid tripping of the temperature limiter. Pipes with diameters larger than specified in Table 5 will not help to increase water flow.
- 6.24 Head loss through the boiler tank is negligible and should not affect calculations of flow rates.
- 6.3 The installation must have a drain valve, an expansion tank, maintenance valves and an automatic pressure reducing fill valve set at 15 PSI (104 kPA). A "T" fitting (1-1/4" NPT) must be installed at the supply outlet of the unit. This "T" must be equipped with a reducing bushing 1-1/4" to 3/4" NPT, facing upwards, to accept a 3/4" NPT pressure relief valve. This safety valve must be installed vertically. Except for the pressure relief valve, the above plumbing supplies are not supplied with the unit. Please refer to illustrations A, B and C at the end of this manual.

- 6.4 The automatic pressure relief valve supplied with the boiler is required to prevent dangerous pressure build-ups in the system in case of system malfunction and may under certain conditions vent hot water. Do not install the system where water could damage rugs, furniture, etc. When piping the relief valve to a drain, check with local authority for recommended method of installation. Do not open or tamper with the relief valve. If operated frequently or used to drain or flush the system, the valve could fail to seat properly and thus leak.

Important safety notice : This safety valve is mandatory and must be installed as shown in the illustrations A, B and C at the end of this manual. The omission of the safety valve installation will create a very serious safety hazard and will void all warranties.

- 6.5 Automatic air vents should be installed at the highest point of the installation and above the level of the boiler tank, ideally on all radiator units for best results or at points where air could possibly be trapped in the system.

Caution : Make sure the system has been properly vented before starting the unit.

- 6.6 Depending on water conditions, determine whether water additives are necessary.

7 Mechanical installation

- 7.1 Mounting brackets are located on the sides of the boiler. Depending on the size of the unit, four or six holes are provided. The unit may be attached directly to a combustible surface.
- 7.2 Use a circulator pump of appropriate capacity for the intended application. The pump should be placed as close as possible to the boiler. Ensure that the water direction is correct. An arrow indicating the circulation direction is generally visible on the pump casing.
- 7.3 Install inlet and outlet piping.
- 7.4 Install air vents, valves, the pressure relief valve supplied with the unit, expansion tank, etc.
- 7.5 When everything is finished, install the temperature / pressure gauge.

8 Electrical installation

- 8.1 Disconnect all power sources before opening the main panel and working within.
- 8.2 Read the nameplate and other markings carefully and wire strictly in accordance with the wiring diagram.
- 8.3 Wires and protective equipment must be sized according to the applicable Electrical Code.
- 8.4 Use only wires suitable for minimum 167°F.
- 8.5 Install the outdoor sensor on an exterior North wall and connect it with 18/2 wire to terminals "OT / OT" on the electronic board (TH-600 series controller).
- 8.6 On the electronic aquastat (marked "WATER TEMPERATURE"), select the **maximum** water temperature required (1-10) by the type of installation. Please see [Table 6](#) below for the temperature obtained according to the knob position. The **minimum** water temperature is reset automatically by the outdoor sensor. Please see the variation graph in [Fig 5](#).

Table 6

Water Temperature controlled by Electronic Aquastat											
Set-point		10	9	8	7	6	5	4	3	2	1
Maximum temperature	°C	88	81	75	67	58	50	45	42	39	36
	°F	190	178	167	153	137	122	113	107	102	97
Minimum temperature	°C	48	48	48	45	40	38	34	31	29	28
	°F	118	118	118	113	104	100	93	88	84	82

Electronic Aquastat

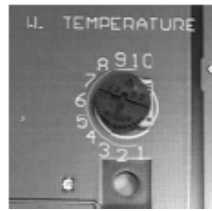


Fig. 4

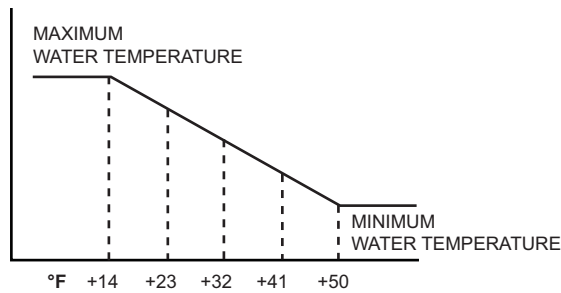


Fig. 5

- 8.7 The outdoor sensor will :
- Maintain the selected **maximum** water temperature when the outdoor temperature is at +14° F or colder.
 - Automatically and proportionally** compensate by varying the water temperature between the maximum and minimum when the outdoor temperature is between +14°F and +50°F.
 - Maintain the **minimum** water temperature when the outdoor temperature is between +50°F and +68°F.
 - Prevent boiler operation above +68°F.
- NOTE** : If you choose not to use the outdoor sensor, don't connect it to the "**OT / OT**" terminals nor jumper these terminals. You will not use this feature and the water will simply be maintained at the maximum selected temperature.
- 8.8 Connect the thermostat or the zone valve end switch wires to "**C**" and "**W1**" terminals on the electronic board. Power stealing thermostats require an isolation relay (not included).
- 8.9 **Circulating Pump Control.** The "**P / P**" terminals are connected to dry contacts of a relay (capacity up to 1 HP) and are used to start the pump. This relay is switched **ON** with the first heating step and **OFF** after the last one. A separate 120V / 1Ø service must be provided from the electrical panel to the boiler for the pump. For Electric Boiler only systems, refer to the wiring diagram. For Electric Boiler with fossil fuel backup, see the diagram on page 23 labeled 'PUMP WIRING WITH FOSSIL FUEL BACKUP BOILER' as the pump must also run when another source of heat is selected. Follow the extra steps dedicated to a FFB installation in the start-up sequence.
- 8.10 Set the room thermostat heat anticipator (when available) to **0.2** Amperes.
- 8.11 If the system is used with Load Management control, connect the Utility signal to "**S1 / S2**" terminals. A closed contact enables the boiler, an open contact disables the boiler.
- 8.12 The installation is now ready for start-up procedure and testing.

9 Start-up procedure and test sequence


Do not energize electrical elements prior to purging system and verifying proper water circulation

Double check the following carefully :

- All wiring and plumbing is complete.
- Pipes have been cleaned, the system has been flushed and filled again.
- Without powering the entire unit, install a jumper between the "**P / P**" terminals (using proper gauge of wire) and switch the pump breaker **ON** as to let the pump run alone. Verify that the pump is running freely and check for leaks. During this test, a lot of bubbles will travel through the system and air will be eliminated by the automatic vents. You can accelerate the process by purging the radiators manually. Shut off the pump breaker at the panel, then remove the jumper between the "**P / P**" terminals.
- The pressure in the system has been stabilized at approximately 15 PSI (104 kPa).
- The entire system is now almost free of air.
- The room thermostat anticipator (when available) has been set at **0.2** Amperes.
- Switch the boiler breaker **ON** at the main panel.

- 9.8 Set the thermostat above the room temperature. The system should start.
- 9.9 Make sure the pump starts running as soon as the system starts.
- 9.10 Heating stages will be switched **ON** in sequence at 30 second intervals, confirmed by green lights on the left hand side of the PC board on the **TH600** or by red lights on the right hand side on the **D22-B**.
- 9.11 Wait for two minutes and measure the current drawn by the boiler and compare it with the one shown on the nameplate.
- 9.12 When the required maximum water temperature selected on the aquastat (**0-10**) or controlled by the outdoor sensor is reached, the electronic controller will modulate the boiler capacity to maintain the water temperature, as long as the demand for heating is not satisfied. The bottom green light flashes continuously on the **TH600** or one of the red lights on the **D22-B** to indicate that the boiler is maintaining the setpoint. When the room thermostat is satisfied, the heating stages will come **OFF** in sequence at 5 second intervals.
- 9.13 Set the room thermostat to the desired set point.
- 9.14 The boiler is now ready and functional.

Extra test steps for Electric with Fossil Fuel Backup Boiler installation

- 9.15 Disconnect the room thermostat wires from the existing boiler and connect them to "**C**" and "**W1**" terminals on the electronic board of the electric boiler.
- 9.16 Connect two (2) wires from "**B / B**" control terminals of the electronic board on the electric boiler to the  (thermostat) terminals of the existing boiler.
- 9.17 Terminals "**S1 / S2**" on the electronic board should receive the utility **Load Management Control** wires.
- 9.18 Connect the pump terminals "**P / P**" in parallel to the existing thermostatic pump control as per wiring diagram on page 23 to allow the operation of the pump in any of the "**Dual-Energy**" modes selected.
- 9.19 When the system is operating in Fossil Fuel mode, the supply water temperature of the fossil fuel boiler should **never exceed 190°F** which may trip the manual high limit in the electric boiler.

10 Test sequence for FFB Boiler systems

- 10.1 An FFB boiler is supplied with a three-position mode selector switch. Because of differences in regional regulations, the electronic board has been factory set so as to allow the activation of the electric mode depending on the unit destination. In the "**Gas / Oil**" position the thermostat will call upon the gas or oil boiler or furnace to maintain the house temperature at the desired level. The "**Dual-Energy**" mode gives automatic control to the outdoor sensor or alternate switching signals from the local utility for **Load Management** control. When the **Load Management** contacts are closed, the "**Electric**" mode is selected. When these contacts are open, the "**Gas / Oil**" mode is selected. A green pilot light indicates the mode that has been selected.

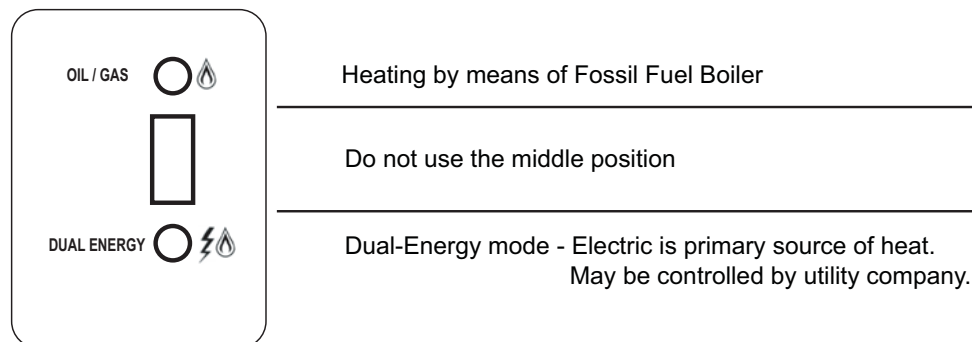




Fig. 6

- 10.3 Simulate a heating demand by setting the thermostat higher than the room temperature.
- 10.4 Switch the mode selector to position  and check that the burner responds to the thermostat demand.
- 10.5 Switch the mode selector to the "**Dual-Energy**" position . Install a jumper between terminals "**S1 / S2**"; the electric mode is automatically selected. The pump will start and the heating stages will be switched **ON** in sequence at 30 second intervals. Measure the current drawn by the boiler and compare it with the one shown on the nameplate. If you remove the jumper from terminals "**S1 / S2**", the system should switch back to the "**Oil / Gas**" mode.
- 10.6 Switch the mode selector to the desired position and set the room thermostat to the desired temperature.
- 10.7 Your boiler is now ready and functional.

11 Installation examples

- 11.1 **Installation A** shows a Thermolec electric boiler in a Full-Electric Configuration.
- 11.2 **Installation B** shows a Thermolec electric boiler in a FFB-Series Configuration.
Water is always passing through both boilers even if only one heat source is selected at a time.
- 11.3 **Installation C** shows a Thermolec electric boiler in a Primary/Secondary Piping Configuration.
Water is pumped through multiple zones (more than two equally sized zones).

12 Position and electric values of heating elements

Standard values of heating elements at 240 Volts are 3kW, 5kW, 5.75kW, 8.75kW & 10 kW. Please refer to the following sketches and tables to find the position and test value in ohms of each element. Please ensure you disconnect the element wires completely before you make the resistance reading.

13 Replacement of heating elements

Heating elements nuts and cover bolts have been factory torqued with a calibrated tool. Please make sure you have a torque driver and the proper sockets handy before you open the boiler tank.

Elements nuts should be torqued at :

130 inch-pound (in-lbs) or equivalent

Please ensure you use the double wrench method (i.e. an open key inside of the tank to hold the element hexagon flange firmly and the torque wrench outside). Don't let the element turn while tightening or it may become damaged.

Cover hex bolts should be torqued at :

70 inch-pound (in-lbs) or equivalent

Please make sure to tighten all nuts by hand first, then tighten them as per fig. 8 and finally apply the proper torque with the torque wrench. Resist the feeling that the bolts could get torqued more (even if possible) because that action would simply squash the silicone gasket to the point where it would eventually lose all its resiliency and sealing properties.

Keep in mind that an equal torque is far more important.

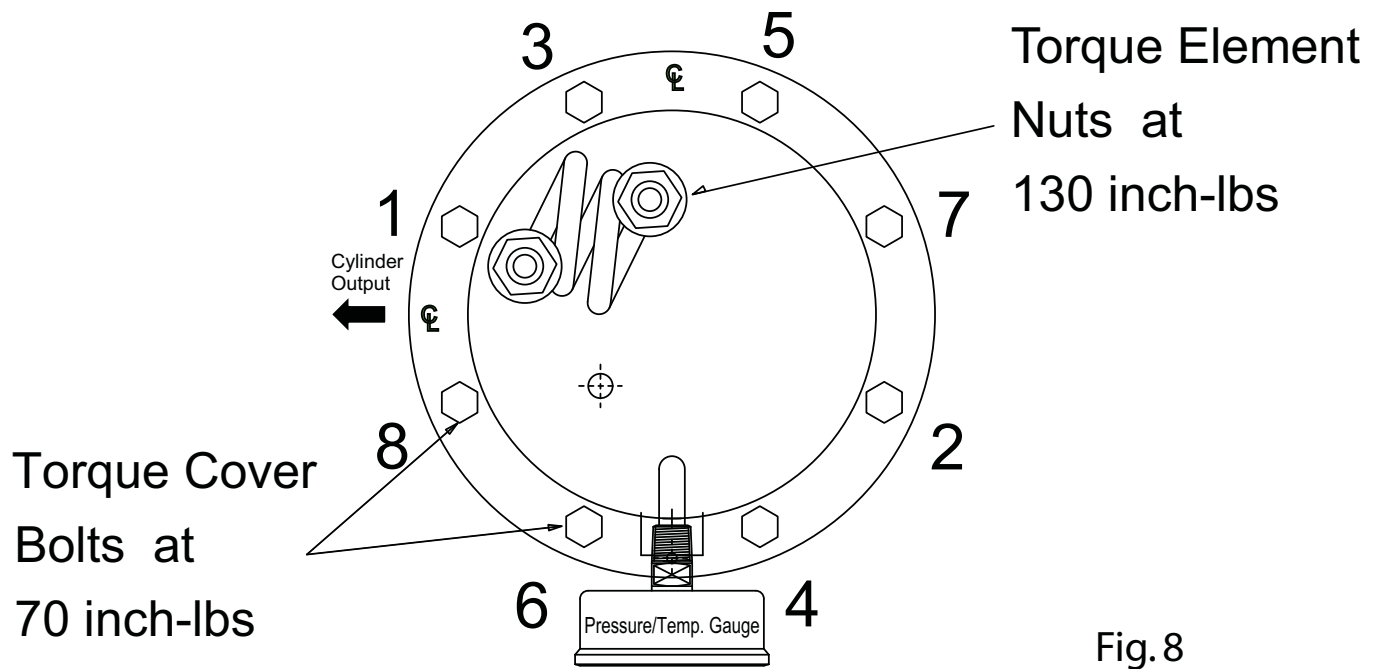


Fig.8

14 Warranty

Thermolec Ltd. warrants against defects in materials and workmanship the heat generator casing of its boiler and the heating elements for ten (**10**) years and all other components for two (**2**) years after date of original installation.

Any claim under this warranty shall be considered only if the product has been installed and operated in accordance with Thermolec's written instructions.

Any misuse of the system or any repair by persons other than those authorized by Thermolec, carried out without its written consent, voids this warranty.


Thermolec's responsibility shall be limited in any case to the replacement or repair, in its factory or in the field, by its own personnel or by others chosen by Thermolec, at its option, of such boiler or parts thereof, as shall prove to be defective within the warranty period.

Thermolec Ltd. will not be held responsible for labor, accidental or consequential damages, nor for delays, nor for damages caused by the replacement of the said defective boiler.


Elements Position, Electric Data and Part

Height	Volts / Phases	Total KW	Position 1			Position 2			Position 3			Position 4		
			Watts	Ohms	Part #	Watts	Ohms	Part #	Watts	Ohms	Part #	Watts	Ohms	Part #
13" Cylinder	240/1	3.00	3000	19.2	CBLR065									
		5.00	5000	11.5	CBLR055									
		6.00	5750	10.0	CBLR060									
		8.00	5000	11.5	CBLR055	3000	19.2	CBLR065						
		9.00	5750	10.0	CBLR060	3000	19.2	CBLR065						
		10.00	5000	11.5	CBLR055	5000	11.5	CBLR055						
		12.00	5750	10.0	CBLR060	5750	10.0	CBLR060						
		15.00	5000	11.5	CBLR055	5000	11.5	CBLR055	5000	11.5	CBLR055			
		18.00	5000	11.5	CBLR055	5000	11.5	CBLR055	5000	11.5	CBLR055	3000	19.2	CBLR065
		20.00	5000	11.5	CBLR055	5000	11.5	CBLR055	5000	11.5	CBLR055	5000	11.5	CBLR055
		23.00	5750	10.0	CBLR060	5750	10.0	CBLR060	5750	10.0	CBLR060	5750	10.0	CBLR060
23" Cylinder	240/1	27.00	8750	6.6	CBLR058	8750	6.6	CBLR058	5000	11.5	CBLR055	5000	11.5	CBLR055
		30.00	10000	5.8	CBLR059	10000	5.8	CBLR059	5000	11.5	CBLR055	5000	11.5	CBLR055
		35.00	8750	6.6	CBLR058	8750	6.6	CBLR058	8750	6.6	CBLR058	8750	6.6	CBLR058
		40.00	10000	5.8	CBLR059	10000	5.8	CBLR059	10000	5.8	CBLR059	10000	5.8	CBLR059
TMB 13" Cylinder	240/1	3.00	3000	19.2	CBLR065									
		6.00	3000	19.2	CBLR065	3000	19.2	CBLR065						
		9.00	3000	19.2	CBLR065	3000	19.2	CBLR065	3000	19.2	CBLR065			
		11.00	3000	19.2	CBLR065	3000	19.2	CBLR065	5000	11.5	CBLR055			


One Element Configuration

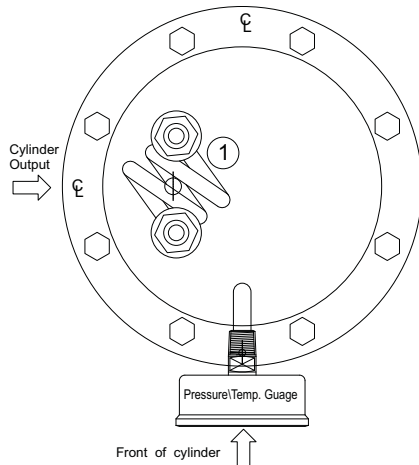


Two Element Configuration

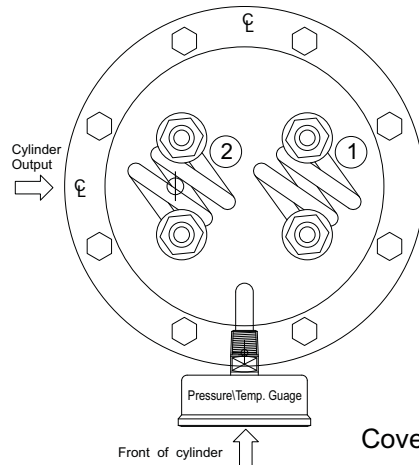

Three Element Configuration

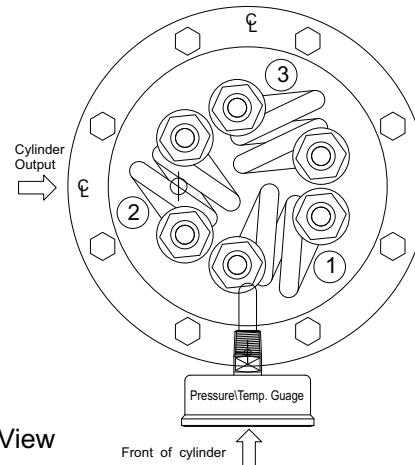
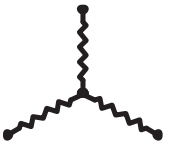



Four Element Configuration

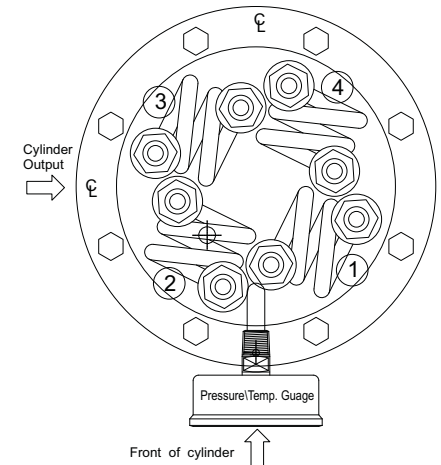

Cover Top View


Elements Position, Electric Data and Part

Height	Volts / Phases	Total KW	Volt / element	# élem.	Position 1, 2, 3			Configuration
					Watts	Ohms	Part #	
13" Cyl.	208/3	18.00	208	6	3000	14.4	CBLR051	
23" Cyl.		24.00		6	4000	10.8	CBLR052	
		30.00		6	5000	8.7	CBLR053	
		36.00		6	5750	7.5	CBLR054	
								
13" Cyl.	480/3	18.00	277	3	6000	12.8	CBLR056	
23" Cyl.		24.00		3	8000	9.6	CBLR061	
		30.00		3	10000	7.7	CBLR062	
		35.00		3	11600	6.6	CBLR063	
		40.00		3	13300	5.8	CBLR064	

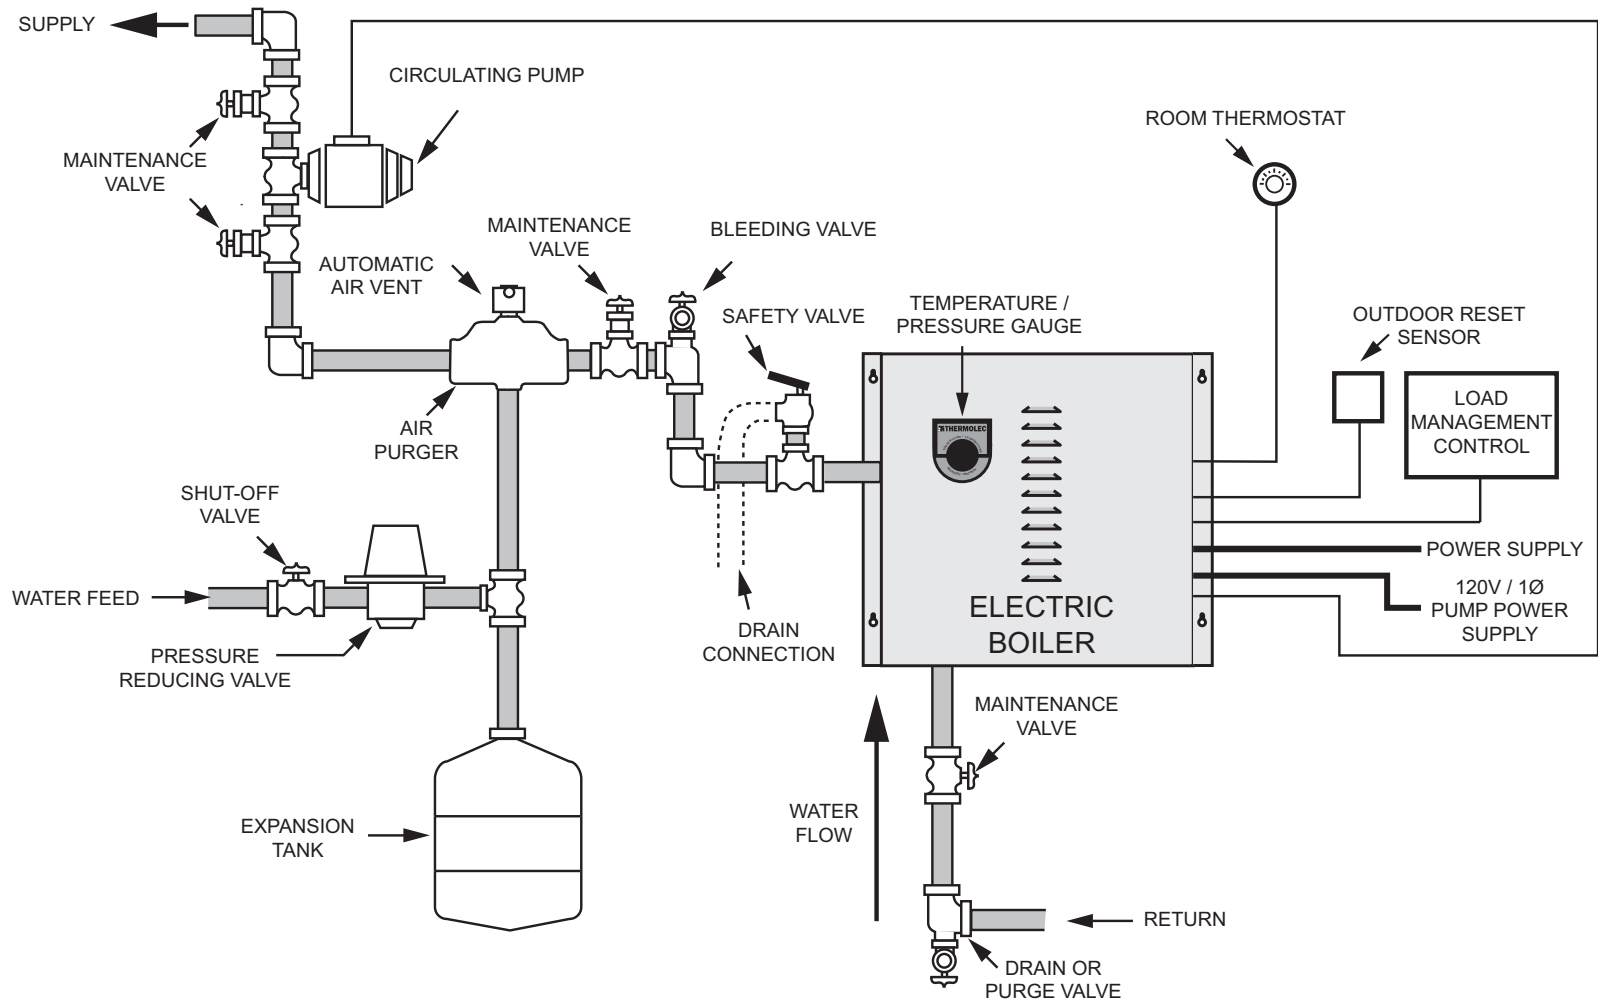


ALL-ELECTRIC INSTALLATION
(Illustration A)

NOTE: Refer to table 4 for minimum flow rates based on boiler kW. Primary/secondary boiler piping is recommended when system has more than two equally sized zones.

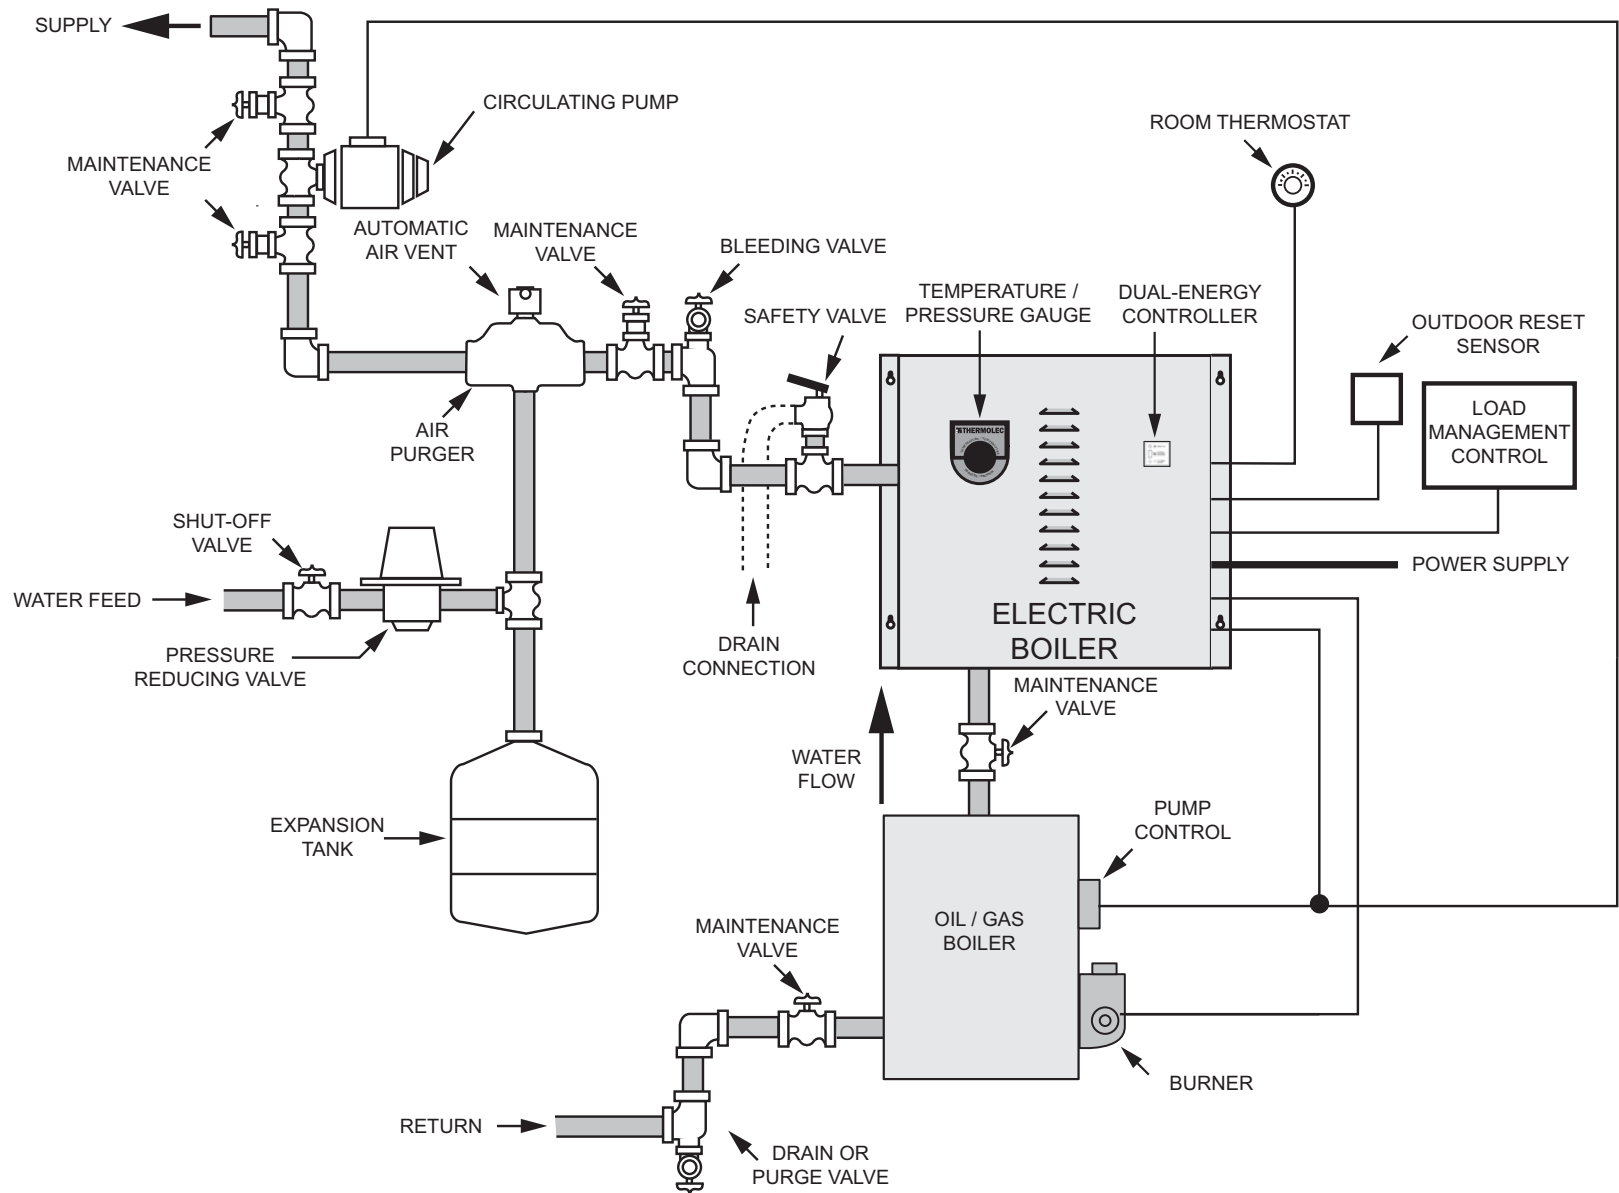


DUAL-ENERGY SERIES INSTALLATION
(Illustration B)

NOTE: Refer to table 4 for minimum flow rates based on boiler kW. Primary/secondary boiler piping is recommended when system has more than two equally sized zones.

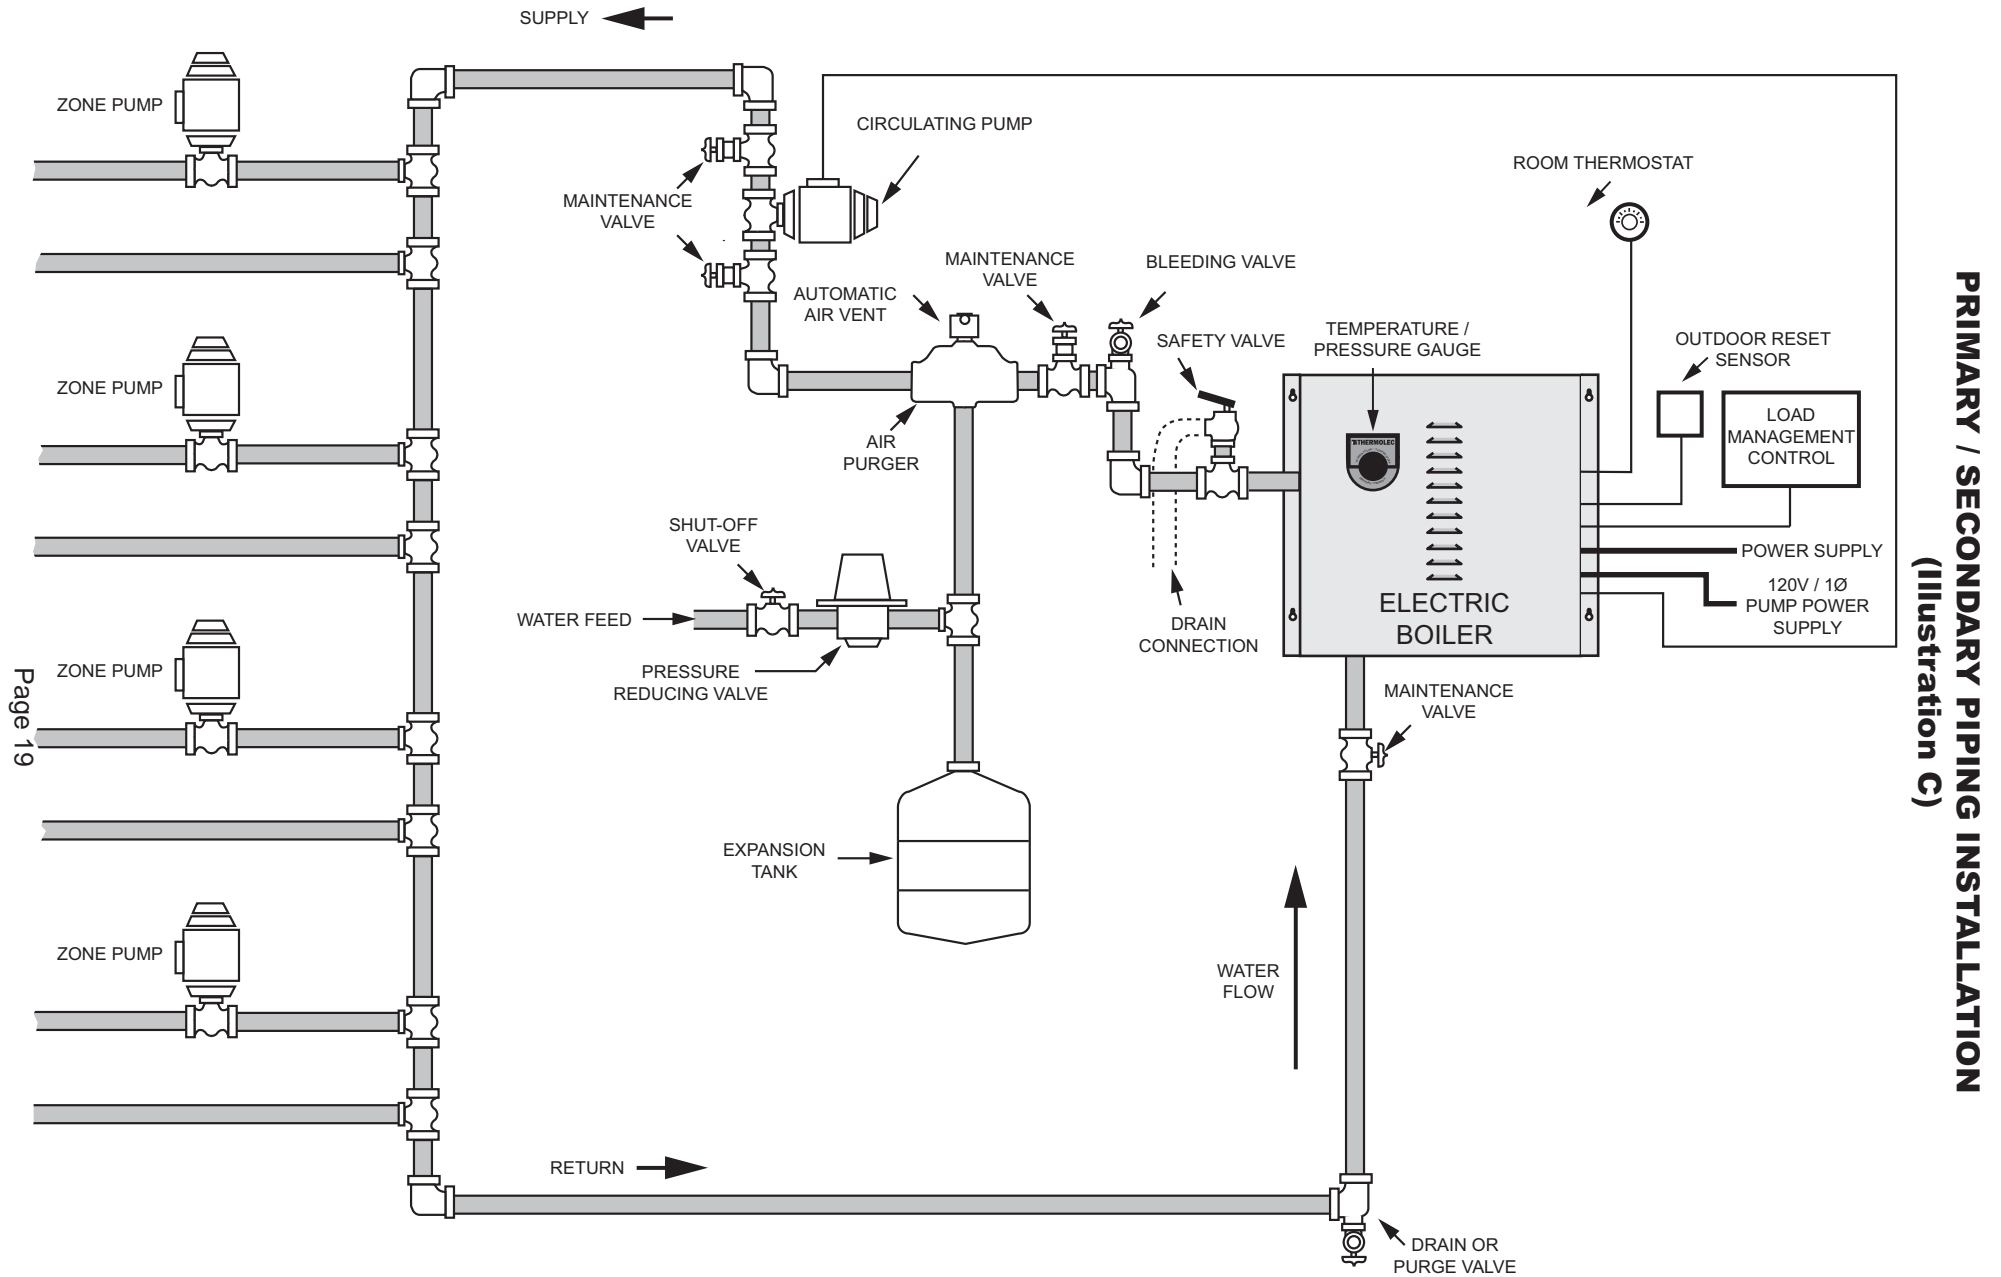

NOTE: Refer to table 4 for minimum flow rates based on boiler kW. Primary/secondary boiler piping is recommended when system has more than two equally sized zones.

PUMP WIRING WITH FOSSIL FUEL BACKUP BOILER

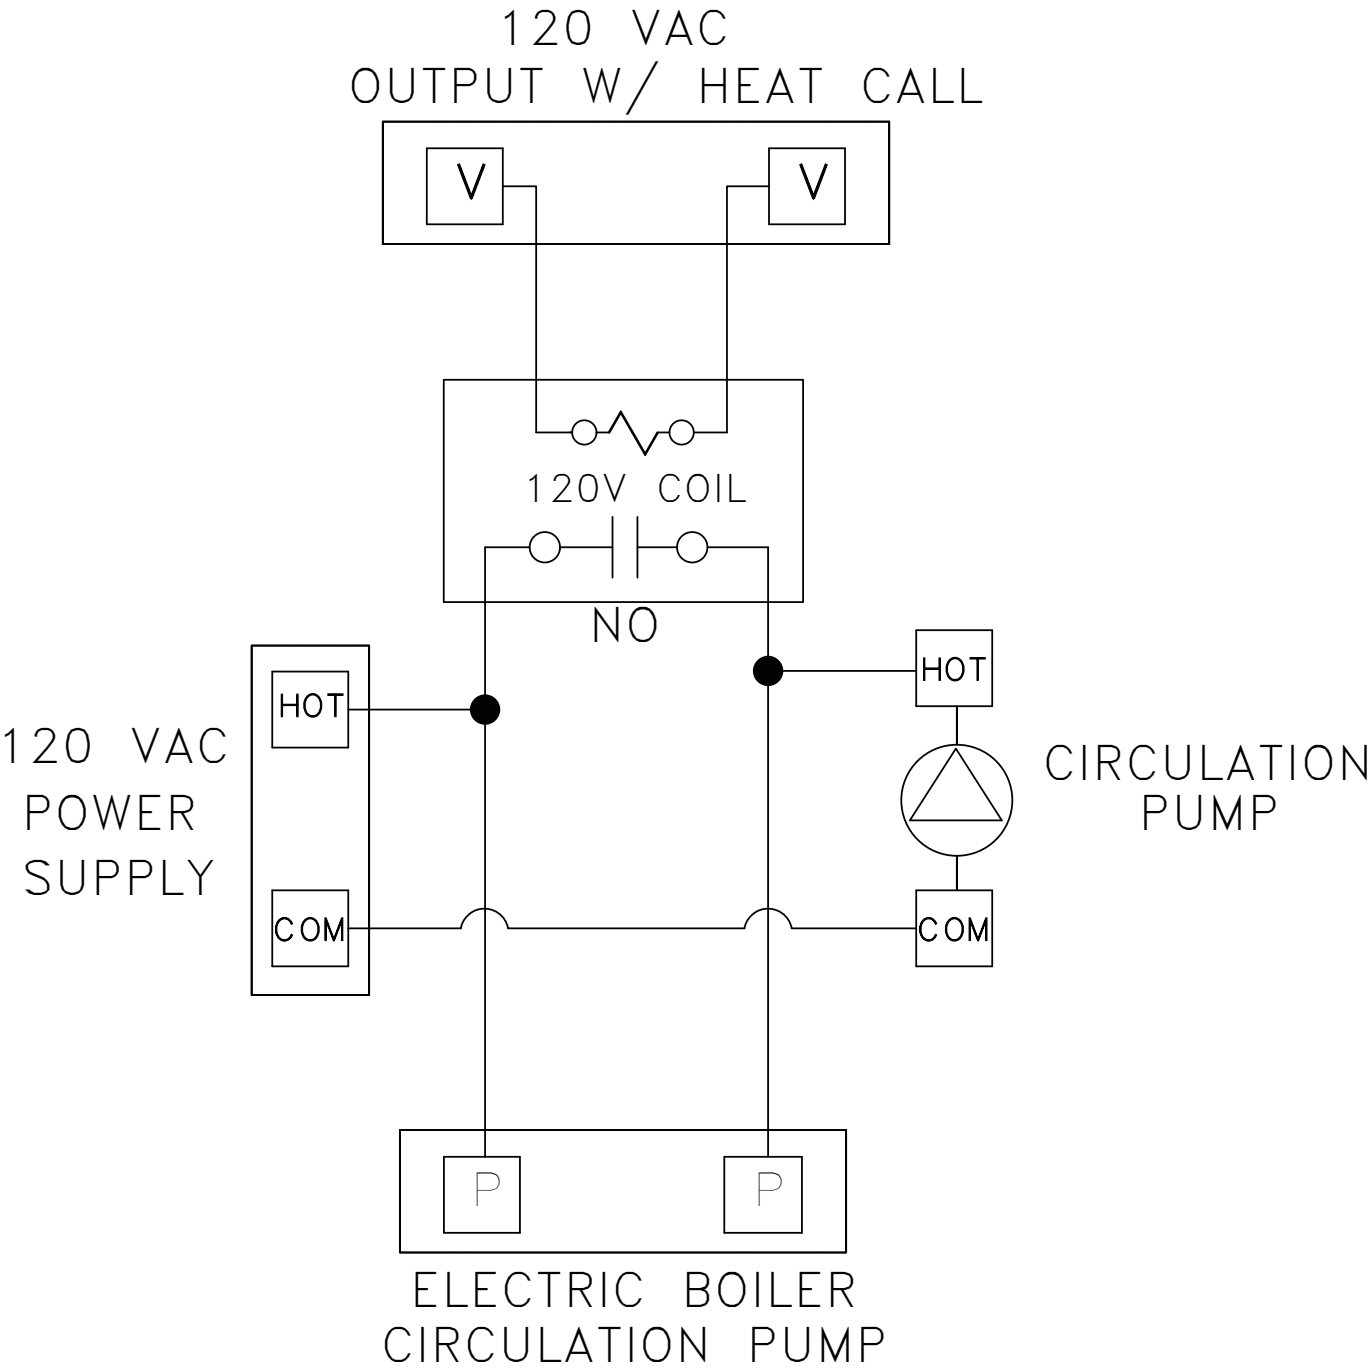

IMPORTANT:
WIRE IN ACCORDANCE TO LOCAL & NATIONAL ELECTRIC
CODES. READ CAREFULLY INSTALLATION INSTRUCTION BEFORE
WIRING AND OPERATING.


- LEGEND
- M - MANUAL RESET CUT-OUT
 - CM - BACK-UP CONTACTOR
 - CP - CIRCULATION PUMP RELAY
 - E1...E4 - HEATING ELEMENTS
 - FU-1 - FUSE 2 AMP 24V
 - PC1 - PRINTED CIRCUIT BOARD TH600
 - PL1 - PILOT LIGHTS & 3 POSITION SWITCH
 - T - TRANSFORMER, CLASS 2
 - SSR - SOLID STATE RELAY
 - V1 - VALVE CONTROL RELAY
 - CB1,2 - CIRCUIT BREAKER #1,2

FFB Boiler

Note: If power stealing thermostat is used,
thermostat must be powered by separate 24V
source and add relay

ROOM THERMOSTAT (SET ANTICIPATOR (0.2AMP.)

OUTDOOR TEMPERATURE SENSOR

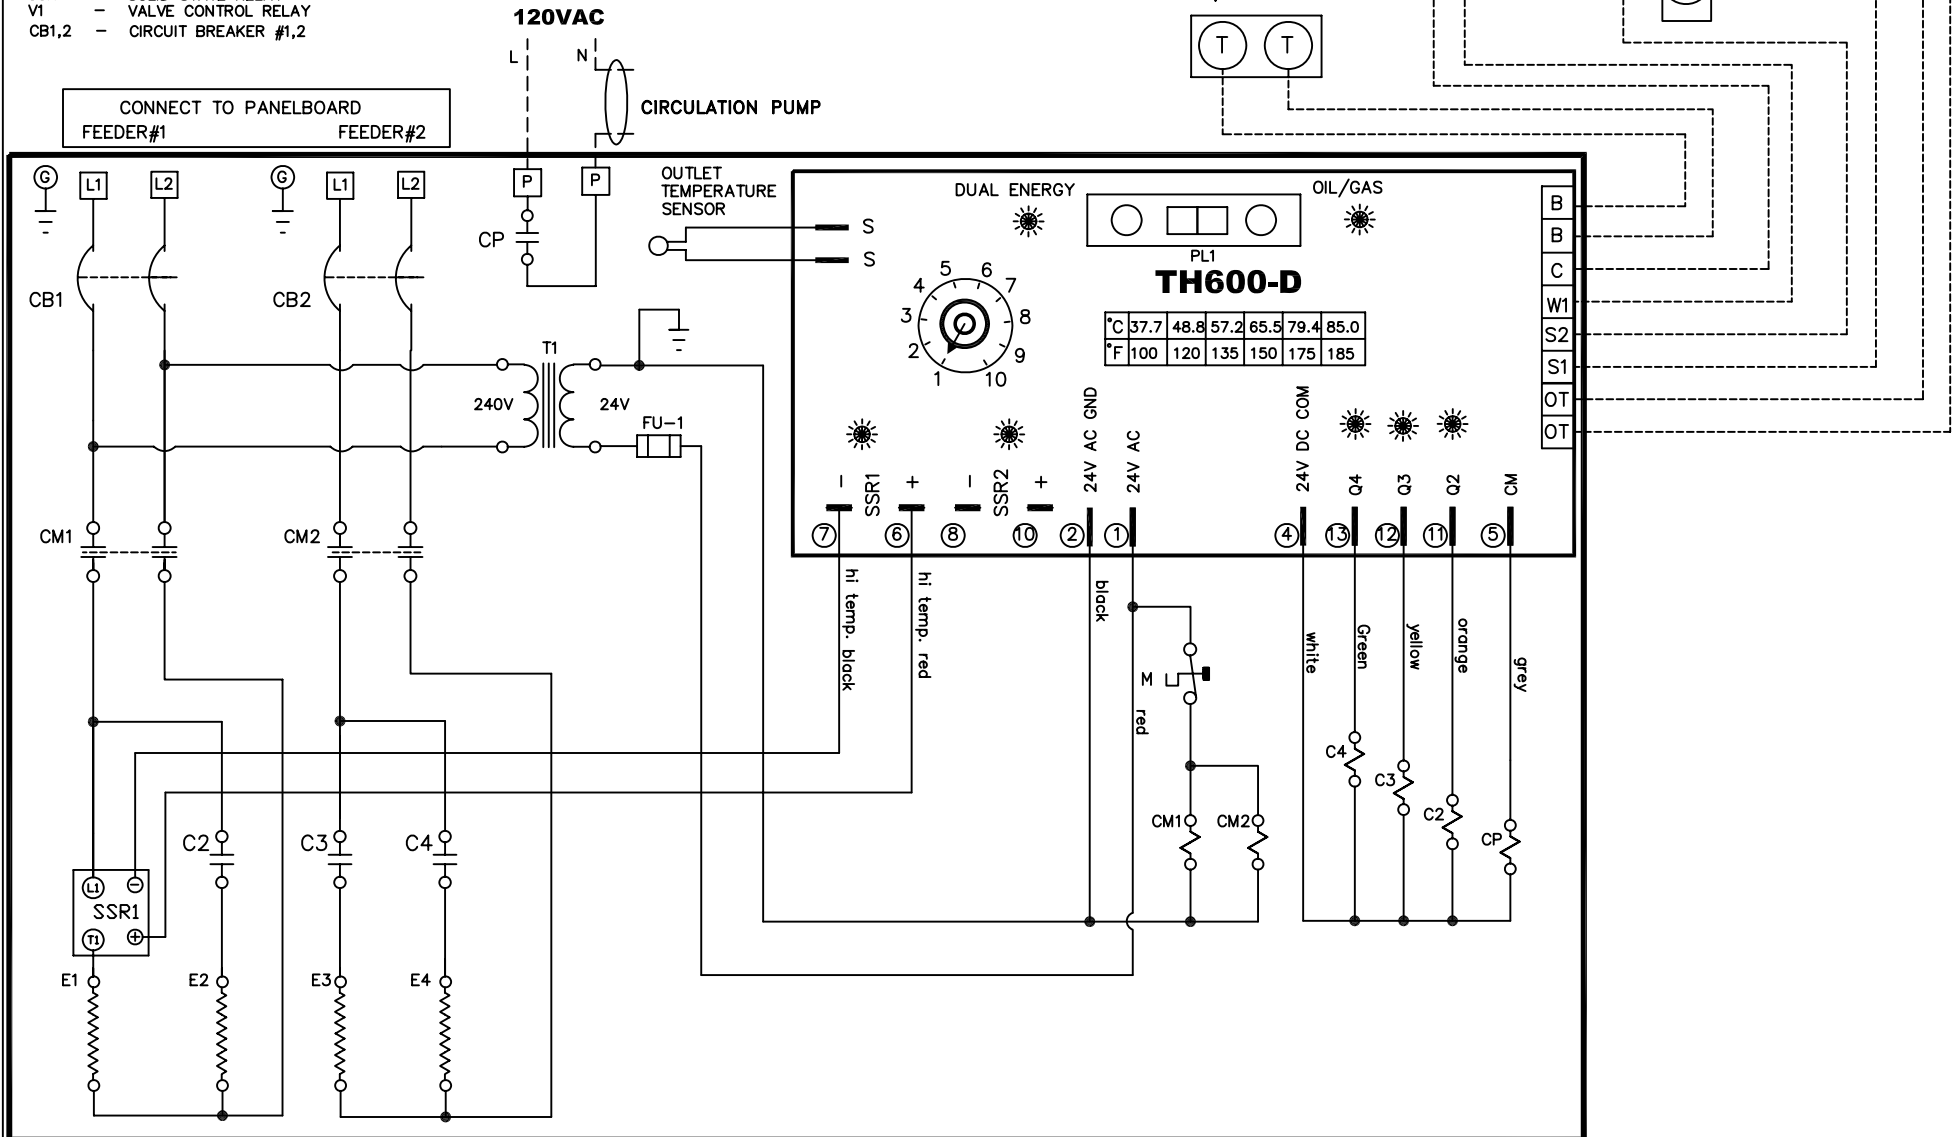

TITLE/TITRE

B18-B20



THERMOLEC

LTEE
LTD

MONTREAL - CANADA

DRAWING NO. BI-ENERGIE TH-600-B18-20 1SCR-3RLY - USA

DATE
16-04-10

PER

FULL BREAK

IMPORTANT:

WIRE IN ACCORDANCE TO LOCAL & NATIONAL ELECTRIC CODES. READ CAREFULLY INSTALLATION INSTRUCTION BEFORE WIRING AND OPERATING.

TMB

Note: If power stealing thermostat is used, thermostat must be powered by separate 24V source and add relay

ROOM THERMOSTAT (SET ANTICIPATOR (● 0.2AMP.)

LEGEND

- M - MANUAL RESET CUT-OUT
- CM - BACK-UP CONTACTOR
- CP - CIRCULATION PUMP RELAY
- E1...E3 - HEATING ELEMENTS
- FU-1 - FUSE 2 AMP 24V
- T - TRANSFORMER, CLASS 2
- D22-B - ELECTRONIC CONTROLLER
- CB1 - CIRCUIT BREAKER


120VAC

CONNECT TO PANELBOARD FEEDER

CIRCULATION PUMP

LOAD MANAGEMENT CONTROL

OUTDOOR TEMPERATURE SENSOR

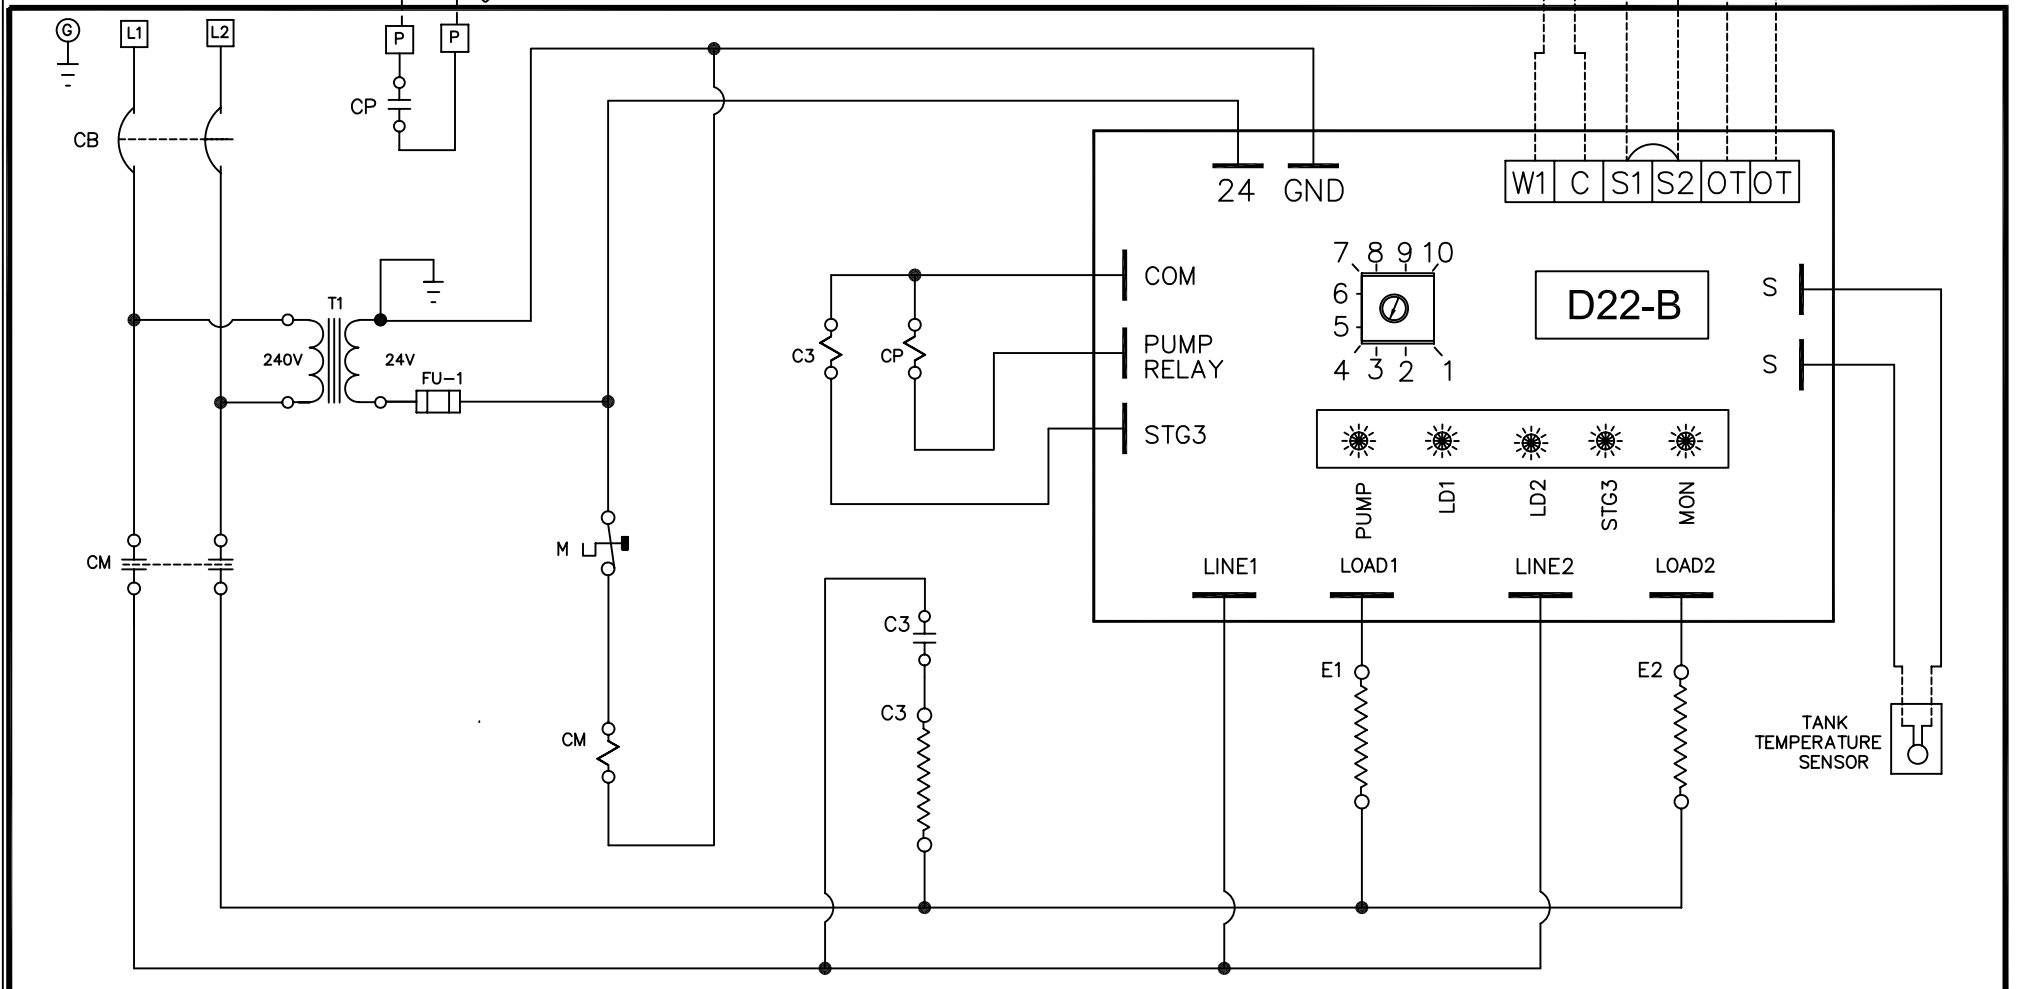

TITLE/TITRE

B9 - B11



THERMOLEC

MONTREAL - CANADA

LTEE
LTD

DRAWING NO. D22-B TMB B9, B11

DATE

29-06-10

PER

FULL BREAK

Electric Boiler Troubleshooting Guide

Call for heat and boiler doesn't start, no lights on circuit board. Try the following:

1. Confirm that the boiler is connected to 240/1 power, main panel breakers are ON, breakers supplying boiler in panel are ON.
2. Boiler circuit breakers are ON.
3. Check line side of transformer for 240 volts. If yes, continue. If no, check for 240VAC at circuit breaker.
4. Check low voltage side of transformer for 24 VAC. If yes, continue. If no, change transformer.
5. Check for 24 VAC from fuse to circuit board. If yes, continue. If no, change fuse.
6. If outdoor sensor is attached to OT/OT on boiler circuit board, is outdoor temperature below 68°F? If outdoor temperature is 68°F or more, disconnect one leg of wires to OT/OT. Do not jumper OT/OT.
7. Confirm that load management control contact is wired to S1/S2 terminals on boiler circuit board and load management contact is closed, or jumper S1/S2. Boiler will not start if S1/S2 is open.
8. Confirm that thermostat or zone valve end switch is wired to C/W1 terminals on boiler circuit board and that boiler is getting a good call for heat, or jumper C/W1.
9. Turn OFF circuit breakers at boiler. On upper left corner of circuit board are two red wires connected to supply water sensor on boiler tank. Carefully disconnect red wire connections from board. Turn ON circuit breakers. If boiler starts, turn OFF circuit breakers and replace supply water sensor. If boiler doesn't start, replace circuit board.

Call for heat, circuit board lights come on but no heat or insufficient heat. Try the following:

1. Check amp draw at boiler circuit breakers. If amp draw is less than rating on boiler label, continue to next step. If amp draw is correct, turn OFF circuit breakers and check pump operation, confirm system design, heat loss, boiler sizing, system water level, etc.
2. Check back-up contactor. Set meter to volts AC and measure for voltage on power wires out of contactor going to elements/relays. If 240VAC, go to next step. If not 240VAC, check for 24VAC at coil of back-up contactor. If no 24VAC, check for 24VAC across high limit sensor on tank. If 24VAC, reset manual high limit or, if auto high limit, change high limit. If no 24VAC, check wiring at high limit.
3. Check for 24V DC from circuit board to coil of element relays - smaller two screws on solid state relay, terminals labeled coil on DC relays. Make sure + probe on meter to + terminal on SSR and – to –. If no DC voltage to relays, check wiring harness connection to circuit board. If DC voltage at relay, set meter to volts AC and check contact side of relay. If solid state relay, put probes on SSR L1 and T1 – larger two screws on SSR. If DC relays, put probes on terminals labeled contacts. If 0 voltage, relay contact is closed, go to step 4. If 240VAC at relay contact, it is failed open, change relay.
4. Turn OFF circuit breakers. Check for continuity at boiler elements. If no continuity, change element.

Call for heat, boiler starts and back-up contactor is noisy. Try the following:

1. Check for 24VAC out of transformer to contactor. If less than 24VAC, change transformer. If 24VAC, contactor is defective or contacts are dirty. Continue.
2. Turn OFF boiler circuit breakers. Disconnect wires to contactor, remove contactor from boiler, remove two screws from bottom metal plate on contactor, carefully remove coil and magnetic core, carefully clean surface of magnetic contacts with emery cloth. Reassemble and reinstall contactor. Remove all debris, metal shavings, etc. from inside of boiler cabinet. Restart boiler. If contactor noise continues, replace contactor.

Call for heat, boiler starts but pump doesn't run. Try the following:

1. Check for 120VAC from main electrical panel to pump. Pump must get power from the panel.
2. Route 120VAC from panel to pump through boiler. Run line leg of 120VAC through PP terminal on boiler. When boiler starts, relay connected to PP will close and start pump.
3. If pump is powered from panel and run through PP as described above and pump does not start when boiler starts, check for continuity on contact side of PP relay. If not closed, replace PP relay.

Call for heat, boiler starts, call for heat ends (no lights on board) and boiler continues to heat. Try the following:

1. Confirm that the call for heat has ended, disconnect wires to C/W1.
2. Check for amp draw at each element circuit. If there is amp draw, check for 240V AC on contact side of element relay. If there is 0 voltage, relay has failed closed, change relay.
3. Check for amp draw and if some amp draw but less than full rated amp draw: Set meter to ohms and check element drawing amps. If element reads less than rated ohms, change element. If element reads proper ohms, change relay.

Call for heat and boiler tank is "noisy". Hissing, percolating or knocking noise from tank:

1. Most common cause of boiler tank noise is improper flow. Refer to installation manual for proper GPM based on kW size of boiler.
2. If proper GPM flow rate through boiler, noise can be caused by sediment build-up on elements. Check for build-up on outside surface of elements.




Part Number	Description	FFB Parts														TMB Parts			
		B-5	B-6	B-8	B-9	B-10	B-12	B-15	B-18	B-20	B-23	B-27	B-30	B-35	B-40	B-3	B-6	B-9	B-11
16-04-001	TMB D-22 Control Board															1	1	1	1
10-02-0049	B/U Contactor 50 amp (lug style)																	1	1
10-02-005	B/U Contactor 50 amp (spade style)	1	1	1	1	1	1	2	2	2	2	3	3	4	4	1	1		
10-02-006	Element Activation Relay			1	1	1		2	3	3		2	2						
10-02-006	Pump Relay	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
17-02-101	3 kw element			1	3				1							1	2	3	2
17-02-102	5 kw element	1		1		2		3	3	4		2	2						1
17-02-103	5.75 kw element		1				2				4								
21-00-001	8.75 kw element											2		4					
21-00-002	10 kw element												2		4				
17-02-104	Temperature Pressure Gauge	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
17-02-105	Pressure Relief Valve	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
10-02-004	Manual Hi Limit Reset	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
17-02-107	Tank Temp. Sensor	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
17-02-109	TH-600D FFB Control Board	1	1	1	1	1	1	1	1	1	1	1	1	1	1				
17-02-10959	(Upgrade) FFB Dual Temp. Board																		
17-02-110	TH-600M Mono Control Board																		
17-02-11095	(Upgrade) Mono Dual Temp. Board																		
17-02-1115	Circuit Breaker 20 amp															1			
17-02-111	Circuit Breaker 30 amp	1	1																
17-02-112	Circuit Breaker 40 amp																1		
17-02-113	Circuit Breaker 50 amp			1	1				1			2		4				1	
17-02-114	Circuit Breaker 60 amp					1	1	1	1	2	2	1	3		4				1
17-02-11440	SSR Relay 40 amp	1	1	1	1	1	2	3	4	4	4								
17-02-115	SSR Relay 50 amp											4	4	4	4				
17-02-116	Control Transformer 30 VA	1	1	1	1	1	1	1	1	1	1								
21-00-006	Control Transformer 50 VA											1	1	1	1				
17-02-117	Control Fuse 2 amp	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
17-02-119	Outdoor Sensor	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
21-00-004	Stainless Steel Tank Gasket	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Diagrams on next page are for parts identification and terminology purposes.


All Boilers contain different parts and parts breakdown should be used to identify exact part number and quantity in each unit.

FFB Style Boiler

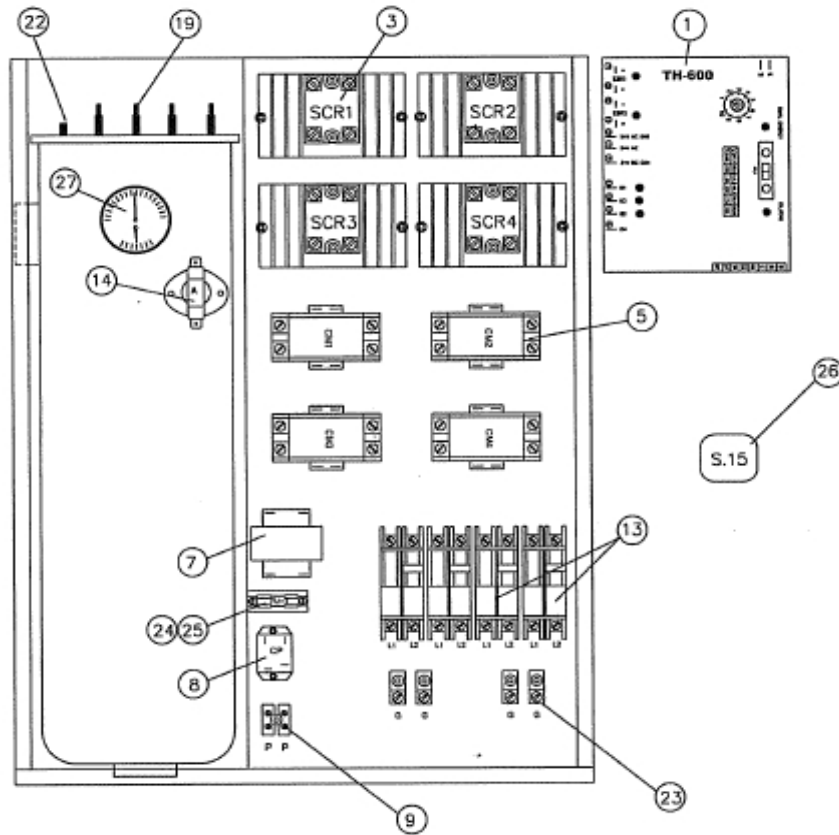

- 1 Control Board
- 3A SSR Relays
- 3B Element Activation Relay
- 5 Back Up Contactors
- 7 Control Transformer
- 8 Pump Relay
- 13 Circuit Breakers
- 14 Manual Hi Limit Reset
- 19 Elements
- 22 Tank Temperature Sensor
- 24 Fuse
- 26 Outdoor Reset
- 27 Temperature Pressure Gauge

TMB Style Boiler

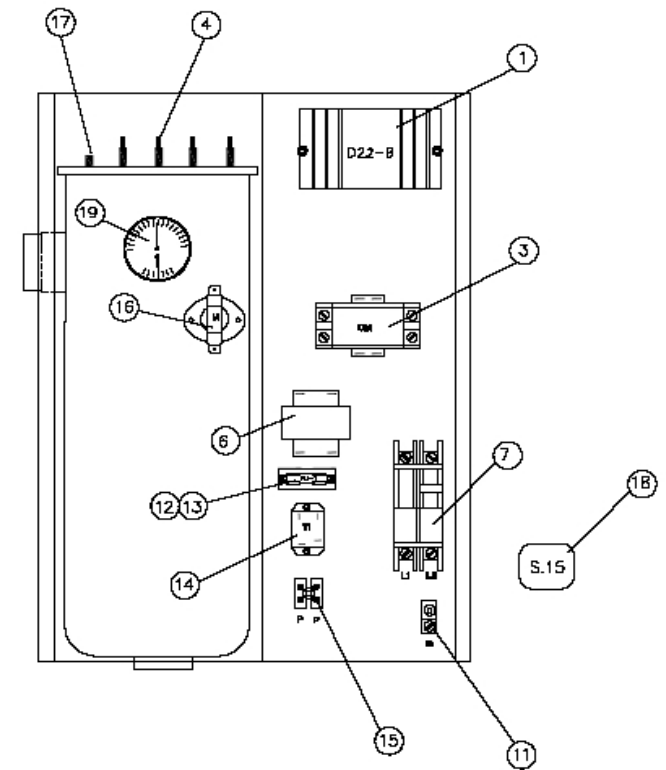

- 1 Control Board/Module
- 3 Back Up Contactor
- 4 Elements
- 6 Transformer
- 7 Circuit Breaker
- 12 Fuse
- 14 Pump Relay
- 16 Manual Hi Limit Reset
- 17 Tank Temperature Sensor
- 18 Outdoor Reset