



UltimateAir, Inc.
178 Mill Street
Athens, Ohio 45701

Tel: 740-594-2277
Fax: 740-592-1499
www.ultimateair.com

Water-to-Air Coil

Instruction & Setup Guide



Intended to be used with the UltimateAir Temperature Controller and Grundfos Alpha Water Pump, this water-to-air coil is designed to temper and condition the fresh air supply provided by the UltimateAir *RecoupAerator*®.

Suggested applications:

1. Pre-heat defrost for the RecoupAerator when the incoming outside temperature air is below 10°F (hot water or geothermal ground loop)
2. Pre-cooling/dehumidification to increase the cooling capacity of the RecoupAerator EconoCool feature (chilled water or geothermal ground loop)
3. Space heating using fresh air from the RecoupAerator
4. Space cooling/dehumidification using fresh air from the RecoupAerator





UltimateAir, Inc.
178 Mill Street
Athens, Ohio 45701

Tel: 740-594-2277
Fax: 740-592-1499
www.ultimateair.com

Setup

Note: The Case is insulated with 1" polystyrene to thermally separate it from the coil. Make duct connections using 8 inch diameter insulated flexible duct to allow for easy installation and maintenance.

DEFROST and/or PRE-COOLING/DEHUMIDIFICATION (Pre- RecoupAerator)

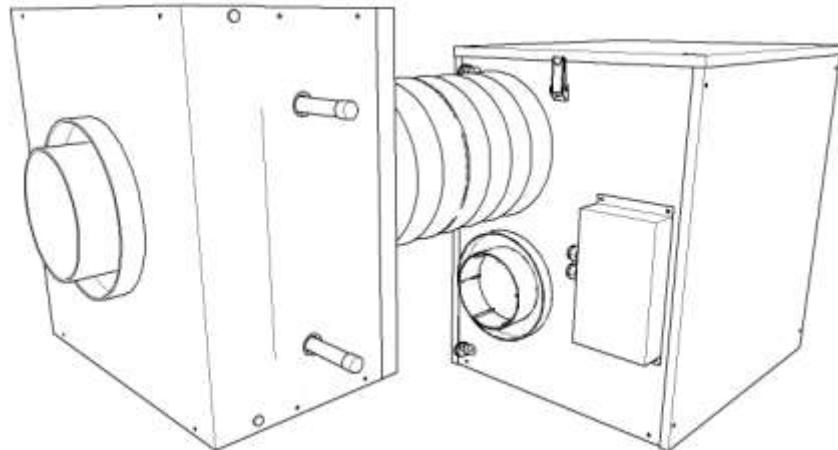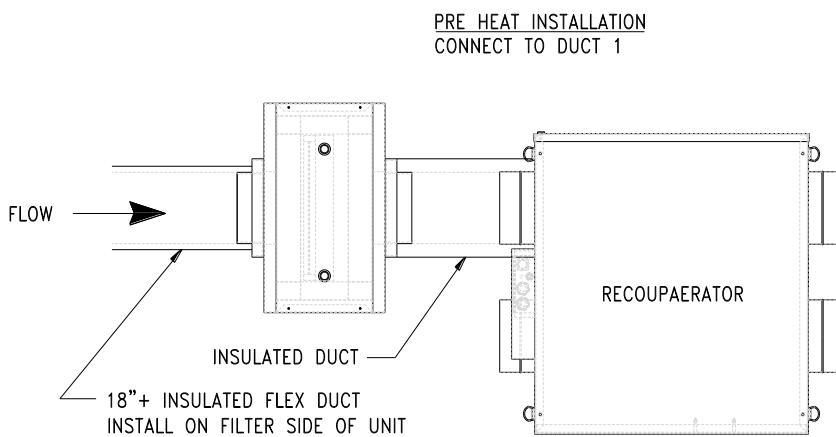

Connect to Duct 1 "Fresh Air In from outside" noted on the RecoupAerator. Be sure the air flow direction is consistent between the air stream, and the diagram. Screws, mastic, and/or metal tape are required after making the connection. It is important to have no air leakage. To prevent condensation from forming on the duct work, the duct must be insulated and air tight from the outside wall to the duct connection of RecoupAerator. The coil case is insulated.





UltimateAir, Inc.
178 Mill Street
Athens, Ohio 45701

Tel: 740-594-2277
Fax: 740-592-1499
www.ultimateair.com

SPACE HEAT and COOLING (Post- RecoupAerator)

POST HEAT INSTALLATION
CONNECT TO DUCT 2

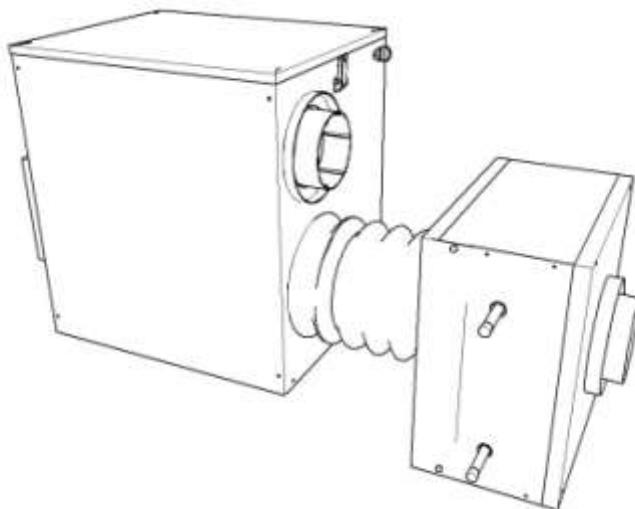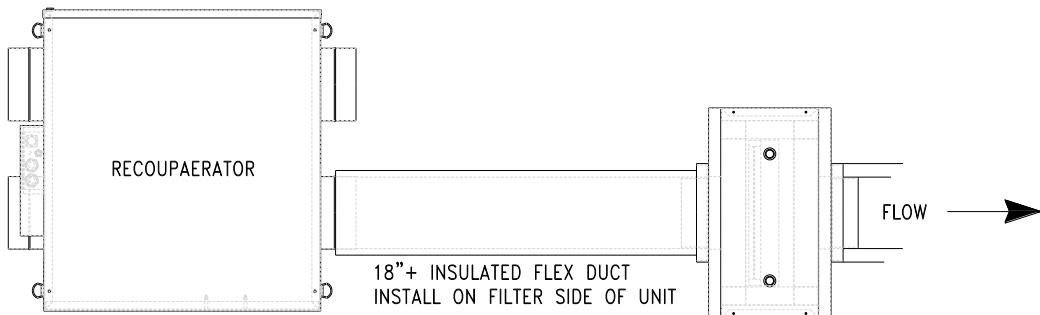

Connect to Duct 2 "Fresh Air In to the living space" noted on the RecoupAerator. Make this connection using insulated ducting. Be sure the air flow direction is consistent between the air stream, and the diagram. Screws, mastic, and/or metal tape are required after making the connection. It is important to have no air leakage.



UltimateAir, Inc.
178 Mill Street
Athens, Ohio 45701

Tel: 740-594-2277
Fax: 740-592-1499
www.ultimateair.com


CONDENSATE PAN INSTALLATION AND USE

NOTE A: Drill a 3/8" hole carefully through the middle of the bottom to allow better free flow of water out of the coils sheet metal case.

For installations that will be condensing moisture out of the air stream passing through the coil (pre cooling application), a condensate pan installation will be required. Please request this pan when ordering, or obtain similar locally.

Orient the coil to set in the pan, convenient for your plumbing scenario. Once orientation is determined, fix small rubber spacers to the bottom of the coil box, to space the coil box just off of the inside of the pan. This will allow water to easily flow to the drain at the end. Ensure the pan is level, or slightly lower at the drain end.

Connect a suitable 0.5" ID hose to the drain tube welded to the condensate pan, and run to appropriate location that will freely dispense of the condensate. Note that a pump will be necessary if the disposal location is higher than the pan (not provided). If relying on gravity, keep the length and elbows of the tube to a minimum.

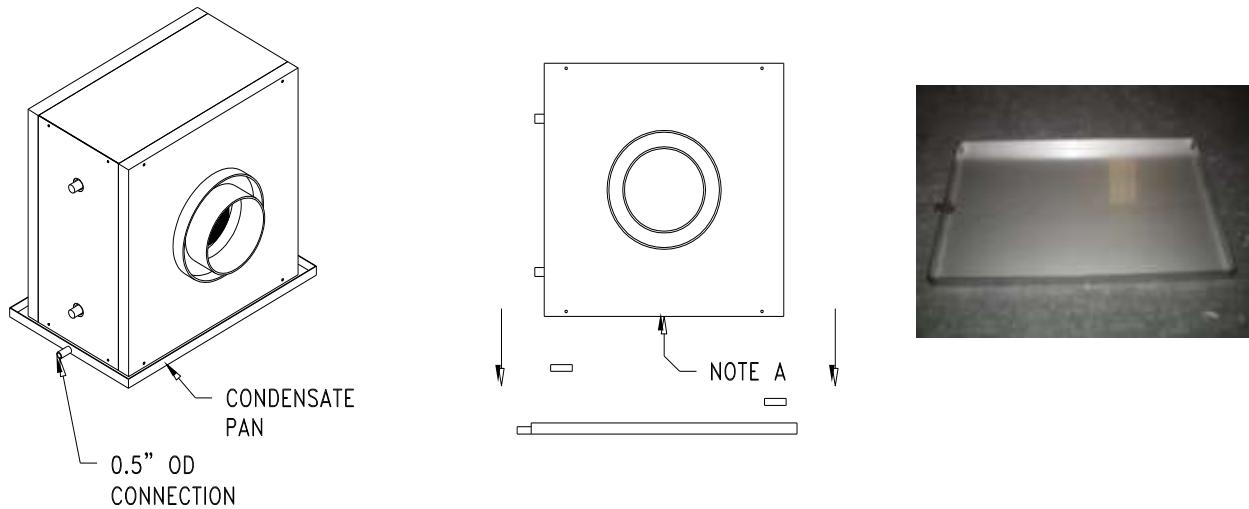

NOTE A: Drill a 3/8" hole carefully through the middle of the bottom to allow better free flow of water out of the coils sheet metal case.



UltimateAir, Inc.
178 Mill Street
Athens, Ohio 45701

Tel: 740-594-2277
Fax: 740-592-1499
www.ultimateair.com

The installed Water-to-Air Coil Module produces some resistance to airflow in the duct it is installed in. The table below summarizes the resistance and associated pressure drop.

Resistance to Airflow	
CFM Setting	Pressure Drop (in. Water Gauge)
70	0.025
200	0.12

Coil Performance Data

Test	Inlet Water F	Water Flow GPM	Air Flow CFM	Inlet Air F	Outlet Water F	Outlet Air DB F	DP Fan in. wg.	Capacity Btu/hr
Options For Post Heat (Space Conditioning)								
1	160	2.5	200	55	152.8	95.7	TBD	8777
2	160	2.5	200	65	153.5	102.0	TBD	7,972
3	160	5.0	200	65	156.6	103.9	TBD	8,393
4	160	2.0	100	65	153.7	123.5	TBD	6,220
5	120	2.0	200	65	115.5	85.9	TBD	4,452
6	120	5.0	200	65	118.1	87.2	TBD	4,783
7	120	2.5	100	65	117.1	98.8	TBD	3,585
8	110	2.0	200	65	106.3	82.1	TBD	3,621
9	110	5.0	200	65	108.4	83.1	TBD	3,902
10	100	2.0	200	65	97.2	78.1	TBD	2,824
11	100	5.0	200	65	98.8	79.0	TBD	3,025
Options For Pre Heat								
1	55	2.5	100	0	52.4	30.3 *	TBD	3,266
2	55	5.0	100	0	53.6	31.7	TBD	3,423
3	55	2.5	100	-10	51.9	25.5	TBD	3,833
4	55	2.5	100	-20	51.5	20.5	TBD	4,369
5	45	2.5	70	-20	42.1	28.9	TBD	3,692

*This column pertinent as RecoupAerator requires incoming air be above 10 F



UltimateAir, Inc.
178 Mill Street
Athens, Ohio 45701

Tel: 740-594-2277
Fax: 740-592-1499
www.ultimateair.com

Coil Performance Data Cont.

Inlet Water F	Water Flow GPM	Air Flow CFM	Inlet Air		Inlet Air RH %	Outlet Water F	Outlet Air		Capacity Btu/Hr		
			WB F	DB F			WB F	DB F	Total	Sensible	Latent
<i>Options for Pre Cooling and Dehumidification</i>											
50	2.5	100	79.1	95	52.5	54.2	67.4	71.8	5176	2538	2638
50	2.5	200	79.1	95	52.5	54.9	72.8	80.3	6224	3224	3001
50	5	200	79.1	95	52.5	52.6	72.4	79.4	6606	3411	3195
60	2.5	100	75.1	95	40	61.9	71.5	73.5	2332	2027	305
60	2.5	200	75.1	95	40	62.2	71.8	82.5	2722	2722	0
60	2.5	50	75.1	95	40	61.3	66.4	71.9	1656	1259	397
60	2.5	100	74.9	90	50	62.1	68.2	73.7	2629	1782	847
60	2.5	200	74.9	90	50	71.8	74.9	89.9	14709	14709	0
60	2.5	50	74.9	90	50	61.3	66.2	70.3	1660	1074	586
60	2.5	100	73.8	80	75	62	67.6	69.8	2420	1117	1304
60	2.5	200	73.8	80	75	62.2	70.4	73.5	2878	1417	1370
60	2.5	50	73.8	80	75	61.2	65.6	67.3	1547	692	855
60	2.5	100	67.9	70	90	61.1	64.1	65	1339	542	797
60	2.5	200	67.9	70	90	61.2	66	66.9	1494	684	810
60	2.5	50	67.9	70	90	60.7	62.6	63.7	871	342	528
Inlet Water F	Water Flow GPM	Air Flow CFM	Inlet Air		Inlet Air RH %	Outlet Water F	Outlet Air		Capacity Btu/Hr		
			WB F	DB F			WB F	DB F	Total	Sensible	Latent
<i>Options for Post Cooling and Dehumidification</i>											
42	2.5	50	65	78	50%	43.6	51.7	54.7	1953	1266	687
42	2.5	100	65	78	50%	44.5	53.9	58.9	3144	2077	1066
42	2.5	200	65	78	50%	45	59.2	65.8	3722	2663	1059
42	2.5	300	65	78	50%	45.2	60.9	68.2	4057	3182	874
42	2.5	400	65	78	50%	45	62.2	69.8	3759	3570	189
42	5	50	65	78	50%	42.8	51.3	54.1	2008	1299	709
42	5	100	65	78	50%	43.3	58.1	54.2	3255	2160	1095
42	5	200	65	78	50%	43.6	58.8	65	3958	2821	1137
42	5	300	65	78	50%	43.8	60.5	67.5	4399	3416	983
42	5	400	65	78	50%	43.6	62	69.1	4086	3873	213




UltimateAir, Inc.
178 Mill Street
Athens, Ohio 45701

Tel: 740-594-2277
Fax: 740-592-1499
www.ultimateair.com

MAINTENANCE

Your coil comes installed with a dust collection filter. This filter will help protect the fins and coil from collecting dust and debris. This filter will likely need to be changed once every 6 months of continuous air flow operation, depending on your specific inside and outside conditions. The outside dimension of the filter measure 14" w x 14" h x 1" d. Please contact UltimateAir for purchasing, or sourcing of replacement filters. They are widely available in the field. When installing a new filter, ensure that the resistance across the replacement filter does not exceed the original design static pressure of the duct system for the air moving fan.

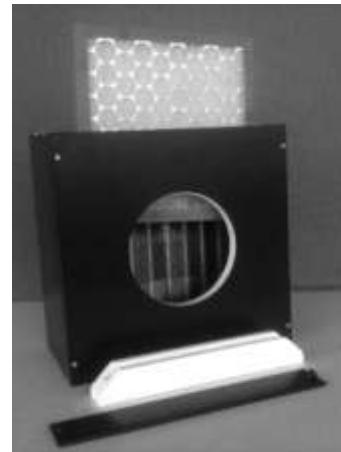

The coil should be visually inspected and cleaned once a year. If there is build up of dirt and/or debris on the fin surfaces, or coil surfaces, these surfaces should be rinsed clean with warm water using some form of pressurized water.

If design assistance is required, please call for more information.

UltimateAir® Inc
p.740.594.2277