




Accumulator Body

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air.
- Blow out all passages.
- Check all valves for free movement. If any fail to slide freely, see Valve Body Repair on page 14-114.
- Coat all parts with ATF before reassembly.

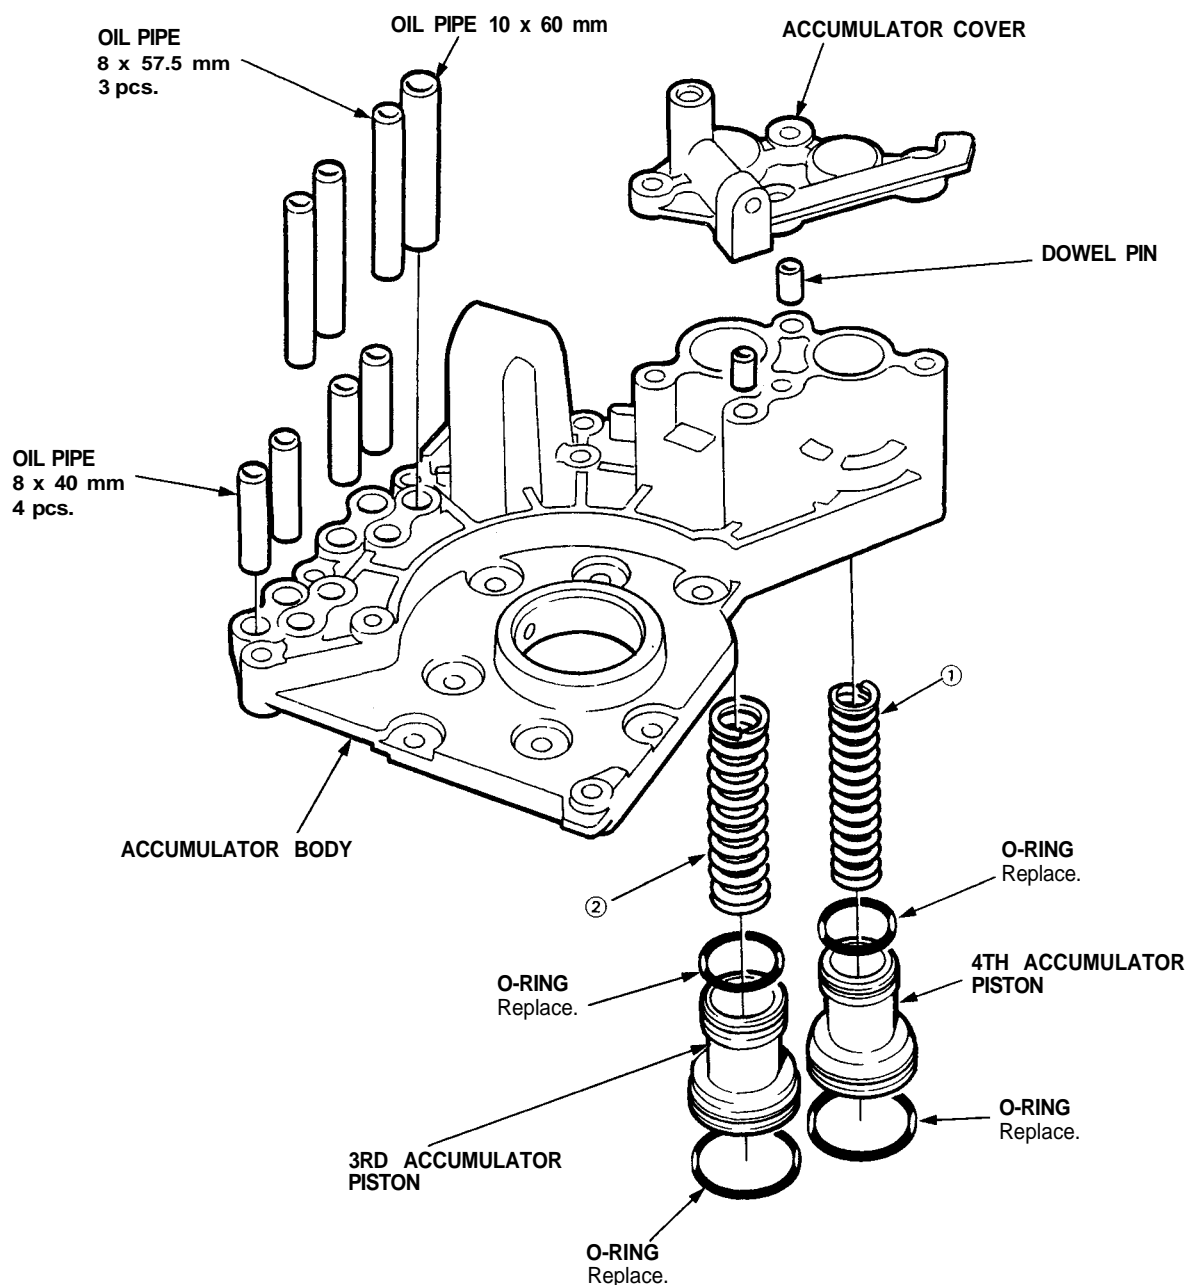

SPRINGSPECIFICATIONS

Unit: mm (in)

No.	Spring	Standard (New)			
		Wire Dia.	O.D.	Free Length	No. of Coils
①	4th accumulator spring	2.8 (0.110)	16.5 (0.650)	80.8 (3.181)	14.6
②	3rd accumulator spring	3.2 (0.126)	19.0 (0.748)	78.4 (3.087)	11.1