

EXERPEUTIC

WORKFIT™ Pedometer




FUNCTION

Counting Steps (0~99999 steps)

HOW TO WEAR THE PEDOMETER

For best results, clip the pedometer vertically on belt or top of trousers or shorts in straight position.

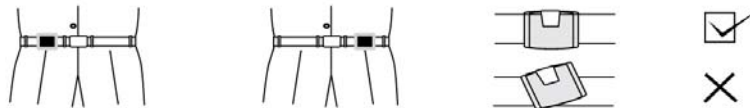

HOW TO USE YOUR PEDOMETER

1. Remove the battery insulator and the plastic film on the LCD before use.
2. Press the RESET button. The Display will show zero.

HOW TO REPLACE THE BATTERY

1. Replace battery with LR44 button cell when the display dims.
2. The battery holder is on the back of rear case. Insert a small coin (or something thin and hard) into the slot at the side of the case to open the rear case, slide out the battery and put new battery. (with "+" upwards)
3. Before snapping the cases, please ensure the pendulum housing and cases are correctly positioned.
4. Battery life is approximately 1 year.

WARNING

1. It might reduce the battery life under too high or low temperature condition.
2. Pedometer is NOT waterproof.

Please treat your pedometer with care.



**Retain this operating instructions for future reference.
The specifications of this product may vary from this photo, subject to change without notice.**

Operating Instructions

Item #1665