

INDOOR UNIT

No. OBDT872

TECHNICAL DATA

Models

NTXWPH06B112AA


NTXWPH09B112AA

NTXWPH12B112AA

NTXWPH15B112AA

NTXWPH18B112AA

Outdoor unit technical data
NTXSPB/SPH•B112AA Series (OBDT873)
Indoor unit service manual
NTXWPH•B•AA Series (OBHT872)
Outdoor unit service manual
NTXSPB/SPH•B112AA Series (OBHT873)
NTXMMX/MPH•A•AA Series (OBHT702)

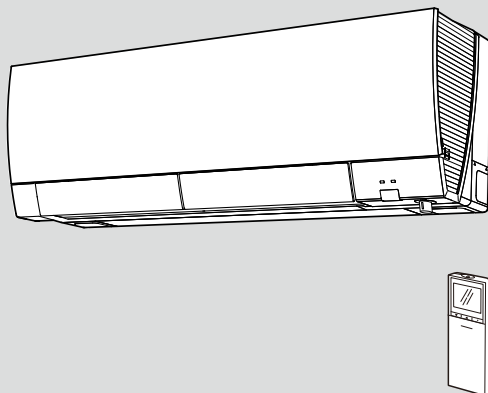

CONTENTS


- 1. POSITION OF THE CENTER OF GRAVITY 2
- 2. NOISE CRITERION CURVES 3
- 3. TEMPERATURE AND FLOW DISTRIBUTIONS...5

1

POSITION OF THE CENTER OF GRAVITY

Unit: inch(mm)


Wall-mounted type

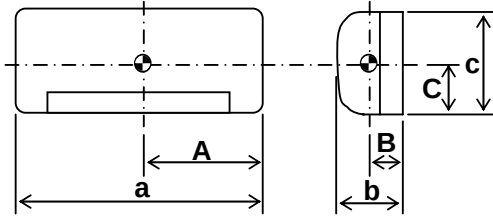

Model name	A	B	C	a	b	c
NTXWPH06B112AA						
NTXWPH09B112AA						
NTXWPH12B112AA	15-1/4 (387)	4-1/4 (108)	6-1/8 (155)	36-7/16 (925)	9-3/16 (234)	12 (305)
NTXWPH15B112AA						
NTXWPH18B112AA						


NTXWPH06B112AA

NOTCH	SPL(dB(A))	LINE
COOLING(SH)	40	●—●
HEATING(SH)	42	○—○

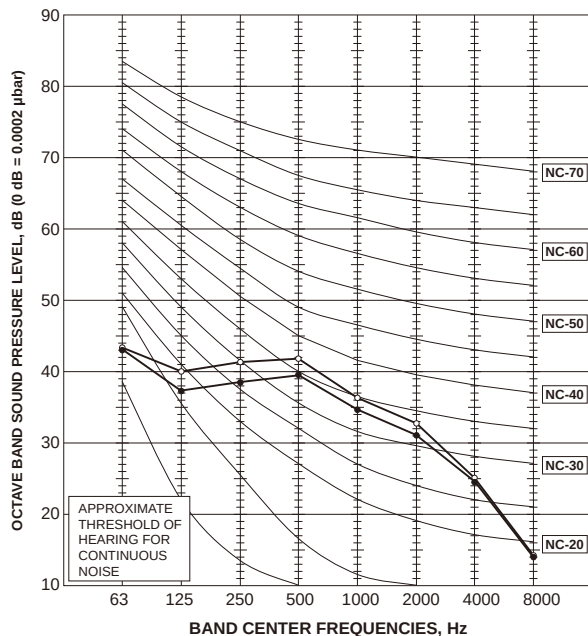


NTXWPH09B112AA

NOTCH	SPL(dB(A))	LINE
COOLING(SH)	40	●—●
HEATING(SH)	42	○—○

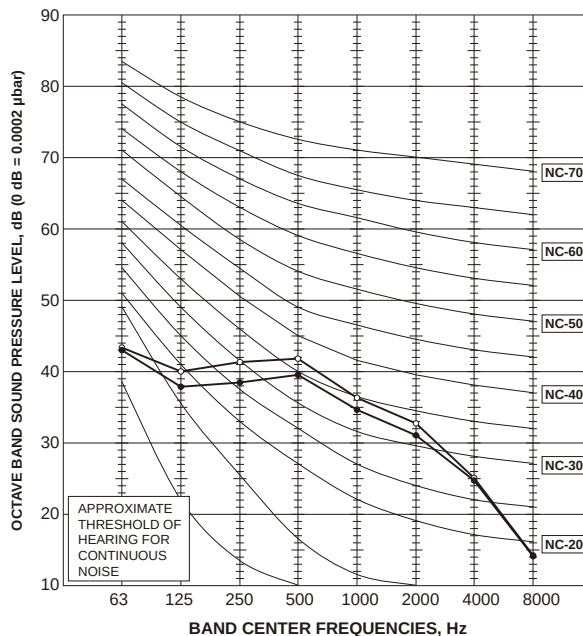


NTXWPH12B112AA

NOTCH	SPL(dB(A))	LINE
COOLING(SH)	44	●—●
HEATING(SH)	43	○—○

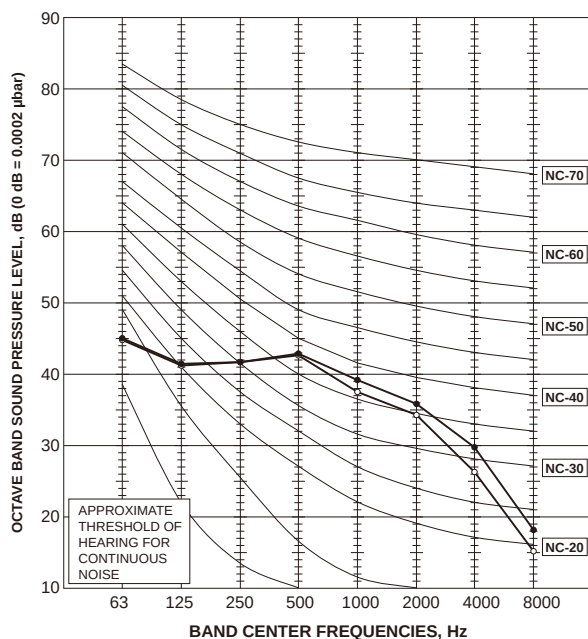

NTXWPH15B112AA



NOTCH	SPL(dB(A))	LINE
COOLING(SH)	44	●—●
HEATING(SH)	46	○—○

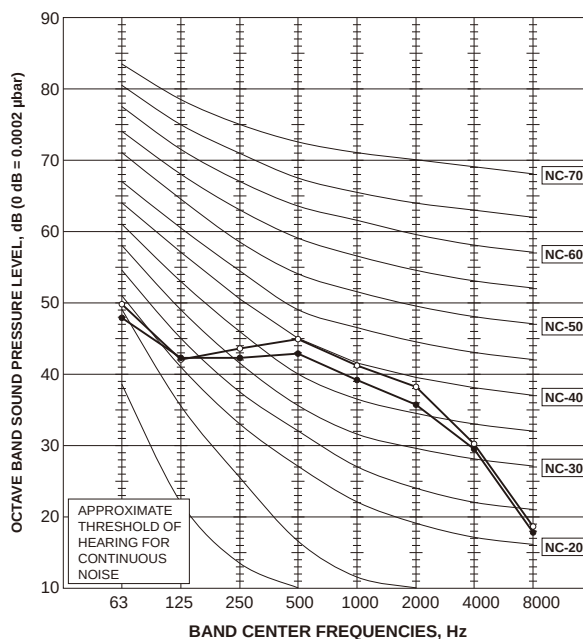

NOTE: The sound level is measured in an anechoic room where echoes are few, when compressor stops. The sound may be bigger than displayed level under actual installation condition by surrounding echoes. The sound level can be higher by about 2 dB than the displayed level during cooling and heating operation.

NTXWPH18B112AA

NOTCH	SPL(dB(A))	LINE
COOLING(SH)	44	●—●
HEATING(SH)	46	○—○

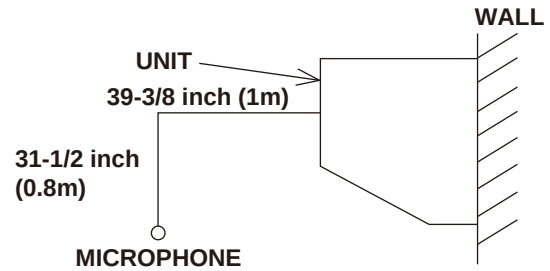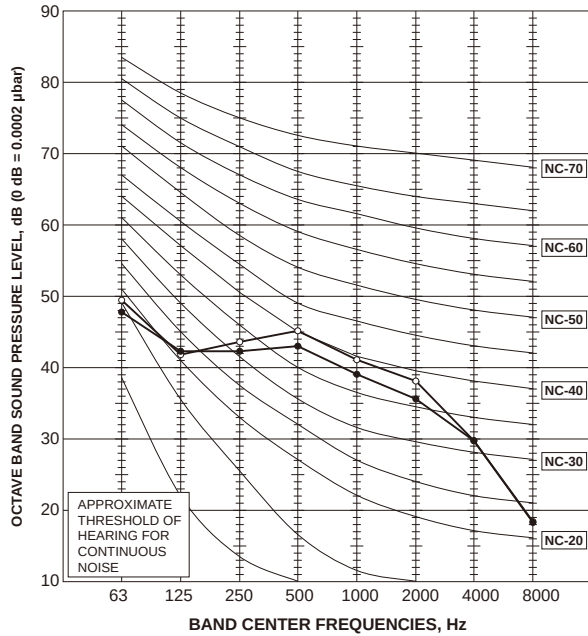

NOTE: The sound level is measured in an anechoic room where echoes are few, when compressor stops. The sound may be bigger than displayed level under actual installation condition by surrounding echoes. The sound level can be higher by about 2 dB than the displayed level during cooling and heating operation.


NTXWPH06B112AA

Temperature distribution

<Cooling mode>

Air volume: high


Air direction: auto (upward air flow)

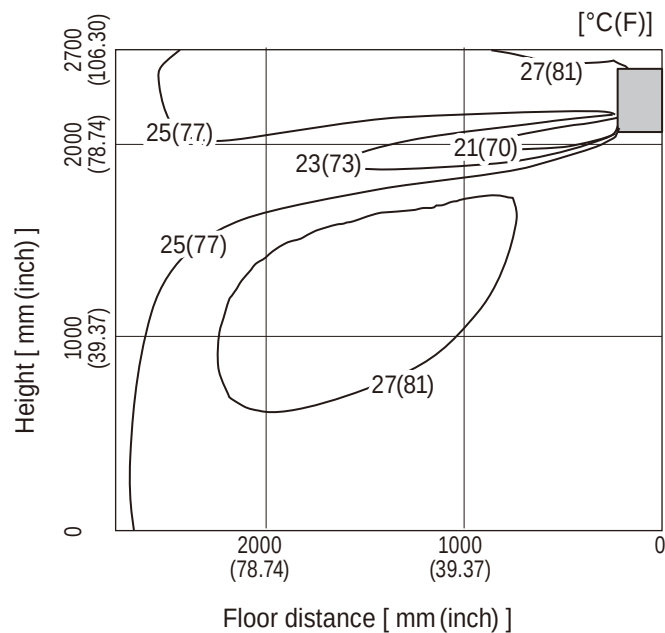

<Heating mode>

Air volume: high

Air direction: auto (downward air flow)

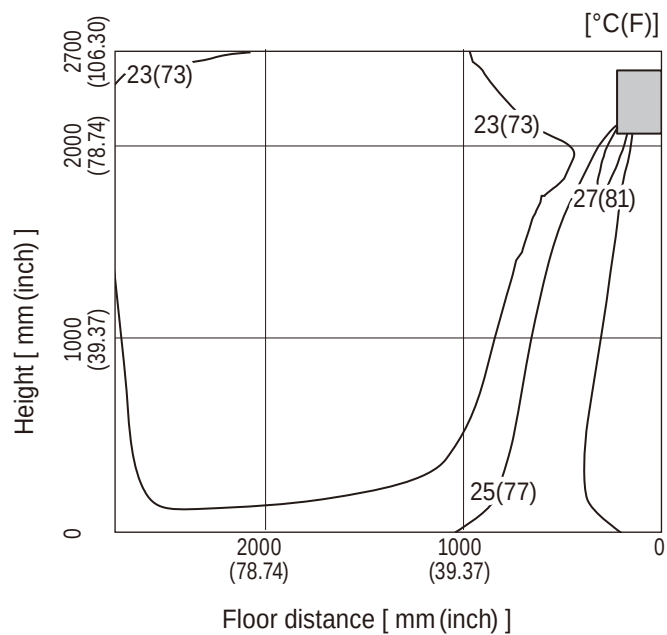


Note: These figures show typical airflow distributions in the conditions above. In the actual installation, they may differ from these figures under the influence of air temperature conditions, ceiling height, cooling/heating load, obstacles, etc.

NTXWPH06B112AA

Airflow distribution


<Cooling mode>

Air volume: high
Air direction: auto (upward air flow)

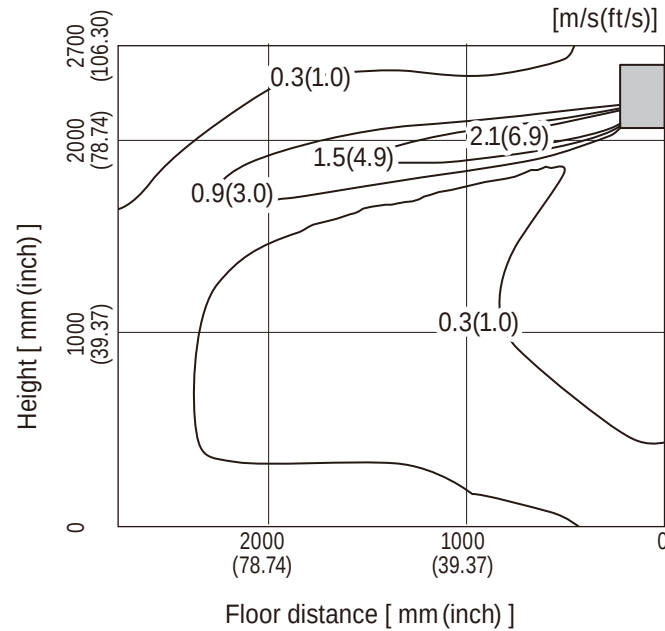

<Heating mode>

Air volume: high
Air direction: auto (downward air flow)

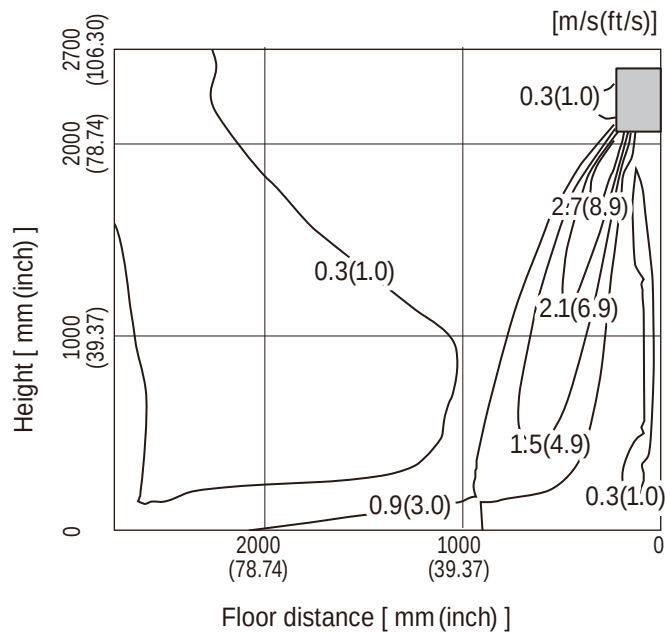


Note: These figures show typical airflow distributions in the conditions above. In the actual installation, they may differ from these figures under the influence of air temperature conditions, ceiling height, cooling/heating load, obstacles, etc.

NTXWPH09B112AA

Temperature distribution


<Cooling mode>

Air volume: high
Air direction: auto (upward air flow)

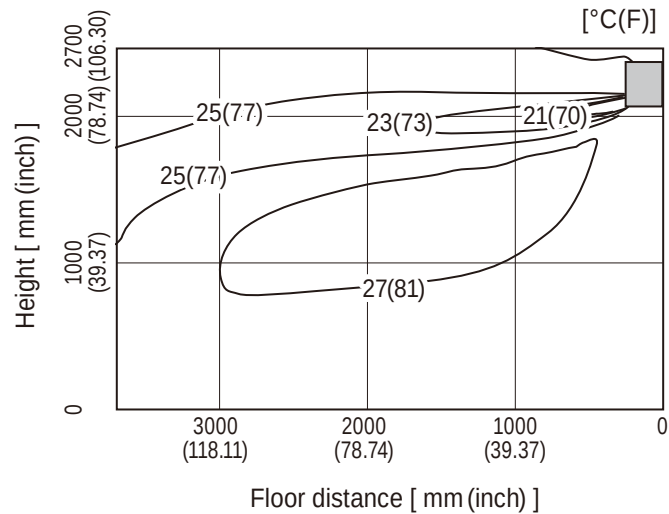

<Heating mode>

Air volume: high
Air direction: auto (downward air flow)

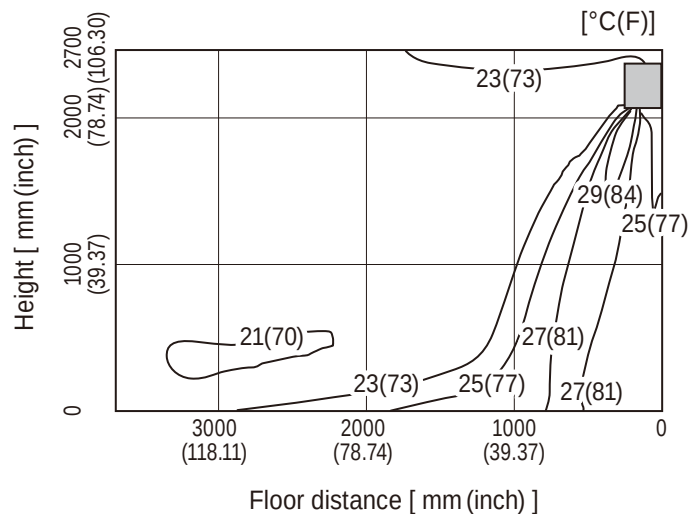


Note: These figures show typical airflow distributions in the conditions above. In the actual installation, they may differ from these figures under the influence of air temperature conditions, ceiling height, cooling/heating load, obstacles, etc.

NTXWPH09B112AA

Airflow distribution


<Cooling mode>

Air volume: high
Air direction: auto (upward air flow)

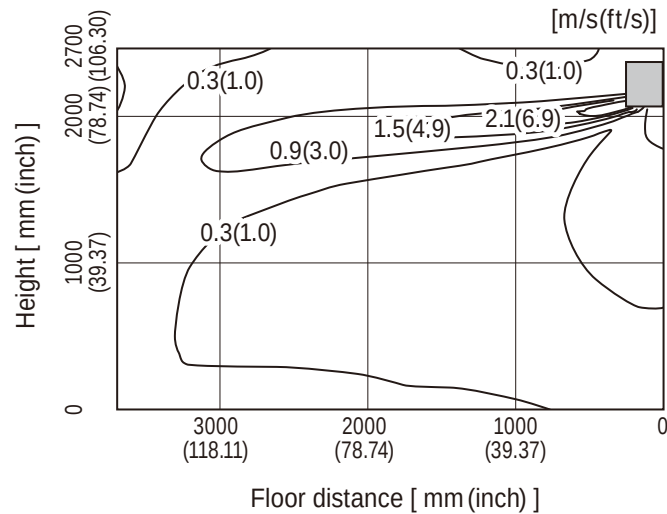

<Heating mode>

Air volume: high
Air direction: auto (downward air flow)

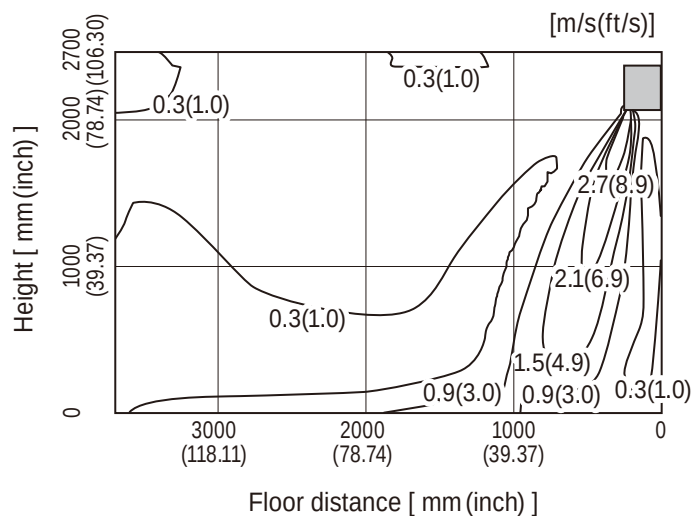

Note: These figures show typical airflow distributions in the conditions above. In the actual installation, they may differ from these figures under the influence of air temperature conditions, ceiling height, cooling/heating load, obstacles, etc.


NTXWPH12B112AA

Temperature distribution

<Cooling mode>

Air volume: high


Air direction: auto (upward air flow)

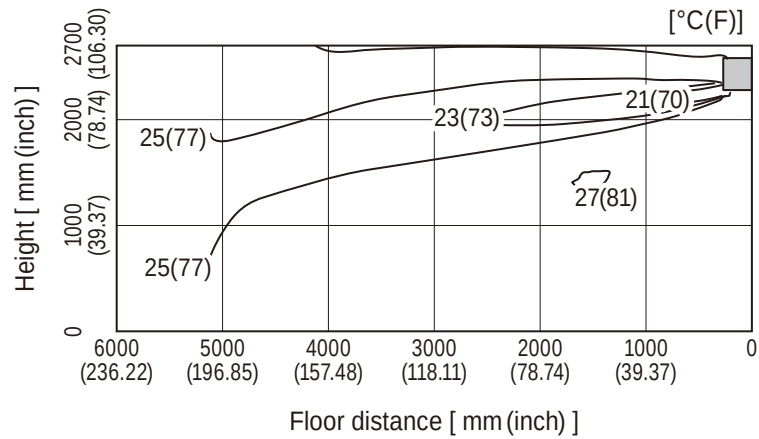

<Heating mode>

Air volume: high

Air direction: auto (downward air flow)

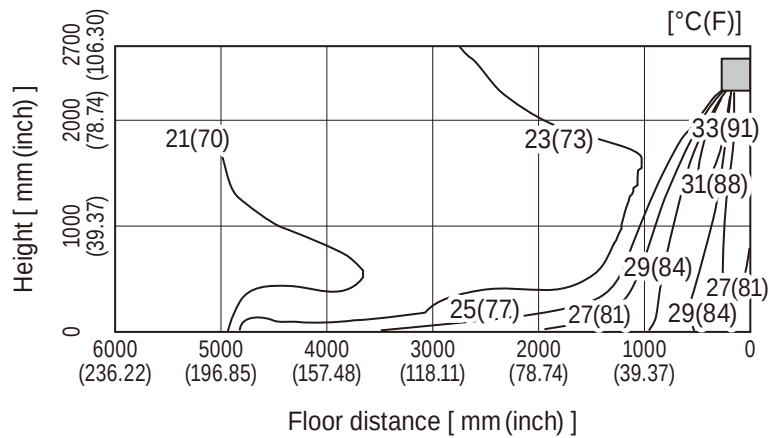


Note: These figures show typical airflow distributions in the conditions above. In the actual installation, they may differ from these figures under the influence of air temperature conditions, ceiling height, cooling/heating load, obstacles, etc.

NTXWPH12B112AA

Airflow distribution


<Cooling mode>

Air volume: high
Air direction: auto (upward air flow)

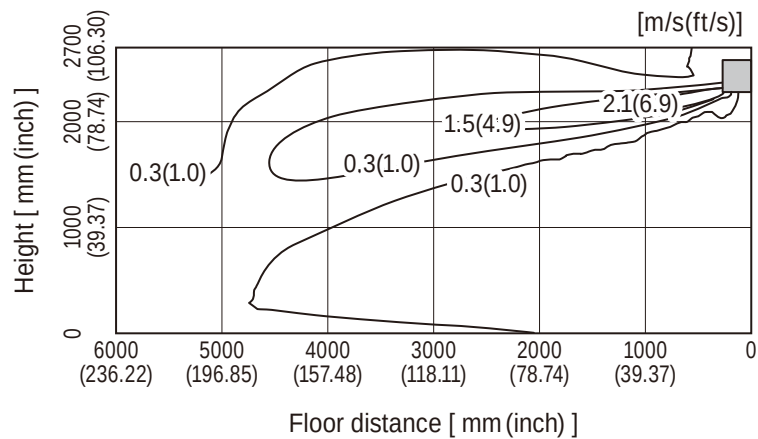

<Heating mode>

Air volume: high
Air direction: auto (downward air flow)

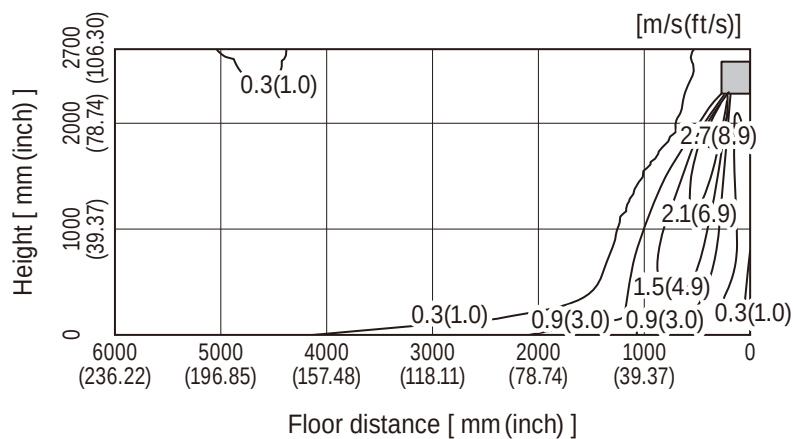


Note: These figures show typical airflow distributions in the conditions above. In the actual installation, they may differ from these figures under the influence of air temperature conditions, ceiling height, cooling/heating load, obstacles, etc.

NTXWPH15B112AA

Temperature distribution


<Cooling mode>

Air volume: high
Air direction: auto (upward air flow)

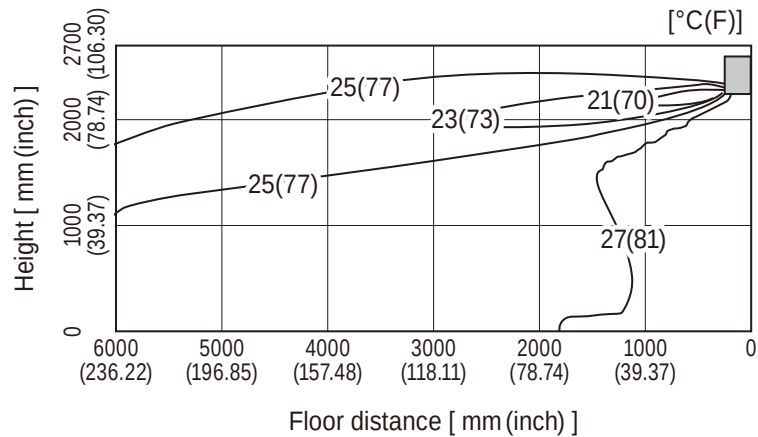

<Heating mode>

Air volume: high
Air direction: auto (downward air flow)

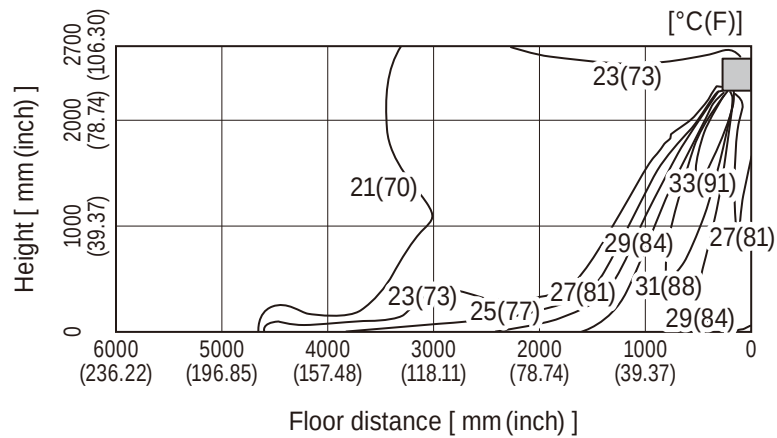


Note: These figures show typical airflow distributions in the conditions above. In the actual installation, they may differ from these figures under the influence of air temperature conditions, ceiling height, cooling/heating load, obstacles, etc.

NTXWPH15B112AA

Airflow distribution


<Cooling mode>

Air volume: high
Air direction: auto (upward air flow)

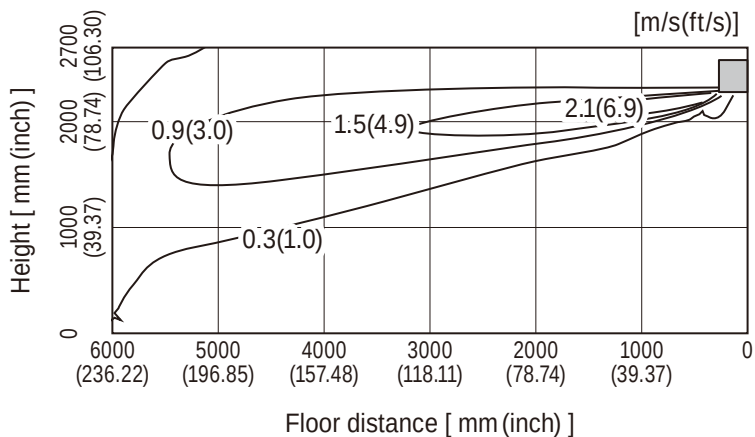

<Heating mode>

Air volume: high
Air direction: auto (downward air flow)

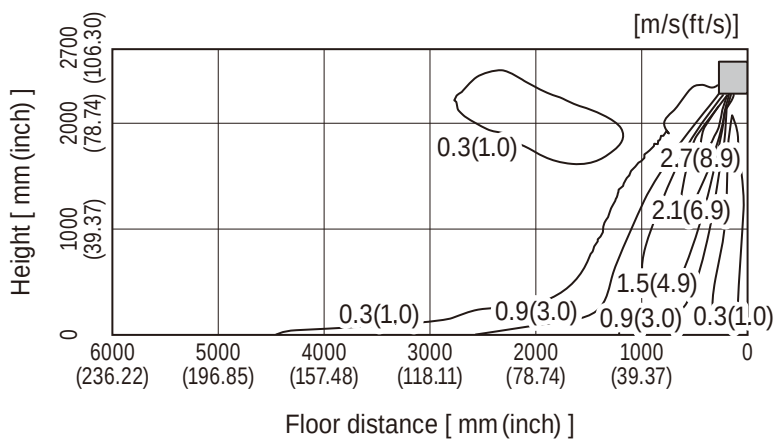

Note: These figures show typical airflow distributions in the conditions above. In the actual installation, they may differ from these figures under the influence of air temperature conditions, ceiling height, cooling/heating load, obstacles, etc.


NTXWPH18B112AA

Temperature distribution

<Cooling mode>

Air volume: high


Air direction: auto (upward air flow)

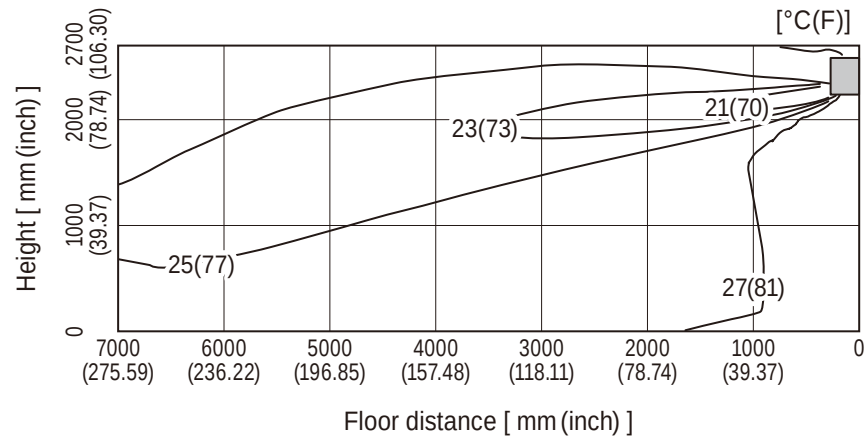

<Heating mode>

Air volume: high

Air direction: auto (downward air flow)

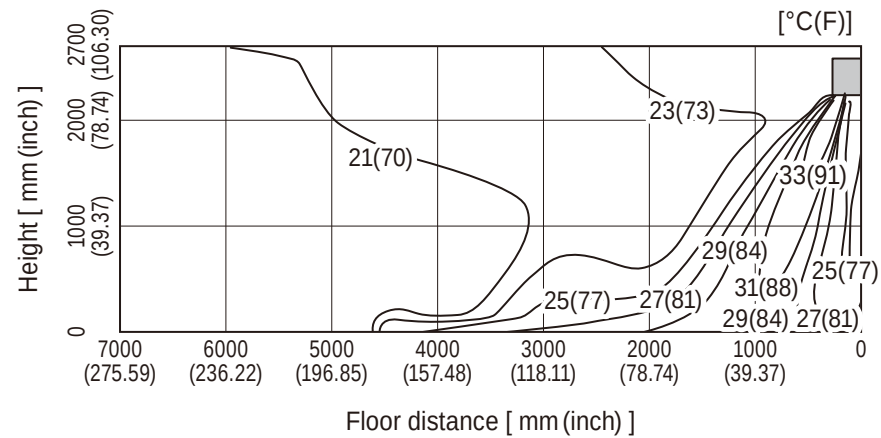


Note: These figures show typical airflow distributions in the conditions above. In the actual installation, they may differ from these figures under the influence of air temperature conditions, ceiling height, cooling/heating load, obstacles, etc.


NTXWPH18B112AA

Airflow distribution

<Cooling mode> Air volume: high
Air direction: auto (upward air flow)

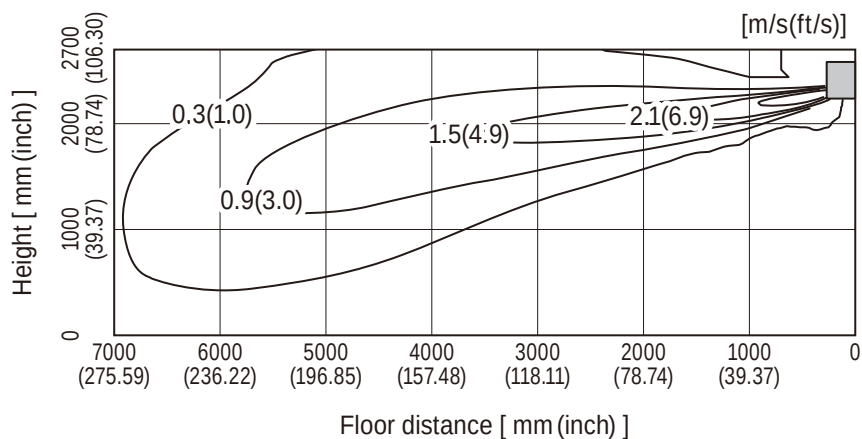

<Heating mode> Air volume: high
Air direction: auto (downward air flow)

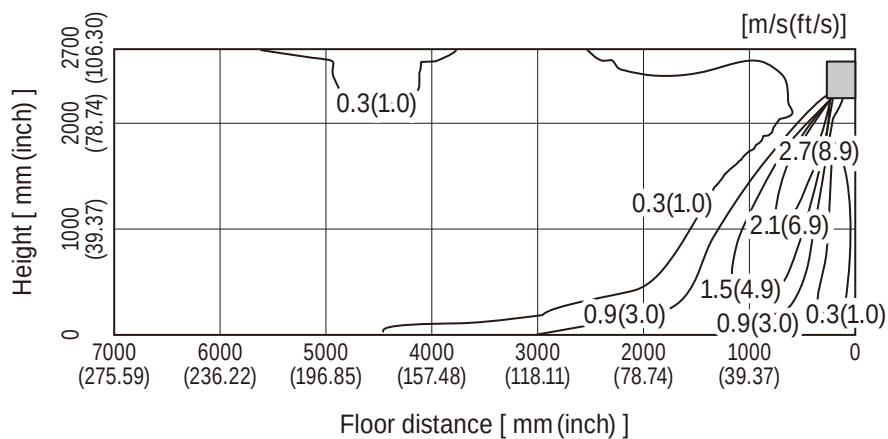

Note: These figures show typical airflow distributions in the conditions above. In the actual installation, they may differ from these figures under the influence of air temperature conditions, ceiling height, cooling/heating load, obstacles, etc.

MITSUBISHI ELECTRIC TRANE HVAC US LLC

HEAD OFFICE: 1340 SATELLITE BOULEVARD, SUWANEE, GA 30024, USA

© Copyright 2020 MITSUBISHI ELECTRIC CORPORATION

Published: Dec. 2020. No. OBDT872

Made in Japan

Specifications are subject to change without notice.