



345 Bayview Avenue, Amityville, New York 11701
For Sales and Repairs 1-800-ALA-LOCK
For Technical Service 1-800-645-9440
or visit us at <http://tech.napcosecurity.com/>
(Note: Technical Service is for security professionals only)
Publicly traded on NASDAQ Symbol: NSSC

Air Access™ Quick Start Guide

© Alarm Lock 2022

WI2447ALF 1/22

Thank you for purchasing an Air Access kit.

The components in the Air Access kit allow for a quick and easy installation. The Air Access Communicator and Gateway included in the kit have been preconfigured to work with the *Air Access Cloud Web Portal* and are ready to use. The Air Access Communicator and Gateway communicate to Alarm Lock's ArchiTech and Networx Locks, the NetPanel (which support most common industry readers, such as HID readers), and optional Expanders, to create a completely independent wireless system.

This Quick-Start manual is intended to guide you through ALL the required installation steps, from unpacking, system activation and configuring a basic system using the simple 5-step Configuration Wizard.

For more detailed information, refer to the *Air Access Online Help* in the Air Access Cloud Software.

Overview, Capacities.....	Page 2
Unpacking (What's in the box)	Page 2
Hardware Installation Instructions	Page 3
Ordering Information.....	Page 3
Quick Start Steps For a Dealer	Page 4
ComNet Flow Chart	Page 5
Activate the Air Access Communicator on ComNet.....	Page 7
Launching the Air Access Cloud Web Portal Software.....	Page 14
Logging into the Air Access Cloud	Page 14
Programming a Basic System Using the 5-Step Wizard	Page 15
Downloading and Installing the Air Access App	Page 22
Glossary	Page 29
Helpful Resources / URLs.....	Page 31
Alarm Lock Limited Warranty	Page 35

Overview

The Air Access™ system is a Cellular Access Control system. A simple, typical Air Access system consists of a **Cellular System Communicator (Radio)** and an **Air Access Gateway**. The Communicator and Gateway are two devices in the link that facilitates wireless communications between the Air Access software and an individual Networkx wireless lock mounted on a door.

The Air Access system is fully compatible with a large selection of **Alarm Lock's wireless ArchiTech and Trilogy Networkx™ Locks**, including the **NetPanel** and optional **Networkx Expanders**.


Installation is simple: Connect the Air Access Communicator to an Air Access Gateway with one RJ-45 Ethernet network cable. The Air Access Communicator and Gateway is powered by a transformer that plugs into a non-switchable and infrequently used 120VAC wall outlet. Next, mount an **ArchiTech** or **Trilogy Networkx Lock** on a door, or a **NetPanel** in a secure location. If an optional **Expander** is required to increase the range of the Gateway, mount the Expander. **Very Important:** Refer to the installation instructions included with each device.

The Air Access system allows you to upload and download lock programming features wirelessly, using the *Air Access Cloud Web Portal*. As shown in the illustration below, the connection to the *Air Access Cloud Web Portal* is made through a secure Internet connection. The Air Access *Cloud* communicates to the Locks and Panels via the cellular Air Access Communicator, wired directly to one Air Access Gateway.



Capacities

As shown in the illustration below, the Air Access system is scalable and can support up to six (6) **AA-GATEWAY** devices for each Air Access Communicator. Up to 63 wireless locks including up to 7 Expanders are supported for each **AA-GATEWAY** device. If more than one Gateway is needed, an **Ethernet switch** must be used. **Note:** If you require additional hardware for a larger system, multiple Air Access Communicators and cellular plans can be purchased for a single location.

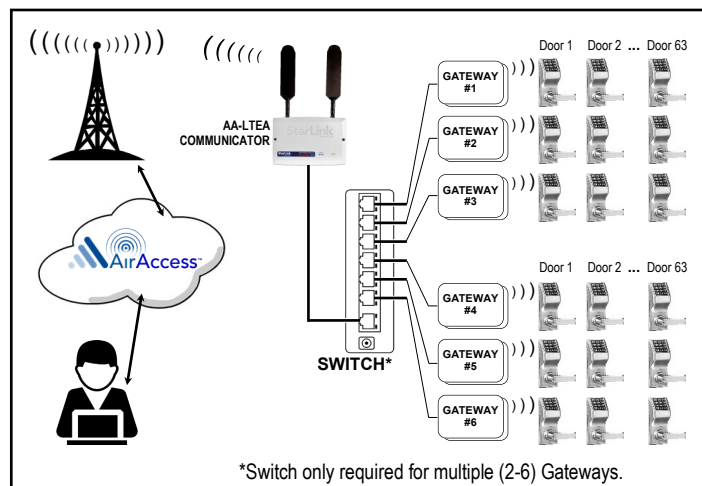

Unpacking the Kit (What's in the Box?)

Prior to unpacking the box, verify you purchased the intended kit as described below. In addition to the kits, please verify you purchased at least one **ArchiTech** or **Trilogy Networkx Lock**, and anything else you require for a complete system. The following kits are available. Each kit contains an Air Access Communicator, Gateway and power accessories.

- **AA-KIT1A** (Air Access Cell Communicator with AT&T Service, Gateway and 120V Power Transformer)
- **AA-KIT1V** (Air Access Cell Communicator with Verizon Service, Gateway and 120V Power Transformer)
- **AA-KIT2VPOWER** (Air Access Cell Communicator with Verizon Service mounted in a metal enclosure with 12V backup battery charger, Gateway and 120V Power Transformer)
- **AA-KIT2APOWER** (Air Access Cell Communicator with AT&T Service mounted in a metal enclosure with 12V backup battery charger, Gateway and 120V Power Transformer)

Hardware Installation Instructions

1. Open the box and remove all the components from the Air Access Kit and place them on a clean table top. Be sure that the ID cards provided with each device (that display the **Air Access Radio ID**, **Air Access Gateway ID**, **Expander ID** and **Locks/Panels IDs**) are kept in a secure location.
2. Open the Air Access Communicator cover by removing the two screws on the front cover. Wire the **12V** and **Gnd** wires from the supplied transformer into the terminal strip. Connect the RJ-45 Ethernet network cable to the RJ-45 Ethernet jack. The Air Access Communicator is available in a plastic enclosure (refer to **WI2449**). The Air Access Communicator is also available in a metal enclosure with 12V backup battery charger for the battery which must be purchased separately (refer to **WI2450**; requires a sealed lead acid minimum 4AH / maximum 7AH battery for the minimum 24-hour standby time; maximum charge current is 200mA).

Very Important: The Air Access Communicator and Gateway do not connect to the end user's network; they communicate on their own dedicated network, eliminating the need for I.T. support.

3. Open the Air Access Gateway cover by removing the screw at the bottom. Wire the **12V** and **Gnd** wires from the supplied transformer into the power connector. Connect the RJ-45 Ethernet network cable from the Air Access Communicator to the RJ-45 Ethernet jack in the Gateway. **Note:** The minimum distance between the Communicator and any Gateway must be at least 6 feet (1.8m). The Air Access Gateway is also available in a POE version. **Very Important:** Refer to the Gateway installation instructions (**WI2453** or **WI2454**).
4. Power all devices, using the supplied power adapters or batteries.

Very Important: The **placement** of the Air Access Communicator, Gateway, Locks/Panels and Expanders are extremely important. *Refer to the installation instructions included with each device.*

Ordering Information

In addition to the Air Access kits that include a Communicator and Gateway, an Expander can be purchased if the range of a Gateway needs to be extended.

The Air Access system also supports a large se-

lection of wireless locks. The Air Access system supports a complete line of **ArchiTech Networkx Series Locks** and **Trilogy Networkx Series** of locks. Below are a few of the Wireless Lock models available.

ArchiTech Networkx Series - For architectural and designer applications, virtually unlimited combinations of **300+ architectural trims and finishes**, in **mortise** and **cylindrical** lock styles, with multi-credential proximity reader technologies. See www.alarmlock.com for a complete list of all available ArchiTech Networkx series devices.




Trilogy Networkx Series- Field-proven standalone Trilogy® electronic keyless access locks, provide access control with PIN-code or built-in HID® Prox, Multi-technology or swipe reader for ID badges. Wireless Trilogy Networkx™ access locks, are easily networked using Gateways and Expanders, eliminating door-to-door operations and featuring global lockdown or unlock in seconds, activated from the *Air Access Cloud Web Portal*. See www.alarmlock.com for a complete list of all available Trilogy Networkx™ series locks.




Quick Start Steps for a Dealer

1. **Unpack** the Air Access equipment and verify you ordered all the required equipment. The Air Access kits contain one Communicator (radio), Gateway and power accessories. Locks, NetPanels and Expanders (if applicable) must be purchased separately.
2. **Set Up your Private Network - Note:** If more than one Gateway is used, a standalone Ethernet switch is required. **Very Important:** *The Air Access network and equipment MUST NOT be connected to the customers IT network.*
3. **Power ON** the Air Access Communicator (radio).
4. If you are not an existing ComNet dealer, register as a new dealer on the Napco ComNet website at www.NapcoComNet.com. For new dealers, approval can take up to 24 hours. Upon approval, an email will be sent containing your ComNet login credentials.
5. **Log into the Napco ComNet website** with your existing or new ComNet credentials.
6. **Activate** the Air Access Communicator (radio) on the Napco ComNet website (follow the step-by-step instructions later in this document). In ComNet, you must select **NEW SUBSCRIBER** for the first radio at each location. After the Registration and Activation of the radio, the auto-enrollment of the radio in the Air Access Cloud software will take approximately 10 minutes. After the first radio is activated, the same username and password from ComNet can be used to log into the Air Access Cloud software at www.AirAccess.Cloud.com.
7. **Log into the Air Access Cloud software** as a **Dealer** with your ComNet credentials.
8. **Verify the Air Access Communicator (radio) was auto-enrolled** into the Air Access Cloud software under **Configuration > Radio**. **Note:** This could take approximately 10 minutes after activation.
9. If only one Gateway is being used, **connect the Air Access Gateway** to the **Air Access Radio**, using one RJ-45 Ethernet cable (minimum of 6 feet (1.8m) between the two devices).
10. **Power ON the Air Access Gateway.** After approximately three minutes, verify the Air Access Gateway was auto-enrolled into the Air Access Cloud software. Gateways will display on the **Configuration > Radio detail** screen, under **Sub-Devices**. The auto-enrolled Gateway will also display on the **Configuration > Wireless Locks** screen.
11. **Add additional Gateways** (if applicable). **Note:** Upon connecting and powering ON an additional Gateway, the Gateway will be auto-enrolled in the Air Access Cloud within a few minutes.
12. **Discover and Add Expanders** (if applicable). Expanders increase the range of a Gateway.
13. **Install the wireless locks** on the designated doors and mount NetPanels (if applicable).
14. **Discover and Add Locks** and optional NetPanels on the **Wireless Configuration** screen.
15. If required, create additional **Schedules** on the **Administration > Schedule** screen.
16. If required, create additional **Access Groups** on the **Access > Access Groups** screen.
17. Enter **Badges / Pin Only** into the **Access > Personnel** screen.
18. Perform a **Data Download** to all Locks and NetPanels. Data downloads can be performed in the **Configuration > Locks/Panels** screen or the **Configuration > Wireless Locks** screen.
19. **Swipe a badge** at the Lock/Reader and verify the door unlocks.
20. Upon swiping a badge and the door unlocking, a low priority alert (Badge Valid) will not display immediately. You must manually **Retrieve Events** under **Configuration > Locks/Panels** or wait up to 24 hours for the alert to display.

Air Access ComNet Flow Chart

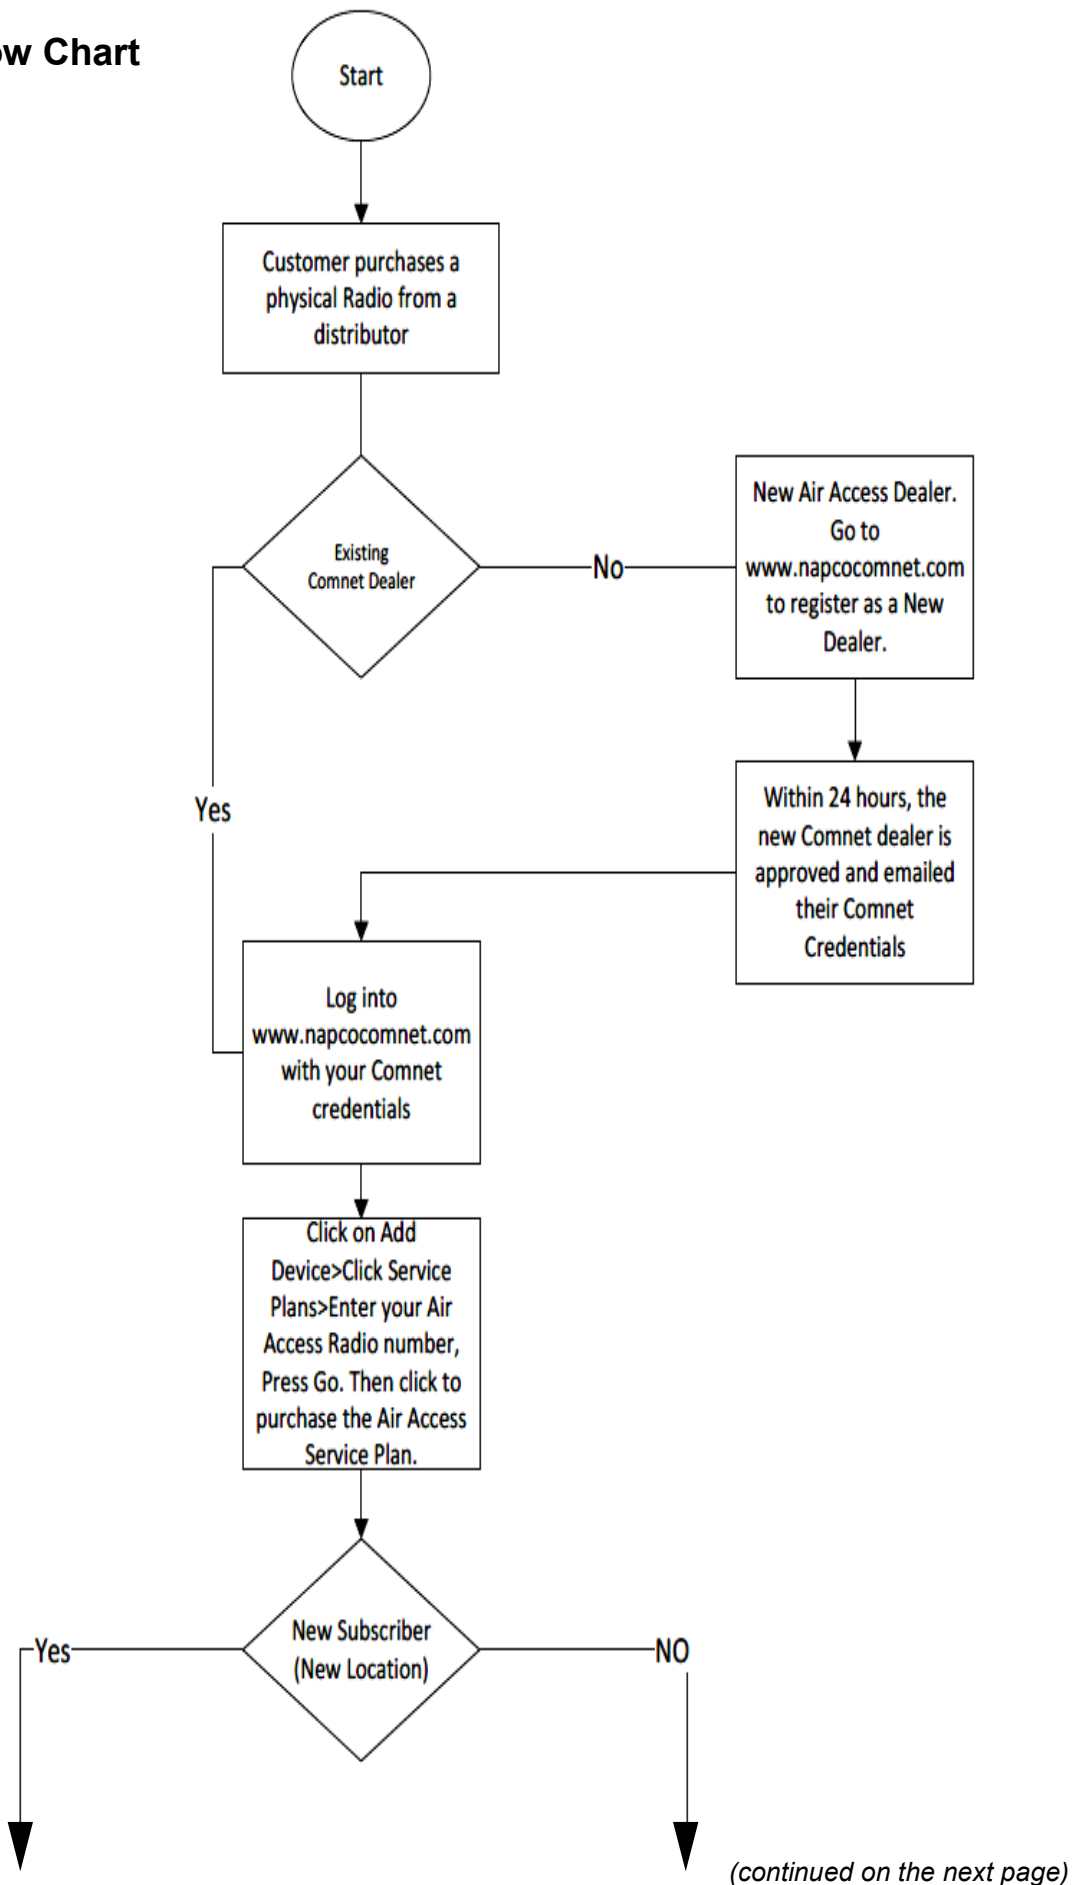

Air Access ComNet Flow Chart *(cont'd from previous page)*

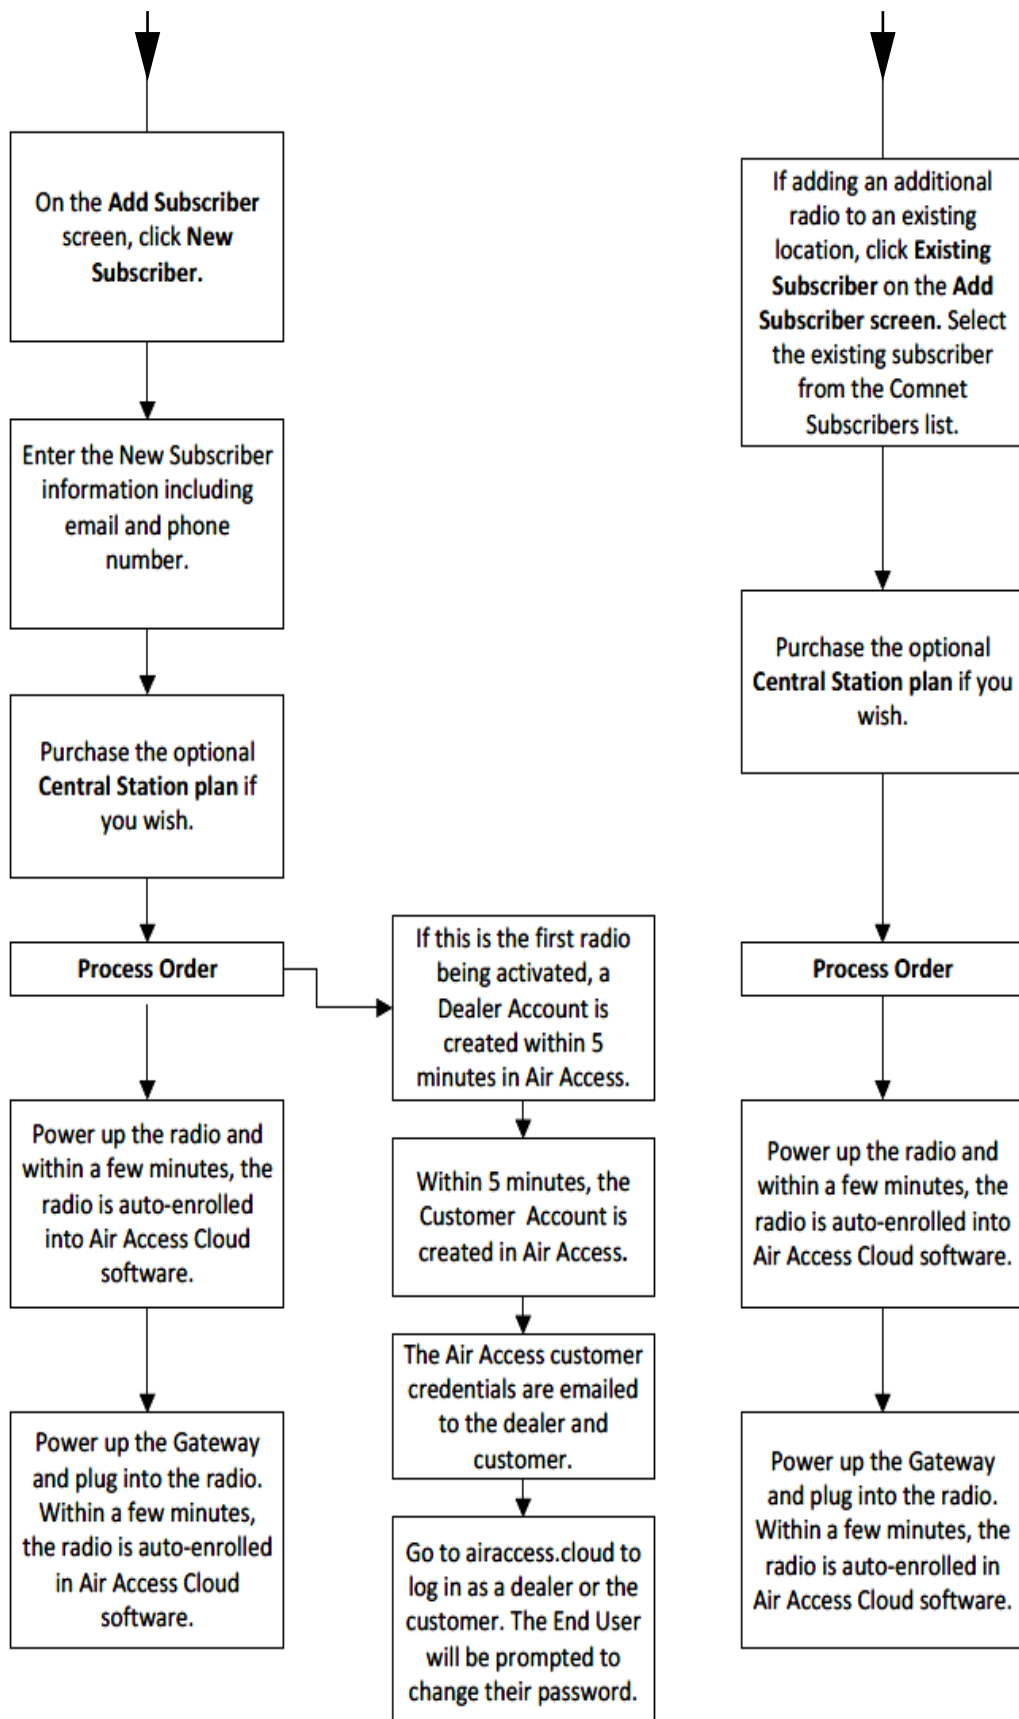

Activate the Air Access Communicator on ComNet

1. Power the Air Access Communicator by plugging the power adapter into an AC socket. If the communicator contains a battery backup, you must install the optional 12V, 4AH (min.) 7AH (max.) rechargeable battery. Ensure a *minimum of two (2) signal strength blinks* (see "**Minimum Signal Strength**" box at right). A total of five (5) signal strength blinks indicates a maximum signal strength.

Minimum Signal Strength

The wireless signal strength between the Communicator's cellular LTE communicator and the carrier is indicated by the number of green LED blinks on the face of the Communicator (minimum is 2 blinks!)




2. Go to www.NapcoComNet.com and select **Click Here** to log in.




3. Activate your Air Access Communicator and purchase an Air Access Service Plan. **If you are already an active NAPCO ComNet dealer** and have an account, log in to your NAPCO ComNet account in the **Existing Dealer** section. Follow the steps below to activate the Communicator. After the first radio is activated, the information will automatically be sent to the *Air Access Cloud Web Portal*.

If you are not yet registered as a NAPCO ComNet dealer, complete the **New Dealer** section. Dealer accounts are approved Monday-Friday 8:30 AM - 4:30 PM (**please allow up to 1 business day for approval**). Upon approval, you will receive an email from ComNet with your ComNet log in credentials. Log into your NAPCO ComNet account and activate the Air Access Communicator. Upon activation, the information will automatically be sent to the *Air Access Cloud Web Portal*.

4. Click **Add Device**.

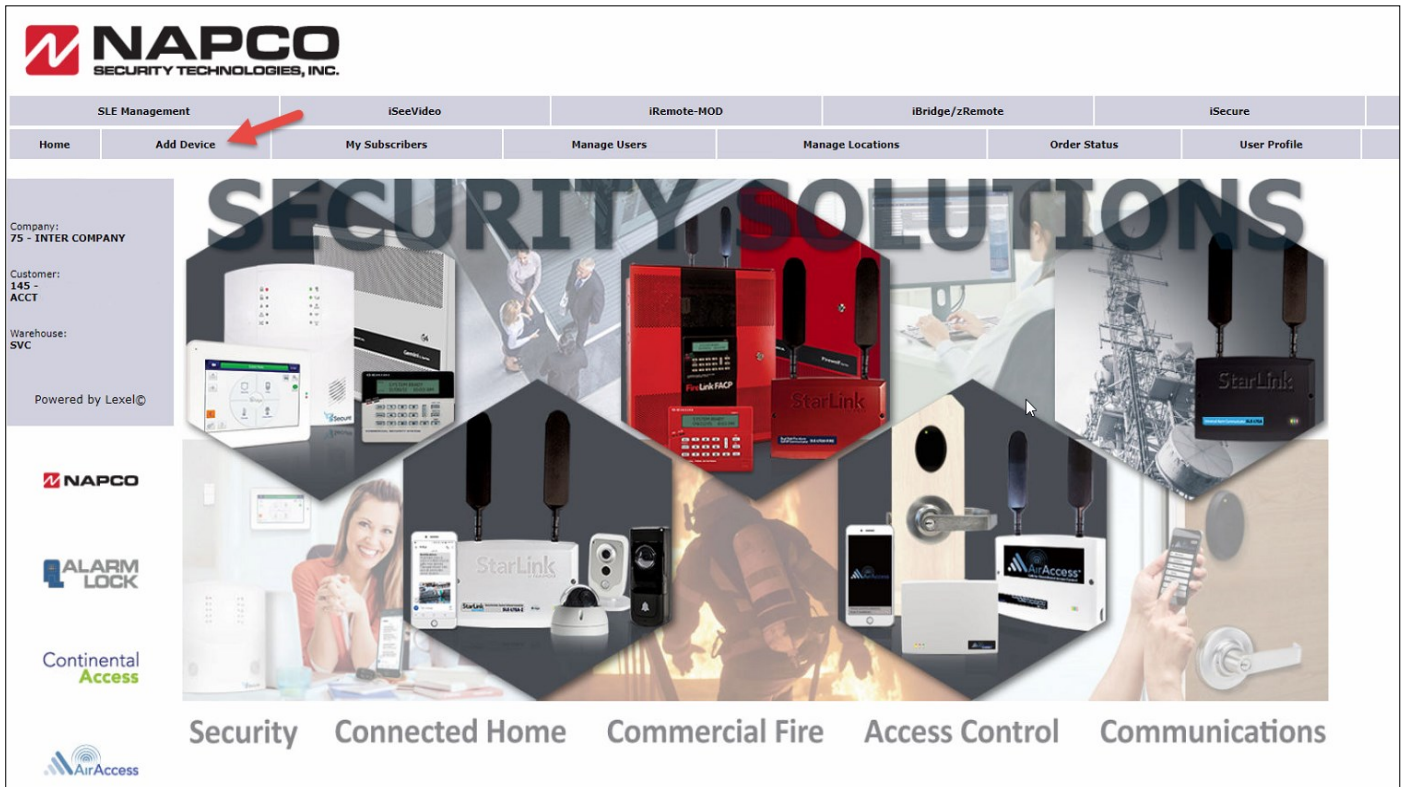

5. Select **Service Plans** under the **CATEGORIES** pull-down list and click **GO**, or click the **Service Plans** button.

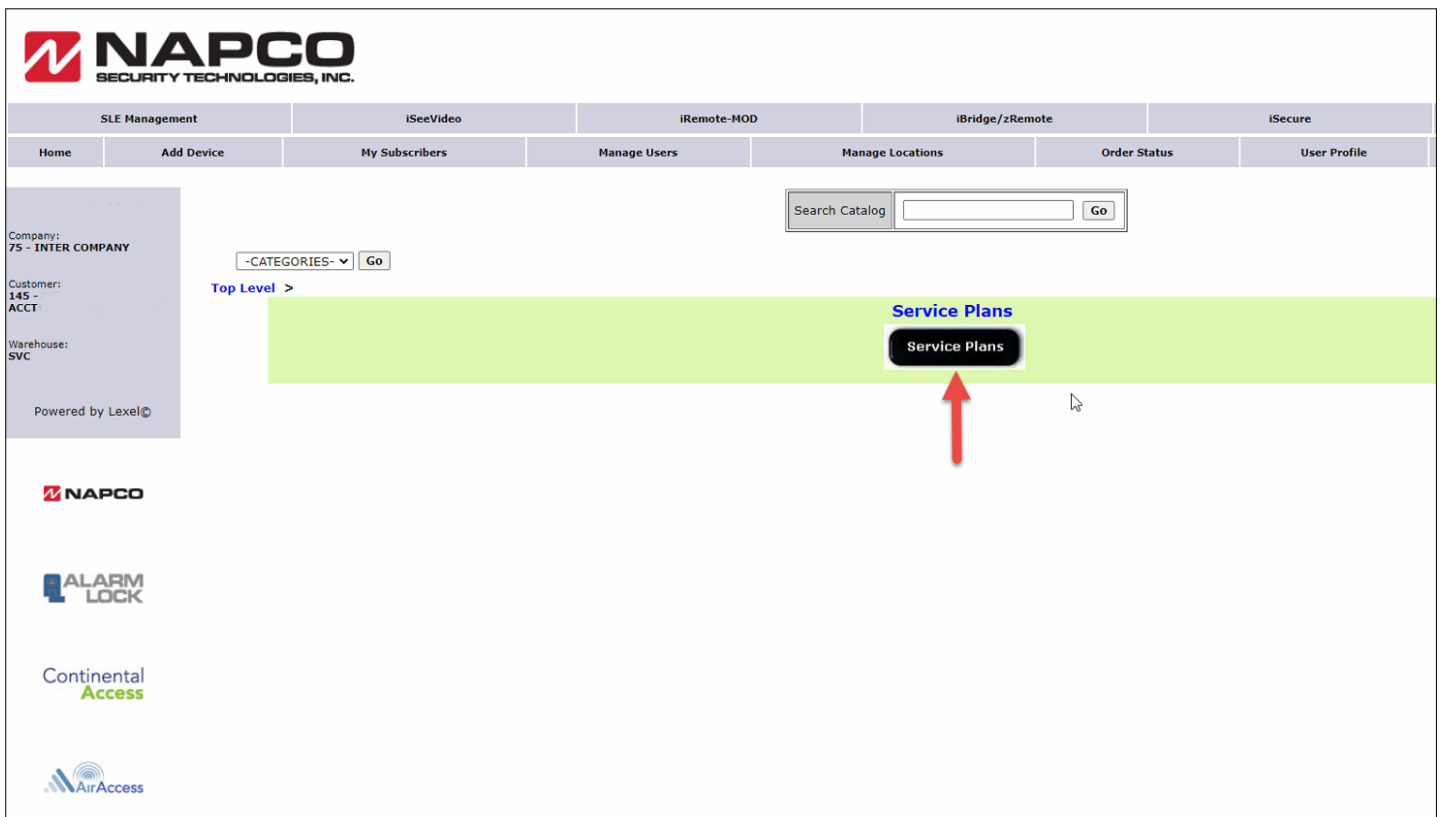

6. Under the **All StarLink / iSecure / Air Access Plans**, enter the Air Access **Radio ID** and click **Go**.

The screenshot shows the NAPCO Security Technologies, Inc. web interface. The top navigation bar includes links for SLE Management, iSeeVideo, iRemote-MOD, iBridge/zRemote, and iSecure. Below this is a secondary navigation bar with links for Home, Add Device, My Subscribers, Manage Users, Manage Locations, Order Status, and a partially visible link. On the left, a sidebar displays company information: Company: 75 - INTER COMPANY, Customer: 145 - ACCT, and Warehouse: SVC. The main content area features a search bar and a category dropdown menu. The 'All Starlink / iSecure Plans' section is highlighted in green, showing a Radio ID field with the value 7431713 and a 'Go' button. A red arrow points to the 'Go' button. Other sections visible include 'Video Service Plans' and 'iBridge/iRe'.

7. Click the **Click for Details** link.

The screenshot shows the NAPCO Security Technologies, Inc. web interface. The top navigation bar includes links for SLE Management, iSeeVideo, iRemote-MOD, iBridge/zRemote, and iSecure. Below this is a secondary navigation bar with links for Home, Add Device, My Subscribers, Manage Users, Manage Locations, Order Status, and a partially visible link. On the left, a sidebar displays company information: Company: 75 - INTER COMPANY, Customer: 145 - ACCT, and Warehouse: SVC. The main content area features a search bar and a category dropdown menu. The 'Air Access Hosted Service Plan ATT' section is highlighted in green, showing the title 'Air Access Hosted Service Plan ATT LTE' and the subtitle 'Air Access AT&T LTE Monthly Hosted Access Service Plan'. Below the subtitle, the price '19.95 EA' is displayed, followed by a 'Click for Details' link. A red arrow points to the 'Click for Details' link. Other sections visible include 'Continental Access' and 'AirAccess'.

8. Review the Service Plan for the **Air Access Hosted Service Plan ATT LTE**, including the price. Click **Add**.

For Unit: 7431713	
Air Access Hosted Service Plan ATT LTE	19.95 EA
1 Month(s)	Add

9. If this is the first radio at the location, click **New** in the **Add Subscriber** screen. If this is the second radio being added to an existing location, click **Existing** and select your Subscriber Information for the list.

Add Subscriber

Subscriber Information Existing New Edit

*First Name: _____

*Last Name: _____

Company: _____

*Address1: _____

Address2: _____

*City: _____

*State/Zip/Country: _____

Email: _____

Phone: _____

Fax: _____

Unit Information

Device ID: 7431713

Service Plan: Air Access Hosted Service Plan ATT LTE@ 19.95 / EA

User Field1: _____

User Field2: _____

Add To Cart Exit

10. Upon clicking **New** in the previous screen, type your information into the **Subscriber Information** screen. Required fields are marked with an asterisk (*). When finished, click **Add Subscriber**.

Subscriber Information

*First Name/Company:

Michael

*Last Name/Company:

*Address1:

355 Bayview Ave.

Address2:

*City:

Amityville

*State/Zip/Country:

NY

11701

USA

Email:

technician@cicaccess.com

Phone:

631-842-9400

Add Subscriber

Close

11. Re-verify all the Subscriber information, then click **Add To Cart**. Required fields are marked with an asterisk (*).



SLE Management	iSeeVideo	iRemote-MOD	iBridge/zRemote		
Home	Add Device	My Subscribers	Manage Users	Manage Locations	Order Status

Company:
75 - INTER COMPANY

Customer:
145 - ACCT

Warehouse:
SVC

Powered by Lexel®



Add Subscriber

Subscriber Information

ExistingNewEdit

*First Name:

Michael

*Last Name:

Company:

*Address1:

355 Bayview Ave

Address2:

*City:

Amityville

*State/Zip/Country:

NY

11701

USA

Email:

technician@cicaccess.com

Phone:

631-842-9400

Fax:

Unit Information

Device ID:

7431713

Service Plan:

Air Access Hosted Service Plan ATT LTE® 19.95 / EA

User Field1:

User Field2:



Add To CartExit

12. The **Air Access Hosted Service Plan ATT LTE** provides an additional feature, the **Air Access Central Station Service Plan**. This plan provides a central station monitoring option for real-time alarm reporting and SMS notifications on selectable events for dealer and account. The Central Station Service Plan is also used with the Air Access App. The App provides customized control for dealer and account.

Purchasing this additional feature is optional. Click **Add** to purchase it and click **Close**.

Features for Item: Air Access Hosted Service Plan ATT LTE

Found 1 Feature

ITEM NO.	DESCRIPTION	U/M	PRICE	
AA-SVC-CS-LTA	Central Station Service Plan	EA	5.95	Add

Close

13. In the **Shopping Cart**, review the information, and if correct, click **Process Order**.

NAPCO

SECURITY TECHNOLOGIES, INC.

25.90

SLE Management

Home

iSeeVideo

Add Device

iRemote-MOD

My Subscribers

iBridge/zRemote

Manage Users

iSecure

Manage Locations

Air Access

Order Status

User Profile

View Cart

Sign Off

Company:
75 - INTER COMPANY

Customer:
145 - ACCT

Warehouse:
SVC

Powered by Lexel®

Shopping Cart

Service Type	DESCRIPTION	COMMENT	QTY	PRICE
Air Access Hosted Service Plan ATT LTE	ATT LTE MTLY HOSTED SVC PLN	7431713/Michael /2021-04-09/	1 Month	19.95
Features	Features: ATT LTE CNTRL STN SERVC PLN 5.95			Features: +5.95
TOTAL				25.90

Process Order
Clear Cart

14. In the **Units Activated** confirmation screen (below), verify all the information that appears is correct. An email confirmation will be sent to the email address entered for the Subscriber.



SECURITY TECHNOLOGIES, INC.

SLE Management

iSeeVideo

iRemote-MOD

iBridge/zRemote

iSecure

Air Access

Home

Add Device

My Subscribers

Manage Users

Manage Locations

Order Status

User Profile

View Cart

Sign Off

Company:
75 - INTER COMPANY

Customer:
145
ACCT:

Warehouse:
SVC

Powered by Lexel©

Units Activated

Activation Time: Fri Apr 09 14:41:05 GMT 2021

Billing Information

A RADIO/
333 BAYVIEW AVE
AMITYVILLE / NY / USA

Shipping Information

A RADIO/
333 BAYVIEW AVE
AMITYVILLE / NY / USA

Service Type	DESCRIPTION	COMMENT	QTY	PRICE
AA-SVC1-LTA	ATT LTE MTLY HOSTED SVC PLN	7431713/Michael /2021-04-09/ Features: ATT LTE CNTRL STN SERVC PLN 5.95	1 Month	19.95 Features: +5.95
TOTAL				25.90



15. Click **Air Access** on the main menu to access the *Air Access Cloud Web Portal Log In* screen. **Reminder:** For new dealers, the activation process will not be immediate. If you wish to launch the *Air Access Cloud Web Portal* at a later date, click **Sign Off** and refer to the following page for the *Air Access Cloud Web Portal* log in process.



SECURITY TECHNOLOGIES, INC.

SLE Management

iSeeVideo

iRemote-MOD

iBridge/zRemote

iSecure

Air Access

Home

Add Device

My Subscribers

Manage Users

Manage Locations

Order Status

User Profile

View Cart

Sign Off

Company:
75 - INTER COMPANY

Customer:
145
ACCT

Warehouse:
SVC

Powered by Lexel©

Units Activated

Activation Time: Fri Apr 09 14:41:05 GMT 2021

Billing Information

A RADIO/
333 BAYVIEW AVE
AMITYVILLE / NY / USA

Shipping Information


A RADIO/
333 BAYVIEW AVE
AMITYVILLE / NY / USA

Service Type	DESCRIPTION	COMMENT	QTY	PRICE
AA-SVC1-LTA	ATT LTE MTLY HOSTED SVC PLN	7431713/Michael /2021-04-09/ Features: ATT LTE CNTRL STN SERVC PLN 5.95	1 Month	19.95 Features: +5.95
TOTAL				25.90




Launching the Air Access Cloud Web Portal Software

- 1. In a supported browser, type **AirAccess.Cloud**.
- 2. Log in with your Air Access **Account Number**, **User Name** and **Password** (shown below) If you log in as a dealer, all the menu selections will be visible. If you log in as a hosted customer, a subset of the menu selections will be visible. If you are a hosted customer and require additional functionality, please contact your dealer.

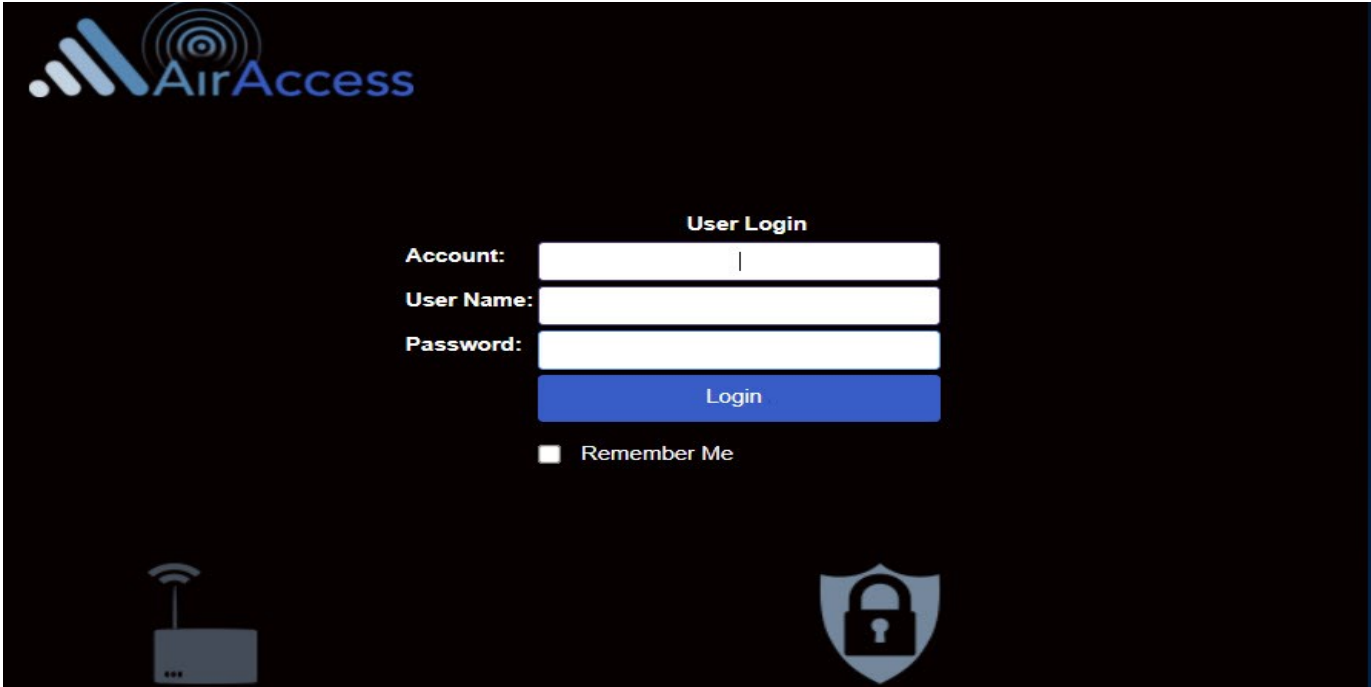

The screenshot shows the 'User Login' interface of the Air Access Cloud Web Portal. At the top left is the Air Access logo. The title 'User Login' is centered. Below it are three input fields labeled 'Account:', 'User Name:', and 'Password:'. A blue 'Login' button is positioned below the password field. A checkbox labeled 'Remember Me' is located below the login button. At the bottom of the screen, there are two icons: a wireless router on the left and a shield with a padlock on the right.

- 3. Upon logging in as a Dealer, a **User Profile** screen will display. A dealer has the option to select the Dealer profile and view all the customer accounts at once. Dealers also have the option to select only one customer and view information only for that one customer. The **User Profile** screen will not display if a customer logs in. Upon selecting the Dealer or a customer, click **Proceed**.

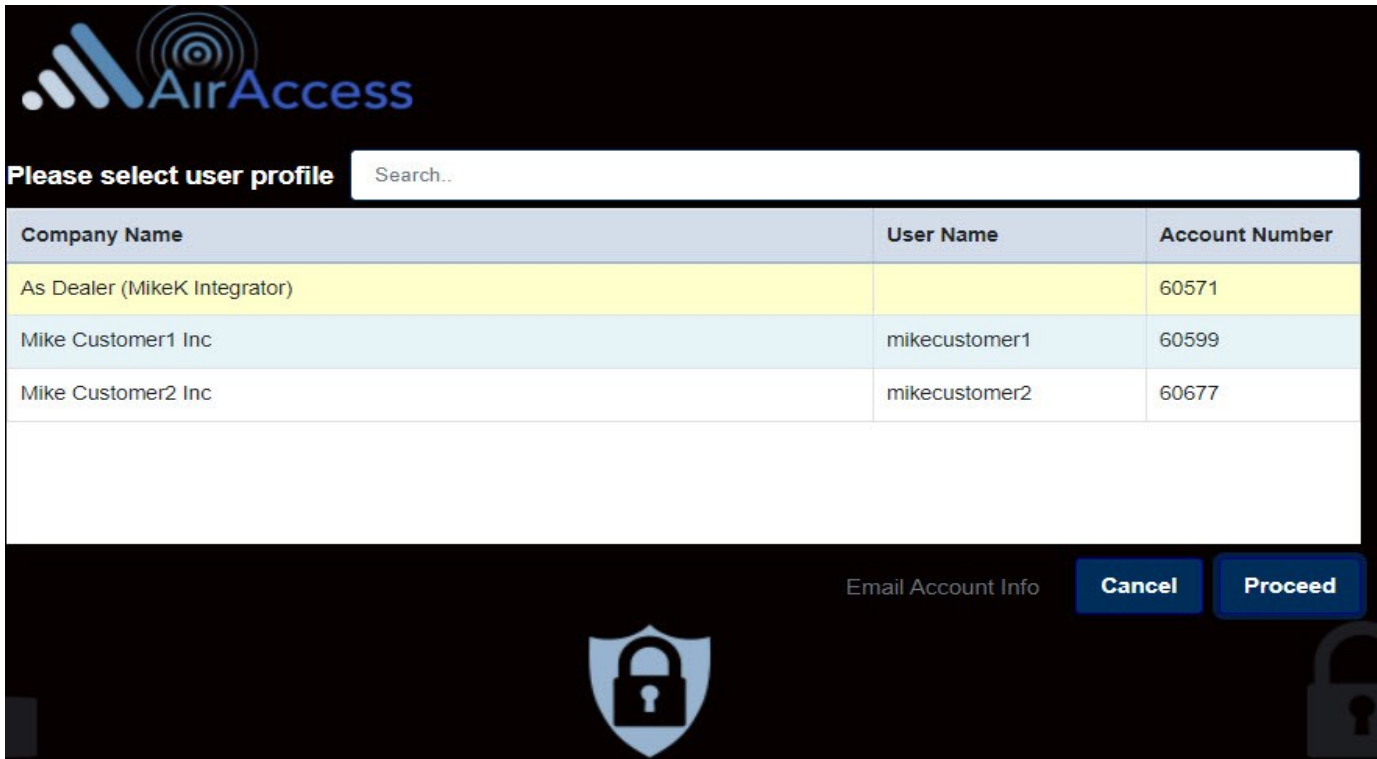


The screenshot shows the 'Please select user profile' screen. At the top left is the Air Access logo. Below it is a search bar with the placeholder text 'Search..'. A table with three columns is displayed below the search bar. The columns are 'Company Name', 'User Name', and 'Account Number'. The table contains three rows of data. At the bottom right of the screen, there is a link 'Email Account Info' and two buttons: 'Cancel' and 'Proceed'. At the bottom center, there is a shield with a padlock icon.

Company Name	User Name	Account Number
As Dealer (MikeK Integrator)		60571
Mike Customer1 Inc	mikecustomer1	60599
Mike Customer2 Inc	mikecustomer2	60677


4. Upon logging into the *Air Access Cloud Web Portal*, the **PERSONNEL** screen will display. On the right side of the screen, the 5-step configuration Wizard is displayed. A click on each step will bring you to the screen that requires configuration. Each step in the Wizard also contains brief instructions.

Note: The 5-step Wizard on the right side of the screen can be closed and reopened at any time. To close the Wizard, click the "x" on the top of the Wizard, or the **Close** button on the bottom of the Wizard. To reopen the Wizard after it is closed, click the Wizard graphic on the bottom right corner of the screen. If you wish not to display the Wizard, select **Not Show** at the bottom of the Wizard.

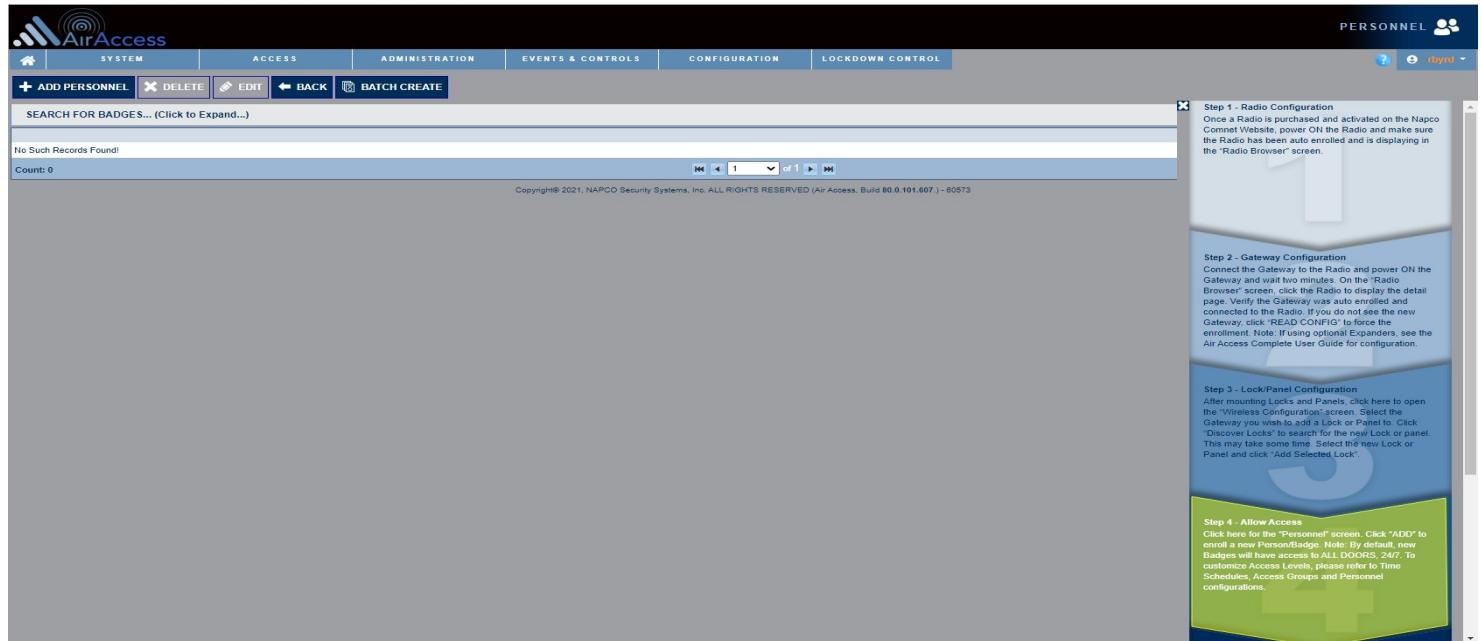

Programming a Basic System Using the 5-Step Wizard

- Step 1.** After a communicator is purchased, activate the communicator on the ComNet web site, power ON the communicator and verify the communicator is auto-enrolled in the *Air Access Cloud Web Portal*. **Click Step 1** in the Wizard to navigate to the list of Communicator devices in the *Cloud Portal*. **Note:** Refer to the Communicator Installation Instructions (WI2453) and (WI2454) you received with your Communicator for important installation requirements, including placement instructions.

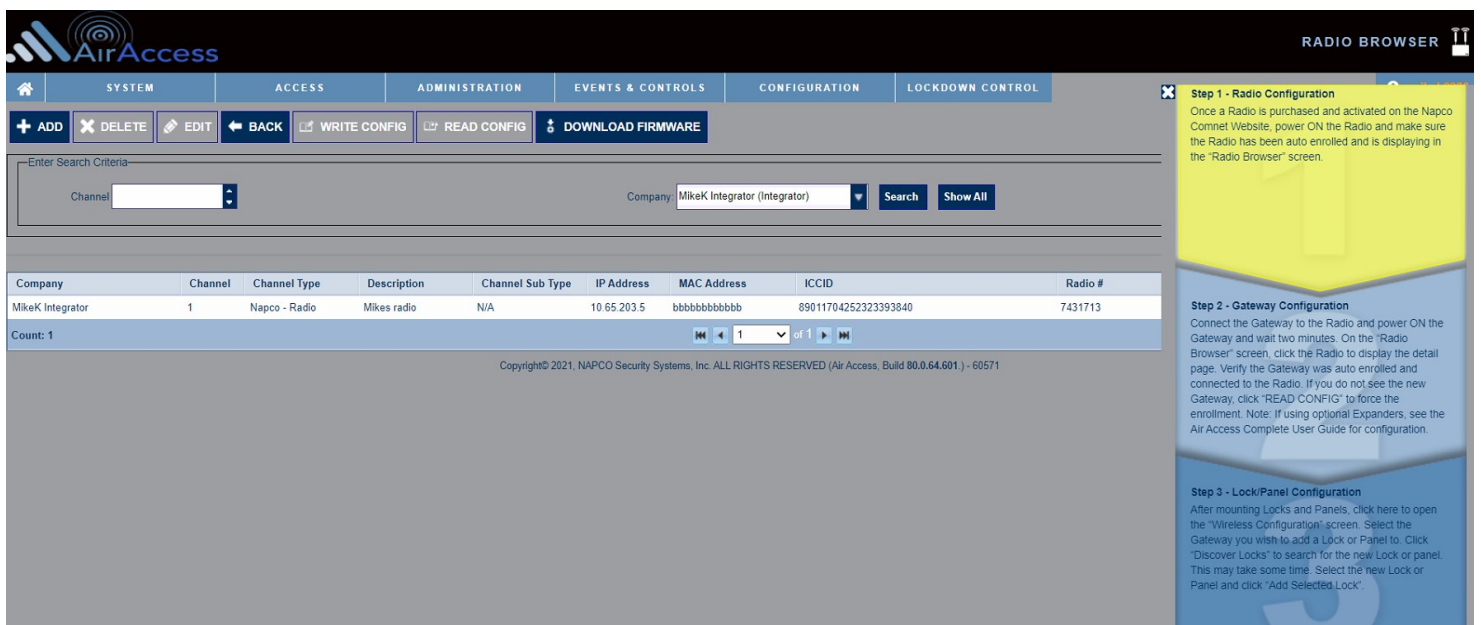

Step 2 (Gateway Configuration). Connect the Air Access Gateway to the Air Access Communicator. Power ON the Gateway. After waiting approximately 2 minutes, double-click the Air Access Communicator in the list to go to the Radio detail screen.

Note: Refer to the Gateway Installation Instructions (WI2449) and (WI2450) included with your Gateway for important installation requirements, including placement instructions.

The screenshot shows the AirAccess RADIO BROWSER interface. The main table lists devices with columns: Company, Channel, Channel Type, Description, Channel Sub Type, IP Address, MAC Address, ICCID, and Radio #. A red arrow points to the first entry: MikeK Integrator, Channel 1, Napco - Radio, Mikes radio, N/A, 10.65.203.5, 89011704252323393840, 7431713. The sidebar on the right shows a wizard with four steps: Step 1 - Radio Configuration, Step 2 - Gateway Configuration (highlighted), Step 3 - Lock/Panel Configuration, and Step 4 - Allow Access.

After double-clicking the Air Access Communicator in the list, **Step 2** of the Wizard will highlight and the Communicator detail screen displays. Review all information for the Air Access Communicator and verify the Gateway is auto-enrolled under **Sub-device Status**. If you do not see the Gateway after a few minutes, click the **"READ CONFIG"** button to force the enrollment.

Note: After the Gateway displays in the list, verify the Gateway status displays **Connected (Yes)**.

The screenshot shows the AirAccess RADIO BROWSER interface with the General tab selected. The form contains the following fields:

- Company: MikeK Integrator (Dealer)
- Channel: 1
- Description: Mikes radio
- Type: Napco - Radio
- IP Address (Check IP ...): 10.65.203.5
- Radio #: 7431713
- MAC Address: D4-F0-B4-01-8F-8B
- ICCID: 89011704252323393840
- IP Port: 6005
- Auto Enroll Gateway: Enabled
- UTC Zone: (GMT-05:00) Eastern Time (US Cana)
- Partition Group: Partition_60571_MikeK2020

The 'Sub-device Status' table is also visible, showing the status of various devices:

#	Type	MAC Address	Connected	Static IP
1	Alarm Lock - Wireless Gateway	0080A38B34CF	Yes	192.168.16.20
2				NOT CONFIGURED
3				NOT CONFIGURED
4				NOT CONFIGURED
5				NOT CONFIGURED
6				NOT CONFIGURED

At the bottom, it says: Last Updated: 12/20/2021, 11:18:51 AM, Version: 216.4.94.0.6, Signal Strength: -115

Step 3 (Lock/Panel Configuration). After mounting the Locks and NetPanels, click **Step 3** to open the **WIRELESS CONFIGURATION** screen. On the top half of the screen, select the Gateway to which you will be assigning the Lock or NetPanel. On the bottom half of the screen, click **Discover Locks**.

Gateways

Description	COM Port	MAC Address	IP Address	Firmware Version	Status	Lock Count	RF Channel	Group No
Gateway: 0080A38B34CF	1 - 1	0080A38B34CF	192.168.16.20	7.11	Ready	1	49	38

Total : 1, Selected Gateway : 0080A38B34CF

Locks

Discover Locks (highlighted with red arrow)

Refresh All Locks, Remove, Replace, Reset, Download, Device, Locate Time: 10 Second(s), Locate

Lock ID, **Lock Type**, **Lock Name**, **Transmit Signal**, **Receive Signal**, **Firmware Version**, **Lock Status**, **Battery Volt**

Step 1 - Radio Configuration
Once a Radio is purchased and activated on the Napco Connect Website, power ON the Radio and make sure the Radio has been auto enrolled and is displaying in the "Radio Browser" screen.

Step 2 - Gateway Configuration
Connect the Gateway to the Radio and power ON the Gateway and wait two minutes. On the "Radio Browser" screen, click the Radio to display the detail page. Verify the Gateway was auto enrolled and connected to the Radio. If you do not see the new Gateway, click "READ CONFIG" to force the enrollment. Note: If using optional Expanders, see the Air Access Complete User Guide for configuration.

Step 3 - Lock/Panel Configuration
After mounting Locks and Panels, click here to open the "Wireless Configuration" screen. Select the Gateway you wish to add a Lock or Panel to. Click "Discover Locks" to search for the new Lock or panel. This may take some time. Select the new Lock or Panel and click "Add Selected Lock".

Step 4 - Allow Access
Click here for the "Personnel" screen. Click "ADD" to enroll a new Person/Badge. Note: By default, new Badges will have access to ALL DOORS. 24/7. To customize Access Levels, please refer to Time.

After clicking **Discover Locks** on the **Wireless Configuration** screen above, the **Add Lock(s)** screen will display. Select the **Number of Locks to Discover** and click **Discover Locks**.

Add Lock (s)

Number of Locks to Discover : 15 Lock(s) **Discover Locks**

Select	LOCK ID	Transmit Signal	Receive Signal	Lock Type	Exp Address	Lock Name	Exists
☐	7D483D02	64	59	CPDL6500	GW	Lock [CPDL6500 - 7D483D02]	No
☐	BF440003	36	32	CPDL7100	GW	Lock [CPDL7100 - BF440003]	No
☐	83018B0F	36	30	6c	GW	Lock [6c - 83018B0F]	No
☐	2B8C782F	36	29	NetPanel	GW	Lock [NetPanel - 2B8C782F]	No
☐	67BB2B4D	76	72	CPDL6600	GW	Lock [CPDL6600 - 67BB2B4D]	No
☐	8CB53E7F	80	76	CPDL8200	GW	Lock [CPDL8200 - 8CB53E7F]	No
☐	98BB3D90	34	34	CPDL6100	GW	Lock [CPDL6100 - 98BB3D90]	No

Total : 15, Selected Lock Count :

Close

After the Lock is discovered, it will display in the list. Selecting the Lock in the list displays the Lock information. Review this Lock information; if correct, click **Add Lock(s)**.

Add Lock (s)

Number of Locks to Discover :

15 Lock(s)

Discover Locks

Select	LOCK ID	Transmit Signal	Receive Signal	Lock Type	Exp Address	Lock Name	Exists
☐	7D483D02	64	54	CPDL6500	GW	Lock [CPDL6500 - 7D483D02]	No
☐	BF440003	36	30	CPDL7100	GW	Lock [CPDL7100 - BF440003]	No
☐	83018B0F	35	30	6c	GW	Lock [6c - 83018B0F]	No
☐	2B8C782F	21	22	NetPanel	GW	Lock [NetPanel - 2B8C782F]	No
☐	67BB2B4D	76	72	CPDL6600	GW	Lock [CPDL6600 - 67BB2B4D]	No
☐	A9A12F79	80	76	CPDL8600	GW	Lock [CPDL8600 - A9A12F79]	No
☒	8CB53E7F	80	76	CPDL8200	GW	Lock [CPDL8200 - 8CB53E7F]	No

Total : 15, Selected Lock Count : 1

Gateway Address

0080A3E3F85C

Partition Group

☒ Partition_60599_mikecustomer1
☐ Partition_60599_hr
☐ Partition_60599_security

Panel

2

Lock Address

2

Add Lock (s)

Close

After adding the Lock or NetPanel and clicking **Close**, the added Lock will display on the bottom of the **WIRELESS CONFIGURATION** screen.


WIRELESS CONFIGURATION

SYSTEM
ACCESS
ADMINISTRATION
EVENTS & CONTROLS
CONFIGURATION
LOCKDOWN CONTROL

?
9
mikek2020

Gateways

Refresh Gateway
Search Gateways
Replace Gateway
Expanders
Remove Gateway
Reset
Download

Radios: All
Company List: Mike Customer1 Inc

Description	COM Port	MAC Address	IP Address	Firmware Version	Status	Lock Count	RF Channel	Group No	Expander Count	Company
Gateway: 0080A3E3F85C	1 - 1	0080A3E3F85C	192.168.16.20	7.30	Ready	2	49	0	0	Mike Customer1 Inc

Total : 1, Selected Gateway : 0080A3E3F85C

Locks


Discover Locks
Refresh
Refresh All Locks
Remove
Replace
Reset
Download
Device

Locate Time: 10 Second(s)
Locate

Lock ID	Lock Type	Lock Name	Transmit Signal	Receive Signal	Firmware Version	Lock Status	Battery Volt	Expander Address	Last Updated
8CB53E7F	CPDL8200	Lock 2 [CPDL8200 - 8CB53E7F]	77	77	4.41	Door Secure.	5.59	GW	9/15/2021 2:23:04 PM
A5487764	CNetPanel	Lock 1 [CNetPanel - A5487764]	95	91	4.49	Door Secure.	N/A	GW	9/15/2021 2:22:07 PM

Click **Step 4** to display the **PERSONNEL** screen. This screen is used to add badges or Pin Only codes to the *Air Access Cloud Web Portal* system.

Note: By default, new badges or Pins added will have access to All Doors, 24 hours a day, 7 days a week. To customize access levels, please refer to **Administration>Schedule** and **Access>Access Group** menu selections. To add a badge, click **+ADD PERSONNEL**.

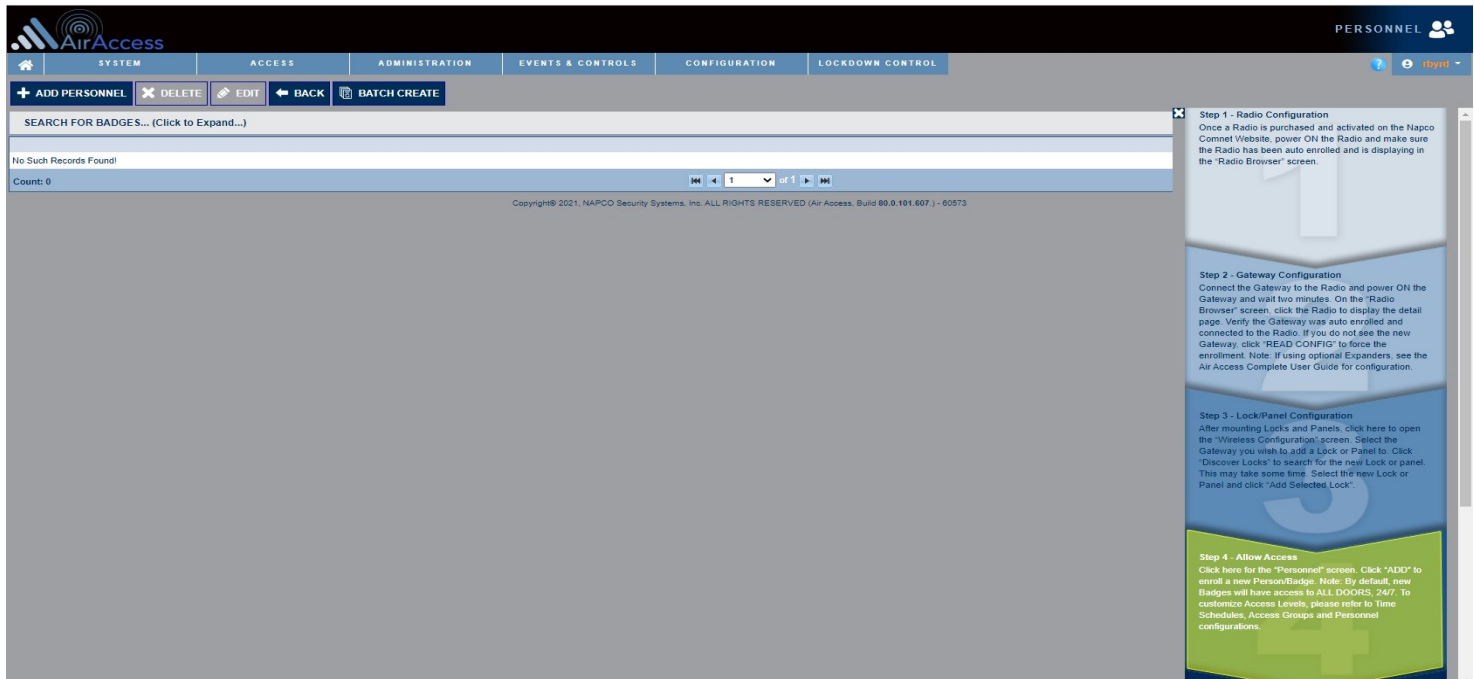

After clicking **+ADD PERSONNEL**, the **Personal Information** screen will display (shown below). Enter **Last Name**, **First Name** and **Badge Number**. By default, the **All Door Access** Group will be assigned to the badge. Click **Save**.

Save

Cancel

Back

Personal Information

Control

User Info

Photo

Company List

MikeK Integrator (Dealer)

Personal Information

Last Name

First Name

Middle Name

Credential Information

Badge Number / PIN Only

Facility No

Two Factor PIN

Re-Issue

Embossed ID

Access Information

Badge Enable

Partition Group

Holiday Calendar

Access Time (secs)

Activation Date & Time

Expiration Date & Time

Access Groups

Seq. No	Access Group
1	All Door Access
2	No Access
3	No Access
4	No Access
5	No Access
6	No Access
7	No Access
8	No Access
9	No Access
10	No Access
11	No Access
12	No Access
13	No Access
14	No Access
15	No Access
16	No Access

After clicking **Save**, the Badge or Pin Only will display in the **PERSONNEL** screen.

The screenshot shows the **PERSONNEL** screen in the AirAccess interface. The top navigation bar includes **SYSTEM**, **ACCESS**, **ADMINISTRATION**, **EVENTS & CONTROLS**, **CONFIGURATION**, and **LOCKDOWN CONTROL**. Below the navigation bar are buttons for **+ ADD**, **DELETE**, **EDIT**, and **BACK**. A search section titled "SEARCH FOR BADGES... (Click to Collapse...)" contains fields for Facility No, Badge No, First Name, Last Name, Access Group, Field, Value, and Company List. Below the search fields is a table with columns: Company, Last Name, First Name, Facility, Badge No, Enabled, and Activation Date & Time. The table shows one entry: MikeK Integrator, Kelly, Michael, 0, 27842, and a checked box for Enabled. A "Count: 1" is displayed below the table. On the right side, there are four instructional steps: Step 1 - Radio Configuration, Step 2 - Gateway Configuration, Step 3 - Lock/Panel Configuration, and Step 4 - Allow Access. The bottom of the screen displays the copyright notice: Copyright© 2021, NAPCO Security Systems, Inc. ALL RIGHTS RESERVED (Air Access, Build 90.0.64.601) - 60571.

Click **Step 5** to display the **EVENTS AND PENDING ALERTS** screen.

The screenshot shows the **EVENTS AND PENDING ALERTS** screen in the AirAccess interface. The top navigation bar includes **SYSTEM**, **ACCESS**, **ADMINISTRATION**, **EVENTS & CONTROLS**, **CONFIGURATION**, and **LOCKDOWN CONTROL**. Below the navigation bar are buttons for **Events Filter**, **Browse**, **Respond**, **Map**, **Control**, **Recent**, **Photo**, **Show All**, and **Show Auto-Ack All**. A table titled "Live Events" displays a list of events with columns: Class, Description, Location, Lock / Panel DateTime, and Acknowledged At. The table shows 12 events, including "LOCK Data" and "Wireless Gateway" events. Below the table, it says "Event Count: 33". A section titled "Pending Alerts: 0" is shown. Below this section are buttons for **Pending Alerts Filter**, **Acknowledge Alert**, **Acknowledge All**, **Respond**, **Map**, **Control**, **Disable Alerts**, and **Photo**. On the right side, there are four instructional steps: Step 3 - Lock/Panel Configuration, Step 4 - Allow Access, and Step 5 - Realtime Events. The bottom of the screen displays the copyright notice: Copyright© 2021, NAPCO Security Systems, Inc. ALL RIGHTS RESERVED (Air Access, Build 90.0.64.601) - 60571.

The **Events and Pending Alerts** screen is divided into two sections. The top half of the screen is the **Events** window; the bottom half of the screen is the **Pending Alerts** window. All Events and Alerts have a priority number associated with them. High priority Events/Alerts have a lower number, and lower priority Events/Alerts will have a higher number. For example, a **Forced Door** alert is a high priority alert, and will have a low number. A **Badge Valid** event is considered a low priority event, and will have a higher number.

Very Important: By default, only high priority alerts such as a **Forced Door** and **Badge Violate Void**, will display real-time in the **Pending Alerts** window. Lower priority events can be viewed in the **Live Events** window after a maximum of 24 hours or after events are manually retrieved. To manually retrieve events, go to **Configuration > Locks/Panels**. Select the Lock you wish to retrieve the events, then click **Retrieve Events**.

LOCK / PANEL BROWSER

SYSTEM ACCESS ADMINISTRATION EVENTS & CONTROLS CONFIGURATION LOCKDOWN CONTROL

+ Add Delete Edit Download Retrieve Events Back

Advanced Search Options... (Click to Expand...)

Enter Search Criteria:

Lock / Panel Name ID: Device Name: Company: MikeK Integrator (Integrator) Search Show All As Local Time

Company	Lock / Panel	Device Name	Pni Address	MAC Address	Enable	COM Port	Last Edit
MikeK Integrator	1	Lock 1 [CNetPanel - 875A694A]	1	0080A38B34CF	☒	1	2/4/2021 7:40:14 AM

Count: 1 1 of 1

Copyright© 2021, NAPCO Security Systems, Inc. ALL RIGHTS RESERVED (Air Access, Build 80.0.64.601) - 60571

After completing the 5-Steps in the configuration Wizard, the result will be a basic, configured and functional Air Access system. Test the system operation by swiping a badge or enter the Pin Only enrolled in Personnel to verify it is unlocking the door. If any additional settings are required for Locks/Panels or Readers, you can configure them under the **Configuration** and **Administration** menus.

Note: Refer to the **Air Access Online Help** for additional detailed information. The Online Help can be accessed by clicking "?" on the top right corner of the Air Access screens.

AIR ACCESS APP

Download and Install the Free Air Access App

The Air Access App requires it be downloaded from the **Apple App Store** or the **Google Play Store**. In the App stores, search for "Air Access App" or "Napco Apps". Upon downloading and installing the Air Access app, an Air Access icon will display on the device. The Air Access app is a robust application that provides many functions, including the ability to Unlock/Lock doors, perform area lockdowns and activate Threat Levels. In addition, you can administer Personnel, display Status, send SMS notifications and generate a **Badge Holder In-list** for emergency evacuations.



Download on the App Store



Get it on Google Play

VERY IMPORTANT: Upon downloading the Air Access app and installing it on an IOS device, you might be required to **VERIFY** the app under **Settings > General > Device Management**.


Configuring the Air Access Cloud Software

Prior to launching the Air Access app, you must perform the following programming steps in the *Air Access Cloud Web Portal* software.

- You **MUST** create an Air Access Operator for each mobile app user (go to **Administration > Operators**). Under each Operator, you must select a Privilege Role. It is recommended to use the **Administrator Privilege Role** for administrators and use the default **Mobile Privilege Role** (with basic permissions) for all basic mobile app users.
- For each Air Access Operator configured, you **MUST** create a badge in **PERSONNEL**. The first and last name of the badge holder **MUST exactly** match the first and last name of the Operator. The Operators first and last name can be found under **Operators > Personal**. The badge numbers assigned in **PERSONNEL** can be the users physical proximity card number or a randomly selected number.
- By default there should be an **All Doors** Access Group assigned to the badge in **PERSONNEL**. The Access Group assigned to the badge determines the doors the Mobile App user will see under the **My Doors** menu selection in the Air Access app.


Launch Air Access App

Launch the Air Access app on your device by tapping the Air Access icon. In the Air Access **User Log-in** screen, log in with your **Account** number, **Username** and **Password**.

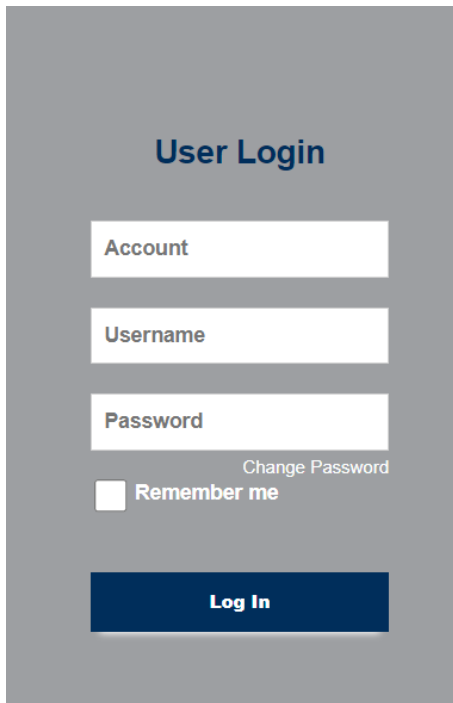


The image shows the 'User Login' screen of the Air Access app. It has a grey background with a dark blue header area. The title 'User Login' is in dark blue. Below the title are three white input fields with dark blue labels: 'Account', 'Username', and 'Password'. To the right of the 'Password' field is a link that says 'Change Password'. Below the input fields is a checkbox labeled 'Remember me'. At the bottom is a dark blue button with the text 'Log In' in white.

Upon clicking **Log In**, the **Please Select User Profile** screen displays.

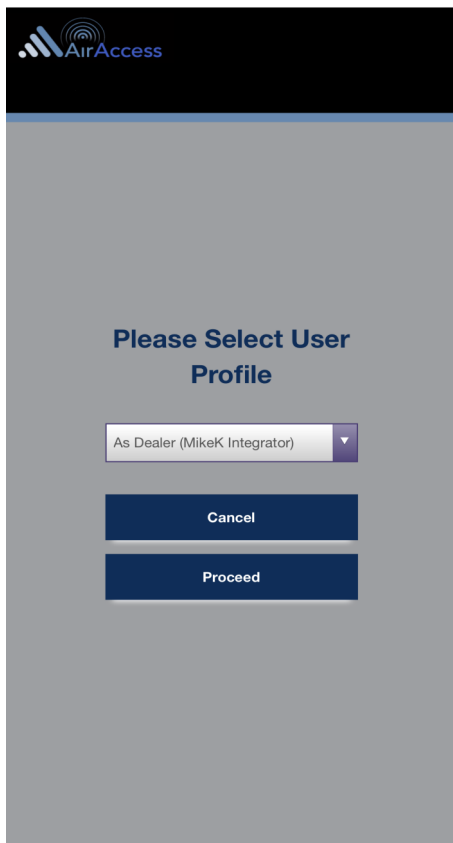


The image shows the 'Please Select User Profile' screen of the Air Access app. It has a grey background with a dark blue header area. The title 'Please Select User Profile' is in dark blue. Below the title is a dropdown menu with the text 'As Dealer (MikeK Integrator)' and a downward arrow. Below the dropdown are two dark blue buttons with white text: 'Cancel' and 'Proceed'.

Upon clicking the User Profile pull-down, all the customers will display. Select the **User Profile** (customer) you wish to view, and tap **Proceed**.

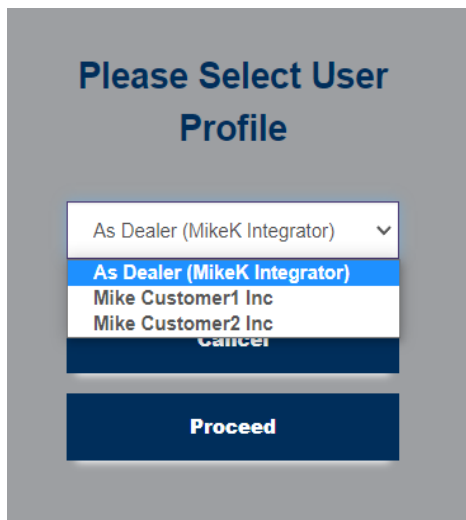

Upon selecting a User Profile, the Air Access main menu displays (shown below). Click the MORE icon (3 horizontal bars) to display the configuration screen. The settings in this screen are local to the device and must be configured on each device. Upon any configuration changes, you must click **SAVE**.

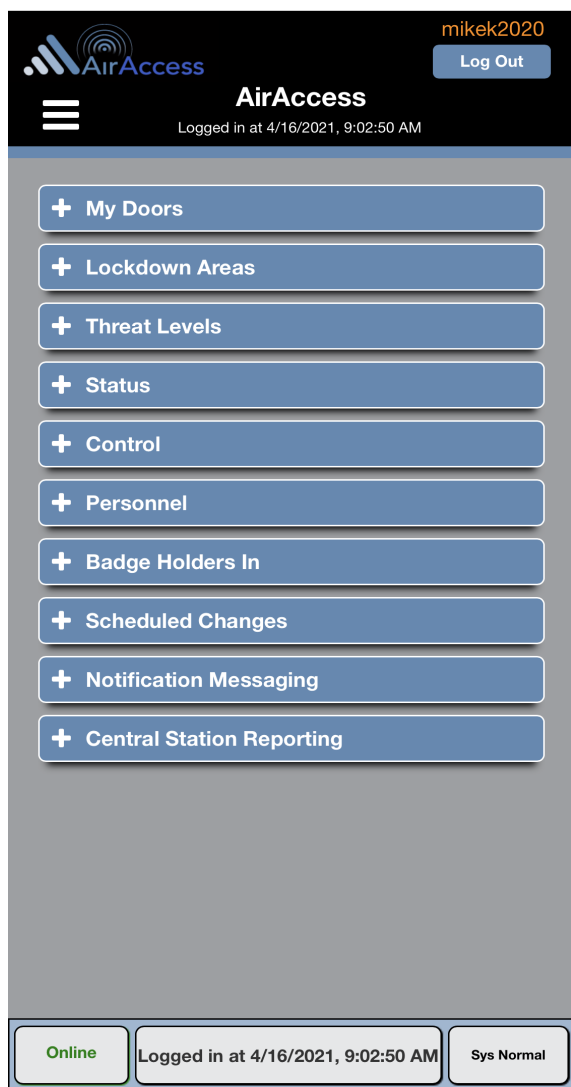

Upon clicking the 3 horizontal bars, the **AirAccess App Config** screen will display. The top half of the configuration screen has various settings including the **Badge Holder's Link** settings. Be sure to verify the **Badge Holder's Link** section is populated. If it is not, you **MUST** go back into the Air Access Cloud software and check your settings under **Operators > Personnel**.

Located below the **Badge Holder's Link** section is the **My Doors** section. You must select **My Doors** for it to display on the main menu. Under **My Doors**, all the doors you have permissions to unlock and lock will display. **Very Important:** You **MUST** select the Doors under **My Doors** you wish to display to allow unlocking and locking.

Very Important: There is a check box for each menu item that displays on the main menu. The first is **My Doors**. The remainder of menu items are located on the lower half of the configuration screen. You must select these menu item selections if you want them to display in the main menu.



mikek2020

Log Out

AirAccess App Config

SaveCancelBack

General

- Login Session Time out

5 minutes

- App PIN Entry

☐

View Selections

Badge Holder's Link

Badge/Facility

27842/0

First Name

Mike

Last Name

Kelly

- My Doors

☒

Lock 875A694A Reader 1

☒

Lock 875A694A Reader 2

☒

Lock A5487764 Reader 1

☒

Lock A5487764 Reader 2

☒

- Lockdown

☒

- Threat Levels

☒

Online

Tap to see messages

Sys

Normal

Air Access Quick Start Guide

25

Very Important: As mentioned on the previous page, you must select all the menu selections you wish to display on the main menu.

Below the menu selections are various settings (**View Options** and **Message Options**). These settings are discussed in detail in the **Air Access Online Help**.

After configuring all the settings, you MUST tap **Save**.



mikek2020

Log Out

AirAccess App Config

- Status

☒

- Control

☒

- Personnel

☒

- Badge Holders In

☒

- Scheduled Changes

☒

- Notification Messaging

☒

- Central Station Links

☒

View Options

- Keep "My Doors" Expanded

☐

- Request Lock Status

☐

- In-List Refresh (Seconds)

10

Message Options

- Display Message Time (Seconds)

10

Or until cleared

☐

Online

Tap to see messages

Sys Normal


26

Air Access Quick Start Guide


Upon exiting configuration, the Air Access app main menu will display. Click the "+" to expand **My Doors**.



Upon expanding **My Doors**, the doors you have permissions to unlock and lock will display. If the doors do not display, go back into **AirAccess App Config > View Selections > My Doors** and verify the doors are selected. Click **Unlock** to unlock a door. Upon clicking Unlock, verify you hear the door relay click and an alert displays in the *Air Access Cloud Web Portal* software.

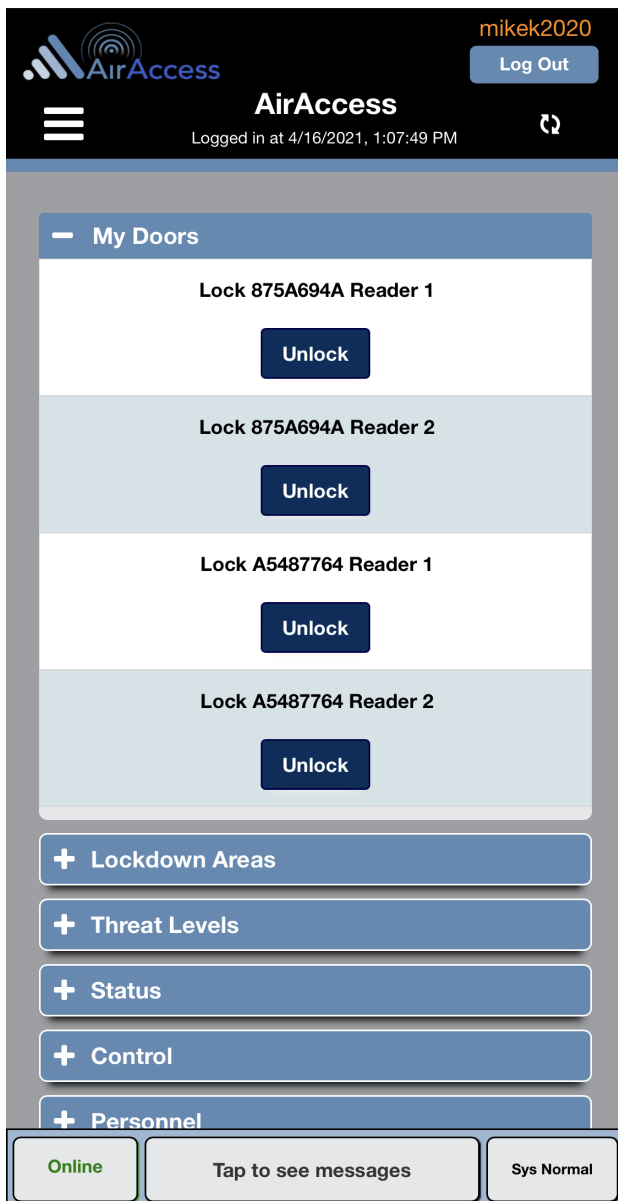

The remainder of the main menu functions will be discussed in detail in the **Air Access Online Help**.

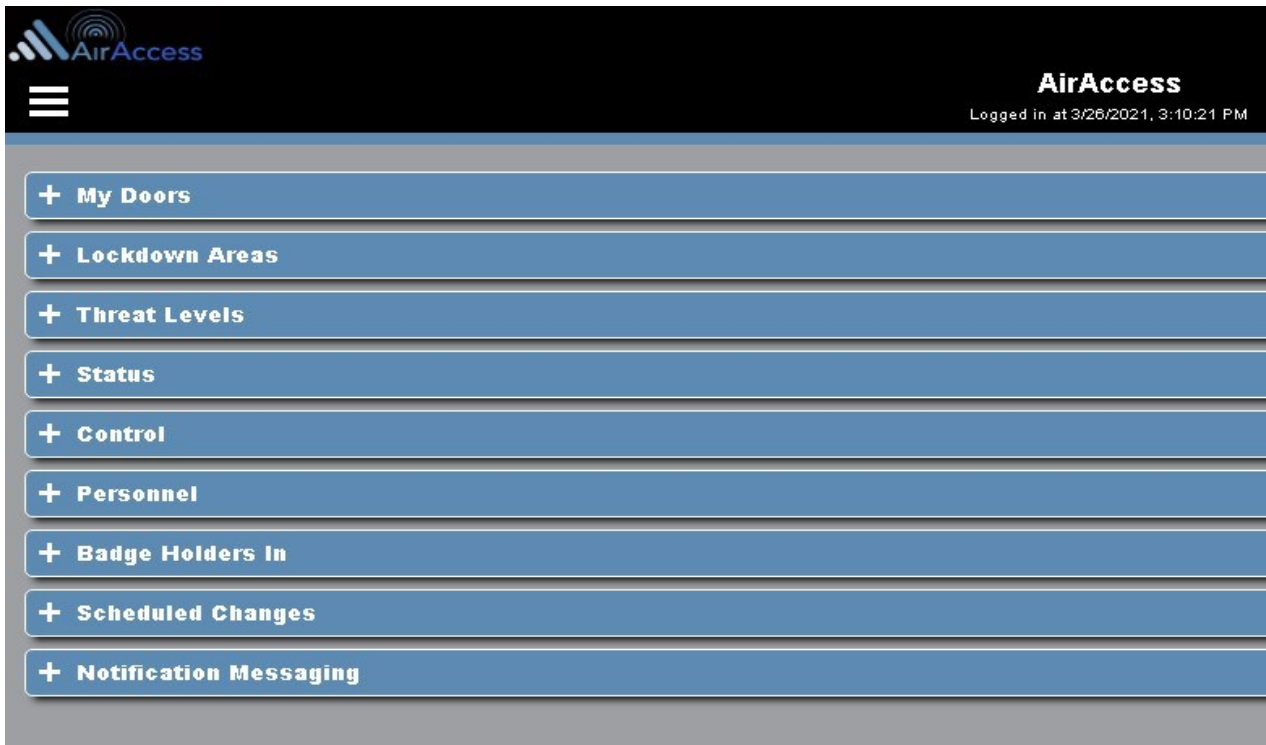

Air Access App Troubleshooting Tips

1. Issues installing the Air Access app in an **IOS device** might require that you **VERIFY** the app under **Settings > General > Device Management**.
2. If the app configuration settings are not saving correctly, you might be required to **clear cache** and **data** on your device. Refer to the device documentation for instructions.
3. In the app configuration settings, if the **Badge Holder's Link** section is blank, you must check the settings under **Operators**, **PERSONNEL** and **Access Groups** in the *Air Access Cloud Web Portal* software.
4. If **My Doors** are not displaying in the app configuration settings, verify the **Badge Holder's Link** is populated. If it is not, refer to the previous step.
5. If **My Doors** is displaying in configuration settings, but no doors are listed under it, verify the **Access Groups** in the *Air Access Cloud Web Portal* software are configured properly for the Mobile App Operator and the associated Badge Holder.
6. If **My Doors** is displaying on the main menu, but doors are missing upon expanding it, you must verify the doors are selected under **MY Doors** in the configuration settings.

GLOSSARY

ACCESS = Entry into a restricted area.

ASSIGN = Add to hardware or specify a relationship. Can be used with User Codes and locks ("to *assign* User Codes to specific locks"), or with hardware identification ("the factory *assigns* each lock a unique serial number"), or a fixed wireless communication channel between locks and a Gateway ("locks *assigned* to a Gateway").

AUDIT TRAIL = A record of Air Access actions (not keypad entries). Located in the File pull-down menu, Audit Trail actions include: **Logged At** (date/time); **Location** (Lock Profile name); **Action**; **Operator**; **Description**. The Audit Trail is primarily intended to track the identity of the person who logged into Air Access and the actions they performed; compare with the **EVENT LOG**.

CENTRAL STATION = Central Station monitoring facility (local, remote, primary or 3rd party) receives alarm & event reports from the Air Access System via cellular communications and can help dispatch police/fire response to protected premises as appropriate in an alarm or emergency event. Service is generally charged by dealer as a separate monthly incremental fee.

CLOCK = (REAL TIME CLOCK) = An accurate built-in clock that allows date/time stamping of events.

CODE = Numeric sequence of numbers (such as: 1234) entered at the keypad.

COM PORT = A computer serial communications port used to communicate with the Lock and/or Data Transfer Module.

COMMUNICATE = To send or receive a transmission. To avoid the directionally confusing terms of "download" and "upload", the word "communicate" is used in this guide.

CONFIGURE = To "assign" (add) discovered physical locks to a Gateway (by sending the "Lock Config Table" to the selected Gateway). Configuring ensures a fixed wireless communication channel exists between selected physical locks and a selected Gateway.

The **Gateway Configuration** screen allows you to select a Gateway and allow that Gateway to discover physical locks; these physical locks can then be assigned to that selected Gateway. When the **Use Selected Locks** button is clicked (in the **"DISCOVERED LOCKS" POPUP**), the Gateway sends "configuration data" to the selected locks.

This "configuration data" contains items (such as an internal lock designation, a specific radio channel and security data) that are all embedded in what is called a "Lock Config Table". This "configuration data" instructs the physical lock(s) to communicate **ONLY** with that Gateway and prevents other Gateways from communicating with the physical lock(s).

In short, the Gateway tries to "configure" the selected physical locks by assigning the selected physical locks to the Gateway.

CREDENTIAL = A generic word used to indicate a PIN number pressed into a lock keypad, or a proximity card or proximity keyfob.

DATA DOWNLOAD = To send configuration data (Panels, Locks, Badges...) down to a Gateway, Expander or Locks.

DEALER = aka Dealer/Locksmith/Integrator installing the Air Access System for an end user/account.

DEFAULT = "Default" settings are the original settings that were set at the factory; in other words, it is the lock's original factory condition when the lock was first taken out of its box. The default settings are permanently encoded within the lock's fixed memory, and when the lock is first started, or when power is removed and re-applied, the original factory default settings are re-loaded and take effect.

DHCP (Dynamic Host Configuration Protocol) = Automatic assignment of IP addresses to devices that are connected to a network. It eliminates having to manually assign fixed IP addresses.

DISCOVER = To "discover" Gateways, the system searches for Gateways not yet added to an Account; to "discover" locks, the selected Gateway searches for locks not yet assigned to Gateways.

EXPANDER = Expanders extend the coverage area of Air Access Gateways, allowing control of up to its rated maximum of 63 Networx locks per Gateway. Used in place of additional Gateways, **AL-IME2-EXP** Expanders are useful when a Gateway does not provide sufficient signal strength to a particular area and therefore is unable to communicate with a wireless lock or group of wireless locks. Up to 7 Expanders can be added to one Air Access Gateway.

EVENTS = Recorded lock and panel activity.

FIRMWARE = The software programming that runs internally within the physical lock and Gateway circuitry, containing the instructions that these devices

GLOSSARY (Cont'd)

use to perform their various functions. Firmware can be updated, if necessary.

FIRMWARE DOWNLOAD = To send a Firmware file down to Gateway, Expander or Locks.

GATEWAY = Gateway device is used to transmit to the locks via an Alarm Lock proprietary radio connection

GTW Rx = Indicates the radio transmission strength, as measured between the Gateway to the physical lock.

IP ADDRESS = The IP (Internet Protocol) address is a unique address of a device (such as a computer or a Gateway) connected to a TCP/IP corporate Intranet. IP addresses are written as four groups of numbers separated by periods; these groups are called "octets". IP addresses can be permanent ("static") or dynamically assigned (by DHCP) when a device, such as a Gateway, is powered.

LOCATE =

- **With physical lock(s)**, the Locate command causes the physical lock to "beep" and flash its LED (helpful when you wish to find the physical lock or confirm the lock's wireless connection is operational).
- **When used with a Gateway**, refers to re-discovering a "lost" Gateway device on the network. Used when an operational Gateway has lost its network connection, and appears highlighted red in the **Gateway Configuration** screen.

LOCK = A generic word used to indicate one of the many Alarm Lock locking devices that can be purchased, including devices such as the NetPanel (wireless control panel).

LCK Rx = Indicates the radio transmission strength, as measured between the physical lock to the Gateway. A **higher** number indicates **stronger** signal.

LOCK TYPE = Specifies the model of the Alarm Lock locking device, such as "PDL6100", "DL6100", "PL6100", N9000 or N9500.

LOCK CONFIG TABLE = When a Gateway is "discovered" and added to an Account, Air Access sends a **Lock Config Table** which contains the assigned (or unassigned) lock data stored in the Gateway memory. The table is a database structure that is designed to hold all physical lock data (serial numbers, etc.).

MULTI-LOCK GATEWAY = For use with up to 63 Alarm Lock Trilogy Network Wireless or Designer Network ArchiTech Wireless Prox/MultiTech Access Locks with Built in Readers.

PROGRAM MODE = A mode allowing program/data to be entered through the keypad. Only specific Users can program a lock manually, by entering their USER CODE, followed by the  key. To exit program mode, hold any key until repeated beeps are heard.

PROXIMITY CARDS = See **CREDENTIAL**.

RADIO - A Cellular Communicator on choice of AT&T or Verizon Nationwide Networks.

SCHEDULE = A programmed operation (enable / disable, lock / unlock, etc.) on a specific day (Sunday through Saturday) and time.

SERVICE LOG = Used by authorized personnel to troubleshoot Air Access issues. The Service Log records all data transfers and commands that are sent and received.

SUB-DEVICE = A device assigned to a parent device. An example would be a Gateway assigned to a Communicator. The Gateway is considered the sub-device.

SUBNET (SUBNET) = To improve security and processing performance, network administrators often divide their corporate Intranets into interconnected but separate segments called "subnets". Subnets also allow multiple users to access the Intranet with the same subnet address. A router is typically used to allow network traffic to pass between subnets.

SUBNET MASK = The IP protocol makes use of a Subnet Mask to more efficiently route packets to their correct network destinations. When a Gateway receives a data packet, the Subnet Mask indicates how many bits of the packet's destination address are to be used for routing and which bits are to be "masked" (ignored). The Subnet Mask can be thought of as a "filter" that allows the system to ignore unnecessary information, thus increasing efficiency. This information must be obtained from your network administrator.

TIME/DATE STAMP = A recorded date and time that an event occurred.

TYPE = See **LOCK TYPE**.

UPLOAD = See **COMMUNICATE**.

HELPFUL RESOURCES / URLs

www.AirAccess.com - The Air Access website.

www.AirAccess.Cloud - Ready-to-connect software for Air Access systems (included with Air Access kits).

www.NapcoComNet.com - Arrange for services per each account, and manage same 24/7 in a secure online environment.

Air Access App - Free Air Access app available for all smart devices and mobile operating systems, available on the *Apple App Store* or *Google Play*.

Sales

<https://www.alarmlock.com/sales/> - For more on Alarm Lock Components, ask your local Alarm Lock distributor or contact you local regional sales representative.

Technical Support / Documentation

www.napcosecurity.com/techsupport - (Technical Documents Library, See Alarm Lock) or call 1-800-645-9445 x2 or email: techsupport@napcosecurity.com.

Training

<https://alarmlock.com/seminars> - Free Air Access Sales Class & Technical Training Schedules.

NOTES

NOTES

NOTES

ALARM LOCK LIMITED WARRANTY

ALARM LOCK SYSTEMS, INC. (ALARM LOCK) warrants its products to be free from manufacturing defects in materials and workmanship for twenty four months following the date of manufacture. ALARM LOCK will, within said period, at its option, repair or replace any product failing to operate correctly without charge to the original purchaser or user.

This warranty shall not apply to any equipment, or any part thereof, which has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to acts of God, or on which any serial numbers have been altered, defaced or removed. Seller will not be responsible for any dismantling or reinstallation charges, environmental wear and tear, normal maintenance expenses, or shipping and freight expenses required to return products to ALARM LOCK. Additionally, this warranty shall not cover scratches, abrasions or deterioration due to the use of paints, solvents or other chemicals.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. THERE IS NO EXPRESS OR IMPLIED WARRANTY OF MERCHANTABILITY OR A WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. ADDITIONALLY, THIS WARRANTY IS IN LIEU OF ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF ALARM LOCK.

Any action for breach of warranty, including but not limited to any implied warranty of merchantability, must be brought within the six months following the end of the warranty period.

IN NO CASE SHALL ALARM LOCK BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT.

In case of defect, contact the security professional who installed and maintains your security system. In order to exercise the warranty, the product must be returned by the security professional, shipping costs prepaid and insured to ALARM LOCK. After repair or replacement, ALARM LOCK assumes the cost of returning products under warranty. ALARM LOCK shall have no obligation under this warranty, or otherwise, if the product has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to accident, nuisance, flood, fire or acts of God, or on which any serial numbers have been altered, defaced or removed. ALARM LOCK will not be responsible for any dismantling, reassembly or reinstallation charges, environmental wear and tear, normal maintenance expenses, or shipping and freight expenses required to return products to ALARM LOCK. Additionally, this warranty shall not cover scratches, abrasions or deterioration due to the use of paints, solvents or other chemicals.

This warranty contains the entire warranty. It is the sole warranty and any prior agreements or representations, whether oral or written, are either merged herein or are expressly cancelled. ALARM LOCK neither assumes, nor authorizes any other person purporting to act on its behalf to modify, to change, or to assume for it, any other warranty or liability concerning its products.

In no event shall ALARM LOCK be liable for an amount in excess of ALARM LOCK's original selling price of the product, for any loss or damage, whether direct, indirect, incidental, consequential, or otherwise arising out of any failure of the product. Seller's warranty, as hereinabove set forth, shall not be enlarged, diminished or affected by and no obligation or liability shall arise or grow out of Seller's rendering of technical advice or service in connection with Buyer's order of the goods furnished hereunder.

ALARM LOCK RECOMMENDS THAT THE ENTIRE SYSTEM BE COMPLETELY TESTED WEEKLY.

Warning: Despite frequent testing, and due to, but not limited to, any or all of the following; criminal tampering, electrical or communications disruption, it is possible for the system to fail to perform as expected. ALARM LOCK does not represent that the product/system may not be compromised or circumvented; or that the product or system will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; nor that the product or system will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce risk of burglary, robbery, fire or otherwise but it is not insurance or a guarantee that these events will not occur. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE, OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. Therefore, the installer should in turn advise the consumer to take any and all precautions for his or her safety including, but not limited to, fleeing the premises and calling police or fire department, in order to mitigate the possibilities of harm and/or damage.

ALARM LOCK is not an insurer of either the property or safety of the user's family or employees, and limits its liability for any loss or damage including incidental or consequential damages to ALARM LOCK's original selling price of the product regardless of the cause of such loss or damage.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, or differentiate in their treatment of limitations of liability for ordinary or gross negligence, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

RADIO AND TELEVISION INTERFERENCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003. Changes and Modifications not expressly approved by Napco can void your authority to operate this equipment under Federal Communications Commissions rules.

Disclaimer: Trilogy® is a registered trademark of Alarm Lock. ProxCARD® and ProxKey® are trademarks of the HID® Corporation. Microsoft® and Windows® are trademarks of their the Microsoft Corporation. All other trademarks, service marks, and product or service names described in this manual are for identification purposes only and may be trademarks or registered trademarks of their respective owners. The absence of a name or logo in this document does not constitute a waiver of any and all intellectual property rights that NAPCO Security Technologies, Inc. has established in any of its product, feature, or service names or logos. Screen images, icons and instructions in this guide may vary depending on the software version installed. The information in this manual is for informational purposes only and is subject to change without notice. Companies, names and data used in examples herein are fictitious unless otherwise noted. Alarm Lock assumes no responsibility for incorrect information this manual may contain.



345 Bayview Avenue, Amityville, New York 11701
For Sales and Repairs 1-800-ALA-LOCK
For Technical Service 1-800-645-9440
or visit us at <http://tech.napcosecurity.com/>
(Note: Technical Service is for security professionals only)
Publicly traded on NASDAQ Symbol: NSSC