Indicators

NOTE: Fuse 14 is hot with Ignition Switch in START (III) and clutch pedal depressed or A/T gear selector in PARK (P) or NEUTRAL (N), see Starting System, pages 21 and 21–1.

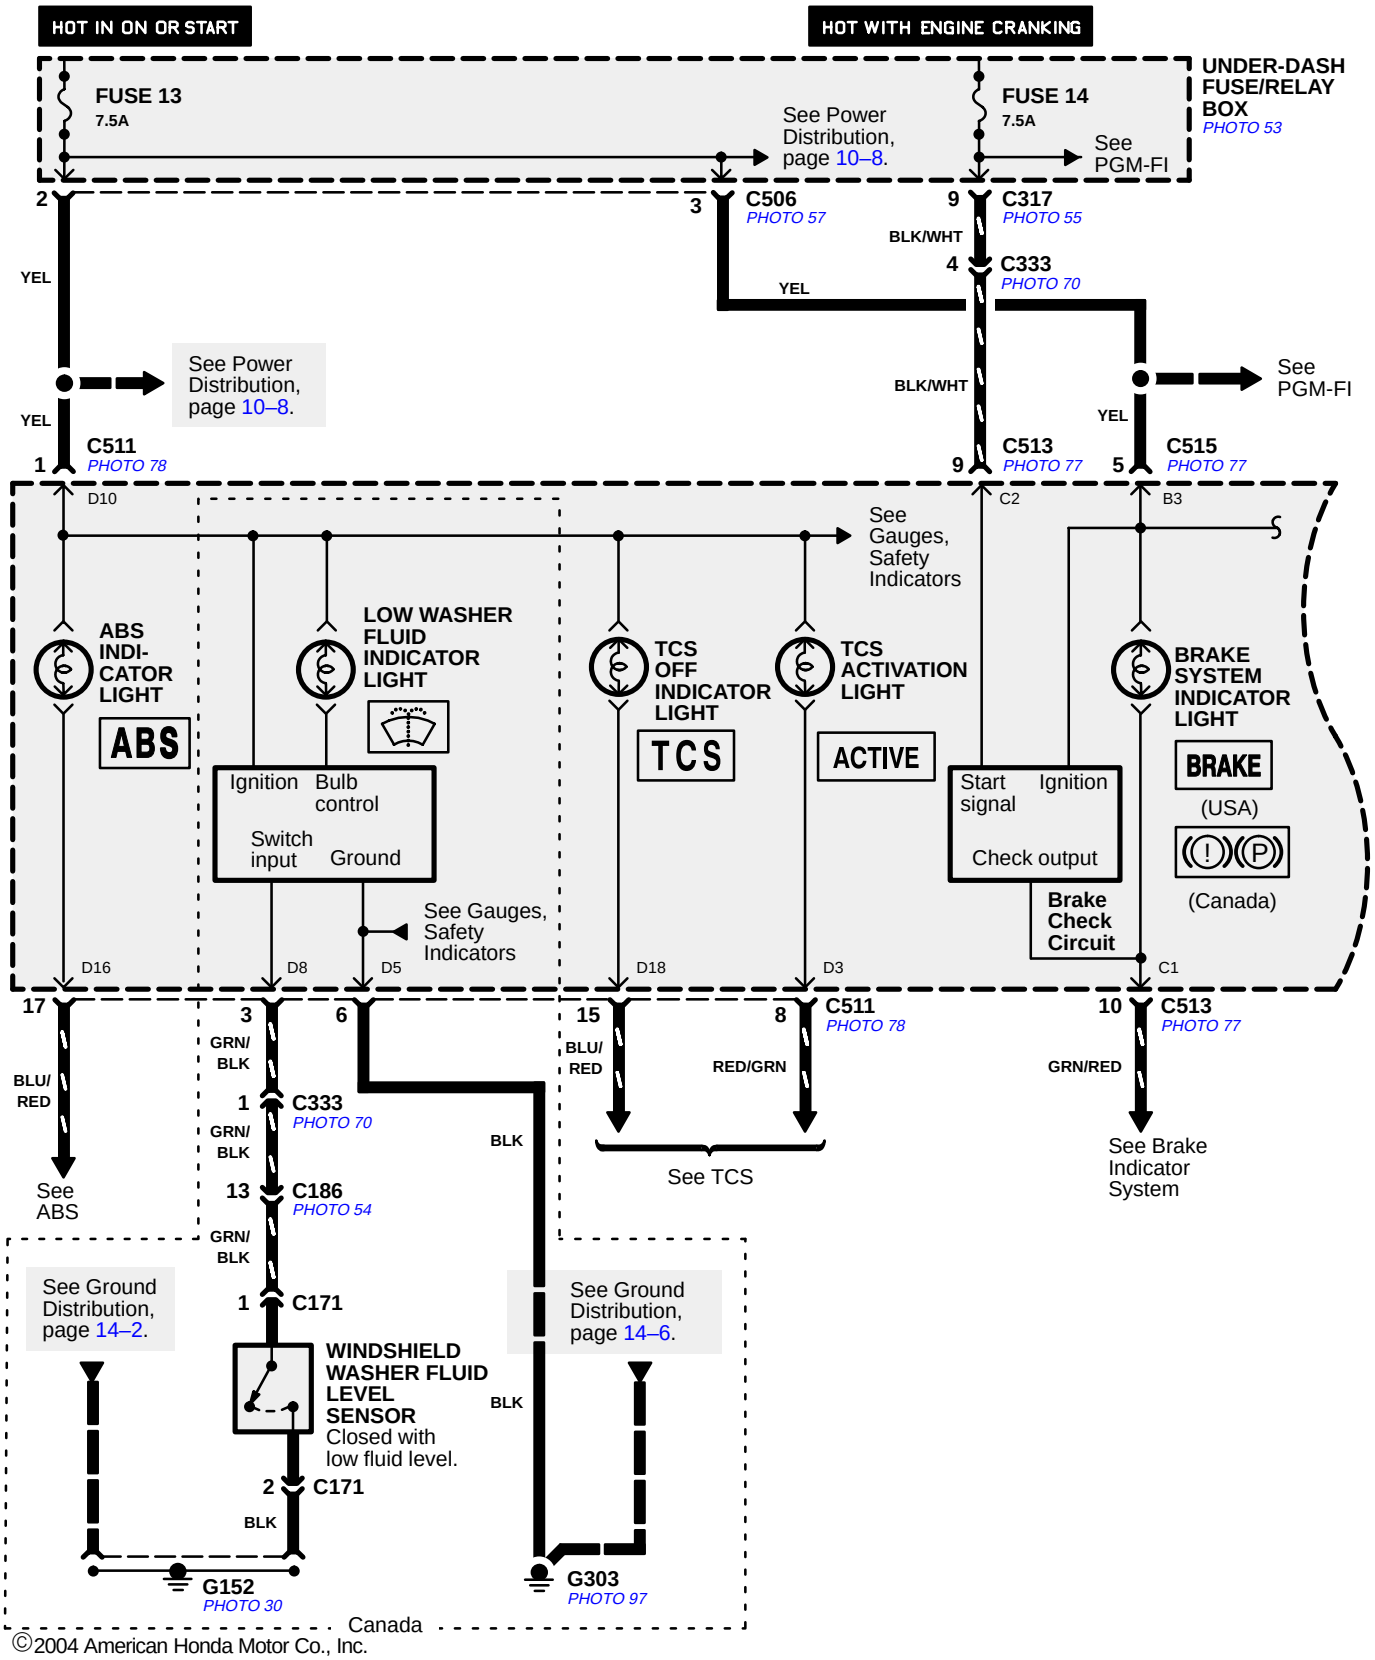

©2004 American Honda Motor Co., Inc.