
Crop-A-Dile™ II

BIG BITE™

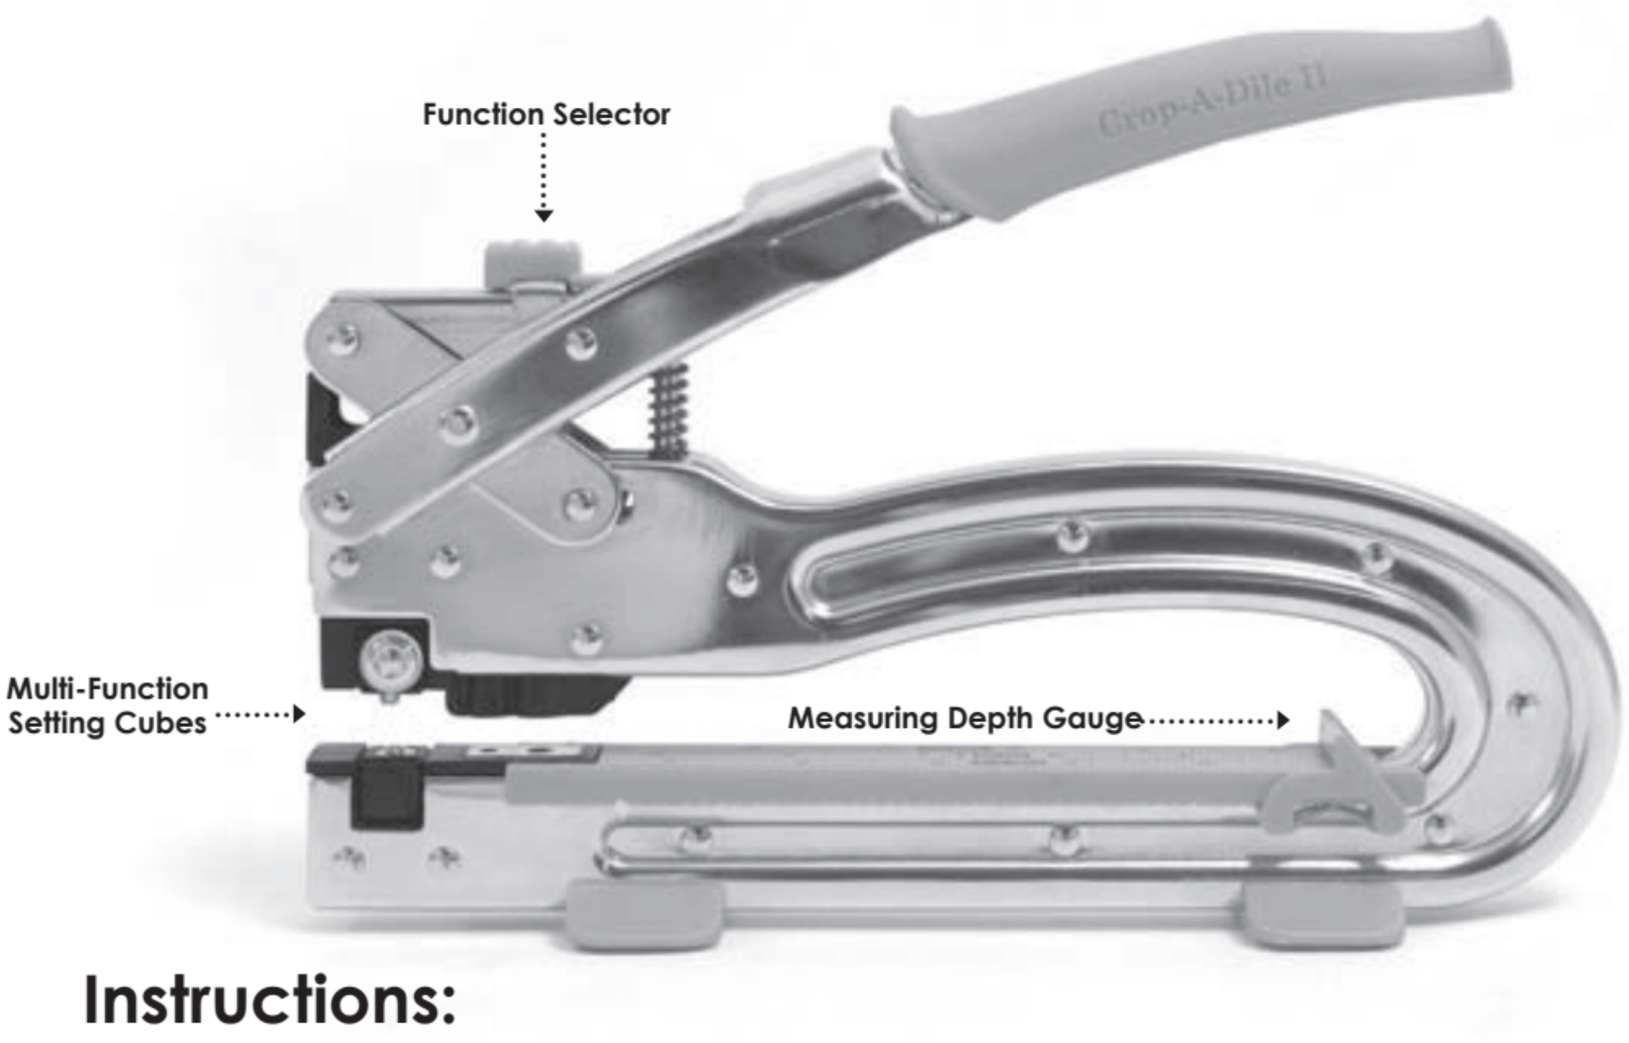

TOP BLOCK

FOR TOP (DECORATIVE) SIDE OF EYELET OR EMBELLISHMENT		
LETTER	PICTURE	DESCRIPTION
A		3/16" (Large & Extra Large) Eyelet Setter
B		Flat Top for Miscellaneous Use or Flat Embellishments
C		1/8" (Small) Eyelet Setter
FOR BOTTOM (BACK) SIDE OF GROMLET™		
D		1/3" (Large & Extra Large Gromlet™ Flare

BASE BOTTOM BLOCK

FOR BOTTOM (BACK) SIDE OF EYELET OR EMBELLISHMENT		
NUMBER	PICTURE	DESCRIPTION
1		3/16" (Large & Extra Large) Eyelet & Snap Flare
2		5/32"(Miscellaneous) Eyelet & Snap Flare
3		1/8" (Small) Eyelet & Snap Flare
FOR TOP (DECORATIVE) SIDE OF GROMLET™		
4		1/3" (Large & Extra Large) Gromlet™ Setter

Instructions:

IMPORTANT! PLEASE FOLLOW THESE INSTRUCTIONS:


HOLE PUNCHING: Determine the necessary hole size you wish to punch, by using the function selector on the top of the tool. The 3/16" hole is the furthest back, then the 1/8" hole. Set how far into your project you wish to punch the hole by using the measuring guide. Insert paper, chipboard, leather, thin tin, or similar material - and punch. Please note that setting Gromlets™ does not require punching a hole first.

SETTING EYELETS & SNAPS: Switch the function selector to the setting function (all the way forward). Select your snap, or eyelet or other metal embellishment. Determine the correct TOP and BASE combination (see chart) for the type of metal embellishment selected and rotate to the correct position. Place eyelet, snap, or other embellishment in the hole and then line up the BASE of the tool in the hole of the snap or eyelet and compress.

SETTING GROMLETS™: Setting Gromlets™ is different than setting eyelets. Gromlets™ do not require hole punching first. Switch the function selector to the setting function (all the way forward). Snap the Gromlet™ upside down on the number 4 block with the prongs pointing upward, and rotate the top block to the D position. Then insert your material (paper or other soft material) upside down and compress.

Common Eyelet, Snap & Gromlet Settings

Large & Extra Large Eyelets

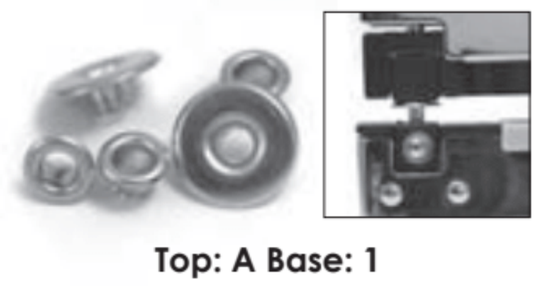

Top: A Base: 1

Large & Extra Large Snaps



Top: B Base: 1

Small Eyelets



Top: C Base: 3

Gromlets



Top: D Base: 4

WARNING: CHOKING HAZARD. CONTAINS SMALL PIECES. NOT APPROPRIATE FOR CHILDREN.

WARNING: Be sure to follow the instructions carefully for punching and setting. Do not punch material that is too thick or dense - **IT MAY DAMAGE YOUR TOOL**. When setting eyelets, be sure to set the eyelet in the correct direction (not upside down). The spring-loaded post should go inside the female end of the eyelet and the base of the eyelet should flare on the bottom (base) of the tool. For more detailed setting instructions for eyelets, snaps and gromlets™ refer to back panel. Failure to follow instructions for usage may result in damage of this tool and will void manufacturer warranty.

NOTE: After setting, the back side of your snap or eyelet may be bent, or curled non-uniformly. This is normal. Non-uniform splitting may occur depending upon the type of metal embellishment used, the amount of pressure you apply, and how well you line up the tool with the embellishment when setting.

We R Memory Keepers™
Salt Lake City, Utah 84103
www.weronthenet.com