Pictorial index	Search by illustration	
For safety and security	Make sure to read through them (Main topics: Child seat, theft deterrent system)	1
Vehicle status information and indicators	Reading driving-related information (Main topics: Meters, multi-information display)	2
Before driving	Opening and closing the doors and windows, adjustment before driving (Main topics: Keys, doors, seats, power windows)	3
Driving	Operations and advice which are necessary for driving (Main topics: Starting hybrid system, refueling)	4
Audio system	Operating the audio system (Main topics: Radio, CD player)	5
Interior features	Usage of the interior features (Main topics: Air conditioner, storage features)	6
Maintenance and care	Caring for your vehicle and maintenance procedures (Main topics: Interior and exterior, light bulbs)	7
When trouble arises	What to do in case of malfunction and emergency (Main topics: 12-volt battery discharge, flat tire)	8
Vehicle specifications	Vehicle specifications, customizable features (Main topics: Fuel, oil, tire inflation pressure)	9
Index	Search by symptom	
	Search alphabetically	

For your information 6
Reading this manual..... 9
How to search 10
Pictorial index 11

1 For safety and security

1-1. For safe use
Before driving..... 30
For safe driving 31
Seat belts..... 33
SRS airbags..... 37
Exhaust gas precautions 45

1-2. Child safety
Airbag manual on-off system 46
Riding with children..... 47
Child restraint systems 48

1-3. Emergency assistance
eCall..... 69

1-4. Hybrid system
Hybrid system features 86
Hybrid system precautions ... 89

1-5. Theft deterrent system
Immobilizer system 94
Double locking system..... 101
Alarm 102

2 Vehicle status information and indicators

2-1. Instrument cluster
Warning lights and indicators 108
Gauges and meters (4.2-inch display) 113
Gauges and meters (7-inch display)..... 117
Multi-information display..... 123
Head-up display..... 131
Energy monitor/consumption screen..... 135

3 Before driving

3-1. Key information
Keys..... 142

3-2. Opening, closing and locking the doors
Side doors..... 145
Back door..... 149
Smart entry & start system 160

3-3. Adjusting the seats
Front seats..... 198
Rear seats 199
Head restraints 201

3-4. Adjusting the steering wheel and mirrors
Steering wheel 203
Inside rear view mirror 204
Outside rear view mirrors.... 205

3-5. Opening and closing the windows
Power windows..... 208
Panoramic moon roof 210

4 Driving

4-1. Before driving
Driving the vehicle 216
Cargo and luggage 222
Trailer towing 223

4-2. Driving procedures
Power (ignition) switch..... 230

EV drive mode 234
Hybrid transmission (vehicles without paddle shift switches) 236
Hybrid transmission (vehicles with paddle shift switches) 239
Turn signal lever 243
Parking brake.....243
Brake Hold 246

4-3. Operating the lights and wipers

Headlight switch.....249
Automatic High Beam 252
AHS (Adaptive High-beam System) 255
Fog light switch 258
Windshield wipers and washer 260
Rear window wiper and washer 263

4-4. Refueling

Opening the fuel tank cap...265

4-5. Using the driving support systems

Toyota Safety Sense.....267
PCS (Pre-Collision System) 278
LTA (Lane Tracing Assist) ...286
Dynamic radar cruise control with full-speed range 295
Cruise control.....306
Speed limiter.....308
RSA (Road Sign Assist).....311
BSM (Blind Spot Monitor) ...315
Toyota parking assist-sensor 323
RCTA (Rear Crossing Traffic Alert) function 331
PKSB (Parking Support Brake) 336
Parking Support Brake function (static objects) 342
Parking Support Brake function (rear-crossing vehicles) 348
S-IPA (Simple Intelligent Parking Assist System).....352
Driving mode select switch 378
GPF (Gasoline Particulate Filter) system 380
Driving assist systems 381

4-6. Driving tips

Hybrid vehicle driving tips...386
Winter driving tips 388

5 Audio system

5-1. Basic Operations

Audio system types.....392
Using the steering wheel audio switches.....393
AUX port/USB port.....394

5-2. Using the audio system

Optimal use of the audio system 395

5-3. Using the radio

Radio operation 397

5-4. Playing an audio CD and MP3/WMA discs

CD player operation.....399

5-5. Using an external device

Listening to an iPod 405
Listening to USB memory device 410

Using the AUX port 414

5-6. Using Bluetooth® devices

Bluetooth® audio/phone.....415

Using the steering wheel switches 420

Register a Bluetooth® device 420

5-7. "SETUP" menu

Using the "SETUP" menu ("Bluetooth" menu).....422

Using the "SETUP" menu ("TEL" menu) 424

5-8. Bluetooth® Audio

Operating a Bluetooth® enabled portable player.....428

5-9. Bluetooth® Phone

Making a phone call.....430

When receiving a phone call 431

Speaking on the phone.....431

5-10. Bluetooth®

Bluetooth® 433

6 Interior features

6-1. Using the air conditioning system and defogger

Automatic air conditioning system.....444

Heated steering wheel/seat heaters.....451

6-2. Using the interior lights

Interior lights list.....453

6-3. Using the storage features

List of storage features 456

Luggage compartment features 459

6-4. Other interior features

Other interior features.....468

7 Maintenance and care

7-1. Maintenance and care

Cleaning and protecting the vehicle exterior 478

Cleaning and protecting the vehicle interior 481

7-2. Maintenance

Maintenance requirements 484

7-3. Do-it-yourself maintenance

Do-it-yourself service precautions 486

Hood 488

Positioning a floor jack.....489

Engine compartment.....490

12-volt battery 498

Tires.....500

Tire inflation pressure 514

Wheels.....515

Air conditioning filter 517

Cleaning the hybrid battery (traction battery) air intake vent and filter.....519

Electronic key battery 522

Checking and replacing fuses 524

Light bulbs 528

8 When trouble arises

8-1. Essential information

Emergency flashers 534

If your vehicle has to be stopped in an emergency 534

If the vehicle is trapped in rising water 535

8-2. Steps to take in an emergency

If your vehicle needs to be towed 537

If you think something is wrong 540

If a warning light turns on or a warning buzzer sounds 542

If a warning message is displayed 551

If you have a flat tire (vehicles with an emergency tire puncture repair kit) 554

If you have a flat tire (vehicles with a spare tire) 566

If the hybrid system will not start 580

If you lose your keys 582

If the electronic key does not operate properly 582

If the 12-volt battery is discharged 584

If your vehicle overheats 590

If the vehicle becomes stuck 594

9 Vehicle specifications

9-1. Specifications

Maintenance data (fuel, oil level, etc.) 598

Fuel information 609

9-2. Customization

Customizable features 610

9-3. Initialization

Items to initialize 620

Index

What to do if... (Troubleshooting) 622

Alphabetical Index 625

For your information

Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Toyota policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of equipment.

Accessories, spare parts and modification of your Toyota

Both genuine Toyota and a wide variety of other spare parts and accessories for Toyota vehicles are currently available on the market. Should it be determined that any of the genuine Toyota parts or accessories supplied with the vehicle need to be replaced, Toyota recommends that genuine Toyota parts or accessories, be used to replace them. Other parts or accessories of matching quality can also be used. Toyota cannot accept any liability or guarantee spare parts and accessories which are not genuine Toyota products, nor for replacement or installation involving such parts. In addition, damage or performance problems resulting from the use of non-genuine Toyota spare parts or accessories may not be covered under warranty.

Installation of an RF-transmitter system

The installation of an RF-transmitter system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Toyota Safety Sense (if equipped)
- Cruise control system (if equipped)
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for precautionary measures or special instructions regarding installation of an RF-transmitter system.

Further information regarding frequency bands, power levels, antenna positions and installation provisions for the installation of

RF-transmitters, is available on request at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

High voltage parts and cables on the hybrid vehicles emit approximately the same amount of electromagnetic waves as the conventional gasoline powered vehicles or home electronic appliances despite of their electromagnetic shielding.

Unwanted noise may occur in the reception of the radio frequency transmitter (RF-transmitter).

Vehicle data recording

The vehicle is equipped with sophisticated computers that will record certain data, such as:

The recorded data varies according to the vehicle grade level and options with which it is equipped.

These computers do not record conversations or sounds, and only record images outside of the vehicle in certain situations.

- Engine speed/Electric motor speed (traction motor speed)
- Accelerator status
- Brake status
- Vehicle speed
- Operation status of the driving assist systems, such as the ABS and pre-collision system

- Data usage

Toyota may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

Toyota will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Toyota in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

Scrapping of your Toyota

The SRS airbag and seat belt pretensioner devices in your Toyota contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer before you scrap your vehicle.

WARNING

General precautions while driving

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

General precaution regarding children's safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the panoramic moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Toyota Motor Europe NV/SA, Avenue du Bourget 60 - 1140 Brussels, Belgium www.toyota-europe.com


Reading this manual

Explains symbols used in this manual.


Symbols in this manual

Symbols	Meanings
 zzcv99ac073a	WARNING: Explains something that, if not obeyed, could cause death or serious injury to people.
 zzcv99ac040a	NOTICE: Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.
1 2 3... zzcv99ac041a	Indicates operating or working procedures. Follow the steps in numerical order.

Symbols in illustrations

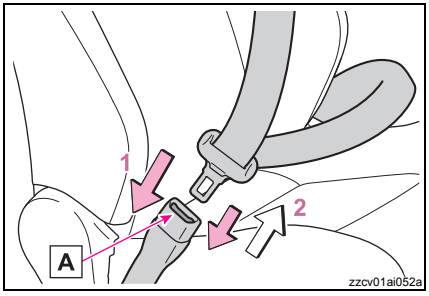

Symbols	Meanings
 zzcv99ac042a	Indicates the action (pushing, turning, etc.) used to operate switches and other devices.
 zzcv99ac043a	Indicates the outcome of an operation (e.g. a lid opens).

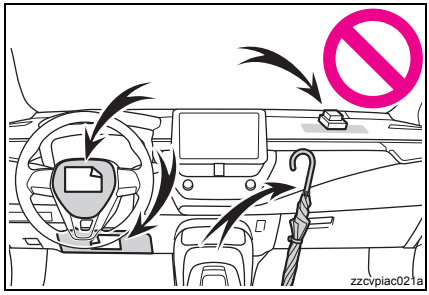


Symbols	Meanings
 zzcv99ac046a	Indicates the component or position being explained.
 zzcv99ac044a	Means **Do not**, **Do not do this**, or **Do not let this happen**.

How to search


Searching by name

- Alphabetical index: →P.625

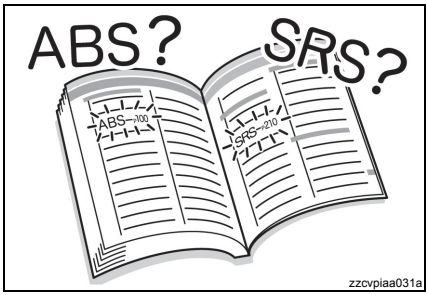


Searching by installation position

- Pictorial index: →P.11

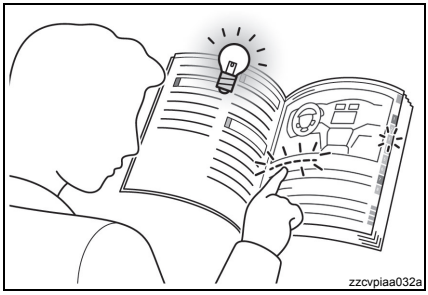


Searching by symptom or sound

- What to do if... (Troubleshooting): →P.622

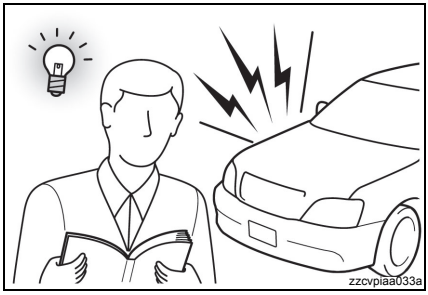


Searching by title

- Table of contents: →P.2

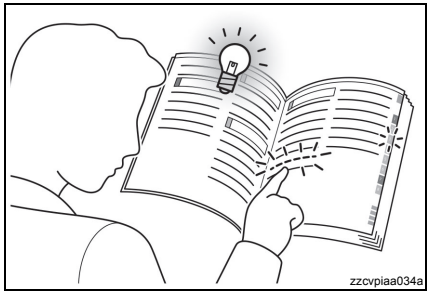

Pictorial index

■Exterior (hatchback)

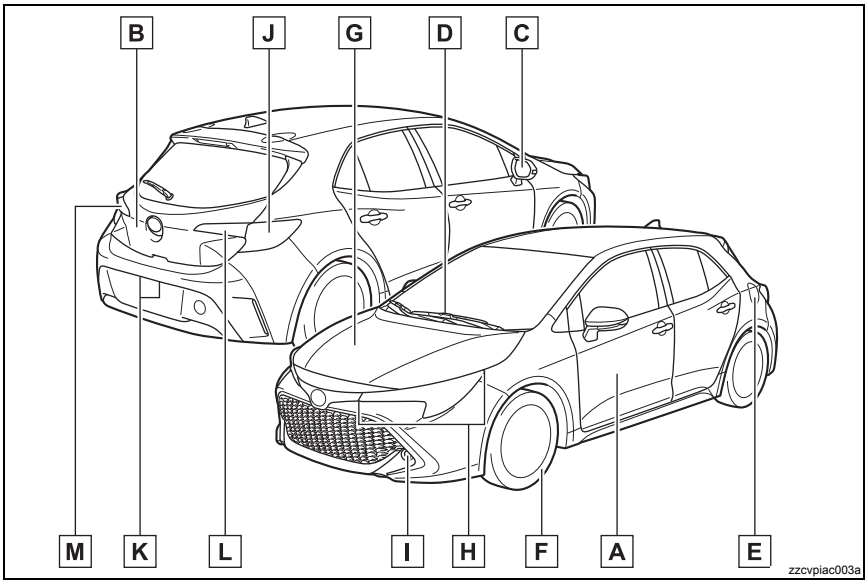

A **Side doors P.145**
Locking/unlocking P.145
Opening/closing the side windows.....P.208
Locking/unlocking by using the mechanical key P.582
Warning messages P.148

B **Back door P.149**
Locking/unlocking P.150
Warning messages P.151

C **Outside rear view mirrors P.205**
Adjusting the mirror angle P.205
Folding the mirrors P.206
Defogging the mirrors P.446

D **Windshield wipers P.260**
Precautions for winter season.....P.388
Precautions for car wash P.479
To prevent freezing (windshield wiper de-icer)*1 .....P.449

E **Fuel filler door** **P.265**
Refueling method P.266
Fuel type/fuel tank capacity P.601
F **Tires** **P.500**
Tire size/inflation pressure P.606
Winter tires/tire chains P.388
Checking/rotation/tire pressure warning system*1 ..... P.500
Coping with flat tires P.554, 566
G **Hood** **P.488**
Opening P.488
Engine oil P.602
Coping with overheating P.590

Light bulbs of the exterior lights for driving
(Replacing method: P.528, Watts: P.608)


H **Headlights/front position lights/daytime running lights/ turn signal lights** **P.243, 249**
I **Front fog lights*1** **P.258**
J **Stop lights/tail lights/turn signal lights** **P.243, 249**
K **License plate lights** **P.249**
L **Tail light** **P.249**
Rear fog light*2 ..... **P.258**
Back-up light*3
Shifting the shift position to R P.236, 239
M **Tail light** **P.249**
Rear fog light*1, 3 ..... **P.258**
Back-up light*1
Shifting the shift position to R P.236, 239

*1: If equipped

*2: Right-hand drive vehicles

*3: Left-hand drive vehicles

■Exterior (wagon)

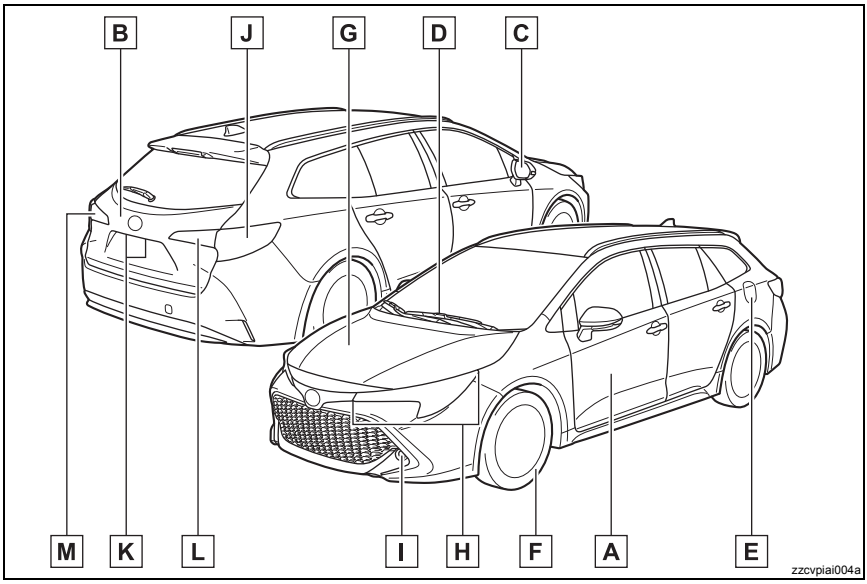

A **Side doors** **P.145**

Locking/unlocking P.145

Opening/closing the side windows P.208

Locking/unlocking by using the mechanical key P.582

Warning messages P.148

B **Back door** **P.149**

Locking/unlocking P.150

Warning messages P.151

C **Outside rear view mirrors** **P.205**

Adjusting the mirror angle P.205

Folding the mirrors P.206

Defogging the mirrors P.446

D **Windshield wipers** **P.260**

Precautions for winter season P.388

Precautions for car wash P.479

To prevent freezing (windshield wiper de-icer)*1 ..... P.449

E **Fuel filler door** **P.265**
Refueling method P.266
Fuel type/fuel tank capacity P.601
F **Tires** **P.500**
Tire size/inflation pressure P.606
Winter tires/tire chains P.388
Checking/rotation/tire pressure warning system*1 ..... P.500
Coping with flat tires P.554, 566
G **Hood** **P.488**
Opening P.488
Engine oil P.602
Coping with overheating P.590

Light bulbs of the exterior lights for driving
(Replacing method: P.528, Watts: P.608)


H **Headlights/front position lights/daytime running lights/ turn signal lights** **P.243, 249**
I **Front fog lights*1** **P.258**
J **Stop lights/tail lights/turn signal lights** **P.243, 249**
K **License plate lights** **P.249**
L **Tail light** **P.249**
Rear fog light*2 ..... **P.258**
Back-up light*3
Shifting the shift position to R P.236, 239
M **Tail light** **P.249**
Rear fog light*3 ..... **P.258**
Back-up light*2
Shifting the shift position to R P.236, 239

*1: If equipped

*2: Right-hand drive vehicles

*3: Left-hand drive vehicles

■Instrument panel (left-hand drive vehicles)

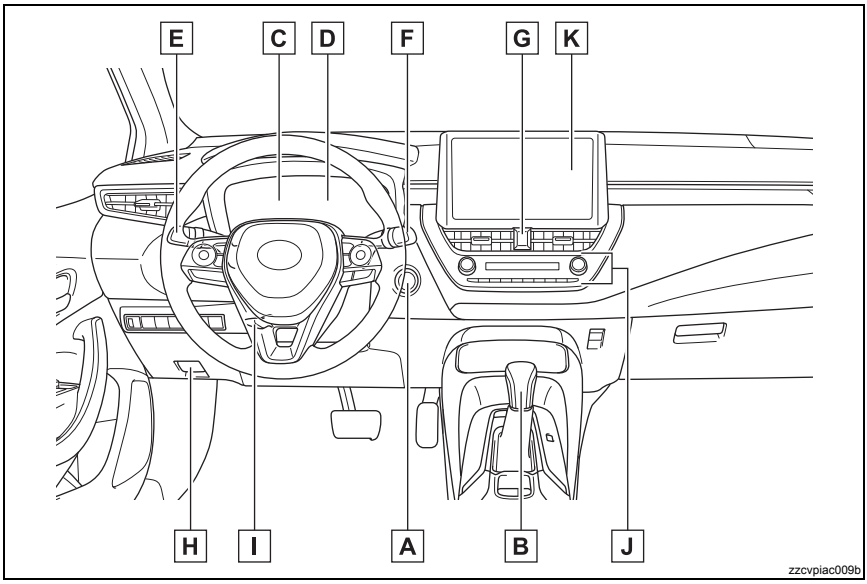

A **Power switch P.230**

Starting the hybrid system/changing the modes P.230

Emergency stop of the hybrid system P.534

When the hybrid system will not start P.580

Warning messages P.551

B **Shift lever P.236, 239**

Changing the shift position P.236, 239

Precautions for towing P.537

When the shift lever does not move P.237, 240

C **Meters P.113, 117**

Reading the meters/adjusting the instrument panel light P.113, 117

Warning lights/indicator lights P.108

When a warning light turns on P.542

D **Multi-information display P.123**

Display P.123

Energy monitor P.135

When a warning message is displayed.....P.551

E **Turn signal lever P.243**
Headlight switch P.249

Headlights/front position lights/tail lights/daytime running lights P.249

Front fog lights*1/rear fog light*1 .....P.258

F **Windshield wiper and washer switch P.260**
Rear window wiper and washer switch P.263

Usage.....P.260, 263

Adding washer fluid.....P.497

G **Emergency flasher switch.....P.534**

H **Hood lock release lever.....P.488**

I **Tilt and telescopic steering lock release lever.....P.203**

J **Air conditioning system P.444**

Usage.....P.444


Rear window defogger P.446

K **Audio system*1, 2 .....P.392**

*1: If equipped

*2: Vehicles with navigation/multimedia system, refer to “Navigation and multimedia system Owner’s manual”.

■Switches (left-hand drive vehicles)

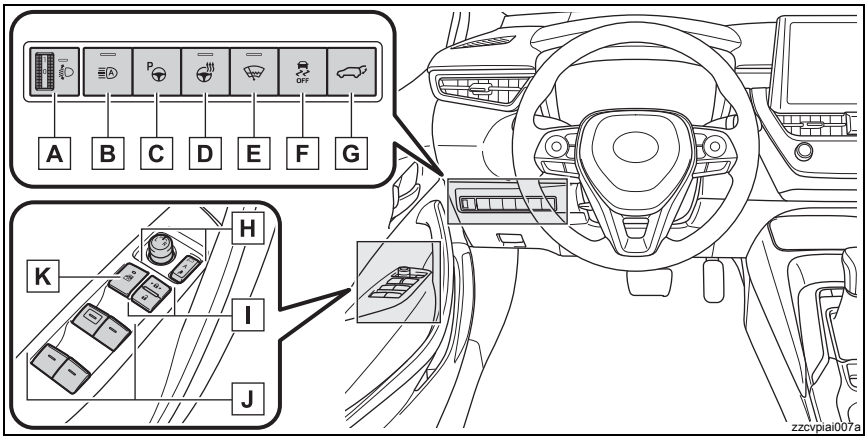

A Headlight leveling dial* P.251

B Automatic High Beam switch* P.252

AHS (Adaptive High-beam System)* P.255

C S-IPA switch* P.352

D Heated steering wheel switch* P.451

E Windshield wiper de-icer switch* P.449

F VSC OFF switch P.382

G Power back door switch* P.151


H Outside rear view mirror switches P.205

I Door lock switches P.147

J Power window switches P.208

K Window lock switch P.210

*: If equipped

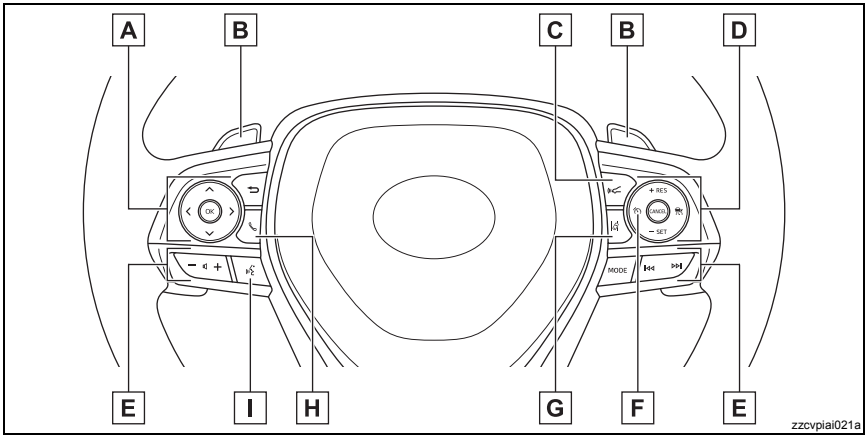

A **Meter control switches** **P.124**

B **Paddle shift switches**[*1] **P.241**

C **Vehicle-to-vehicle distance switch**[*1] **P.300**

D **Cruise control switches**[*1]

Dynamic radar cruise control with full-speed range[*1] P.295

Cruise control[*1] P.306

E **Audio remote control switches**[*2] **P.393**

F **Speed limiter main switch**[*1] **P.308**


G **LTA (Lane Tracing Assist) switch**[*1] **P.286**

H **Phone switch**[*2] **P.420**

I **Talk switch**[*2] **P.420**

[*1]: If equipped

[*2]: Vehicles with navigation/multimedia system, refer to “Navigation and multimedia system Owner’s manual”.

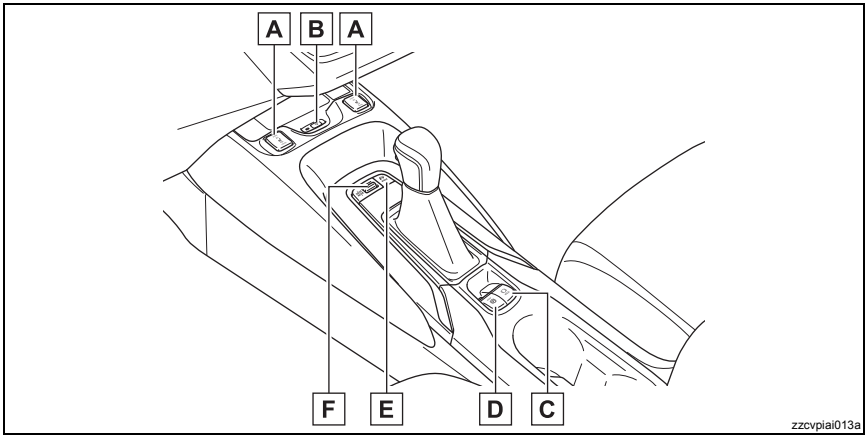

A **Front seat heater switches*** **P.451**

B **Wireless charger switch*** **P.469**

C **Brake hold switch** **P.246**

D **Parking brake switch** **P.243**


Precautions for winter season P.389

E **EV drive mode switch** **P.234**

F **Driving mode select switch** **P.378**

*: If equipped


■Interior (left-hand drive vehicles)

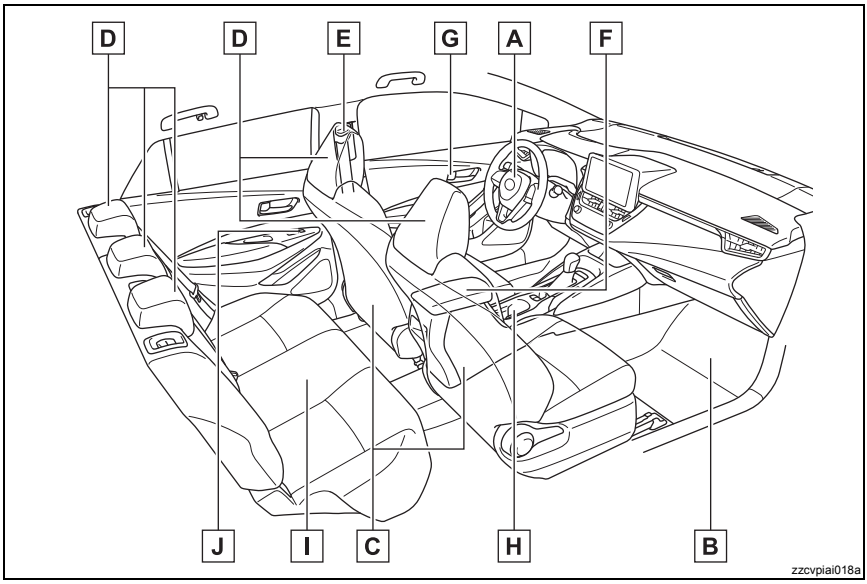

A SRS airbags P.37
B Floor mats P.30
C Front seats P.198
D Head restraints P.201
E Seat belts P.33
F Console box P.458
G Inside lock buttons P.147
H Cup holders P.457
I Rear seats P.199
J Rear seat heater switches* P.451

*: If equipped

■Ceiling (left-hand drive vehicles)

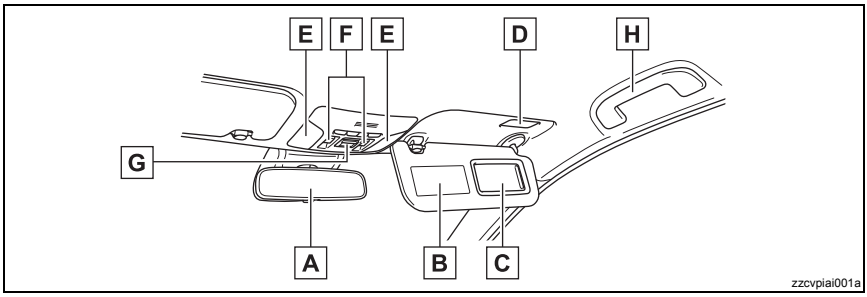

A **Inside rear view mirror** **P.204**

B **Sun visors**[*1] **P.473**

C **Vanity mirrors** **P.473**

D **Vanity lights**[*2] **P.473**

E **Interior lights/personal lights** **P.453**

F **Panoramic moon roof switches**[*2] **P.210**

G **“SOS” button**[*2] **P.69**

H **Assist grips** **P.474**


[*1]: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P.51)



zzcvpiaa030a

[*2]: If equipped

■Instrument panel (right-hand drive vehicles)

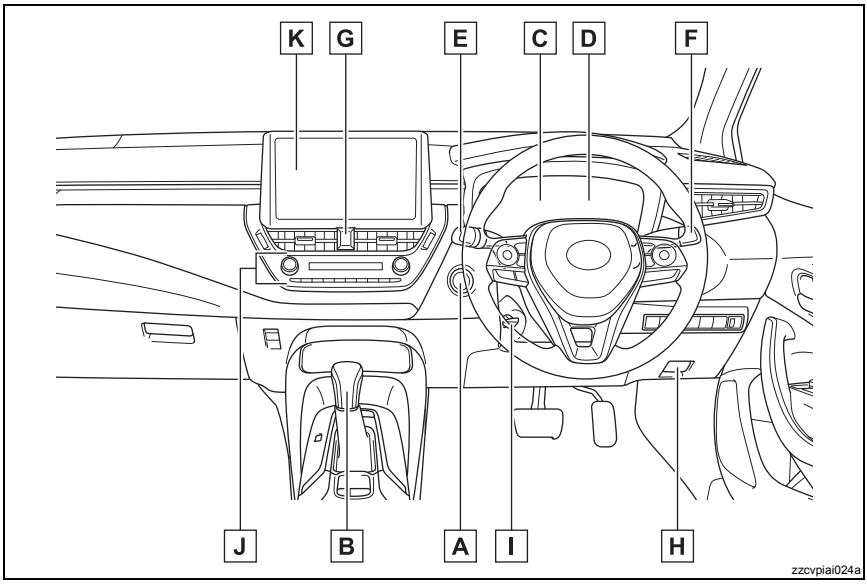

A **Power switch P.230**

Starting the hybrid system/changing the modes P.230

Emergency stop of the hybrid system P.534

When the hybrid system will not start P.580

Warning messages P.551

B **Shift lever P.236, 239**

Changing the shift position P.236, 239

Precautions for towing P.537

When the shift lever does not move P.237, 240

C **Meters P.113, 117**

Reading the meters/adjusting the instrument panel light P.113, 117

Warning lights/indicator lights P.108

When a warning light turns on P.542

D **Multi-information display P.123**

Display P.123

Energy monitor P.135

When a warning message is displayed.....P.551

E **Turn signal lever P.243**
Headlight switch P.249

Headlights/front position lights/tail lights/daytime running lights P.249

Front fog lights*1/rear fog light P.258

F **Windshield wiper and washer switch P.260**
Rear window wiper and washer switch P.263

Usage.....P.260, 263

Adding washer fluid.....P.497

G **Emergency flasher switch.....P.534**

H **Hood lock release lever.....P.488**

I **Tilt and telescopic steering lock release lever.....P.203**

J **Air conditioning system P.444**

Usage.....P.444


Rear window defogger P.446

K **Audio system*1, 2 .....P.392**

*1: If equipped


*2: Vehicles with navigation/multimedia system, refer to “Navigation and multimedia system Owner’s manual”.

■Switches (right-hand drive vehicles)

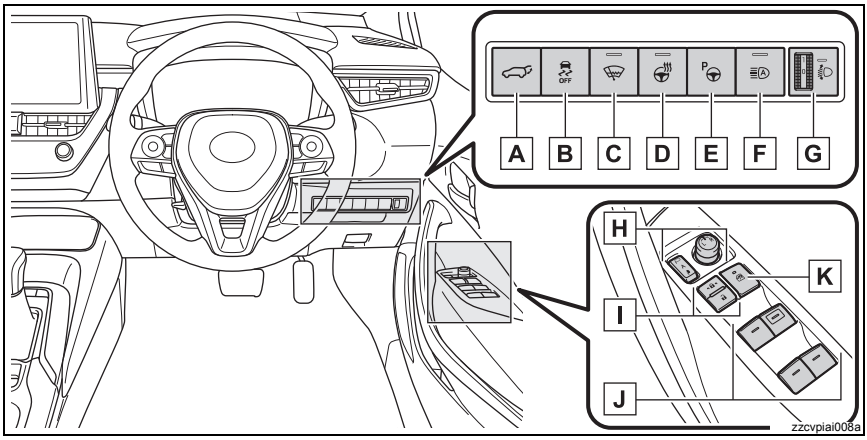

A Power back door switch* P.151
B VSC OFF switch P.382
C Windshield wiper de-icer switch* P.449
D Heated steering wheel switch* P.451
E S-IPA switch* P.352
F Automatic High Beam switch* P.252
AHS (Adaptive High-beam System)* P.255
G Headlight leveling dial* P.251
H Outside rear view mirror switches P.205
I Door lock switches P.147
J Power window switches P.208
K Window lock switch P.210

*: If equipped

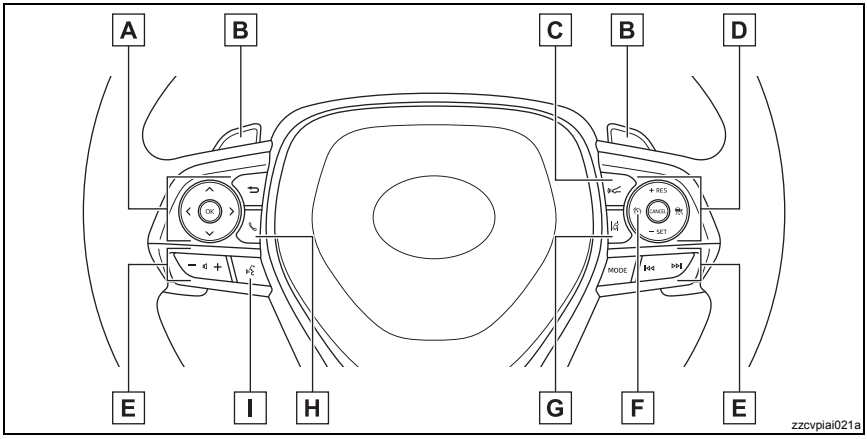

A **Meter control switches** **P.124**

B **Paddle shift switches**[*1] **P.241**

C **Vehicle-to-vehicle distance switch** **P.300**

D **Cruise control switches**

Dynamic radar cruise control with full-speed range P.295

E **Audio remote control switches**[*2] **P.393**

F **Speed limiter main switch** **P.308**


G **LTA (Lane Tracing Assist) switch** **P.286**

H **Phone switch**[*2] **P.420**

I **Talk switch**[*2] **P.420**

[*1]: If equipped

[*2]: Vehicles with navigation/multimedia system, refer to “Navigation and multimedia system Owner’s manual”.

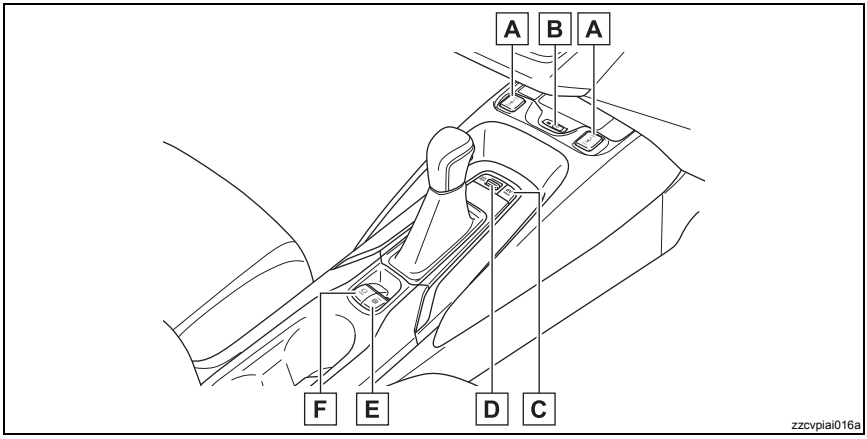

A **Front seat heater switches*** **P.451**

B **Wireless charger switch*** **P.469**

C **EV drive mode switch** **P.234**

D **Driving mode select switch** **P.378**


E **Parking brake switch** **P.243**

Precautions for winter season P.389

F **Brake hold switch** **P.246**


*: If equipped

■Interior (right-hand drive vehicles)

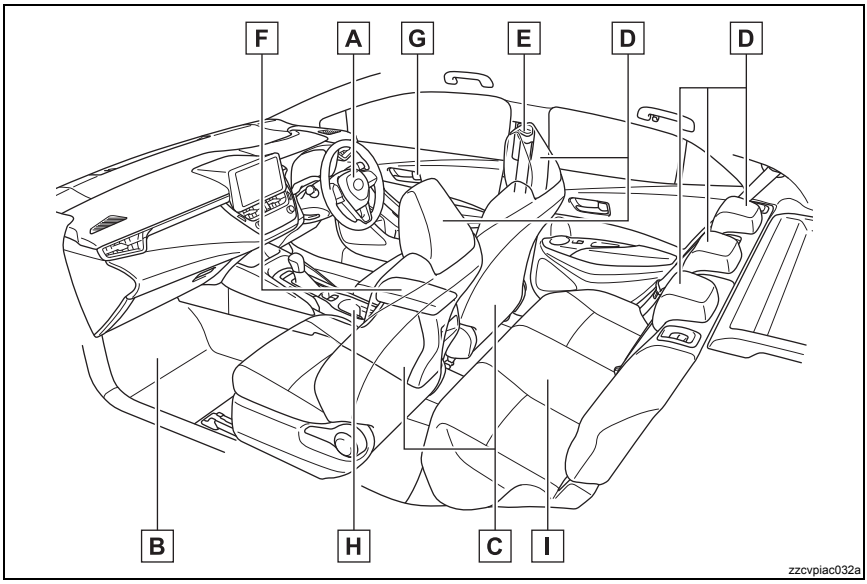

A SRS airbags.....P.37
B Floor mats.....P.30
C Front seats.....P.198
D Head restraints.....P.201
E Seat belts.....P.33
F Console box.....P.458
G Inside lock buttons.....P.147
H Cup holders.....P.457
I Rear seats.....P.199

■Ceiling (right-hand drive vehicles)

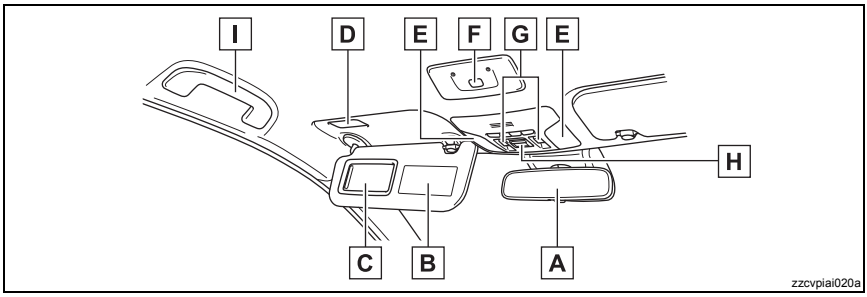

A **Inside rear view mirror** **P.204**

B **Sun visors**[*1] **P.473**

C **Vanity mirrors** **P.473**

D **Vanity lights**[*2] **P.473**

E **Interior lights/personal lights** **P.453**

F **Intrusion sensor cancel switch**[*2] **P.104**

G **Panoramic moon roof switches**[*2] **P.210**

H **“SOS” button**[*2] **P.69**

I **Assist grips** **P.474**

[*1]: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P.51)



[*2]: If equipped

For safety and security

1

1-1. For safe use

Before driving 30

For safe driving 31

Seat belts 33

SRS airbags 37

Exhaust gas precautions 45

1-2. Child safety

Airbag manual on-off system 46

Riding with children 47

Child restraint systems 48

1-3. Emergency assistance

eCall 69

1-4. Hybrid system

Hybrid system features 86

Hybrid system precautions 89

1-5. Theft deterrent system

Immobilizer system 94

Double locking system 101

Alarm 102


Before driving

Observe the following before starting off in the vehicle to ensure safety of driving.


Floor mat

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

1 Insert the retaining hooks (clips) into the floor mat eyelets.

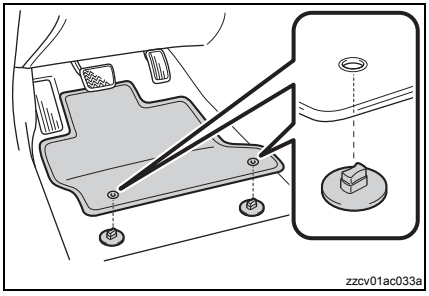

2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

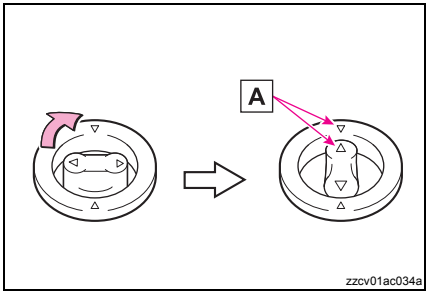

Always align the △ marks A.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

WARNING


Observe the following precautions. Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle. This could lead to an accident, resulting in death or serious injury.

■ When installing the driver's floor mat

- Do not use floor mats designed for other models or different model year vehicles, even if they are Toyota Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

■ Before driving

- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.

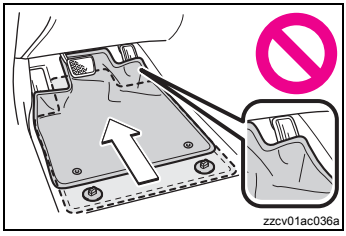


WARNING

- With the hybrid system stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

For safe driving

For safe driving, adjust the seat and mirror to an appropriate position before driving.

Correct driving posture

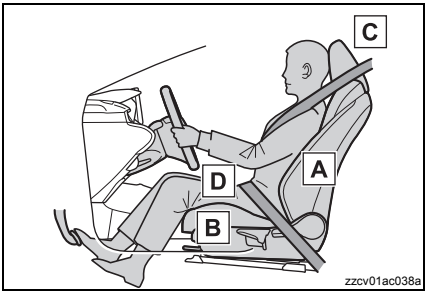

A Adjust the angle of the seatback so that you are sitting straight up and so that you do not have to lean forward to steer. (→P.198)

B Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P.198)

C Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P.201)

D Wear the seat belt correctly. (→P.33)

WARNING

■ For safe driving

Observe the following precautions. Failure to do so may result in death or serious injury.

WARNING

- Do not adjust the position of the driver's seat while driving.
  Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback.
  A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.
- Do not place anything under the front seats.
  Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- Always observe the legal speed limit when driving on public roads.
- When driving over long distances, take regular breaks before you start to feel tired.
  Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

Correct use of the seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle. (→P.33)
Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt. (→P.48)

Adjusting the mirrors

Make sure that you can see backward clearly by adjusting the inside and outside rear view mirrors properly. (→P.204, 205)

Seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle.


WARNING

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.
Failure to do so may cause death or serious injury.

■ Wearing a seat belt

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Toyota recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

■ Pregnant women

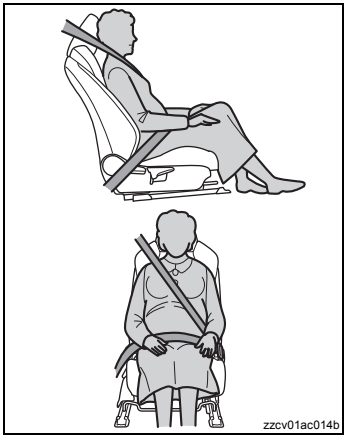

Obtain medical advice and wear the seat belt in the proper way. (→P.34)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

■ People suffering illness

Obtain medical advice and wear the seat belt in the proper way. (→P.34)

■ When children are in the vehicle

→P.66


■ Seat belt damage and wear

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.

WARNING

- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Inappropriate handling may lead to incorrect operation.

Correct use of the seat belts

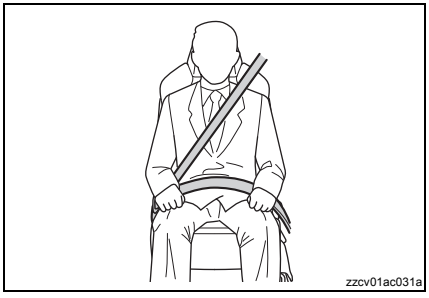

- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- Do not twist the seat belt.

Child seat belt usage


The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P.48)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions regarding seat belt usage. (→P.33)

Seat belt regulations

If seat belt regulations exist in the country where you reside, please contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for seat belt replacement or installation.

Fastening and releasing the seat belt

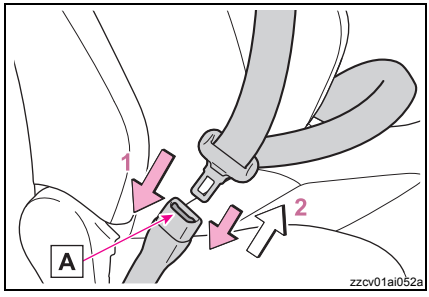

1 To fasten the seat belt, push the plate into the buckle until a click sound is heard.

2 To release the seat belt, press


the release button A.

■ **Emergency locking retractor (ELR)**


The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

■ **After using the rear center seat belt**

Stow seat belt buckle in the pocket.

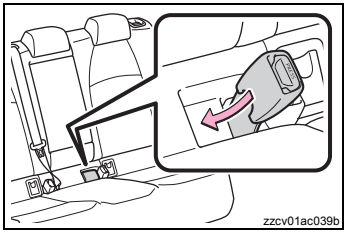

Adjusting the seat belt shoulder anchor height (front seats)

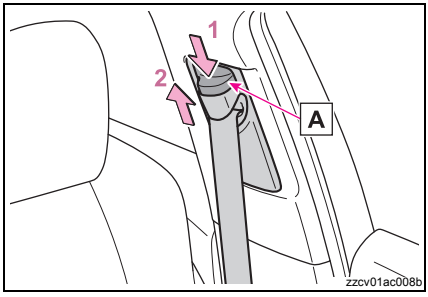

1 Push the seat belt shoulder anchor down while pressing the release button A.

2 Push the seat belt shoulder anchor up.


Move the height adjuster up and down as needed until you hear a click.

WARNING

■ **Adjustable shoulder anchor**

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident.

Seat belt pretensioners (front and outboard rear seats)

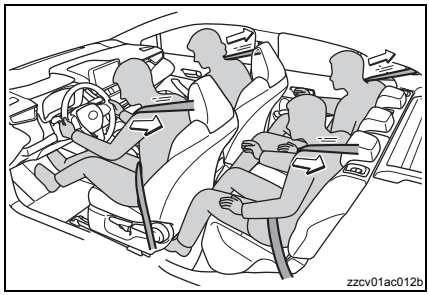

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal or side collision.

The pretensioners do not activate in the event of a minor frontal impact, a minor side impact, a rear impact or a vehicle rollover.

■ **Replacing the belt after the pretensioner has been activated**

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

WARNING

■ Seat belt pretensioners


If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

SRS airbag system

■ Location of the SRS airbags

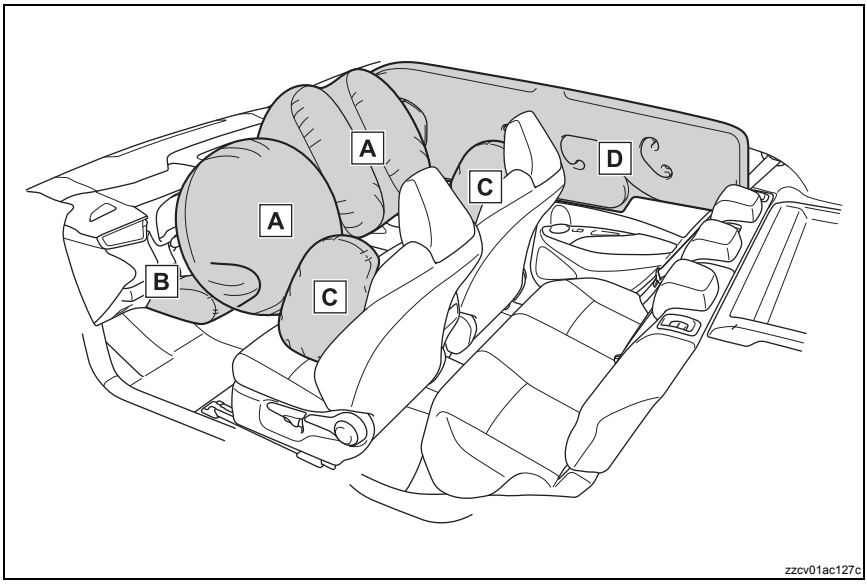

▶ SRS front airbags

A SRS driver airbag/front passenger airbag

Can help protect the head and chest of the driver and front passenger from impact with interior components

B SRS knee airbag

Can help provide driver protection

▶ SRS side and curtain shield airbags


C SRS front side airbags

Can help protect the torso of the front seat occupants

D SRS curtain shield airbags

Can help protect primarily the head of occupants in the outer seats

■ SRS airbag system components

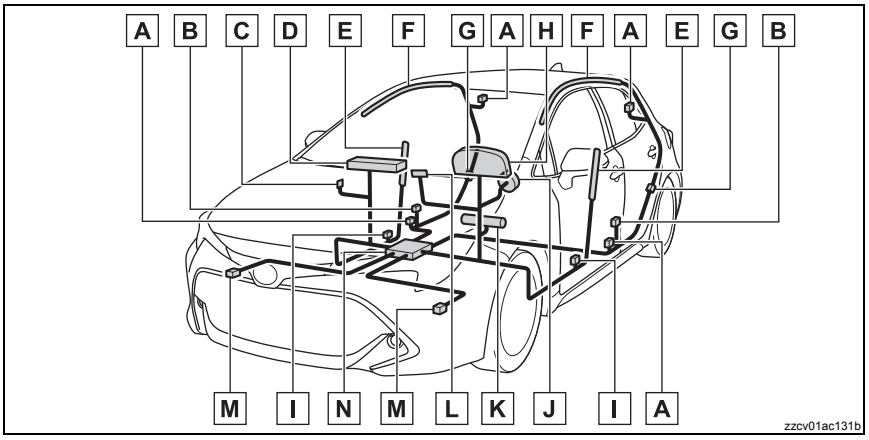

A Seat belt pretensioners and force limiters

B Side impact sensors (front)

C Airbag manual on-off switch

D Front passenger airbag

E Side airbags

F Curtain shield airbags

G Side impact sensors (rear)

H SRS warning light

I Side impact sensors (front door)

J Driver airbag

K Driver's knee airbag

L "AIR BAG ON" and "AIR BAG OFF" indicator lights

M Front impact sensors

N Airbag sensor assembly

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

● Slight abrasions, burns, bruising etc.,

■ If the SRS airbags deploy (inflate)

may be sustained from SRS airbags, due to the extremely high speed deployment (inflation) by hot gases.

- A loud noise and white powder will be emitted.
- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats, parts of the front and rear pillars, and roof side rails, may be hot for several minutes. The airbag itself may also be hot.
- The windshield may crack.
- The hybrid system will be stopped and fuel supply to the engine will be stopped. (→P.92)
- The brakes and stop lights will be controlled automatically. (→P.382)
- The interior lights will turn on automatically. (→P.454)
- The emergency flashers will turned on automatically. (→P.534)
- Vehicles with eCall: If any of the following situations occur, the system is designed to send an emergency call* to the eCall control center, notifying them of the vehicle's location (without needing to push the "SOS" button) and an agent will attempt to speak with the occupants to ascertain the level of emergency and assistance required. If the occupants are unable to communicate, the agent automatically treats the call as an emergency and helps to dispatch the necessary emergency services. (→P.69)
  - An SRS airbag is deployed.
  - A seat belt pretensioner is activated.
  - The vehicle is involved in a severe rear-end collision.

*: In some cases, the call cannot be made. (→P.70)

SRS airbag deployment conditions (SRS front airbags)

- The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 20 - 30 km/h [12 - 18 mph] frontal collision with a fixed wall that does not move or deform).

However, this threshold velocity will be considerably higher in the following situations:

- If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
- If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle "underrides", or goes under, the bed of a truck


SRS airbag deployment conditions (SRS side and curtain shield airbags)

- The SRS side and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 20 - 30 km/h [12 - 18 mph]).
- Both SRS curtain shield airbags may deploy in the event of a severe side collision.
- Both SRS curtain shield airbags may also deploy in the event of a severe frontal collision.

Conditions under which the SRS airbags may deploy (inflate), other than a collision

The SRS front airbags and SRS side and curtain shield airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.


- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

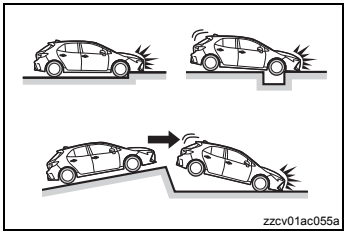

Types of collisions that may not deploy the SRS airbags (SRS front airbags)

The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.


- Collision from the side
- Collision from the rear
- Vehicle rollover

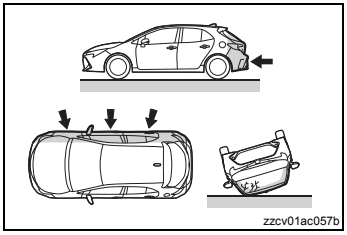

Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)


The SRS side and curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

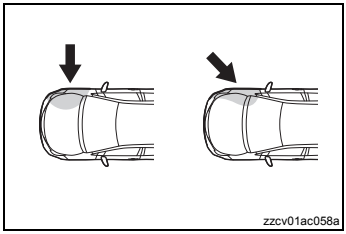


The SRS side airbags do not generally inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

- Collision from the front
- Collision from the rear
- Vehicle rollover

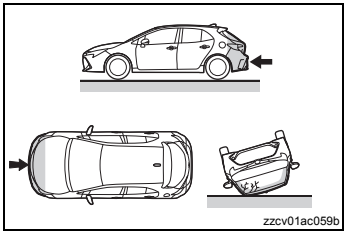

The SRS curtain shield airbags do not generally inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed side or low-speed frontal collision.


- Collision from the rear
- Vehicle rollover

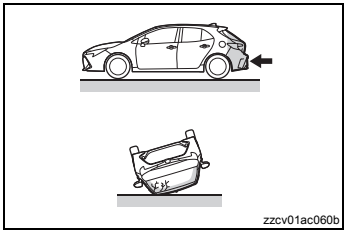


When to contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer

In the following cases, the vehicle will require inspection and/or repair. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.


- Any of the SRS airbags have been inflated.
- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.

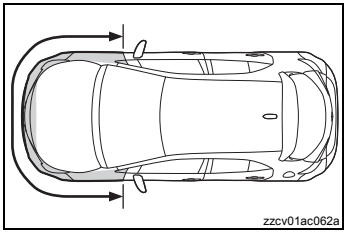


- A portion of a door or its surrounding area is damaged, deformed or has had a hole made in it, or the vehicle was involved in an accident that was not severe enough to cause the SRS side and curtain shield airbags to inflate.

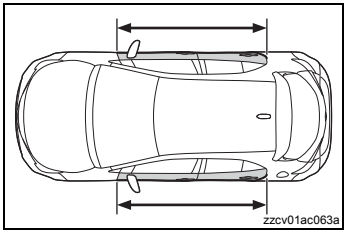


- The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.

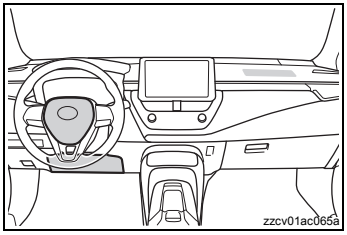

- The surface of the seats with the SRS side airbag is scratched, cracked, or otherwise damaged.

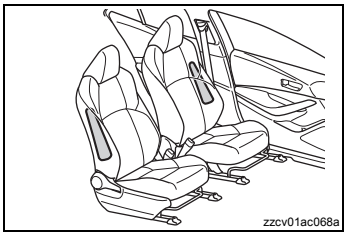

- The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the SRS curtain shield airbags inside is scratched, cracked, or otherwise damaged.

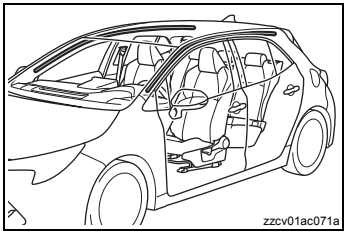

WARNING

■ SRS airbag precautions

Observe the following precautions regarding the SRS airbags.
Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly.
  The SRS airbags are supplemental devices to be used with the seat belts.

WARNING


- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag.

Since the risk zone for the driver's airbag is the first 50 - 75 mm (2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:


- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Slightly recline the back of the seat. Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Toyota strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P.48)
- Do not sit on the edge of the seat or lean against the dashboard.

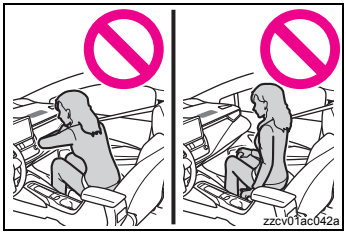


- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.

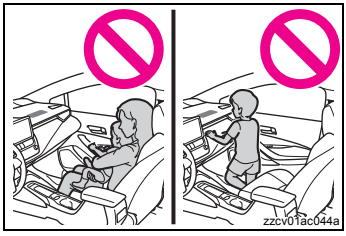


- Do not allow the front seat occupants to hold items on their knees.

WARNING


- Do not lean against the door, the roof side rail or the front, side and rear pillars.

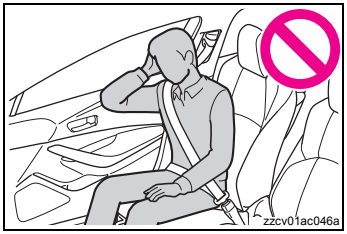


- Do not allow anyone to kneel on the passenger seat toward the door or put their head or hands outside the vehicle.

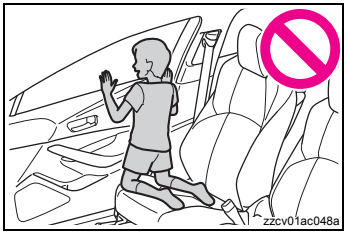

- Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the instrument panel.
  These items can become projectiles when the SRS driver, front passenger and knee airbags deploy.

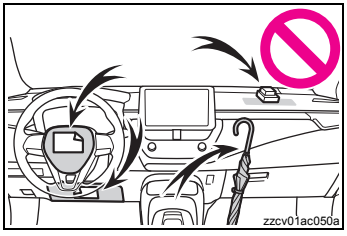

- Do not attach anything to areas such as a door, windshield, side windows, front or rear pillar, roof side rail and assist grip. (Except for the speed limit label →P.557)

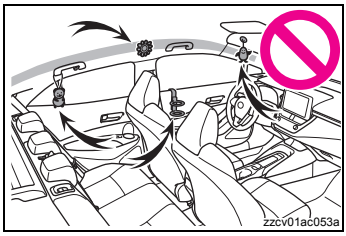

- Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- If a vinyl cover is put on the area where the SRS driver's knee airbag will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the SRS airbags. Such accessories may prevent the side airbags from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.
- Do not strike or apply significant levels of force to the area of the SRS airbag components or the front doors.
  Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.

WARNING

- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Modification and disposal of SRS airbag system components

Do not dispose of your vehicle or perform any of the following modifications without consulting your Toyota retailer or Toyota authorized repairer, or any reliable repairer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars, roof side rails, front door panels, front door trims or front door speakers
- Modifications to the front door panel (such as making a hole in it)
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows or winches
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as mobile two-way radios (RF-transmitter) and CD players

Exhaust gas precautions

Harmful substance to the human body is included in exhaust gases if inhaled.

WARNING

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.
Failure to do so may cause exhaust gases enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard.

■ Important points while driving

- Keep the back door closed.
- If you smell exhaust gases in the vehicle even when the back door is closed, open the windows and have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

■ When parking

- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the hybrid system.
- Do not leave the vehicle with the hybrid system on for a long time. If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.
- Do not leave the hybrid system operating in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the hybrid system is operating, exhaust gases may collect and enter the vehicle.


■ Exhaust pipe

The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Airbag manual on-off system

This system deactivates the front passenger airbag. Only deactivate the airbag when using a child restraint system on the front passenger seat.

System components

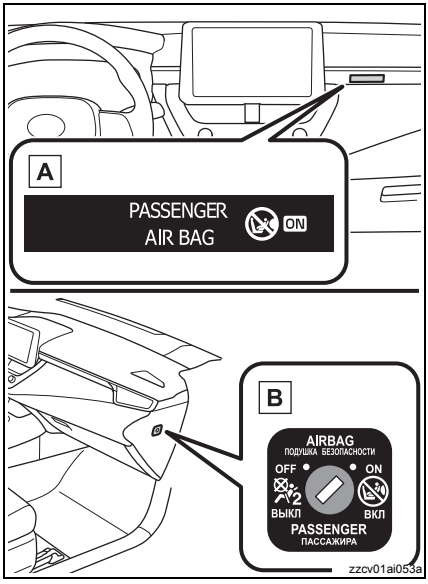

A “PASSENGER AIR BAG” indicator


“PASSENGER AIR BAG” and “ON” indicator light turns on when the airbag system is on, and about after 60 seconds they go off. (only when the power switch is in ON)

B Airbag manual on-off switch

Deactivating the front seat passenger airbag

Insert the mechanical key into the cylinder and turn to the “OFF” position.

The “OFF” indicator light turns on (only when the power switch is in ON).

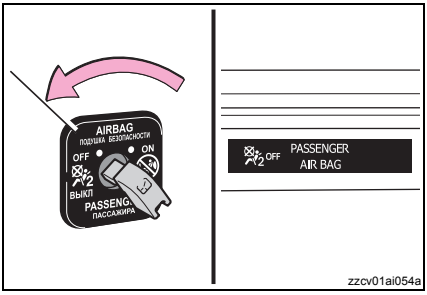

“PASSENGER AIR BAG” indicator information

If any of the following problems occur, it is possible that there is a malfunction in the system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- The “OFF” indicator does not illuminate when the airbag manual on-off switch is set to “OFF”.
- The indicator light does not change when the airbag manual on-off switch is switched to “ON” or “OFF”.

WARNING

■ When installing a child restraint system

For safety reasons, always install a child restraint system in a rear seat. In the event that the rear seat cannot be used, the front seat can be used as long as the airbag manual on-off system is set to “OFF”.
If the airbag manual on-off system is left on, the strong impact of the airbag deployment (inflation) may cause serious injury or even death.

■ When a child restraint system is not installed on the front passenger seat

Ensure that the airbag manual on-off system is set to “ON”.
If it is left off, the airbag may not deploy in the event of an accident, which may result in serious injury or even death.

Riding with children

Observe the following precautions when children are in the vehicle.
Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle’s seat belt.

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch, etc.
- Use the rear door child-protector lock or the window lock switch to avoid children opening the door while driving or operating the power window accidentally. (→P.148, 210)
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, back door, seats, etc.

WARNING

■When children are in the vehicle

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the panoramic moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Child restraint systems

Before installing a child restraint system in the vehicle, there are precautions that need to be observed, different types of child restraint systems, as well as installation methods, etc., written in this manual.

- Use a child restraint system when riding with a small child that cannot properly use a seat belt. For the child's safety, install the child restraint system to a rear seat. Be sure to follow the installation method that is in the operation manual enclosed with the restraint system.
- The use of a Toyota genuine child restraint system is recommended, as it is safer to use in this vehicle. Toyota genuine child restraint systems are made specifically for Toyota vehicles. They can be purchased at a Toyota dealer.

Table of contents

Points to remember: P.49

When using a child restraint system: P.50

Child restraint system compatibility for each seating position: P.52, 58

Child restraint system installation method: P.63

- Fixed with a seat belt: P.64
- Fixed with an ISOFIX lower anchorage: P.66
- Using a top tether anchorage: P.67

Points to remember

- Prioritize and observe the warnings, as well as the laws and regulations for child restraint systems.
- Use a child restraint system until the child becomes large enough to properly wear the vehicle's seat belt.
- Choose a child restraint system appropriate to the age and size of the child.
- Note that not all child restraint systems can fit in all vehicles. Before using or purchasing a child restraint system, check the compatibility of the child restraint system with seat positions. (→P.52, 58)

WARNING

■When a child is riding

Observe the following precautions. Failure to do so may result in death or serious injury.

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system which is correctly installed. For installation details, refer to the operation manual enclosed with the child restraint system. General installation instruction is provided in this manual.
- Toyota strongly urges the use of a proper child restraint system that conforms to the weight and size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Holding a child in your or someone else's arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield or between the holder and the interior of the vehicle.

■Handling the child restraint system

If the child restraint system is not properly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving, or an accident.

- If the vehicle were to receive a strong impact from an accident, etc., it is possible that the child restraint system has damage that is not readily visible. In such cases, do not reuse the restraint system.

WARNING

- Depending on the child restraint system, installation may be difficult or impossible. In those cases, check whether the child restraint system is suitable for installment in the vehicle. (→P.52, 58) Be sure to install and observe the usage rules after carefully reading the child restraint system fixing method in this manual, as well as the operation manual enclosed with the child restraint system.
- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment.

When using a child restraint system

When installing a child restraint system to a front passenger seat


For the safety of a child, install a child restraint system to a rear seat. When installing a child restraint system to a front passenger seat is unavoidable, adjust the seat as follows and install the child restraint system:

- Move the front seat fully rearward.
- Adjust the seat height to the upper most position.
- Adjust the seatback angle to the most upright position.

If there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

- If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.

Otherwise, put the head restraint in the upper most position.

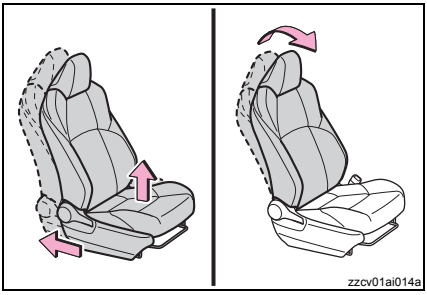


WARNING

When using a child restraint system


Observe the following precautions. Failure to do so may result in death or serious injury.

- Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on. (→P.46) The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

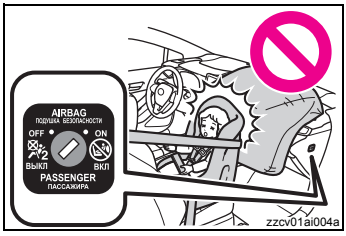

WARNING

- There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat.
  Details of the label(s) are shown in the illustration below.

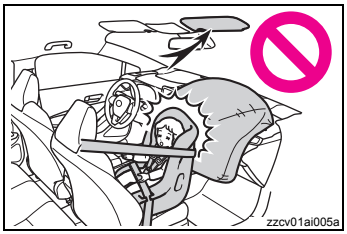


WARNING



WARNING

- Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint on the front passenger seat, move the seat as far back as possible. Failing to do so may result in death or serious injury if the airbags deploy (inflate).

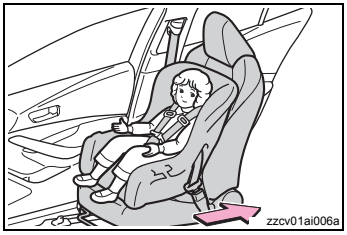


- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillars, or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.



- When a junior seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.

- Use child restraint system suitable to the age and size of the child and install it to the rear seat.
- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat (left-hand drive vehicles) or the left-hand rear seat (right-hand drive vehicles). (→P.56, 62)

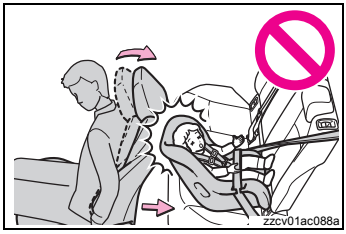

Child restraint system compatibility for each seating position (except for Latin American countries*)

*: Guadeloupe, Martinique and F. Guiana


■ Child restraint system compatibility for each seating position

Compatibility of each seating position with child restraint systems (→P.54) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols.
Also, the recommended child restraint system that is suitable for your child can be selected.
Otherwise, check [Recommended child restraint systems and Compatibility table] for recommended

child restraint systems. (→P.56) Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].

■ **Before confirming the compatibility of each seating position with child restraint systems**

1 Checking the child restraint system standards.
Use a child restraint system that conforms to UN(ECE) R44*1 or UN(ECE) R129*1, 2.
The following approval mark is displayed on child restraint systems which are conformed.
Check for an approval mark attached to the child restraint system.

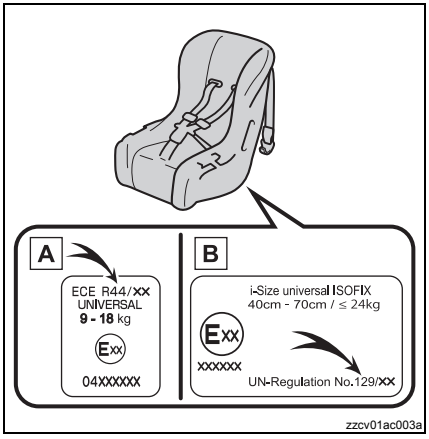


Example of the displayed regulation number

A UN(ECE) R44 approval mark*3
The weight range of the child who is applicable for an UN(ECE) R44 approval mark is indicated.

B UN(ECE) R129 approval mark*3
The height range of the child who is applicable as well as available weights for an UN(ECE) R129 approval mark is indicated.

2 Checking the category of the child restraint system.
Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable. Also, if there are any uncertainties, check the user's guide included with the child restraint system or contact the retailer of the child restraint system.

- "universal"
- "semi-universal"
- "restricted"
- "vehicle specific"

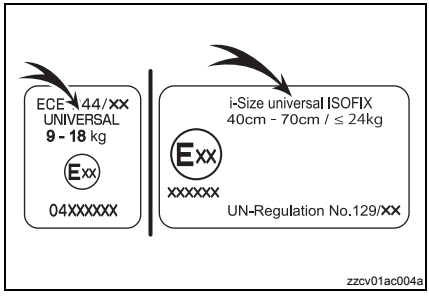

*1: UN(ECE) R44 and UN(ECE) R129 are U.N. regulations for child restraint systems.


*2: The child restraint systems mentioned in the table may not be available outside of the EU area.

*3: The displayed mark may differ


depending on the product.

■ Compatibility of each seating position with child restraint systems

▶ Left-hand drive vehicles

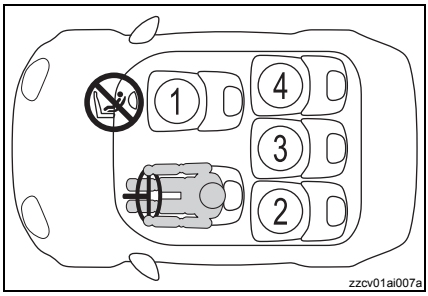

▶ Right-hand drive vehicles

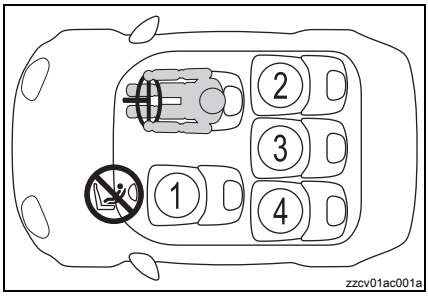

1 *1, 2, 3	U *4 L
2 *3	U L

3 *3, 5	U L
4 *3	U L

U Suitable for “universal” category child restraint system fixed with the seat belt.

L Suitable for child restraint systems given on recommended child restraint systems and compatibility table (→P.56).


Suitable for i-Size and ISOFIX child restraint system.

Includes a top tether anchorage point.

Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on.

*1: Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.

*2: Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

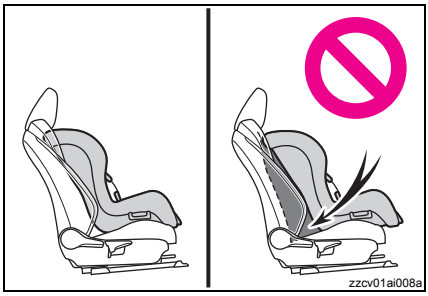

*3: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

*4: Use only a front-facing child restraint system when the airbag manual on-off switch is on.

*5: Not suitable for child restraint system with support leg.

■ Detail information for child restraint systems installation

Seating position					
Seat position number	①		②	③	④
	Airbag manual on-off switch				
	ON	OFF			
Seating position suitable for universal belted (Yes/No)	Yes Forward facing only	Yes	Yes	Yes	Yes
i-Size seating position (Yes/No)	No	No	Yes	No	Yes
Seating position suitable for lateral fixture (L1/L2/No)	No	No	No	No	No
Suitable rearward facing fixture (R1/R2X/R2/R3/No)	No	No	R1, R2X, R2	No	R1, R2X, R2
Suitable forward facing fixture (F2X/F2/F3/No)	No	No	F2X, F2, F3	No	F2X, F2, F3
Suitable junior seat fixture (B2/B3/No)	No	No	B2, B3	No	B2, B3

ISOFIX child restraint systems are divided into different “fixture”. The child restraint system can be used in the seating positions for “fixture” mentioned in the table above. For kind of “fixture” relation, confirm the following table. If your child restraint system has no kind of “fixture” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child

seat.

Fixture	Description
F3	Full-height, forward-facing child restraint systems
F2	Reduced-height forward-facing child restraint systems
F2X	Reduced-height forward-facing child restraint systems
R3	Full-size, rearward-facing child restraint systems
R2	Reduced-size, rearward-facing child restraint systems
R2X	Reduced-size, rearward-facing child restraint systems
R1	Rearward-facing infant seat
L1	Left lateral-facing (carrycot) infant seat
L2	Right lateral-facing (carrycot) infant seat
B2	Junior seat
B3	Junior seat

■ Recommended child restraint systems and Compatibility table

Mass groups	Recommended Child Restraint System	Seating position				
		①		②	③	④
		Airbag manual on-off switch				
		ON	OFF			
0, 0+ Up to 13 kg (28 lb.)	G0+, BABY SAFE PLUS (Yes/No)	No	Yes	Yes	Yes	Yes
	G0+ BABY SAFE PLUS with SEAT BELT FIXATION, BASE PLATFORM (Yes/No)	No	Yes	Yes	No	Yes
	TOYOTA MINI (Yes/No)	No	Yes	Yes	Yes	Yes
	TOYOTA MIDI (Yes/No)	No	No	Yes	No	Yes
	TOYOTA MINI with ISO-BASE (Yes/No)	No	No	Yes	No	Yes


Mass groups	Recommended Child Restraint System	Seating position				
		①		②	③	④
		Airbag manual on-off switch				
		ON	OFF			
I 9 to 18 kg (20 to 39 lb.)	TOYOTA DUO PLUS (Yes/No)	Yes Belt fix only	Yes Belt fix only	Yes	Yes Belt fix only	Yes
	TOYOTA MIDI (Yes/No)	No	No	Yes	No	Yes
II 15 to 25 kg (34 to 54 lb.)	KIDFIX XP SICT (Yes/No)	Yes Belt fix only	Yes Belt fix only	Yes	Yes Belt fix only	Yes
	MAXI PLUS (Yes/No)	Yes Belt fix only	Yes Belt fix only	Yes	Yes Belt fix only	Yes
III 22 to 36 kg (34 to 79 lb.)	KIDFIX XP SICT (Yes/No)	Yes Belt fix only	Yes Belt fix only	No	No	No
	MAXI PLUS (Yes/No)	Yes Belt fix only	Yes Belt fix only	Yes	Yes Belt fix only	Yes

The child restraint systems mentioned in the table may not be available outside the EU area.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or seri-

ous injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference.
- If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

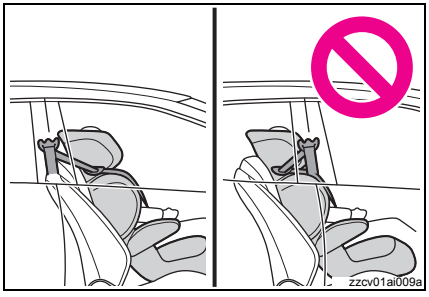

- When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

Child restraint system compatibility for each seating position (for Latin American countries*)

*: Guadeloupe, Martinique and F. Guiana


■ Child restraint system compatibility for each seating position

Compatibility of each seating position with child restraint systems (→P.59) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols.
Also, the recommended child restraint system that is suitable for your child can be selected.
Otherwise, check [Recommended child restraint systems and Compatibility table] for recommended child restraint systems. (→P.62)
Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].

■ Before confirming the compatibility of each seating position with child restraint systems

1 Checking the child restraint system standards.
Use a child restraint system that conforms to UN(ECE) R44[*1] or UN(ECE) R129[*1, 2].
The following approval mark is displayed on child restraint sys-

tems which are conformed. Check for an approval mark attached to the child restraint system.

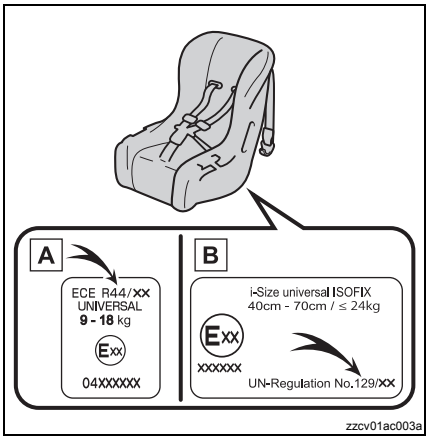


Example of the displayed regulation Number

A UN(ECE) R44 approval mark*3
The weight range of the child who is applicable for an UN(ECE) R44 approval mark is indicated.

B UN(ECE) R129 approval mark*3
The height range of the child who is applicable as well as available weights for an UN(ECE) R129 approval mark is indicated.

2 Checking the category of the child restraint system.
Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable. Also, if there are any uncertainties, check the user's guide included with the child restraint system or contact the retailer of the child restraint system.

- "universal"
- "semi-universal"
- "restricted"
- "vehicle specific"

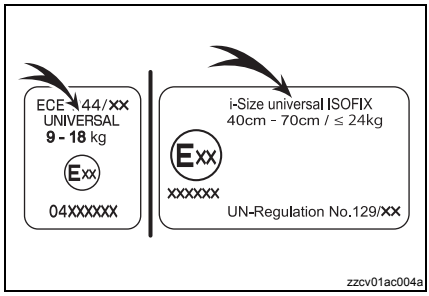


*1: UN(ECE) R44 and UN(ECE) R129 are U.N. regulations for child restraint systems.

*2: The child restraint systems mentioned in the table may not be available outside of the EU area.

*3: The displayed mark may differ depending on the product.

■ Compatibility of each seating position with child restraint systems

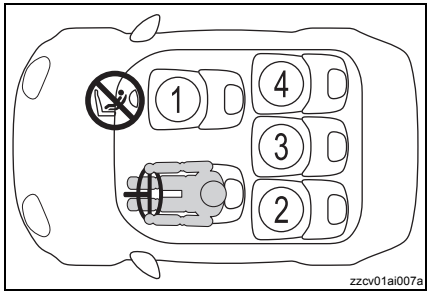

1 *1, 2, 3	U *4	L
2 *3	U 	L 
3 *3	U	L
4 *3	U 	L 

U Suitable for “universal” category child restraint system fixed with the seat belt.

L Suitable for child restraint systems given on recommended child restraint systems and compatibility table (→P.62).


Suitable for i-Size and ISOFIX child restraint system.

Includes a top tether anchorage point.

Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on.

*1: Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.

*2: Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

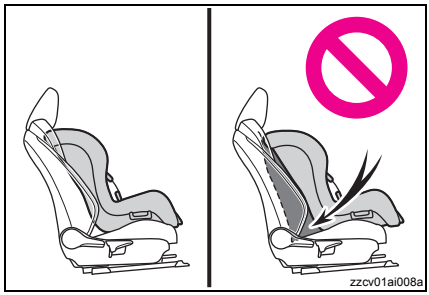

*3: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

*4: Use only a front-facing child restraint system when the airbag manual on-off switch is on.

■ Detail information for child restraint systems installation

Seating position					
Seat position number	① Airbag manual on-off switch		②	③	④
	ON	OFF			
Seating position suitable for universal belted (Yes/No)	Yes Forward facing only	Yes	Yes	Yes	Yes
i-Size seating position (Yes/No)	No	No	Yes	No	Yes
Seating position suitable for lateral fixture (L1/L2/No)	No	No	No	No	No
Suitable rearward facing fixture (R1/R2X/R2/R3/No)	No	No	R1, R2X, R2	No	R1, R2X, R2
Suitable forward facing fixture (F2X/F2/F3/No)	No	No	F2X, F2, F3	No	F2X, F2, F3
Suitable junior seat fixture (B2/B3/No)	No	No	B2, B3	No	B2, B3

ISOFIX child restraint systems are divided into different “fixture”. The child restraint system can be used in the seating positions for “fixture” mentioned in the table above. For kind of “fixture” relation, confirm the following table. If your child restraint system has no kind of “fixture” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.

Fixture	Description
F3	Full-height, forward-facing child restraint systems
F2	Reduced-height forward-facing child restraint systems
F2X	Reduced-height forward-facing child restraint systems
R3	Full-size, rearward-facing child restraint systems
R2	Reduced-size, rearward-facing child restraint systems

Fixture	Description
R2X	Reduced-size, rearward-facing child restraint systems
R1	Rearward-facing infant seat
L1	Left lateral-facing (carrycot) infant seat
L2	Right lateral-facing (carrycot) infant seat
B2	Junior seat
B3	Junior seat

■ **Recommended child restraint systems and Compatibility table**


Mass groups	Recommended Child Restraint System	Seating position				
		①		②	③	④
		Airbag manual on-off switch				
		ON	OFF			
0, 0+ Up to 13 kg (28 lb.)	G0+, BABY SAFE PLUS (Yes/No)	No	Yes	Yes	Yes	Yes
	MIDI 2 (Yes/No)	No	No	Yes	No	Yes
I 9 to 18 kg (20 to 39 lb.)	TOYOTA DUO PLUS (Yes/No)	Yes Belt fix only	Yes Belt fix only	Yes	Yes Belt fix only	Yes
	MIDI 2 (Yes/No)	No	No	Yes	No	Yes

The child restraint systems mentioned in the table may not be available outside the LATIN area.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.




- When installing a child seat with support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference.
- If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

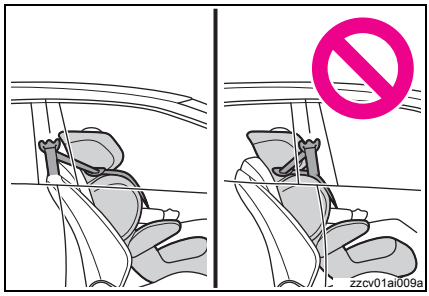

- When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

Child restraint system installation method

Confirm with the operation manual enclosed with the child restraint system about the installation of the child restraint system.

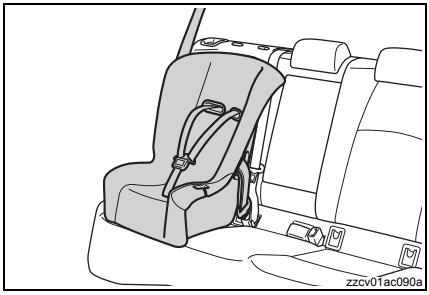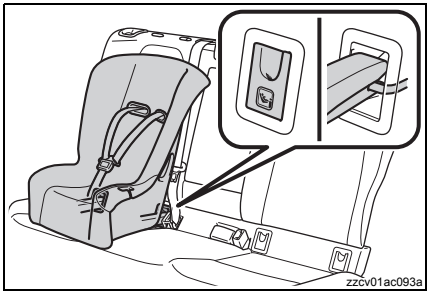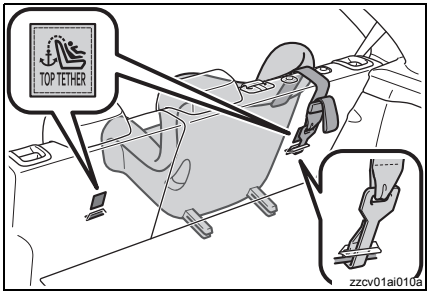Installation method		Page
Seat belt attachment		P.64
ISOFIX lower anchorage attachment		P.66
Top tether anchorage attachment		P.67

Child restraint system fixed with a seat belt

■ Installing child restraint system using a seat belt


Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

If the child restraint system on hand is not within the “universal” category (or the necessary information is not in the table), refer to the “Vehicle List” provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child seat.
(→P.53, 54, 58, 59)


1 If installing the child restraint system to the front passenger seat is unavoidable, refer to P.50 for the front passenger seat adjustment.

2 If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.
Otherwise, put the head restraint in the upper most position. (→P.201)

3 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted. Securely fix the seat belt to the child restraint system in accordance to the directions enclosed with the child restraint system.

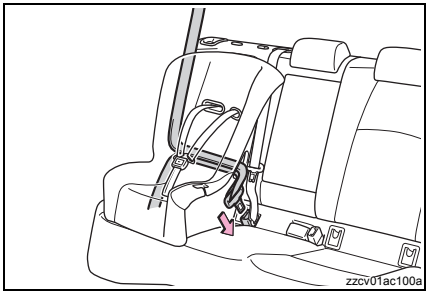

4 If your child restraint system is not equipped with a lock-off (a seat belt locking feature), secure the child restraint system using a locking clip.

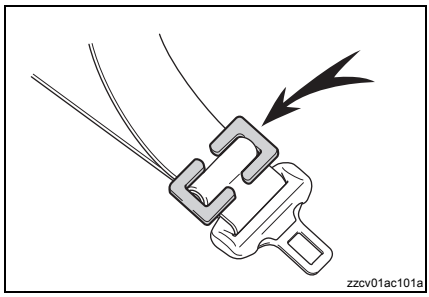

5 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.66)

■ Removing a child restraint system installed with a seat belt

Press the buckle release button and fully retract the seat belt.

When releasing the buckle, the child restraint system may spring up due to the rebound of the seat cushion. Release the buckle while holding down the child restraint system.

Since the seat belt automatically reels itself, slowly return it to the stowing position.

■ When installing a child restraint system

You may need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer: Locking clip for child restraint system
(Part No. 73119-22010)

WARNING

■ **When installing a child restraint system**


Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.
- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- When a junior seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Follow all installation instructions provided by the child restraint system manufacturer.

Child restraint system fixed with an ISOFIX lower anchorage

■ ISOFIX lower anchorages (ISOFIX child restraint system)

Lower anchorages are provided for the outboard rear seats. (Marks displaying the location of the anchorages are attached to the seats.)

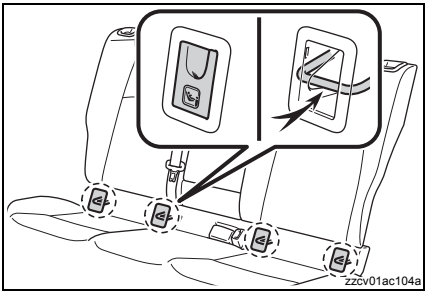


■ Installation with ISOFIX lower anchorage (ISOFIX child restraint system)

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

If the child restraint system on hand is not within the "universal" category (or the necessary information is not in the table), refer to the "Vehicle List" provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child seat. (→P.53, 54, 58, 59)

1. If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.
   Otherwise, put the head restraint in the upper most position. (→P.201)
2. Remove the anchorage covers, and install the child restraint system to the seat.

The bars are installed behind the anchorage covers.

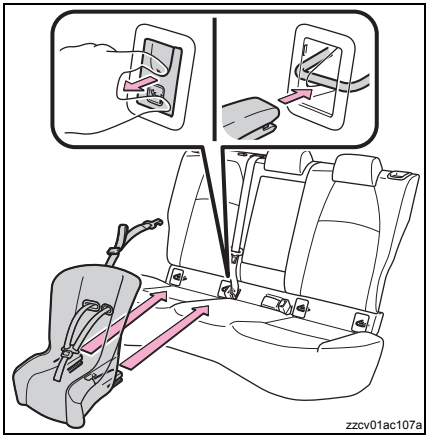

3 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.66)


■ When using a "TOYOTA DUO PLUS" (for Latin American countries*)

Adjust it to the most reclined position.

*: Guadeloupe, Martinique and F. Guiana

■ When using a "MIDI 2" (for Latin American countries*)

Adjust the support leg and ISOFIX connectors as follows:

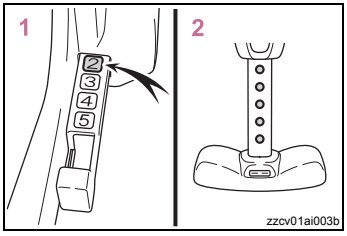

1 Lock the ISOFIX connectors where number 2 can be seen.

2 Lock the support leg where 5 holes can be seen.

*: Guadeloupe, Martinique and F. Guiana

WARNING

■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.


- After securing a child restraint system, never adjust the seat.
- When using the lower anchorages, be sure that there are no foreign objects around the anchorages and that the seat belt is not caught behind the child restraint system.
- Follow all installation instructions provided by the child restraint system manufacturer.

Using a top tether anchorage

■ Top tether anchorages

Top tether anchorages are provided for the outboard rear seats.

Use top tether anchorages when fixing the top strap.

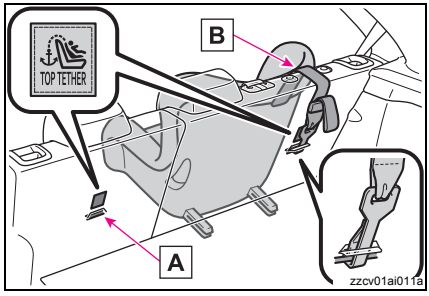

A Top tether anchorages

B Top strap

■ Fixing the top strap to the top tether anchorages


Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

1 Adjust the head restraint to the upmost position.

If the head restraint interferes with the child restraint system or top strap installation and the head restraint can be removed, remove the head restraint. (→P.201)

2 Latch the hook onto the top tether anchorage and tighten the top strap.

Make sure the top strap is securely latched. (→P.66)
When installing the child restraint system with the head restraint being raised, be sure to have the top strap pass underneath the head restraint.

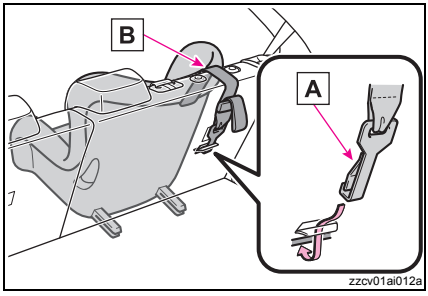

A Hook

B Top strap

WARNING

■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.

- Firmly attach the top strap and make sure that the belt is not twisted.
- Do not attach the top strap to anything other than the top tether anchorages.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When installing the child restraint system with the head restraint being raised, after the head restraint has been raised and then the top tether anchorage has been fixed, do not lower the head restraint.


eCall*1, 2

*1: If equipped

*2: Operates within the eCall coverage. The system name differs depending on the country.

eCall is a telematics service that uses Global Navigation Satellite System (GNSS) data and embedded cellular technology to enable the following emergency calls to be made: Automatic emergency calls (Automatic Collision Notification) and manual emergency calls (by pressing the "SOS" button). This service is required by European Union Regulations.

System components

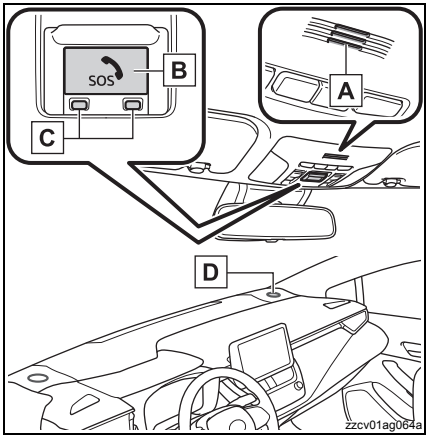

A Microphone

B "SOS" button*

C Indicator lights

D Speaker

*: This button is intended for communication with the eCall system operator. Other SOS buttons available in other systems of a motor vehicle do not relate to the device and are not intended for communication with the eCall system operator.

Emergency Notification Services

■ Automatic Emergency Calls

If any airbag deploys, the system is designed to automatically call the eCall control center.* The answering operator receives the vehicle's location, the time of the incident and the vehicle VIN, and attempts to speak with the vehicle occupants to assess the situation. If the occupants are unable to communicate, the operator automatically treats the call as an emergency and contacts the nearest emergency services provider (112 system etc.) to describe the situation and request that assistance be sent to the location.


*: In some cases, the call cannot be made. (→P.70)

■ Manual Emergency Calls

In the event of an emergency, press the "SOS" button to call the eCall control center.* The answering operator will determine your vehicle's location, assess the situation, and dispatch the necessary assis-

tance required.

Make sure to open the cover before pressing the “SOS” button.

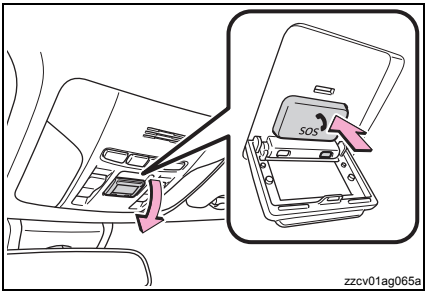

If you accidentally press the “SOS” button, tell the operator that you are not experiencing an emergency.

*: In some cases, the call cannot be made. (→P.70)

Indicator lights

When the power switch is turned to ON, the red indicator light will illuminate for 10 seconds and then the green indicator light will illuminate, indicating that the system is enabled. The indicator lights indicate the following:

- If the green indicator light illuminates and stays on, the system is enabled.
- If the green indicator light flashes twice per second, an automatic or manual Emergency Call is being made.
- If no indicator lights illuminate, the system is not enabled.
- If the red indicator light illuminates at any time other than immediately after the power switch is turned to ON, the system may be malfunctioning or the backup battery may be depleted.
- If the red indicator light blinks for approximately 30 seconds during an Emergency Call, the call has been disconnected or the cellular network signal is weak.

The service life of the backup battery does not exceed 3 years.

Free/Open Source Software Information

This product contains Free/Open Source Software (FOSS).

The license information and/or the source code of such FOSS can be found at the following URL.

https://www.denso.com/global/en/opensource/dcm/toyota/

WARNING

When the Emergency Call may not be made

- It may not be possible to make Emergency Calls in any of the following situations. In such cases, report to emergency services provider (112 system etc.) by other means such as nearby public phones.
- Even when the vehicle is in the cellular phone service area, it may be difficult to connect to the eCall control center if the reception is poor or the line is busy. In such cases, even though the system attempts to connect to the eCall control center, you may not be able to connect to the eCall control center to make Emergency Calls and contact emergency services.

WARNING

- When the vehicle is out of the cellular phone service area, the Emergency Calls cannot be made.
- When any related equipment (such as the “SOS” button panel, indicator lights, microphone, speaker, DCM, antenna, or any wires connecting the equipment) is malfunctioning, damaged or broken, the Emergency Call cannot be made.
- During an Emergency Call, the system makes repeated attempts to connect to the eCall control center. However, if it cannot connect to the eCall control center due to poor radio wave reception, the system may not be able to connect to the cellular network and the call may finish without connecting. The red indicator light will blink for approximately 30 seconds to indicate this disconnection.

● If the 12-volt battery’s voltage decreases or there is a disconnection, the system may not be able to connect to the eCall control center.

■ When the Emergency Call system is replaced with a new one

The Emergency Call system should be registered. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ For your safety

● Please drive safely.
The function of this system is to assist you in making the Emergency Call in case of accidents such as traffic accidents or sudden medical emergencies, and it does not protect the driver or passengers in any way. Please drive safely and fasten your seatbelts at all times for your safety.

● In case of an emergency, make lives the top priority.

● If you smell anything burning or other unusual smells, leave the vehicle and evacuate to a safe area immediately.

● If the airbags deploy when the system is operating normally, the system makes emergency call. The system also makes emergency call when the vehicle is struck from the rear or rolls over, even if the airbags do not deploy.

● For safety, do not make the Emergency Call while driving.
Making calls during driving may cause mishandling of the steering wheel, which may lead to unexpected accidents.
Stop the vehicle and confirm the safety of your surroundings before making the Emergency Call.

● When changing fuses, please use the specified fuses. Using other fuses may cause ignition or smoke in the circuit and lead to a fire.

● Using the system while there is smoke or an unusual smell may cause a fire. Stop using the system immediately and consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

NOTICE

■ To prevent damage

Do not pour any liquids onto the “SOS” button panel, etc. and do not impact it.


NOTICE

■ If the “SOS” button panel, speaker or microphone malfunctions during an Emergency Call or manual maintenance check

It may not be possible to make Emergency Calls, confirm the system status, or communicate with the eCall control center operator. If any of the above equipment is damaged, please consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

System overview of added service

■ Data processing flow

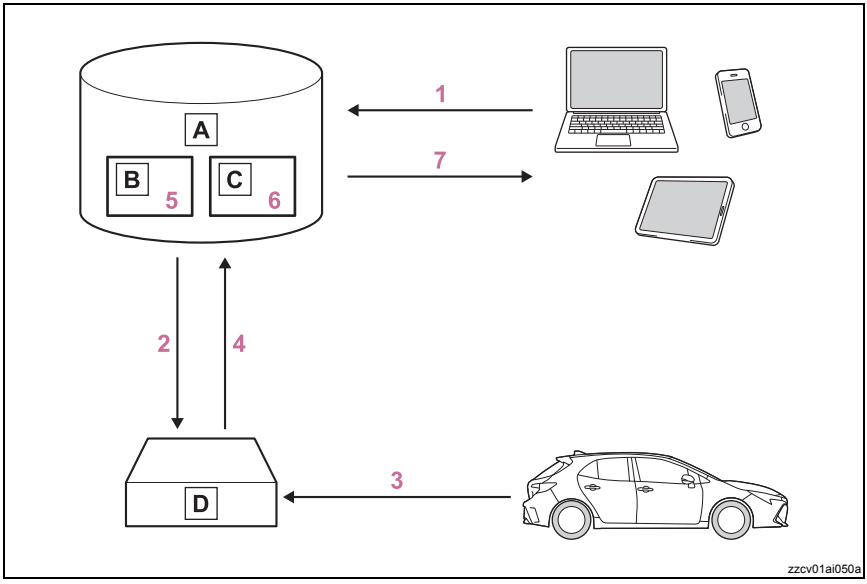

A Server

B Storage

C Processing

D DCM

1 Customer activates service on Toyota Customer portal & accepts terms of services according to GDPR.

2 Server activates the service in the DCM and defines which vehicle data to collect.
3 Defined vehicle data is collected by the DCM.
4 Data is shared with the server.
5 Data is stored in the server.
6 Data is processed in the server for fulfilling the service.
7 Processed data is presented to the customer.

For a list of eligible service please visit the Toyota Customer portal.

Implementing Regulation

Implementing Regulation Annex1 PART3 User Information			Conformity
1. DESCRIPTION OF THE ECALL IN-VEHICLE SYSTEM			
	1.1.	Overview of the 112-based eCall in-vehicle system, its operation and functionalities	O
	1.2.	The 112-based eCall service is a public service of general interest and is accessible free of charge.	O
	1.3.	The 112-based eCall in-vehicle system is activated by default. It is activated automatically by means of in-vehicle sensors in the event of a severe accident. It will also be triggered automatically when the vehicle is equipped with a TPS system which does not function in the event of a severe accident.	O
	1.4.	The 112-based eCall in-vehicle system can also be triggered manually, if needed. Instructions for manual activation of the system	O
	1.5.	In the event of a critical system failure that would disable the 112-based eCall in-vehicle system, the following warning will be given to the occupants of the vehicle	O
2. INFORMATION ON DATA PROCESSING			

Implementing Regulation Annex1 PART3 User Information			Conformity
	2.1.	Any processing of personal data through the 112-based eCall in-vehicle system shall comply with the personal data protection rules provided for in Directives 95/46/EC and 2002/58/EC, and in particular, shall be based on the necessity to protect the vital interests of the individuals in accordance with Article 7(d) of Directive 95/46/EC.	O
	2.2.	Processing of such data is strictly limited to the purpose of handling the emergency eCall to the single European emergency number 112.	O
	2.3. Types of data and its recipients		
	2.3.1.	The 112-based eCall in-vehicle system may collect and process only the following data: Vehicle Identification Number, Vehicle type (passenger vehicle or light commercial vehicle), Vehicle propulsion storage type (gasoline/diesel/CNG/LPG/electric/hydrogen), Vehicle last three locations and direction of travel, Log file of the automatic activation of the system and its timestamp	O
	2.3.2.	Recipients of data processed by the 112-based eCall in-vehicle system are the relevant public safety answering points designated by the respective public authorities of the country on which territory they are located, to first receive and handle eCalls to the single European emergency number 112.	O

Implementing Regulation Annex1 PART3 User Information			Conformity
	2.4. Arrangements for data processing		
	2.4.1.	The 112-based eCall in-vehicle system is designed in such a way as to ensure that the data contained in the system memory is not available outside the system before an eCall is triggered.	O
	2.4.2.	The 112-based eCall in-vehicle system is designed in such a way as to ensure that it is not traceable and not subject to any constant tracking in its normal operation status.	O
	2.4.3.	The 112-based eCall in-vehicle system is designed in such a way as to ensure that data in the system internal memory is automatically and continuously removed.	O
	2.4.3.1.	The vehicle location data is constantly overwritten in the internal memory of the system so as always to keep maximum of the last three up-to-date locations of the vehicle necessary for the normal functioning of the system.	O
	2.4.3.2.	The log of activity data in the 112-based eCall in-vehicle system is kept for no longer than necessary for attaining the purpose of handling the emergency eCall and in any case not beyond 13 hours from the moment an emergency eCall was initiated.	O

Implementing Regulation Annex1 PART3 User Information			Conformity
	2.5. Modalities for exercising data subject's rights		
	2.5.1.	The data subject (the vehicle's owner) has a right of access to data and as appropriate to request the rectification, erasure or blocking of data, concerning him or her, the processing of which does not comply with the provisions of Directive 95/46/EC. Any third parties to whom the data have been disclosed have to be notified of such rectification, erasure or blocking carried out in compliance with this Directive, unless it proves impossible or involves a disproportionate effort.	O
	2.5.2.	The data subject has a right to complain to the competent data protection authority if he or she considers that his or her rights have been infringed as a result of the processing of his or her personal data.	O
	2.5.3.	Contact service responsible for handling access requests (if any): →P.77	O
3. INFORMATION ON THIRD PARTY SERVICES AND OTHER ADDED VALUE SERVICES (IF FITTED)			

Implementing Regulation Annex1 PART3 User Information			Conformity
	3.1.	Description of the operation and the functionalities of the TPS system/added value service	→P.72
	3.2.	Any processing of personal data through the TPS system/other added value service shall comply with the personal data protection rules provided for in Directives 95/46/EC and 2002/58/EC.	O
	3.2.1.	Legal basis for the use of TPS system and/or added value services and for processing data through them	The European Union General Data Protection Regulation
	3.3.	The TPS system and/or other added value services shall process personal data only on the base of the explicit consent of the data subject (the vehicle's owner or owners).	O
	3.4.	Modalities for data processing through TPS system and/or other added value services, including any necessary additional information regarding traceability, tracking and processing of personal data	→P.72
	3.5.	The owner of a vehicle equipped with a TPS eCall system and/or other added value service in addition to the 112-based eCall in-vehicle system has the right to choose to use the 112-based eCall in-vehicle system rather than the TPS eCall system and the other added value service.	O
	3.5.1.	Contact details for handling TPS eCall system deactivation requests	N/A

■ Service responsible for handling access requests

Country	Contact information
Austria	datenschutz@toyota-frey.at
Belgium/Luxembourg	privacy@toyota.be
Croatia	dpcp@toyota.hr

Country	Contact information
Czech Republic/ Hungary/Slovakia	adatvedelem@toyota-ce.com
Denmark	toyota@toyota.dk og
Estonia	privacy@toyota.ee
Finland	tietosuoja@toyota.fi
France	delegue.protectiondonnees@toyota-europe.com
Germany	Toyota.Datenschutz@toyota.de
Great Britain	privacy@tgb.toyota.co.uk
Greece	customer@toyota.gr
Iceland	personuvernd@toyota.is
Ireland	customerservice@toyota.ie
Italy	tmi.dpo@toyota-europe.com
Netherlands	www.toyota.nl/klantenservice
Norway	personvern@toyota.no
Poland	klient@toyota.pl
Portugal	gestaodadospessoais@toyotacaetano.pt
Romania	relatii.clienti@toyota.ro
Slovenia	dpcp@toyota.si
Spain	clientes@toyota.es / dpo@toyota.es.
Sweden	integritet@toyota.se
Switzerland	info@toyota.ch

■ Certification for eCall

Manufacturer: DENSO CORPORATION Address: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661, Japan Model: OGEU47 Operation frequency: GSM900 Tx: 880-915MHz, Rx: 925-960 MHz GSM1800 Tx: 1710-1785MHz, Rx: 1805-1880 MHz W-CDMA Band1 Tx: 1920-1980MHz, Rx: 2110-2170 MHz W-CDMA Band8 Tx: 880-915MHz, Rx: 925-960 MHz GPS 1575.42MHz GALILEO 1575.42MHz EGNOS 1575.42MHz Maximum output power: GSM900 2W GSM1800 1W W-CDMA Band1 0.25W W-CDMA Band8 0.25W
Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.denso.com/global/en/contact-us/doc/ 01
DENSO CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.denso.com/global/en/contact-us/doc/ 02

zzcv01ai055a

Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.denso.com/global/en/contact-us/doc/ 03
Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: https://www.denso.com/global/en/contact-us/doc/ 04
Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://www.denso.com/global/en/contact-us/doc/ 05
Hermed erklærer DENSO CORPORATION, at radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www.denso.com/global/en/contact-us/doc/ 06
Hiermit erklärt DENSO CORPORATION, dass der Funkanlagentyp der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.denso.com/global/en/contact-us/doc/ 07

zzcv01ai055b

Με την παρούσα ο/η DENSO CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: https://www.denso.com/global/en/contact-us/doc/ 08
Il fabbricante, DENSO CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://www.denso.com/global/en/contact-us/doc/ 09
Por la presente, DENSO CORPORATION declara que el tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.denso.com/global/en/contact-us/doc/ 10
O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: https://www.denso.com/global/en/contact-us/doc/ 11
B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: https://www.denso.com/global/en/contact-us/doc/ 12

zzcv01ai055c

Käesolevaga deklareerib DENSO CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://www.denso.com/global/en/contact-us/doc/ 13
DENSO CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: https://www.denso.com/global/en/contact-us/doc/ 14
DENSO CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: https://www.denso.com/global/en/contact-us/doc/ 15
Tímto DENSO CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: https://www.denso.com/global/en/contact-us/doc/ 16
DENSO CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: https://www.denso.com/global/en/contact-us/doc/ 17

zzcv01ai055d

Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.denso.com/global/en/contact-us/doc/ 18
Ar šo DENSO CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.com/global/en/contact-us/doc/ 19
DENSO CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ 20
Hér með lýsir DENSO CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ 21
DENSO CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ 22

zzcv01ai0859e

С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/ 23
Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: https://www.denso.com/global/en/contact-us/doc/ 24
DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: https://www.denso.com/global/en/contact-us/doc/ 25
Овиме, DENSO CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU. Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси: https://www.denso.com/global/en/contact-us/doc/ 26
Amb aquest document, DENSO CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE. El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet: https://www.denso.com/global/en/contact-us/doc/ 27

zzcv01ai0559

İşbu belge; DENSO CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder.
AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur:
https://www.denso.com/global/en/contact-us/doc/

28

Nepermjet kesaj, DENSO CORPORATION, deklaroj qe ky OGEU47 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.

29

CE The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:
https://www.denso.com/global/en/contact-us/doc/

30

zzcv01ai055g

Consumer Protection Law

מוצר : נתונים תקשורת מודול

סימן רשום : DENSO

ארץ ייצור : ראה מוצר

דגם : OGEU47

שנת ייצור : ראה מוצר

zzin1133068a


Hybrid system features

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

System components

■ System components

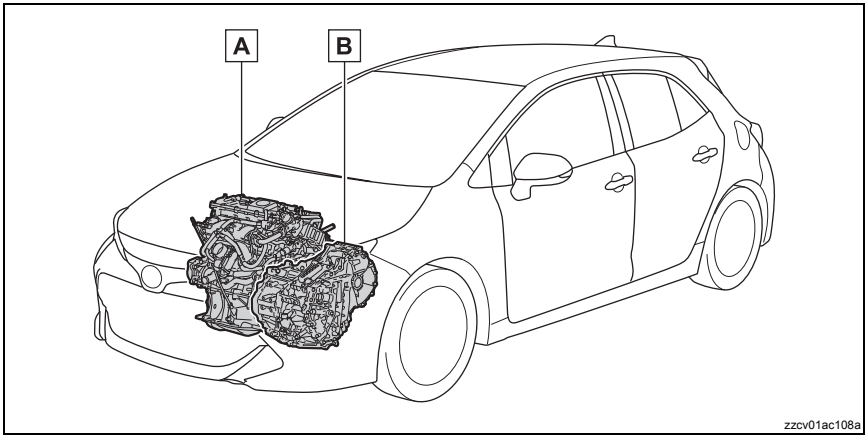

The illustration is an example for explanation and may differ from the actual item.

A Gasoline engine

B Electric motor (traction motor)

■ When stopped/during start off

The gasoline engine stops* when the vehicle is stopped. During start off, the electric motor (traction motor) drives the vehicle. At slow speeds or when traveling down a gentle slope, the engine is stopped* and the electric motor (traction motor) is used.

When the shift lever is in N, the hybrid battery (traction battery) is not being charged.

*: When the hybrid battery (traction battery) requires charging or the engine is warming up, etc., the gasoline engine will not automatically stop. (→P.87)

■ During normal driving

The gasoline engine is predominantly used. The electric motor (traction motor) charges the hybrid battery (traction battery) as necessary.

■ When accelerating sharply

When the accelerator pedal is depressed heavily, the power of the hybrid battery (traction battery) is added to that of the gasoline engine via the electric motor (traction motor).

■ When braking (regenerative braking)


The wheels operate the electric motor (traction motor) as a power generator, and the hybrid battery (traction battery) is charged.

■ Regenerative braking

- In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).
  - Vehicles without paddle shift switches: The accelerator pedal is released while driving with the shift lever in D or B.
  - Vehicles with paddle shift switches: The accelerator pedal is released while driving with the shift lever in D or S.
  - Vehicles without paddle shift switches: The brake pedal is depressed while driving with the shift lever in D or B.
  - Vehicles with paddle shift switches: The brake pedal is depressed while driving with the shift lever in D or S.
- Vehicles with GPF system: While the GPF system (→P.380) is operating to regenerate the exhaust gas filter, the hybrid battery (traction battery) may not be recharged.

■ EV indicator

The EV indicator comes on when the vehicle is driven using only the electric motor (traction motor) or the gasoline engine is stopped.

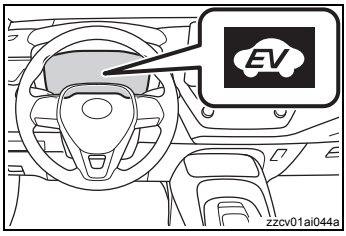

■ Conditions in which the gasoline engine may not stop

The gasoline engine starts and stops automatically. However, it may not stop automatically in the following conditions:

- During gasoline engine warm-up
- During hybrid battery (traction battery) charging
- When the temperature of the hybrid battery (traction battery) is high or low
- When the heater is switched on

Depending on the circumstances, the gasoline engine may also not stop automatically in other situations.

■ Charging the hybrid battery (traction battery)

As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery (traction battery) will slowly discharge. For this reason, be sure to drive the vehicle at least once every few months for at least 30 minutes or 16 km (10 miles). If the hybrid battery (traction battery) becomes fully discharged and you are unable to start the hybrid system, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Charging the 12-volt battery**

→P.587

■ **After the 12-volt battery has discharged or when the terminal has been removed and installed during exchange, etc.**

The gasoline engine may not stop even if the vehicle is being driven by the hybrid battery (traction battery). If this continues for a few days, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Sounds and vibrations specific to a hybrid vehicle**

There may be no engine sound or vibration even though the vehicle is able to move with the “READY” indicator is illuminated. For safety, apply the parking brake and make sure to shift the shift lever to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) under the rear seats when the hybrid system starts or stops.
- Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery), under the rear seats, when the hybrid system is started or stopped.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed or as the accelerator pedal is released.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vent on the side of the lower part of the rear right seat.

■ **Maintenance, repair, recycling, and disposal**

Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.

■ **Customization**

Some functions can be customized. (→P.610)


Hybrid system precautions

Take care when handling the hybrid system, as it is a high voltage system (about 600 V*1 or 650 V*2 at maximum) as well as contains parts that become extremely hot when the hybrid system is operating. Obey the warning labels attached to the vehicle.

*1: Vehicles with 2ZR-FXE engine

*2: Vehicles with M20A-FXS engine

System components

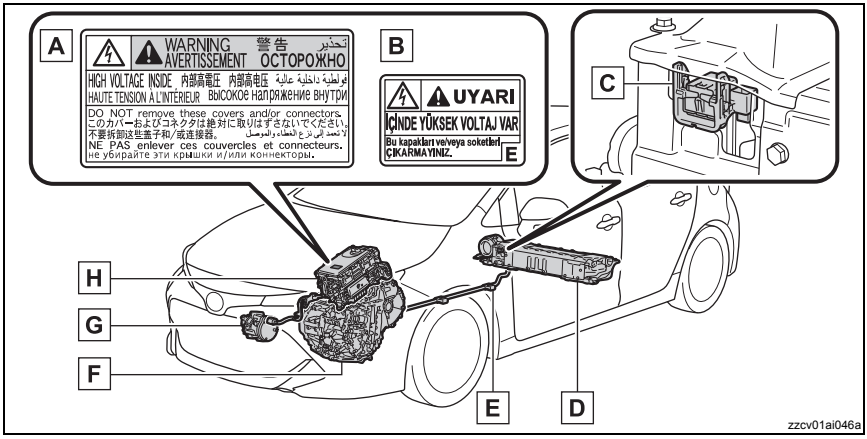

The illustration is an example for explanation and may differ from the actual item.

A Warning label

B For Turkey: Warning label

C Service plug

D Hybrid battery (traction battery)

E High voltage cables (orange)

F Electric motor (traction motor)

G Air conditioning compressor

H Power control unit

Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warn-

ing light (→P.545) go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The standard amount of fuel is about 7.6 L [2.0 gal., 1.7 Imp. gal.] when the vehicle is on a level surface. This value may vary when the vehicle is on a slope. Add extra fuel when the vehicle is inclined.)

Electromagnetic waves

- High voltage parts and cables on hybrid vehicles incorporate electromagnetic shielding, and therefore emit approximately the same amount of electromagnetic waves as conventional gasoline powered vehicles or home electronic appliances.
- Your vehicle may cause sound interference in some third party-produced radio parts.

Hybrid battery (traction battery)

The hybrid battery (traction battery) has a limited service life. The lifespan of the hybrid battery (traction battery) can change in accordance with driving style and driving conditions.

Declaration of conformity


This model conforms to hydrogen emissions according to regulation ECE100 (Battery electric vehicle safety).

WARNING

High voltage precautions

This vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.

- Never touch, disassemble, remove or replace the high voltage parts, cables or their connectors.
- The hybrid system will become hot after starting as the system uses high voltage. Be careful of both the high voltage and the high temperature, and always obey the warning labels attached to the vehicle.
- Never try to open the service plug access hole located under the right side of the rear seat. The service plug is used only when the vehicle is serviced and is subject to high voltage.

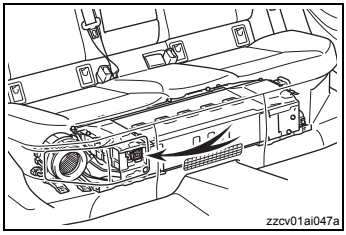

Road accident cautions

Observe the following precautions to reduce the risk of death or serious injury:

- Pull your vehicle off the road, apply the parking brake, shift the shift lever to P, and turn the hybrid system off.
- Do not touch the high voltage parts, cables and connectors.
- If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.
- M20A-FXS engine: If a fluid leak occurs, do not touch the fluid as it may be strong alkaline electrolyte from the hybrid battery (traction battery). If it comes into contact with your skin or eyes, wash it off immediately with a large amount of water or, if possible, boric acid solution. Seek immediate medical attention.

WARNING

- If a fire occurs in the hybrid vehicle, leave the vehicle as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.
- If your vehicle needs to be towed, do so with the front wheels raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause a fire. (→P.537)
- Carefully inspect the ground under the vehicle. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. Leave the vehicle as soon as possible.
- 2ZR-FXE engine: Do not touch the battery if liquid is leaking from or adhering to it. If electrolyte (carbonic-based organic electrolyte) from the hybrid battery (traction battery) comes into contact with the eyes or skin, it could cause blindness or skin wounds. In the unlikely event that it comes into contact with the eyes or skin, wash it off immediately with a large amount of water, and seek immediate medical attention.
- 2ZR-FXE engine: If electrolyte is leaking from the hybrid battery (traction battery), do not approach the vehicle. Even in the unlikely event that the hybrid battery (traction battery) is damaged, the internal construction of the battery will prevent a large amount of electrolyte from leaking out. However, any electrolyte that does leak out will give off a vapor. This vapor is an irritant to skin and eyes and could cause acute poisoning if inhaled.
- 2ZR-FXE engine: Do not bring burning or high-temperature items close to the electrolyte. The electrolyte may ignite and cause a fire.

■ Hybrid battery (traction battery)

- 2ZR-FXE engine: Your vehicle contains a sealed lithium-ion battery.
- Never resell, hand over or modify the hybrid battery. To prevent accidents, hybrid batteries that have been removed from a disposed vehicle are collected through any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Do not dispose of the battery yourself.

Unless the battery is properly collected, the following may occur, resulting in death or serious injury:

- The hybrid battery may be illegally disposed of or dumped, and it is hazardous to the environment or someone may touch a high voltage part, resulting in an electric shock.
- The hybrid battery is intended to be used exclusively with your hybrid vehicle. If the hybrid battery is used outside of your vehicle or modified in any way, accidents such as electric shock, heat generation, smoke generation, an explosion and electrolyte leakage may occur.

When reselling or handing over your vehicle, the possibility of an accident is extremely high because the person receiving the vehicle may not be aware of these dangers.

WARNING

- If your vehicle is disposed of without the hybrid battery having been removed, there is a danger of serious electric shock if high voltage parts, cables and their connectors are touched. In the event that your vehicle must be disposed of, the hybrid battery must be disposed of by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. If the hybrid battery is not disposed of properly, it may cause electric shock that can result in death or serious injury.


NOTICE

Hybrid battery (traction battery) air intake vent

Do not carry large amounts of water such as water cooler bottles in the vehicle. If water spills onto the hybrid battery (traction battery), the battery may be damaged. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Hybrid battery (traction battery) air intake vent

There is an air intake vent under the right side of the rear seat for the purpose of cooling the hybrid battery (traction battery). If the vent becomes blocked, the hybrid battery may overheat, charging/discharging of the hybrid battery (traction battery) may become limited.

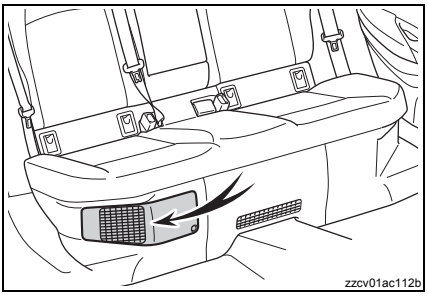

NOTICE

Hybrid battery (traction battery) air intake vent

- Make sure that the air intake vent is not blocked, such as by a seat cover, plastic cover, or luggage. If the vent is blocked, charging/discharging of the hybrid battery (traction battery) may become limited, possibly leading to a malfunction.
- Clean the air intake vent regularly to prevent the hybrid battery (traction battery) from overheating.
- Do not get water or foreign materials in the air intake vent as this may cause a short circuit and damage the hybrid battery (traction battery).
- A filter is installed to the air intake vent. When the filter remains noticeably dirty even after cleaning the air intake vent, filter cleaning or replacement is recommended. Refer to P.519 for details on how to clean the filters.

Emergency shut off system


When a certain level of impact is detected by the impact sensor, the emergency shut off system blocks the high voltage current and stops the fuel pump to minimize the risk of electrocution and fuel leakage. If the emergency shut off system acti-

vates, your vehicle will not restart. To restart the hybrid system, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

If a warning message is shown on the multi-information display, read the message and follow the instructions.

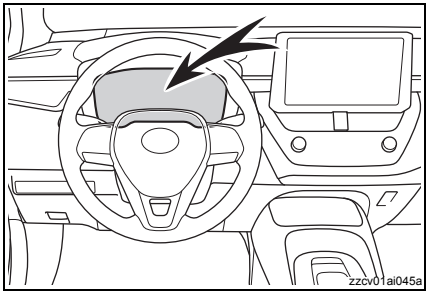

If a warning light comes on, a warning message is displayed, or the 12-volt battery is disconnected

The hybrid system may not start. In this case, try to start the system again. If the “READY” indicator does not come on, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


Immobilizer system

The vehicle's keys have built-in transponder chips that prevent the hybrid system from starting if a key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

This system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.

Operating the system

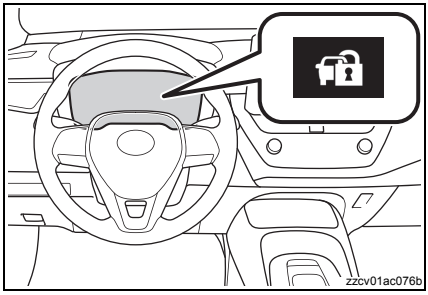

The indicator light flashes after the power switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the power switch has been turned to ACC or ON to indicate that the system has been canceled.

■ System maintenance

The vehicle has a maintenance-free type immobilizer system.

■ Conditions that may cause the system to malfunction

- If the grip portion of the key is in contact with a metallic object
- If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

Certifications for the engine immobilizer system

Transmitter: Model: TMLF18D-1 Operation frequency: 125 kHz Maximum output power (ERP): 0.41mW Manufacturer: TOYOTA MOTOR CORPORATION Address: 1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan
Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.denso.com/global/en/contact-us/doc/ 01
TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.denso.com/global/en/contact-us/doc/ 02
Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.denso.com/global/en/contact-us/doc/ 03
Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: https://www.denso.com/global/en/contact-us/doc/ 04

zzcv03ai053a

Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://www.denso.com/global/en/contact-us/doc/ 05
Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www.denso.com/global/en/contact-us/doc/ 06
Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.denso.com/global/en/contact-us/doc/ 07
Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: https://www.denso.com/global/en/contact-us/doc/ 08
Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://www.denso.com/global/en/contact-us/doc/ 09

zzcv03ai0535b

Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.denso.com/global/en/contact-us/doc/ 10
O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: https://www.denso.com/global/en/contact-us/doc/ 11
B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: https://www.denso.com/global/en/contact-us/doc/ 12
Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://www.denso.com/global/en/contact-us/doc/ 13
TOYOTA MOTOR CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: https://www.denso.com/global/en/contact-us/doc/ 14

zzcv03ai053c

TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ.
Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
https://www.denso.com/global/en/contact-us/doc/

15

Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU.
Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
https://www.denso.com/global/en/contact-us/doc/

16

TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU.
Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
https://www.denso.com/global/en/contact-us/doc/

17

Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES.
Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
https://www.denso.com/global/en/contact-us/doc/

18

Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES.
Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
https://www.denso.com/global/en/contact-us/doc/

19

zzcv03ai053d

TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE.
Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
https://www.denso.com/global/en/contact-us/doc/

20

Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.
Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð:
https://www.denso.com/global/en/contact-us/doc/

21

TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU.
Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:
https://www.denso.com/global/en/contact-us/doc/

22

С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/ЕС.
Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
https://www.denso.com/global/en/contact-us/doc/

23

Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE.
Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
https://www.denso.com/global/en/contact-us/doc/

24

zzcv03ai053e

TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
https://www.denso.com/global/en/contact-us/doc/

25

Ovim, TOYOTA MOTOR CORPORATION, izjavljuje da ovaj TMLF18D-1 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.

26

Ovim, TOYOTA MOTOR CORPORATION, deklariše da je TMLF18D-1 u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 1999/5/EC.

27

Nepermjet kesaj, TOYOTA MOTOR CORPORATION, deklaroj qe ky TMLF18D-1 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.

28

CE

The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:
https://www.denso.com/global/en/contact-us/doc/

zzcv03ai053

טויוטה מוטור אירופה נו\סא, שדרות דו בורגט 60-1140 בריסל,

בלגיה www.toyota-europe.com

מוצר	: מתנד חכם LF
סימן רשום	: TOYOTA
ארץ ייצור	: ראה מוצר
דגם	: TMLF18D-1
שנת ייצור	: ראה מוצר

zzcv03ai054a

NOTICE

■ To ensure the system operates correctly


Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Double locking system*

*: If equipped

Unauthorized access to the vehicle is prevented by disabling the door unlocking function from both the interior and exterior of the vehicle.

Vehicles employing this system have labels on the window glass of both front doors.

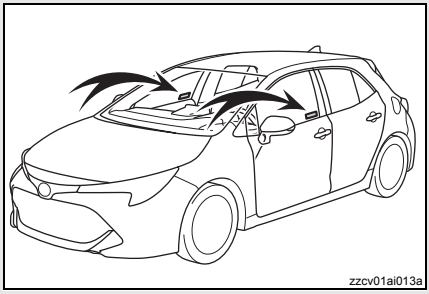

Setting/canceling the double locking system

■ Setting

Turn the power switch off, have all the passengers exit the vehicle and ensure that all the doors are closed.

Using the entry function (vehicles with a smart entry & start system): Touch the sensor area on the outside door handle twice within 5 seconds.

Using the wireless remote control:

Press twice within 5 seconds.

■ Canceling

Using the entry function (vehicles

with a smart entry & start system): Hold the outside door handle, press the back door opener switch or move your foot under the center of the rear bumper (vehicles with a power back door).

Using the wireless remote control:

Press .

WARNING

■ Double locking system precaution

Never activate the double locking system when there are people in the vehicle because all the doors cannot be opened from inside the vehicle.

Alarm*

*: If equipped

The alarm uses light and sound to give an alert when an intrusion is detected.
The alarm is triggered in the following situations when the alarm is set:

- A locked door is unlocked or opened in any way other than using the entry function (if equipped) or wireless remote control. (The doors will lock again automatically.)
- The hood is opened.
- The intrusion sensor detects something moving inside the vehicle. (Example: an intruder breaks a window and gets into the vehicle.)
- Hatchback: The rear window is broken.
  Wagon: The rear quarter windows or rear window are broken.

Setting/canceling/stopping the alarm system

■ Items to check before locking the vehicle

To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:

- Nobody is in the vehicle.
- The windows and panoramic


moon roof (if equipped) are closed before the alarm is set.

- No valuables or other personal items are left in the vehicle.

■ Setting

Close the door and hood, and lock all the doors using the entry function (if equipped) or wireless remote control. The system will set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

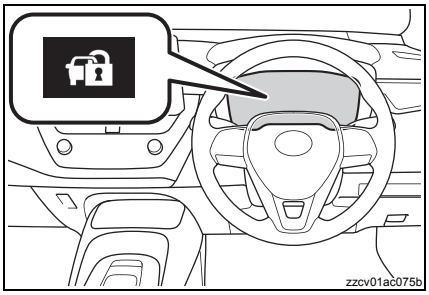

■ Canceling or stopping

Do one of the following to deactivate or stop the alarms:

- Unlock the doors using the entry function (if equipped) or wireless remote control.
- Starting the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)


■ System maintenance

The vehicle has a maintenance-free type alarm system.


■ Triggering of the alarm

The alarm may be triggered in the following situations:
(Stopping the alarm deactivates the alarm system.)

- The doors are unlocked using the mechanical key.

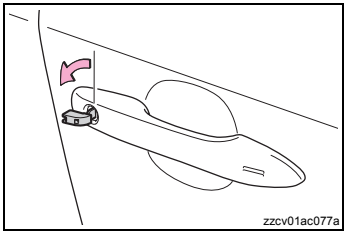


- A person inside the vehicle opens a door or hood, or unlocks the vehicle.

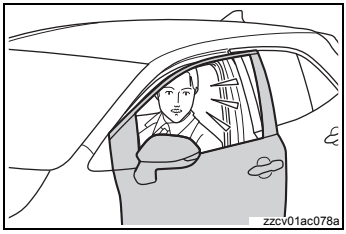


- The 12-volt battery is recharged or replaced when the vehicle is locked. (→P.587)


▶ 2ZR-FXE engine

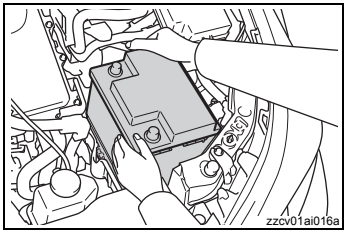

▶ M20A-FXS engine (hatchback)

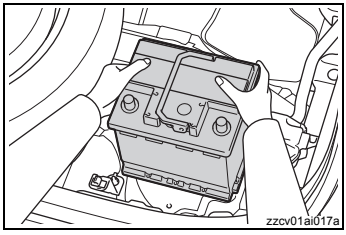

▶ M20A-FXS engine (wagon)

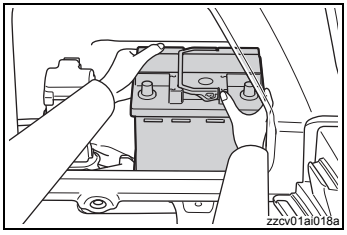

■ Alarm-operated door lock

In the following cases, depending on the situation, the door may automatically lock to prevent improper entry into the vehicle:

- When a person remaining in the vehicle unlocks the door and the alarm is activated.
- While the alarm is activated, a person remaining in the vehicle unlocks the door.
- When recharging or replacing the 12-volt battery

NOTICE

■ To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

The intrusion sensor detection

■ The intrusion sensor detection

The intrusion sensor detects intruders or movement in the vehicle.

This system is designed to deter and prevent vehicle theft but does not guarantee absolute security against all intrusions.

■ Setting the intrusion sensor

The intrusion sensor will be set automatically when the alarm is set. (→P.103)


■ Canceling the intrusion sensor

If you are leaving pets or other moving things inside the vehicle, make sure to disable the intrusion sensor before setting the alarm, as they will respond to movement inside the vehicle.

1. Turn the power switch off.
2. Press the intrusion sensor cancel switch.

Press the switch again to re-enable the intrusion sensor.

Each time the intrusion sensor is canceled/set, a message will be shown on the multi-information display.

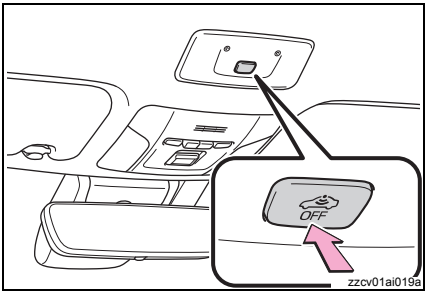


■ Canceling and automatic re-enabling of the intrusion sensor

- The alarm will still be set even when the intrusion sensor is canceled.
- After the intrusion sensor is canceled, pressing the power switch or unlocking the doors using the entry function (if equipped) or wireless remote control will re-enable the intrusion sensor.
- The intrusion sensor will automatically be re-enabled when the alarm system is deactivated.

Intrusion sensor detection considerations

The sensor may trigger the alarm in the following situations:


- People or pets are in the vehicle.

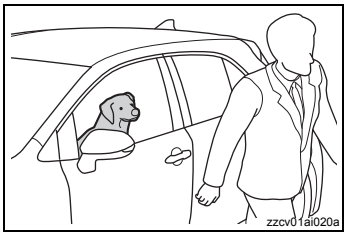


- A window or panoramic moon roof (if equipped) is open.

In this case, the sensor may detect the following:


- Wind or the movement of objects such as leaves and insects inside the vehicle
- Ultrasonic waves emitted from devices such as the intrusion sensors of other vehicles
- The movement of people outside the vehicle

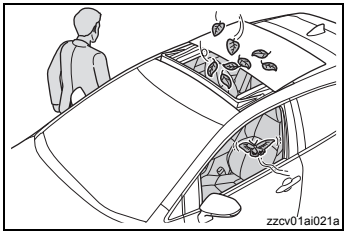


- Small insects such as moths or flies are in the vehicle.
- Unstable items, such as dangling accessories or clothes hanging on the coat hooks, are in the vehicle.

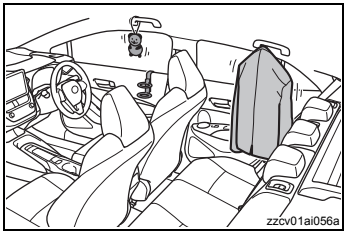

- The vehicle is parked in a place where extreme vibrations or noises occur, such as in a parking garage.

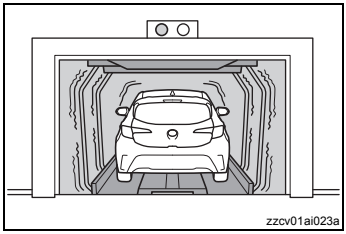

- Ice or snow is removed from the vehicle, causing the vehicle to receive repeated impacts or vibrations.

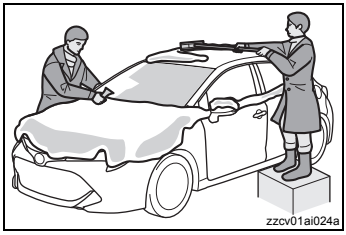


- The vehicle is inside an automatic or high-pressure car wash.
- The vehicle experiences impacts, such as hail, lightning strikes, and other kinds of repeated impacts or vibrations.

NOTICE


To ensure the intrusion sensor function correctly

- To ensure that the sensors operate properly, do not touch or cover them.

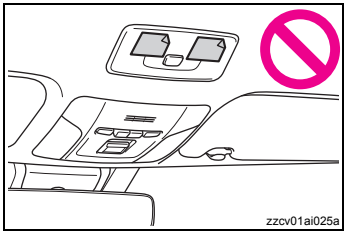

NOTICE

- Do not spray air fresheners or other products directly into the sensor holes.

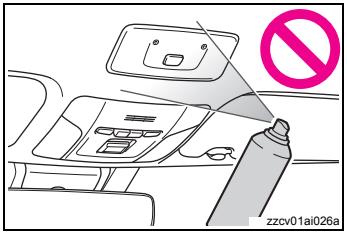

- Installing accessories other than genuine Toyota parts or leaving objects between the driver's seat and front passenger's seat may reduce the detection performance.

2-1. Instrument cluster

Warning lights and indicators 108

Gauges and meters (4.2-inch display) 113

Gauges and meters (7-inch display) 117

Multi-information display ...123

Head-up display 131

Energy monitor/consumption screen 135


Warning lights and indicators

The warning lights and indicators on the instrument cluster, center panel and outside rear view mirrors inform the driver of the status of the vehicle's various systems.

Warning lights and indicators displayed on the instrument cluster


For the purpose of explanation, the following illustrations display all warning lights and indicators illuminated.

▶ 4.2-inch display

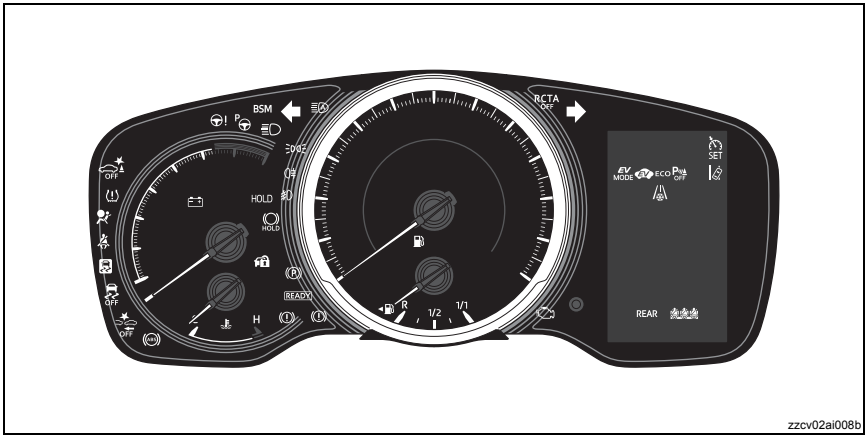


zzcv02ai008b

▶ 7-inch display (when analog speedometer is displayed)

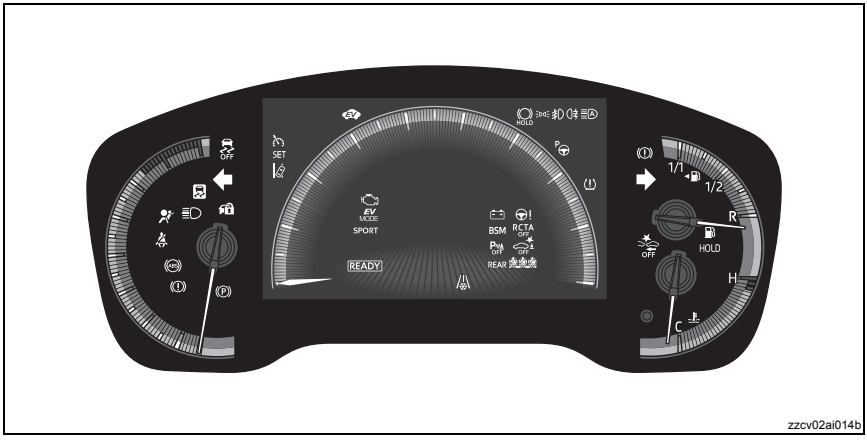


zzcv02ai014b

▶ 7-inch display (when digital speedometer is displayed)

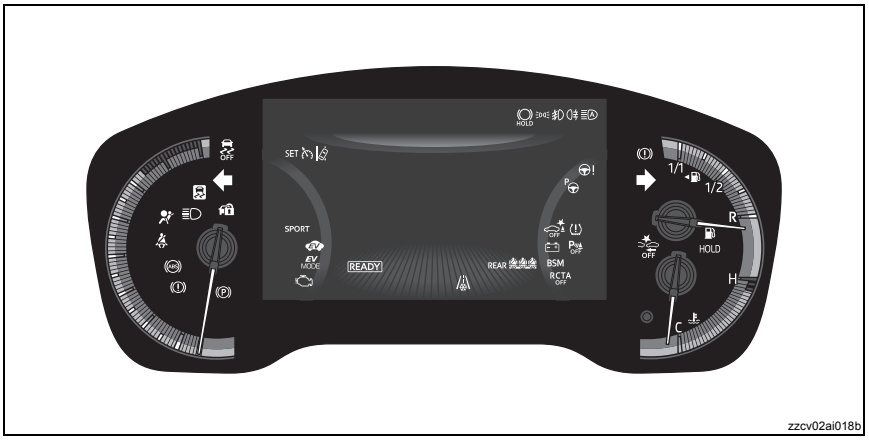

▶ 7-inch display (when digital+ speedometer is displayed) (if equipped)

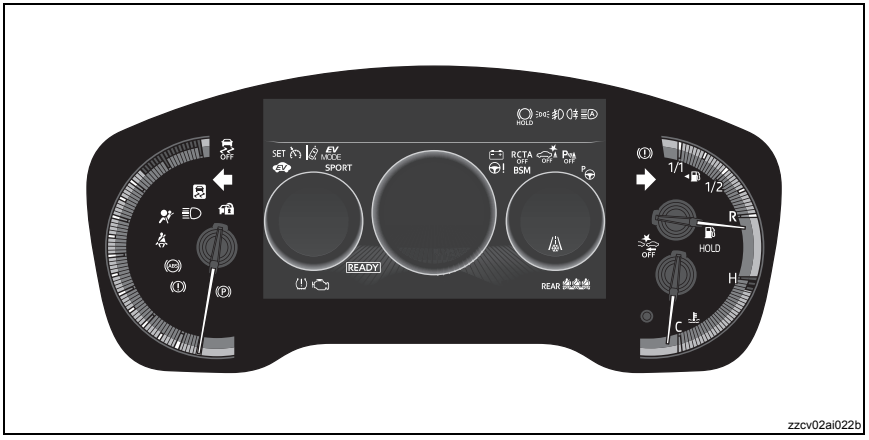

Warning lights

Warning lights inform the driver of malfunctions in the indicated vehicle's systems.



(Red) Brake system warning light*1 (→P.542)



(Yellow) Brake system warning light*1 (→P.542)



High coolant temperature warning light*2 (→P.542)



Hybrid system overheat warning light*2 (→P.543)



Charging system warning light*1 (→P.543)



Low engine oil pressure warning light*2 (→P.543)



Malfunction indicator lamp*1 (→P.543)


SRS warning light[*1] (→P.544)


ABS warning light[*1] (→P.544)


Brake Override System warning light/Drive-Start Control warning light[*2] (→P.544)


Electric power steering system warning light[*1] (→P.545) (Red)


Electric power steering system warning light[*1] (→P.545) (Yellow)


Low fuel level warning light (→P.545)


Driver's and front passenger's seat belt reminder light (→P.545)



Rear passengers' seat belt reminder lights (→P.545)


Tire pressure warning light[*1] (if equipped) (→P.546)


LTA indicator (if equipped) (→P.546) (Orange)


Toyota parking assist-sensor OFF indicator[*1] (if equipped) (→P.546) (Flashes)


RCTA OFF indicator[*1] (if equipped) (→P.548) (Flashes)


PKSB OFF indicator[*1] (if equipped) (→P.547) (Flashes)


PCS warning light[*1] (if equipped) (→P.548) (Flashes or illuminates)


Slip indicator[*1] (→P.548)


Parking brake indicator (→P.548) (Flashes)



Brake hold operated indicator[*1] (→P.549) (Flashes)

[*1]: These lights come on when the power switch is turned to ON to indicate that a system check is being performed. They will turn off after the hybrid system is started, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

[*2]: This light illuminates on the multi-information display.

WARNING

■ If a safety system warning light does not come on

Should a safety system light such as the ABS and SRS warning light not come on when you start the hybrid system, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately if this occurs.

Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.


Turn signal indicator (→P.243)


Tail light indicator (→P.249)


Headlight high beam indicator (→P.250)


Adaptive High-beam System indicator (if equipped) (→P.255)

Automatic High Beam indicator (if equipped) (→P.252)


Front fog light indicator (if equipped) (→P.258)


Rear fog light indicator (if equipped) (→P.258)


PCS warning light[*1, 2] (if equipped) (→P.280)


Cruise control indicator (if equipped) (→P.295, 306)


Dynamic radar cruise control indicator (if equipped) (→P.295)


Cruise control “SET” indicator (if equipped) (→P.295, 306)


LTA indicator (if equipped) (→P.291)
*3


BSM outside rear view mirror indicators[*4, 5, 6] (if equipped) (→P.315)


BSM indicator (if equipped) (→P.315)


Toyota parking assist-sensor OFF indicator[*1, 2] (if equipped) (→P.324)


RCTA OFF indicator[*1, 2] (if equipped) (→P.332)


PKSB OFF indicator[*1, 2] (if equipped) (→P.337)


Speed limiter indicator (if equipped) (→P.308)


S-IPA indicator[*1] (if equipped) (→P.354)


Slip indicator[*1] (→P.382)
(Flashes)


VSC OFF indicator[*1, 2] (→P.382)


Smart entry & start system indicator[*7] (→P.230)


“READY” indicator (→P.230)


EV drive mode indicator (→P.234)


Parking brake indicator (→P.243)


Brake hold standby indicator[*1] (→P.246)


Brake hold operated indicator[*1] (→P.246)


EV indicator (→P.87)


Low outside temperature indicator[*8] (→P.113, 117)


Security indicator (→P.94, 103)


“PASSENGER AIR BAG” indicator[*1, 9] (→P.46)


Eco drive mode indicator (→P.378)


Sport mode indicator (if equipped) (→P.378)


Custom mode indicator (if equipped) (→P.378)


Comfort mode indicator (if equipped) (→P.378)



Sport S mode indicator (if equipped) (→P.378)



Sport S+ mode indicator (if equipped) (→P.378)

*1: These lights come on when the power switch is turned to ON to indicate that a system check is being performed. They will turn off after the hybrid system is started, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*2: This light comes on when the system is turned off.

*3: Depending on the operating condition, the color and illuminating/flashing state of the light change.

*4: Vehicles without RCTA function:

In order to confirm operation, the BSM outside rear view mirror indicators illuminate in the following situations:

- When the power switch is in ON, the BSM function is enabled on  of the multi-information display.
- When the BSM function is enabled on  of the multi-information display, the power switch is in ON.

If the system is functioning correctly, the BSM outside rear view mirror indicators will turn off after a few seconds.

If the BSM outside rear view mirror indicators do not illuminate or do not turn off, there may be a malfunction in the system. If this occurs, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*5: Vehicles with RCTA function:

These lights come on when the power switch is turned to ON to indicate that a system check is being performed. They will turn off after the hybrid system is started, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*6: This light illuminates on the outside rear view mirrors.

*7: This light illuminates on the multi-information display.


*8: When the outside temperature is approximately 3°C (37°F) or lower, this indicator will flash for approximately 10 seconds, then stay on.

*9: This light illuminates on the center panel.

Gauges and meters (4.2-inch display)

Meter display

■ Locations of gauges and meters

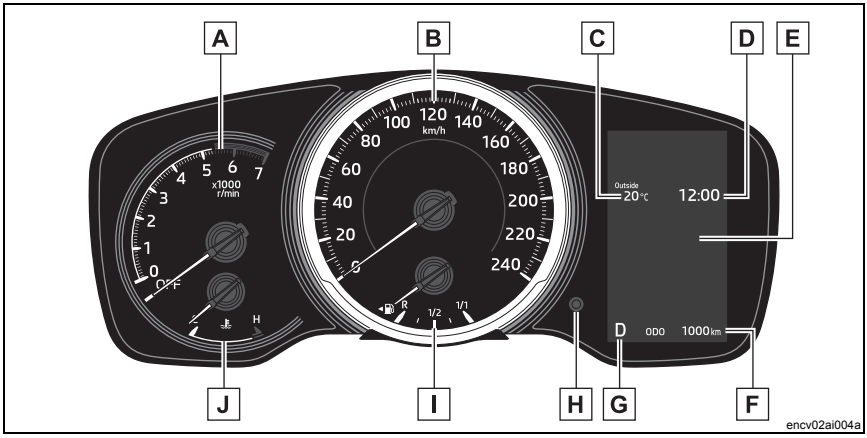

The units of measure may differ depending on the intended destination of the vehicle.

A Tachometer

Displays the engine speed in revolutions per minute

B Speedometer

C Outside temperature

Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F)

D Clock (→P.115)

E Multi-information display

Presents the driver with a variety of vehicle data (→P.123)
Displays warning messages if a malfunction occurs (→P.551)

F Odometer and trip meter display (→P.114)

G Shift position indicator (→P.236)

H Display change button (→P.114)

I Fuel gauge

Displays the quantity of fuel remaining in the tank

J Engine coolant temperature gauge

Displays the engine coolant temperature

■ Engine speed

On hybrid vehicles, engine speed is precisely controlled in order to help improve fuel efficiency and reduce exhaust emissions etc.
There are times when the engine speed that is displayed may differ even when vehicle operation and driving conditions are the same.

■ Outside temperature display

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:
  - When stopped, or driving at low speeds (less than 25 km/h [16 mph])
  - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ Liquid crystal display

→P.124

WARNING

■ The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

NOTICE


■ To prevent damage to the engine and its components

- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P.590)

Odometer and trip meter display

■ Changing the display

Press the display change button until the desired item is displayed.

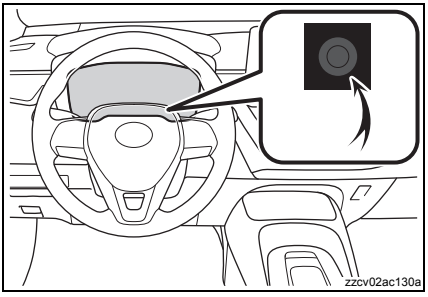

■ Display items

- Odometer

Displays the total distance the vehicle has been driven.

- Trip meter A/Trip meter B

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

To reset, display the desired trip meter

and press and hold the display change button.

● Instrument panel light control

Displays the instrument panel light control display.

- The brightness of the instrument panel lights can be adjusted separately for when the tail lights are on and off.
- To adjust the brightness, display the instrument panel light control display and press and hold the display change button.

Adjusting the clock (vehicles without navigation/multimedia system)

■ Adjusting the minute to “00”

1 Press ❮ or ❯ to select ⚙ of the multi-information display.

2 Press ∧ or ∨ to select “Clock : 00”.

Press the OK to set the clock to the beginning of the nearest hour.

e.g.

1:00 to 1:29 → 1:00

1:30 to 1:59 → 2:00

■ Changing the clock

1 Press ❮ or ❯ to select ⚙ of the multi-information display.

2 Press ∧ or ∨ to select “Clock : 00”.

3 Press and hold the OK .

4 Press ❮ or ❯ to select an item to be changed.

5 Press ∧ or ∨ to change the setting.

The following can be changed:

● 12-hour/24-hour format

● Hour

● Minute

Adjusting the clock (vehicles with navigation/multimedia system)

■ Clock adjustment

The clocks on the following can be adjusted on the audio system screen.

● Multi-information display

● Audio system screen

■ Setting the clock to be adjusted automatically by GPS

1 Press the “MENU” button.

2 Select “Setup” on the “Menu” screen.

3 Select “General” on the “Setup” screen.

4 Select “Clock”.

5 Select “Auto adjust by GPS” to set to on.

■ Adjusting the clock manually

1 Press the “MENU” button.

2 Select “Setup” on the “Menu” screen.

3 Select “General” on the “Setup” screen.

4 Select “Clock”.

5 Select “Auto adjust by GPS” to set to off.

6 Adjust the displayed time.

- Hour: Select “-” or “+” of “Hours” to adjust the hour.
- Minute: Select “-” or “+” of “Minutes” to adjust the minute.
- “:00”: Select to set the clock to the beginning of the nearest hour.

e.g.

1:00 to 1:29 → 1:00

1:30 to 1:59 → 2:00

■ Setting the time zone

1 Press the “MENU” button.

2 Select “Setup” on the “Menu” screen.

3 Select “General” on the “Setup” screen.

4 Select “Clock”.

5 Select “Time zone”.

Select the desired time zone.

■ Setting daylight saving time

1 Press the “MENU” button.

2 Select “Setup” on the “Menu” screen.

3 Select “General” on the “Setup” screen.

4 Select “Clock”.

5 Select “Daylight saving time” then on/off.

■ Changing the clock between 12-hour/24-hour format

1 Press the “MENU” button.

2 Select “Setup” on the “Menu” screen.

3 Select “General” on the “Setup” screen.

4 Select “Clock”.

5 Select “24-Hour time format” and then on/off.

When set to off, the clock is displayed in 12 hour time format.

■ Clock settings screen (vehicles with navigation/multimedia system)


If “Clock : 00” is displayed when  is selected on the multi-information display, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Gauges and meters (7-inch display)

Meter display

■ Locations of gauges and meters

▶ Analog speedometer

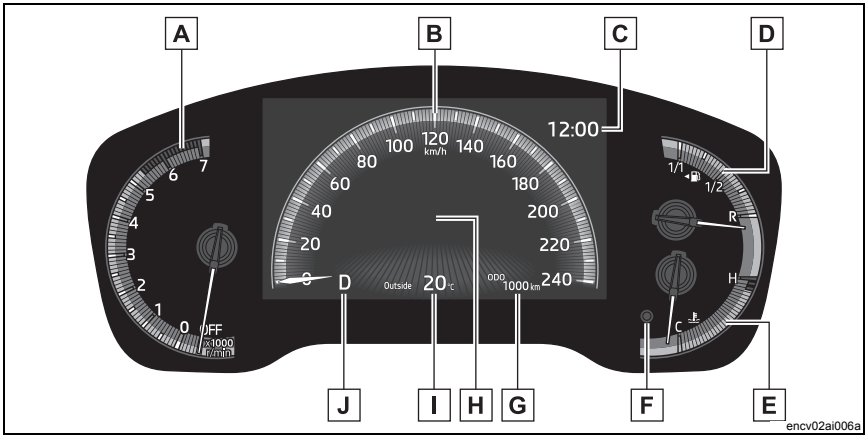

The units of measure may differ depending on the intended destination of the vehicle.

A Tachometer

Displays the engine speed in revolutions per minute

B Speedometer

C Clock (→P.121)

D Fuel gauge

Displays the quantity of fuel remaining in the tank

E Engine coolant temperature gauge

Displays the engine coolant temperature

F Display change button (→P.120)

G Odometer and trip meter display (→P.120)

H Multi-information display


Presents the driver with a variety of vehicle data (→P.123)
Displays warning messages if a malfunction occurs (→P.551)

I Outside temperature

Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F)

J Shift position indicator (→P.236)

▶ Digital speedometer

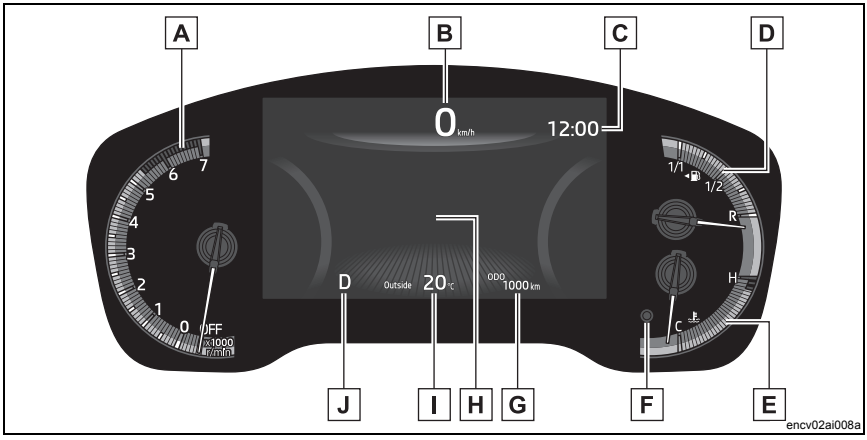

The units of measure may differ depending on the intended destination of the vehicle.

A Tachometer

Displays the engine speed in revolutions per minute

B Speedometer

C Clock (→P.121)

D Fuel gauge

Displays the quantity of fuel remaining in the tank

E Engine coolant temperature gauge

Displays the engine coolant temperature

F Display change button (→P.120)

G Odometer and trip meter display (→P.120)

H Multi-information display


Presents the driver with a variety of vehicle data (→P.123)
Displays warning messages if a malfunction occurs (→P.551)

I Outside temperature

Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F)

J Shift position indicator (→P.236)

▶ Digital+ speedometer (if equipped)

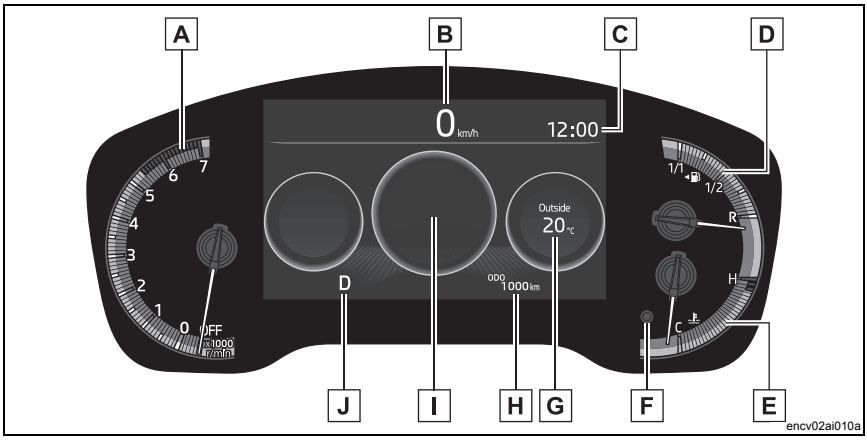

The units of measure may differ depending on the intended destination of the vehicle.

A Tachometer

Displays the engine speed in revolutions per minute

B Speedometer

C Clock (→P.121)

D Fuel gauge

Displays the quantity of fuel remaining in the tank

E Engine coolant temperature gauge

Displays the engine coolant temperature

F Display change button (→P.120)

G Outside temperature

Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F)

H Odometer and trip meter display (→P.120)

I Multi-information display

Presents the driver with a variety of vehicle data (→P.123)
Displays warning messages if a malfunction occurs (→P.551)

J Shift position indicator (→P.236)

■ Engine speed

On hybrid vehicles, engine speed is precisely controlled in order to help improve fuel efficiency and reduce exhaust emissions etc.
There are times when the engine speed that is displayed may differ even when vehicle operation and driving conditions are the same.

Outside temperature display

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:
  - When stopped, or driving at low speeds (less than 25 km/h [16 mph])
  - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Liquid crystal display

→P.124

Customization

The gauges and meters can be customized in  of the multi-information display. (→P.129)

WARNING

The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

NOTICE


To prevent damage to the engine and its components

- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P.590)

Odometer and trip meter display

Changing the display

Press the display change button until the desired item is displayed.

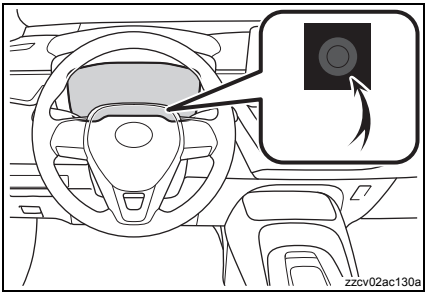

Display items

- Odometer

Displays the total distance the vehicle has been driven.

- Trip meter A/Trip meter B

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

To reset, display the desired trip meter

and press and hold the display change button.

- Instrument panel light control

Displays the instrument panel light control display.

- The brightness of the instrument panel lights can be adjusted separately for when the tail lights are on and off.
- To adjust the brightness, display the instrument panel light control display and press and hold the display change button.

Adjusting the clock (vehicles without navigation/multimedia system)

■ Adjusting the minute to “00”

1 Press ❮ or ❯ to select ⚙ of the multi-information display.

2 Press ∧ or ∨ to select “Clock : 00”.

Press the OK to set the clock to the beginning of the nearest hour.

e.g.

1:00 to 1:29 → 1:00

1:30 to 1:59 → 2:00

■ Changing the clock

1 Press ❮ or ❯ to select ⚙ of the multi-information display.

2 Press ∧ or ∨ to select “Clock : 00”.

3 Press and hold the OK .

4 Press ❮ or ❯ to select an item to be changed.

5 Press ∧ or ∨ to change the setting.

The following can be changed:

- 12-hour/24-hour format
- Hour
- Minute

Adjusting the clock (vehicles with navigation/multimedia system)

■ Clock adjustment

The clocks on the following can be adjusted on the audio system screen.

- Multi-information display
- Audio system screen

■ Setting the clock to be adjusted automatically by GPS

1 Press the “MENU” button.

2 Select “Setup” on the “Menu” screen.

3 Select “General” on the “Setup” screen.

4 Select “Clock”.

5 Select “Auto adjust by GPS” to set to on.

■ Adjusting the clock manually

1 Press the “MENU” button.

2 Select “Setup” on the “Menu” screen.

3 Select “General” on the “Setup” screen.

4 Select “Clock”.

5 Select “Auto adjust by GPS” to set to off.

6 Adjust the displayed time.

- Hour: Select “-” or “+” of “Hours” to adjust the hour.
- Minute: Select “-” or “+” of “Minutes” to adjust the minute.
- “:00”: Select to set the clock to the beginning of the nearest hour.

e.g.

1:00 to 1:29 → 1:00

1:30 to 1:59 → 2:00

■ Setting the time zone

1 Press the “MENU” button.

2 Select “Setup” on the “Menu” screen.

3 Select “General” on the “Setup” screen.

4 Select “Clock”.

5 Select “Time zone”.

Select the desired time zone.

■ Setting daylight saving time

1 Press the “MENU” button.

2 Select “Setup” on the “Menu” screen.

3 Select “General” on the “Setup” screen.

4 Select “Clock”.

5 Select “Daylight saving time” then on/off.

■ Changing the clock between 12-hour/24-hour format

1 Press the “MENU” button.

2 Select “Setup” on the “Menu” screen.

3 Select “General” on the “Setup” screen.

4 Select “Clock”.

5 Select “24-Hour time format” and then on/off.

When set to off, the clock is displayed in 12 hour time format.

■ Clock settings screen (vehicles with navigation/multimedia system)


If “Clock : 00” is displayed when  is selected on the multi-information display, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Multi-information display

Display and menu icons

■ Display

▶ 4.2-inch display

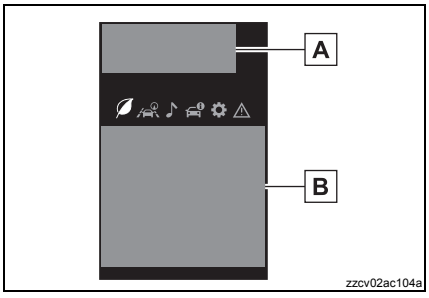

A Driving support system status display area

Displays an image when the following systems are operating and a menu icon other than  is selected:


- LTA (Lane Tracing Assist) (if equipped)
- Cruise control (if equipped)
- Dynamic radar cruise control with full-speed range (if equipped)
- RSA (Road Sign Assist) (if equipped) (→P.311)

B Content display area

By selecting menu icons on the multi-information display, a variety of driving-related information can be displayed. The multi-information display can also be used to change display settings and other vehicle settings.

Warning or advice pop-up displays are also displayed in certain situations.

▶ 7-inch display

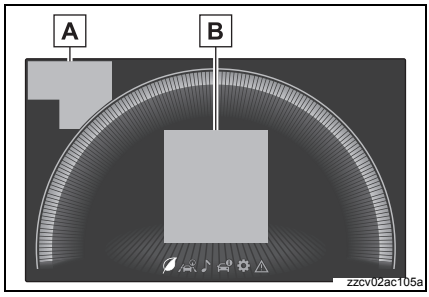

A Driving support system status display area

Displays an image when the following systems are operating and a menu icon other than  is selected:

- LTA (Lane Tracing Assist) (if equipped)
- Cruise control (if equipped)
- Dynamic radar cruise control with full-speed range (if equipped)
- RSA (Road Sign Assist) (if equipped) (→P.311)

B Content display area

By selecting menu icons on the multi-information display, a variety of driving-related information can be displayed. The multi-information display can also be used to change display settings and other vehicle settings.

Warning or advice pop-up displays are also displayed in certain situations.

■ Menu icons

The menu icons will be displayed by pressing the ❮ or ❯ meter control switch.



Driving information display (→P.124)



Driving support system information display (if equipped) (→P.128)



Audio system-linked display (if equipped) (→P.128)



Vehicle information display (→P.128)



Settings display (→P.129)



Warning message display (→P.551)

■ Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

⚠ WARNING

■ Caution for use while driving


- When operating the multi-information display while driving, pay extra attention to the safety of the area around the vehicle.
- Do not look continuously at the multi-information display while driving as you may fail to see pedestrians, objects on the road, etc. ahead of the vehicle.

■ The information display at low temperatures

→P.114, 120

Changing the meter display

The multi-information display is operated using the meter control switches.

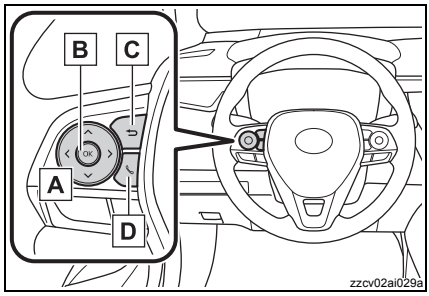

A ❮ / ❯ : Select menu icons

∧ / ∨ : Change displayed content, scroll up/down the screen and move the cursor up/down

B Press: Enter/Set
Press and hold: Reset/Display customizable items

C Return to the previous screen

D Call sending/receiving and history display

Linked with the hands-free system, sending or receiving call is displayed. For details regarding the hands-free system, refer to the “Navigation and multimedia system Owner’s manual”.

Content of driving information

■ Display items

- Speedometer display/Driving range (4.2-inch display)
- Fuel economy
- Hybrid System Indicator/ECO Accelerator Guidance/Eco score

■ Speedometer display/Driving range (4.2-inch display)

- Speedometer display

● Driving range

Displays driving range with remaining fuel. Use the displayed values as a reference only.


This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.

When only a small amount of fuel is added to the tank, the display may not be updated.
When refueling, turn the power switch off. If the vehicle is refueled without turning the power switch off, the display may not be updated.

■ **Fuel economy**

Use the displayed values as a reference only.

▶ Except for digital+ speedometer

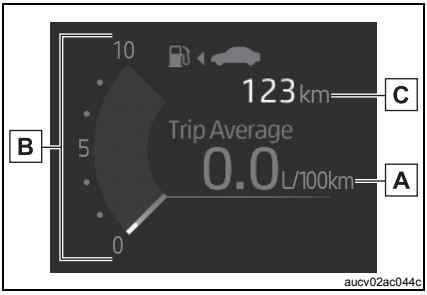

A Average fuel economy (after reset)

To reset the average fuel economy display, press and hold the OK meter control switch.

B Current fuel consumption

Displays instantaneous current fuel consumption.


C Driving range

Displays driving range with remaining fuel.

This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.

When only a small amount of fuel is added to the tank, the display may not be updated.
When refueling, turn the power switch off. If the vehicle is refueled without turning the power switch off, the display may not be updated.

▶ For digital+ speedometer

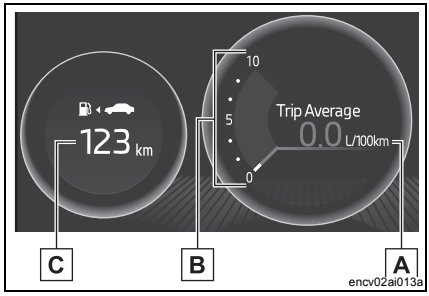

A Average fuel economy (after reset)

To reset the average fuel economy display, press and hold the OK meter control switch.

B Current fuel consumption

Displays instantaneous current fuel consumption.

C Driving range

Displays driving range with remaining fuel.

This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.

When only a small amount of fuel is added to the tank, the display may not

be updated.
When refueling, turn the power switch off. If the vehicle is refueled without turning the power switch off, the display may not be updated.

The average fuel economy display can be changed in . (→P.129)


- Average fuel economy (after start)

Displays the average fuel consumption since hybrid system start.

- Average fuel economy (after refuel)

Displays the average fuel consumption since the vehicle was refueled.

Hybrid System Indicator/ECO Accelerator Guidance/Eco score

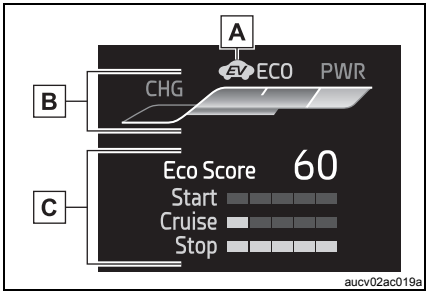


A EV indicator (→P.87)

B Hybrid System Indicator/ECO Accelerator Guidance

C Eco score

- Hybrid System Indicator

Displays hybrid system output or regeneration level.

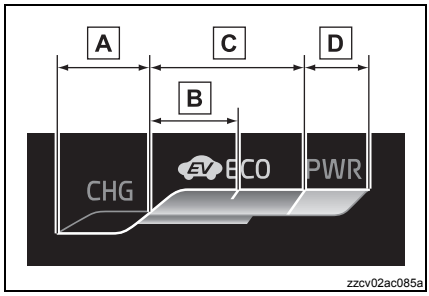

A Charge area

Shows regeneration* status.

Regenerated energy will be used to charge the hybrid battery (traction battery).

B Hybrid Eco area

Shows that gasoline engine power is not being used very often.

The gasoline engine will automatically stop and restart under various conditions.

C Eco area

Shows that the vehicle is being driven in an Eco-friendly manner.


By keeping the bar display within Eco area, more Eco-friendly driving can be achieved.

D Power area

Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

*: When used in this manual, regeneration refers to the conversion of energy created by the movement of the vehicle into electrical energy.

- ECO Accelerator Guidance

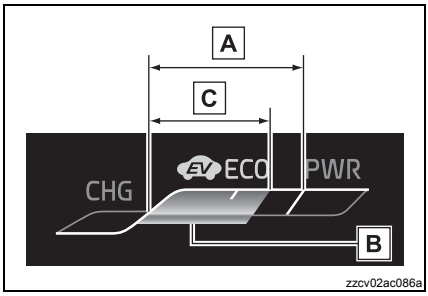

A Eco area

Indicates that the vehicle is being driven in an Eco-friendly manner.

B Zone of Eco acceleration

Displayed as a blue bar, and represents an estimated suitable accelerator pedal operation range for the current driving conditions, such as starting off or cruising.

This display changes according to situation, such as when starting off or cruising.


C Current accelerator pedal operation

Displayed as a green bar when within the Eco area.

Eco-friendly acceleration can be achieved by keeping the accelerator pedal operation display within the range indicated by the blue bar. (→P.217)

● Eco score

The following 3 Eco driving methods are evaluated in 5 levels: Smooth start-off acceleration, driving without sudden acceleration, and smooth stopping. When the vehicle is stopped, an Eco score out of 100 points will be displayed.

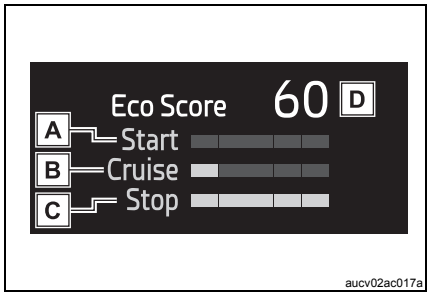


A Eco start status

B Eco cruise status

C Eco stop status

D Score result

How to read the bar display

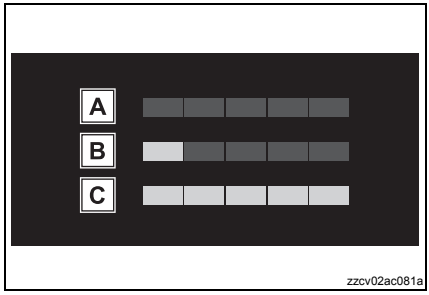

A Not yet evaluated

B Low

C High

- After the hybrid system is started, the Eco score will not be displayed until the vehicle speed exceeds approximately 20 km/h (12 mph).
- The Eco score will be reset each time the hybrid system is started.
- When the hybrid system is stopped, the total score of the current trip will be displayed.

■ Hybrid System Indicator is displayed when

The Hybrid System Indicator is dis-

played in the following situations:

- The “READY” indicator is illuminated.
- The shift lever is in D, B or S.

■ The ECO Accelerator Guidance/Eco score will not operate when

The ECO Accelerator Guidance/Eco score will not operate in the following situations:

- The Hybrid System Indicator is not operating.
- The vehicle is being driven using the cruise control (if equipped) or dynamic radar cruise control with full-speed range (if equipped).

Driving support system information display

■ Driving support system information

Select to display the operational status of the following systems:

- LTA (Lane Tracing Assist) (if equipped) (→P.286)
- Cruise control (if equipped) (→P.306)
- Dynamic radar cruise control with full-speed range (if equipped) (→P.295)

■ Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information:

- Route guidance to destination
- Compass display (heading-up display)

■ Route guidance to destination display

When the route guidance to destination display is enabled on the head-up display, it will not be displayed on the multi-information display. (→P.132)

Audio system-linked display (if equipped)

Select to enable selection of an audio source or track on the meter using the meter control switches.

This menu icon can be set to be displayed/not displayed in .


Vehicle information display

■ Display items

- Drive information
- Energy monitor (→P.135)

■ Drive information

Displays drive information such as the following:

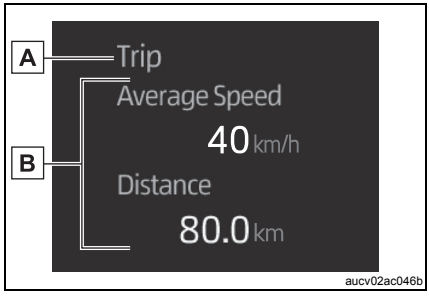

A Drive information type

B Drive information items

Displays the following depending on which drive information type and drive information items were selected in . (→P.129)

- After start

• Distance: Displays the distance

driven since hybrid system start

- Elapsed time: Displays the elapsed time since hybrid system start
- Average vehicle speed: Displays the average vehicle speed since hybrid system start

● After reset

- Distance: Displays the distance driven since the display was reset*
- Elapsed time: Displays the elapsed time since the display was reset*
- Average vehicle speed: Displays the average vehicle speed since the display was reset*

*: To reset, display the desired item and press and hold the OK meter control switch.

Settings display

■ Meter display settings that can be changed

● Clock setting (vehicles without navigation/multimedia system)

→P.115, 121

● Language

Select to change the language displayed.

● Units

Select to change the units of measure displayed.

● Speedometer display (7-inch display)

Select to set the display of the speedometer to analog/digital/digital+ (if equipped).

● EV indicator

Select to enable/disable the EV indicator.

● 

Select to change the displayed content of the following:

- Hybrid system indicator

Select to display/not display the Eco Accelerator Guidance. (→P.126)

- Fuel economy display

Select to change the average fuel consumption display between after start/after reset. (→P.125)

●  (if equipped)

Select to display/not display the audio system linked display.

● 

Select to change the displayed content of the following:

- Display contents

Select to display/not display the energy monitor. (→P.135)

- Drive information type

Select to change the drive information type display between after start/after reset.

- Drive information items

Select to set the first and second items of the drive information display to any of the following: average vehicle speed/distance/elapsed time.

● Current trip result display

Select to change the displayed information about the current trip, measured from when the hybrid system was started until it was stopped, between drive information/eco score. (The information will be displayed temporarily when the hybrid system is stopped.)

● Pop-up display

Select to enable/disable pop-up displays for each relevant system.

- Multi-information display off (when analog/digital speedometer is displayed)

Select to turn the multi-information display off.

To turn the multi-information display on again, press any of the following meter control switches

↑/↓/←/→/OK/↩.

- Analog clock (when digital+ speedometer is displayed) (if equipped)

Display the analog clock.

To turn the multi-information display on again, press any of the following meter control switches

↑/↓/←/→/OK/↩.

- Default setting

Select to reset the meter display settings to the default setting.

Vehicle functions and settings that can be changed

→P.610

Suspension of the settings display

- Some settings cannot be changed while driving. When changing settings, park the vehicle in a safe place.
- If a warning message is displayed, operation of the settings display will be suspended.

WARNING

Cautions during setting up the display

If the hybrid system is operating while changing certain settings on the settings display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

NOTICE

During setting up the display


To prevent 12-volt battery discharge, ensure that the hybrid system is operating while setting up the display features.

Head-up display*

*: If equipped

The head-up display projects a variety of driving-related information and the operating state of the driving support systems on the windshield.

System components

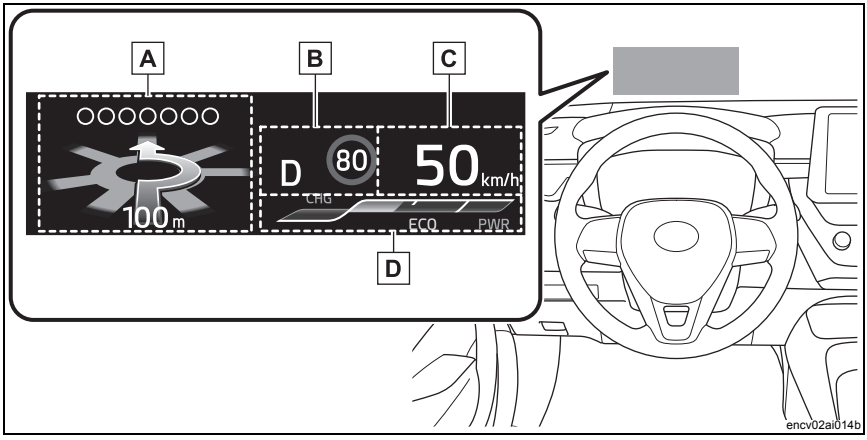

Illustrations used in this text are intended as examples, and may differ from the image that is actually displayed by the head-up display.

A Driving support system status/navigation system-linked display area (if equipped) (→P.133)

B Shift position display/RSA (Road Sign Assist) display area (if equipped) (→P.236, 239, 311)

C Vehicle speed display

D Hybrid System Indicator/Tachometer/Outside temperature display area (→P.134)

■ Head-up display will operate when

The power switch is in ON.

■ When using the head-up display

The head-up display may seem dark or hard to see when viewed through sunglasses, especially polarized sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.

■ Street name display (vehicles with navigation system)

Only street names which are included in the map data will be displayed.

WARNING


■ When using the head-up display

- Check that the position and brightness of the head-up display image does not interfere with safe driving. Incorrect adjustment of the image's position or brightness may obstruct the driver's view and lead to an accident, resulting in death or serious injury.
- Do not continuously look at the head-up display while driving as you may fail to see pedestrians, objects on the road, etc. ahead of the vehicle.

NOTICE

■ Head-up display projector

- Do not place any drinks near the head-up display projector. If the projector gets wet, electrical malfunctions may result.

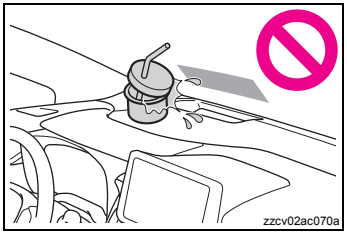

- Do not place anything on or put stickers onto the head-up display projector.
  Doing so could interrupt head-up display indications.
- Do not touch the inside of the head-up display projector or thrust sharp edges or the like into the projector.
  Doing so could cause mechanical malfunctions.

Using the head-up display

Select ⚙ on the multi-information display (→P.129) and then "HUD Main".

■ Enabling/disabling the head-up display

Press the OK meter control switch to enable/disable the head-up display.

■ Changing the head-up display settings

Press and hold the OK meter control switch to change the following settings:

- Brightness and vertical position of the head-up display

Select to adjust the brightness or vertical position of the head-up display.

- Display content

Select to change the display between the following:

- No content
- Hybrid System Indicator
- Tachometer

Select to enable/disable the following items:

- Route guidance to destination (if equipped)
- Driving support system display
- Compass (heading-up display) (if equipped)
- Audio system operation status (if equipped)

- Display angle

Select to adjust the angle of the

head-up display.

■ **Enabling/disabling of the head-up display**

If the head-up display is disabled, it will remain disabled when the power switch is turned off then back to ON.

■ **Display brightness**

The brightness of the head-up display can be adjusted on  of the multi-information display. Also, it is automatically adjusted according to the ambient brightness.

WARNING

■ **Caution for changing settings of the head-up display**

If the hybrid system is operating while changing certain settings on the settings display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

NOTICE

■ **When changing the settings of the head-up display**

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while changing the settings of the head-up display.

Driving support system status/navigation system-linked display area (if equipped)

■ **Driving support system status display**

Displays the operational status of the following systems:

- Dynamic radar cruise control with full-speed range (if equipped) (→P.295)
- LTA (Lane Tracing Assist) (if equipped) (→P.286)

Details of content displayed on the head-up display may differ from that displayed on the multi-information display. For details, refer to the explanation of each system.

■ **Navigation system-linked display area (if equipped)**

Displays the following items which are linked to the navigation system:

- Street name
- Route guidance to destination
- Compass (heading-up display)

Pop-up display

Pop-up displays for the following systems will be displayed when necessary:

■ **Driving support systems**

Displays a warning/suggestion/advice message or the operating state of a relevant system.

- PCS (Pre-Collision System) (if equipped) (→P.278)
- Toyota parking assist-sensor (if equipped) (→P.323)
- PKSB (Parking Support Brake) (if equipped) (→P.336)
- Brake Override System (→P.216)

● Drive-Start Control (→P.217)

Details of content displayed on the head-up display may differ from that displayed on the multi-information display. For details, refer to the explanation of each system.

■ ⚠ icon

Displayed when a warning message is displayed on the multi-information display. (→P.551)

■ Warning message

Some warning messages are displayed when necessary, according to certain conditions.

Details of content displayed on the head-up display may differ from that displayed on the multi-information display.

■ Audio system operation status (if equipped)

Displayed when an audio remote control switch on the steering wheel is operated.

■ Hands-free system status (if equipped)


Displayed when the hands-free system is operated.

■ When a pop-up display is displayed

When a pop-up display is displayed, a current display may no longer be displayed. In this case, the display will return after the pop-up display disappears.

Hybrid System Indicator/Tachometer/Outside temperature display

■ Hybrid System Indicator

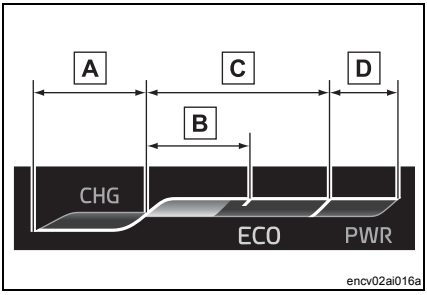

A Charge area

B Hybrid Eco area

C Eco area

D Power area

Displayed content is the same as that displayed on the multi-information display (Hybrid System Indicator). For details, refer to P.126.

■ Tachometer

Displays the engine speed in revolutions per minute.

■ Outside temperature display

Displayed when the power switch is turned to ON or when the low outside temperature indicator is flashing.

■ Outside temperature display

● When the ambient temperature is approximately 3°C (37°F) or lower, the low outside temperature indicator will flash for approximately 10 seconds and the outside temperature display will turn off. In this case, the display will be displayed again when the out-

side temperature becomes approximately 5°C (41°F) or higher.


- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:
  - When stopped, or driving at low speeds (less than 25 km/h [16 mph])
  - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Energy monitor/consumption screen*

*: If equipped

You can view the status of your hybrid system on the multi-information display and the audio system screen.

System components

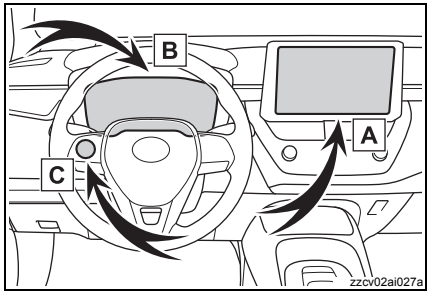

A Audio system screen

B Multi-information display

C Meter control switches

Energy monitor

■ **Audio system screen**


1 Press the "MENU" button.


2 Select "Info" on the "Menu" screen.

If a screen other than "Energy monitor" is displayed, select "Energy".

■ **Multi-information display**


Press the meter control switches on the steering wheel several times to select the energy monitor display.

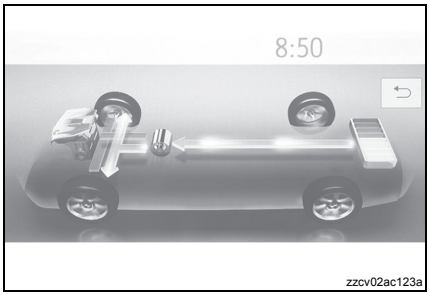When the vehicle is powered by the electric motor (traction motor)	
Audio system screen  zzcv02ac123a	Multi-information display (Example: 7-inch display)  zzcv02ac116b

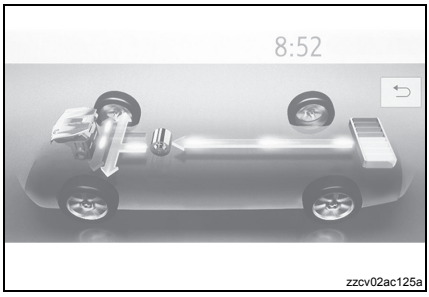When the vehicle is powered by both the gasoline engine and the electric motor (traction motor)	
Audio system screen  zzcv02ac125a	Multi-information display (Example: 7-inch display)  zzcv02ac118b

When the vehicle is powered by the gasoline engine

Audio system screen

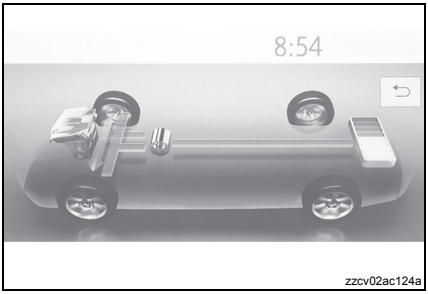



Multi-information display (Example: 7-inch display)




When the vehicle is charging the hybrid battery (traction battery)


Audio system screen

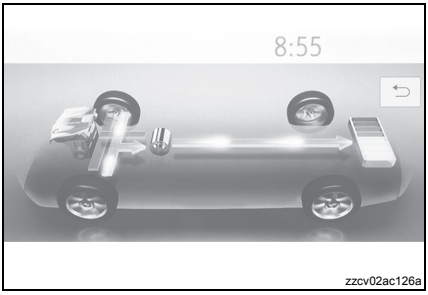


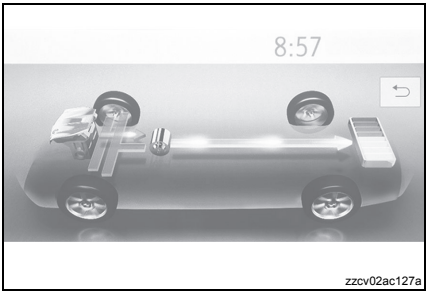

Multi-information display (Example: 7-inch display)

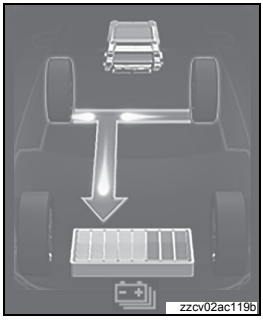

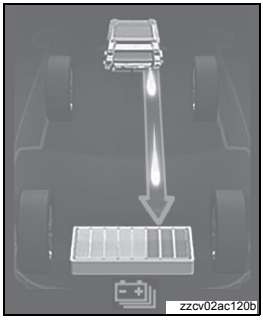


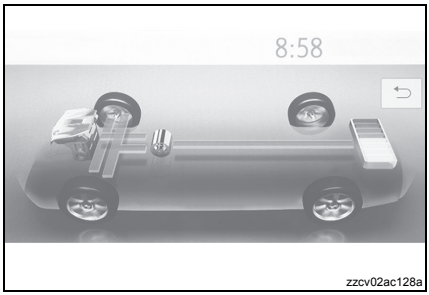When there is no energy flow	
Audio system screen	Multi-information display (Example: 7-inch display)
 zzcv02ac128a	 zzcv02ac121b

These images are examples only, and may vary slightly from actual conditions.

■ **Hybrid battery (traction battery) status**

▶ Audio system screen

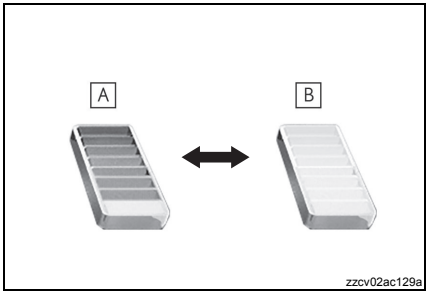


zzcv02ac129a

A Low

B High

▶ Multi-information display

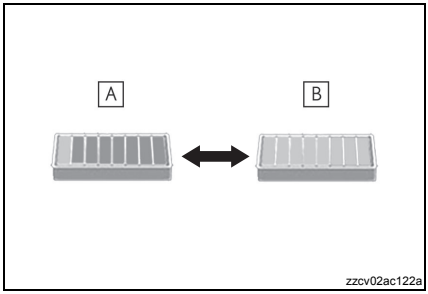

zzcv02ac122a

A Low

B High

These images are examples only, and may vary slightly from actual conditions.


Consumption

■ **Trip information**

1 Press the “MENU” button.

2 Select “Info” on the “Menu” screen.

If a screen other than “Trip information” is displayed, select “Trip information”.

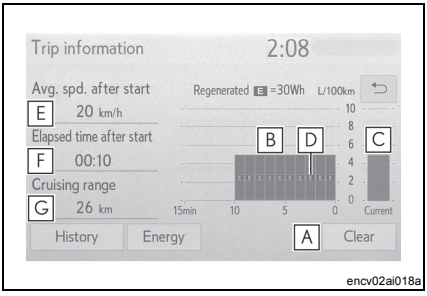

encv02ai018a

A Resetting the consumption data

B Fuel consumption in the past 15 minutes

C Current fuel consumption

D Regenerated energy in the past 15 minutes

One symbol indicates 30 Wh. Up to 5 symbols are shown.

E Average vehicle speed since the hybrid system was started.

F Elapsed time since the hybrid system was started.

G Cruising range

Average fuel consumption for the past 15 minutes is divided by color into past averages and averages attained since the power switch was last turned to ON. Use the displayed average fuel consumption as a reference.


The image is an example only, and may vary slightly from actual conditions.

■ History

1 Press the “MENU” button.

2 Select “Info” on the “Menu” screen.

If a screen other than “History” is displayed, select “History”.

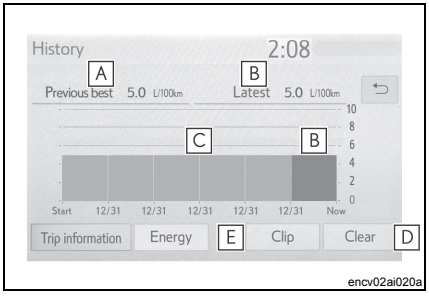

A Best recorded fuel consumption

B Latest fuel consumption

C Previous fuel consumption record

D Resetting the history data

E Updating the latest fuel consumption data

The average fuel consumption history is divided by color into past averages and the average fuel consumption since the last updated. Use the displayed average fuel consumption as a reference.

The image is an example only, and may vary slightly from actual conditions.

■ Updating the history data

Update the latest fuel consumption by selecting “Clip” to measure the current fuel consumption again.

■ Resetting the data

The fuel consumption data can be deleted by selecting “Clear”.

■ Cruising range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

This distance is computed based on your average fuel consumption.
As a result, the actual distance that can be driven may differ from that displayed.

3-1. Key information

Keys.....142

3-2. Opening, closing and locking the doors

Side doors 145

Back door 149

Smart entry & start system 160

3-3. Adjusting the seats

Front seats.....198

Rear seats 199

Head restraints 201

3-4. Adjusting the steering wheel and mirrors

Steering wheel.....203

Inside rear view mirror 204

Outside rear view mirrors 205

3-5. Opening and closing the windows


Power windows.....208

Panoramic moon roof 210

Keys

The keys

The following keys are provided with the vehicle.

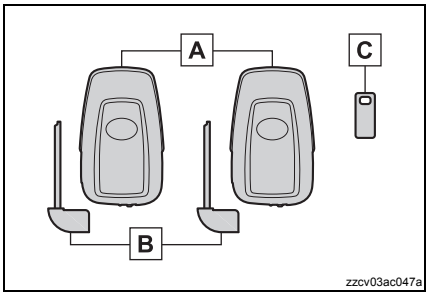

A Electronic keys

- Operating the smart entry & start system (→P.160)
- Operating the wireless remote control function (→P.143)

B Mechanical keys

C Key number plate

When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag, etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

Electronic key battery depletion

- The standard battery life is 1 to 2 years.
- If the battery becomes low, an alarm will sound in the cabin and a message will be shown on the multi-information display when the hybrid system is stopped.
- To reduce key battery depletion when the electronic key is to not be used for long periods of time, set the electronic key to the battery-saving mode. (→P.163)
- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary. (→P.522)
  - The smart entry & start system or the wireless remote control does not operate.
  - The detection area becomes smaller.
  - The LED indicator on the key surface does not turn on.
- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
  - TVs
  - Personal computers
  - Cellular phones, cordless phones and battery chargers
  - Recharging cellular phones or cordless phones
  - Table lamps
  - Induction cookers
- If the electronic key is near the vehicle for longer than necessary, even if the smart entry & start system is not operated, the key battery may become depleted faster than normal.

Replacing the battery

→P.522

If “New Key Registered Contact Your Dealer if You Did Not Register a New Key” is shown on the multi-information display

This message will be displayed each time the driver’s door is opened when the doors are unlocked from the outside for approximately 10 days after a new electronic key has been registered.
If this message is displayed but you have not had a new electronic key registered, ask any authorized Toyota retailer or Toyota authorized repairer, or any reli-

able repairer to check if an unknown electronic key (other than those in your possession) has been registered.

NOTICE

■ To prevent key damage

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for long periods of time.
- Do not get the keys wet or wash them in an ultrasonic washer etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the key.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers, or medical electrical equipment, such as low-frequency therapy equipment.

■ Carrying the electronic key on your person

Carry the electronic key 10 cm (3.9 in.) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 10 cm (3.9 in.) of the electronic key may interfere with the key, causing the key to not function properly.

■ In case of a smart entry & start system malfunction or other key-related problems


→P.582

■ When an electronic key is lost

→P.582

Wireless remote control

The keys are equipped with the following wireless remote control:

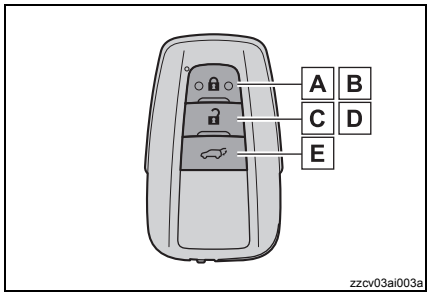

A Locks the doors (→P.145)

B Closes the windows*1 and panoramic moon roof*1, 2 (→P.145)

C Unlocks the doors (→P.145)

D Opens the windows*1 and panoramic moon roof*1, 2 (→P.145)

E Opens and closes the power back door*2 (→P.152)

*1: This setting must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*2: If equipped


Using the mechanical key

To take out the mechanical key, slide the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to

insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. (→P.582)

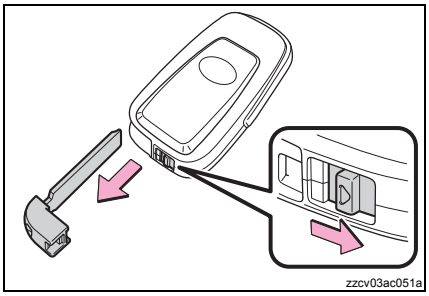

■ If you lose your mechanical keys

→P.582

■ If a wrong key is used


The key cylinder rotates freely, isolated from the internal mechanism.

Side doors

Unlocking and locking the doors from the outside

■ Entry function (if equipped)

Carry the electronic key to enable this function.

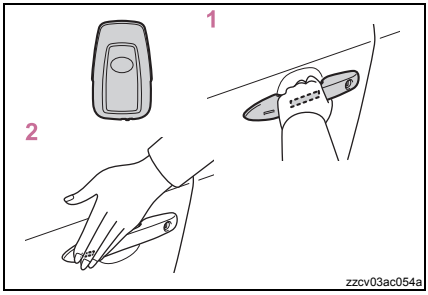

1 Grip the front door handle to unlock all the doors.*

Make sure to touch the sensor on the back of the handle.


The doors cannot be unlocked for 3 seconds after the doors are locked.

*: The door unlock settings can be changed. (→P.145, 610)

2 Touch the lock sensor (the indentation on the side of the front door handle) to lock all the doors.

Check that the door is securely locked.

■ Wireless remote control

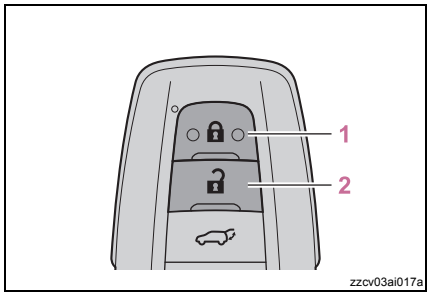

1 Locks all the doors

Check that the door is securely locked.

Press and hold to close the windows*1 and panoramic moon roof.*1, 2

2 Unlocks all the doors

Press and hold to open the windows*1 and panoramic moon roof.*1, 2

*1: This setting must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*2: If equipped

■ Switching the door unlock function (vehicles with entry function)

It is possible to set which doors the entry function unlocks using the wireless remote control.

1 Turn the power switch off.

2 Cancel the intrusion sensor of the alarm system to prevent unintended triggering of the alarm while changing the settings. (if equipped) (→P.104)

3 When the indicator light on the key surface is not on, press and hold  or  (if equipped) for approximately 5 seconds while pressing and holding  .

The setting changes each time an operation is performed, as shown below.

(When changing the setting continuously, release the buttons, wait for at least 5 seconds, and repeat step **2**.)

Multi-information display/Beep	Unlocking function
 zzcv03ac087a (Left-hand drive vehicles)	Holding the driver's door handle unlocks only the driver's door.
 zzcv03ac088a (Right-hand drive vehicles) Exterior: Beeps 3 times Interior: Pings once	Holding the front passenger's door handle unlocks all the doors.
 zzcv03ac086a Exterior: Beeps twice Interior: Pings once	Holding either front door handle unlocks all the doors.

For vehicles with an alarm: To prevent unintended triggering of the alarm, unlock the doors using the wireless remote control and open and close a door once after the settings have been changed. (If a door is not opened within 30 seconds after is pressed, the doors will be locked again and the alarm will automatically be set.)
In case that the alarm is triggered, immediately stop the alarm. (→P.103)

■ Operation signals

The emergency flashers flash to indicate that the doors have been locked/unlocked using the entry function* or wireless remote control.
(Locked: Once; Unlocked: Twice)

A buzzer sounds to indicate that the windows and panoramic moon roof* are operating.

*: If equipped


■ Security feature

If a door is not opened within approximately 30 seconds after the vehicle is unlocked using the entry function (if equipped) or wireless remote control, the security feature automatically locks the vehicle again.

■ When the door cannot be locked by the lock sensor on the surface of the front door handle (vehicles with entry function)

If the doors cannot be locked by touching the lock sensor with a finger, touch the lock sensor with the palm of your hand.

If you are wearing gloves, remove them.

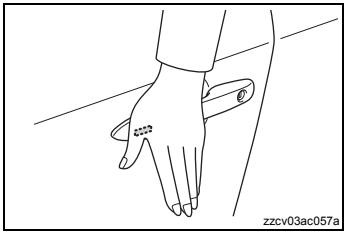
zzcv03ac057a

■ Door lock buzzer

If an attempt to lock the doors using the entry function (if equipped) or wireless remote control is made when a door is not fully closed, a buzzer will sound continuously for 5 seconds. Fully close the door to stop the buzzer, and lock the doors again.

■ Alarm (if equipped)

Locking the doors will set the alarm system. (→P.103)

■ Conditions affecting the operation of the smart entry & start system or wireless remote control

→P.164

If the smart entry & start system or the wireless remote control does not operate properly

Use the mechanical key to lock and unlock the doors. (→P.582)

Replace the key battery with a new one if it is depleted. (→P.522)

If the 12-volt battery is discharged

The doors cannot be locked and unlocked using the entry function (if equipped) or wireless remote control. Lock or unlock the doors using the mechanical key. (→P.582)

Customization

Some functions can be customized. (→P.610)

WARNING

To prevent an accident

Observe the following precautions while driving the vehicle.
Failure to do so may result in a door opening and an occupant being thrown out of the vehicle, resulting in death or serious injury.

- Ensure that all doors are properly closed and locked.
- Do not pull the inside door handle while driving.
  Be especially careful of the front doors, as the doors may be opened even if the inside lock buttons are in the locked position.
- Set the rear door child-protector locks when children are seated in the rear seats.

When opening or closing a door


Check the surroundings of the vehicle such as whether the vehicle is on an incline, whether there is enough space for a door to open and whether a strong wind is blowing. When opening or closing the door, hold the door handle tightly to prepare for any unpredictable movement.

When using the wireless remote control and operating the power windows or panoramic moon roof (if equipped)

Operate the power windows or panoramic moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the windows or panoramic moon roof. Also, do not allow children to operate the wireless remote control. It is possible for children and other passengers to get caught in the power windows or panoramic moon roof.

Unlocking and locking the doors from the inside


Door lock switches (to lock/unlock)

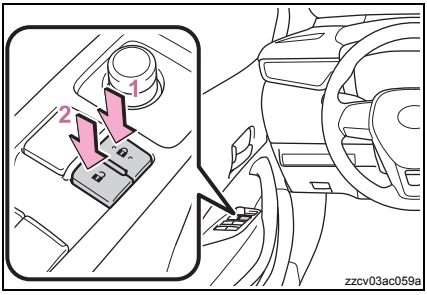

1 Locks all the doors

2 Unlocks all the doors

Inside lock buttons

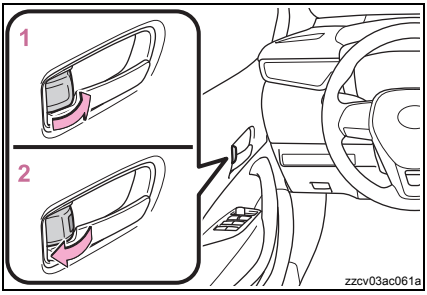

1 Locks the door

2 Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

Locking the front doors from the outside without a key

1 Move the inside lock button to the lock position.

2 Close the door while pulling the door handle.

The door cannot be locked if the power switch is in ACC or ON, or the electronic key is left inside the vehicle.

The key may not be detected correctly and the door may be locked.


Open door warning buzzer

If a door or the back door is not fully closed, a buzzer will sound when the vehicle speed reaches 5 km/h (3 mph).

The open door(s) or back door is indicated on the multi-information display.

Rear door child-protector lock

The door cannot be opened from inside the vehicle when lock is set.

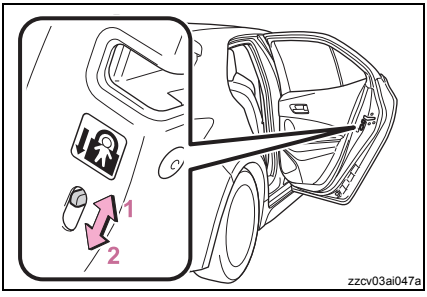

1 Unlock

2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

Back door

The back door can be locked/unlocked and opened/closed by the following procedures.

⚠ WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

■ Caution while driving

- Keep the back door closed while driving. If the back door is left open, it may hit near-by objects while driving or luggage may be unexpectedly thrown out, causing an accident.
  In addition, exhaust gases may enter the vehicle, causing death or a serious health hazard. Make sure to close the back door before driving.
- Before driving the vehicle, make sure that the back door is fully closed. If the back door is not fully closed, it may open unexpectedly while driving, causing an accident.
- Never let anyone sit in the luggage compartment. In the event of sudden braking or a collision, they are susceptible to death or serious injury.

■ When children are in the vehicle

- Do not allow children to play in the luggage compartment.
  If a child is accidentally locked in the luggage compartment, they could have heat exhaustion or other injuries.
- Do not allow a child to open or close the back door.
  Doing so may cause the back door to move unexpectedly, or cause the child's hands, head, or neck to be caught by the closing back door.


■ Operating the back door

Observe the following precautions. Failure to do so may cause parts of the body to be caught, resulting in death or serious injury.


- Remove any heavy loads, such as snow and ice, from the back door before opening it. Failure to do so may cause the back door to suddenly shut again after it is opened.
- When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind.

WARNING

- Vehicles without a power back door: The back door may suddenly shut if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. When the ambient temperature is low, the back door may close suddenly. Make sure that the back door is fully open and secure before using the luggage compartment.

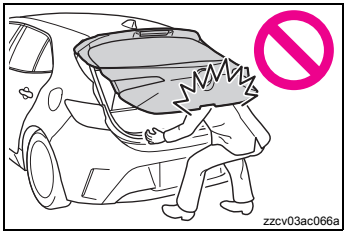

- Vehicles with a power back door: The back door may suddenly shut if it is not opened fully while on a steep incline. Make sure that the back door is secured before using the luggage compartment.
- When closing the back door, take extra care to prevent your fingers, etc. from being caught.

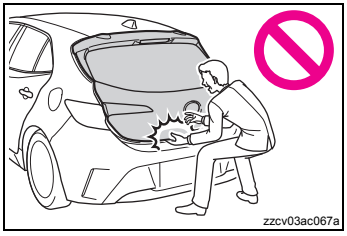


- When closing the back door, make sure to press it lightly on its outer surface. If a back door handle is used to fully close the back door, it may result in hands or arms being caught.
- Do not pull on the back door damper stay (vehicles without a power back door) (→P.152) or back door spindle (vehicles with a power back door) (→P.158) to close the back door, and do not hang on the back door damper stay (vehicles without a power back door) or back door spindle (vehicles with a power back door). Doing so may cause hands to be caught or the back door damper stay (vehicles without a power back door) or back door spindle (vehicles with a power back door) to break, causing an accident.
- If a heavy object is attached to the back door, it may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Toyota part is recommended.

Unlocking and locking the back door from the outside

■ Entry function (if equipped)

▶ Hatchback

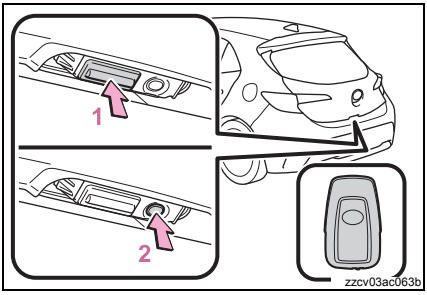


1 Unlocks all the doors

The door cannot be unlocked for 3 seconds after the door is locked.

2 Locks all the doors

Check that the door is securely locked.

▶ Wagon

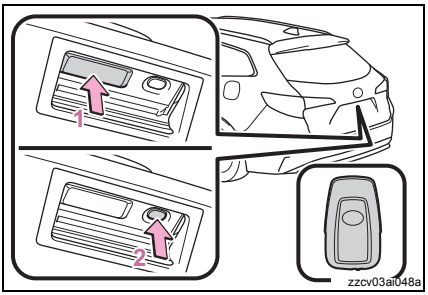

1 Unlocks all the doors

The door cannot be unlocked for 3 seconds after the door is locked.

2 Locks all the doors

Check that the door is securely locked.

■ **Wireless remote control**

→P.145

■ **Operation signals**

→P.146

Unlocking and locking the back door from the inside

■ **Door lock switches**

→P.147


Opening/closing the back door (vehicles without a power back door)

■ **Opening the back door**


Raise the back door while pushing up the back door opener switch.

The back door cannot be closed immediately after the back door opener switch is pushed.

▶ Hatchback

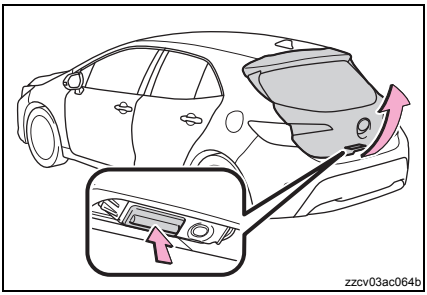


▶ Wagon

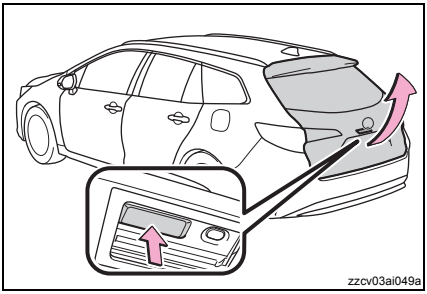

■ **Closing the back door**

Lower the back door using a back door handle, and then push the back door from the outside to close it.

Be careful not to pull the back door sideways when using a handle.

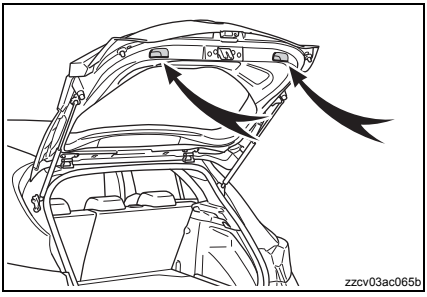

■ **Open door warning buzzer**

→P.148

Luggage compartment light


- The luggage compartment light turns on when the back door is opened.
- If the luggage compartment light is left on when the power switch is turned off, the light will go off automatically after 20 minutes.

NOTICE

Back door damper stays

The back door is equipped with damper stays that hold the back door in place.
Observe the following precautions. Failure to do so may cause damage to the back door damper stay, resulting in malfunction.

- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.

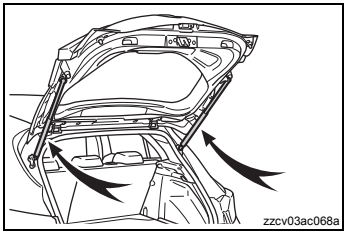


- Do not touch the damper stay rod with gloves or other fabric items.
- Do not attach any accessories other than genuine Toyota parts to the back door.
- Do not place your hand on the damper stay or apply lateral forces to it.

Opening/closing the back door (vehicles with a power back door)

Opening/closing the back door using the wireless remote control

Press and hold the switch.


Pressing the switch while the back door is opening/closing will stop the operation. Pressing the switch again will operate the back door in the opposite direction.

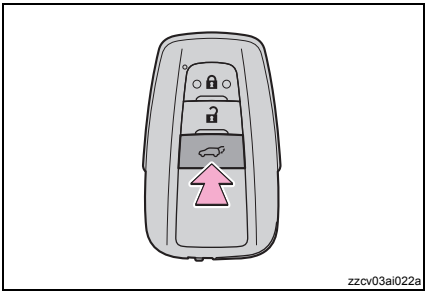

Opening/closing the back door from the inside

Press and hold the switch.

A buzzer sounds and the back door automatically opens and closes. Pressing the switch while the back door is opening/closing will stop the operation. Pressing the switch again will operate the back door in the opposite direction.

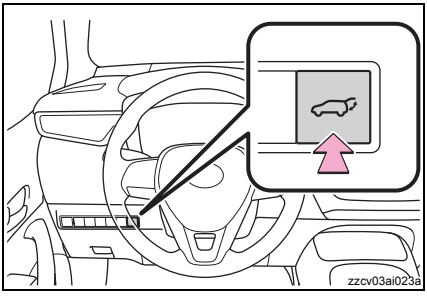

■ Opening/closing the back door from the outside


● Opening the back door

When the back door is unlocked: Press the back door opener switch.

A buzzer sounds and the back door automatically opens. Pressing the switch while the back door is opening stops the operation.

When the back door is locked: While carrying the electronic key on your person, press the back door opener switch.


The emergency flashers flash twice and the back door automatically opens. Pressing the switch while the back door is opening stops the operation.

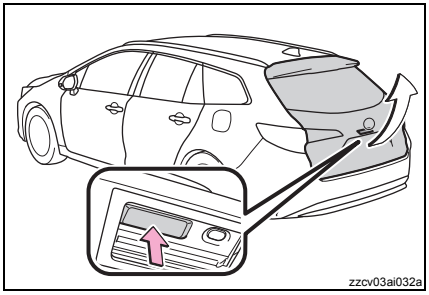

● Closing the back door

Press the switch.


A buzzer sounds and the back door automatically closes. Pressing the switch while the back door is closing stops the operation. Pressing the switch again will operate the back door in the opposite direction.

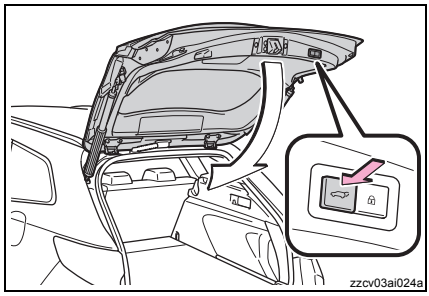

● Closing the back door and locking all of the doors (close & lock function)


Press the switch.

A different buzzer than the one for a normal power back door closing operation will sound and the back door will begin closing automatically. When the back door is closed, all of the doors will lock simultaneously and operation signals will indicate that all of the doors have been locked. If the switch is pressed while the power back door is closing, the operation will stop.

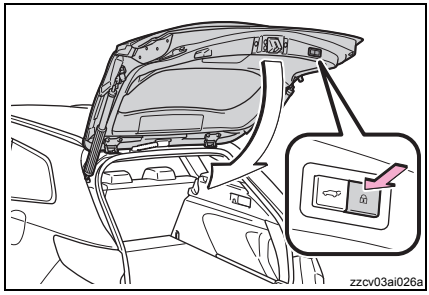

■ Closing the back door using the back door handle

Lower the back door using the back door handle, then a buzzer sounds and the back door automatically closes.

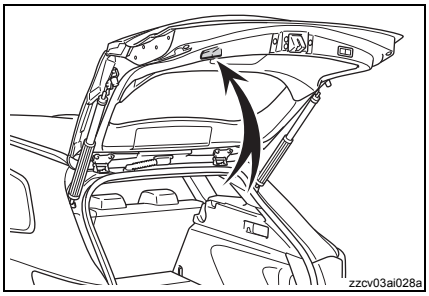


■ Opening/closing the back door using the kick sensor

The power back door enables automatic opening and closing of the power back door by putting your foot near the lower center part of the rear bumper and then moving it away.

1 While carrying an electronic key, put your foot within 10 cm (3.9 in.) of the lower center part of the rear bumper, where the kick sensor A is located, and move it away.

When all of the doors are locked: When the movement is detected by the kick sensor, all of the doors will be unlocked.

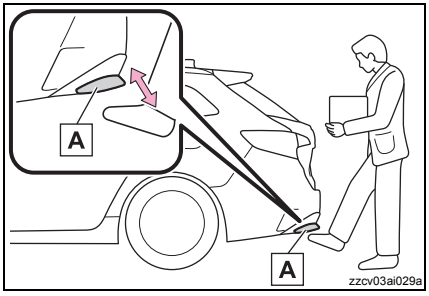

2 The buzzer sounds and the power back door begins to operate

To stop the power back door partway or operate it again, use the kick sensor, the wireless remote control (→P.152), or power back door switch (→P.153).

■ Luggage compartment light

- The luggage compartment light turns on when the back door is opened.
- If the luggage compartment light is left on when the power switch is turned off, the light will go off automatically after 20 minutes.

■ Power back door operating conditions

If the following conditions are met with the power back door operation enabled (→P.610), the power back door can be opened and closed automatically.

- When the back door is unlocked
- When the power switch is in ON, one of the following conditions must be met in addition to the above conditions:
  - The parking brake is engaged.
  - The brake pedal is depressed.
  - The shift lever is in P.

■ Kick sensor operating conditions

- When the kick sensor operation setting is turned on and the power switch is turned off
- When an electronic key is carried within the operation range

■ Operation of the power back door

- When the power back door system is disabled, the power back door will not operate, but it can still be opened and closed manually.
- When the power back door is opening, if the power back door becomes obstructed, operation will stop.

■ Close & lock function

When the power back door is open, this function closes the power back door and then locks all of the doors simultaneously. When the following procedures are performed and there are no electronic keys for the vehicle within the vehicle, all of the doors will lock when

the power back door is completely closed.

1 Close all of the doors except the power back door.

2 While carrying an electronic key, press the switch on the lower part of the power back door (→P.153).

A different buzzer than the one for a normal power back door closing operation will sound and then the power back door will begin closing automatically. When the power back door is closed, all of the doors will lock simultaneously and operation signals will indicate that all of the doors have been locked.

Vehicles with a double locking system: The double locking system will not operate at this time.

■ Situations in which the close & lock function may not operate properly

In the following situations, the close & lock function may not operate properly:

- If the switch on the lower part of the power back door (→P.153) is pressed by a hand which is holding an electronic key
- If the switch on the lower part of the power back door (→P.153) is pressed when the electronic key is in a bag, etc. that is placed on the ground
- If the switch on the lower part of the power back door (→P.153) is pressed when the electronic key is not near the vehicle.

■ Preventing unintentional operation of the kick sensor

When an electronic key is in the operation detection area, the kick sensor may operate unintentionally, so be careful in the following situations:

- When a large amount of water is applied to the lower center part of the rear bumper, such as when the vehicle is being washed or in heavy rain
- When dirt is wiped off the lower center part of the rear bumper
- When a small animal or small object, such as a ball, moves under the lower center part of the rear bumper
- When an object is moved from under the lower center part of the rear bumper
- If someone is swinging their legs while sitting on the rear bumper
- If the legs or another part of someone's body contacts the lower center part of the rear bumper while passing by the vehicle
- When the vehicle is parked near an electrical noise source which affects the sensitivity of the kick sensor, such as a pay parking spot, gas station, electrically heated road, or fluorescent light
- When the vehicle is near a TV tower, electric power plant, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When the vehicle is parked in a place where objects such as plants are near the lower center part of the rear bumper
- If luggage, etc. is set near the lower center part of the rear bumper
- If accessories or a vehicle cover is installed/removed near the rear bumper
- When the vehicle is being towed

To prevent unintentional operation, turn the kick sensor operation setting off.

■ Situations in which the kick sensor may not operate properly

In the following situations, the kick sensor may not operate properly:

- When a foot remains under the lower center part of the rear bumper
- If the lower center part of the rear bumper is strongly hit with a foot or is touched for a while
  If the lower center part of the rear

bumper has been touched for a while, wait for a short time before attempting to operate the kick sensor again.

- When standing excessively close to the lower center part of the rear bumper
- When an external radio wave source interferes with the communication between the electronic key and the vehicle (→P.164)
- When the vehicle is parked near an electrical noise source which affects the sensitivity of the kick sensor, such as a pay parking spot, gas station, electrically heated road, or fluorescent light
- When the vehicle is near a TV tower, electric power plant, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When a large amount of water is applied to the lower center part of the rear bumper, such as when the vehicle is being washed or in heavy rain
- When mud, snow, ice, etc. is attached to the lower center part of the rear bumper
- When the vehicle has been parked for a while near objects that may move and contact the rear bumper, such as plants
- When an accessory is installed to the lower center part of the rear bumper

If an accessory has been installed, turn the kick sensor operation setting off.*

*: If a Toyota genuine accessory has been installed, depending on the accessory, the kick sensor may still be operable. For details, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.


■ When reconnecting the 12-volt battery

To enable the power back door to operate properly, close the back door manually.

■ Jam protection function

Sensors are installed on the right and left sides of the power back door. When the door is automatically closing and the sensors are pushed due to an object being clamped, etc., the jam protection function operates.

From that position the door automatically moves a little in the opposite direction and then the function stops.

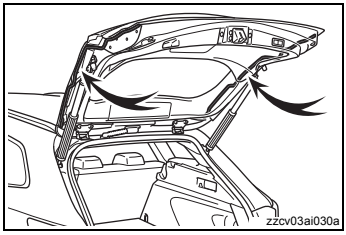

■ Customization

Some functions can be customized. (→P.610)

WARNING

■ Power back door

Observe the following precautions when operating the power back door. Failure to do so may cause death or serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.

WARNING

- If the power back door system is turned off with the main switch while the back door is operating automatically, the automatic operation will be stopped. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close unexpectedly.
- If the operating conditions of the power back door are no longer met, a buzzer may sound and the back door may stop opening or closing. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.
- On an incline, the back door may suddenly shut after it is opened. Make sure the back door is fully open and secure.
- In the following situations, the power back door may detect an abnormality and automatic operation may be stopped. In this case, the back door has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.

• When the back door contacts an obstacle

• When the 12-volt battery voltage suddenly drops, such as when the power switch is turned to ON or the hybrid system is started during an automatic operation

- If a heavy object is attached to the back door, the power back door may not operate, causing a malfunction, or the power back door may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.

■ Jam protection function

Observe the following precautions. Failure to do so may cause death or serious injury.

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the back door fully closes. Be careful not to catch fingers caught or anything else.
- The jam protection function may not work depending on the shape of the object that is caught. Be careful not to catch fingers or anything else.

■ Kick sensor

Observe the following precautions when operating the power back door. Failure to do so may cause death or serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- When putting your foot near the lower center part of the rear bumper and moving it from the rear bumper, be careful not to touch the exhaust pipes until they have cooled down sufficiently, as touching hot exhaust pipes can cause burns.

WARNING

- Do not operate the kick sensor if there is little space under the rear bumper.


NOTICE

■ Back door spindles

The back door is equipped with spindles that hold the back door in place.

Observe the following precautions. Failure to do so may cause damage to the back door spindle, resulting in malfunction.

- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the spindle rod.

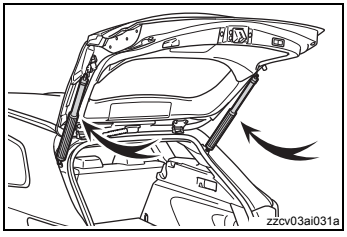

- Do not touch the spindle rod with gloves or other fabric items.
- Do not attach heavy accessories to the back door. When attaching an accessory, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.
- Do not place your hand on either spindle or apply lateral forces to it.

■ To prevent damage to the power back door

- Make sure that there is no ice between the back door and frame that would prevent movement of the back door. Operating the power back door when excessive load is present on the back door may cause a malfunction.
- Do not apply excessive force to the back door while the power back door is operating.
- Take care not to damage the sensors (installed on the right and left edges of the power back door) with a knife or other sharp object. If a sensor is disconnected, the power back door will not close automatically.

■ Close & lock function

When closing the power back door using the close & lock function, a different buzzer than the one for a normal power back door closing operation will sound before the operation begins.

To check that the operation has started correctly, check that a different buzzer than the one for a normal power back door closing operation has sounded.

Additionally, when the power back door is fully closed and locked, operation signals will indicate that all of the doors have been locked.

Before leaving the vehicle, make sure that the operational signals have operated and that all of the doors are locked.

■ Kick sensor precautions

The kick sensor is located behind lower center part of the rear bumper. Observe the following to ensure that the power back door function operates properly:

NOTICE

● Keep the lower center part of the rear bumper clean at all times.

If the lower center part of the rear bumper is dirty or covered with snow, the kick sensor may not operate. In this situation, clean off the dirt or snow, move the vehicle from the current position and then check if the kick sensor operates.

If it does not operate, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

● Do not apply coatings that have a rain clearing (hydrophilic) effect, or other coatings, to the lower center part of the rear bumper.

● Do not park the vehicle near objects that may move and contact the lower center part of the rear bumper, such as plants.

If the vehicle has been parked for a while near objects that may move and contact the lower center part of the rear bumper, such as plants, the kick sensor may not operate. In this situation, move the vehicle from the current position and then check if the kick sensor operates. If it does not operate, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

● Do not subject the kick sensor or its surrounding area to a strong impact.

If the kick sensor or its surrounding area has been subjected to a strong impact, the kick sensor may not operate properly. If the kick sensor does not operate in the following situations, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- The kick sensor or its surrounding area has been subjected to a strong impact.
- The lower center part of the rear bumper is scratched or damaged.

● Do not disassemble the rear bumper.

● Do not attach stickers to the rear bumper.

● Do not paint the rear bumper.

● If a heavy object is attached to the power back door, disable the kick sensor.


Adjusting the open position of the back door (vehicles with a power back door)

The open position of the power back door can be adjusted.

1 Stop the back door in the desired position. (→P.152)

2 Press and hold the power back door switch on the back door for 2 seconds.


- When the position is set, a buzzer will sound 4 times.
- The next time the power back door is opened, it will stop at the set position.

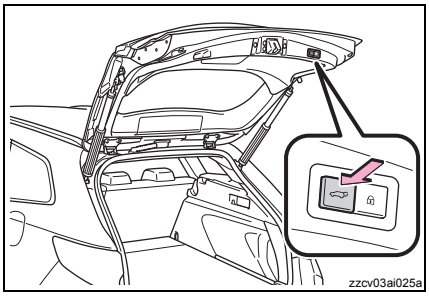

Returning the open position of the back door to the default position

Press and hold the power back door switch on the back door for 7 seconds.

A buzzer will sound 4 times, pause, and then sound 2 more times. The next time the power back door is opened, it will stop at the default position.

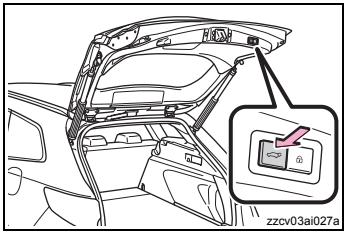

When setting the open position of the back door by the multi-information display

The open position of the power back door can be adjusted using the multi-information display. (→P.610)

When opened, the power back door will open to the last position set using the switch on the back door or on the multi-information display.


Smart entry & start system

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key.

- Locks and unlocks the doors (vehicles with entry function) (→P.145)
- Locks and unlocks the back door (vehicles with entry function) (→P.150)
- Starts the hybrid system (→P.230)

Antenna location (hatchback)


▶ Vehicles without entry function

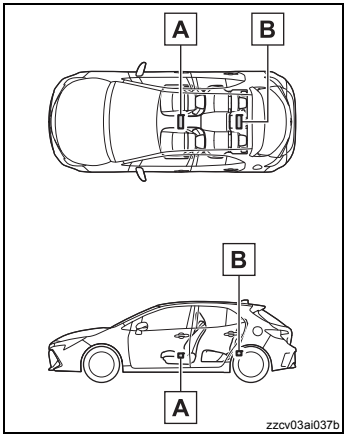

A Antennas inside the cabin

B Antenna inside the luggage compartment (for United Kingdom)

▶ Vehicles with entry function

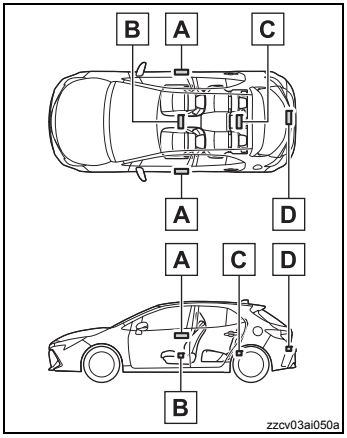

A Antennas outside the cabin


B Antennas inside the cabin

C Antenna inside the luggage compartment

D Antenna outside the luggage compartment


■ Antenna location (wagon)

▶ Vehicles without entry function (except for United Kingdom)

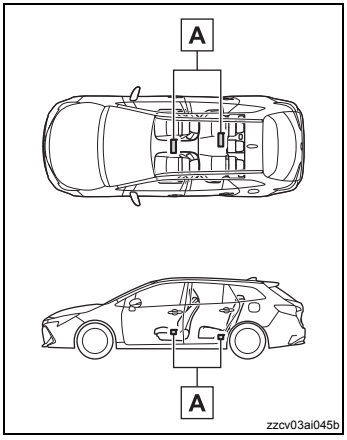

A Antennas inside the cabin


▶ Vehicles without entry function (for United Kingdom)

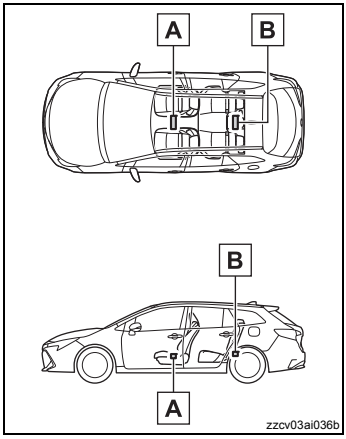

A Antennas inside the cabin

B Antenna inside the luggage compartment

▶ Vehicles with entry function

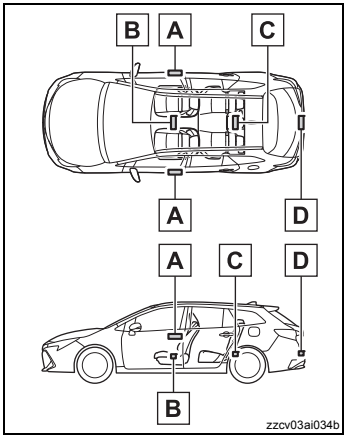

A Antennas outside the cabin


B Antennas inside the cabin

C Antenna inside the luggage compartment

D Antenna outside the luggage compartment

■ **Effective range (areas within which the electronic key is detected) (hatchback)**


▶ Vehicles without entry function (except for United Kingdom)

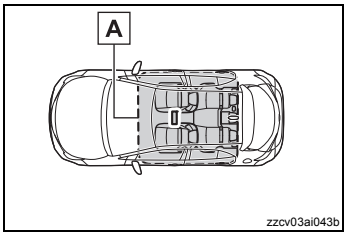

A When starting the hybrid system or changing power switch modes

The system can be operated when the electronic key is inside the vehicle.


▶ Vehicles without entry function (for United Kingdom)

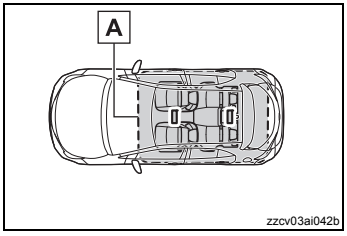

A When starting the hybrid system or changing power switch modes

The system can be operated when the electronic key is inside the vehicle.

▶ Vehicles with entry function

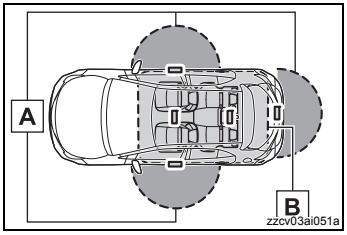

A When locking or unlocking the doors


The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of an outside front door handle and back door. (Only the doors detecting the key can be operated.)

B When starting the hybrid system or changing power switch modes

The system can be operated when the electronic key is inside the vehicle.

■ **Effective range (areas within which the electronic key is detected) (wagon)**


▶ Vehicles without entry function (except for United Kingdom)

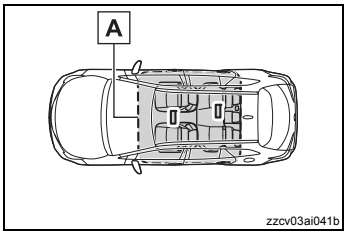

A When starting the hybrid system or changing power switch modes

The system can be operated when the electronic key is inside the vehicle.


▶ Vehicles without entry function (for United Kingdom)

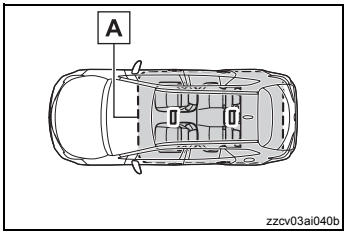

A When starting the hybrid system or changing power switch modes

The system can be operated when the electronic key is inside the vehicle.

▶ Vehicles with entry function

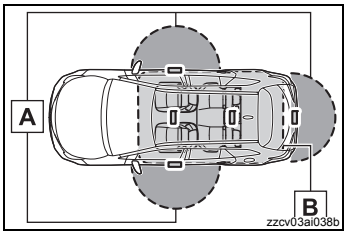

A When locking or unlocking the doors

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of an outside front door handle and back door. (Only the doors detecting the key can be operated.)

B When starting the hybrid system or changing power switch modes

The system can be operated when the electronic key is inside the vehicle.

■ Alarms and warning messages

A combination of exterior and interior buzzers as well as warning messages shown on the multi-information display are used to prevent theft of the vehicle and accidents resulting from erroneous operation. Take appropriate measures based on the displayed message. (→P.551)

When only an alarm sounds, circumstances and correction procedures are as follows.

● Exterior buzzer sounds once for 5 seconds

Situation	Correction procedure
An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.

● Interior buzzer sounds continuously

Situation	Correction procedure
The power switch was turned to ACC while the driver's door was open (or the driver's door was opened while the power switch was in ACC).	Turn the power switch off and close the driver's door.
The power switch was turned to off while the driver's door was open.	Close the driver's door.

■ Battery-saving function (vehicles with entry function)

The battery-saving function will be activated in order to prevent the electronic key battery and the 12-volt battery from being discharged while the vehicle is not operated for a long time.

● In the following situations, the smart entry & start system may take some time to unlock the doors.
- The electronic key has been left within approximately 3.5 m (11 ft.) of the outside of the vehicle for 2 minutes or longer.
- The smart entry & start system has not been used for 5 days or longer.


● If the smart entry & start system has not been used for 14 days or longer, the doors cannot be unlocked from any door except the driver's door. In this case, hold the driver's door handle, or use the wireless remote control or mechanical key to unlock the doors.

■ Electronic key battery-saving function

When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

Press twice while pressing and holding . Confirm that the electronic key indicator flashes 4 times.

While the battery-saving mode is set, the smart entry & start system cannot be used. To cancel the function, press any of the electronic key buttons.

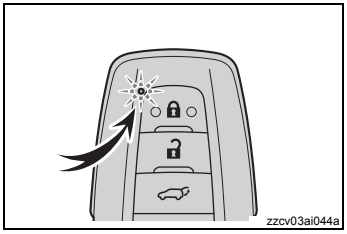

Conditions affecting operation

The smart entry & start system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system, wireless remote control and immobilizer system from operating properly. (Ways of coping: →P.582)

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device
- When the electronic key is in contact with, or is covered by the following metallic objects
  - Cards to which aluminum foil is attached
  - Cigarette boxes that have aluminum foil inside
  - Metallic wallets or bags
  - Coins
  - Hand warmers made of metal
  - Media such as CDs and DVDs
- When other wireless keys (that emit radio waves) are being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
  - Another vehicle's electronic key or a wireless key that emits radio waves
  - Personal computers or personal digital assistants (PDAs)
  - Digital audio players
  - Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window
- When the electronic key is placed near a battery charger or electronic devices
- When the vehicle is parked in a pay parking spot where radio waves are emitted

If the doors cannot be locked/unlocked using the smart entry & start system, lock/unlock the doors by performing any of the following (vehicles with entry function):

- Bring the electronic key close to either front door handle and operate the entry function.
- Operate the wireless remote control.

If the doors cannot be locked/unlocked using the above methods, use the mechanical key. (→P.582)

If the hybrid system cannot be started using the smart entry & start system, refer to P.583.

Note for the entry function (if equipped)

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
  - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
  - The electronic key is on the instrument panel, luggage cover or floor, or in the door pockets or glove box when the hybrid system is started or power switch modes are changed.
- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave recep-

tion conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.

- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
- Even if the electronic key is not inside the vehicle, it may be possible to start the hybrid system if the electronic key is near the window.
- The doors may unlock or lock if a large amount of water splashes on the door handle, such as in the rain or in a car wash when the electronic key is within the effective range. (The doors will automatically be locked after approximately 30 seconds if the doors are not opened and closed.)
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
- Touching the door lock or unlock sensor while wearing gloves may prevent lock or unlock operation.
- Some models: When the lock operation is performed using the lock sensor, recognition signals will be shown up to two consecutive times. After this, no recognition signals will be given.
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:
  - Place the electronic key in a location 2 m (6 ft.) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
  - Set the electronic key to battery-saving mode to disable the smart entry & start system. (→P.163)
- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again.
- A sudden handle operation or a handle operation immediately after entering the effective range may prevent the doors from being unlocked. Touch the door unlock sensor and check that the doors are unlocked before pulling the door handle again.
- If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.

■ When the vehicle is not driven for extended periods

- To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
- The smart entry & start system can be deactivated in advance. (→P.610)
- Setting the electronic key to battery-saving mode helps to reduce key battery depletion. (→P.163)

■ To operate the system properly

Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.
Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention function may not operate.)

■ **If the smart entry & start system does not operate properly**

- Locking and unlocking the doors (vehicles with entry function): →P.582
- Starting the hybrid system: →P.583

■ **Customization**

Some functions can be customized. (→P.610)

■ **If the smart entry & start system has been deactivated in a customized setting**

- Locking and unlocking the doors (vehicles with entry function): Use the wireless remote control or mechanical key. (→P.145, 582)
- Starting the hybrid system and changing power switch modes: →P.583
- Stopping the hybrid system: →P.232

Certification for the smart entry & start system

Transmitter: Model: TMLF18D-1
Operation frequency: 125 kHz
Maximum output power (ERP): 0.41mW

Manufacturer: TOYOTA MOTOR CORPORATION
Address: 1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
https://www.denso.com/global/en/contact-us/doc/

01

TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen.
EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
https://www.denso.com/global/en/contact-us/doc/

02

Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU.
De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
https://www.denso.com/global/en/contact-us/doc/

03

Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
https://www.denso.com/global/en/contact-us/doc/

04

zzcv03ai053a

Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://www.denso.com/global/en/contact-us/doc/ 05
Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www.denso.com/global/en/contact-us/doc/ 06
Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.denso.com/global/en/contact-us/doc/ 07
Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: https://www.denso.com/global/en/contact-us/doc/ 08
Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://www.denso.com/global/en/contact-us/doc/ 09

zzcv03ai0535b

Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.denso.com/global/en/contact-us/doc/ 10
O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: https://www.denso.com/global/en/contact-us/doc/ 11
B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: https://www.denso.com/global/en/contact-us/doc/ 12
Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://www.denso.com/global/en/contact-us/doc/ 13
TOYOTA MOTOR CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: https://www.denso.com/global/en/contact-us/doc/ 14

zzcv03ai053c

TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ.
Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
https://www.denso.com/global/en/contact-us/doc/

15

Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU.
Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
https://www.denso.com/global/en/contact-us/doc/

16

TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU.
Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
https://www.denso.com/global/en/contact-us/doc/

17

Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES.
Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
https://www.denso.com/global/en/contact-us/doc/

18

Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES.
Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
https://www.denso.com/global/en/contact-us/doc/

19

zzcv03ai053d

TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE.
Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
https://www.denso.com/global/en/contact-us/doc/

20

Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.
Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð:
https://www.denso.com/global/en/contact-us/doc/

21

TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU.
Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:
https://www.denso.com/global/en/contact-us/doc/

22

С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/ЕС.
Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
https://www.denso.com/global/en/contact-us/doc/

23

Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE.
Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
https://www.denso.com/global/en/contact-us/doc/

24

zzcv03ai053e

TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
https://www.denso.com/global/en/contact-us/doc/

25

Ovim, TOYOTA MOTOR CORPORATION, izjavljuje da ovaj TMLF18D-1 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.

26

Ovim, TOYOTA MOTOR CORPORATION, deklariše da je TMLF18D-1 u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 1999/5/EC.

27

Nepermjet kesaj, TOYOTA MOTOR CORPORATION, deklaroj qe ky TMLF18D-1 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.

28

CE

The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:
https://www.denso.com/global/en/contact-us/doc/

zzcv03ai053

טויוטה מוטור אירופה נו\סא, שדרות דו בורגט 60-1140 בריסל,

בלגיה www.toyota-europe.com

מוצר	: מתנד חכם LF
סימן רשום	: TOYOTA
ארץ ייצור	: ראה מוצר
דגם	: TMLF18D-1
שנת ייצור	: ראה מוצר

zzcv03ai054a

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type B2U2K2R is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
http://www.tokai-rika.co.jp/pc

Frequency band: 433.050 - 434.790 MHz
Maximum radio-frequency power: 10mW(ERP)

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi B2U2K2R on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
http://www.tokai-rika.co.jp/pc

Radiotaajuus: 433.050 - 434.790 MHz
suurin mahdollinen lähetysteho: 10mW(ERP)

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur B2U2K2R conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
http://www.tokai-rika.co.jp/pc

Frequentieband: 433.050 - 434.790 MHz
Maximaal radiofrequentievermogen: 10mW(ERP)

zzcv03ai055a

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type B2U2K2R est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
http://www.tokai-rika.co.jp/pc

Bande de fréquences: 433.050 - 434.790 MHz
Puissance de radiofréquence maximale: 10mW(ERP)

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning B2U2K2R överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
http://www.tokai-rika.co.jp/pc

Frekvensband: 433.050 - 434.790 MHz
Maximal radiofrekvenseffekt: 10mW(ERP)

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen B2U2K2R er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
http://www.tokai-rika.co.jp/pc

Frekvensbånd: 433.050 - 434.790 MHz
Maksimal radiofrekvenseffekt: 10mW(ERP)

zzcv03ai055b

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp B2U2K2R der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
http://www.tokai-rika.co.jp/pc

Frequenzband: 433.050 - 434.790 MHz
Abgestrahlte maximale Sendeleistung: 10mW(ERP)

Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός B2U2K2R πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
http://www.tokai-rika.co.jp/pc

Ζώνη συχνοτήτων: 433.050 - 434.790 MHz
Μέγιστη ισχύς ραδιοσυχνότητας: 10mW(ERP)

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio B2U2K2R è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
http://www.tokai-rika.co.jp/pc

Banda di frequenza: 433.050 - 434.790 MHz
Potenza massima radiofrequenza: 10mW(ERP)

zzcv03ai055c

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico B2U2K2R es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
http://www.tokai-rika.co.jp/pc

Banda de frecuencia: 433.050 - 434.790 MHz
Potencia máxima de radiofrecuencia: 10mW(ERP)

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio B2U2K2R está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
http://www.tokai-rika.co.jp/pc

Banda de frequência: 433.050 - 434.790 MHz
Potência máxima de radiofrequências: 10mW(ERP)

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju B2U2K2R huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:
http://www.tokai-rika.co.jp/pc

Tíðnisvið: 433.050 - 434.790 MHz
Hámarks útvarpsbylgjutíðni: 10mW(ERP)

zzcv03ai055d

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp B2U2K2R vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
http://www.tokai-rika.co.jp/pc

Sagedusriba: 433.050 - 434.790 MHz
Maksimaalne saatevõimsus: 10mW(ERP)

TOKAI RIKA CO., LTD. igazolja, hogy a B2U2K2R típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
http://www.tokai-rika.co.jp/pc

Frekvenciasáv: 433.050 - 434.790 MHz
Maximális jelerősség: 10mW(ERP)

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu B2U2K2R je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
http://www.tokai-rika.co.jp/pc

Frekvenčné pásmo: 433.050 - 434.790 MHz
Maximálny rádiofrekvenčný výkon: 10mW(ERP)

zzcv03ai055e

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení B2U2K2R je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
http://www.tokai-rika.co.jp/pc

Kmitočtové pásmo: 433.050 - 434.790 MHz
Maximální radiofrekvenční výkon: 10mW(ERP)

TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme B2U2K2R skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
http://www.tokai-rika.co.jp/pc

Frekvenčni pas: 433.050 - 434.790 MHz
Največja moč radijske frekvence: 10mW(ERP)

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas B2U2K2R atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
http://www.tokai-rika.co.jp/pc

Dažnių juosta: 433.050 - 434.790 MHz
Didžiausia radijo dažnių galia: 10mW(ERP)

zzcv03ai055f

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta B2U2K2R atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
http://www.tokai-rika.co.jp/pc

Frekvenču josla: 433.050 - 434.790 MHz
Maksimālā radiofrekvenču jauda: 10mW(ERP)

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego B2U2K2R jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
http://www.tokai-rika.co.jp/pc

Zakres częstotliwości: 433.050 - 434.790 MHz
Maksymalna moc częstotliwości radiowej: 10mW(ERP)

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð B2U2K2R er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð:
http://www.tokai-rika.co.jp/pc

Tíðnisvið: 433.050 - 434.790 MHz
Hámarks útvarpsbylgjutíðni: 10mW(ERP)

zzcv03ai055g

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen B2U2K2R er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:
http://www.tokai-rika.co.jp/pc

Frekvensbånd: 433.050 - 434.790 MHz
Maksimal radiofrekvenseffekt: 10mW(ERP)

С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение B2U2K2R е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
http://www.tokai-rika.co.jp/pc

Радиочестотна лента: 433.050 - 434.790 MHz
Максимална радиочестотна мощност: 10mW(ERP)

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio B2U2K2R este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
http://www.tokai-rika.co.jp/pc

Banda de frecvență: 433.050 - 434.790 MHz
Puterea maximă de radiofrecvență: 10mW(ERP)

zzcv03ai055h

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa B2U2K2R u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:
http://www.tokai-rika.co.jp/pc

Frekvencijski opseg: 433.050 - 434.790 MHz
Maksimalna radio-frekvencijska snaga: 10mW(ERP)

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes B2U2K2R është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:
http://www.tokai-rika.co.jp/pc

Brezi i frekuencës: 433.050 - 434.790 MHz
Fuqia maksimale e radiofrekuencës: 10mW(ERP)

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa B2U2K2R u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
http://www.tokai-rika.co.jp/pc

Frekvencijski pojas: 433.050 - 434.790 MHz
Maksimalna RF snaga: 10mW(ERP)

zzcv03ai055

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa B2U2K2R u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:
http://www.tokai-rika.co.jp/pc

Frekventni opseg: 433.050 - 434.790 MHz
Maksimalna radio-frekventna snaga: 10mW(ERP)

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün B2U2K2R 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:
http://www.tokai-rika.co.jp/pc

Frekans bandı: 433.050 - 434.790 MHz
Maksimum radyo frekans gücü: 10mW(ERP)

zzcv03ai055j

CE

Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

zzcv03ai055k



zzcv03ai056a

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BF3US is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BF3US on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
http://www.tokai-rika.co.jp/pc

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BF3US conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
http://www.tokai-rika.co.jp/pc

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BF3US est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
http://www.tokai-rika.co.jp/pc

zzcv03ai057a

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BF3US överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
http://www.tokai-rika.co.jp/pc

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BF3US er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
http://www.tokai-rika.co.jp/pc

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BF3US der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
http://www.tokai-rika.co.jp/pc

Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BF3US πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
http://www.tokai-rika.co.jp/pc

zzcv03ai057b

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BF3US è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
http://www.tokai-rika.co.jp/pc

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BF3US es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
http://www.tokai-rika.co.jp/pc

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BF3US está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
http://www.tokai-rika.co.jp/pc

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BF3US huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:
http://www.tokai-rika.co.jp/pc

zzcv03ai057c

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BF3US vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. igazolja, hogy a BF3US típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BF3US je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
http://www.tokai-rika.co.jp/pc

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BF3US je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
http://www.tokai-rika.co.jp/pc

zzcv03ai057d

TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BF3US skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
http://www.tokai-rika.co.jp/pc

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BF3US atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
http://www.tokai-rika.co.jp/pc

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BF3US atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BF3US jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BF3US er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð:
http://www.tokai-rika.co.jp/pc

zzcv03ai057e

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BF3US er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:
http://www.tokai-rika.co.jp/pc

С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BF3US е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
http://www.tokai-rika.co.jp/pc

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BF3US este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
http://www.tokai-rika.co.jp/pc

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BF3US u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:
http://www.tokai-rika.co.jp/pc

zzcv03ai057f

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BF3US është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BF3US u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
http://www.tokai-rika.co.jp/pc

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BF3US u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BF3US 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:
http://www.tokai-rika.co.jp/pc

zzcv03ai057g

CE

Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category (EN300 220): 2

zzcv03ai057h

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BG2KV is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BG2KV on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
http://www.tokai-rika.co.jp/pc

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BG2KV conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
http://www.tokai-rika.co.jp/pc

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BG2KV est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
http://www.tokai-rika.co.jp/pc

zzcv03ai058a

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BG2KV överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
http://www.tokai-rika.co.jp/pc

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BG2KV er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
http://www.tokai-rika.co.jp/pc

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BG2KV der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
http://www.tokai-rika.co.jp/pc

Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BG2KV πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
http://www.tokai-rika.co.jp/pc

zzcv03ai058b

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BG2KV è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
http://www.tokai-rika.co.jp/pc

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BG2KV es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
http://www.tokai-rika.co.jp/pc

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BG2KV está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
http://www.tokai-rika.co.jp/pc

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BG2KV huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:
http://www.tokai-rika.co.jp/pc

zzcv03ai058c

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BG2KV vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. igazolja, hogy a BG2KV típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BG2KV je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
http://www.tokai-rika.co.jp/pc

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BG2KV je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
http://www.tokai-rika.co.jp/pc

zzcv03ai058d

TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BG2KV skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
http://www.tokai-rika.co.jp/pc

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BG2KV atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
http://www.tokai-rika.co.jp/pc

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BG2KV atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BG2KV jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BG2KV er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð:
http://www.tokai-rika.co.jp/pc

zzcv03ai058e

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BG2KV er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:
http://www.tokai-rika.co.jp/pc

С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BG2KV е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
http://www.tokai-rika.co.jp/pc

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BG2KV este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
http://www.tokai-rika.co.jp/pc

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BG2KV u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:
http://www.tokai-rika.co.jp/pc

zzcv03ai058f

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BG2KV është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BG2KV u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
http://www.tokai-rika.co.jp/pc

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BG2KV u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BG2KV 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:
http://www.tokai-rika.co.jp/pc

zzcv03ai058g

CE

Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category (EN300 220): 2

zzcv03ai058h

WARNING


■ **Caution regarding interference with electronic devices**

- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the smart entry & start system antennas. (→P.160)
  The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.
- Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.
  Radio waves could have unexpected effects on the operation of such medical devices.

Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details on disabling the entry function.

Front seats

Adjustment procedure

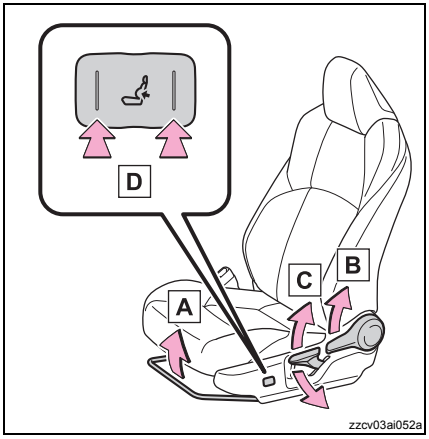

A Seat position adjustment lever

B Seatback angle adjustment lever

C Vertical height adjustment lever*

D Lumbar support adjustment switch* (driver's side only)

*: If equipped

WARNING

■ When adjusting the seat position

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury.
  Fingers or hands may become jammed in the seat mechanism.
- Make sure to leave enough space around the feet so they do not get stuck.

■ Seat adjustment

- Be careful that the seat does not hit passengers or luggage.
- To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.
  If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.
  Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.
- After adjusting the seat, make sure that the seat is locked in position.

NOTICE

■ When adjusting a front seat

When adjusting a front seat, make sure that the head restraint does not contact the headliner. Otherwise, the head restraint and headliner may be damaged.

Rear seats


The seatbacks of the rear seats can be folded down.

Folding down the rear seatbacks

1 Move the front seats forward. (→P.198)

2 Stow the rear armrest. (if equipped) (→P.474)

3 Stow the rear center seat belt buckle.

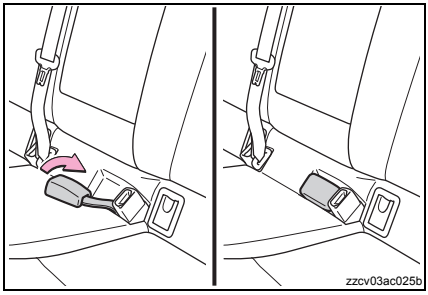


4 Lower the head restraints to the lowest position. (→P.201)

▶ Rear seat lever

5 Pull the seatback lock release lever and fold the seatback down.


Each seatback may be folded separately.

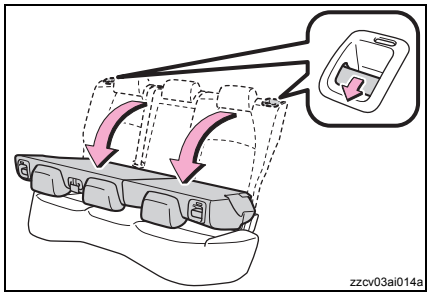

▶ Luggage room lever (if equipped)

5 Pull the lever on the sidewall of the luggage compartment.

Each seatback may be folded separately.

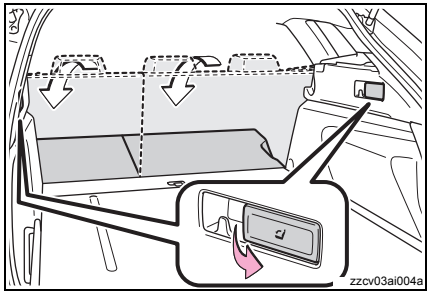

WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

■ **When folding the rear seatbacks down**

- Do not fold the seatbacks down while driving.
- Stop the vehicle on level ground, set the parking brake and shift the shift lever to P.
- Do not allow anyone to sit on a folded seatback or in the luggage compartment while driving.


WARNING

- Do not allow children to enter the luggage compartment.
- Be careful not to get your hand caught when folding the rear seatbacks.
- Adjust the position of the front seats before folding down the rear seatbacks so that the front seats do not interfere with the rear seatbacks when folding down the rear seatbacks.
- Make sure that the rear seat is free of passengers before operating the luggage room lever (if equipped).

■ After returning the rear seatback to the upright position


- Make sure that the seatback is securely locked in position by lightly pushing it back and forth.

If the seatback is not securely locked, the red mark will be visible on the rear of the seatback lock release lever. Make sure that the red mark is not visible.

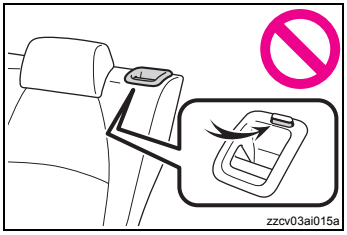

- Check that the seat belts are not twisted or caught in the seatback.

If the seat belt gets caught between the seatback's securing hook and latch, it may damage the seat belt.

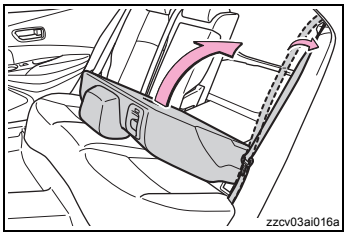

NOTICE

■ When using the luggage room lever (if equipped)

Before folding a rear seat seatback, make sure that the seat is free of obstructions. If the seatback is folded while an object is on the rear seat, the rear seat may be damaged.

■ When the partition net unit is installed to the folded down rear seatbacks (vehicles with a partition net)

When returning the seatbacks, remove the partition net unit then return the rear seatbacks to their original position. (→P.465)

Head restraints

Head restraints are provided for the front seats, rear outboard seats and rear center seat (if equipped).

WARNING


■ Head restraint precautions

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

Adjusting a head restraint

■ Front seats

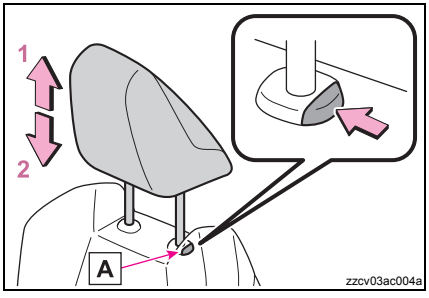


1 Up

Pull the head restraints up.

2 Down

Push the head restraint down while pressing the lock release button A.

■ Rear seats

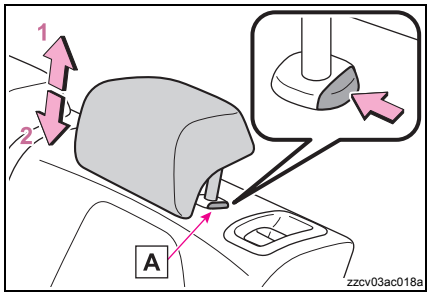

1 Up


Pull the head restraints up.

2 Down

Push the head restraint down while pressing the lock release button A.

■ Adjusting the height of the head restraints (front seats)

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

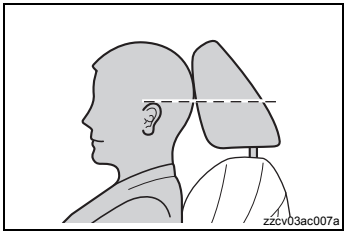


■ Adjusting the rear seat head restraints

Always raise the head restraint one level from the stowed position when using.

Removing the head restraints


Pull the head restraint up while pressing the lock release button A.

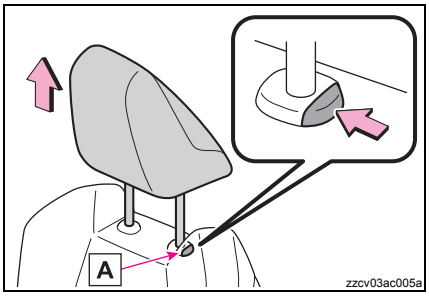

Installing the head restraints

Align the head restraint with the installation holes and push it down to the lock position.


Press and hold the lock release button A when lowering the head restraint.

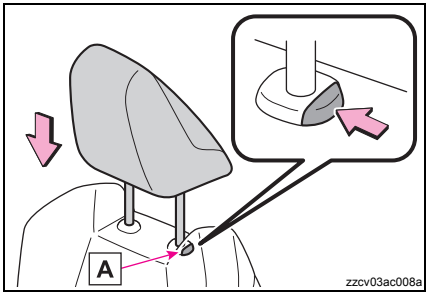

Steering wheel


Adjustment procedure

1 Hold the steering wheel and push the lever down.

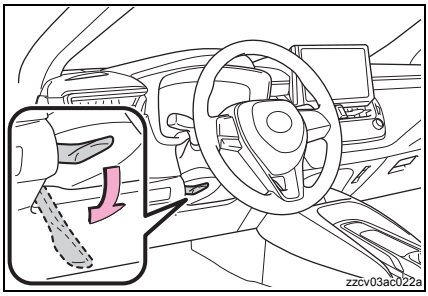

2 Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

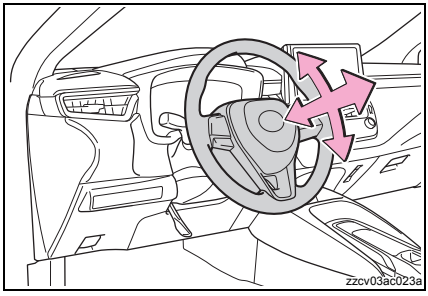

WARNING

■ Caution while driving


Do not adjust the steering wheel while driving.
Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

■ After adjusting the steering wheel

Make sure that the steering wheel is securely locked.
Otherwise, the steering wheel may move suddenly, possibly causing an accident, and resulting in death or serious injury. Also, the horn may not sound if the steering wheel is not securely locked.

Horn

To sound the horn, press on or close to the mark.

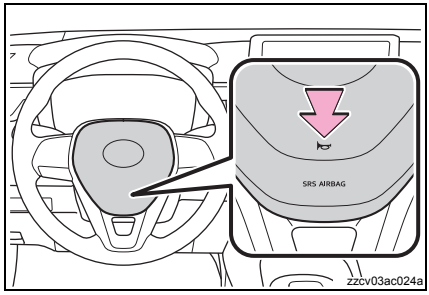


Inside rear view mirror

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

Adjusting the height of rear view mirror

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

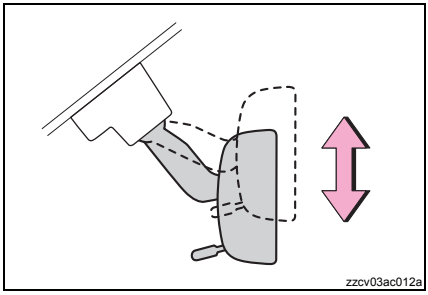

WARNING


■ Caution while driving

Do not adjust the position of the mirror while driving.
Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

Anti-glare function

▶ Manual anti-glare inside rear view mirror

Reflected light from the headlights of vehicles behind can be reduced by operating the lever.

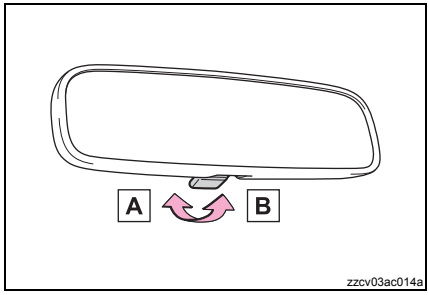

A Normal position

B Anti-glare position

▶ Auto anti-glare inside rear view mirror


Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.

Changing automatic anti-glare function mode

On/off


When the automatic anti-glare function is in ON mode, the indicator A illuminates. The function will set to ON mode each time the power switch is turned to ON.

Pressing the button turns the function to off mode. (The indicator A also turns off.)

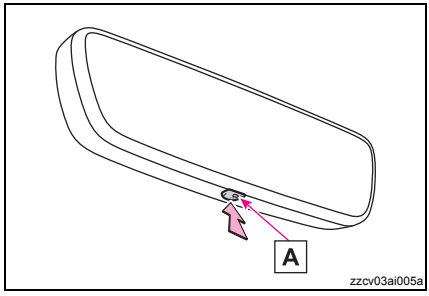

To prevent sensor error (vehicles with an auto anti-glare inside rear view mirror)

To ensure that the sensors operate properly, do not touch or cover them.

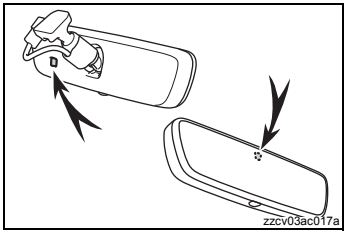

Outside rear view mirrors

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

WARNING


Important points while driving

Observe the following precautions while driving.
Failure to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

Adjustment procedure


1 To select a mirror to adjust, turn the switch.

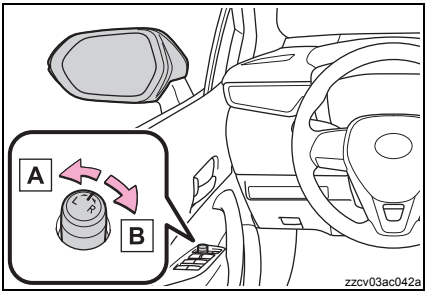

A Left

B Right

2 To adjust the mirror, operate the switch.

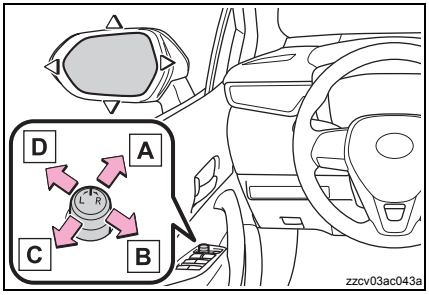

A Up

B Right

C Down

D Left

■ Mirror angle can be adjusted when

The power switch is in ACC or ON.

■ When the mirrors are fogged up

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. (→446)

⚠ WARNING


■ When the mirror defoggers are operating

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.


Folding and extending the mirrors

▶ Manual type

Push the mirror back in the direction of the vehicle's rear.

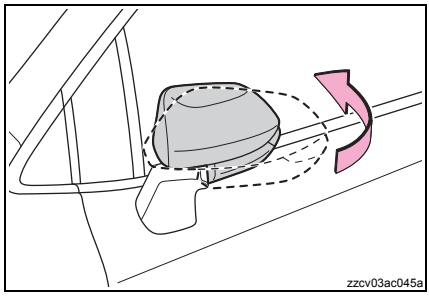

▶ Power type

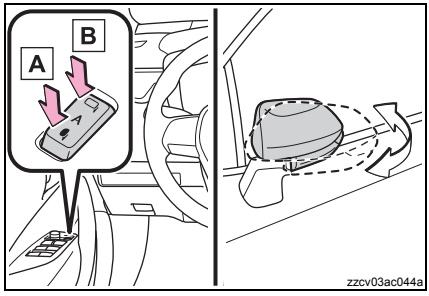

A Folds the mirrors

B Extends the mirrors

Putting the outside rear view mirror folding switch in the neutral position sets the mirrors to automatic mode. Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

■ Using automatic mode in cold weather (vehicles with automatic mode)

When automatic mode is used in cold weather, the door mirror could freeze up and automatic stowing and return may not be possible. In this case, remove any ice and snow from the door mirror, then either operate the mirror using manual mode or move the mirror by hand.

■ Customization

Some functions can be customized. (→P.610)

WARNING


■When a mirror is moving

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

Power windows

Opening and closing the power windows

The power windows can be opened and closed using the switches. Operating the switch moves the windows as follows:

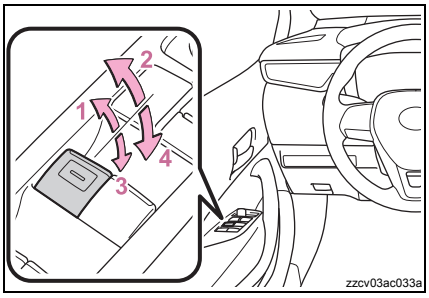

1 Closing

2 One-touch closing*

3 Opening

4 One-touch opening*

*: To stop the window partway, operate the switch in the opposite direction.

■ The power windows can be operated when

The power switch is in ON.

■ Operating the power windows after turning the hybrid system off

The power windows can be operated for approximately 45 seconds after the power switch is turned to ACC or OFF. They cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object becomes jammed between the window and the window frame while the window is closing, window movement is stopped and the window is opened slightly.

■ Catch protection function

If an object becomes caught between the door and window while the window is opening, window movement is stopped.

■ When the window cannot be opened or closed

When the jam protection function or catch protection function operates unusually and the door window cannot be opened or closed, perform the following operations with the power window switch of that door.

- Stop the vehicle. With the power switch in ON, within 4 seconds of the jam protection function or catch protection function activating, continuously operate the power window switch in the one-touch closing direction or one-touch opening direction so that the door window can be opened and closed.
- If the door window cannot be opened and closed even when performing the above operations, perform the following procedure for function initialization.

1 Turn the power switch to ON.

2 Pull and hold the power window switch in the one-touch closing direction and completely close the door window.

3 Release the power window switch for a moment, resume pulling the switch in the one-touch closing direction, and hold it there for approximately 6 seconds or more.

4 Press and hold the power window switch in the one-touch opening direction. After the door window is completely opened, continue holding the switch for an additional 1 second or more.

5 Release the power window switch for a moment, resume pushing the switch in the one-touch opening direction, and hold it there for approximately 4 seconds or more.

6 Pull and hold the power window switch in the one-touch closing

direction again. After the door window is completely closed, continue holding the switch for a further 1 second or more.

If you release the switch while the window is moving, start again from the beginning.
If the window reverses and cannot be fully closed or opened, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Door lock linked window operation

- The power windows can be opened and closed using the mechanical key.* (→P.583)
- The power windows can be opened and closed using the wireless remote control.* (→P.145)

*: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Customization


Some functions can be customized. (→P.610)

WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

Closing the windows

- The driver is responsible for all the power window operations, including the operation for the passengers. In order to prevent accidental operation, especially by a child, do not let a child operate the power windows. It is possible for children and other passengers to have body parts caught in the power window. Also, when riding with a child, it is recommended to use the window lock switch. (→P.210)
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.

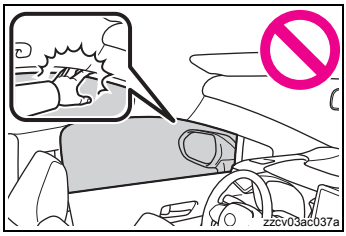

- When using the wireless remote control or mechanical key and operating the power windows, operate the power window after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window. Also do not let a child operate window by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the power window.
- When exiting the vehicle, turn the power switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets jammed just before the window is fully closed. Be careful not to get any part of your body jammed in the window.

Catch protection function

- Never use any part of your body or clothing to intentionally activate the catch protection function.

WARNING

- The catch protection function may not work if something gets caught just before the window is fully opened. Be careful not to get any part of your body or clothing caught in the window.


Preventing accidental operation (window lock switch)

This function can be used to prevent children from accidentally opening or closing a passenger window.

Press the switch.

The indicator A will come on and the passenger windows will be locked.

The passenger windows can still be opened and closed using the driver's switch even if the lock switch is on.

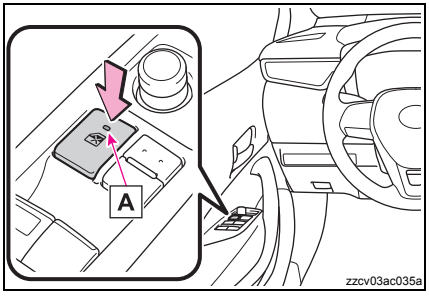

■ The power windows can be operated when

The power switch is in ON.

■ When the 12-volt battery is disconnected

The window lock switch is disabled. If necessary, press the window lock switch after reconnecting the 12-volt battery.


Panoramic moon roof*

*: If equipped

Use the overhead switches to operate the panoramic moon roof and electronic sunshade.

Operating the panoramic moon roof

■ Opening and closing the electronic sunshade

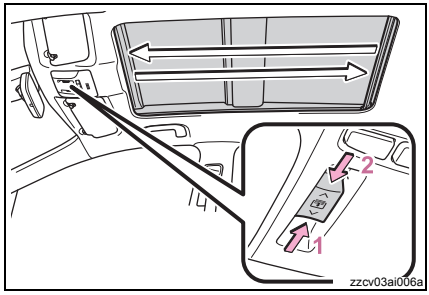

1 Opens the electronic sunshade*

Slide and hold the switch backward. The electronic sunshade will fully open automatically.

2 Closes the electronic sunshade*

Slide and hold the switch forward. The electronic sunshade will fully close automatically.

If the panoramic moon roof is not fully closed, it will close fully before the electronic sunshade closes.

*: Quickly slide and release the switch in either direction to stop the electronic sunshade partway.

■ Tilting the panoramic moon roof up and down


Press the switch to tilt the panoramic moon roof up.*

When the panoramic moon roof is tilted up, the electronic sunshade will open to the half-open position of the roof.

*: Lightly press the switch again to stop the panoramic moon roof partway.

Press and hold the switch to tilt the panoramic moon roof down.

The panoramic moon roof can be tilted down only when it is in the tilt-up position.

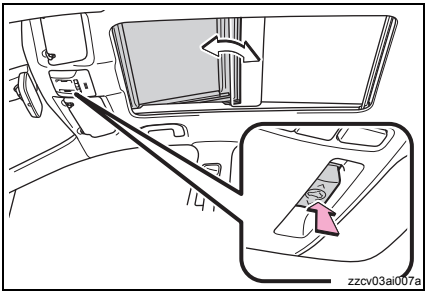


■ Opening and closing the panoramic moon roof

Opens the panoramic moon roof*

Slide and hold the switch backward. The panoramic moon roof and electronic sunshade will open automatically.


The panoramic moon roof can be opened from the tilt-up position.

*: Quickly slide and release the switch in either direction to stop the panoramic moon roof partway.

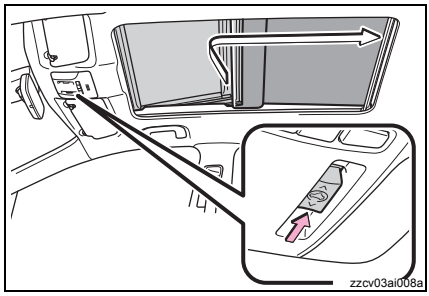

Closes the panoramic moon roof

The panoramic moon roof will fully close automatically.

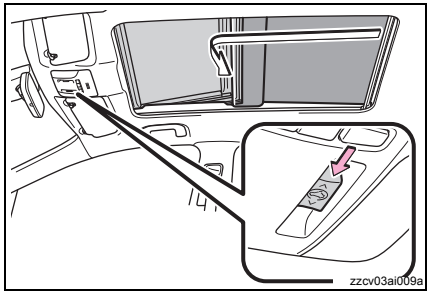

■ The panoramic moon roof can be operated when

The power switch is in ON.

■ Operating the panoramic moon roof after turning the hybrid system off

The panoramic moon roof and electronic sunshade can be operated for approximately 45 seconds after the power switch is turned to ACC or OFF. It cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object is detected between the panoramic moon roof and the frame in the following situations, travel is stopped

and the panoramic moon roof opens slightly:

- The panoramic moon roof is closing or tilting down.
- The electronic sunshade is closing.

Closing both the panoramic moon roof and electronic sunshade

Slide the  switch forward.

The electronic sunshade will close to the half-open position and pause. The panoramic moon roof will then fully close. Then the electronic sunshade will fully close.

Door lock linked panoramic moon roof operation

- The panoramic moon roof can be opened and closed using the mechanical key.* (→P.583)
- The panoramic moon roof can be opened and closed using the wireless remote control.* (→P.145)

*: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

When the panoramic moon roof or electronic sunshade does not close normally

Perform the following procedure:

1. Stop the vehicle.
2. Turn the power switch to ON.
3. Slide and hold the  switch or  switch forward. Continue pressing the switch for approximately 10 seconds after the panoramic moon roof or electronic sunshade closes and reopens. The panoramic moon roof and electronic sunshade will start to close.*
4. Check that the panoramic moon roof and electronic sunshade are fully closed and release the switch.

*: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.

If the panoramic moon roof or electronic sunshade does not fully close even after performing the above procedure correctly, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Customization


Some functions can be customized. (→P.610)

WARNING

Observe the following precautions. Failing to do so may cause death or serious injury.

Opening and closing the electronic sunshade

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the electronic sunshade is being operated.
- Do not let a child operate the electronic sunshade. Closing the electronic sunshade on someone can cause death or serious injury.

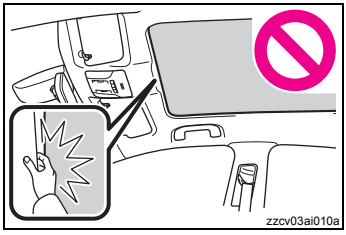


WARNING

Opening the panoramic moon roof

- Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- Do not sit on top of the panoramic moon roof.

Opening and closing the panoramic moon roof

- The driver is responsible for panoramic moon roof opening and closing operations. In order to prevent accidental operation, especially by a child, do not let a child operate the panoramic moon roof. It is possible for children and other passengers to have body parts caught in the panoramic moon roof.
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the panoramic moon roof is being operated.

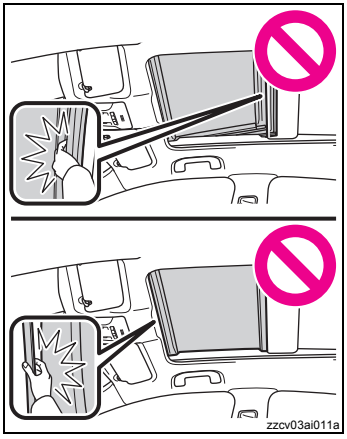

- When using the wireless remote control or mechanical key and operating the panoramic moon roof, operate the panoramic moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the panoramic moon roof. Also, do not let a child operate panoramic moon roof by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the panoramic moon roof.
- When exiting the vehicle, turn the power switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the panoramic moon roof or electronic sunshade is fully closed. Also, the jam protection function is not designed to operate while the switch is being pressed. Take care so that your fingers, etc. do not get caught.

To prevent burns or injuries

Do not touch the area between the underside of the panoramic moon roof and the electronic sunshade. Your hand may get caught and you could injure yourself. Also, if the vehicle is left in direct sunlight for a long time, the underside of the panoramic moon roof could become very hot and could cause burns.

NOTICE

■ **To prevent damage to the panoramic moon roof**

- Before opening the panoramic moon roof, make sure that there are no foreign objects, such as stones or ice, around the opening.
- Do not hit the surface or edge of the panoramic moon roof with hard objects.

■ **After the vehicle has been washed or rained on**

Before opening the panoramic moon roof, wipe any water off the panoramic moon roof. Otherwise, water may enter the cabin when the panoramic moon roof is opened.

4-1. Before driving

Driving the vehicle 216

Cargo and luggage 222

Trailer towing 223

4-2. Driving procedures

Power (ignition) switch.....230

EV drive mode 234

Hybrid transmission (vehicles without paddle shift switches) 236

Hybrid transmission (vehicles with paddle shift switches) 239

Turn signal lever 243

Parking brake 243

Brake Hold.....246

4-3. Operating the lights and wipers

Headlight switch 249

Automatic High Beam.....252

AHS (Adaptive High-beam System) 255

Fog light switch.....258

Windshield wipers and washer 260

Rear window wiper and washer 263

4-4. Refueling

Opening the fuel tank cap 265

4-5. Using the driving support systems

Toyota Safety Sense.....267

PCS (Pre-Collision System) 278

LTA (Lane Tracing Assist) 286

Dynamic radar cruise control with full-speed range 295

Cruise control.....306

Speed limiter.....308

RSA (Road Sign Assist)....311

BSM (Blind Spot Monitor) 315

Toyota parking assist-sensor 323

RCTA (Rear Crossing Traffic Alert) function 331

PKSB (Parking Support Brake) 336

Parking Support Brake function (static objects) 342

Parking Support Brake function (rear-crossing vehicles) ..348

S-IPA (Simple Intelligent Parking Assist System) 352

Driving mode select switch 378

GPF (Gasoline Particulate Filter) system.....380

Driving assist systems 381

4-6. Driving tips

Hybrid vehicle driving tips 386

Winter driving tips 388

Driving the vehicle

The following procedures should be observed to ensure safe driving:

Driving procedure

■ **Starting the hybrid system**

→P.230

■ **Driving**

1 With the brake pedal depressed, shift the shift lever to D. (→P.236)

2 If the parking brake is in manual mode, release the parking brake. (→P.243)

3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

■ **Stopping**

1 With the shift lever in D, depress the brake pedal.

2 If necessary, set the parking brake.

If the vehicle is to be stopped for an extended period of time, shift the shift lever to P. (→P.236)

■ **Parking the vehicle**

1 With the shift lever in D, depress the brake pedal to stop the vehicle completely.

2 Set the parking brake (→P.243), and shift the shift lever to P. (→P.236)

Check the parking brake indicator is illuminated.

3 Press the power switch to stop the hybrid system.

4 Slowly release the brake pedal.

5 Lock the door, making sure that you have the electronic key on your person.

If parking on a hill, block the wheels as needed.

■ **Starting off on a steep uphill**

1 Make sure that the parking brake is set and shift the shift lever to D.

Hill-start assist control will operate. (→P.381)

2 Gently depress the accelerator pedal.

3 Release the parking brake.

■ **For fuel-efficient driving**

Keep in mind that hybrid vehicles are similar to conventional vehicles, and it is necessary to refrain from activities such as sudden acceleration. (→P.386)

■ **Driving in the rain**

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

■ **Restraining the hybrid system output (Brake Override System)**

- When the accelerator and brake ped-

als are depressed at the same time, the hybrid system output may be restrained.

● A warning message is displayed on the multi-information display while the system is operating.

■ ECO Accelerator Guidance (→P.126)

Eco-friendly driving may be achieved more easily by staying within the zone of Eco acceleration. Also, by staying within the zone of Eco acceleration, it will be easier to obtain a good Eco score.

● When starting off:

Gradually depress the accelerator pedal to stay within the zone of Eco acceleration and accelerate to the desired speed. By refraining from excessive acceleration, a good eco start score will be obtained.

● When driving:

After accelerating to the desired speed, release the accelerator pedal and drive at a stable speed while staying within the zone of Eco acceleration. By staying within the zone of Eco acceleration, a good eco cruise score will be obtained.

● When stopping:

By starting to release the accelerator pedal early before decelerating, a good eco stop score will be obtained.

■ Restraining sudden start (Drive-Start Control)

● When the following unusual operation is performed, the hybrid system output may be restrained.

- When the shift lever is shifted from R to D, D to R, N to R, P to D[*1], or P to R[*1] (D includes B[*2] and S[*3]) with the accelerator pedal depressed, a warning message appears on the multi-information display. If a warning message is shown on the multi-information display, read the message and follow the instruction.
- When the accelerator pedal is depressed too much while the vehicle is in reverse.

[*1]: Depending on the situation, the shift position may not be changed.

[*2]: Vehicles without paddle shift switches

[*3]: Vehicles with paddle shift switches

● While Drive-Start Control is being activated, your vehicle may have trouble escaping from the mud or fresh snow. In such case, deactivate TRC (→P.382) to cancel Drive-Start Control so that the vehicle may become able to escape from the mud or fresh snow.

■ Breaking in your new Toyota

To extend the life of the vehicle, observing the following precautions is recommended:

● For the first 300 km (186 miles):

Avoid sudden stops.

● For the first 800 km (500 miles):

Do not tow a trailer.

● For the first 1000 km (621 miles):

- Do not drive at extremely high speeds.
- Avoid sudden acceleration.
- Do not drive at a constant speed for extended periods.

■ Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P.601)

WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

■ When starting the vehicle

Always keep your foot on the brake pedal while stopped with the “READY” indicator is illuminated. This prevents the vehicle from creeping.

WARNING

■ When driving the vehicle

● Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.

- Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
- When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
- Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
- Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.

● The driver should pay extra attention to pedestrians when the vehicle is powered only by the electric motor (traction motor). As there is no engine noise, the pedestrians may misjudge the vehicle's movement.

● Do not drive the vehicle over or stop the vehicle near flammable materials.
The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.

● During normal driving, do not turn off the hybrid system. Turning the hybrid system off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so.
In the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way:
→P.534

● Vehicles without paddle shift switches: Use engine braking (shift position B) to maintain a safe speed when driving down a steep hill.
Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P.236)

● Vehicles with paddle shift switches: Use engine braking (downshift) to maintain a safe speed when driving down a steep hill.
Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P.239)

● Do not adjust the positions of the steering wheel, the seat, or the inside or outside rear view mirrors while driving.
Doing so may result in a loss of vehicle control.

● Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle.

■ When driving on slippery road surfaces

● Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle.

● Sudden acceleration, engine braking due to shifting, or changes in engine speed could cause the vehicle to skid.

WARNING

- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

When shifting the shift lever

- Do not let the vehicle roll backward while a forward driving position is selected, or roll forward while the shift lever is in R.
  Doing so may result in an accident or damage to the vehicle.
- Do not shift the shift lever to P while the vehicle is moving.
  Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to R while the vehicle is moving forward.
  Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to a driving position while the vehicle is moving backward.
  Doing so can damage the transmission and may result in a loss of vehicle control.
- Moving the shift lever to N while the vehicle is moving will disengage the hybrid system. Engine braking is not available with the hybrid system disengaged.
- Be careful not to shift the shift lever with the accelerator pedal depressed. Shifting the shift lever to any positions other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

If you hear a squealing or scraping noise (brake pad wear indicators)

Have the brake pads checked and replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

Rotor damage may result if the pads are not replaced when needed.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

When the vehicle is stopped

- Do not depress the accelerator pedal unnecessarily.
  If the shift lever is any position other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.
- In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while stopped with the “READY” indicator is illuminated, and apply the parking brake as necessary.
- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.
- Avoid revving or racing the engine. Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

WARNING

■When the vehicle is parked

●Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.
Doing so may result in the following:

- Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
- The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
- Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.

●Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.

●Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.

●Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.

●Always apply the parking brake, shift the shift lever to P, stop the hybrid system and lock the vehicle. Do not leave the vehicle unattended while the hybrid system is operating.
If the vehicle is parked with the shift lever in P but the parking brake is not set, the vehicle may start to move, possibly leading to an accident.

●Do not touch the exhaust pipes while the "READY" indicator is illuminated or immediately after turning the hybrid system off.
Doing so may cause burns.

■When taking a nap in the vehicle

Always turn the hybrid system off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to hybrid system overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

■When braking

●When the brakes are wet, drive more cautiously.
Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.

●If the electronically controlled brake system does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking.
In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.

WARNING

- The brake system consists of 2 or more individual hydraulic systems; if one of the systems fails, the other(s) will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. Have your brakes fixed immediately.

If the vehicle becomes stuck

Do not spin the wheels excessively when a driven wheel is up in the air, or the vehicle is stuck in sand, mud, etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident.

NOTICE

When driving the vehicle

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain the hybrid system output.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

When parking the vehicle

Always set the parking brake and shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

Avoiding damage to vehicle parts

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time. Doing so may damage the power steering motor.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

If you get a flat tire while driving

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds or vibrations.
- The vehicle will lean abnormally.

Information on what to do in case of a flat tire (→P.554, 566)

When encountering flooded roads

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle becomes flooded or stuck in mud or sand, be sure to have any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer check the following:

- Brake function
- Changes in quantity and quality of oil and fluid used for the engine, hybrid transmission, etc.
- Lubricant condition for the bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load:

WARNING

■ Things that must not be carried in the luggage compartment

The following things may cause a fire if loaded in the luggage compartment:

- Receptacles containing gasoline
- Aerosol cans

■ Storage precautions

Observe the following precautions. Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.


- Stow cargo and luggage in the luggage compartment whenever possible.
- Do not stack cargo and luggage in the luggage compartment higher than the seatbacks.
- When you fold down the rear seats, long items should not be placed directly behind the front seats.
- Do not place cargo or luggage in or on the following locations.
  - At the feet of the driver
  - On the front passenger or rear seats (when stacking items)
  - On the luggage cover
  - On the instrument panel
  - On the dashboard
- Secure all items in the occupant compartment.
- Never allow anyone to ride in the luggage compartment. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened.

■ Load and distribution

- Do not overload your vehicle.
- Do not apply loads unevenly. Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

■ Roof luggage carrier precautions (if equipped)

To use the roof rails as a roof luggage carrier, you must fit the roof rails with two genuine Toyota cross bars or their equivalent.
When you load cargo on the roof luggage carrier, observe the following:

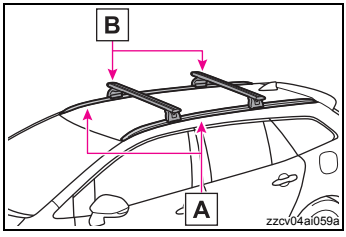

A Roof rails

B Cross bars

- Do not place any cargo directly onto the roof rails. This may lead to the cargo becoming dislodged, resulting in an accident.
- Place the cargo so that its weight is distributed evenly between the front and rear axles.
- If loading long or wide cargo, never exceed the vehicle overall length or width. (→P.598)

WARNING

- Before driving, make sure the cargo is securely fastened on the roof luggage carrier.
- Loading cargo on the roof luggage carrier will make the center of gravity of the vehicle higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly and result in death or serious injury.
- If driving for a long distance, on rough roads, or at high speeds, stop the vehicle occasionally during the trip to make sure the cargo remains in its place.
- Do not exceed 75 kg (165 lb.) cargo weight on the roof luggage carrier.

■ **When installing cross bars (vehicles with roof rails)**

Make sure the cross bars are installed securely by pushing them forward and rearward.
Failure to do so may cause an unexpected accident.

Trailer towing

Your vehicle is designed primarily as a passenger carrying vehicle. Towing a trailer will have an adverse effect on handling, performance, braking, durability, and fuel consumption. Your safety and satisfaction depend on the proper use of correct equipment and cautious driving habits. For your safety and the safety of others, do not overload the vehicle or trailer.

To tow a trailer safely, use extreme care and drive the vehicle in accordance with the trailer's characteristics and operating conditions.

Toyota warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes.

Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further information about additional requirements such as towing kits, etc.

Weight limits


Check the allowable towing capacity, GVM (Gross Vehicle Mass), MPAC (Maximum Permissible Axle Capacity), and permissible drawbar load before towing. (→P.598)

Towing hitch/bracket

Toyota recommends the use of the Toyota hitch/bracket for your vehicle. Other products of a suitable nature and comparable quality may also be used.

Important points regarding trailer loads

■ Total trailer weight and permissible drawbar load

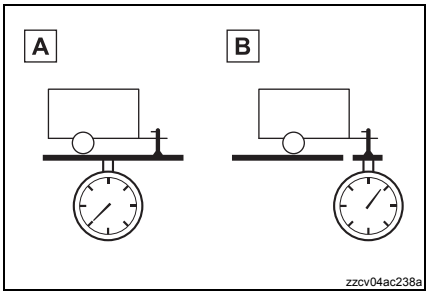

A Total trailer weight


Weight of the trailer itself plus the trailer load should be within the maximum towing capacity. Exceeding this weight is dangerous. (→P.598)

When towing a trailer, use a friction coupler or friction stabilizer (sway control device).

B Permissible drawbar load

Allocate the trailer load so that the drawbar load is greater than 25 kg (55.1 lb.) or 4% of the towing capacity. Do not let the drawbar load exceed the indicated weight. (→P.598)

■ Information tag (manufacturer's label)

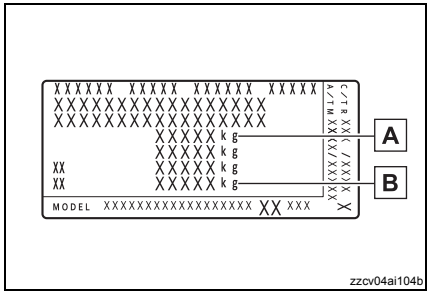

A Gross vehicle mass

The combined weight of the driver, passengers, luggage, towing hitch, total curb mass and drawbar load should not exceed the gross vehicle mass by more than 100 kg (220.5 lb.). Exceeding this weight is dangerous.

B Maximum permissible rear axle capacity

The weight borne by the rear axle should not exceed the maximum permissible rear axle capacity by 15% or more. Exceeding this weight is dangerous. The values for towing capacity were derived from testing conducted at sea level. Take note that engine output and towing capacity will be reduced at high altitudes.

WARNING

■ When the gross vehicle mass or maximum permissible axle capacity is exceeded

Failing to observe this precaution may lead to an accident causing death or serious injury.


- Add an additional 20.0 kPa (0.2 kgf/cm^2 or bar, 3 psi) to the recommended tire inflation pressure value. (→P.606)

WARNING

- Do not exceed the established speed limit for towing a trailer in built-up areas or 100 km/h (62 mph), whichever is the lower.


Installation positions for the towing hitch/bracket and hitch ball

▶ Hatchback

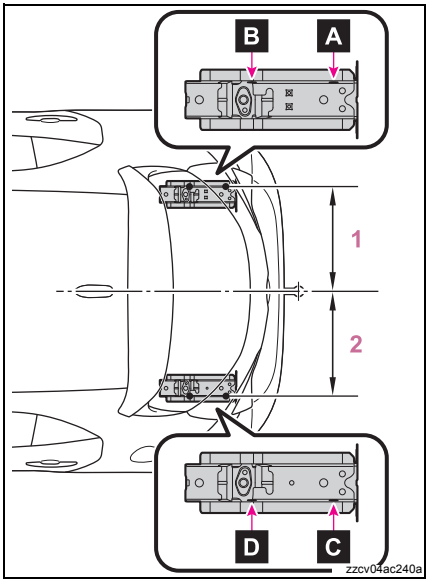

1 516 mm (20.31 in.)

2 516 mm (20.31 in.)

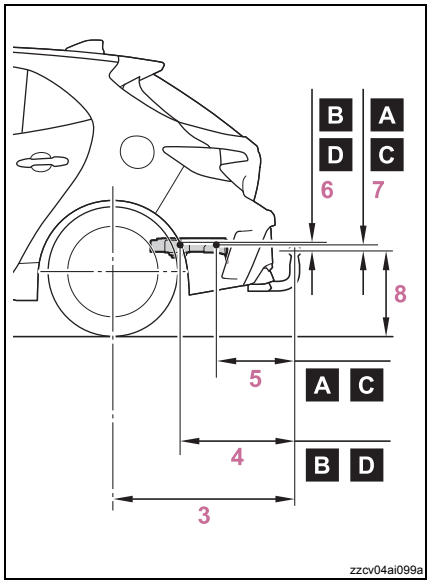

3 895 mm (35.23 in.)*1
896 mm (35.27 in.)*2

4 559 mm (22.00 in.)


5 380 mm (14.96 in.)

6 25 mm (0.98 in.)*1
26 mm (1.02 in.)*2

7 23 mm (0.90 in.)*1
24 mm (0.94 in.)*2


8 358 mm (14.09 in.)*1
371 mm (14.60 in.)*2

▶ Wagon

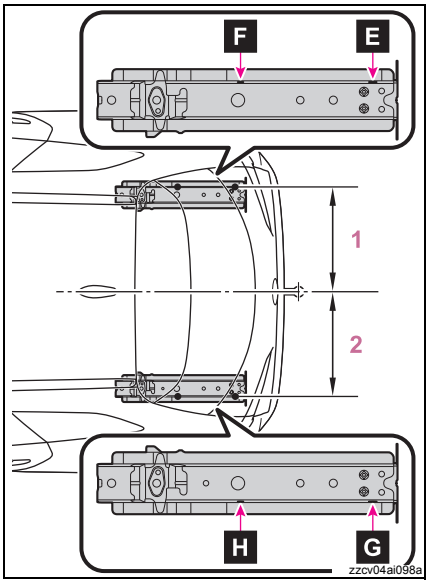

1 516 mm (20.31 in.)

2 516 mm (20.31 in.)

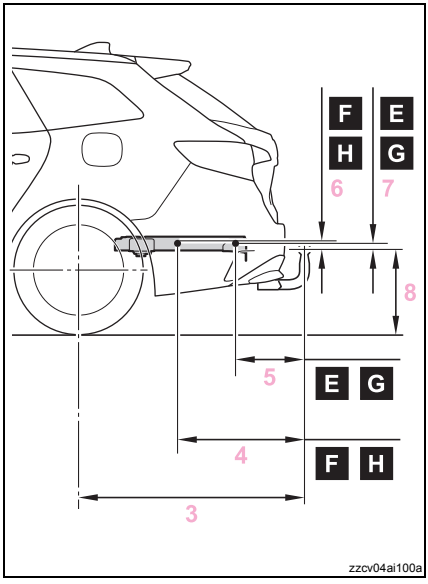

3 1105 mm (43.50 in.)*1
1106 mm (43.54 in.)*2

4 608 mm (23.93 in.)

5 325 mm (12.79 in.)

6 16 mm (0.62 in.)*1
18 mm (0.71 in.)*2

7 12 mm (0.47 in.)*1
13 mm (0.51 in.)*2

8 364 mm (14.33 in.)*1
376 mm (14.80 in.)*2

*1: Vehicles without a rough road package

*2: Vehicles with a rough road package

■ Tire information

- Increase the tire inflation pressure to 20.0 kPa (0.2 kgf/cm^2 or bar, 3 psi) greater than the recommended value when towing. (→P.598)
- Increase the air pressure of the trailer tires in accordance with the total trailer weight and according to the values recommended by the manufacturer of your trailer.

■ Trailer lights

Please consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer when installing trailer lights, as incorrect installation may cause damage to the vehicle's lights. Please take care to comply with your state's laws when installing trailer lights.

■ Break-in schedule

Toyota recommends that vehicles fitted with new power train components should not be used for towing trailers for the first 800 km (500 miles).

■ Safety checks before towing

- Check that the maximum load limit for the towing hitch/bracket hitch ball is not exceeded. Bear in mind that the coupling weight of the trailer will add to the load exerted on the vehicle. Also make sure that you will not be towing a load that exceeds the maxi-

mum permissible axle capacity.

- Ensure that the trailer load is secure.
- Supplementary outside rear view mirrors should be added to the vehicle if the traffic behind cannot be clearly seen with standard mirrors. Adjust the extending arms of these mirrors on both sides of the vehicle so that they always provide maximum visibility of the road behind.

■ **Maintenance**

- Maintenance must be performed more frequently when using the vehicle for towing due to the greater weight burden placed on the vehicle compared to normal driving.
- Retighten all bolts securing the hitching ball and bracket after towing for approximately 1000 km (600 miles).

⚠ NOTICE

■ **When the rear bumper strengthening material is aluminum**

Ensure the steel bracket part does not come directly in contact with that area.
When steel and aluminum come into contact, there is a reaction similar to corrosion, which will weaken the section concerned and may result in damage. Apply a rust inhibitor to parts that will come in contact when attaching a steel bracket.

Guidance

Your vehicle will handle differently when towing a trailer. In order to avoid accident, death or serious injury, keep the following in mind when towing:

■ **Checking connections between trailer and lights**

Stop the vehicle and check the operation of the connection between the trailer and lights after driving for a brief period as well as before starting off.

■ **Practicing driving with a coupled trailer**

- Get the feel for turning, stopping and reversing with the trailer coupled by practicing in an area with no or light traffic.
- When reversing with a coupled trailer, hold the section of the steering wheel nearest to you and rotate clockwise to turn the trailer left or counterclockwise to turn it right. Always rotate a little at a time to prevent steering error. Have someone guide you when reversing to lessen the risk of an accident.

■ **Increasing vehicle-to-vehicle distance**

At a speed of 10 km/h (6 mph), the distance to the vehicle running ahead of you should be equivalent to or greater than the combined length of your vehicle and trailer. Avoid sudden braking that may cause skidding. Otherwise, the vehicle may spin out of control. This is especially true when driving on wet or slippery road surfaces.

■ **Sudden acceleration/steering input/cornering**

Executing sharp turns when towing may result in the trailer colliding with your vehicle. Decelerate well in

advance when approaching turns and take them slowly and carefully to avoid sudden braking.

■ Important points regarding turning

The wheels of the trailer will travel closer to the inside of the curve than the wheels of the vehicle. To make allowance for this, take the turns wider than you would normally do.

■ Important points regarding stability

Vehicle movement resulting from uneven road surfaces and strong crosswinds will affect handling. The vehicle may also be rocked by passing buses or large trucks. Frequently check behind when moving alongside such vehicles. As soon as such vehicle movement occurs, immediately start to decelerate smoothly by slowly applying the brakes. Always steer the vehicle straight ahead while braking.

■ Passing other vehicles

Consider the total combined length of your vehicle and trailer and ensure that the vehicle-to-vehicle distance is sufficient before executing lane changes.

■ Transmission information

To maintain engine braking efficiency and charging system performance when using engine braking, do not use the transmission in D. (→P.236, 239)

■ If the engine overheats

Towing a loaded trailer up a long, steep incline in temperatures exceeding 30°C (85°F) may result in the engine overheating. If the engine coolant temperature gauge indicates that the engine is overheating, turn the air conditioning off immediately, leave the road and stop the vehicle in a safe place. (→P.590)

■ When parking the vehicle

Always place wheel chocks under the wheels of both the vehicle and trailer. Firmly set the parking brake and shift the shift lever to P.

⚠ WARNING

Follow all the instructions described in this section. Failure to do so could cause an accident resulting in death or serious injury.

■ Trailer towing precautions

When towing, make sure that none of the weight limits are exceeded. (→P.224)

■ Vehicle speed in towing

Observe the legal maximum speeds for trailer towing.

■ Before descending hills or long declines

Reduce speed and downshift. However, never downshift suddenly while descending steep or long downhill grades.

■ Operation of the brake pedal

Do not hold the brake pedal depressed often or for long periods of time. Doing so may result in the brake overheating or reduce braking effects.

WARNING

■ **To avoid accident or injury**

- Vehicles with a compact spare tire: Do not tow a trailer when the compact spare tire is installed on your vehicle.
- Vehicles with the emergency tire puncture repair kit: Do not tow a trailer when the tire installed is repaired with the emergency tire puncture repair kit.
- Do not use the following systems when trailer towing.
  - Cruise control (if equipped)
  - Dynamic radar cruise control with full-speed range (if equipped)

NOTICE

■ **Do not directly splice trailer lights**

Directly splicing trailer lights may damage your vehicle's electrical system and cause a malfunction.

Power (ignition) switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes power switch modes.

Starting the hybrid system

1 Pull the parking brake switch to check that the parking brake is set. (→P.243)

The parking brake indicator will come on.

2 Check that the shift lever is in P.

3 Firmly depress the brake pedal.

and a message will be displayed on the multi-information display. If it is not displayed, the hybrid system cannot be started.


4 Press the power switch shortly and firmly.

When operating the power switch, one short, firm press is enough. It is not necessary to press and hold the switch.

If the “READY” indicator turns on, the hybrid system will operate normally.

Continue depressing the brake pedal until the “READY” indicator is illuminated.

The hybrid system can be started from any power switch mode.

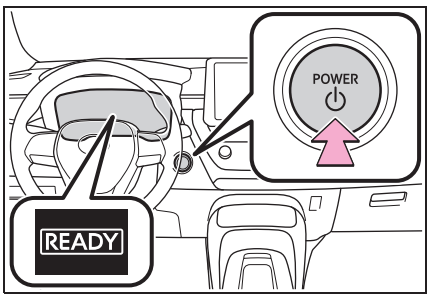

5 Check that the “READY” indicator is illuminated.

The vehicle cannot be driven if the “READY” indicator is off.

■ If the hybrid system does not start

- The immobilizer system may not have been deactivated. (→P.94) Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- If a message related to start-up is shown on the multi-information display, read the message and follow the instructions.

■ When the ambient temperature is low, such as during winter driving conditions

- When starting the hybrid system, the flashing time of the “READY” indicator may be long. Leave the vehicle as it is until the “READY” indicator is steady on, as steady means the vehicle is able to move.
- 2ZR-FXE engine: When the hybrid battery (traction battery) is extremely cold (below approximately -30°C [-22°F]) under the influence of the outside temperature, it may not be possible to start the hybrid system. In this case, try to start the hybrid system again after the temperature of the hybrid battery increases due to the outside temperature increase etc.

Sounds and vibrations specific to a hybrid vehicle

→P.88

If the 12-volt battery is discharged

The hybrid system cannot be started using the smart entry & start system. Refer to P.584 to restart the hybrid system.

Electronic key battery depletion

→P.142

Conditions affecting operation


→P.164

Notes for the entry function

→P.164

Steering lock function

- After turning the power switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the power switch again automatically cancels the steering lock.
- When the steering lock cannot be released, “Push POWER Switch while Turning the Steering Wheel in Either Direction” will be displayed on the multi-information display.
  Press the power switch shortly and firmly while turning the steering wheel left and right.

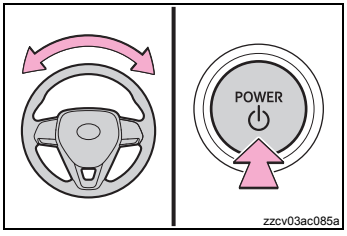

- To prevent the steering lock motor from overheating, the motor may be suspended if the hybrid system is turned on and off repeatedly in a short period of time. In this case, refrain from operating the power switch. After about 10 seconds, the steering lock motor will resume functioning.

If the “READY” indicator does not come on

In the event that the “READY” indicator does not come on even after performing the proper procedures for starting the vehicle, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

If the hybrid system is malfunctioning

→P.93

Electronic key battery

→P.522

Operation of the power switch

- If the switch is not pressed shortly and firmly, the power switch mode may not change or the hybrid system may not start.
- If attempting to restart the hybrid system immediately after turning the power switch off, the hybrid system may not start in some cases. After turning the power switch off, please wait a few seconds before restarting the hybrid system.

Customization

If the smart entry & start system has been deactivated in a customized setting, refer to P.582.

WARNING

When starting the hybrid system

Always start the hybrid system while sitting in the driver’s seat. Do not depress the accelerator pedal while starting the hybrid system under any circumstances.
Doing so may cause an accident resulting in death or serious injury.

WARNING

■ Caution while driving

If hybrid system failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.

NOTICE

■ When starting the hybrid system

If the hybrid system becomes difficult to start, have your vehicle checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ Symptoms indicating a malfunction with the power switch

If the power switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

Stopping the hybrid system

1 Stop the vehicle completely.

2 Set the parking brake (→P.243), and shift the shift lever to P.

Check the parking brake indicator is illuminated.

3 Press the power switch.

The hybrid system will stop, and the meter display will be extinguished.

4 Release the brake pedal and check that “ACCESSORY” or “IGNITION ON” is not shown on the multi-information display.


WARNING

■ Stopping the hybrid system in an emergency

- If you want to stop the hybrid system in an emergency while driving the vehicle, press and hold the power switch for more than 2 seconds, or press it briefly 3 times or more in succession. (→P.534) However, do not touch the power switch while driving except in an emergency. Turning the hybrid system off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so.
- If the power switch is operated while the vehicle is running, a warning message will be shown on the multi-information display and a buzzer sounds.
- To restart the hybrid system after performing an emergency shutdown, shift the shift lever to N and then press the power switch.

Changing power switch modes

Modes can be changed by pressing the power switch with brake pedal released. (The mode changes each time the switch is pressed.)

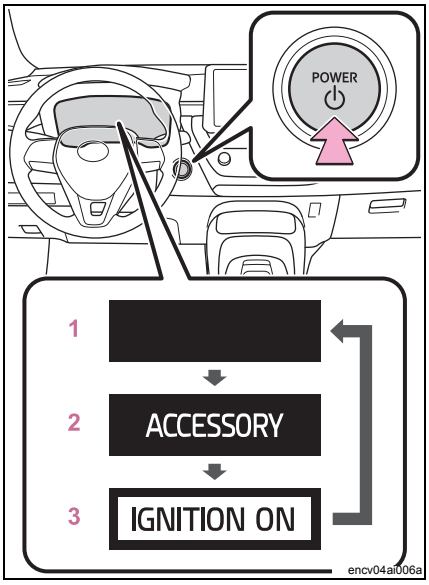

1 OFF*

The emergency flashers can be used.

2 ACC

Some electrical components such as the audio system can be used.

"ACCESSORY" will be displayed on the multi-information display.

3 ON

All electrical components can be used.

"IGNITION ON" will be displayed on the multi-information display.

*: If the shift lever is in a position other than P when turning off the hybrid system, the power switch will be turned to ACC, not to off.

■ Auto power off function

If the vehicle is left in ACC for more than 20 minutes or ON (the hybrid system is not operating) for more than an hour with the shift lever in P, the power switch will automatically turn off. However, this function cannot entirely prevent 12-volt battery discharge. Do not leave the vehicle with the power switch in ACC or ON for long periods of time when the hybrid system is not operating.

NOTICE

■ To prevent 12-volt battery discharge

- Do not leave the power switch in ACC or ON for long periods of time without the hybrid system on.
- If "ACCESSORY" or "IGNITION ON" is displayed on the multi-information display, the power switch is not off. Exit the vehicle after turning the power switch off.

When stopping the hybrid system with the shift lever in a position other than P

If the hybrid system is stopped with the shift lever in a position other than P, the power switch will not be turned off but instead be turned to ACC. Perform the following procedure to turn the switch off:

1. Check that the parking brake is set.
2. Shift the shift lever to P.
3. Check that "ACCESSORY" is displayed on the multi-information display and press the power switch shortly and firmly.
4. Check that "ACCESSORY" or "IGNITION ON" on the multi-information display are off.

NOTICE

■ To prevent 12-volt battery discharge

Do not stop the engine when the shift lever is in a position other than P. If the engine is stopped in another shift lever position, the power switch will not be turned off but instead be turned to ACC mode. If the vehicle is left in ACC, battery discharge may occur.

EV drive mode


In EV drive mode, electric power is supplied by the hybrid battery (traction battery), and only the electric motor (traction motor) is used to drive the vehicle.

This mode allows you to drive in residential areas early in the morning and late at night, or in indoor parking lots etc. without concern for noises and gas emissions.

Operating instructions

Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

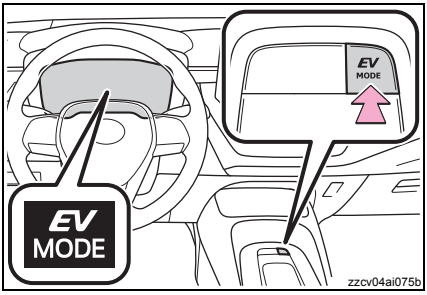

■ Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multi-information display.

- The temperature of the hybrid system is high.
  The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.
  The vehicle has been left in temperatures lower than about 0°C (32°F) for a long period of time etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.
  The remaining battery level indicated in the energy monitor display is low. (→P.138)
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.
- The windshield defogger is in use.

Switching to EV drive mode when the gasoline engine is cold

If the hybrid system is started while the gasoline engine is cold, the gasoline engine will start automatically after a short period of time in order to warm up. In this case, you will become unable to switch to EV drive mode.

After the hybrid system has started and the “READY” indicator has illuminated, press the EV drive mode switch before the gasoline engine starts to switch to EV drive mode.

Automatic cancelation of EV drive mode

When driving in EV drive mode, the gasoline engine may start automatically and the vehicle may be driven by the gasoline engine and electric motor (traction motor) in the following situations. When EV drive mode is canceled, a buzzer will sound, the EV drive mode indicator will flash, and a message will be displayed on the multi-information display.

- The hybrid battery (traction battery) becomes low.
  The remaining battery level indicated in the energy monitor display is low. (→P.138)
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.

Possible driving distance when driving in EV drive mode

EV drive mode’s possible driving distance ranges from a few hundred meters to approximately 1 km (0.6 mile). However, depending on vehicle conditions, there are situations when EV drive mode cannot be used.
(The distance that is possible depends on the hybrid battery [traction battery] level and driving conditions.)

Fuel economy

The hybrid system is designed to achieve the best possible fuel economy during normal driving (using the gasoline engine and electric motor [traction motor]). Driving in EV drive mode more than necessary may lower fuel economy.

If “EV Mode Unavailable” is shown on the multi-information display

The EV drive mode is not available. The reason the EV drive mode is not available (the vehicle is idling, battery charge is low, vehicle speed is higher than the EV drive mode operating speed range or accelerator pedal is depressed too much) may be displayed. Use the EV drive mode when it becomes available.

If “EV Mode Deactivated” is shown on the multi-information display

The EV drive mode has been automatically canceled. The reason the EV drive mode is not available (the battery charge is low, vehicle speed is higher than the EV drive mode operating speed range or accelerator pedal is depressed too much) may be displayed. Drive the vehicle for a while before attempting to turn on the EV drive mode again.

WARNING

■ Caution while driving

When driving in EV drive mode, pay special attention to the area around the vehicle. Because there is no engine noise, pedestrians, people riding bicycles or other people and vehicles in the area may not be aware of the vehicle starting off or approaching them, so take extra care while driving.

Hybrid transmission (vehicles without paddle shift switches)

Select the shift position depending on your purpose and situation.

Shift position purpose and functions

Shift position	Objective or function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral (Condition in which the power is not transmitted)
D	Normal driving*
B	Applying moderate engine braking driving down hills

*: To improve fuel efficiency and reduce noise, shift the shift lever to D for normal driving.

■ Restraining sudden start (Drive-Start Control)

→P.217

WARNING

■ When driving on slippery road surfaces


Do not accelerate or shift gears suddenly.
Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

NOTICE

Hybrid battery (traction battery) charge

If the shift lever is in N, the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the shift lever in N for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.

Shifting the shift lever

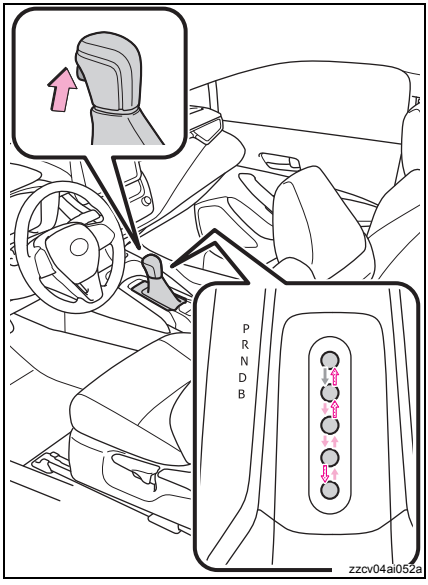

:While the power switch is in ON and the brake pedal depressed*, shift the shift lever while pushing the shift release button on the shift knob.

:Shift the shift lever while pushing the shift release button on the shift knob.

:Shift the shift lever normally.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

*: For the vehicle be able to be shifted from P, the brake pedal must be depressed before the shift release button is pushed. If the shift release button is pushed first, the shift lock will not be released.

Shift lock system


The shift lock system is a system to prevent accidental operation of the shift lever in starting.
The shift lever can be shifted from P only when the power switch is in ON and the brake pedal is being depressed.

If the shift lever cannot be shifted from P

First, check whether the brake pedal is being depressed.
If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.
The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.
Releasing the shift lock:


1. Set the parking brake.
2. Turn the power switch off.
3. Depress the brake pedal.
4. Ply the cover up with a flathead screwdriver or equivalent tool. To prevent damaging the cover,

wrap the tip of the flathead screwdriver with a tape.

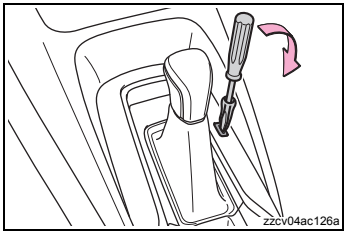

5 Press and hold the shift lock override button and then push the button on the shift knob.

The shift lever can be shifted while the both buttons are pressed.

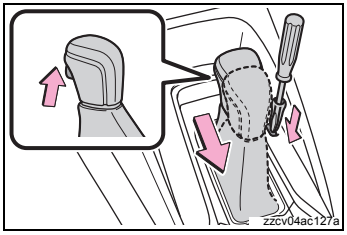

■ About engine braking

When shift position B is selected, releasing the accelerator pedal will apply engine braking.

- When the vehicle is driven at high speeds, compared to ordinary gasoline-fueled vehicles, the engine braking deceleration is felt less than that of other vehicles.
- The vehicle can be accelerated even when shift position B is selected.

If the vehicle is driven continuously in the B position, fuel efficiency will become low. Usually, select the D position.

WARNING

■ To prevent an accident when releasing the shift lock

Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal. If the accelerator pedal is accidentally depressed instead of the brake pedal when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start, possibly leading to an accident resulting in death or serious injury.

Selecting the driving mode

→P.378

Hybrid transmission (vehicles with paddle shift switches)

Select the shift position depending on your purpose and situation.

Shift position purpose and functions

Shift position	Objective or function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral (Condition in which the power is not transmitted)
D	Normal driving*1
S	S mode driving*2 (→P.241)

*1: To improve fuel efficiency and reduce noise, shift the shift lever to D for normal driving.

*2: By selecting shift ranges using S mode, you can control accelerating force and engine braking force.

■ When driving with the cruise control or dynamic radar cruise control with full-speed range activated

Even when performing the following actions with the intent of enabling engine braking, engine braking will not occur because cruise control or radar cruise control with full-speed range will not be canceled.

- While driving in D or S mode, downshifting to 5 or 4. (→P.241, 241)
- When switching the driving mode to Sport mode while driving in the D position. (→P.378)

■ Restraining sudden start (Drive-Start Control)

→P.217

WARNING

■ When driving on slippery road surfaces


Do not accelerate or shift gears suddenly.
Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

NOTICE

■ Hybrid battery (traction battery) charge

If the shift lever is in N, the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the shift lever in N for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.

Shifting the shift lever

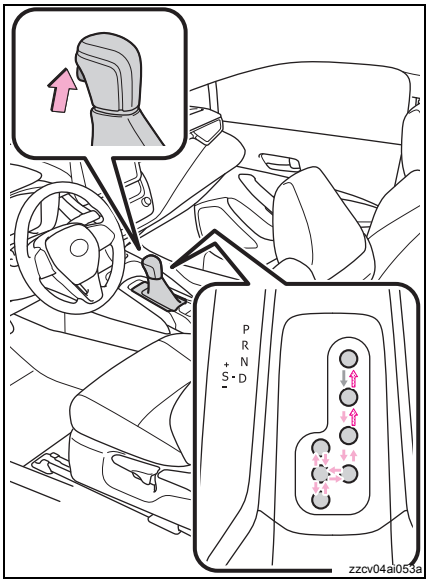

:While the power switch is in ON and the brake pedal depressed*, shift the shift lever while pushing the shift release button on the shift knob.

:Shift the shift lever while pushing the shift release button on the shift knob.

:Shift the shift lever normally.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

*: For the vehicle be able to be shifted from P, the brake pedal must be depressed before the shift release button is pushed. If the shift release button is pushed first, the shift lock will not be released.


Shift lock system

The shift lock system is a system to prevent accidental operation of the shift lever in starting.
The shift lever can be shifted from P only when the power switch is in ON and the brake pedal is being depressed.

If the shift lever cannot be shifted from P

First, check whether the brake pedal is being depressed.
If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.
The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.
Releasing the shift lock:


1. Set the parking brake.
2. Turn the power switch off.
3. Depress the brake pedal.
4. Ply the cover up with a flathead screwdriver or equivalent tool.
   To prevent damaging the cover, wrap the tip of the flathead screwdriver with a tape.

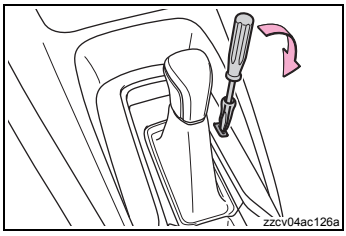

5. Press and hold the shift lock override button and then push the button on the shift knob.

The shift lever can be shifted while the

both buttons are pressed.

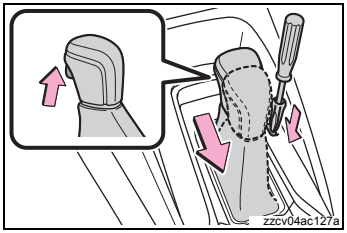

WARNING

■ To prevent an accident when releasing the shift lock


Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal. If the accelerator pedal is accidentally depressed instead of the brake pedal when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start, possibly leading to an accident resulting in death or serious injury.

Selecting the driving mode

→P.378

Selecting shift ranges in the D position

To drive using temporary shift range selection, operate the "-" paddle shift switch. The shift range can then be selected by operating the "-" and "+" paddle shift switches. Changing the shift range allows restriction of the highest gear, preventing upshifting and enabling the level of engine braking force to be selected.

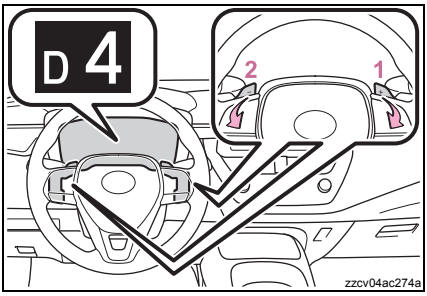

1 Upshifting

2 Downshifting

The selected shift range, from D1 to D6, will be displayed on the multi-information display.

■ When the "-" paddle shift switch is operated with the shift lever in the D position

The shift range is downshifted to a range that enables engine braking force that is suitable to driving conditions.

■ Automatic deactivation of shift range selection in the D position

Shift range selection in the D position will be deactivated in the following situations:

- The "+" paddle shift switch is held down for a period of time
- When the vehicle comes to a stop
- If the accelerator pedal is depressed for more than a certain period of time
- When the shift lever is shifted to a position other than D

Changing gears in the S position

When the shift lever is in the S position, the shift lever or paddle shift switches can be operated as follows:



1 Upshifting

2 Downshifting

The gear changes once every time the shift lever or paddle shift switch is operated.

The selected gear step, from S1 to S6, will be displayed on the multi-information display.

■ Downshift restriction warning buzzer (S mode or paddle shifting)

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever or paddle shift switches are operated. (A buzzer will sound twice.)

■ S mode


- When the shift range is S4 or lower, holding the shift lever toward “+” sets the shift range to S6.
- To prevent the engine from over-revving, upshifting may automatically occur.

■ If the S indicator does not come on or the D indicator is displayed even after shifting the shift lever to S

This may indicate a malfunction in the transmission system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately. (In this situation, the transmission will operate in the same manner as when the shift lever is in D.)

Turn signal lever

Operating instructions

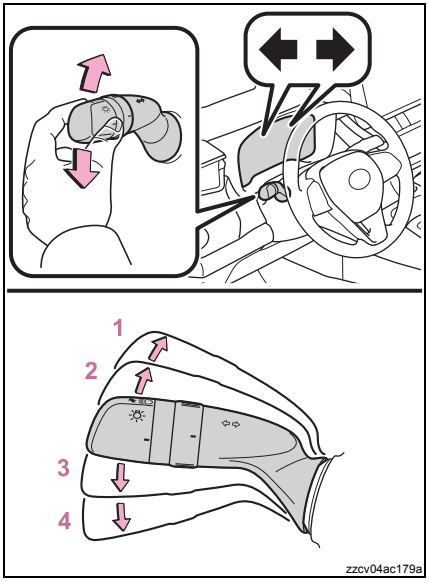

1 Right turn

2 Lane change to the right (move the lever partway and release it)

The right hand signals will flash 3 times.

3 Lane change to the left (move the lever partway and release it)

The left hand signals will flash 3 times.

4 Left turn

■ Turn signals can be operated when

The power switch is in ON.

■ If the indicator flashes faster than usual

Check that a light bulb in the front or rear turn signal lights has not burned out.

■ Customization

Some functions can be customized. (→P.610)

Parking brake


The parking brake can be set or released automatically or manually.

In automatic mode, the parking brake can be set or released automatically. Also, even in automatic mode, the parking brake can be set or released manually.

Operating instructions

■ Using the manual mode

The parking brake can be set and released manually.

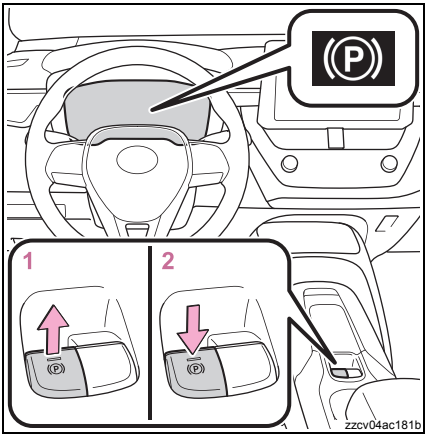

1 Pull the switch to set the parking brake

The parking brake indicator and parking brake light will turn on.

Pull and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.

2 Push the switch to release the


parking brake

- Operate the parking brake switch while depressing the brake pedal.
- Using the parking brake automatic release function, the parking brake can be released by depressing the accelerator pedal. When using this function, slowly depress the accelerator pedal.

Make sure that the parking brake indicator and parking brake light turn off.

■ Turning automatic mode on

While the vehicle is stopped, pull and hold the parking brake switch until a message is shown on the multi-information display

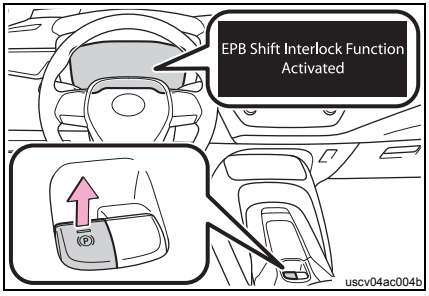

When the automatic mode is turned on, the parking brake operates as follows.


- When the shift lever is moved out of P, the parking brake will be released, and the parking brake indicator and parking brake light will turn off.
- When the shift lever is moved into P, the parking brake will be set, and the parking brake indicator and parking brake light will turn on.

Operate the shift lever with the vehicle stopped and the brake pedal depressed.

The parking brake may not operate automatically if the shift lever is moved quickly.
In this case, it is necessary to operate the parking brake switch. (→P.243)

■ Turning automatic mode off

While the vehicle is stopped and depressing the brake pedal, press and hold the parking brake switch until a message is shown on the multi-information display

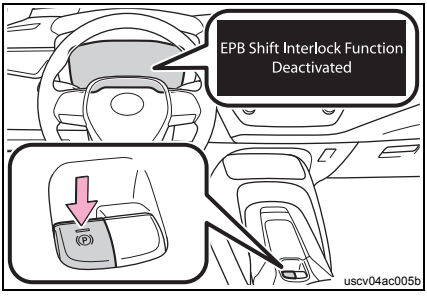

■ Parking brake operation

- When the power switch is not in ON, the parking brake cannot be released using the parking brake switch.
- When the power switch is not in ON, automatic mode (automatic brake setting and releasing) is not available.

■ Parking brake automatic release function

The parking brake is automatically released when slowly depress the accelerator pedal.
The parking brake will be released automatically under the following conditions:

- The driver’s door is closed
- The driver is wearing the seat belt
- The shift lever is a forward or reverse position.
- The malfunction indicator lamp or

brake system warning light is not illuminated.

If the automatic release function does not operate, manually release the parking brake.

■ If "Parking Brake Temporarily Unavailable" is displayed on the multi-information display

If the parking brake is operated repeatedly over a short period of time, the system may restrict operation to prevent overheating. If this happens, refrain from operating the parking brake. Normal operation will return after about 1 minute.

■ If "Parking Brake Unavailable" is displayed on the multi-information display

Operate the parking brake switch. If the message does not disappear after operating the switch several times, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ Parking brake operation sound

When the parking brake operates, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ Parking brake operation

- Depending on the power switch mode, the parking brake indicator and parking brake light will turn on and stay on as described below:
  ON: Comes on until the parking brake is released.
  Not in ON: Stays on for approximately 15 seconds.
- When the power switch is turned off with the parking brake set, the parking brake indicator and parking brake light will stay on for about 15 seconds. This does not indicate a malfunction.

■ When the parking brake switch malfunctions

Automatic mode (automatic brake setting and releasing) will be turned on automatically.

■ Parking the vehicle

→P.216

■ Parking brake engaged warning buzzer

A buzzer will sound if the vehicle is driven with the parking brake engaged. "Parking Brake ON" is displayed on the multi-information display. (with the vehicle reached a speed of 5 km/h [3 mph])

■ If the brake system warning light comes on

→P.542

■ Usage in winter time

→P.388

WARNING

■ When parking the vehicle

Do not leave a child in the vehicle alone. The parking brake may be released unintentionally and there is the danger of the vehicle moving that may lead to an accident resulting in death or serious injury.

■ Parking brake switch

Do not set any objects near the parking brake switch.
Objects may interfere with the switch and may lead the parking brake to unexpectedly operate.

NOTICE

■ When parking the vehicle

Before you leave the vehicle, set the parking brake, shift the shift lever to P and make sure that the vehicle does not move.

■ When the system malfunctions

Stop the vehicle in a safe place and check the warning messages.

NOTICE

When the parking brake cannot be released due to a malfunction

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear.

Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately if this occurs.


Brake Hold

The brake hold system keeps the brake applied when the shift lever is in D, B (vehicles without paddle shift switches), S (vehicles with paddle shift switches) or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D, B (vehicles without paddle shift switches) or S (vehicles with paddle shift switches) to allow smooth start off.

Enabling the system

Turn the brake hold system on

The brake hold standby indicator (green) A comes on. While the system is holding the brake, the brake hold operated indicator (yellow) B comes on.

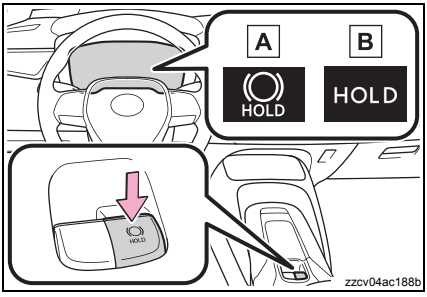

Brake hold system operating conditions

The brake hold system cannot be turned on in the following conditions:

- The driver's door is not closed.
- The driver is not wearing the seat belt.

If any of the conditions above are detected when the brake hold system is enabled, the system will turn off and the brake hold standby indicator light will go off. In addition, if any of the conditions are detected while the system is holding the brake, a warning buzzer will sound and a message will be shown on the multi-information display. The parking brake will then be set automatically.

Brake hold function

- If the brake pedal is left released for a period of about 3 minutes after the system has started holding the brake, the parking brake will be set automatically. In this case, a warning buzzer sounds and a message is shown on the multi-information display.
- To turn the system off while the system is holding the brake, firmly depress the brake pedal and press the button again.
- The brake hold function may not hold the vehicle when the vehicle is on a steep incline. In this situation, it may be necessary for the driver to apply the brakes. A warning buzzer will sound and the multi-information display will inform the driver of this situation. If a warning message is shown on the multi-information display, read the message and follow the instructions.

When the parking brake is set automatically while the system is holding the brakes

Perform any of the following operations to release the parking brake.

- Depress the accelerator pedal. (The parking brake will not be released automatically if the seat belt is not fastened.)
- Operate the parking brake switch with the brake pedal depressed.

Make sure that the parking brake indicator light goes off. (→P.243)

When an inspection at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer is necessary

When the brake hold standby indicator (green) does not illuminate even when the brake hold switch is pressed with the brake hold system operating conditions met, the system may be malfunctioning. Have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If "Brake Hold Malfunction Press Brake to Deactivate Visit Your Dealer" or "Brake Hold Malfunction Visit Your Dealer" is displayed on the multi-information display

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Warning messages and buzzers

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution. If a warning message is shown on the multi-information display, read the message and follow the instructions.

If the brake hold operated indicator flashes

→P.549

WARNING

When the vehicle is on a steep incline

When using the brake hold system on a steep incline exercise caution. The brake hold function may not hold the vehicle in such a situation.

WARNING

■When stopped on a slippery road

The system cannot stop the vehicle when the gripping ability of the tires has been exceeded. Do not use the system when stopped on a slippery road.

NOTICE

■When parking the vehicle


The brake hold system is not designed for use when parking the vehicle for a long period of time. Turning the power switch off while the system is holding the brake may release the brake, which would cause the vehicle to move. When operating the power switch, depress the brake pedal, shift the shift lever to P and set the parking brake.

Headlight switch

The headlights can be operated manually or automatically.

Operating instructions

Operating the switch turns on the lights as follows:

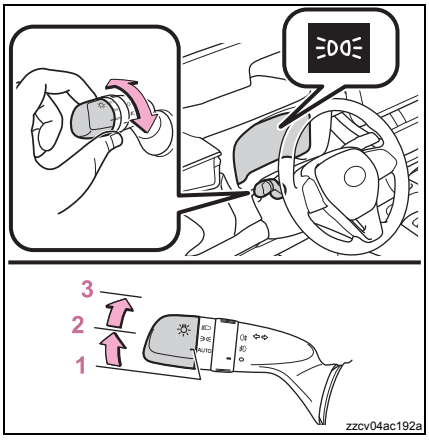

1 AUTO The headlights, daytime running lights (→P.249) and all the lights listed below turn on and off automatically.

2 The front position, tail, license plate and instrument panel lights turn on.

3 The headlights and all the lights listed above turn on.


■ AUTO mode can be used when

The power switch is in ON.

■ Daytime running light system

To make your vehicle more visible to other drivers during daytime driving, the daytime running lights turn on automatically whenever hybrid system is started and the parking brake is released with the headlight switch in the AUTO position. (Illuminate brighter than the front position lights.) Daytime running lights are not designed for use at night.

■ Headlight control sensor

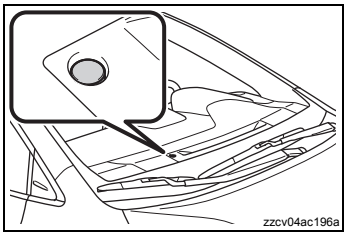

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.
Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

■ Automatic light off system

- When the light switch is in or : The headlights and front fog lights (if equipped) turn off automatically if the power switch is turned to ACC or OFF, and the driver's door is opened.
- When the light switch is in AUTO : The headlights and all lights turn off automatically if the power switch is turned to ACC or OFF, and the driver's door is opened.

To turn the lights on again, turn the power switch to ON, or turn the light switch off once and then back to or .

■ Light reminder buzzer

A buzzer sounds when the power switch is turned to OFF or ACC and the driver's door is opened while the lights are

turned on.

■ **Automatic headlight leveling system (if equipped)**

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

■ **12-volt battery-saving function**

In order to prevent the 12-volt battery of the vehicle from discharging, if the light switch is in the or AUTO position when the power switch is turned off the 12-volt battery saving function will operate and automatically turn off all the lights after approximately 20 minutes. When the power switch is turned to ON, the 12-volt battery-saving function will be disabled.
When any of the following are performed, the 12-volt battery-saving function is canceled once and then reactivated. All the lights will turn off automatically 20 minutes after the 12-volt battery- saving function has been reactivated:

- When the headlight switch is operated
- When a door is opened or closed

■ **Customization**


Some functions can be customized. (→P.610)

NOTICE

■ **To prevent 12-volt battery discharge**

Do not leave the lights on longer than necessary when the hybrid system is off.

Turning on the high beam headlights

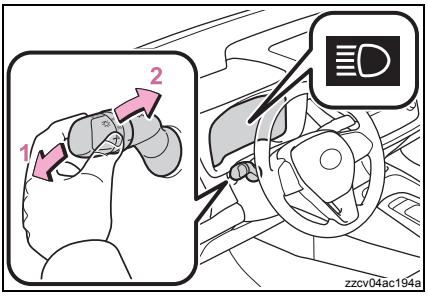

1 With the headlights on, push the lever away from you to turn on the high beams.

Pull the lever toward you to the center position to turn the high beams off.


2 Pull the lever toward you and release it to flash the high beams once.

You can flash the high beams with the headlights on or off.

Follow me home system

This system allows the headlights to be turned on for 30 seconds when the power switch is off.

Pull the lever toward you and release it with the light switch in AUTO after turning the power switch off.

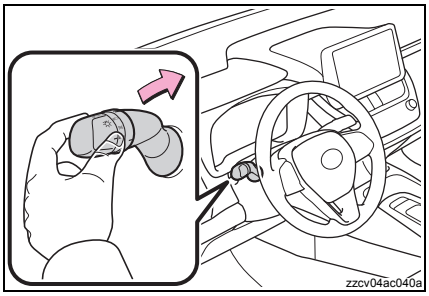


The lights are turned off in the following situations.

- The power switch is turned to ON.
- The light switch is turned on.
- The light switch is pulled toward you and then released.

Manual headlight leveling dial (if equipped)

The level of the headlights can be adjusted according to the number of passengers and the loading condition of the vehicle.

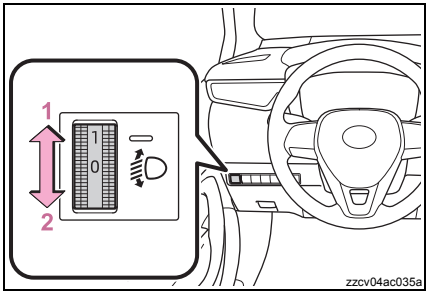

1 Raises the level of the headlights

2 Lowers the level of the headlights

■ Guide to dial settings

▶ Hatchback

Occupancy and luggage load conditions		Dial position
Occupants	Luggage load	
Driver	None	0
Driver and front passenger	None	0
All seats occupied	None	1.5
All seats occupied	Full luggage loading	2.5
Driver	Full luggage loading	3.5

▶ Wagon (vehicles without a rear window wiper)

Occupancy and luggage load conditions		Dial position
Occupants	Luggage load	
Driver	None	0
Driver and front passenger	None	0
All seats occupied	None	1.5
All seats occupied	Full luggage loading	2.5
Driver	Full luggage loading	3.5

▶ Wagon (vehicles with a rear window wiper)

Occupancy and luggage load conditions		Dial position
Occupants	Luggage load	
Driver	None	0
Driver and front passenger	None	0
All seats occupied	None	1.5
All seats occupied	Full luggage loading	2
Driver	Full luggage loading	3

Automatic High Beam*

*: If equipped

The Automatic High Beam uses a camera sensor located behind the upper portion of the windshield to assess the brightness of the lights of vehicles ahead, streetlights, etc., and automatically turns the high beams on or off as necessary.

WARNING

■ **Limitations of the Automatic High Beam**


Do not overly rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning the high beams on or off manually if necessary.

■ **To prevent incorrect operation of the Automatic High Beam system**

Do not overload the vehicle.


Activating the Automatic High Beam

1 Press the Automatic High Beam switch.

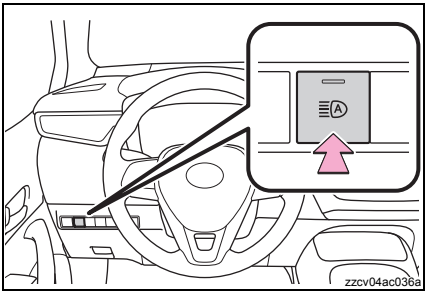

2 Push the lever away from you with the headlight switch in the or AUTO position.

The Automatic High Beam indicator will come on when the system is operating.

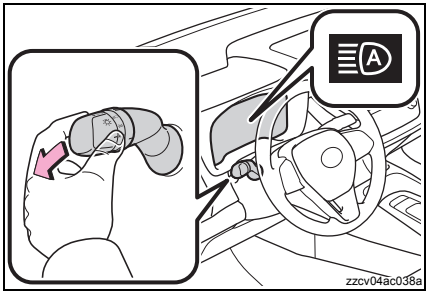

Conditions to turn the high beams on/off automatically

- When all of the following conditions are met, the high beams will be turned on automatically (after approximately 1 second):
  - The vehicle speed is approximately 40 km/h (25 mph) or more.
  - The area ahead of the vehicle is dark.
  - There are no vehicles ahead with headlights or tail lights turned on.
  - There are few streetlights on the road ahead.
- If any of the following conditions are met, the high beams will turn off automatically:
  - The vehicle speed is below approximately 30 km/h (19 mph).
  - The area ahead of the vehicle is not dark.
  - Vehicles ahead have their headlights or tail lights turned on.
  - There are many streetlights on the road ahead.

Camera sensor detection information

- The high beams may not be automatically turned off in the following situations:
  - When a vehicle suddenly appears from around a curve
  - When the vehicle is cut in front of by another vehicle
  - When vehicles ahead cannot be detected due to repeated curves, road dividers or roadside trees
  - When vehicles ahead appear in a far-away lane on a wide road
  - When the lights of vehicles ahead are not on
- The high beams may be turned off if a vehicle ahead that is using fog lights without its headlights turned on is detected.
- House lights, streetlights, traffic signals, and illuminated billboards or signs and other reflective objects may cause the high beams to change to the low beams, or the low beams to remain on.
- The following factors may affect the amount of time taken for the high beams to turn on or off:
  - The brightness of the headlights, fog lights, and tail lights of vehicles ahead
  - The movement and direction of vehicles ahead
  - When a vehicle ahead only has operational lights on one side
  - When a vehicle ahead is a two-wheeled vehicle
  - The condition of the road (gradient, curve, condition of the road surface, etc.)
  - The number of passengers and amount of luggage in the vehicle
- The high beams may turn on or off unexpectedly.
- Bicycles or similar vehicles may not be detected.
- In the following situations the system may not be able to correctly detect the surrounding brightness level. This may cause the low beams to remain on or the high beams to flash or dazzle pedestrians or vehicles ahead. In such a case, it is necessary to manually switch between the high and low beams.
  - When driving in inclement weather (heavy rain, snow, fog, sandstorms,

etc.)
- When the windshield is obscured by fog, mist, ice, dirt, etc.
- When the windshield is cracked or damaged
- When the camera sensor is deformed or dirty
- When the temperature of the camera sensor is extremely high
- When the surrounding brightness level is equal to that of headlights, tail lights or fog lights
- When headlights or tail lights of vehicles ahead are turned off, dirty, changing color, or not aimed properly
- When the vehicle is hit by water, snow, dust, etc. from a preceding vehicle
- When driving through an area of intermittently changing brightness and darkness
- When frequently and repeatedly driving ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel roads, etc.)
- When frequently and repeatedly taking curves or driving on a winding road
- When there is a highly reflective object ahead of the vehicle, such as a sign or mirror
- When the back of a preceding vehicle is highly reflective, such as a container on a truck
- When the vehicle's headlights are damaged or dirty, or are not aimed properly
- When the vehicle is listing or titling due to a flat tire, a trailer being towed, etc.
- When the headlights are changed between the high beams and low beams repeatedly in an abnormal manner
- When the driver believes that the high beams may be flashing or dazzling pedestrians or other drivers


Turning the high beams on/off manually

■ Switching to the low beams

Pull the lever to its original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

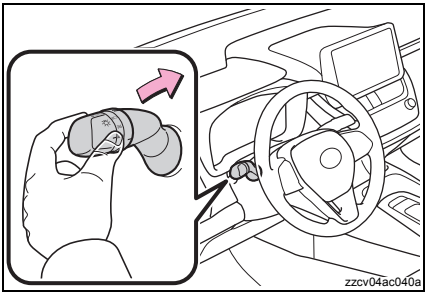


■ Switching to the high beams

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

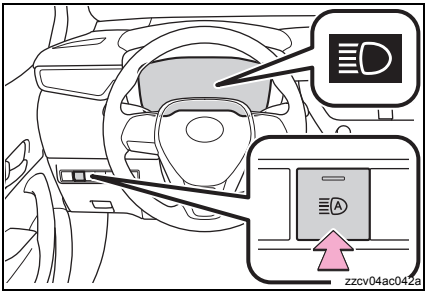

AHS (Adaptive High-beam System)*

*: If equipped

The Adaptive High-beam System uses a camera sensor located behind the upper portion of the windshield to assess the brightness of the lights of vehicles ahead, streetlights, etc., and automatically controls the headlight light distribution as necessary.

WARNING

■ Limitations of the Adaptive High-beam System

Do not overly rely on the Adaptive High-beam System. Always drive safely, taking care to observe your surroundings and turning the high beams on or off manually if necessary.


■ To prevent incorrect operation of the Adaptive High-beam System

Do not overload the vehicle.

System functions

- Adjusts the brightness and illuminated area of the high beams according to the vehicle speed.
- Adjusts the intensity of the high beams, while driving on a curve, so that the area in the direction that the vehicle is turning will be illuminated more brightly than other areas.
- Operates the shaded high beams so that the area around vehicles ahead is partially not illuminated while all other areas continue to be illuminated with the high beams.


The shaded high beams help optimize forward visibility while reducing the dazzling effect on the drivers of vehicles ahead.

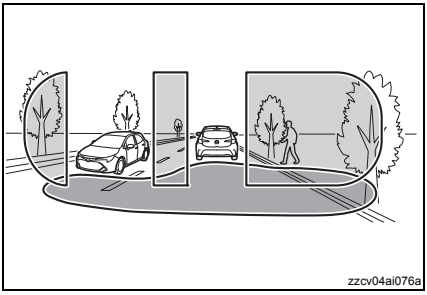

- Adjusts the distance that the low beams are projected according to the distance to a preceding vehicle.


Activating the Adaptive High-beam System

1 Press the Adaptive High-beam System switch.

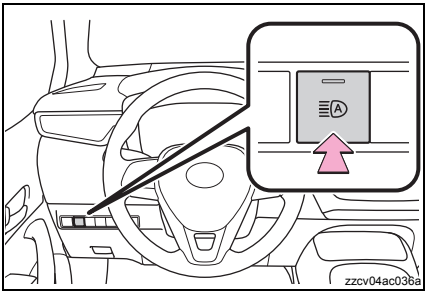

2 Push the lever away from you with the headlight switch in the or AUTO position.

The AHS indicator will come on when the system is operating.

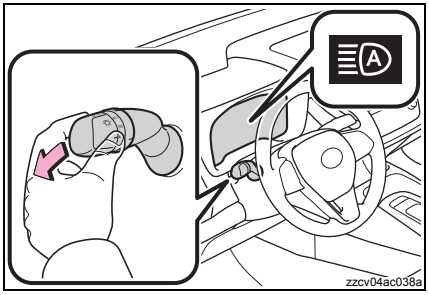

■ Operating conditions of the Adaptive High-beam System

● When all of the following conditions are met, the high beams will be turned on automatically and the system will operate:
- The vehicle speed is approximately 60 km/h (38 mph) or more.
- The area ahead of the vehicle is dark.

● When all of the following conditions are met, the shaded high beams will turn on and the distance that the low beams are projected will be adjusted automatically, depending on the location of vehicles ahead:
- The vehicle speed is approximately 60 km/h (38 mph) or more.
- The area ahead of the vehicle is dark.
- There are vehicles ahead with headlights or tail lights turned on.

● If any of the following conditions are met, the high beams or shaded high beams will be changed to the low beams automatically:
- The vehicle speed is below approximately 60 km/h (38 mph).
- The area ahead of the vehicle is not dark.
- There are many vehicles ahead.
- Vehicles ahead are moving quickly and the high beams may blind the drivers of the other vehicles.

■ Camera sensor detection information

● The high beams may not be automatically changed to the shaded high beams in the following situations:
- When vehicles ahead suddenly appear from a curve
- When the vehicle is cut in front of by another vehicle
- When vehicles ahead are hidden from sight due to repeated curves, road dividers or roadside trees
- When vehicles ahead appear from the faraway lane on wide road
- When vehicles ahead have no lights

● The high beams may be changed to the shaded high beams if a vehicle ahead that is using fog lights without its headlights turned on is detected.

● House lights, streetlights, traffic signals, and illuminated billboards or signs and other reflective objects may cause the high beams to change to the shaded high beams, cause the high beams not to change to the shaded high beams, or change the area that is not illuminated.

● The following factors may affect the amount of time taken to turn the high beam on or off, or the speed by which the areas not illuminated change:
- The brightness of headlights, fog lights, and tail lights of vehicles ahead
- The movement and direction of vehicles ahead
- When a vehicle ahead only has operational lights on one side
- When a vehicle ahead is a two-wheeled vehicle
- The condition of the road (gradient, curve, condition of the road surface etc.)
- The number of passengers and amount of luggage

● The light distribution control of the headlights may change unexpectedly.

● Bicycles or similar objects may not be detected.

● In the following situations the system may not be able to correctly detect the surrounding brightness level. This may cause the low beams to remain on or the high beams to flash or dazzle pedestrians or vehicles ahead. In

such a case, it is necessary to manually switch between the high and low beams.
- When driving in inclement weather (heavy rain, snow, fog, sandstorms, etc.)
- When the windshield is obscured by fog, mist, ice, dirt, etc.
- When the windshield is cracked or damaged
- When the camera sensor is deformed or dirty
- When the temperature of the camera sensor is extremely high
- When the surrounding brightness level is equal to that of headlights, tail lights or fog lights
- When headlights or tail lights of vehicles ahead are turned off, dirty, changing color, or not aimed properly
- When the vehicle is hit by water, snow, dust, etc. from a preceding vehicle
- When driving through an area of intermittently changing brightness and darkness
- When frequently and repeatedly driving ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel roads, etc.)
- When frequently and repeatedly taking curves or driving on a winding road
- When there is a highly reflective object ahead of the vehicle, such as a sign or mirror
- When the back of a preceding vehicle is highly reflective, such as a container on a truck
- When the vehicle's headlights are damaged or dirty, or are not aimed properly
- When the vehicle is listing or tilting due to a flat tire, a trailer being towed, etc.
- When the headlights are changed between the high beams and low beams repeatedly in an abnormal manner
- When the driver believes that the high beams may be flashing or dazzling pedestrians or other drivers
- When the vehicle is used in an area in which vehicles travel on the opposite side of the road of the country for which the vehicle was designed, for example using a vehicle designed for right-hand traffic in a left-hand traffic area, or vice versa

■ Customization

Some functions can be customized. (→P.610)


Turning the high beams on/off manually

■ Switching to the low beams

Pull the lever to its original position.

The AHS indicator will turn off.

Push the lever away from you to activate the Adaptive High-beam System again.

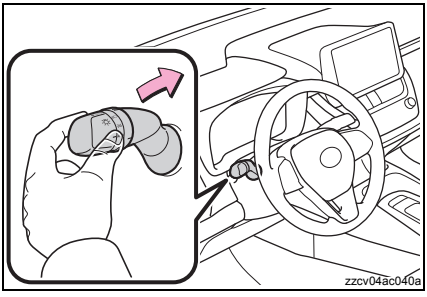


■ Switching to the high beams

Press the Adaptive High-beam System switch.

The AHS indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Adaptive High-beam System again.

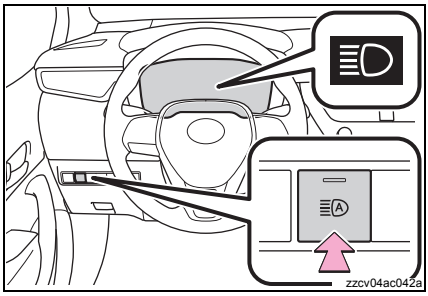


Fog light switch*

*: If equipped

The fog lights secure excellent visibility in difficult driving conditions, such as in rain and fog.

Operating instructions


▶ Front fog light switch

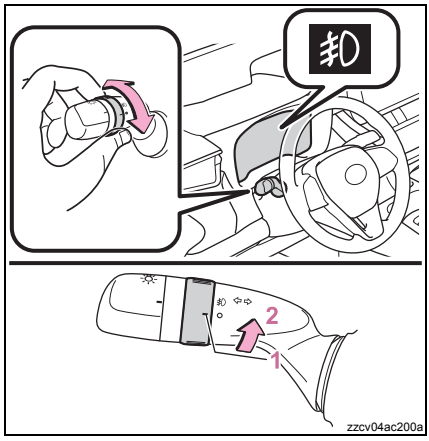

1 Turns the front fog lights off

2 Turns the front fog lights on

▶ Rear fog light switch

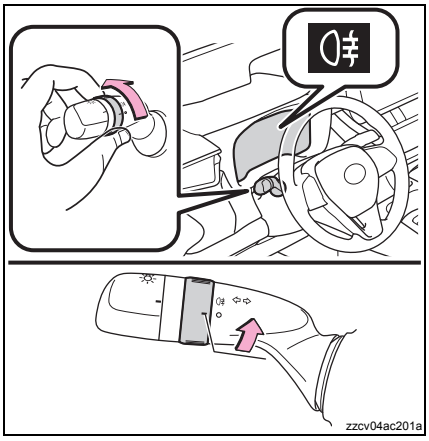


Turns the rear fog light on

Releasing the switch ring returns it to O .

Operating the switch ring again turns the rear fog light off.

▶ Front and rear fog light switch

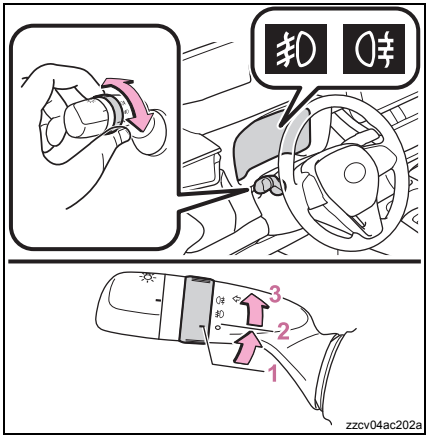

1 O Turns the front fog lights off

2 Turns the front fog lights on

3 Turns the front and rear fog light on

Releasing the switch ring returns it to .

Operating the switch ring again turns only the rear fog light off.

■ Fog lights can be used when

● Vehicles with a front fog light switch

The headlights or the front position lights are turned on.

● Vehicles with a rear fog light switch

The headlights are turned on.

● Vehicles with a front and rear fog light switch

Front fog lights: The headlights or the front position lights are turned on.
Rear fog light: The headlights or the front fog lights are turned on.

Windshield wipers and washer

Operating the lever can use the windshield wipers or the washer.

NOTICE


■When the windshield is dry

Do not use the wipers, as they may damage the windshield.

Operating the wiper lever

Operating the lever operates the wipers or washer as follows.

▶ Intermittent windshield wipers with interval adjuster

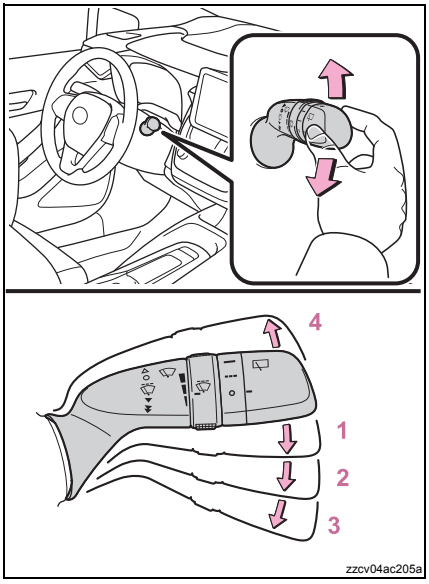


1 Intermittent windshield wiper operation

2 ▼ Low speed windshield wiper operation

3 ▼▼ High speed windshield wiper operation


4 △ Temporary operation

Wiper intervals can be adjusted when intermittent operation is selected.

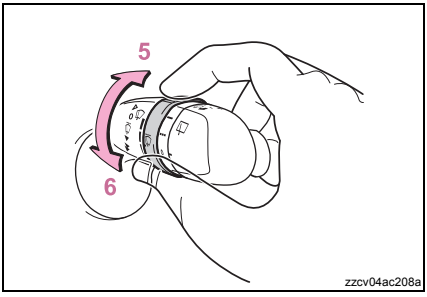

5 Increases the intermittent windshield wiper frequency

6 Decreases the intermittent windshield wiper frequency

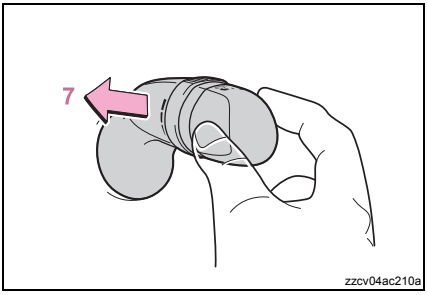

7 Washer/wiper dual operation


Pulling the lever operates the wipers and washer.

Wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners: When the headlights are on and the lever is

pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

▶ Rain-sensing windshield wipers

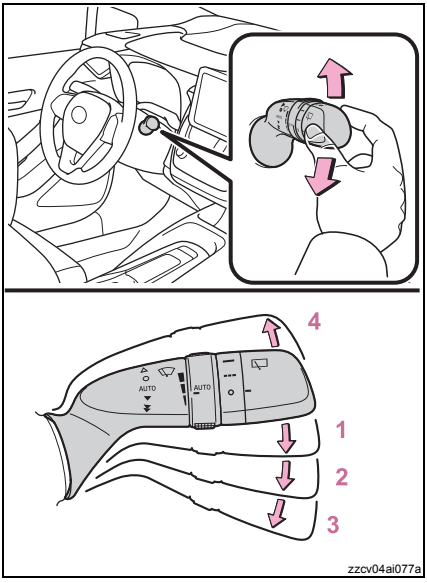

1 AUTO Rain-sensing windshield wiper operation


2 ▼ Low speed windshield wiper operation

3 ▼▼ High speed windshield wiper operation

4 Δ Temporary operation


When “AUTO” is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

When “AUTO” is selected, the sensor sensitivity can be adjusted as follows by turning the switch ring.

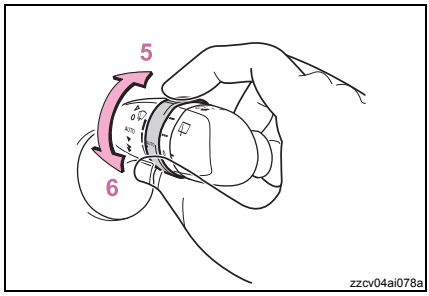

5 Increases the rain-sensing windshield wiper sensitivity

6 Decreases the rain-sensing windshield wiper sensitivity

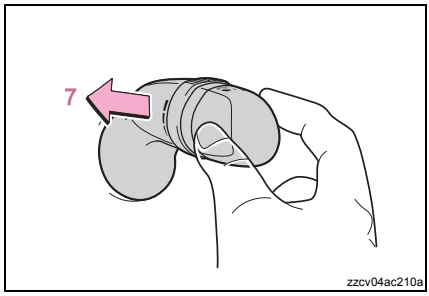

7 Washer/wiper dual operation

Pulling the lever operates the wipers and washer.

Wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners: When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

■ The windshield wiper and washer can be operated when


The power switch is in ON.

Effects of vehicle speed on wiper operation (vehicles with rain-sensing windshield wipers)

Vehicle speed affects the Intermittent wiper interval.

Raindrop sensor (vehicles with rain-sensing windshield wipers)

- The raindrop sensor judges the amount of raindrops.
  An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.

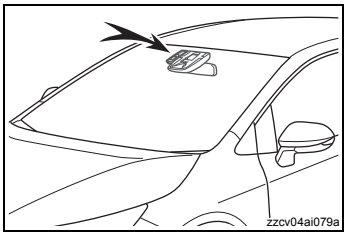

- If the wiper is turned to AUTO mode while the power switch is in ON, the wipers will operate once to show that AUTO mode is activated.
- If the temperature of the raindrop sensor is 85°C (185°F) or higher, or -15°C (5°F) or lower, automatic operation may not occur. In this case, operate the wipers in any mode other than AUTO mode.

If no windshield washer fluid sprays

Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.

When stopping the hybrid system in an emergency while driving

If the windshield wipers are operating when the hybrid system is stopped, the windshield wipers will operate in high speed operation. After the vehicle is stopped, operation will return to normal when the power switch is turned to ON, or operation will stop when the driver's door is opened.

WARNING

Caution regarding the use of windshield wipers in AUTO mode (vehicles with rain-sensing windshield wipers)

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in AUTO mode. Take care that your fingers or anything else do not become caught in the windshield wipers.

Caution regarding the use of washer fluid

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

NOTICE

When there is no washer fluid spray from the nozzle

Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.

When a nozzle becomes blocked

In this case, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
Do not try to clear it with a pin or other object. The nozzle will be damaged.

Rear window wiper and washer*

*: If equipped

Operating the lever can use the rear window wiper or the washer.


NOTICE

■When the rear window is dry

Do not use the wiper, as it may damage the rear window.


Operating instructions

Operating the switch operates the rear wiper as follows:

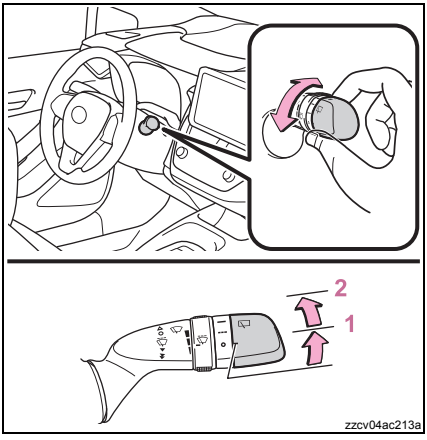

1 ▪▪▪ Intermittent window wiper operation

2 ▬ Normal window wiper operation

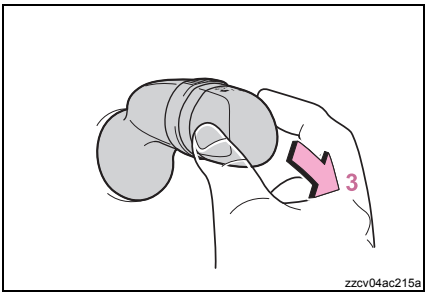

3 Washer/wiper dual operation

Pushing the lever operates the wiper and washer.

The wiper will automatically operate a couple of times after the washer squirts.

■The rear window wiper and washer can be operated when

The power switch is in ON.

■If no windshield washer fluid sprays

Check that the washer nozzle is not blocked if there is washer fluid in the windshield washer fluid reservoir.

■Back door opening linked rear window wiper stop function

When the rear window wiper are operating, if a back door is opened while the vehicle is stopped, operation of the rear window wiper will be stopped to prevent anyone near the vehicle from being sprayed by water from the wiper. When the back door is closed, wiper operation will resume.

NOTICE

■When the washer fluid tank is empty

Do not operate the switch continually as the washer fluid pump may overheat.

NOTICE

When a nozzle becomes blocked

In this case, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
Do not try to clear it with a pin or other object. The nozzle will be damaged.

Opening the fuel tank cap

Perform the following steps to open the fuel tank cap:

Before refueling the vehicle

- Turn the power switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

■ Fuel types

→P.609

■ Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your vehicle has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

⚠ WARNING

■ When refueling the vehicle

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it.
  A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel.
  Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle.
  Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.
  This may cause static electricity to build up, resulting in a possible ignition hazard.

■ When refueling

Observe the following precautions to prevent fuel overflowing from the fuel tank:

- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.


NOTICE

■ Refueling


Do not spill fuel during refueling. Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

Opening the fuel tank cap

1 Pull up the opener to open the fuel filler door.

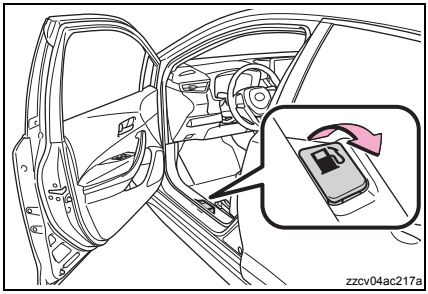


2 Turn the fuel tank cap slowly and remove it, then hang it on the back of the fuel filler door.

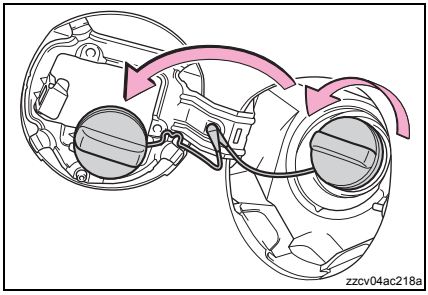

Closing the fuel tank cap

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

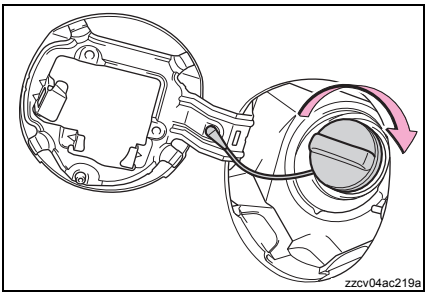

WARNING

■ When replacing the fuel tank cap

Do not use anything but a genuine Toyota fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

Toyota Safety Sense*

*: If equipped

The Toyota Safety Sense consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

Driving assist system

■ **PCS (Pre-Collision System)**

→P.278

■ **LTA (Lane Tracing Assist)***

→P.286

*: If equipped

■ **AHS (Adaptive High-beam System)***

→P.255

*: If equipped

■ **Automatic High Beam***

→P.252

*: If equipped

■ **RSA (Road Sign Assist)***

→P.311

*: If equipped

■ **Dynamic radar cruise control with full-speed range**

→P.295


WARNING

■ **Toyota Safety Sense**

The Toyota Safety Sense is designed to operate under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants and the vehicle in the case of a collision or assist the driver in normal driving conditions.
As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

Sensors

Two types of sensors, located behind the front grille and windshield, detect information necessary to operate the drive assist systems.

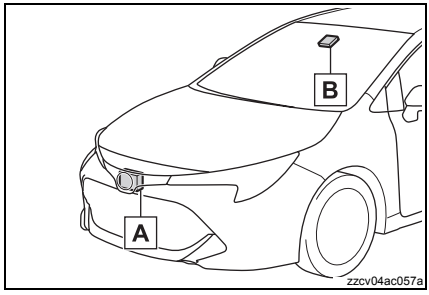

A Radar sensor


B Front camera

WARNING

■ To avoid malfunction of the radar sensor

Observe the following precautions. Otherwise, the radar sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the radar sensor and the grille cover clean at all times.

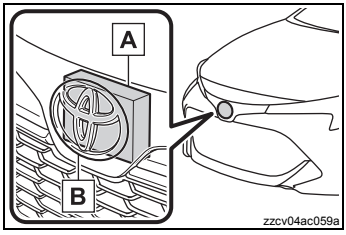

A Radar sensor

B Grille cover

If the front of the radar sensor or the front or back of the grille cover is dirty or covered with water droplets, snow, etc., clean it.

Clean the radar sensor and grille cover with a soft cloth to avoid damaging them.

- Do not attach accessories, stickers (including transparent stickers) or other items to the radar sensor, grille cover or surrounding area.
- Do not subject the radar sensor or its surrounding area to a strong impact.
  If the radar sensor, front grille, or front bumper has been subjected to a strong impact, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not disassemble the radar sensor.
- Do not modify or paint the radar sensor or grille cover.
- If the radar sensor, front grille, or front bumper needs to be removed and installed, or replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


■ To avoid malfunction of the front camera

Observe the following precautions. Otherwise, the front camera may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the windshield clean at all times.
  - If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clean the windshield.
  - If a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets, etc. from the area of the windshield in front of the front camera.
  - If the inner side of the windshield where the front camera is installed is dirty, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

- Do not attach objects, such as stickers, transparent stickers, etc., to the outer side of the windshield in front of the front camera (shaded area in the illustration).

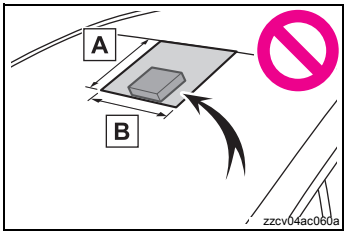

A From the top of the windshield to approximately 1 cm (0.4 in.) below the bottom of the front camera

B Approximately 20 cm (7.9 in.) (Approximately 10 cm [4.0 in.] to the right and left from the center of the front camera)

- If the part of the windshield in front of the front camera is fogged up or covered with condensation, or ice, use the windshield defogger to remove the fog, condensation, or ice. (→P.446)
- If water droplets cannot be properly removed from the area of the windshield in front of the front camera by the windshield wipers, replace the wiper insert or wiper blade.

If the wiper inserts or wiper blades need to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- Do not attach window tint to the windshield.
- Replace the windshield if it is damaged or cracked.
  If the windshield needs to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not allow liquids to contact the front camera.
- Do not allow bright lights to shine into the front camera.
- Do not dirty or damage the front camera.
  When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens of the front camera. Also, do not touch the lens.
  If the lens is dirty or damaged, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not subject the front camera to a strong impact.
- Do not change the installation position or direction of the front camera or remove it.
- Do not disassemble the front camera.
- Do not modify any components of the vehicle around the front camera (inside rear view mirror, etc.) or ceiling.
- Do not attach any accessories to the hood, front grille or front bumper that may obstruct the front camera. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.
- If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the front camera.
- Do not modify the headlights or other lights.

■ Certification

Transmitter:	Model: DNMWR009 Operation frequency: 76.5 GHz Maximum output power: 416.87 mW or less
Manufacturer:	DENSO CORPORATION
Address:	1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan

Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
https://www.denso.com/global/en/contact-us/doc/

01

DENSO CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen.
EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
https://www.denso.com/global/en/contact-us/doc/

02

Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU.
De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
https://www.denso.com/global/en/contact-us/doc/

03

Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
https://www.denso.com/global/en/contact-us/doc/

04

zzcv04ai031a

Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU.
Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
https://www.denso.com/global/en/contact-us/doc/

05

Hermed erklærer DENSO CORPORATION, at radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU.
EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
https://www.denso.com/global/en/contact-us/doc/

06

Hiermit erklärt DENSO CORPORATION, dass der Funkanlagentyp der Richtlinie 2014/53/EU entspricht.
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
https://www.denso.com/global/en/contact-us/doc/

07

Με την παρούσα ο/η DENSO CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ.
Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
https://www.denso.com/global/en/contact-us/doc/

08

Il fabbricante, DENSO CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE.
Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
https://www.denso.com/global/en/contact-us/doc/

09

zzcv04al031b

Por la presente, DENSO CORPORATION declara que el tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.denso.com/global/en/contact-us/doc/ 10
O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: https://www.denso.com/global/en/contact-us/doc/ 11
B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: https://www.denso.com/global/en/contact-us/doc/ 12
Käesolevaga deklareerib DENSO CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://www.denso.com/global/en/contact-us/doc/ 13
DENSO CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: https://www.denso.com/global/en/contact-us/doc/ 14

zzcv04ai031c

DENSO CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ.
Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
https://www.denso.com/global/en/contact-us/doc/

15

Tímto DENSO CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU.
Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
https://www.denso.com/global/en/contact-us/doc/

16

DENSO CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU.
Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
https://www.denso.com/global/en/contact-us/doc/

17

Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES.
Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
https://www.denso.com/global/en/contact-us/doc/

18

Ar šo DENSO CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES.
Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
https://www.denso.com/global/en/contact-us/doc/

19

zzcv04ai031d

DENSO CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE.
Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
https://www.denso.com/global/en/contact-us/doc/

20

Hér með lýsir DENSO CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.
Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð:
https://www.denso.com/global/en/contact-us/doc/

21

DENSO CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU.
Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:
https://www.denso.com/global/en/contact-us/doc/

22

С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/ЕС.
Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
https://www.denso.com/global/en/contact-us/doc/

23

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE.
Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
https://www.denso.com/global/en/contact-us/doc/

24

zzcv04ai031e

DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU.
Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
https://www.denso.com/global/en/contact-us/doc/

25

Овиме, DENSO CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU.
Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси:
https://www.denso.com/global/en/contact-us/doc/

26

Amb aquest document, DENSO CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE.
El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet:
https://www.denso.com/global/en/contact-us/doc/

27

İşbu belge; DENSO CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder.
AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur:
https://www.denso.com/global/en/contact-us/doc/

28

Nepermjet kesaj, DENSO CORPORATION, deklaroj qe ky DNMWR009 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.

29

CE The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:
https://www.denso.com/global/en/contact-us/doc/

zzcv04ai031f

טויוטה מוטור אירופה נו\סא, שדרות דו בורגט 60-1140 בריסל,

בלגיה www.toyota-europe.com

מוצר : מכ״ם התראה
סימן רשום : DENSO
ארץ ייצור : ראה מוצר
דגם : DNMWR009
שנת ייצור : ראה מוצר

zzcv04ai032a

If a warning message is displayed on the multi-information display

A system may be temporarily unavailable or there may be a malfunction in the system.

- In the following situations, perform the actions specified in the table. When the normal operating conditions are detected, the message will disappear and the system will become operational.

If the message does not disappear, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Situation	Actions
When the area around a sensor is covered with dirt, moisture (fogged up, covered with condensation, ice, etc.), or other foreign matter	To clean the part of the windshield in front of the front camera, use the windshield wipers or the windshield defogger of the air conditioning system (→P.446).
When the temperature around the front camera is outside of the operational range, such as when the vehicle is in the sun or in an extremely cold environment	If the front camera is hot, such as after the vehicle had been parked in the sun, use the air conditioning system to decrease the temperature around the front camera. If a sunshade was used when the vehicle was parked, depending on its type, the sunlight reflected from the surface of the sunshade may cause the temperature of the front camera to become excessively high.
	If the front camera is cold, such after the vehicle is parked in an extremely cold environment, use the air conditioning system to increase the temperature around the front camera.
The area in front of the front camera is obstructed, such as when the hood is open or a sticker is attached to the part of the windshield in front of the front camera.	Close the hood, remove the sticker, etc. to clear the obstruction.

● In the following situations, if the situation has changed (or the vehicle has been driven for some time) and the normal operating conditions are detected, the message will disappear and the system will become operational.

If the message does not disappear, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When the temperature around the radar sensor is outside of the operational range, such as when the vehicle is in the sun or in an extremely cold environment
- When the front camera cannot detect objects in front of the vehicle, such as when driving in the dark, snow, or fog, or when bright lights are shining into the front camera

PCS (Pre-Collision System)*

*: If equipped

The pre-collision system uses a radar sensor and front camera to detect objects (→P.281) in front of the vehicle. When the system determines that the possibility of a frontal collision with an object is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with an object is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

The pre-collision system can be disabled/enabled and the warning timing can be changed. (→P.280)

Detectable objects


The system can detect the following:

- Vehicles
- Bicyclists
- Pedestrians

System functions

■ Pre-collision warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the multi-information display to urge the driver to take evasive action.

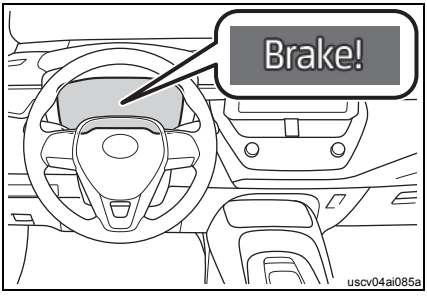

■ Pre-collision brake assist

When the system determines that the possibility of a frontal collision is high, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

■ Pre-collision braking

If the system determines that the possibility of a frontal collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the impact of the collision.

■ Suspension control (vehicles with an Adaptive Variable Suspension System)

When the system determines that the possibility of a frontal collision is

high, the Adaptive Variable Suspension System (→P.381) will control the damping force of the shock absorbers to help maintain an appropriate vehicle posture.

⚠ WARNING

■ Limitations of the pre-collision system

- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.
  Do not use the pre-collision system instead of normal braking operations under any circumstances. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not overly rely on this system. Failure to do so may lead to an accident, resulting in death or serious injury.
- Although this system is designed to help avoid a collision or help reduce the impact of the collision, its effectiveness may change according to various conditions, therefore the system may not always be able to achieve the same level of performance.
  Read the following conditions carefully. Do not overly rely on this system and always drive carefully.
  - Conditions under which the system may operate even if there is no possibility of a collision: →P.282
  - Conditions under which the system may not operate properly: →P.283
- Do not attempt to test the operation of the pre-collision system yourself. Depending on the objects used for testing (dummies, cardboard objects imitating detectable objects, etc.), the system may not operate properly, possibly leading to an accident.

■ Pre-collision braking

- When the pre-collision braking function is operating, a large amount of braking force will be applied.
- If the vehicle is stopped by the operation of the pre-collision braking function, the pre-collision braking function operation will be canceled after approximately 2 seconds. Depress the brake pedal as necessary.
- The pre-collision braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-collision braking function from operating.
- In some situations, while the pre-collision braking function is operating, operation of the function may be canceled if the accelerator pedal is depressed strongly or the steering wheel is turned and the system determines that the driver is taking evasive action.
- If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-collision braking function.

■ When to disable the pre-collision system

In the following situations, disable the system, as it may not operate properly, possibly leading to an accident resulting in death or serious injury:

- When the vehicle is being towed
- When your vehicle is towing another vehicle

WARNING

- When transporting the vehicle via truck, boat, train or similar means of transportation
- When the vehicle is raised on a lift with the hybrid system on and the tires are allowed to rotate freely
- When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer
- When a strong impact is applied to the front bumper or front grille, due to an accident or other reasons
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the tires are not properly inflated
- When the tires are very worn
- When tires of a size other than specified are installed
- When tire chains are installed
- When a compact spare tire or an emergency tire puncture repair kit is used
- If equipment (snow plow, etc.) that may obstruct the radar sensor or front camera is temporarily installed to the vehicle


Changing settings of the pre-collision system

■ Enabling/disabling the pre-collision system

The pre-collision system can be enabled/disabled on (→P.610) of the multi-information display.

The system is automatically enabled each time the power switch is turned to ON.


If the system is disabled, the PCS warning light will turn on and a message will be displayed on the multi-information display.

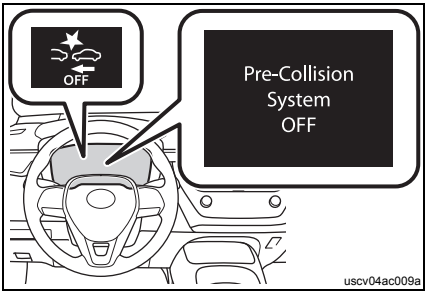

■ Changing the pre-collision warning timing

The pre-collision warning timing can be changed on (→P.610) of the multi-information display.

The warning timing setting is retained when the power switch is turned off. However, if the pre-collision system is disabled and re-enabled, the operation timing will return to the default setting (middle).

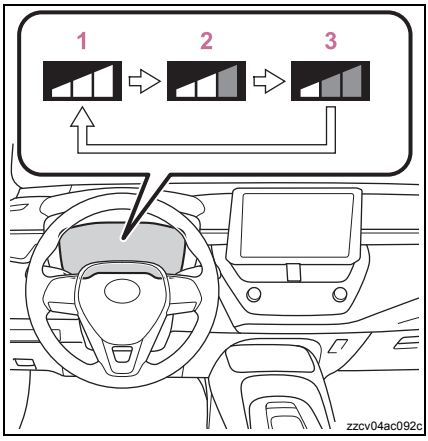

1 Early

2 Middle

This is the default setting.

3 Late

■ Operational conditions

The pre-collision system is enabled and the system determines that the possibility of a frontal collision with a detected object is high.
Each function is operational at the following speed

● Pre-collision warning

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 10 to 180 km/h (7 to 110 mph)	Approx. 10 to 180 km/h (7 to 110 mph)
Bicyclists and pedestrians	Approx. 10 to 80 km/h (7 to 50 mph)	Approx. 10 to 80 km/h (7 to 50 mph)

● Pre-collision brake assist

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 30 to 180 km/h (20 to 110 mph)	Approx. 30 to 180 km/h (20 to 110 mph)
Bicyclists and pedestrians	Approx. 30 to 80 km/h (20 to 50 mph)	Approx. 30 to 80 km/h (20 to 50 mph)

● Pre-collision braking


Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 10 to 180 km/h (7 to 110 mph)	Approx. 10 to 180 km/h (7 to 110 mph)
Bicyclists and pedestrians	Approx. 10 to 80 km/h (7 to 50 mph)	Approx. 10 to 80 km/h (7 to 50 mph)

The system may not operate in the following situations:

- If a 12-volt battery terminal has been disconnected and reconnected and then the vehicle has not been driven for a certain amount of time
- If the shift lever is in R
- When the VSC OFF indicator is illuminated (only the pre-collision warning function will be operational)

■ Object detection function

The system detects objects based on their size, profile, motion, etc. However, an object may not be detected depending on the surrounding brightness and the motion, posture, and angle of the detected object, preventing the system from operating properly. (→P.283)
The illustration shows an image of detectable objects.

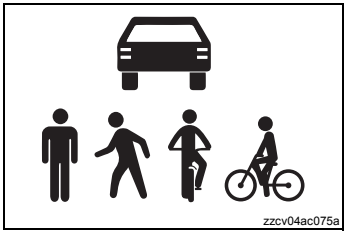


■ Cancelation of the pre-collision braking

If either of the following occur while the pre-collision braking function is operating, it will be canceled:


- The accelerator pedal is depressed strongly.
- The steering wheel is turned sharply or abruptly.

■ Conditions under which the system may operate even if there is no possibility of a collision


- In some situations such as the following, the system may determine that there is a possibility of a frontal collision and operate.
  - When passing a detectable object, etc.
  - When changing lanes while overtaking a detectable object, etc.
  - When approaching a detectable object in an adjacent lane or on the roadside, such as when changing the course of travel or driving on a winding road

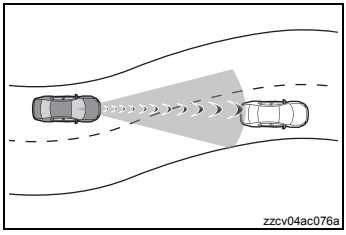


  - When rapidly closing on a detectable object, etc.
  - When approaching objects on the roadside, such as detectable objects, guardrails, utility poles, trees, or walls
  - When there is a detectable object or other object by the roadside at the entrance of a curve

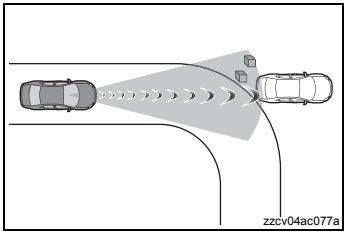


- When there are patterns or paint in front of your vehicle that may be mistaken for a detectable object
- When the front of your vehicle is hit by water, snow, dust, etc.
- When overtaking a detectable object that is changing lanes or making a right/left turn

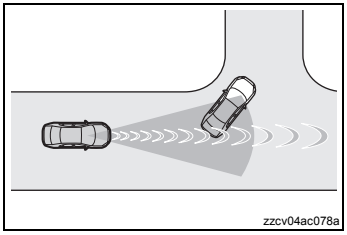


- When passing a detectable object in an oncoming lane that is stopped to make a right/left turn

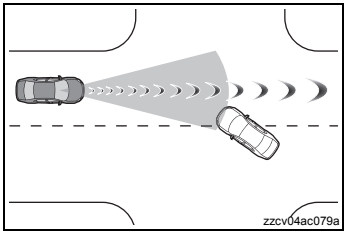

- When a detectable object approaches very close and then stops before entering the path of your vehicle
- If the front of your vehicle is raised or lowered, such as when on an uneven or undulating road surface
- When driving on a road surrounded by a structure, such as in a tunnel or on an iron bridge
- When there is a metal object (manhole cover, steel plate, etc.), steps, or a protrusion in front of your vehicle
- When passing under an object (road sign, billboard, etc.)

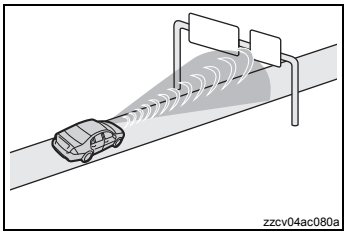

- When approaching an electric toll gate barrier, parking area barrier, or other barrier that opens and closes
- When using an automatic car wash
- When driving through or under objects that may contact your vehicle, such as thick grass, tree branches, or a banner

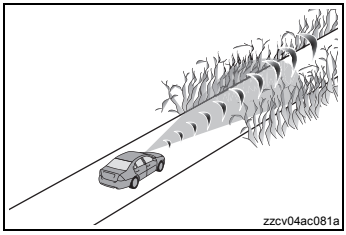


- When driving through steam or smoke
- When driving near an object that reflects radio waves, such as a large truck or guardrail
- When driving near a TV tower, broadcasting station, electric power plant, or other location where strong radio waves or electrical noise may be present

■ Situations in which the system may not operate properly


● In some situations such as the following, an object may not be detected by the radar sensor and front camera, preventing the system from operating properly:

- When a detectable object is approaching your vehicle
- When your vehicle or a detectable object is wobbling
- If a detectable object makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)


- When your vehicle approaches a detectable object rapidly
- When a detectable object is not directly in front of your vehicle

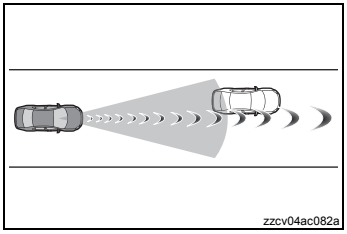

- When a detectable object is near a wall, fence, guardrail, manhole cover, vehicle, steel plate on the road, etc.
- When a detectable object is under a structure
- When part of a detectable object is hidden by an object, such as large baggage, an umbrella, or guardrail
- When multiple detectable objects are close together
- If the sun or other light is shining directly on a detectable object
- When a detectable object is a shade of white and looks extremely bright
- When a detectable object appears to be nearly the same color or brightness as its surroundings
- If a detectable object cuts or suddenly emerges in front of your vehicle
- When the front of your vehicle is hit by water, snow, dust, etc.
- When a very bright light ahead, such as the sun or the headlights of oncoming traffic, shines directly into the front camera
- When approaching the side or front of a vehicle ahead
- If a vehicle ahead is a motorcycle
- If a vehicle ahead is narrow, such as a personal mobility vehicle
- If a preceding vehicle has a small rear end, such as an unloaded truck
- If a preceding vehicle has a low rear end, such as a low bed trailer

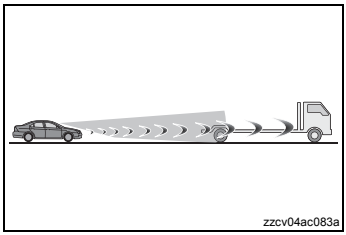


- If a vehicle ahead has extremely high ground clearance

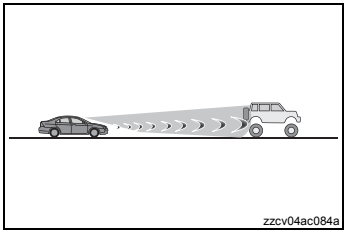

- If a vehicle ahead is carrying a load which protrudes past its rear bumper
- If a vehicle ahead is irregularly shaped, such as a tractor or side car
- If a vehicle ahead is a child sized bicycle, a bicycle that is carrying a large load, a bicycle ridden by more than one person, or a uniquely shaped bicycle (bicycle with a child seat, tandem bicycle, etc.)
- If a pedestrian/or the riding height of a bicyclist ahead is shorter than approximately 1 m (3.2 ft.) or taller than approximately 2 m (6.5 ft.)
- If a pedestrian/bicyclist is wearing oversized clothing (a rain coat, long skirt, etc.), making their silhouette obscure
- If a pedestrian is bending forward or squatting or bicyclist is bending forward
- If a pedestrian/bicyclist is moving fast
- If a pedestrian is pushing a stroller, wheelchair, bicycle or other vehicle
- When driving in inclement weather such as heavy rain, fog, snow or a sandstorm
- When driving through steam or smoke
- When the surrounding area is dim, such as at dawn or dusk, or while at night or in a tunnel, making a detectable object appear to be nearly the

same color as its surroundings
- When driving in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a tunnel
- After the hybrid system has started the vehicle has not been driven for a certain amount of time
- While making a left/right turn and for a few seconds after making a left/right turn
- While driving on a curve and for a few seconds after driving on a curve
- If your vehicle is skidding
- If the front of the vehicle is raised or lowered

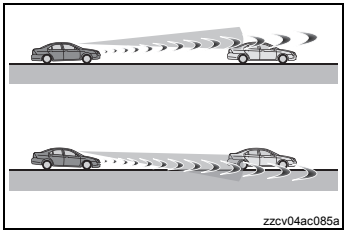

- If the wheels are misaligned
- If a wiper blade is blocking the front camera
- The vehicle is being driven at extremely high speeds
- When driving on a hill
- If the radar sensor or front camera is misaligned

● In some situations such as the following, sufficient braking force may not be obtained, preventing the system from performing properly:
- If the braking functions cannot operate to their full extent, such as when the brake parts are extremely cold, extremely hot, or wet
- If the vehicle is not properly maintained (brakes or tires are excessively worn, improper tire inflation pressure, etc.)
- When the vehicle is being driven on a gravel road or other slippery surface

■ If VSC is disabled

● If VSC is disabled (→P.382), the pre-collision brake assist and pre-collision braking functions are also disabled.

● The PCS warning light will turn on and “VSC Turned OFF Pre-Collision Brake System Unavailable” will be displayed on the multi-information display.


LTA (Lane Tracing Assist)*

*: If equipped

When driving on highways and freeways with white (yellow) lane lines, this function alerts the driver when the vehicle might depart from its lane or course* and provides assistance by operating the steering wheel to keep the vehicle in its lane or course*. Furthermore, the system provides steering assistance when dynamic radar cruise control with full-speed range is operating to keep the vehicle in its lane.

The LTA system recognizes white (yellow) lane lines or a course* using the front camera. Additionally, it detects preceding vehicles using the front camera and radar.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

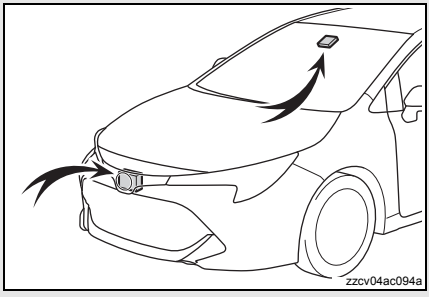

WARNING

■ Before using LTA system

- Do not rely solely upon the LTA system. The LTA system does not automatically drive the vehicle or reduce the amount of attention that must be paid to the area in front of the vehicle. The driver must always assume full responsibility for driving safely by paying careful attention to the surrounding conditions and operating the steering wheel to correct the path of the vehicle. Also, the driver must take adequate breaks when fatigued, such as from driving for a long period of time.
- Failure to perform appropriate driving operations and pay careful attention may lead to an accident, resulting in death or serious injury.
- When not using the LTA system, use the LTA switch to turn the system off.

■ Situations unsuitable for LTA system

In the following situations, use the LTA switch to turn the system off. Failure to do so may lead to an accident, resulting in death or serious injury.

- Vehicle is driven on a road surface which is slippery due to rainy weather, fallen snow, freezing, etc.
- Vehicle is driven on a snow-covered road.
- White (yellow) lines are difficult to see due to rain, snow, fog, dust, etc.
- Vehicle is driven in a temporary lane or restricted lane due to construction work.
- Vehicle is driven in a construction zone.
- A spare tire, tire chains, etc. are equipped.

WARNING

- When the tires have been excessively worn, or when the tire inflation pressure is low.
- When tires of a size other than specified are installed.
- Vehicle is driven in traffic lanes other than that highways and freeways.
- When your vehicle is towing a trailer or during emergency towing


■ Preventing LTA system malfunctions and operations performed by mistake

- Do not modify the headlights or place stickers, etc. on the surface of the lights.
- Do not modify the suspension etc. If the suspension etc. needs to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not install or place anything on the hood or grille. Also, do not install a grille guard (bull bars, kangaroo bar, etc.).
- If your windshield needs repairs, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ Conditions in which functions may not operate properly

In the following situations, the functions may not operate properly and the vehicle may depart from its lane. Drive safely by always paying careful attention to your surroundings and operate the steering wheel to correct the path of the vehicle without relying solely on the functions.


- When the follow-up cruising display is displayed (→P.291) and the preceding vehicle changes lanes. (Your vehicle may follow the preceding vehicle and also change lanes.)

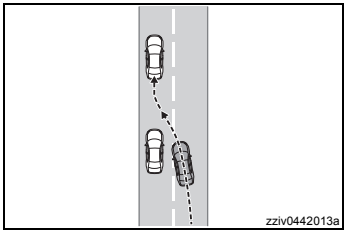


- When the follow-up cruising display is displayed (→P.291) and the preceding vehicle is swaying. (Your vehicle may sway accordingly and depart from the lane.)
- When the follow-up cruising display is displayed (→P.291) and the preceding vehicle departs from its lane. (Your vehicle may follow the preceding vehicle and depart from the lane.)
- When the follow-up cruising display is displayed (→P.291) and the preceding vehicle is being driven extremely close to the left/right lane line. (Your vehicle may follow the preceding vehicle and depart from the lane.)
- Vehicle is being driven around a sharp curve.

WARNING


- Objects or patterns that could be mistaken for white (yellow) lines are present on the side of the road (guardrails, curbs, reflective poles, etc.).

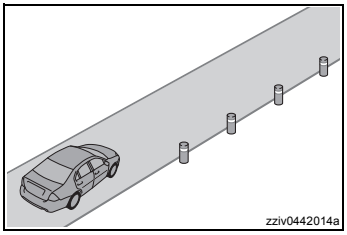

- Vehicle is driven where the road diverges, merges, etc.

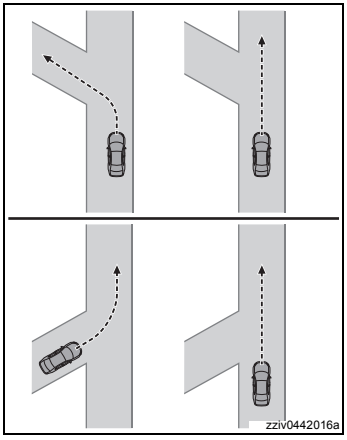

- Repair marks of asphalt, white (yellow) lines, etc. are present due to road repair.

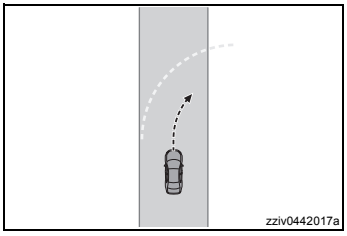

- There are shadows on the road that run parallel with, or cover, the white (yellow) lines.
- The vehicle is driven in an area without white (yellow) lines, such as in front of a tollgate or checkpoint, or at an intersection, etc.
- The white (yellow) lines are cracked, “Raised pavement marker” or stones are present.
- The white (yellow) lines cannot be seen or are difficult to see due to sand, etc.
- The vehicle is driven on a road surface that is wet due to rain, puddles, etc.
- The traffic lines are yellow (which may be more difficult to recognize than lines that are white).
- The white (yellow) lines cross over a curb, etc.
- The vehicle is driven on a bright surface, such as concrete.
- If the edge of the road is not clear or straight.
- The vehicle is driven on a surface that is bright due to reflected light, etc.
- The vehicle is driven in an area where the brightness changes suddenly, such as at the entrances and exits of tunnels, etc.
- Light from the headlights of an oncoming vehicle, the sun, etc. enters the camera.
- The vehicle is driven on a slope.
- The vehicle is driven on a road which tilts left or right, or a winding road.
- The vehicle is driven on an unpaved or rough road.
- The traffic lane is excessively narrow or wide.

WARNING

- The vehicle is extremely tilted due to carrying heavy luggage or having improper tire pressure.
- The distance to the preceding vehicle is extremely short.
- The vehicle is moving up and down a large amount due to road conditions during driving (poor roads or road seams).
- When driving in a tunnel or at night with the headlights off or when a headlight is dim due to its lens being dirty or it being misaligned.
- The vehicle is struck by a crosswind.
- The vehicle is affected by wind from a vehicle driven in a nearby lane.
- The vehicle has just changed lanes or crossed an intersection.
- Tires which differ by structure, manufacturer, brand or tread pattern are used.
- Snow tires, etc. are equipped.
- The vehicle is being driven at extremely high speeds.

Functions included in LTA system


Lane departure alert function

When the system determines that the vehicle might depart from its lane or course*, a warning is displayed on the multi-information display, and a warning buzzer will sound to alert the driver.

When the warning buzzer sounds, check the area around your vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane.

Vehicles with a Blind Spot Monitor: When the system determines that the vehicle might depart from its lane and that the possibility of a collision with an overtaking vehicle in the adjacent lane is high, the lane departure alert will operate even if the turn signals are operating.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

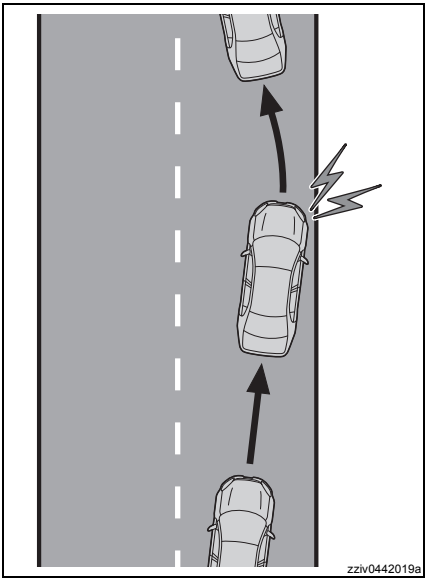

Steering assist function


When the system determines that the vehicle might depart from its lane or course*, the system provides assistance as necessary by operating the steering wheel in small amounts for a short period of time to keep the vehicle in its lane.

If the system detects that the steering wheel has not been operated for a fixed

amount of time or the steering wheel is not being firmly gripped, a warning is displayed on the multi-information display and the function is temporarily canceled.


Vehicles with a Blind Spot Monitor: When the system determines that the vehicle might depart from its lane and that the possibility of a collision with an overtaking vehicle in the adjacent lane is high, the steering assist function will operate even if the turn signals are operating.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

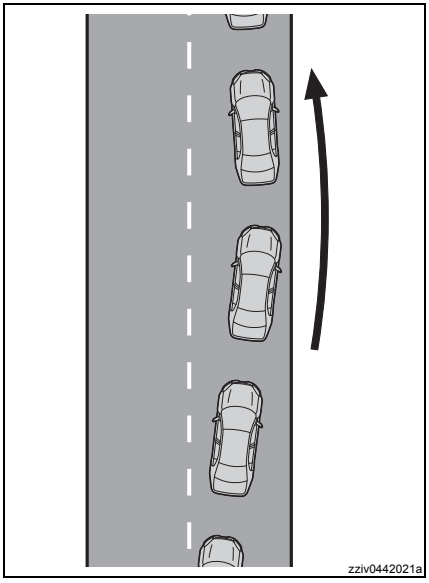

■ Vehicle sway warning function

When the vehicle is swaying within a lane, the warning buzzer will sound and a message will be displayed on the multi-information display to alert the driver.

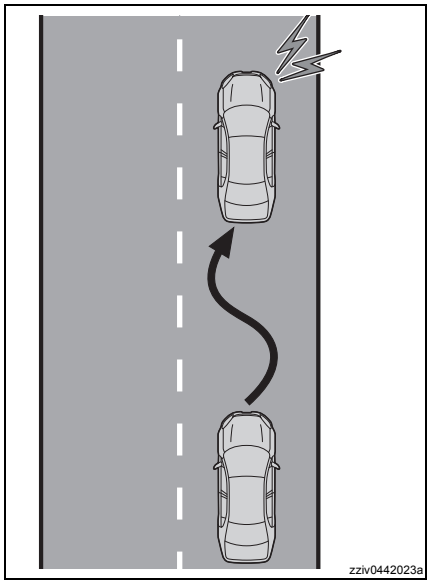

■ Lane centering function


This function is linked with dynamic radar cruise control with full-speed range and provides the required assistance by operating the steering wheel to keep the vehicle in its current lane.

When dynamic radar cruise control with full-speed range is not operating, the lane centering function does not operate.

In situations where the white (yellow) lane lines are difficult to see or are not visible, such as when in a traffic jam, this function will operate to help follow a preceding vehicle by monitoring the position of the preceding vehicle.

If the system detects that the steering wheel has not been operated for a fixed amount of time or the steering wheel is not being firmly gripped, a warning is displayed on the multi-information display and the function is temporarily

canceled.

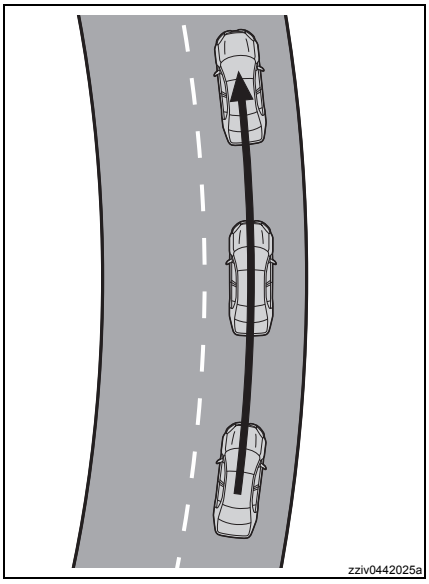


Turning LTA system on

Press the LTA switch to turn the LTA system on.


The LTA indicator illuminates and a message is displayed on the multi-information display.

Press the LTA switch again to turn the LTA system off.

When the LTA system is turned on or off, operation of the LTA system continues in the same condition the next time the hybrid system is started.

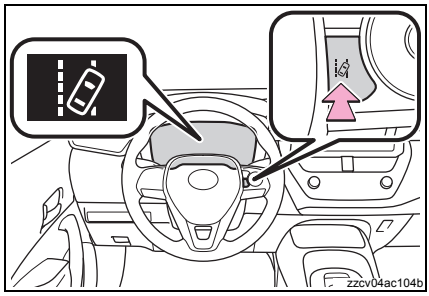

Indications on multi-information display

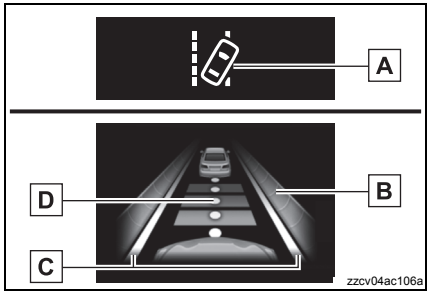

A LTA indicator

The illumination condition of the indicator informs the driver of the system operation status.

Illuminated in white: LTA system is operating.

Illuminated in green: Steering wheel assistance of the steering assist function or lane centering function is operating.

Flashing in orange: Lane departure alert function is operating.

B Operation display of steering wheel operation support

Displayed when the multi-information display is switched to the driving support system information screen.

Indicates that steering wheel assistance of the steering assist function or

lane centering function is operating.

Both outer sides of the lane are displayed: Indicates that steering wheel assist of the lane centering function is operating.


One outer side of the lane is displayed: Indicates that steering wheel assist of the steering assist function is operating.

Both outer sides of the lane are flashing: Alerts the driver that their input is necessary to stay in the center of the lane (lane centering function).

C Lane departure alert function display


Displayed when the multi-information display is switched to the driving support system information screen.

▶ Inside of displayed lines is white

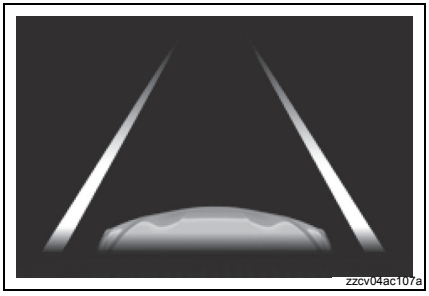

Indicates that the system is recognizing white (yellow) lines or a course*. When the vehicle departs from its lane, the white line displayed on the side the vehicle departs from flashes orange.

▶ Inside of displayed lines is black

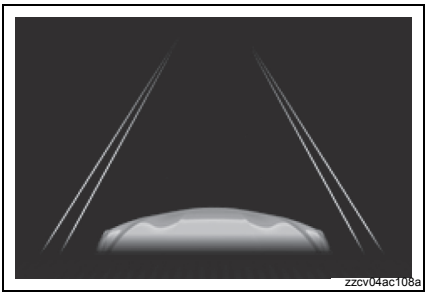

Indicates that the system is not able to recognize white (yellow) lines or a course* or is temporarily canceled.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

D Follow-up cruising display

Displayed when the multi-information display is switched to the driving support system information screen.

Indicates that steering assist of the lane centering function is operating by monitoring the position of a preceding vehicle.

When the follow-up cruising display is displayed, if the preceding vehicle moves, your vehicle may move in the same way. Always pay careful attention to your surroundings and operate the steering wheel as necessary to correct the path of the vehicle and ensure safety.

■ Operation conditions of each function

● Lane departure alert function

This function operates when all of the following conditions are met.

- LTA is turned on.
- Vehicle speed is approximately 50

km/h (32 mph) or more.*1
- System recognizes white (yellow) lane lines or a course*2. (When a white [yellow] line or course*2 is recognized on only one side, the system will operate only for the recognized side.)
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- Turn signal lever is not operated.

(Except when another vehicle is in the lane on the side where the turn signal was operated)
- Vehicle is not being driven around a sharp curve.
- No system malfunctions are detected. (→P.295)

*1: The function operates even if the vehicle speed is less than approximately 50 km/h (32 mph) when the lane centering function is operating.

*2: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

● Steering assist function

This function operates when all of the following conditions are met in addition to the operation conditions for the lane departure alert function.

- Setting for “Steering Assist” in  of the multi-information display is set to “ON”. (→P.610)
- Vehicle is not accelerated or decelerated by a fixed amount or more.
- Steering wheel is not operated with a steering force level suitable for changing lanes.
- ABS, VSC, TRC and PCS are not operating.
- TRC or VSC is not turned off.
- Hands off steering wheel warning is not displayed. (→P.294)

● Vehicle sway warning function

This function operates when all of the following conditions are met.

- Setting for “Sway Warning” in  of the multi-information display is set to “ON”. (→P.610)
- Vehicle speed is approximately 50 km/h (32 mph) or more.
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- No system malfunctions are detected. (→P.295)

● Lane centering function

This function operates when all of the following conditions are met.

- LTA is turned on.
- Setting for “Steering Assist” and “Lane Centre” in  of the multi-information display are set to “ON” (→P.610)
- This function recognizes white (yellow) lane lines or the position of a preceding vehicle (except when the preceding vehicle is small, such as a motorcycle).
- The dynamic radar cruise control with full-speed range is operating in vehicle-to-vehicle distance control mode.
- Width of traffic lane is approximately 3 to 4 m (10 to 13 ft.).
- Turn signal lever is not operated.
- Vehicle is not being driven around a sharp curve.
- No system malfunctions are detected. (→P.295)
- Vehicle does not accelerate or decelerate by a fixed amount or more.
- Steering wheel is not operated with a steering force level suitable for changing lanes.
- ABS, VSC, TRC and PCS are not operating.
- TRC or VSC is not turned off.
- Hands off steering wheel warning is not displayed. (→P.294)
- The vehicle is being driven in the center of a lane.
- Steering assist function is not operating.

■ Temporary cancellation of functions

● When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again,

operation of the function is automatically restored. (→P.292)

- If the operation conditions (→P.292) are no longer met while the lane centering function is operating, the buzzer may sound to indicate that the function has been temporarily canceled.

■ Steering assist function/lane centering function

- Depending on the vehicle speed, lane departure situation, road conditions, etc., the driver may not feel the function is operating or the function may not operate at all.
- The steering control of the function is overridden by the driver's steering wheel operation.
- Do not attempt to test the operation of the steering assist function.

■ Lane departure alert function

- The warning buzzer may be difficult to hear due to external noise, audio playback, etc.
- If the edge of the course* is not clear or straight, the lane departure alert function may not operate.
- It may not be possible for the system to determine if there is a danger of a collision with a vehicle in an adjacent lane.
- Do not attempt to test the operation of the lane departure alert function.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

■ Hands off steering wheel warning

In the following situations, a warning message urging the driver to hold the steering wheel and the symbol shown in the illustration are displayed on the multi-information display to warn the driver. The warning stops when the system determines that the driver holds the steering wheel. Always keep your hands on the steering wheel when using this system, regardless of warnings.



- When the system determines that the driver is driving without holding the steering wheel while the system is operating

If the driver continues to keep their hands off of the steering wheel, the buzzer sounds, the driver is warned and the function is temporarily canceled. This warning also operates in the same way when the driver continuously operates the steering wheel only a small amount.

- When the system determines that the vehicle may not turn and instead depart from its lane while driving around a curve

Depending on the vehicle condition and road conditions, the warning may not operate. Also, if the system determines that the vehicle is driving around a curve, warnings will occur earlier than during straight-lane driving.


- When the system determines that the driver is driving without holding the steering wheel while the steering wheel assist of the steering assist function is operating.

If the driver continues to keep their hands off of the steering wheel and the steering wheel assist is operating, the buzzer sounds and the driver is warned. Each time the buzzer sounds, the continuing time of the buzzer becomes longer.

■ Vehicle sway warning function

When the system determines that the vehicle is swaying while the vehicle sway warning function is operating, a buzzer sounds and a warning message urging the driver to rest and the symbol shown in the illustration are simultane-

ously displayed on the multi-information display.

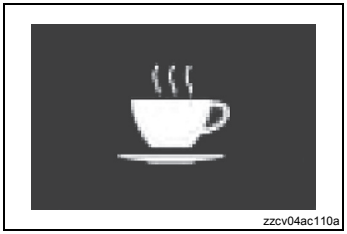

Depending on the vehicle and road conditions, the warning may not operate.

■ **Warning message**

If the following warning message is displayed on the multi-information display and the LTA indicator illuminates in orange, follow the appropriate trouble-shooting procedure. Also, if a different warning message is displayed, follow the instructions displayed on the screen.

● "LTA Malfunction Visit Your Dealer"

The system may not be operating properly. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

● "LTA Unavailable"

The system is temporarily canceled due to a malfunction in a sensor other than the front camera. Turn the LTA system off, wait for a little while, and then turn the LTA system back on.

● "LTA Unavailable at Current Speed"

The function cannot be used as the vehicle speed exceeds the LTA operation range. Drive slower.

■ **Customization**

Function settings can be changed. (→P.610)

Dynamic radar cruise control with full-speed range*

*: If equipped


In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates and stops to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control with full-speed range on freeways and highways.

- Vehicle-to-vehicle distance control mode (→P.298)
- Constant speed control mode (→P.302)

System Components

■ **Meter display**

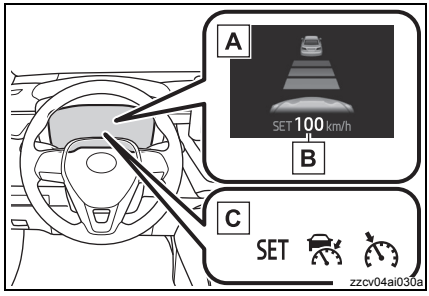


A Multi-information display

B Set speed

C Indicators

■ Operation switches

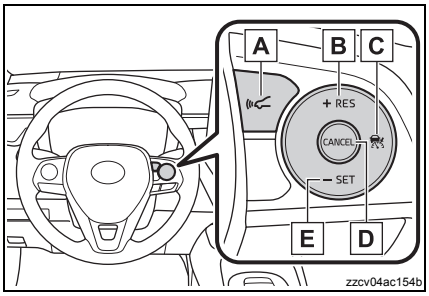

A Vehicle-to-vehicle distance switch

B "+RES" switch

C Cruise control main switch

D Cancel switch

E "-SET" switch

⚠ WARNING

■ Before using dynamic radar cruise control with full-speed range

- Driving safely is the sole responsibility of the driver. Do not rely solely on the system, and drive safely by always paying careful attention to your surroundings.
- The dynamic radar cruise control with full-speed range provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided.

Read the following conditions carefully. Do not overly rely on this system and always drive carefully.

- When the sensor may not be correctly detecting the vehicle ahead: →P.304
- Conditions under which the vehicle-to-vehicle distance control mode may not function correctly: →P.305

- Set the speed appropriately depending on the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for checking the set speed.
- Even when the system is functioning normally, the condition of the preceding vehicle as detected by the system may differ from the condition observed by the driver. Therefore, the driver must always remain alert, assess the danger of each situation and drive safely. Relying solely on this system or assuming the system ensures safety while driving can lead to an accident, resulting in death or serious injury.
- Switch the dynamic radar cruise control with full-speed range setting to off, using the cruise control main switch when not in use.

■ Cautions regarding the driving assist systems

Observe the following precautions, as there are limitations to the assistance provided by the system. Failure to do so may cause an accident resulting in death or serious injury.

WARNING

● Assisting the driver to measure following distance

The dynamic radar cruise control with full-speed range is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions.

It is still necessary for driver to pay close attention to the vehicle's surroundings.

● Assisting the driver to judge proper following distance

The dynamic radar cruise control with full-speed range determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is within a set range. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

● Assisting the driver to operate the vehicle

The dynamic radar cruise control with full-speed range does not include functions which will prevent or avoid collisions with vehicles ahead of your vehicle. Therefore, if there is ever any possibility of danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

■ Situations unsuitable for dynamic radar cruise control with full-speed range

Do not use dynamic radar cruise control with full-speed range in any of the following situations. Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- Roads where there are pedestrians, cyclists, etc.
- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhills, or where there are sudden changes between sharp up and down gradients


Vehicle speed may exceed the set speed when driving down a steep hill.

- At entrances to freeways and highways
- When weather conditions are bad enough that they may prevent the sensors from detecting correctly (fog, snow, sandstorm, heavy rain, etc.)
- When there is rain, snow, etc. on the front surface of the radar or front camera
- In traffic conditions that require frequent repeated acceleration and deceleration
- When your vehicle is towing a trailer or during emergency towing
- When an approach warning buzzer is heard often

Driving in vehicle-to-vehicle distance control mode

This mode employs a radar to detect the presence of vehicles up to approximately 100 m (328 ft.) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance switch.

When driving on downhill slopes, the vehicle-to-vehicle distance may become shorter.

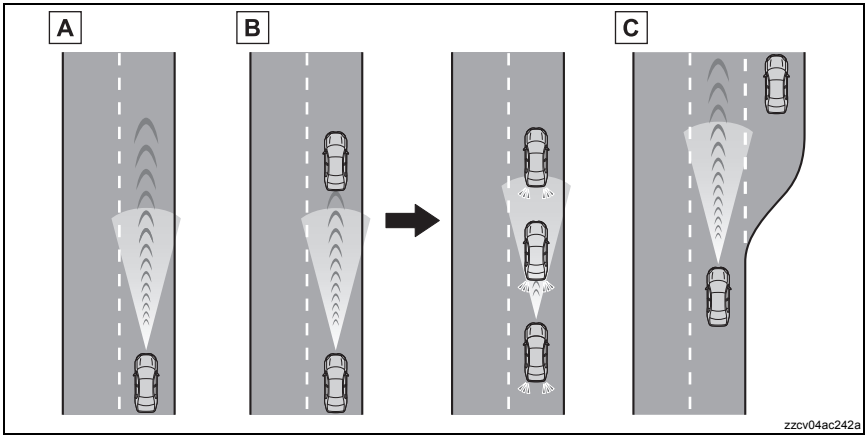

A Example of constant speed cruising
When there are no vehicles ahead

The vehicle travels at the speed set by the driver.

B Example of deceleration cruising and follow-up cruising
When a preceding vehicle driving slower than the set speed appears

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the stop lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. Approach warning warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

When the vehicle ahead of you stops, your vehicle will also stop (vehicle is stopped by system control). After the vehicle ahead starts off, pressing the “+RES” switch or depressing the accelerator pedal (start-off operation) will resume follow-up cruising. If the start-off operation is not performed, system control continues to keep your vehicle stopped.

When the turn signal lever is operated and your vehicle moves to a left lane while

driving at 80 km/h (50 mph) or more, the vehicle will quickly accelerate to help to overtake a passing vehicle.

C Example of acceleration

When there are no longer any preceding vehicles driving slower than the set speed


The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Setting the vehicle speed (vehicle-to-vehicle distance control mode)

1 Press the cruise control main switch to activate the cruise control.

Dynamic radar cruise control indicator will come on and a message will be displayed on the multi-information display. Press the switch again to deactivate the cruise control.


If the cruise control main switch is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode. (→P.302)

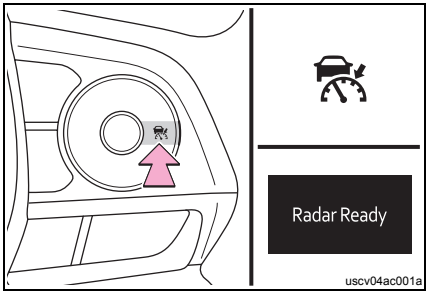

2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 km/h [20 mph]) and press the “-SET” switch to set the speed.


Cruise control “SET” indicator will come on.

The vehicle speed at the moment the switch is released becomes the set speed.

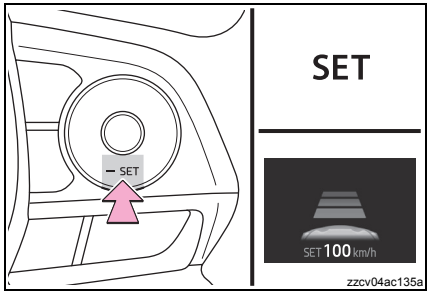

Adjusting the set speed

To change the set speed, press the “+RES” or “-SET” switch until the desired set speed is displayed.

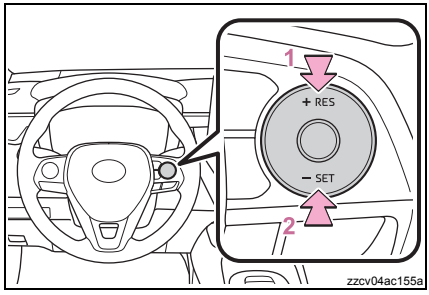

1 Increases the speed (Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)

2 Decreases the speed

Fine adjustment: Press the switch.

Large adjustment: Press and hold the switch to change the speed, and release when the desired speed is reached.

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

▶ For Europe

Fine adjustment: By 5 km/h (3.1 mph)*1 or 5 mph (8 km/h)*2 each time the switch is pressed

Large adjustment: Increases or decreases in 5 km/h (3.1 mph)*1 or 5 mph (8 km/h)*2 increments for as long as the switch is held

▶ Except for Europe

Fine adjustment: By 1 km/h (0.6 mph) each time the switch is pressed

Large adjustment: Increases or decreases in 5 km/h (3.1 mph) increments for as long as the switch is held

In the constant speed control mode (→P.302), the set speed will be increased or decreased as follows:

Fine adjustment: By 1 km/h (0.6 mph)*1 or 1 mph (1.6 km/h)*2 each time the switch is pressed


Large adjustment: The speed will continue to change while the switch is held.

*1: When the set speed is shown in "km/h"

*2: When the set speed is shown in "MPH"

Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

Pressing the switch changes the vehicle-to-vehicle distance as follows:

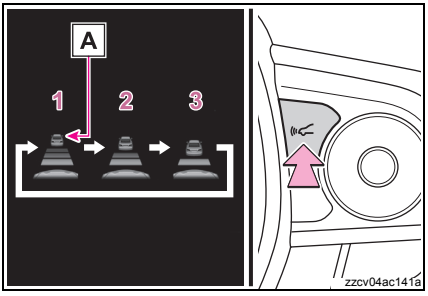

1 Long
2 Medium
3 Short

The vehicle-to-vehicle distance is set automatically to long mode when the power switch is turned to ON.

If a vehicle is running ahead of you, the preceding vehicle mark A will also be displayed.

Vehicle-to-vehicle distance settings (vehicle-to-vehicle distance control mode)

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 80 km/h (50 mph). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed. When the vehicle is stopped by system con-


trol, the vehicle stops at a certain vehicle-to-vehicle distance depending on the situation.

Distance options	Vehicle-to-vehicle distance
Long	Approximately 50 m (160 ft.)
Medium	Approximately 40 m (130 ft.)
Short	Approximately 30 m (100 ft.)


Resuming follow-up cruising when the vehicle has been stopped by system control (vehicle-to-vehicle distance control mode)

After the vehicle ahead of you starts off, press the “+RES” switch.

Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

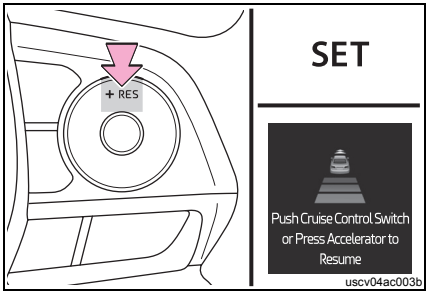

Canceling and resuming the speed control

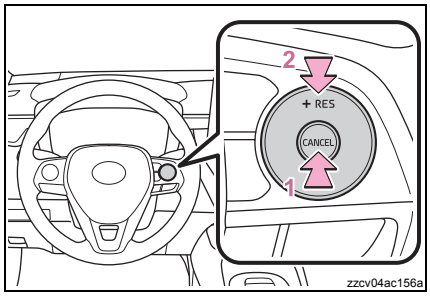


1 Pressing the cancel switch cancels the speed control.

The speed control is also canceled when the brake pedal is depressed. (When the vehicle has been stopped by system control, depressing the brake pedal does not cancel the setting.)

2 Pressing the “+RES” switch resumes the cruise control and returns vehicle speed to the set speed.

Approach warning (vehicle-to-vehicle distance control mode)

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

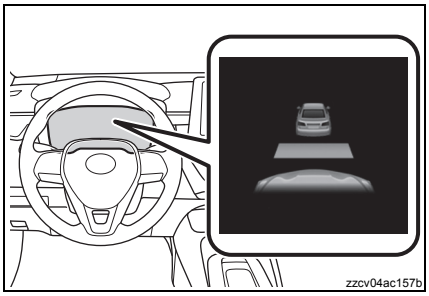

■ **Warnings may not occur when**

In the following instances, warnings may not occur even when the vehicle-to-vehicle distance is small.

- When the speed of the preceding vehicle matches or exceeds your vehicle speed
- When the preceding vehicle is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- When depressing the accelerator pedal


Selecting constant speed control mode

When constant speed control mode is selected, your vehicle will maintain a set speed without controlling the vehicle-to-vehicle distance. Select this mode only when vehicle-to-vehicle distance control mode does not function correctly due to a dirty radar, etc.

1 With the cruise control off, press and hold the cruise control main switch for 1.5 seconds or more.

Immediately after the switch is pressed, the dynamic radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.

Switching to constant speed control mode is only possible when operating the switch with the cruise control off.

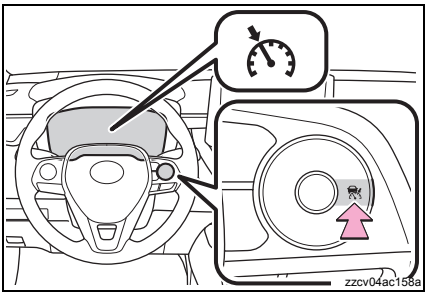


2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 km/h [20 mph]) and press the “-SET” switch to set the speed.

Cruise control “SET” indicator will come on.

The vehicle speed at the moment the switch is released becomes the set speed.

Adjusting the speed setting: →P.299


Canceling and resuming the speed setting: →P.301

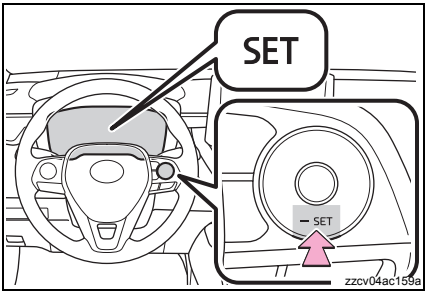

Dynamic Radar Cruise Control with Road Sign Assist


When this function is enabled and the system is operating in vehicle-to-vehicle distance control mode (→P.298), when a speed limit sign is detected, the recognized speed limit will be displayed with an up/down arrow. The set speed can be increased/reduced to the recognized speed limit by pressing and holding the “+RES”/“-SET” switch.

- When the current set speed is lower than the recognized speed limit

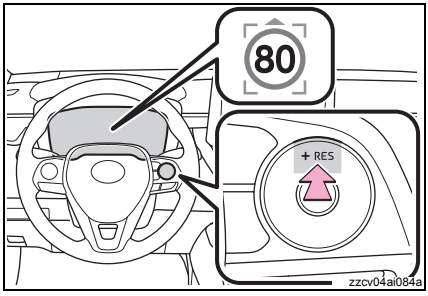

Press and hold the “+RES” switch.

- When the current set speed is higher than the recognized speed limit

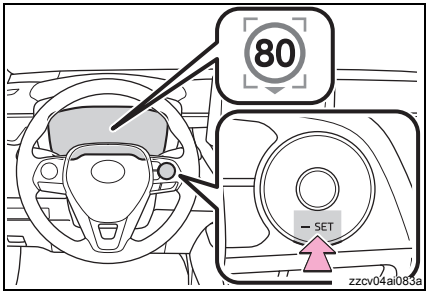

Press and hold the “-SET” switch.

Enabling/Disabling the Dynamic Radar Cruise Control with Road Sign Assist

Dynamic Radar Cruise Control with Road Sign Assist can be enabled/disabled in on the multi-information display. (→P.123)

Dynamic radar cruise control with full-speed range can be set when

- The shift lever is in D.
- The desired set speed can be set when the vehicle speed is approximately 30 km/h (20 mph) or more. (However, when the vehicle speed is set while driving at below approximately 30 km/h [20 mph], the set speed will be set to approximately 30 km/h [20 mph].)

Accelerating after setting the vehicle speed

The vehicle can accelerate by operating the accelerator pedal. After accelerating, the set speed resumes. However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the preceding vehicle.

When the vehicle stops while follow-up cruising

- Pressing the “+RES” switch while the vehicle ahead stops will resume follow-up cruising if the vehicle ahead starts off within approximately 3 seconds after the switch is pressed.
- If the vehicle ahead starts off within 3 seconds after your vehicle stops, follow-up cruising will be resumed.

Automatic cancelation of vehicle-to-vehicle distance control mode

Vehicle-to-vehicle distance control mode is automatically canceled in the follow-

ing situations.

- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.
- The sensor cannot detect correctly because it is covered in some way.
- Pre-collision braking is activated.
- The parking brake is operated.
- The vehicle is stopped by system control on a steep incline.
- The following are detected when the vehicle has been stopped by system control:
  - The driver is not wearing a seat belt.
  - The driver's door is opened.
  - The vehicle has been stopped for about 3 minutes

If vehicle-to-vehicle distance control mode is automatically canceled for any reasons other than the above, there may be a malfunction in the system. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ Automatic cancelation of constant speed control mode

Constant speed control mode is automatically canceled in the following situations:

- Actual vehicle speed is more than approximately 16 km/h (10 mph) below the set vehicle speed.
- Actual vehicle speed falls below approximately 30 km/h (20 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.
- Pre-collision braking is activated.

If constant speed control mode is automatically canceled for any reasons other than the above, there may be a malfunction in the system. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ The Dynamic Radar Cruise Control with Road Sign Assist may not operate properly when

As the Dynamic Radar Cruise Control with Road Sign Assist may not operate properly in conditions in which RSA may not operate or detect correctly (→P.313), when using this function, make sure to check the speed limit sign displayed.

In the following situations, the set speed may not be changed to the recognized speed limit by pressing and holding the "+RES"/"-SET" switch.

- If speed limit information is not available
- When the recognized speed limit is the same as the set speed
- When the recognized speed limit is outside of the speed range that the dynamic radar cruise control system can operate

■ Brake operation

A brake operation sound may be heard and the brake pedal response may change, but these are not malfunctions.

■ Warning messages and buzzers for dynamic radar cruise control with full-speed range

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. If a warning message is shown on the multi-information display, read the message and follow the instructions. (→P.276, 551)


■ When the sensor may not be correctly detecting the vehicle ahead

In the case of the following and depending on the conditions, operate the brake pedal when deceleration of the system is insufficient or operate the accelerator pedal when acceleration is required.


As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P.301) may not be activated.

- Vehicles that cut in suddenly


- Vehicles traveling at low speeds
- Vehicles that are not moving in the same lane
- Vehicles with small rear ends (trailers with no load on board, etc.)

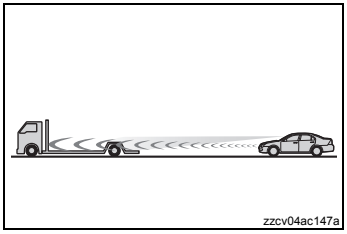

- Motorcycles traveling in the same lane
- When water or snow thrown up by the surrounding vehicles hinders the detecting of the sensor
- When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment, etc.)

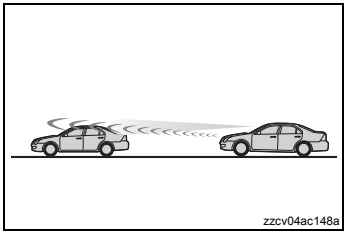

- Preceding vehicle has an extremely high ground clearance

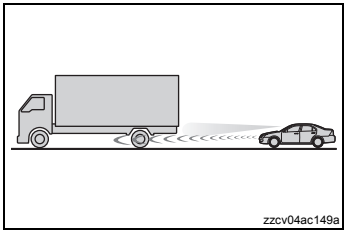


Conditions under which the vehicle-to-vehicle distance control mode may not function correctly


In the case of the following conditions, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.

As the sensor may not be able to correctly detect vehicles ahead, the system may not operate properly.

- When the road curves or when the lanes are narrow

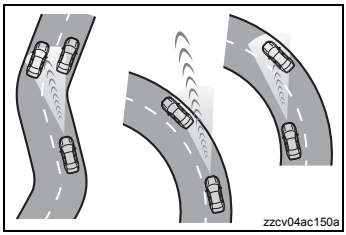

- When steering wheel operation or your position in the lane is unstable

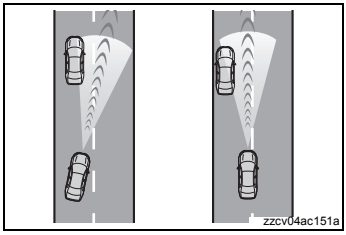

- When the vehicle ahead of you decelerates suddenly
- When driving on a road surrounded by a structure, such as in a tunnel or on a bridge
- While the vehicle speed is decreasing to the set speed after the vehicle accelerates by depressing the accelerator pedal


Cruise control*

*: If equipped

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

System components


■ Meter display

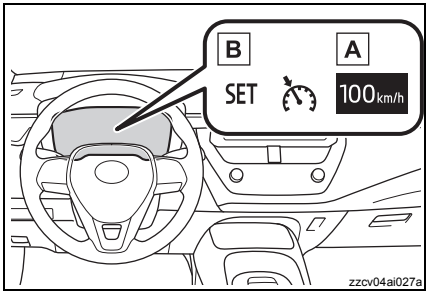

A Set speed

B Indicators

■ Operation switches

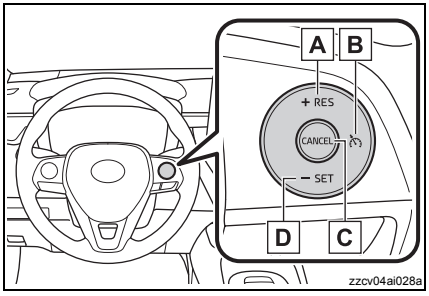

A “+RES” switch

B Cruise control main switch

C Cancel switch


D “-SET” switch

Setting the vehicle speed

1 Press the cruise control main switch to activate the cruise control.

Cruise control indicator will come on.


Press the switch again to deactivate the cruise control.

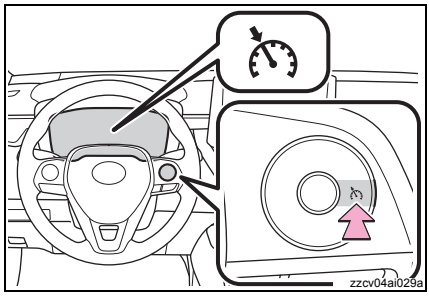

2 Accelerate or decelerate the vehicle to the desired speed, and press the “-SET” switch to set the speed.


Cruise control “SET” indicator will come on.

The vehicle speed at the moment the switch is released becomes the set speed.

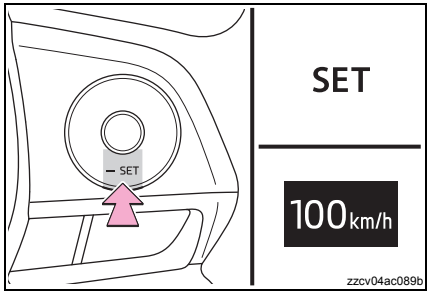

Adjusting the set speed

To change the set speed, press the “+RES” or “-SET” switch until the desired set speed is obtained.

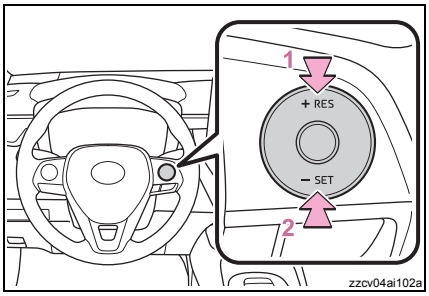

1 Increases the speed

2 Decreases the speed

Fine adjustment: Press the switch in the desired direction.

Large adjustment: Press and hold switch.

The set speed will be increased or decreased as follows:


Fine adjustment: By 1 km/h (0.6 mph)[*1] or 1 mph (1.6 km/h)[*2] each time the switch is pressed

Large adjustment: The set speed can be increased or decreased continually until the switch is released.

[*1]: When the set speed is shown in "km/h"

[*2]: When the set speed is shown in "MPH"

Canceling and resuming the constant speed control

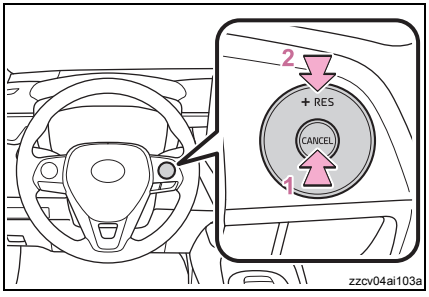

1 Pressing the cancel switch cancels the constant speed control.

The speed setting is also canceled when the brake pedal is depressed.

2 Pressing the "+RES" switch resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 30km/h (20 mph).

■ Cruise control can be set when

- The shift lever is in D.
- Vehicle speed is above approximately 30 km/h (20 mph).

■ Accelerating after setting the vehicle speed

- The vehicle can be accelerated normally. After acceleration, the set speed resumes.
- Even without canceling the cruise control, the set speed can be increased by first accelerating the vehicle to the desired speed and then pressing the "-SET" switch to set the new speed.

■ Automatic cruise control cancelation

Cruise control will stop maintaining the vehicle speed in any of the following situations.

- Actual vehicle speed falls more than approximately 16 km/h (10 mph) below the preset vehicle speed. At this time, the memorized set speed is not retained.
- Actual vehicle speed is below approximately 30 km/h (20 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off by pressing the VSC off switch.

If the warning message for the cruise control is shown on the multi-information display

Press the cruise control main switch once to deactivate the system, and then press the switch again to reactivate the system. If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

To avoid operating the cruise control by mistake

Switch the cruise control off using the cruise control main switch when not in use.

Situations unsuitable for cruise control

Do not use cruise control in any of the following situations.
Doing so may result in loss of control and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep hills

Vehicle speed may exceed the set speed when driving down a steep hill.

- When your vehicle is towing a trailer or during emergency towing


Speed limiter*

*: If equipped

A desired maximum speed can be set using the speed limiter switch. The speed limiter prevents vehicle speed from exceeding the set speed.

System components


Meter display

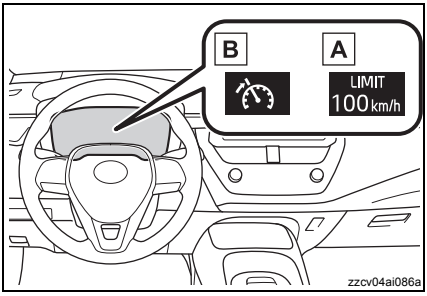

A Set speed

B Indicators

Operation switches

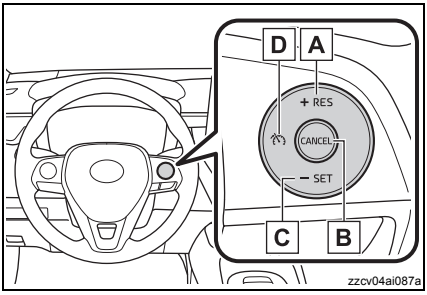

A “+RES” switch

B Cancel switch

C “-SET” switch


D Speed limiter main switch

Setting the vehicle speed

1 Press the speed limiter main switch to activate the speed limiter.

Speed limiter indicator will come on.


Press the switch again to deactivate the speed limiter.

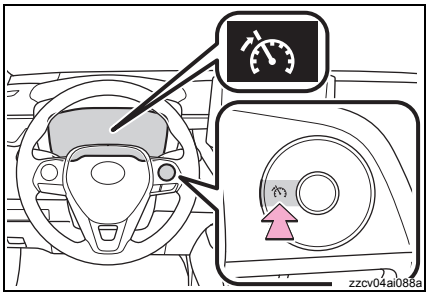

2 Accelerate or decelerate the vehicle to the desired speed, and press the “-SET” switch to set the desired maximum speed.


The set speed is displayed on the multi-information display.

If the switch is pressed while the vehicle speed is below 30 km/h (20 mph), the set speed will be 30 km/h (20 mph).

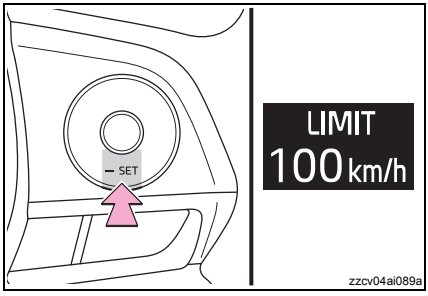

Adjusting the set speed

To change the set speed, press the “+RES” or “-SET” switch until the desired set speed is obtained.

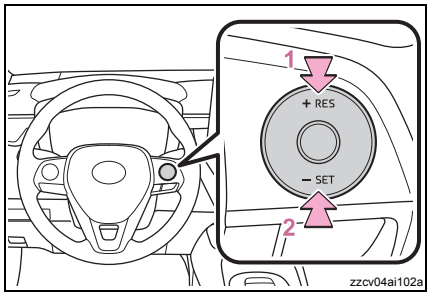

1 Increases the speed

2 Decreases the speed

Fine adjustment: Press the switch in the desired direction.

Large adjustment: Press and hold switch.

The set speed will be increased or decreased as follows:


Fine adjustment: By 1 km/h (0.6 mph)[*1] or 1 mph (1.6 km/h)[*2] each time the switch is pressed

Large adjustment: Increases or decreases in 5 km/h (3.1 mph)[*1] or 5 mph (8 km/h)[*2] increments for as long as the switch is held

[*1]: When the set speed is shown in “km/h”

[*2]: When the set speed is shown in “MPH”

Canceling and resuming the constant speed control

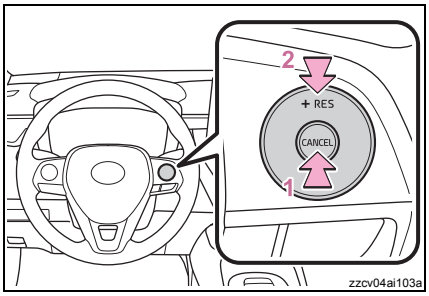

1 Pressing the cancel switch cancels the speed limiter.

2 Pressing the “+RES” switch resumes the speed limiter.

■ Exceeding the set speed

In the following situations, the vehicle speed exceeds the set speed and display characters will flash:

- When fully depressing the accelerator pedal
- When driving down a slope

■ Automatic speed limiter cancelation

The speed limiter is automatically canceled in any of the following situations:

- Cruise control is activated.
- When the VSC or TRC system is turned off by pressing the VSC off switch.

■ If the warning message for the speed limiter is shown on the multi-information display

Stop the hybrid system and then restart the hybrid system. After restarting the hybrid system, set the speed limiter. If the speed limiter cannot be set, there may be a malfunction in the speed limiter. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ To avoid operating the speed limiter by mistake

Switch the speed limiter off using the speed limiter main switch when not in use.

■ Situations unsuitable for speed limiter


Do not use speed limiter in any of the following situations.
Doing so may result in loss of control and could cause an accident resulting in death or serious injury.

- On slippery roads, such as those covered with rain, ice or snow
- On steep hills
- When your vehicle is towing a trailer or during emergency towing

RSA (Road Sign Assist)*

*: If equipped

The RSA system recognizes specific road signs using the front camera and/or navigation system (when data is available) to provide information to the driver via the display.

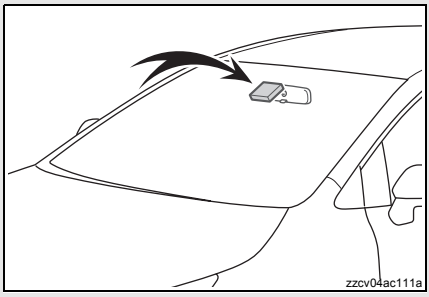

If the system judges that the vehicle is being driven over the speed limit, performing prohibited actions, etc. in relation to the recognized road signs, it alerts the driver using a warning display and warning buzzer.

WARNING


■ Before using the RSA

Do not rely solely upon the RSA system. RSA is a system which supports the driver by providing information, but it is not a replacement for a driver's own vision and awareness. Drive safely by always paying careful attention to the traffic rules.


Indication on the multi-information display

When the front camera recognizes a sign and/or information of a sign is available from the navigation system, the sign will be displayed on the multi-information display.

- When the driving support system information is selected, a maximum of 3 signs can be displayed. (→P.123)

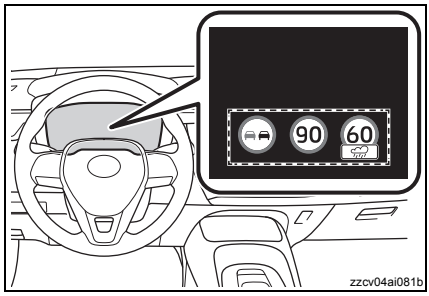

- When a tab other than the driving support system information is selected, only a recognized speed limit sign, a no-entry sign* (when notification is necessary), expressway sign, highway sign or Residential area sign will be displayed. (→P.123)

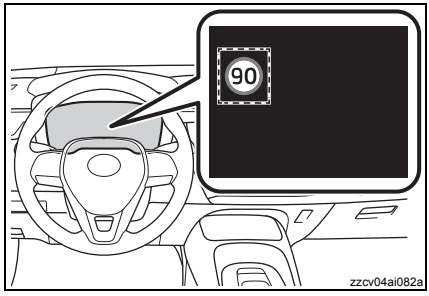

A no overtaking sign and a speed limit

sign with supplemental mark are not displayed. However, if signs other than speed limit signs are recognized, they will be displayed in an overlapping stack under the current speed limit sign.

*: For vehicles with navigation system

Supported types of road signs

The following types of road signs, including electronic signs and blinking signs, are recognized.

A non-official (not meeting the Vienna Convention) or a recently introduced traffic sign may not be recognized.

- Speed limit road signs



zziv0442079a

Speed limit begins/Maximum speed zone begins



zziv0442080a

Speed limit ends/Maximum speed zone ends

- Speed limit related information*


zziv0442081a

Expressway entrance


zziv0442082a

Expressway exit


zziv0442083a

Highway entrance


zziv0442084a

Highway exit


zziv0442085a

Urban area beginning


zziv0442086a

Urban area ending


zziv0442087a

Urban area beginning


zziv0442088a

Urban area ending


zziv0442089a

Residential area beginning


zziv0442090a

Residential area ending

*: Displayed when a sign is recognized but speed limit information for the road is not available from the navigation system

- No-overtaking road signs


zziv0442091a

No overtaking begins


zziv0442092a

No overtaking ends

- Other road signs


zziv0442093a

No-entry*


zziv0442094a

All canceled



zziv0442095a

Stop


*: For vehicles with navigation system

- Speed limit with supplemental mark*1


zziv0442096a
Wet


zziv0442097a
Rain


zziv0442098a
Ice


zziv0442099a
Supplemental mark exists*2


zziv0442100a
Exit ramp on right*3


zziv0442101a
Exit ramp on left*3


zziv0442102a
Time

*1: Displayed simultaneously with speed limit

*2: Contents not recognized.

*3: If the turn signal indicator is not operated when changing lanes, the mark does not display.

Warning indication

In the following situations, the RSA system will alert the driver.

- When the vehicle speed exceeds the speed warning threshold of the speed limit sign displayed, the sign display will be emphasized and a buzzer will sound.
- When the RSA system recognizes a no-entry sign and detects that the vehicle has entered a no-entry area based on the map information of the navigation system, the no-entry sign flashes and a buzzer will sound.*
- If it is detected that your vehicle is overtaking when a no overtaking sign is displayed on the multi-information display, the displayed sign will flash and a buzzer will sound.

Depending on the situation, traffic environment (traffic direction, speed unit) may be detected incorrectly and a warning indication may not operate properly.

*: For vehicles with navigation system

■ Setting procedure

1 Press ❮ or ❯ of the meter control switches and select ⚙

2 Press ∧ or ∨ of the meter control switches and select  , then press OK

■ Automatic turn-off of RSA sign display

One or more signs automatically turn off in the following situations.

- A new sign is not recognized for a certain distance.
- The road changes due to a left or right turn, etc.

■ Conditions in which the function may not operate or detect correctly

In the following situations, RSA does not operate normally and may not recognize signs, display the incorrect sign, etc. However, this does not indicate a malfunction.

- The front camera is misaligned due to a strong impact being applied to the sensor, etc.
- Dirt, snow, stickers, etc. are on the windshield near the front camera.
- In inclement weather such as heavy rain, fog, snow or sand storms.

- Light from an oncoming vehicle, the sun, etc. enters the front camera.
- The sign is dirty, faded, tilted or bent, and if an electronic sign, the contrast is poor.
- All or part of the sign is hidden by the leaves of a tree, a pole, etc.
- The sign is only visible to the front camera for a short amount of time.
- The driving scene (turning, lane change, etc.) is judged incorrectly.
- Even if it is a sign not appropriate for the currently traveled lane, such a sign exists directly after a freeway branches, or in an adjacent lane just before merging.
- Stickers are attached to the rear of the preceding vehicle.
- A sign resembling a system compatible sign is recognized.
- Side road speed signs may be detected and displayed (if positioned in sight of the front camera) while the vehicle is traveling on the main road.
- Roundabout exit road speed signs may be detected and displayed (if positioned in sight of the front camera) while traveling on a roundabout.
- The front of the vehicle is raised or lowered due to the carried load.
- The surrounding brightness is not sufficient or changes suddenly.
- When a sign intended for trucks, etc. is recognized.
- The vehicle is driven in a country with a different direction of traffic.
- The navigation system map data is old.
- The navigation system is not operating.
- The speed information displayed on the meter and that displayed on the navigation system may be different due to the navigation system using map data.

■ Speed limit sign display

If the power switch was last turned off while a speed limit sign was displayed on the multi-information display, the same sign displays again when the power switch is turned to ON.

■ If "RSA Malfunction Visit Your Dealer" is shown

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ Customization

Some functions can be customized. (→P.610)

BSM (Blind Spot Monitor)*

*: If equipped

The Blind Spot Monitor is a system that uses rear side radar sensors installed on the inner side of the rear bumper on the left and right side to assist the driver in confirming safety when changing lanes.

WARNING


■ Cautions regarding the use of the system

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The Blind Spot Monitor is a supplementary function which alerts the driver that a vehicle is in a blind spot of the outside rear view mirrors or is approaching rapidly from behind into a blind spot. Do not overly rely on the Blind Spot Monitor. As the function cannot judge if it is safe to change lanes, over reliance could lead to an accident resulting in death or serious injury.

As the system may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary.

System components

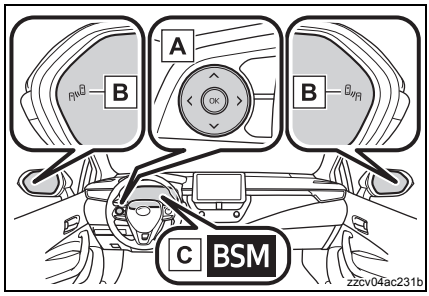

A Meter control switches

Turning the Blind Spot Monitor on/off.

B Outside rear view mirror indicators

When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.

C BSM indicator

Illuminates when the Blind Spot Monitor is enabled

■ Outside rear view mirror indicator visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

■ When "Blind Spot Monitor Unavailable" is shown on the multi-information display

Ice, snow, mud, etc., may be attached to the rear bumper around the sensors. (→P.320) The system should return to normal operation after removing the ice, snow, mud, etc. from the rear bumper. Additionally, the sensors may not operate normally when driving in extremely hot or cold environments.

■ **When "Blind Spot Monitor Malfunction Visit Your Dealer" is shown on the multi-information display**

There may be a sensor malfunction of misaligned. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Customization**

Some functions can be customized. (→P.610)

Certification

Manufacturer Postal Address ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131 Lindau, Germany	
ОПРОСТЕНА ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ	С настоящото ADC Automotive Distance Control Systems GmbH декларира, че този тип радиосъоръжение SRR 3-A е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://continental.automotive-approvals.com/
	радиочестотната лента или ленти, в която или които работи радиосъоръжението: 24.05–24.25 GHz
	максималната радиочестотна мощност, излъчвана в радиочестотната лента или ленти, в която или които работи радиосъоръжението.: 100mW (20 dBm) Peak EIRP
DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA	Por la presente, ADC Automotive Distance Control Systems GmbH declara que el tipo de equipo radioeléctrico SRR 3-A es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://continental.automotive-approvals.com/
	Banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 24.05–24.25 GHz
	Potencia máxima de radiofrecuencia transmitida en la banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 100mW (20 dBm) Peak EIRP
ZJEDNODUŠENÉ EU PROHLÁŠENÍ O SHODĚ	Tímto ADC Automotive Distance Control Systems GmbH prohlašuje, že typ rádiového zařízení SRR 3-A je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://continental.automotive-approvals.com/
	Kmitočtové pásmo (kmitočtová pásma), v němž (v nichž) rádiové zařízení pracuje: 24.05–24.25 GHz
	Maximální radiofrekvenční výkon vysílaný v kmitočtovém pásmu (v kmitočtových pásmech), v němž (v nichž) je rádiové zařízení provozováno: 100mW (20 dBm) Peak EIRP
FORENKLET EU OVERENSSTEMMELSESERKLÆRING	Hermed erklærer ADC Automotive Distance Control Systems GmbH, at radioudstyrstypen SRR 3-A er i overensstemmelse med direktiv 2014/53/EU. EUoverensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://continental.automotive-approvals.com/
	Frekvensbånd, som radioudstyret fungerer på: 24.05–24.25 GHz
	Maksimal radiofrekvenseffekt, der udsendes i de frekvensbånd, som radioudstyret fungerer på: 100mW (20 dBm) Peak EIRP
VEREINFACHTE EUKONFORMITÄTSERKLÄRUNG	Hiermit erklärt ADC Automotive Distance Control Systems GmbH, dass der Funkanlagentyp SRR 3-A der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://continental.automotive-approvals.com/
	Das Frequenzband oder die Frequenzbänder, in dem bzw. denen die Funkanlage betrieben wird: 24.05–24.25 GHz
	Die in dem Frequenzband oder den Frequenzbändern, in dem bzw. denen die Funkanlage betrieben wird, abgestrahlte maximale Sendeleistung: 100mW (20 dBm) Peak EIRP
LIHTSUSTATUD ELI VASTAVUSDEKLARATSIOON	Käesolevaga deklareerib ADC Automotive Distance Control Systems GmbH, et käesolev raadioseadme tüüp SRR 3-A vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://continental.automotive-approvals.com/
	Sagedusriba(d), millel raadioseade töötab: 24.05–24.25 GHz
	Raadioseadme töösagedus(t)el edastatav maksimaalne saatevõimsus: 100mW (20 dBm) Peak EIRP
ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ	Με την παρούσα ο/η ADC Automotive Distance Control Systems GmbH, δηλώνει ότι ο ραδιοεξοπλισμός SRR 3-A πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://continental.automotive-approvals.com/
	Οι ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 24.05–24.25 GHz
	η μέγιστη ραδιοηλεκτρική ισχύς στις ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 100mW (20 dBm) Peak EIRP

zzcv04ag075a

SIMPLIFIED EU DECLARATION OF CONFORMITY	Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type SRR 3-A is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://continental.automotive-approvals.com/
	Frequency band(s) in which the radio equipment operates: 24.05–24.25 GHz
	Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: 100mW (20 dBm) Peak EIRP
DECLARATION UE DE CONFORMITE SIMPLIFIEE	Le soussigné, ADC Automotive Distance Control Systems GmbH, déclare que l'équipement radioélectrique du type SRR 3-A est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://continental.automotive-approvals.com/
	Bandes de fréquences utilisées par l'équipement radioélectrique: 24.05–24.25 GHz
	Puissance de radiofréquence maximale transmise sur les bandes de fréquences utilisées par l'équipement radioélectrique: 100mW (20 dBm) Peak EIRP
POJEDNOSTAVLJE NA EU IZJAVA O SUKLADNOSTI	ADC Automotive Distance Control Systems GmbH ovime izjavljuje da je radijska oprema tipa SRR 3-A u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://continental.automotive-approvals.com/
	Frekvencijski pojas (frekvencijski pojasi) u kojem (kojima) radijska oprema radi: 24.05–24.25 GHz
	Najveća radiofrekvencijska snaga koja se prenosi u frekvencijskom pojasu (frekvencijskim pojasima) u kojem (kojima) radijska oprema radi: 100mW (20 dBm) Peak EIRP
DICHIARAZIONE DI CONFORMITÀ UE SEMPLIFICATA	Il fabbricante, ADC Automotive Distance Control Systems GmbH, dichiara che il tipo di apparecchiatura radio SRR 3-A è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://continental.automotive-approvals.com/
	Bande di frequenza di funzionamento dell'apparecchiatura radio: 24.05–24.25 GHz
	Massima potenza a radiofrequenza trasmessa nelle bande di frequenza in cui opera l'apparecchiatura radio: 100mW (20 dBm) Peak EIRP
VIENKĀRŠOTA ES ATBILSTĪBAS DEKLARĀCIJA	Ar šo ADC Automotive Distance Control Systems GmbH deklarē, ka radiolekārta SRR 3-A atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://continental.automotive-approvals.com/
	Frekvenču joslu(-as), kurā(-ās) radiolekārtas darbojas: 24.05–24.25 GHz
	Frekvenču joslā(-ās), kurā(-ās) darbojas radiolekārtas, maksimālo pārraidītā signāla jaudu.: 100mW (20 dBm) Peak EIRP
SUPAPRASTINTA ES ATITIKTIES DEKLARACIJA	Aš, ADC Automotive Distance Control Systems GmbH, patvirtinu, kad radijo įrenginių tipas SRR 3-A atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://continental.automotive-approvals.com/
	Dažnių juosta (-os), kurioje (-iose) veikia radijo įrenginiai: 24.05–24.25 GHz
	Didžiausia radijo dažnių galia, perduodama toje (tose) dažnių juostoje (-ose), kurioje (-iose) veikia radijo įrenginiai: 100mW (20 dBm) Peak EIRP
EGYSZERŰSÍTETT EU MEGFELELŐSÉGI NYILATKOZAT	ADC Automotive Distance Control Systems GmbH igazolja, hogy a SRR 3-A típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://continental.automotive-approvals.com/
	Az(ok) a frekvenciasáv(ok), amely(ek)en a rádióberendezés működik: 24.05–24.25 GHz
	Az abban a frekvenciasávban vagy azokban a frekvenciasávokban továbbított maximális jelerősség, amely(ek)ben a rádióberendezés üzemel: 100mW (20 dBm) Peak EIRP
DIKJARAZZJONI SSIMPLIFIKATA TA' KONFORMITÀ TALUE	B'dan, ADC Automotive Distance Control Systems GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju SRR 3-A huwa konformi mad-Direttiva 2014/53/UE. It-test kollu taddikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://continental.automotive-approvals.com/
	Il-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar-radju: 24.05–24.25 GHz
	Il-potenza massima tal-frekwenza tar-radju trażmessa fil-medda/meded talfrekwenza li jaħdem fihom it-tagħmir tar- radju: 100mW (20 dBm) Peak EIRP

zzcv04ag075b

VEREENVOUDIGDE EUCONFORMITEITSV ERKLARING	Hierbij verklaar ik, ADC Automotive Distance Control Systems GmbH, dat het type radioapparatuur SRR 3-A conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://continental.automotive-approvals.com/
	Frequentieband(en) waarin de radioapparatuur functioneert: 24.05–24.25 GHz
	Maximaal radiofrequent vermogen uitgezonden in de frequentieband(en) waarin de radioapparatuur functioneert: 100mW (20 dBm) Peak EIRP
UPROSZCZONA DEKLARACJA ZGODNOŚCI UE	ADC Automotive Distance Control Systems GmbH niniejszym oświadcza, że typ urządzenia radiowego SRR 3-A jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://continental.automotive-approvals.com/
	Zakresu(-ów) częstotliwości, w którym (których) pracuje urządzenie radiowe: 24.05–24.25 GHz
	Maksymalnej mocy częstotliwości radiowej emitowanej w zakresie(-ach) częstotliwości, w którym (których) pracuje urządzenie radiowe: 100mW (20 dBm) Peak EIRP
DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA	O(a) abaixo assinado(a) ADC Automotive Distance Control Systems GmbH declara que o presente tipo de equipamento de rádio SRR 3-A está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://continental.automotive-approvals.com/
	A(s) banda(s) de frequências em que o equipamento de rádio funciona: 24.05–24.25 GHz
	A potência máxima de radiofrequências transmitida na(s) banda(s) de frequências em que o equipamento de rádio funciona: 100mW (20 dBm) Peak EIRP
DECLARAŢIA UE DE CONFORMITATE SIMPLIFICATĂ	Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio SRR 3-A este în conformitate cu Directiva 2014/53/UE. Textul integral al declaraţiei UE de conformitate este disponibil la următoarea adresă internet: http://continental.automotive-approvals.com/
	Banda (benzile) de frecvenţe în care funcţionează echipamentul radio: 24.05–24.25 GHz
	Puterea maximă de radiofrecvenţă transmisă în banda (benzile) de frecvenţe în care funcţionează echipamentul radio: 100mW (20 dBm) Peak EIRP
ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE	ADC Automotive Distance Control Systems GmbH týmto vyhlasuje, že rádiové zariadenie typu SRR 3-A je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://continental.automotive-approvals.com/
	Frekvenčné pásmo resp. pásma, v ktorých rádiové zariadenie pracuje: 24.05–24.25 GHz
	Maximálny vysokofrekvenčný výkon prenášaný vo frekvenčnom pásme, resp. pásmach, v ktorých rádiové zariadenie pracuje: 100mW (20 dBm) Peak EIRP
POENOSTAVLJENA IZJAVA EU O SKLADNOSTI	ADC Automotive Distance Control Systems GmbH potrjuje, da je tip radijske opreme SRR 3-A skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://continental.automotive-approvals.com/
	Frekvenčni pas ali pasovi, na katerih deluje radijska oprema: 24.05–24.25 GHz
	Največja energija za radijsko frekvenco, preneseno po frekvenčnem pasu ali pasovih, na katerih radijska oprema deluje: 100mW (20 dBm) Peak EIRP
YKSINKERTAISTET TU EU VAATIMUSTENMUK AISUUSVAKUUTUS	ADC Automotive Distance Control Systems GmbH vakuuttaa, että radiolaitetyyppi SRR 3-A on direktiivin 2014/53/EU mukainen. EUvaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://continental.automotive-approvals.com/
	Radiotaajuudet, joilla radiolaite toimii: 24.05–24.25 GHz
	Suurin mahdollinen lähetysteho radiotaajuuksilla, joilla radiolaite toimii: 100mW (20 dBm) Peak EIRP
FÖRENKLAD EUFÖRSÄKRAN OM ÖVERENSSTÄMME LSE	Härmed försäkrar ADC Automotive Distance Control Systems GmbH att denna typ av radioutrustning SRR 3-A överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://continental.automotive-approvals.com/
	Det eller de frekvensband där radioutrustningen arbetar: 24.05–24.25 GHz
	Den maximala radiofrekvenseffekt som överförs inom det eller de frekvensband där radioutrustningen arbetar: 100mW (20 dBm) Peak EIRP

zzcv04ag075c


WARNING

■ Handling the rear side radar sensor

Blind Spot Monitor sensors are installed behind the left and right sides of the rear bumper respectively. Observe the following to ensure the Blind Spot Monitor can operate correctly.

● Keep the sensors and the surrounding areas on the rear bumper clean at all times.

If a sensor or its surrounding area on the rear bumper is dirty or covered with snow, the Blind Spot Monitor may not operate and a warning message (→P.315) will be displayed. In this situation, clear off the dirt or snow and drive the vehicle with the operation conditions of the BSM function (→P.322) satisfied for approximately 10 minutes. If the warning message does not disappear, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

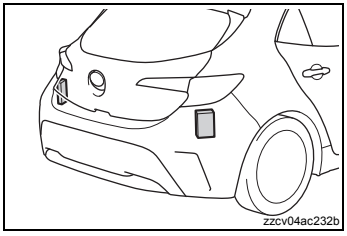

● Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc. to a sensor or its surrounding area on the rear bumper.

● Do not subject a sensor or its surrounding area on the rear bumper to a strong impact.
If a sensor is moved even slightly off position, the system may malfunction and vehicles may not be detected correctly.
In the following situations, have your vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- A sensor or its surrounding area is subject to a strong impact.
- If the surrounding area of a sensor is scratched or dented, or part of them has become disconnected.

● Do not disassemble the sensor.

● Do not modify the sensor or surrounding area on the rear bumper.

● If a sensor or the rear bumper needs to be removed/installed or replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

● Do not paint the rear bumper any color other than an official Toyota color.

Turning the Blind Spot Monitor on/off

Use the meter control switches to turn on/off the function.


1 Press ❮ or ❯ to select ⚙.

2 Press ^ or v to select and then press OK.

Blind Spot Monitor operation

■ Vehicles that can be detected by the Blind Spot Monitor

The Blind Spot Monitor uses rear side radar sensors to detect the following vehicles traveling in adjacent lanes and advises the driver of the presence of such vehicles via the indicators on the outside rear view mirrors.

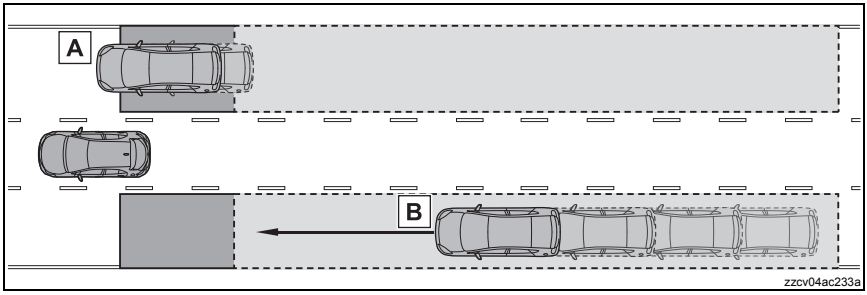


A Vehicles that are traveling in areas that are not visible using the outside rear view mirrors (the blind spots)

B Vehicles that are approaching rapidly from behind in areas that are not visible using the outside rear view mirrors (the blind spots)

■ The Blind Spot Monitor detection areas

The areas that vehicles can be detected in are outlined below.

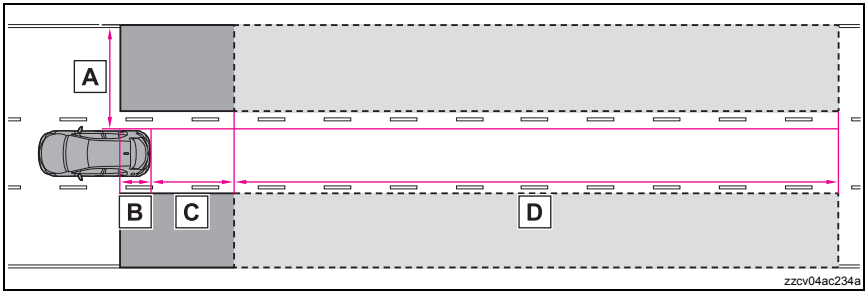

The range of each detection area is:

A Approximately 0.5 m (1.6 ft.) to 3.5 m (11.5 ft.) from either side of the vehicle*1

B Approximately 1 m (3.3 ft.) forward of the rear bumper

C Approximately 3 m (9.8 ft.) from the rear bumper

D Approximately 3 m (9.8 ft.) to 60 m (197 ft.) from the rear bumper*2

*1: The area between the side of the vehicle and 0.5 m (1.6 ft.) from the side of the

vehicle cannot be detected.

*2: The greater the difference in speed between your vehicle and the detected vehicle is, the farther away the vehicle will be detected, causing the outside rear view mirror indicator to illuminate or flash.

The Blind Spot Monitor is operational when

The Blind Spot Monitor is operational when all of the following conditions are met:

- The Blind Spot Monitor is on.
- The shift lever is in a position other than R.
- The vehicle speed is greater than approximately 16 km/h (10 mph).

The Blind Spot Monitor will detect a vehicle when

The Blind Spot Monitor will detect a vehicle present in the detection area in the following situations:

- A vehicle in an adjacent lane overtakes your vehicle.
- You overtake a vehicle in adjacent lane slowly.
- Another vehicle enters the detection area when it changes lanes.

Conditions under which the Blind Spot Monitor will not detect a vehicle

The Blind Spot Monitor is not designed to detect the following types of vehicles and/or objects:

- Small motorcycles, bicycles, pedestrians, etc.*
- Vehicles traveling in the opposite direction
- Guardrails, walls, signs, parked vehicles and similar stationary objects*
- Following vehicles that are in the same lane*
- Vehicles traveling 2 lanes away from your vehicle*
- Vehicles which are being overtaken rapidly by your vehicle*

*: Depending on the conditions, detection of a vehicle and/or object may occur.

Conditions under which the Blind Spot Monitor may not function correctly

- The Blind Spot Monitor may not detect vehicles correctly in the following situations:
  - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
  - When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the rear bumper
  - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
  - When multiple vehicles are approaching with only a small gap between each vehicle
  - When the distance between your vehicle and a following vehicle is short
  - When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
  - When the difference in speed between your vehicle and another vehicle is changing
  - When a vehicle enters a detection area traveling at about the same speed as your vehicle
  - As your vehicle starts from a stop, a vehicle remains in the detection area
  - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
  - When driving on roads with sharp bends, consecutive curves, or uneven surfaces
  - When vehicle lanes are wide, or when driving on the edge of a lane, and the

vehicle in an adjacent lane is far away from your vehicle
- When towing a trailer
- When an accessory (such as a bicycle carrier) is installed to the rear of the vehicle
- When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
- Immediately after the Blind Spot Monitor is turned on

● Instances of the Blind Spot Monitor unnecessarily detecting a vehicle and/or object may increase in the following situations:
- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When the distance between your vehicle and a guardrail, wall, etc. that enters the detection area is short
- When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
- When vehicle lanes are narrow, or when driving on the edge of a lane, and a vehicle traveling in a lane other than the adjacent lanes enters the detection area
- When driving on roads with sharp bends, consecutive curves, or uneven surfaces
- When the tires are slipping or spinning
- When the distance between your vehicle and a following vehicle is short
- When an accessory (such as a bicycle carrier) is installed to the rear of the vehicle

Toyota parking assist-sensor*


*: If equipped

The distance from your vehicle to objects, such as a wall, when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, head-up display (if equipped), audio system display (if equipped) and a buzzer. Always check the surrounding area when using this system.

System components

■ Types of sensors

▶ Hatchback

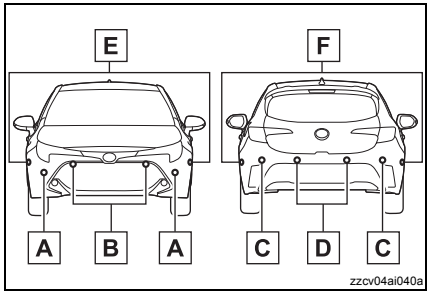

A Front corner sensors

B Front center sensors


C Rear corner sensors

D Rear center sensors

E Front side sensors (if equipped)

F Rear side sensors (if equipped)

▶ Wagon

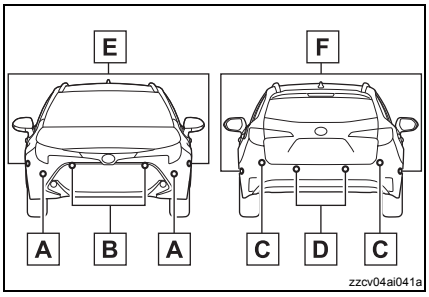

A Front corner sensors

B Front center sensors

C Rear corner sensors

D Rear center sensors


E Front side sensors (if equipped)

F Rear side sensors (if equipped)

■ **Display**

When the sensors detect an object, such as a wall, a graphic is shown on the multi-information display, head-up display (if equipped) and audio system display (if equipped) depending on the position and distance to the object.

● Multi-information display and head-up display

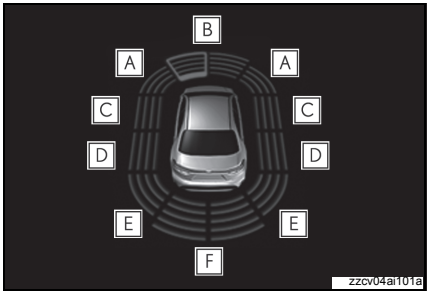

A Front corner sensor detection

B Front center sensor detection

C Front side sensor detection (if equipped)*

D Rear side sensor detection (if equipped)*

E Rear corner sensor detection


F Rear center sensor detection

*: The side sensor displays are not shown until a scan of the side areas is completed.

● Audio system display

A graphic is shown when the Toyota parking assist monitor is displayed.

A simplified image is displayed on the audio system display when an object is detected.

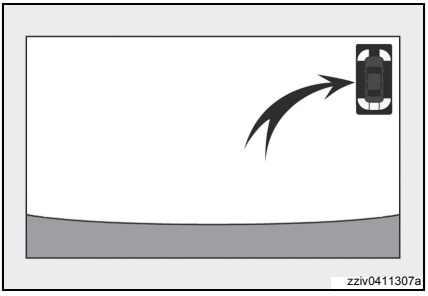

Turning Toyota parking assist-sensor on/off

Use the meter control switches to enable/disable the Toyota parking assist-sensor. (→P.124)

1 Press ❮ or ❯ to select ⚙.

2 Press ^ or ⌄ to select P and then press OK.

When the Toyota parking

assist-sensor function is disabled, the Toyota parking assist-sensor OFF indicator (→P.110) illuminates.

To re-enable the system when it was disabled, select  on the multi-information display, select  and then On. If disabled using this method, the system will not be re-enabled by turning the power switch off and then to ON.

WARNING

■When using the Toyota parking assist-sensor

Observe the following precautions. Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

- Do not use the sensor at speeds in excess of 10 km/h (6 mph).
- The sensors' detection areas and reaction times are limited. When moving forward or reversing, check the areas surrounding the vehicle (especially the sides of the vehicle) for safety, and drive slowly, using the brake to control the vehicle's speed.
- Do not install accessories within the sensors' detection areas.
- The area directly under the bumpers is not detected.
  Thin posts or objects lower than the sensor may not be detected when approached, even if they have been detected before.

■Side sensors (if equipped)

In the following situations, the clearance sonar may not operate normally and may result in an unexpected accident. Drive carefully.

- Objects may not be detected in the side areas until the vehicle is driven for a short time and a scan of the side areas is completed. (→P.326)
- Even after the scan of the side areas is completed, objects such as other vehicles, people or animals that approach from the sides cannot be detected.
- Even after the scan of the side areas is completed, objects may not be detected depending on the surrounding situation of the vehicle. At that time, the side sensor displays (→P.324) temporary turn off.

■When to disable the function

In the following situations, disable the function as it may operate even though there is no possibility of a collision.

- The vehicle is equipped with a fender pole, wireless antenna or fog lights.
- The front or rear bumper or a sensor receives a strong impact.
- A non-genuine Toyota suspension (lowered suspension, etc.) is installed.
- Towing eyelets are installed.
- A backlit license plate is installed.

■When using Toyota parking assist-sensor

In the following situations, the system may not function correctly due to a sensor malfunction, etc. Have the vehicle checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- The Toyota parking assist-sensor operation display flashes or shows continuously, and a beep sounds when no objects are detected.

WARNING

- If the area around a sensor collides with something, or is subjected to strong impact.
- If the bumper or grille collides with something.
- If the display flashes or is displayed continuously and a buzzer does not sound, except when the mute function has been turned on.
- If a display error occurs, first check the sensor.
  If the error occurs even when there is no ice, snow or mud on the sensor, it is likely that the sensor is malfunctioning.

■ Notes when washing the vehicle

Do not apply intensive bursts of water or steam to the sensor area.

Doing so may result in the sensor malfunctioning.


- When using a high pressure washer to wash the vehicle, do not spray the sensors directly, as doing so may cause a sensor to malfunction.
- When using steam to clean the vehicle, do not direct steam too close to the sensors as doing so may cause a sensor to malfunction.

■ The system can be operated when

- The power switch is in ON.
- Toyota parking assist-sensor function is on.
- The vehicle speed is less than about 10 km/h (6 mph).
- A shift lever other than P is selected.
- Steering wheel is turned approximately 90° or more (Front side sensors, rear side sensors) (if equipped)

■ Object warning function (if equipped)

When an object in the side areas is within the vehicle course while the vehicle is moving forward or backward, this function inform the driver by the display and the buzzer.

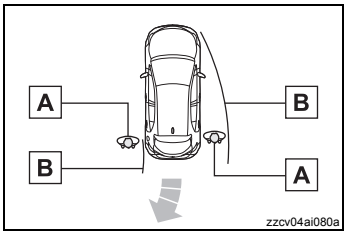

A Object

B Calculated vehicle course

■ Object detection in side areas (if equipped)

- Objects in the side areas are detected while driving by scanning the side areas with the side sensors. Recognized objects are retained in memory for up to approximately 2 minutes.
- Objects may not be detected in the side areas until the scan completes. After the power switch is turned on, scanning completes after driving the vehicle for a short period of time.
- When an object such as another vehicle, pedestrian or animal is detected by the side sensors, the object may continue to be detected even after it has left the side sensor detection area.

■ If "Parking Assist Unavailable Please Clean Parking Assist Sensor" is displayed on the multi-information display

A sensor may be covered with ice, snow, dirt, etc. Remove the ice, snow, dirt, etc., from the sensor to return the system to normal.

Also, due to ice forming on a sensor at low temperatures, a warning message may be displayed or the sensor may not be able to detect an object. Once the ice

melts, the system will return to normal.

■ **Sensor detection information**

The following situations may occur during use.

- The sensors may be able to only detect objects near the front and rear bumpers.
- Depending on the shape of the object and other factors, the detection distance may shorten, or detection may be impossible.
- If an object is extremely close to a sensor, it may not be detected.
- There will be a short delay between object detection and display. Even at low speeds, there is a possibility that the object will come within the sensor's detection areas before the display is shown and the warning beep sounds.
- It might be difficult to hear the buzzer due to the volume of the audio system or air flow noise of the air conditioning system.
- It may be difficult to hear the buzzer if buzzers for other systems are sounding.

■ **Conditions under which the function may not function correctly**

Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect objects. Particular instances where this may occur are listed below.

- There is dirt, snow or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- A sensor is frozen. (Thawing the area will resolve this problem.)
  In especially cold weather, if a sensor is frozen the sensor display may be displayed abnormally, or objects, such as a wall, may not be detected.
- A sensor is covered in any way.
- When a sensor or the area around a sensor is extremely hot or cold.
- On an extremely bumpy road, on an incline, on gravel, or on grass.
- The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
- There is another vehicle equipped with parking assist sensors in the vicinity.
- A sensor is coated with a sheet of spray or heavy rain.
- If a sensor is hit by a large amount of water, such as when driving on a flooded road.
- If the vehicle is significantly tilted.
- The vehicle is approaching a tall or curved curb.
- If objects draw too close to the sensor.

■ **Objects which may not be properly detected**


The shape of the object may prevent the sensor from detecting it. Pay particular attention to the following objects:

- Wires, fences, ropes, etc.
- Cotton, snow and other materials that absorb sound waves
- Sharply-angled objects
- Low objects
- Tall objects with upper sections projecting outwards in the direction of your vehicle

People may not be detected if they are wearing certain types of clothing.

Sensor detection display, object distance

■ Detection range of the sensors

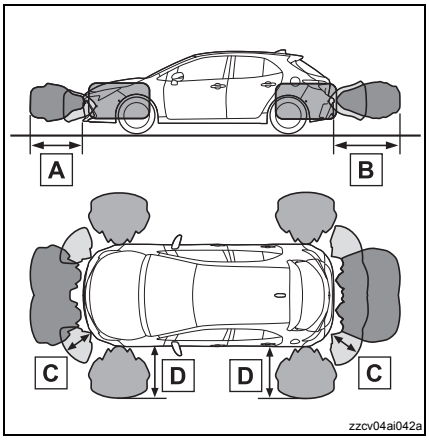

A Approximately 100 cm (3.3 ft.)

B Approximately 150 cm (4.9 ft.)

C Approximately 60 cm (2.0 ft.)

D Approximately 115 cm (3.8 ft.) (vehicles with front side sensors and rear side sensors)

The diagram shows the detection range of the sensors. Note that the sensors cannot detect objects that are extremely close to the vehicle.

For details regarding object detection in the side areas. (→P.326)

The range of the sensors may change depending on the shape of the object, etc.

■ Multi-information display, head-up display (if equipped) and audio system display (if equipped)

When an object is detected by a sensor, the approximate distance to the object will be displayed on the multi-information display, audio system display (if equipped), and head-up display (if equipped). (As the distance to the object becomes short, the distance segments may blink.)

The front side sensor displays and rear side sensor displays (if equipped) are not shown until a scan of the side areas is completed.

- Approximate distance to object: 150 cm (4.9 ft.) to 60 cm (2.0 ft.)* (Rear center sensor)

Multi-information display	Audio system display	Head-up display
 zzcv04ac246a	 zzcv04aa347a	 zzcv04ac044a

*: Automatic buzzer mute function is enabled. (→P.330)

- Approximate distance to object: 100 cm (3.3 ft.) to 60 cm (2.0 ft.)* (Front center sensor)

Multi-information display	Audio system display	Head-up display
		

*: Automatic buzzer mute function is enabled. (→P.330)

- Approximate distance to object: 60 cm (2.0 ft.) to 45 cm (1.5 ft.)* (except front side sensor, rear side sensor)

  115 cm (3.8 ft.) to 70 cm (2.3 ft.)* (Front side sensor, rear side sensor)

Multi-information display	Audio system display	Head-up display
		

*: Automatic buzzer mute function is enabled. (→P.330)

- Approximate distance to object: 45 cm (1.5 ft.) to 30 cm (1.0 ft.)* (except front side sensor, rear side sensor)

  70 cm (2.3 ft.) to 30 cm (1.0 ft.)* (Front side sensor, rear side sensor)

Multi-information display	Audio system display	Head-up display
		

*: Automatic buzzer mute function is enabled. (→P.330)

- Approximate distance to object: 30 cm (1.0 ft.) to 15 cm (0.5 ft.)*1

Multi-information display*2	Audio system display*2	Head-up display
		

*1: Automatic buzzer mute function is disabled. (→P.330)

*2: The distance segments will blink slowly.

- Approximate distance to object: Less than 15 cm (0.5 ft.)*1

Multi-information display*2	Audio system display*2	Head-up display
		

*1: Automatic buzzer mute function is disabled. (→P.330)

*2: The distance segments will blink rapidly.

■ Buzzer operation and distance to an object

A buzzer sounds when the sensors are operating.

- The buzzer beeps faster as the vehicle approaches an object. When the vehicle comes within approximately 30 cm (1.0 ft.) of the object, the buzzer sounds continuously.
- When 2 or more objects are detected simultaneously, the buzzer sounds for the nearest object. If one or more objects come within approximately 30 cm (1.0 ft.) of the vehicle, the buzzer will repeat a long tone, followed by fast beeps.
- Automatic buzzer mute function: After a buzzer begins sounding, if the distance between the vehicle and the detected object does not become shorter, the buzzer will be muted automatically. (However, if the distance between the vehicle and object is 30 cm (1.0 ft.) or less, this function will not operate.)

■ Adjusting the buzzer volume

The buzzer volume can be adjusted on the multi-information display. The volume of buzzers for the Toyota parking assist-sensor and RCTA function (if equipped) will be adjusted simultaneously.

Use the meter control switches to change settings. (→P.124)

1 Press ❮ or ❯ to select ⚙.

2 Press ^ or ⌄ to select P and then press and hold OK.

3 Select the volume and then press OK.

Each time the switch is pressed, the volume level will change between 1, 2, and 3.

■ Muting a buzzer

A mute button will be displayed on the multi-information display when an object is detected. To mute the buzzer, press OK.

The buzzers for the Toyota parking assist-sensor and RCTA function (if equipped) will be muted simultaneously.

Mute will be canceled automatically

in the following situations:


- When the shift lever is changed.
- When the vehicle speed exceeds a certain speed.
- When the operating function is temporarily canceled.
- When the operating function is disabled manually.
- When the power switch is turned off.

RCTA (Rear Crossing Traffic Alert) function*

*: If equipped

The RCTA function uses the BSM rear side radar sensors installed behind the rear bumper. This function is intended to assist the driver in checking areas that are not easily visible when backing up.

System components

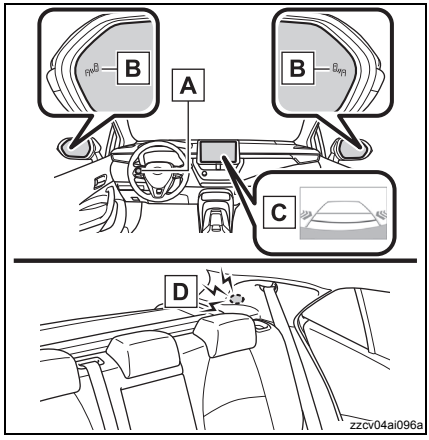

A Meter control switches

Turning the RCTA function on/off.

When the RCTA function is disabled, the RCTA OFF indicator illuminates.

B Outside rear view mirror indicators

When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash.

C Audio system display (if equipped)

If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon (→P.333) for the detected side will be displayed on the audio system display. This illustration shows an example of a vehicle approaching from both sides of the vehicle.

D RCTA buzzer

If a vehicle approaching from the right or left at the rear of the vehicle is detected, a buzzer will sound. The buzzer also sounds for approximately 1 second immediately after the RCTA function is turned on.

Turning the RCTA function on/off

Use the meter control switches to enable/disable the RCTA function. (→P.124)

1 Press ❮ or ❯ to select ⚙.

2 Press ∧ or ∨ to select "RCTA" and then press OK.

When the RCTA function is disabled, the RCTA OFF indicator (→P.110) illuminates. (Each time the power switch is turned off then changed to ON, the RCTA function will be enabled automatically.)

⚠ WARNING

■ Cautions regarding the use of the function

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The RCTA function is only a supplementary function which alerts the driver that a vehicle is approaching from the right or left at the rear of the vehicle. As the RCTA function may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary. Over reliance on this function may lead to an accident resulting death or serious injury.

■ Outside rear view mirror indicator visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

■ Hearing the RCTA buzzer

The RCTA buzzer may be difficult to hear over loud noises, such as if the audio system volume is high.

■ When "RCTA Unavailable" is shown on the multi-information display

Water, snow, mud, etc., may be attached to the rear bumper around the sensors. (→P.320) Removing the water, snow, mud, etc., from the attached to the rear bumper around the sensors to normal.

Additionally, the function may not function normally when used in extremely hot or cold environments.


■ Rear side radar sensors

→P.320

RCTA function

■ Operation of the RCTA function

The RCTA function uses rear side radar sensors to detect vehicles approaching from the right or left at the rear of the vehicle and alerts the driver of the presence of such vehicles by flashing the outside rear view mirror indicators and sounding a buzzer.

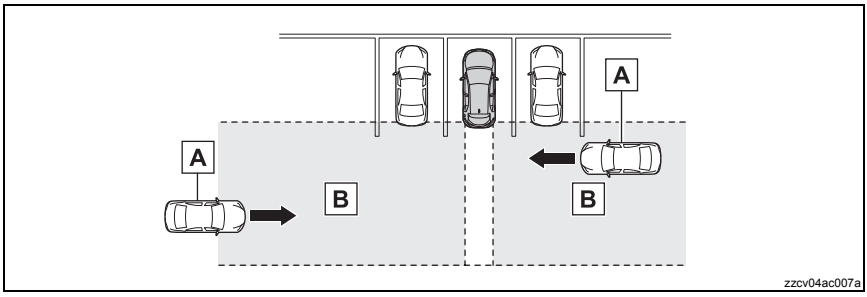


A Approaching vehicles

B Detection areas of approaching vehicles

■ RCTA icon display


When a vehicle approaching from the right or left at the rear of the vehicle is detected, the following will be displayed on the audio system display (if equipped).

- Toyota parking assist monitor (if equipped): Vehicles are approaching from both sides of the vehicle

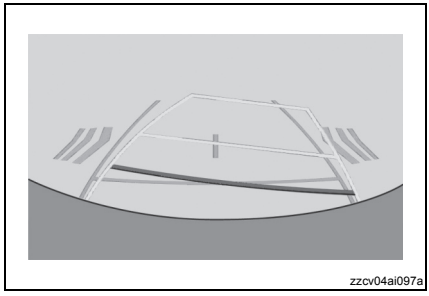

■ RCTA function detection areas

The areas that vehicles can be detected in are outlined below.

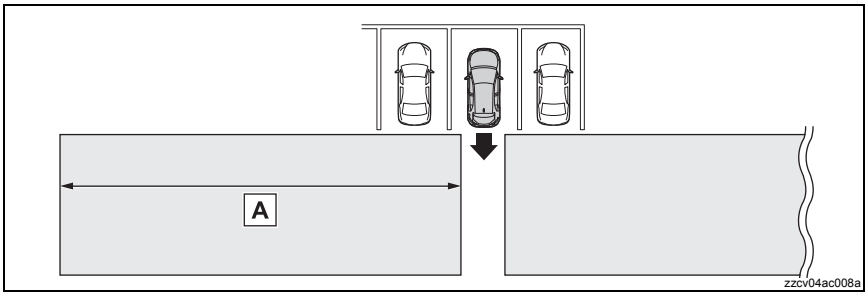

The buzzer can alert the driver of faster vehicles approaching from farther away.

Example:

Approaching vehicle speed	A Approximate alert distance
28 km/h (18 mph) (fast)	20 m (65 ft.)
8 km/h (5 mph) (slow)	5.5 m (18 ft.)

The RCTA function is operational when

The RCTA function operates when all of the following conditions are met:

- The power switch is in ON.
- The RCTA function is on.
- The shift lever is in R.
- The vehicle speed is less than approximately 8 km/h (5 mph).
- The approaching vehicle speed is between approximately 8 km/h (5 mph) and 28 km/h (18 mph).

Adjusting the buzzer volume

The buzzer volume can be adjusted on the multi-information display. The volume of buzzers for the Toyota parking assist-sensor and RCTA function will be adjusted simultaneously.

Use the meter control switches to change settings. (→P.124)

1 Press ❮ or ❯ to select ⚙.

2 Press ^ or v to select “RCTA” and then press and hold OK.

3 Select the volume and then press OK.

Each time the switch is pressed, the volume level will change between 1, 2 and 3.

Muting a buzzer

A mute button will be displayed on the multi-information display when an object is detected. To mute the buzzer, press OK.

The buzzers for the Toyota parking assist-sensor and RCTA function will be muted simultaneously.

Mute will be canceled automatically in the following situations:

- When the shift lever is changed.
- When the vehicle speed exceeds a certain speed.
- When the operating function is temporarily canceled.
- When the operating function is disabled manually.
- When the power switch is turned off.


Conditions under which the RCTA function will not detect a vehicle

The RCTA function is not designed to detect the following types of vehicles and/or objects:

- Vehicles approaching from directly

behind

- Vehicles backing up in a parking space next to your vehicle
- Vehicles that the sensors cannot detect due to obstructions

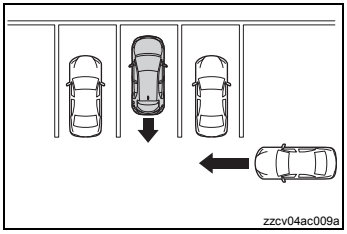


- Guardrails, walls, signs, parked vehicles and similar stationary objects*
- Small motorcycles, bicycles, pedestrians, etc.*
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle*


*: Depending on the conditions, detection of a vehicle and/or object may occur.

Conditions under which the RCTA function may not function correctly


- The RCTA function may not detect vehicles correctly in the following situations:
  - When a sensor is misaligned due to a strong impact to the sensor or its surrounding area
  - When mud, snow, ice, a sticker, etc. is covering a sensor or its surrounding area on the rear bumper
  - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
  - When multiple vehicles are approaching with only a small gap between each vehicle
  - If a vehicle is approaching the rear of your vehicle rapidly
  - When a towing eyelet is installed to the rear of the vehicle.
  - When backing up on a slope with a sharp change in grade

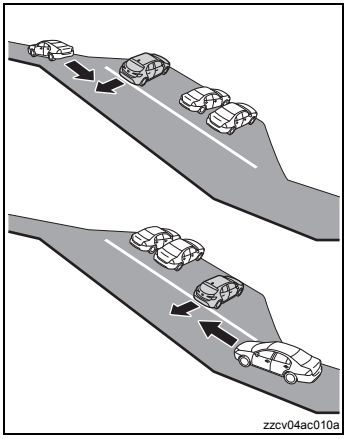

  - When backing out of a shallow angle parking spot

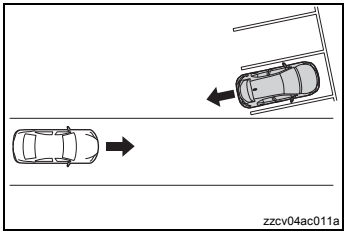


  - Immediately after the RCTA function is turned on
  - Immediately after the hybrid system is started with the RCTA function on
  - When the sensors cannot detect a vehicle due to obstructions

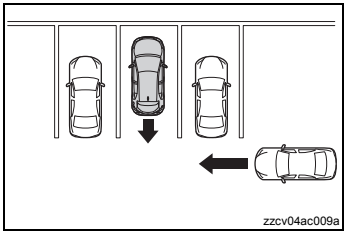

- Instances of the RCTA function unnecessarily detecting a vehicle and/or object may increase in the following situations:
  - When a vehicle passes by the side of your vehicle

- When the parking space faces a street and vehicles are being driven on the street

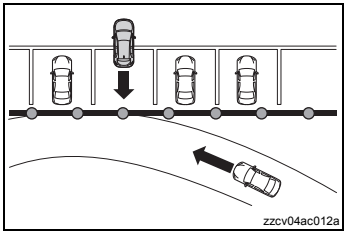

- When the distance between your vehicle and metal objects, such as a guardrail, wall, sign, or parked vehicle, which may reflect electrical waves toward the rear of the vehicle, is short
- When a towing eyelet is installed to the rear of the vehicle

PKSB (Parking Support Brake)*

*: If equipped

The Parking Support Brake system consists of the following functions that operate when driving at a low speed or backing up, such as when parking. When the system determines that a collision with a detected object is high, a warning operates to urge the driver to take evasive action. If the system determines that the possibility of a collision with a detected object is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

PKSB (Parking Support Brake) system

■ Parking Support Brake function (static objects) (if equipped)

Ultrasonic sensors are used to detect static objects, such as a wall, in the detection area when driving at a low speed or backing up. (→P.342)

■ Parking Support Brake function (rear-crossing vehicles) (if equipped)

Rear radar sensors are used to detect approaching vehicles in the

detection area behind the vehicle when backing up. (→P.348)

WARNING

■ Limitations of the Parking Support Brake system

Do not overly rely on the system, as doing so may lead to an accident.

- The driver is solely responsible for safe driving. Always drive carefully, taking care to observe your surroundings. The Parking Support Brake system is designed to provide support to lessen the severity of collisions. However, it may not operate in some situations.
- The Parking Support Brake system is not designed to stop the vehicle completely. Additionally, even if the system has stopped the vehicle, it is necessary to depress the brake pedal immediately as brake control will be canceled after approximately 2 seconds.

NOTICE

■ If "Parking Support Brake Unavailable" is displayed on the multi-information display and the PKSB OFF indicator is flashing

If this message is displayed immediately after the power switch is changed to ON, operate the vehicle carefully, paying attention to your surroundings. It may be necessary to drive the vehicle for a certain amount of time before the system returns to normal. (If the system does not return to normal after driving for a while, clean the sensors and their surrounding area on the bumpers.)

Enabling/Disabling the Parking Support Brake

The Parking Support Brake can be enabled/disabled on the multi-information display. All of the Parking Support Brake functions (static objects and rear-crossing vehicles) are enabled/disabled simultaneously.

Use the meter control switches to enable/disable the parking support brake. (→P.124)

1 Press ❮ or ❯ to select ⚙.

2 Press ∧ or ∨ to select and then press OK.

When the Parking Support Brake is disabled, the PKSB OFF indicator (→P.110) illuminates.

To re-enable the system when it was disabled, select ⚙ on the multi-information display, select and then On. If disabled using this method, the system will not be re-enabled by turning the power switch off and then to ON.

Displays and buzzers for hybrid system output restriction control and brake control

If the hybrid system output restriction control or brake control operates, a buzzer will sound and a message will be displayed on the audio system display (if equipped) and multi-information display, to alert the driver. On vehicles with a head-up display (if equipped), the head-up display will display the same message as the multi-information display.

Depending on the situation, hybrid system output restriction control will oper-

ate to either limit acceleration or restrict output as much as possible.

- Hybrid system output restriction control is operating (acceleration restriction)

Acceleration greater than a certain amount is restricted by the system.

Audio system display: No warning displayed

Multi-information display: “Object Detected Ahead Speed Reduced”

PKSB OFF indicator: Not illuminated

Buzzer: Does not sound

- Hybrid system output restriction control is operating (output restricted as much as possible)

The system has determined that stronger-than-normal brake operation is necessary.

Audio system display: “BRAKE!”

Multi-information display: “Brake!”

PKSB OFF indicator: Not illuminated

Buzzer: Short beep

- Brake control is operating

The system determined that emergency braking is necessary.

Audio system display: “BRAKE!”

Multi-information display: “Brake!”

PKSB OFF indicator: Not illuminated

Buzzer: Short beep

- Vehicle stopped by system operation

The vehicle has been stopped by brake control operation.

Audio system display: “Press Brake Pedal”

Multi-information display: “Switch to Brake” (If the accelerator pedal is not depressed, “Press Brake Pedal” will be displayed.)


PKSB OFF indicator: Illuminated

Buzzer: Short beep

System overview

If the Parking Support Brake determines that a collision with a detected object or pedestrian is possible, the hybrid system output will be restricted to restrain any increase in the vehicle speed. (Hybrid system output restriction control: See figure 2.)
Additionally, if the accelerator pedal continues to be depressed, the brakes will be applied automatically to reduce the vehicle speed. (Brake control: See figure 3.)

- Figure 1: When the PKSB (Parking Support Brake) is disabled

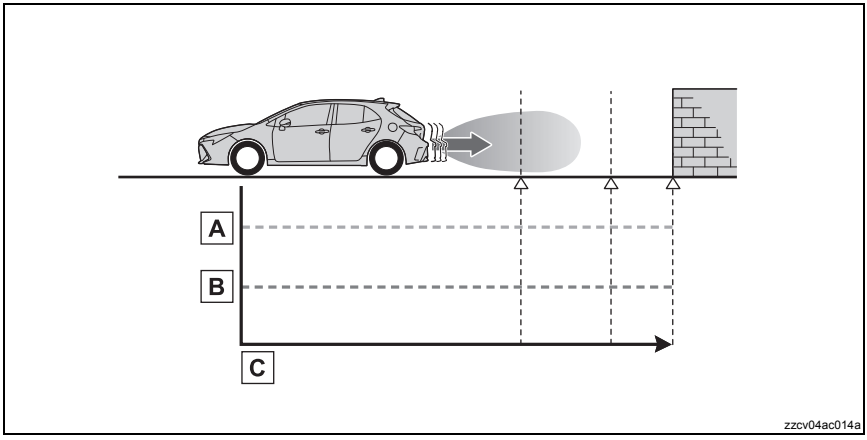


A Hybrid system output

B Braking force

C Time

- Figure 2: When hybrid system output restriction control operates

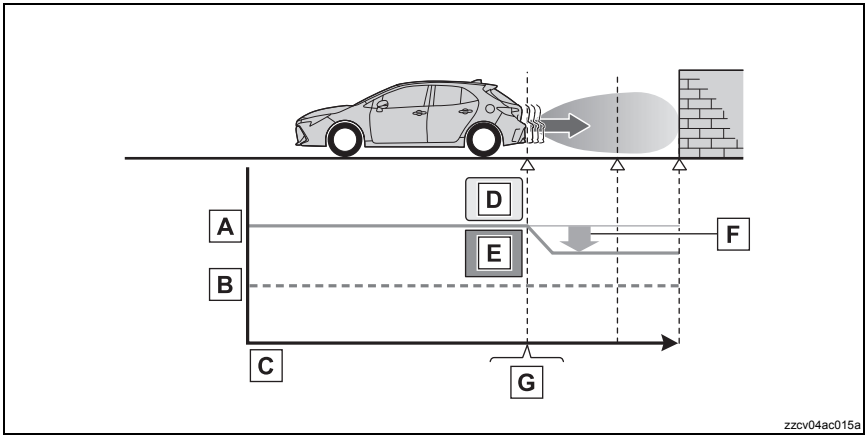

A Hybrid system output

B Braking force

C Time


D Hybrid system output restriction control begins operating

E System determines that possibility of collision with detected object is high

F Hybrid system output reduced

G Example: Multi-information display: “Brake!”

- Figure 3: When brake control operates

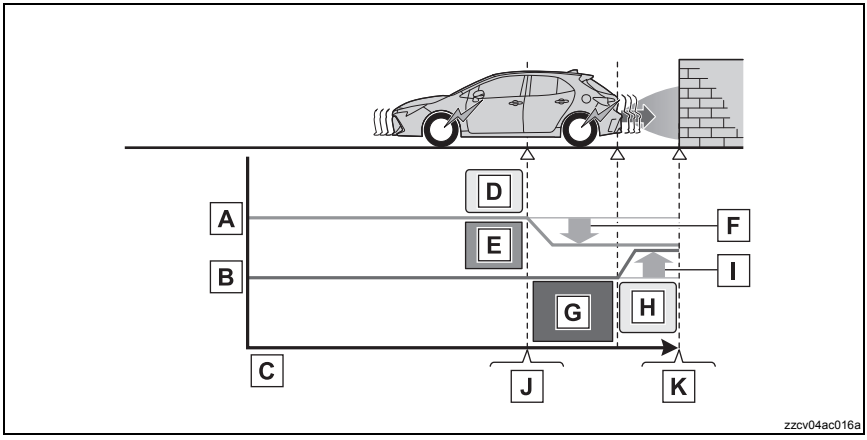

A Hybrid system output

B Braking force

C Time

D Hybrid system output restriction control begins operating

E System determines that possibility of collision with detected object is high

F Hybrid system output reduced

G System determines that possibility of collision with detected object is extremely high

H Brake control begins operating

I Brake control strength increased

J Example: Multi-information display: “Brake!”

K Example: Multi-information display: “Switch to Brake”

If the Parking Support Brake has operated

If the vehicle is stopped due to operation of the Parking Support Brake, the Parking Support Brake will be disabled and the PKSB OFF indicator will illuminate. If the Parking Support Brake operates unnecessarily, brake control can be canceled by depressing the brake pedal or waiting for approximately 2 seconds for it to automatically be canceled. Then, the vehicle can be operated by depressing the accelerator pedal.

Re-enabling the Parking Support Brake

To re-enable the Parking Support Brake when it is disabled due to operation of

the Parking Support Brake, either enable the system again (→P.337), or turn the power switch off and then back to ON. Additionally, if the object becomes no longer in the traveling direction of the vehicle or if the traveling direction of the vehicle changes (such as changing from moving forward to backing up, or from backing up to moving forward), the system will be re-enabled automatically.

■ **If "Parking Support Brake Unavailable" is displayed on the multi-information display and the PKSB OFF indicator is flashing**

If the vehicle is stopped due to operation of the Parking Support Brake, the Parking Support Brake will be disabled and the PKSB OFF indicator will illuminate.

- A sensor may be covered with ice, snow, dirt, etc. Remove the ice, snow, dirt, etc., from the sensor to return the system to normal.
  Also, due to ice forming on a sensor at low temperatures, a warning message may be displayed or the sensor may not be able to detect an object. Once the ice melts, the system will return to normal.
- If this message is displayed, a sensor on the front or rear bumper may be dirty. Clean the sensors and their surrounding area on the bumpers.
- If this message continues to be displayed even after cleaning the sensor, or is displayed even though the sensor is clean, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Initialization may not have been performed after a 12-volt battery terminal was disconnected and reconnected. Initialize the system. (→P.341)
  If this message continues to be displayed even after initialization, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **If a 12-volt battery terminal has been disconnected and reconnected**

The system needs to be initialized. To initialize the system, drive the vehicle straight ahead for 5 seconds or more at a speed of approximately 35 km/h (22 mph) or more. Additionally, for vehicles with the Parking Support Brake function, turn the steering wheel fully to the left and right with the vehicle stopped.

Parking Support Brake function (static objects)*


*: If equipped

If the sensors detect a static object, such as a wall, in the travelling direction of the vehicle and the system determines that a collision may occur due to the vehicle suddenly moving forward due to an accidental accelerator pedal operation, the vehicle moving the unintended direction due to the wrong shift lever being selected, or while parking or traveling at low speeds, the system will operate to lessen the impact with the detected static object and reduce the resulting damage.


Examples of function operation

This function will operate in situations such as the following if an object is detected in the traveling direction of the vehicle.


■ **When traveling at a low speed and the brake pedal is not depressed, or is depressed late**

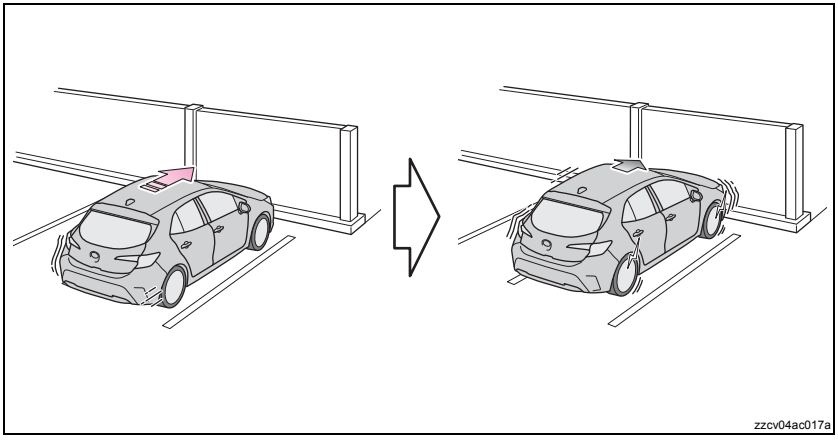

■ **When the accelerator pedal is depressed excessively**

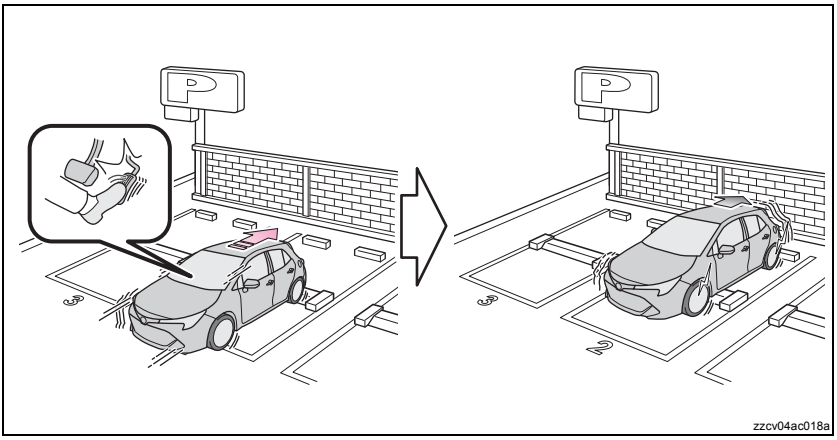

■ **When the vehicle moves in the unintended direction due to the wrong shift lever being selected**

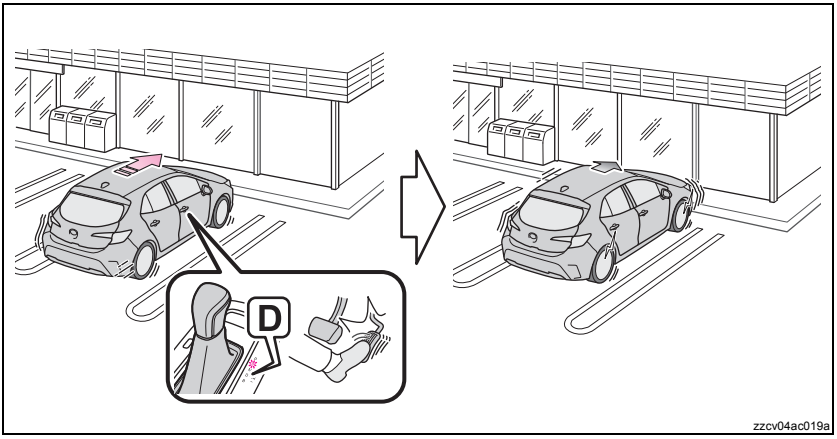

Types of sensors

→P.323

WARNING

■ **To ensure the Parking Support Brake can operate properly**

Observe the following precautions regarding the sensors (→P.323). Failure to do so may cause a sensor to not operate properly, and may cause an accident.

- Do not modify, disassemble or paint the sensors.

WARNING

- Do not replace a sensor with a part other than a genuine part.
- Do not subject a sensor or its surrounding area to a strong impact.
- Do not damage the sensors, and always keep them clean.
- If the area around a radar sensor is subjected to an impact, the system may not operate properly due to a sensor malfunction. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ Handling the suspension

Do not modify the suspension, as changes to the height or inclination of the vehicle may prevent the sensors from detecting objects correctly or cause the system to not operate or operate unnecessarily.

■ If the Parking Support Brake function (static objects) operates unnecessarily, such as at a railroad crossing

In the event that the Parking Support Brake function (static objects) operates unnecessarily, such as at a railroad crossing, brake control will be canceled after approximately 2 seconds, allowing you to proceed forward and leave the area, brake control can also be canceled by depressing the brake pedal. Depressing the accelerator pedal after brake control is canceled will allow you to proceed forward and leave the area.

■ Notes when washing the vehicle

Do not apply intensive bursts of water or steam to the sensor area.

Doing so may result in the sensor malfunctioning.

- When using a high pressure washer to wash the vehicle, do not spray the sensors directly, as doing so may cause a sensor to malfunction.
- When using steam to clean the vehicle, do not direct steam too close to the sensors as doing so may cause a sensor to malfunction.

■ When to disable the Parking Support Brake

In the following situations, disable the Parking Support Brake as the system may operate even though there is no possibility of a collision.

- When inspecting the vehicle using a chassis roller, chassis dynamo or free roller
- When loading the vehicle onto a boat, truck or other transport vessel
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or lowered due to the carried load
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- When using an automatic car wash

■ The Parking Support Brake function (static object) will operate when

The function will operate when the PKSB OFF indicator is not illuminated or flashing (→P.109, 110) and all of the following conditions are met:

- Hybrid system output restriction control
- The Parking Support Brake is enabled.
- The vehicle speed is 15 km/h (9 mph)

or less.
- There is a static object in the traveling direction of the vehicle and 2 to 4 m (6 to 13 ft.) away.
- The Parking Support Brake determines that a stronger-than-normal brake operation is necessary to avoid a collision.

● Brake control
- Hybrid system output restriction control is operating.
- The Parking Support Brake determines that an immediate brake operation is necessary to avoid a collision.

■ The Parking Support Brake function (static objects) will stop operating when

The function will stop operating if any of the following conditions are met:

● Hybrid system output restriction control
- The Parking Support Brake is disabled.
- The system determines that the collision has become avoidable with normal brake operation.
- The static object is no longer 2 to 4 m (6 to 13 ft.) away from the vehicle or in the traveling direction of the vehicle.

● Brake control
- The Parking Support Brake is disabled.
- Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
- The brake pedal is depressed after the vehicle is stopped by brake control.
- The static object is no longer 2 to 4 m (6 to 13 ft.) away from the vehicle or in the traveling direction of the vehicle.

■ Re-enabling the Parking Support Brake function (static objects)

→P.340

■ Detection range of the Parking Support Brake function (static objects)

The detection range of the Parking Support Brake function (static objects) differs from the detection range of the Toyota parking assist-sensor. (→P.328) Therefore, even if the Toyota parking assist-sensor detects an object and provides a warning, the Parking Support Brake function (static objects) may not start operating.

■ Objects that the Parking Support Brake function (static objects) may not detect

The sensors may not be able to detect certain objects, such as the following:

● Pedestrian

● Cotton cloth, snow, and other materials that are poor reflectors of ultrasonic waves

● Objects which are not perpendicular to the ground, are not perpendicular to the traveling direction of the vehicle, are uneven or are waving

● Low objects

● Thin objects such as wires, fences, ropes and signposts

● Objects that are extremely close to the bumper

● Sharply-angled objects

● Tall objects with upper sections projecting outwards in the direction of your vehicle

■ Toyota parking assist-sensor buzzer


Regardless of whether the Toyota parking assist-sensor buzzer is enabled or not (→P.324), if the Parking Support Brake function (static objects) is enabled (→P.337), the front or rear sensors detect an object and brake control is performed, the Toyota parking assist-sensor buzzer will sound to notify the driver of the approximate distance to the object.

■ Situations in which the Parking Support Brake function (static objects) may operate even if there is no possibility of a collision


In some situations, such as the following, the Parking Support Brake function (static objects) may operate even

though there is no possibility of a collision.

●Vehicle surroundings
- When driving on a narrow road

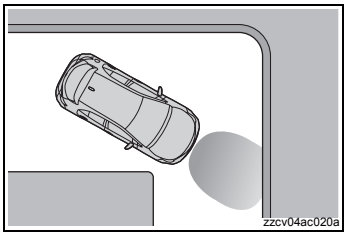

- When driving on a gravel road or in an area with tall grass

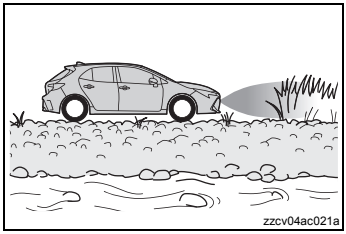

- When driving toward a banner, flag, low-hanging branch or boom barrier (such as those used at railroad crossings, toll gates and parking lots)
- When driving on a narrow path surrounded by a structure, such as in a tunnel or on an iron bridge
- When parallel parking
- When there is a rut or hole in the surface of the road
- When driving on a metal cover (grating), such as those used for drainage ditches
- When driving on a steep slope
- If a sensor is hit by a large amount of water, such as when driving on a flooded road

●Weather
- If a sensor is covered with ice, snow, dirt, etc. (when cleared, the system will return to normal)
- If heavy rain or water strikes a sensor
- When driving in inclement weather such as fog, snow or a sandstorm
- When strong winds are blowing


●Other ultrasonic wave sources
- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle
- If a sticker or an electronic component, such as a backlit license plate (especially fluorescent type), fog lights, fender pole or wireless antenna is installed near a sensor

●Changes in the vehicle posture
- If the vehicle is significantly tilted
- If the front of the vehicle is raised or lowered due to the carried load
- If the orientation of a sensor has been changed due to a collision or other impact
- If a sensor has been painted or covered with a sticker, etc.


■Situations in which the Parking Support Brake function (static objects) may not operate properly

In some situations, such as the following, this function may not operate properly.

●Weather
- When a sensor or the area around a sensor is extremely hot or cold

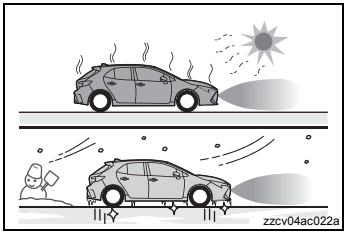

- When strong winds are blowing

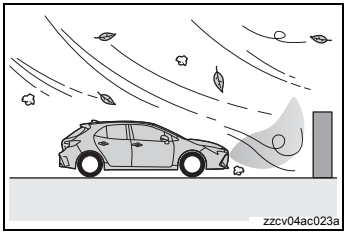

- If a sensor is covered with ice, snow, dirt, etc. (when cleared, the system

will return to normal)
- If heavy rain or water strikes a sensor
- When driving in inclement weather such as fog, snow or a sandstorm
- When the sensor is frozen (Once the sensor thaws, the system will return to normal)

● Vehicle surroundings
- When an object that cannot be detected is between the vehicle and a detected object
- If an object such as a vehicle, motorcycle, bicycle or pedestrian cuts in front of the vehicle or runs out from the side of the vehicle
- The vehicle is approaching a tall or curved curb.
- On an extremely bumpy road, on an incline, on gravel, or on grass.
- If objects draw too close to the sensor.

● Other ultrasonic waves sources
- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle
- If a sticker or an electronic component, such as a backlit license plate (especially fluorescent type), fog lights, fender pole or wireless antenna is installed near a sensor

● Changes in the vehicle posture
- If the vehicle is significantly tilted
- If the front of the vehicle is raised or lowered due to the carried load
- If the orientation of a sensor has been changed due to a collision or other impact
- When equipment that may obstruct a sensor is installed, such as a bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- If the suspension has been modified or tires of a size other than specified are installed
- If a sensor has been painted or covered with a sticker, etc.

Parking Support Brake function (rear-crossing vehicles)*


*: If equipped

If a rear radar sensor detects a vehicle approaching from the right or left at the rear of the vehicle and the system determines that the possibility of a collision is high, this function will perform brake control to reduce the likelihood of an impact with the approaching vehicle.

Examples of function operation

This function will operate in situations such as the following if a vehicle is detected in the traveling direction of the vehicle.

■ **When reversing, a vehicle is approaching and the brake pedal is not depressed, or is depressed late**

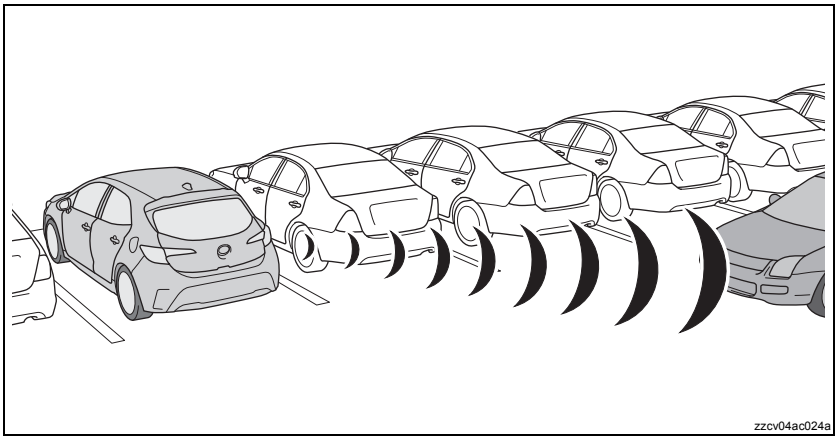

Types of sensors

→P.320

⚠ WARNING

Observe the following precautions regarding the rear radar sensors (→P.320). Failure to do so may cause a sensor to not operate properly, and may cause an accident.

- Do not modify, disassemble or paint the sensors.
- Do not replace a rear radar sensor with a part other than a genuine part.
- Do not damage the rear radar sensors, and always keep the radar sensors and their surrounding area on the bumper clean.

WARNING

■ **To prevent a rear radar sensor from malfunctioning**

● If the area around a rear radar sensor is subjected to an impact, the system may not operate properly due to a sensor malfunction. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **To prevent a rear radar sensor from malfunctioning**

● If the area around a rear radar sensor is subjected to an impact, the system may not operate properly due to a sensor malfunction. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **The Parking Support Brake function (rear-crossing vehicles) will operate when**

The function will operate when the PKSB OFF indicator is not illuminated or flashing (→P.109, 110) and all of the following conditions are met:

● Hybrid system output restriction control
- The Parking Support Brake is enabled.
- The vehicle speed is 15 km/h (9 mph) or less.
- Vehicles which are approaching from the right or left at the rear of the vehicle at a traveling speed of less than approximately 8 km/h (5 mph)
- The shift lever is in R.
- The Parking Support Brake determines that a stronger than normal brake operation is necessary to avoid a collision with an approaching vehicle.

● Brake control
- Hybrid system output restriction control is operating.
- The Parking Support Brake determines that an emergency brake operation is necessary to avoid a collision with an approaching vehicle.

■ **The Parking Support Brake function (rear-crossing vehicles) will stop operating when**

The function will stop operating if any of the following conditions are met:

● Hybrid system output restriction control
- The Parking Support Brake is disabled.
- The collision becomes avoidable with normal brake operation.
- A vehicle is no longer approaching from the right or left at the rear of the vehicle.

● Brake control
- The Parking Support Brake is disabled.
- Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
- The brake pedal is depressed after the vehicle is stopped by brake control.
- A vehicle is no longer approaching from the right or left at the rear of the vehicle.


■ **Detection area of the Parking Support Brake function (rear-crossing vehicles)**

The detection area of the Parking Support Brake function (rear-crossing vehicles) differs from the detection area of the RCTA function (→P.333). Therefore, even if the RCTA function detects a vehicle and provides an alert, the Parking Support Brake function (rear-crossing vehicles) may not start operating.

■ **Conditions under which the Parking Support Brake function (rear-crossing vehicles) will not detect a vehicle**

The Parking Support Brake function (rear-crossing vehicles) is not designed to detect the following types of vehicles and/or objects:

- Vehicles approaching from directly behind
- Vehicles backing up in a parking space next to your vehicle
- Vehicles that the sensors cannot detect due to obstructions

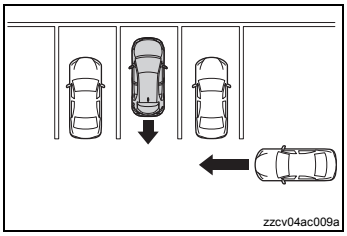

- Vehicles which suddenly accelerate or decelerate near your vehicle
- Guardrails, walls, signs, parked vehicles and similar stationary objects
- Small motorcycles, bicycles, pedestrians, etc.
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle
- Objects which are extremely close to a radar sensor
- Vehicles which are approaching from the right or left at the rear of the vehicle at a traveling speed of less than approximately 8 km/h (5 mph)
- Vehicles which are approaching from the right or left at the rear of the vehicle at a traveling speed of more than approximately 24 km/h (15 mph)


PKSB buzzer

If the Parking Support Brake is enabled and brake control is performed, a buzzer will sound to notify the driver.


Situations in which the system may operate even though there is no possibility of a collision

In some situations such as the following, the Parking Support Brake function (rear-crossing vehicles) may operate even though there is no possibility of a collision.


- When the parking space faces a street and vehicles are being driven on the street

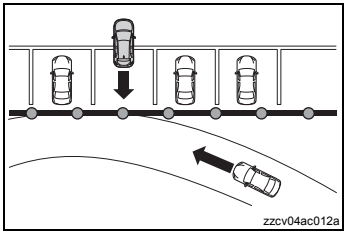


- When a detected vehicle turns while approaching the vehicle

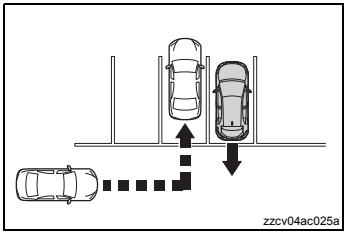

- When a vehicle passes by the side of your vehicle

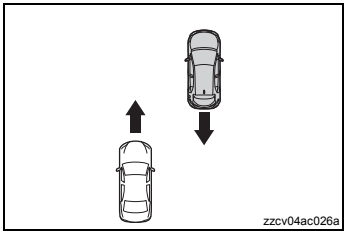

- When the distance between your vehicle and metal objects, such as a guardrail, wall, sign, or parked vehicle, which may reflect electrical waves toward the rear of the vehicle, is short

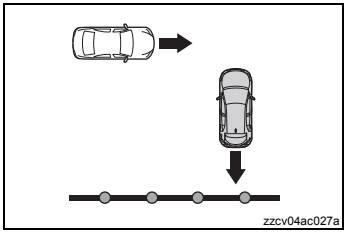

- When there are spinning objects near your vehicle such as the fans of an air

conditioning unit

- When water is splashed or sprayed toward the rear bumper, such as from a sprinkler


Situations in which the Parking Support Brake function (rear-crossing vehicles) may not operate properly

In some situations, such as the following, the radar sensors may not detect an object and this function may not operate properly


- Stationary objects
- When a sensor or the area around a sensor is extremely hot or cold
- If the rear bumper is covered with ice, snow, dirt, etc.
- When it is raining heavily or water strikes the vehicle
- If the vehicle is significantly tilted
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or lowered due to the carried load
- If an electronic component, such as a backlit license plate (especially fluorescent type), fog lights, fender pole or wireless antenna is installed near a radar sensor
- If the orientation of a radar sensor has been changed
- When multiple vehicles are approaching with only a small gap between each vehicle
- If a vehicle is approaching the rear of your vehicle rapidly
- Situations in which the radar sensor may not detect a vehicle

• When a vehicle approaches from the right or left at the rear of the vehicle while you are turning while backing up


• When turning while backing up

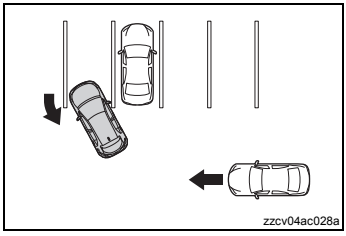


• When backing out of a shallow angle parking spot

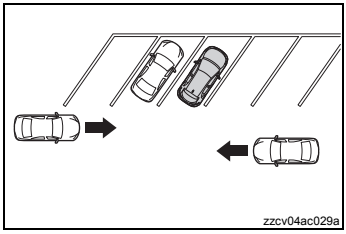

• When backing up on a slope with a sharp change in grade

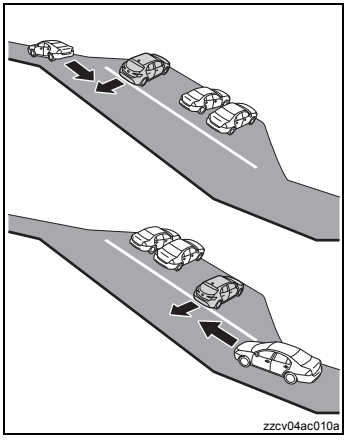

• When a vehicle turns into the detection area

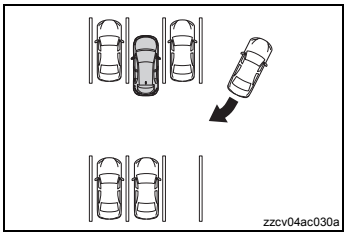

S-IPA (Simple Intelligent Parking Assist System)*

*: If equipped

Simple Intelligent Parking Assist System

■ Function summary

The Simple Intelligent Parking Assist System automatically operates the steering wheel to provide support when backing into an area near a target parking spot, and when departing from a parallel parking spot. (Shift lever operations and speed adjustment when moving forward or backing up are not performed automatically.)

- The Simple Intelligent Parking Assist System does not park the vehicle automatically. It is a system that provides support when pulling out of a perpendicular or parallel parking spot.
- The Simple Intelligent Parking Assist System provides steering wheel operation assistance to guide the vehicle toward the selected intended parking spot. The selected intended parking spot may not always be reachable, depending on road and vehicle conditions at the time of parking, and the distance to the intended parking spot.

■ Linking with the PKSB (Parking Support Brake) system (if equipped)

While the Simple Intelligent Parking Assist System is operating, if the system detects an obstacle that could result in a collision, the emergency brakes operate, regardless of whether the PKSB (Parking Support Brake) system is on or off. (→P.354)

WARNING

■When using the Simple Intelligent Parking Assist System

- When backing up or proceeding forward, be sure to directly confirm the safety of the area to the front or rear, and the area around the vehicle, and slowly back up or proceed forward while adjusting the vehicle speed by depressing the brake pedal.
- If it seems the vehicle may make contact with a pedestrian, another vehicle or any other obstacles, stop the vehicle by depressing the brake pedal, and then press the S-IPA switch (→P.354) to turn the system off.

Chart of Simple Intelligent Parking Assist System assist modes and functions

Assist mode	Type of parking	Function summary	See page
Parallel parking assist mode	Parallel parking	Guidance is provided to detect the intended parking spot and reach a position to begin backing up from. Assistance is provided from when the vehicle begins backing up until it reaches the intended parking spot.	P.356
Exit parallel parking assist mode	Exit parallel parking	Assistance starts after the vehicle has been parallel parked. Assistance is provided to guide the vehicle from the parking space to a position from which it can take off.	P.361
Back-in parking assist mode (with forward guidance function)	Back-in parking	Assistance starts after stopping the vehicle in front of the intended parking spot, and is provided for backing into a parking space, including guidance to reach a position to begin backing up from.	P.365

■ PKSB (Parking Support Brake) system while the Simple Intelligent Parking Assist System is operating

While the Simple Intelligent Parking Assist System is operating, if the system detects an obstacle that could result in a collision, hybrid system output suppression control and brake control of the PKSB (Parking Support Brake) system are operated, regardless of whether the PKSB (Parking Support Brake) system is on or off. (→P.337)


- After the PKSB (Parking Support Brake) system operates, operation of the Simple Intelligent Parking Assist System is temporarily stopped, and operation of the PKSB (Parking Support Brake) system is indicated on the multi-information display. (→P.337)
- When operation of the Simple Intelligent Parking Assist System is stopped 3 times by operation of the PKSB (Parking Support Brake) system, the Simple Intelligent Parking Assist System is canceled.
- Once the Simple Intelligent Parking Assist System becomes available after the PKSB (Parking Support Brake) system is operated, a message prompting you to shift is displayed on the multi-information display. Operation of the Simple Intelligent Parking Assist System can be resumed by shifting according to the prompt on the multi-information display and pressing the S-IPA switch (→P.354) again.

■ Shifting while the Simple Intelligent Parking Assist System is operating

If the system determines that the drivers intends to move forward or in reverse, assistance continues even if the drivers shifted before being prompted to do so by the system. However, because driver operation differs from the guidance provided by the system, the number of turning maneuvers may increase.

Switching assist mode

■ Switching using the S-IPA switch

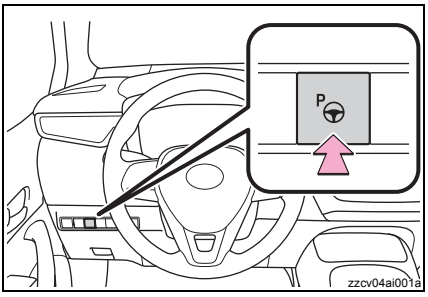

Press the switch.

This allows you to switch functions and cancel or restart assist modes.

While the power switch is on, the vehicle speed is approximately 30 km/h (19 mph) or less, each time the S-IPA switch is pressed the function switches as follows.

The selected function is indicated on the operation display area of the multi-information display (→P.355).


- ▶ Each time the S-IPA switch is pressed with the shift lever not in P, the mode changes as follows: Parallel parking assist mode→Back-in parking assist mode*→Off
- ▶ Each time the S-IPA switch is pressed with the shift lever in P, the mode changes as follows: Exit parallel parking assist mode→Off

*: The back-in parking assist mode can be switched to when its operating conditions are met (→P.360). When

the operating conditions are not met, it switches to off.

Guidance screen

The guidance screen is displayed on the multi-information display.

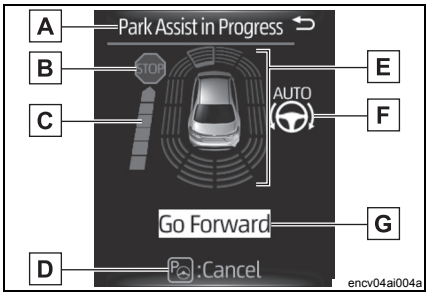

A Operation display area

Displays the operating condition of the Simple Intelligent Parking Assist System.

B Stop display

When illuminated, depress the brake pedal and stop the vehicle at once.

C Assistance level indicator

Displays a gauge indicating the level until the vehicle's stopping position/the position at which assist control ends.

D S-IPA switch icon

Displayed when the assist mode can be changed and the system can be turned off or on using the S-IPA switch.

E Toyota parking assist-sensor display/door position (open/close) display

→P.324

F Steering wheel auto operation display

Displays when the steering wheel auto operation is being performed.

G Advice display

Follow the instructions on the display and perform any indicated operations. As an example, the illustration shows the display indicating it is necessary to depress the brake pedal in order to control the vehicle speed and to confirm the safety of your surroundings.

■ S-IPA indicator inside the meter (→P.110)

This indicator illuminates when the steering wheel auto operation is being performed by the Simple Intelligent Parking Assist System. After control ends, the indicator blinks for a short period of time and then turns off.

■ Toyota parking assist-sensor pop-up display

While the Simple Intelligent Parking Assist System is operating, if the PKSB (Parking Support Brake) system detects an obstacle, the Toyota parking assist-sensor display automatically pops up on the guidance screen (→P.324), regardless of whether the PKSB (Parking Support Brake) system is on or off. (→P.324)

Canceling or stopping assist mode

Assist mode will be canceled or stopped in the following cases.

▶ Assist control is canceled when

- The system temperature preservation function operates
- There is a system malfunction
- System determined that the parking environment is not suitable for assist to continue

When assist control is canceled, firmly grasp the steering wheel, depress the brake pedal and stop the vehicle.
Start again from the beginning, as the system will already be canceled. When continuing to park manually, operate the steering wheel as you normally would.

▶ Assist control is stopped when

- The steering wheel is operated
- The vehicle speed exceeds 7 km/h (4 mph) during assist control
- The PKSB (Parking Support Brake) system operates

When assist control is stopped, it can be resumed by following the guidance shown on the screen.

If the vehicle speed is about to exceed the speed limit during assist control




A buzzer will sound and a message indicating that the vehicle speed may exceed the operation speed limit will be displayed. When the message is displayed, immediately depress the brake pedal to decelerate. If the vehicle continues to accelerate, assist control will be canceled when the vehicle speed exceeds a certain speed. (→P.373)

How to parallel park (parallel parking assist mode)

Function summary

If a parking space can be detected, you will be guided forward until you reach the assist control starting position, and then the parallel parking assist mode can be used. Furthermore, depending on the parking space and other conditions, multi-turn maneuvering assist control is also provided if necessary.

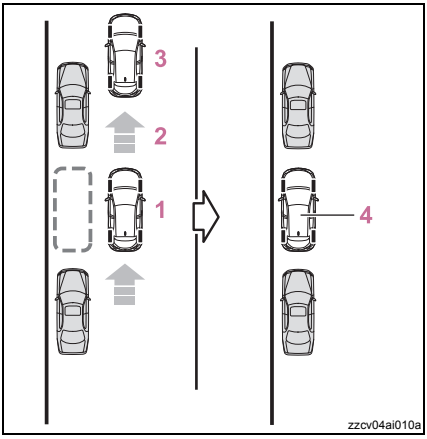

1 Continue moving forward with the vehicle parallel to the curb or road, and stop so that the center of the target parking spot appears nearly perpendicular to the vehicle. Then, press the S-IPA switch 1 time to select the parallel parking assist mode.

2 Travel straight ahead parallel with the road or curb so that the parking space is detected.

3 A sound is issued and a display is shown to notify you when the

vehicle reaches a position where assist control can be used to begin backing up from, and then when the shift lever is changed according to guidance provided by the system, steering wheel auto operation begins.


If the detected parking space or road width (distance to the side of the road across from the parking space) is narrow, or if there are obstacles in front of the vehicle, guidance will not be issued.

4 Parking is complete.

This completes the assist mode. Depending on the condition of the parking space, guidance to starting points for moving forward and backing up, as well as the steering wheel auto operation, are repeated any time multi-turn maneuvering is necessary following step **3** from the time the vehicle begins backing up until parking completes.

■ Parking


1 Stop so that the center of the target parking spot appears nearly perpendicular to vehicle. Then, press the S-IPA switch 1 time and check that the display on the multi-information display switches to “Parallel Parking”.

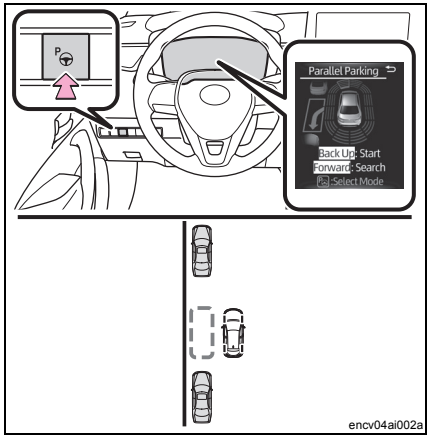


- The mode switches each time the S-IPA switch is pressed. (→P.354)
- When the vehicle speed is approximately 30 km/h (19 mph) or higher, pressing the S-IPA switch will not cause the screen to switch to the “Parallel Parking” display.

2 Travel straight ahead parallel with the road (or curb), and maintain a gap of approximately

1 m (3.3 ft.) from any parked vehicles.

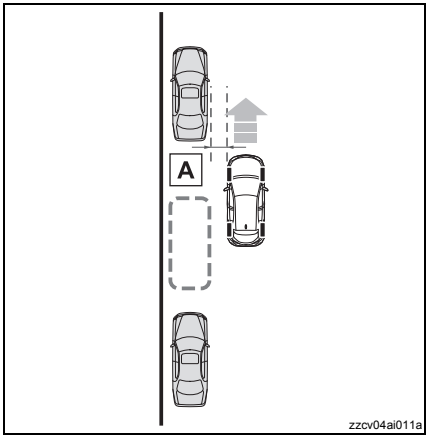


A 1 m (3.3 ft.)

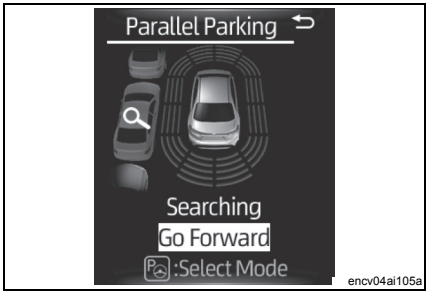

- Proceed slowly.
- The system will begin searching for a parking space.
- While searching for a space, the turn signal lever (→P.243) can be operated to select a parking space on the left or right.
- When stopping the function, press the S-IPA switch once to turn the function off.
- When a parking space is detected, the screen will change.

3 When a level beep is emitted and the stop display (→P.355) is shown on the display, stop the vehicle.

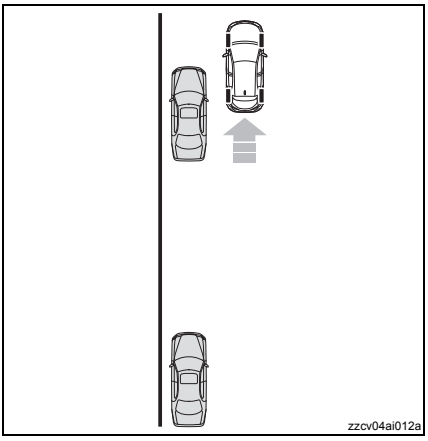

4 When the shift lever is changed to R, a high-pitched beep is emitted and assist control will start.


- When the steering wheel auto operation starts, the steering wheel auto operation display and assistance level indicator (→P.355) will be shown in the display area.
- To stop assist control, press the S-IPA switch.

5 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle, confirm that there are no obstacles in the parking space, and slowly back up while

adjusting your speed by depressing the brake pedal.

- When backing up too quickly, a sharp beeping sound is emitted and assist control is stopped. (→P.355)
- When the vehicle cannot be cleanly entered within the target parking spot on the first try and multi-turn maneuvering is necessary, proceed to step **6**.
  When multi-turn maneuvering is not necessary, proceed to step **12**.

6 When a level beep is emitted and the stop display (→P.355) is shown on the display, stop the vehicle.

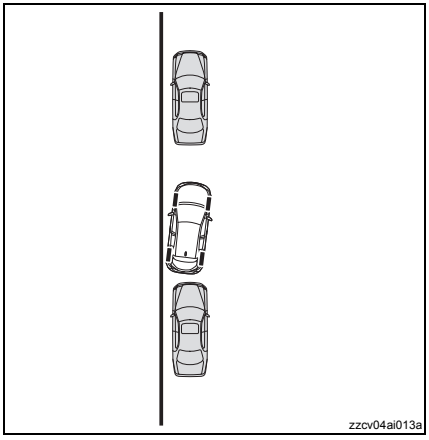

7 Change the shift lever to D, S (vehicles with paddle shift switches) or B (vehicles without paddle shift switches).

8 Assume an ordinary driving posture, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the front and around the vehicle and slowly proceed forward while adjusting your speed by depressing the brake pedal.

9 When a level beep is emitted and the stop display (→P.355) is shown on the display, stop the vehicle.

10 Change the shift lever to R.

11 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle slowly back up while adjusting your speed by depressing the brake pedal.

Depending on the condition of the parking space, steps **6** to **11** may need to be repeated.

12 When the vehicle is almost entirely within the target parking spot, a high-pitched beep is emitted and the stop display is shown on the display, stop the vehicle.

This completes the parallel parking assist mode.

- After stopping, feel free to maneuver the vehicle to reach the desired parking spot.
- Be sure to back up while checking the area to the front and rear of the vehicle directly and by using the mirrors.

■ Parallel parking assist mode operating conditions

- In order to operate the parallel parking assist mode correctly, drive slowly (at a speed at which the vehicle can be quickly stopped) parallel to the road (or shoulder) while maintaining a distance of approximately 1 m (3.3 ft.) to any parked vehicles.
- The function cannot be used when the vehicle speed is approximately 30 km/h (19 mph) or higher.
- The front side sensors and rear side sensors are used to detect parked vehicles and determine the parking spot. Therefore, when detection is not possible (→P.376), guidance is not issued.
- If there are no parked vehicles, the parking spot cannot be determined. Therefore, the parallel parking assist mode cannot be operated.
- If unable to detect the environment surrounding the parking space, the parallel parking assist mode may not be able to operate.
- Guidance will continue until the vehicle speed meets or exceeds approximately 30 km/h (19 mph) or the function is turned off using the S-IPA switch.

■ Timing for pressing the S-IPA switch


In the following cases, the assist mode may also operate during the steps taken to park using the parallel parking assist mode. However, in these cases, conduct parking procedures according to the information on the multi-information display.

- In step **1** the S-IPA switch is pressed after already passing over the target parking spot.
  If the vehicle is not stopped in step **1**, pressing the S-IPA switch 1 time while the vehicle is in motion allows you to select “Parallel Parking” and proceed directly to step **2**.
- The vehicle is moved up to the position in step **3** without the S-IPA switch being pressed. Then the S-IPA switch is pressed after having changed the shift lever to R.

NOTICE

■ When using the parallel parking assist mode

- If the road surface has any dips or inclines, the target parking spot cannot be correctly set. Therefore, the vehicle may be parked at an angle or may deviate from the parking spot. In these cases, do not use the parallel parking assist mode.
- When the other parked vehicle is narrow or parked extremely close to the curb, assist control will also guide the vehicle to a position close to the curb.
  If it seems the vehicle may make contact with the curb or any other obstacles, or if it seems the tire position will deviate from the intended parking spot, stop the vehicle by depressing the brake pedal, and then press the S-IPA switch to turn off the system.

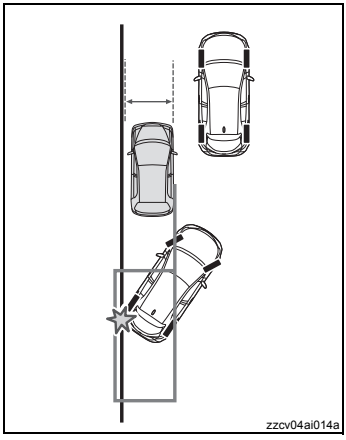


NOTICE

- When there is a wall or other obstacle on the inner side of the parking space, or when another parked vehicle extends into the road from its parking spot, the target parking spot may be set in a position that juts out slightly into the road.
- Depending on the surrounding environment, such as other parked vehicles, the vehicle may be parked at an angle or may deviate from the parking spot. Manually adjust vehicle alignment as necessary.
- The system provides assistance to guide the vehicle based on position of adjacent vehicles, even if there are obstacles, bumps, drops or curb stones in the parking space.
  If it seems the vehicle may make contact, stop the vehicle by depressing the brake pedal, and then press the S-IPA switch to turn off the system.
- It may not be possible to detect objects that are low to the ground. Directly confirm the safety of your surroundings and, if it seems the vehicle may make contact with an obstacle, stop the vehicle by depressing the brake pedal.

How to depart from a parallel parking position (exit parallel parking assist mode)

■ Function summary

When departing from a parallel parking position, select the direction you would like to depart in, and steering wheel operation assist control will be provided to guide the vehicle to a position from which you can take off.

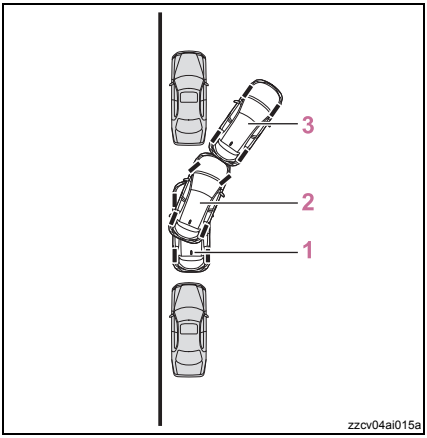


1 With the shift lever in P, press the S-IPA switch, select exit parallel parking assist mode, and then operate the turn signal lever to select the desired departure direction.
2 Steering wheel auto operation starts when the shift lever is changed according to guidance provided by the system.
3 A sound is issued and a display is shown to notify you when the vehicle reaches a position from which you can take off.

Depending on the condition of the parking space, guidance to starting points for moving forward and backing up, as well as the steering wheel auto operation, are repeated any time multi-turn maneuvering is necessary from the time the steering wheel auto operation begins in step 2 up until the vehicle reaches a position from which it can take off.

■ Using the exit parallel parking assist mode to depart

1 With the shift lever in P, press the S-IPA switch and check that

the display on the multi-information display switches to “Exit Parallel Parking”.

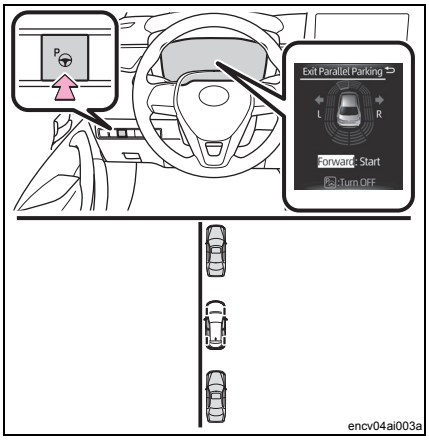

2 Operate the turn signal lever (→P.243) to select whether you would like to depart to the left or right.

If there are any obstacles in the direction the vehicle is departing in, the system determines that it is not possible to depart, and assist control is stopped.

3 When the shift lever is changed to R (or D) according to the advice display on the screen (→P.355), a high-pitched beep is emitted and assist control will start.


Step 4 and onward is for cases in which the advice display shows “Shift to R” after operating the turn signal lever to select a departure direction.

- When the steering wheel auto operation starts, the steering wheel auto operation display and assistance level indicator (→P.355) will be shown in the display area.
- To stop assist control, press the S-IPA switch.

4 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle and slowly back up while adjusting your speed by depressing the brake pedal.

- When backing up too quickly, a sharp beeping sound is emitted and assist control is stopped. (→P.355).

5 When a level beep is emitted and the stop display (→P.355) is shown on the display, stop the vehicle.

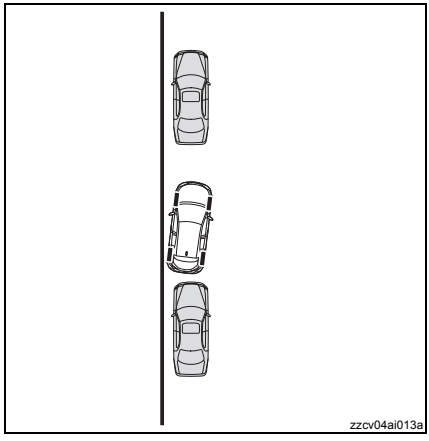


6 Change the shift lever to D, S (vehicles with paddle shift switches) or B (vehicles without paddle shift switches).

7 Assume an ordinary driving posture, rest your hands lightly on

the steering wheel without applying any force, directly confirm the safety of the area to the front and around the vehicle and slowly proceed forward while adjusting your speed by depressing the brake pedal.

- When departure cannot be accomplished on the first try and multi-turn maneuvering is necessary, proceed to step **8**.
- When multi-turn maneuvering is not necessary, proceed to step **14**.

8 When a level beep is emitted and the stop display (→P.355) is shown on the display, stop the vehicle.

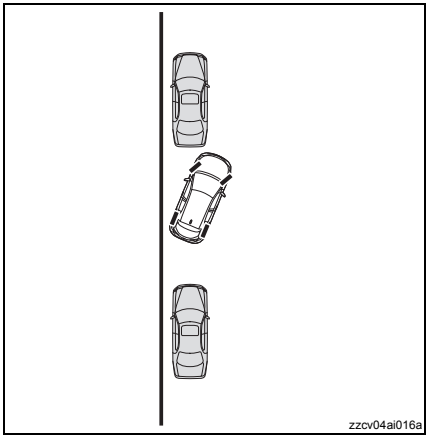


9 Change the shift lever to R.

10 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle and slowly back up while adjusting your speed by depressing the brake pedal.

Depending on the condition of the parking space, steps **5** to **10** may need to be repeated.

11 When a level beep is emitted and the stop display (→P.355) is shown on the display, stop the vehicle.

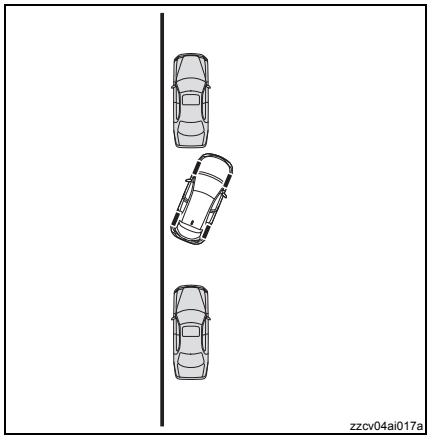


12 Change the shift lever to D, S (vehicles with paddle shift switches) or B (vehicles without paddle shift switches).

13 Assume an ordinary driving posture, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the front and around the vehicle and slowly proceed forward while adjusting your speed by depressing the brake pedal.

14 When the vehicle has nearly reached the take-off point, a high-pitched beep is emitted

and assist control finishes. From there, grasp the steering wheel and proceed forward.

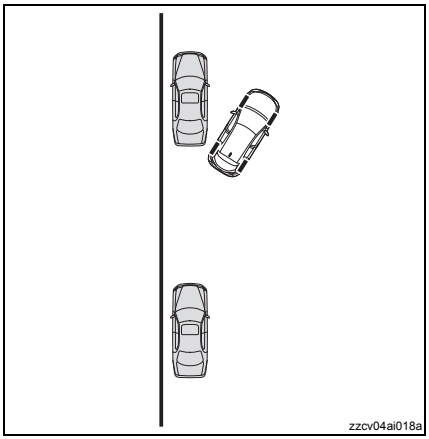

Exit parallel parking assist mode

- During assist control, if the driver determines that they are at a position where take-off is possible and operates the steering wheel, assist control is stopped at that position.
- Assist control cannot be used if there are no parked vehicles ahead, or if the gap between the front of your vehicle and the vehicle parked ahead is too large.
- When using the exit parallel parking assist mode, the assist mode may be not be able to operate depending on the surrounding environment.

When using the exit parallel parking assist mode

Do not use exit parallel parking assist mode in the following situations as it may not operate properly:


- When the road surface is not paved or is rough, such as gravel.
- When there is a rut or other depression in the road to the side of your vehicle.
- When the road to the side of your vehicle is sloped.
- When any of the following are behind the vehicle, within the area that the vehicle will move to depart:
  - Trees or poles
  - Fire hydrants
  - Tall grass, flower beds, etc.
  - Walls which would surround the vehicle
  - Vehicles waiting near the parking spot
  - Metal I-beams
  - Walls with protrusions
  - Holes

WARNING

When using exit parallel parking assist mode

In the following situation, be sure to drive carefully as the side sensors may not be able to correctly detect objects, possibly leading to an accident.

When an object is in an area which is out of the detection range of the side sensors.

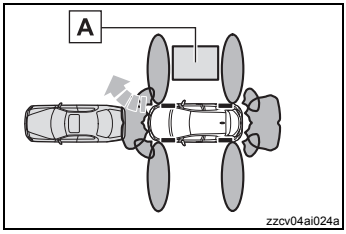

A Object

NOTICE

When using the exit parallel parking assist mode

- Do not use exit parallel parking assist mode in any situation other than when departing a parallel parking spot.
  If assist control is started unintentionally, depress the brake pedal and stop the vehicle, then press the S-IPA switch to cancel the assist control.


NOTICE

- The detection range of the sensors (→P.328) is limited. Directly confirm the safety of your surroundings, and if there is a possibility of a contact accident, stop the vehicle by depressing the brake pedal.
- It may not be possible to detect objects that are low to the ground. Directly confirm the safety of your surroundings and, if it seems the vehicle may make contact with an obstacle, stop the vehicle by depressing the brake pedal.
- When departing for a position from which you can take off, directly confirm the safety of your surroundings.

How to park next to other vehicles (back-in parking assist mode)

■ Function summary

Stop so that the center of the target parking spot appears nearly perpendicular to the vehicle. If the space is detectable, the forward guidance function can be used. Furthermore, depending on the parking space and other conditions, multi-turn maneuvering assist control is also provided if necessary.

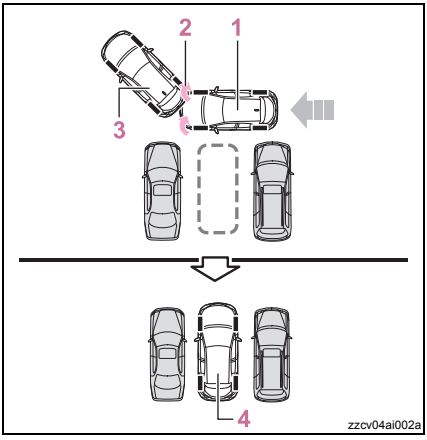

1 Stop so that the center of the target parking spot appears nearly perpendicular to the vehicle. Then, press the S-IPA switch 2 times to select back-in parking assist mode.

2 Steering wheel auto operation starts when the vehicle begins to move.

3 A sound is issued and a display is shown to notify you when the vehicle reaches the position to start backing up from.

If the detected parking space or road width (distance to the side of the road across from the parking space) is narrow, or if there are obstacles in front of the vehicle, guidance will not be issued.


4 Parking is complete.

This completes the assist mode.

Depending on the condition of the parking space, guidance to starting points for moving forward and backing up, as well as the steering wheel auto operation, are repeated any time multi-turn maneuvering is necessary following step 3 from the time the vehicle begins backing up until parking completes.

■ **Parking**


1 Stop so that the center of the target parking spot appears nearly perpendicular to vehicle. Then, press the S-IPA switch 2 times and check that the display on the multi-information display switches to “Reverse-in Parking”.

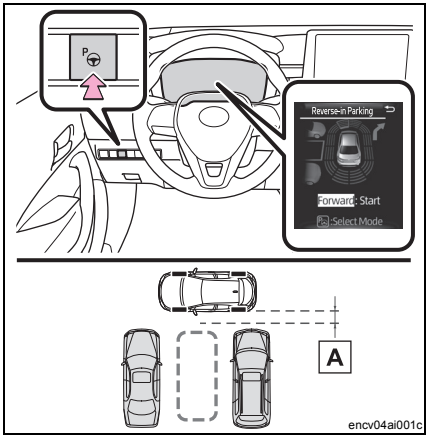

A 1 m (3.3 ft.)


- Visually check the area in the direction of the arrow indicating the direction of the steering wheel auto operation and the target parking spot on the display.
- The mode switches each time the S-IPA switch is pressed. (→P.354)
- When the shift lever is not in D, S (vehicles with paddle shift switches) or B (vehicles without paddle shift switches), or when the vehicle speed has been detected, pressing the S-IPA switch will not cause the screen to switch to the “Reverse-in Parking” display.
- The turn signal lever (→P.243) can be operated to select whether you would like to park to the left or right.
- The system cannot be used when the parking space is narrow or there is not a sufficient enough area for assist control to operate. Please refer to the information shown on the multi-information display to use a different parking space.

2 Assume an ordinary driving posture, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the front and around the vehicle and slowly proceed forward while adjusting your speed by depressing the brake pedal. When this is done, a high-pitched beep is emitted and an indicator on the meter illuminates at the same time, after which assist control will start.

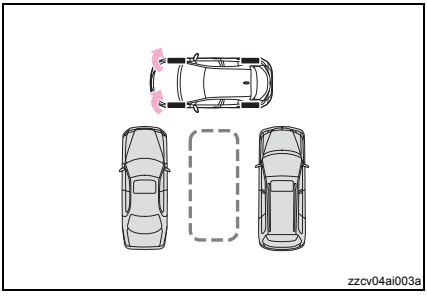

- When the steering wheel auto operation starts, the steering wheel auto operation display and assistance level indicator (→P.355) will be shown in the display area.
- To stop assist control, press the S-IPA switch.
- When the vehicle speed is too high, a sharp beeping sound is emitted and assist control is stopped. (→P.355)
- If the space turns out to be too narrow after assist control starts, a sharp beeping sound is emitted and assist control is stopped.

3 When a level beep is emitted and the stop display (→P.355) is shown on the display, stop the vehicle.

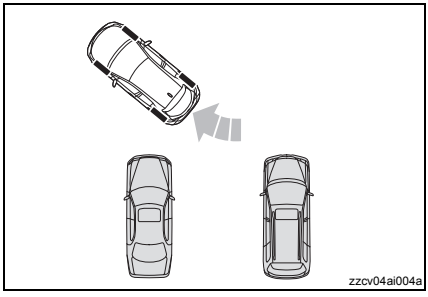


4 Change the shift lever to R.

5 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle, confirm that there are no obstacles in the parking space, and slowly back up while adjusting your speed by depressing the brake pedal.

- When the vehicle cannot be cleanly entered within the target parking spot on the first try and multi-turn maneuvering is necessary, proceed to step **6**.
- When multi-turn maneuvering is not necessary, proceed to step **12**.

6 When a level beep is emitted and the stop display (→P.355) is shown on the display, stop the vehicle.

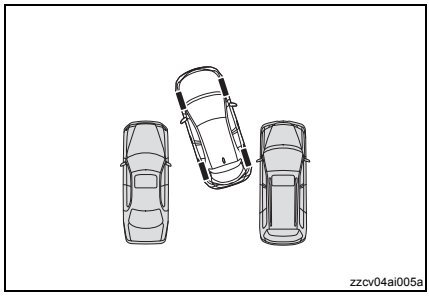


7 Change the shift lever to D, S (vehicles with paddle shift switches) or B (vehicles without paddle shift switches).

When you would like to end assist control at your current position, change the shift lever to P.

8 Assume an ordinary driving posture, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the front and around the vehicle and slowly proceed forward while

adjusting your speed by depressing the brake pedal.

9 When a level beep is emitted and the stop display (→P.355) is shown on the display, stop the vehicle.

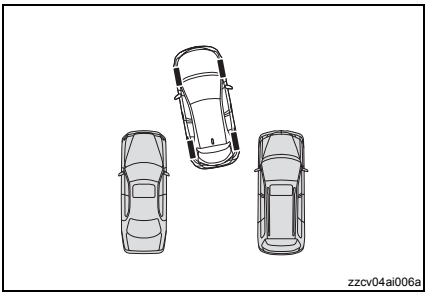

10 Change the shift lever to R.

11 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle slowly back up while adjusting your speed by depressing the brake pedal.

Depending on the condition of the parking space, steps **6** to **11** may need to be repeated.


12 When the vehicle is almost entirely within the target parking spot, a high-pitched beep is emitted and the stop display is shown on the display (→P.355), stop the vehicle.

This completes the back-in parking assist mode.

- For safety, the buzzer sounds slightly before the vehicle is completely entered within the target parking spot. Furthermore, at that point, system operation will also finish. Firmly hold the steering wheel and slowly back up while adjusting your speed by depressing the brake pedal, to reach the desired parking spot.
- Be sure to back up while checking the area to the front and rear of the vehicle directly and by using the mirrors.

Back-in parking assist mode operating conditions

- In order to operate the function correctly, drive slowly (at a speed at which the vehicle can be quickly stopped). Come to a full stop so that the center of the parking space is nearly perpendicular to the vehicle, and then operate the S-IPA switch.
- The function cannot be used when the vehicle speed is approximately 30 km/h (19 mph) or higher.
- The front side sensors and rear side sensors are used to detect parked vehicles and determine the parking spot. Therefore, when detection is not possible (→P.376), guidance is not issued.
- If there are no parked vehicles, the parking spot cannot be determined. Therefore, the back-in parking assist mode cannot be operated.
- If unable to detect the environment surrounding the parking space, the back-in parking assist mode may not be able to operate.
- Depending on the condition of the parking space, if there is not enough space in front of the vehicle required to perform the parking operation, the target parking spot may not be reachable.

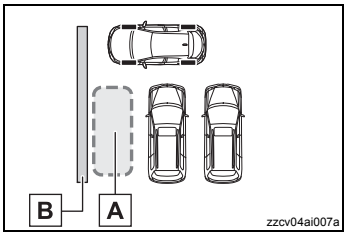


A Intended parking spot

B Wall


■ Tips for using the back-in parking assist mode

1 Leave a gap of approximately 1 m (3.3 ft.) from any parked vehicles and approach the target parking spot. If the gap between your vehicle and any parked vehicles is too large, the front side sensors and rear side sensors may not be able to detect the parked vehicles.

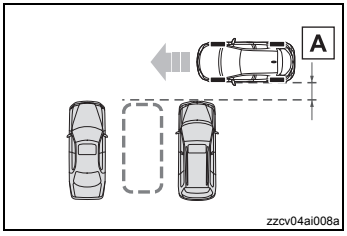

A 1 m (3.3 ft.)

2 Stop so that the center of the target parking spot is perpendicular to the vehicle. Furthermore, only push the S-IPA switch when the vehicle is at a complete stop.

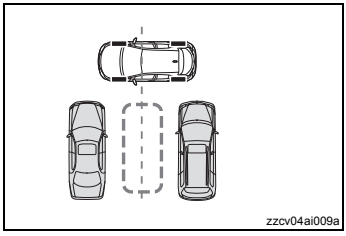

NOTICE

■ When using the back-in parking assist mode

- If the road surface has any dips or inclines, the target parking spot cannot be correctly set. Therefore, the vehicle may be parked at an angle or may deviate from the parking spot. In these cases, do not use the back-in parking assist mode.
- When parking in a narrow space, the vehicle will come close to adjacent vehicles. If it seems the vehicle may make contact, stop the vehicle by depressing the brake pedal.
- It may not be possible to detect objects that are low to the ground. Directly confirm the safety of your surroundings and, if it seems the vehicle may make contact with an obstacle, stop the vehicle by depressing the brake pedal.
- Depending on the surrounding environment, such as other parked vehicles, the vehicle may be parked at an angle or may deviate from the parking spot. Manually adjust vehicle alignment as necessary.

Multi-information display messages

When the Simple Intelligent Parking Assist System cannot be operated, or when operation is stopped, canceled, etc., the one of the following message is displayed on the multi-information display. Take appropriate action according to the display.

■ **When it is not possible to operate**

Message	Situation/Handling method
“IPA System Check Visit Your Dealer”	The system may be malfunctioning. → **Turn the power switch off and then start the hybrid system.** **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer if the message is displayed again.**
“Currently Unavailable”	There may be a system failure.
	Power steering equipment is temporarily overheating. → **Turn the power switch off, wait for a little while, and then start the hybrid system again.**
	The hybrid system is not operating. → **Start the hybrid system.**
	Ice, snow, dirt, etc., has adhered to a sensor. Remove any ice, snow, dirt, etc. → **Remove any ice, snow, dirt, etc.**
	The sensor is frozen. → **Once the sensor thaws, the system will return to normal.**
	The 12-volt battery has been removed and reinstalled. → **Drive the vehicle straight ahead for 5 seconds or more at a speed of approximately 35 km/h (22 mph) or higher.**
“Excessive Speed”	The S-IPA switch is operated when the vehicle speed exceeds 30 km/h (16 mph). → **Operate the switch when the vehicle speed is approximately 30 km/h (16 mph) or less.**

Message	Situation/Handling method
“Unavailable” “Try Another Location”	The S-IPA switch is operated in an area with no parking spaces, or operated in an area where the road width for parking is narrow. → **Assist control cannot be used, as there is no parking space. Proceed to a parking space which width is approximately 2.6 m (8.5 ft.) or larger.** → **Assist control cannot be used, as the road width is narrow. Proceed to a parking space where the road width is approximately 4.5 m (15 ft.) or larger.**
“Narrow Space” “Try Another Location”	The S-IPA switch is operated when there is not enough space to the front and rear of the vehicle when departing from a parallel parking spot. → **Assist control cannot be used, as there is no parking space. Proceed to a parking space that is approximately 2.6 m (8.5 ft.) or larger.**
“Obstruction” “Try Another Location”	The S-IPA switch is operated in an area where there are obstacles to the front, and the vehicle cannot move forward to the starting point for backing up. → **Assist control cannot be used, as there are obstacles in front of the vehicle. Use parking spaces that have no obstacles in front of them.**
“Narrow Space”	The S-IPA switch is operated when there is not enough space to the front and rear of the vehicle when departing from a parallel parking spot. → **The vehicle cannot depart using assist control as there is not enough space to the front and rear of the vehicle. Confirm the safety of your surroundings before departing.**

Message	Situation/Handling method
“Unavailable”	The S-IPA switch is operated in an area where there are no obstacles to the front of the vehicle, or there are obstacles to the sides and the vehicle cannot depart from the parallel parking spot. → **Assist control cannot be used for departure, as there are obstacles to the sides of the vehicle or departure can easily be performed manually. Confirm the safety of your surroundings before departing.**
“Pressure Applied to Steering Wheel”	Assist control is started while the steering wheel is held. → **Rest your hands on the steering wheel without applying any force. Assist control will start.**
“Stop the Vehicle”	The vehicle is moved and assist control is started while the steering wheel is held. → **Stop the vehicle and follow the guidance provided by the system to start assist control.**

■ When the operation is canceled

Message	Situation/Handling method
“Park Assist Cancelled”	While assist control is operating, the driver changes the shift lever to P or operates the S-IPA switch.
“Excessive Speed”	The vehicle speed exceeds 30 km/h (16 mph) when searching for a parallel parking assist mode space.
“Narrow Space”	Assist control is started in an area with narrow parking spaces.
“No Exit Direction Specified”	The shift lever is changed without having used the turn signal lever to select a departure direction when using the exit parallel parking assist mode. → **Follow the guidance provided by the system.**

Message	Situation/Handling method
“Wrong Direction”	When assist control starts, the vehicle proceeds in a direction opposite to the guidance. → **Follow the guidance provided by the system to proceed forward.**
“Cannot Reach Desired Position”	The maximum number of movements for multi-turn maneuvering is reached during assist control, or the target parking spot cannot be reached due to the control being used on a road with steep grade. → **Follow the assist control guidance and use the system in a wide space that does not have a steep grade.**

■ When the operation is suspended

Message	Situation/Handling method
“Steering Wheel Turned”	The driver holds the steering wheel during assist control. → **Stop the vehicle and rest your hands on the steering wheel without applying any force. Then, press the S-IPA switch to restart assist control.**
“Excessive Speed”	The vehicle speed exceeds 7 km/h (4 mph) during assist control. → **Stop the vehicle and rest your hands on the steering wheel without applying any force. Then, press the S-IPA switch to restart assist control.**
“Pressure Applied to Steering Wheel”	The S-IPA switch is pressed while assist control is temporarily stopped and the steering wheel is firmly held. → **Rest your hands on the steering wheel without applying any force. Then stop the vehicle to restart assist control.**


Message	Situation/Handling method
“Stop the Vehicle”	The S-IPA switch is pressed while assist control is temporarily stopped and the vehicle is moving. → **Rest your hands on the steering wheel without applying any force. Then stop the vehicle to restart assist control.**
“Resume”	Assist control is temporarily stopped (able to be restarted) → **Stop the vehicle and rest your hands on the steering wheel without applying any force. Then press the S-IPA switch to restart assist control.**
“Too Close to Obstacle at Front” “Shift to R”	The vehicle moved too close to an obstacle in front of the vehicle. → **Press the S-IPA switch after changing the shift lever to R to restart assist control.**
“Too Close to Obstacle at Rear” “Shift to D”	The vehicle moved too close to an obstacle to the rear of the vehicle. → **Press the S-IPA switch after changing the shift lever to D to restart assist control.**

Precautions during use

■ Sensors

Detect the vehicle to help determine the parking spot.


▶ Hatchback

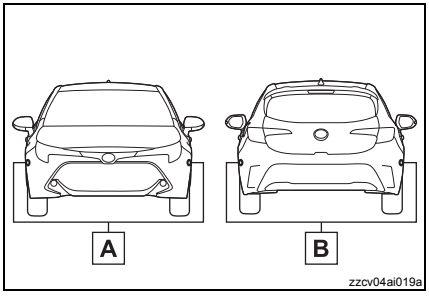

A Front side sensors

B Rear side sensors

▶ Wagon

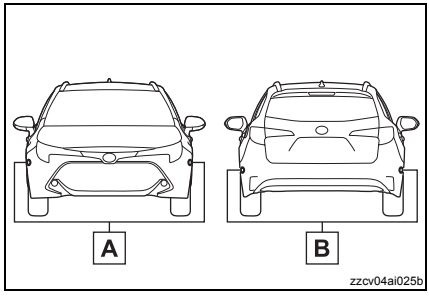


A Front side sensors

B Rear side sensors

■ Precautions during use


● The sensor detection range when

using back-in parking assist mode

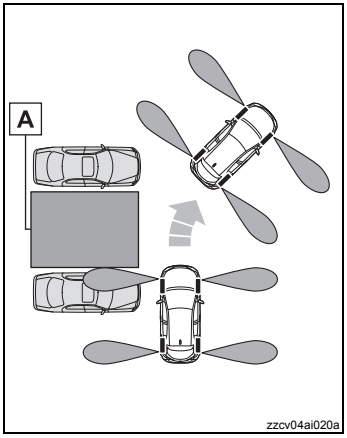


A Intended parking spot

- The sensor detection range when using parallel parking assist mode

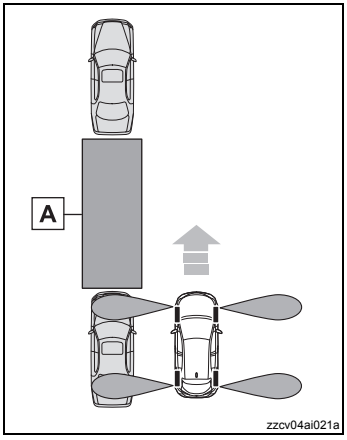

A Intended parking spot


- When there is a parked vehicle behind the target parking spot, it may not be detected due to the distance. Also, depending on the shape of the vehicle and other conditions, the detectable range may shorten or detection may not be possible.
- Objects other than parked vehicles, such as poles and walls, may not be detected. Also, even if these objects can be detected, the target parking spot may deviate.

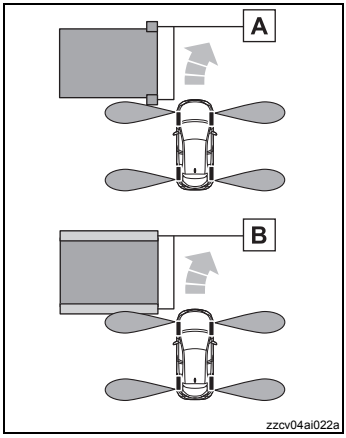

A Poles

B Wall

- Also, the target parking spot may deviate when a pedestrian, etc. is detected.

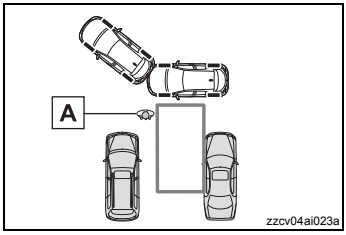

A Pedestrian

- The Simple Intelligent Parking Assist System may not operate if grating, diamond plates or similar materials are detected on the surface of the parking space.

WARNING

■When using the Simple Intelligent Parking Assist System

●Do not rely solely upon the Simple Intelligent Parking Assist System. As with unequipped vehicles, move forward and back up carefully while directly confirming the safety of your surroundings and the area to the rear of the vehicle.

●Do not back up while viewing the multi-information display. Backing up while only viewing the monitor screen may cause a collision or lead to an accident, as the image displayed on the monitor screen may differ from actual conditions. Make sure to visually check the surrounding areas and the area to the rear of the vehicle with and without the mirror while backing up.

●Drive slowly while adjusting your speed by depressing the brake pedal when backing up or moving forward.

●If it seems the vehicle may make contact with a pedestrian, another vehicle or any other obstacles, stop the vehicle by depressing the brake pedal, and then press the S-IPA switch to turn off the system.

●Use the system in a parking lot with a flat surface.

●Observe the following precautions, as the steering wheel automatically turns during use.

- There is risk of a necktie, scarf, your arm, etc. being caught on the steering wheel. Please do not allow your upper body to be close to the steering wheel. Also, do not allow children close to the steering wheel.
- There is a possibility of injury when the steering wheel turns if you have long fingernails.
- In case of emergency, stop the vehicle by depressing the brake pedal, and then press the S-IPA switch to turn off the system.

●Always confirm that there is appropriate space before attempting to park the vehicle and operate the system.

●Do not use the system in the following situations, as the system may be unable to correctly assist you in reaching the target parking spot and may lead to an unexpected accident.

- In an area that is not a parking lot
- A parking lot that is not paved and has no parking space lines, such as a sand or gravel parking lot
- A parking lot that has a slope or undulations in the road
- A frozen, snow-covered or slippery road
- The asphalt is melting due to hot weather
- There is an obstacle between the vehicle and the target parking spot
- Using tire chains or compact spare tire (if equipped)

●Do not use tire other than that provided by the manufacturer. The system may not operate properly. When replacing tires, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

●The system may not be able position the vehicle in the set location in the following situations.

- The tires are extremely worn or the tire pressure is low
- The vehicle is carrying very heavy load

WARNING

- The vehicle is tilted due to having luggage, etc. located on one side of the vehicle
- There are road heaters installed in the parking lot to prevent the road surface from freezing.

In any other situations when the set position and vehicle position greatly differ, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

● Make sure to observe the following precautions regarding the exit parallel parking assist mode.
Exit parallel parking assist mode is a function used when departing from a parallel parking spot. However, this function may not be usable if obstacles or people are detected in front of the vehicle. Only use this function when departing from a parallel parking spot. In the event that the steering control operates, either turn the system off using the S-IPA switch or operate the steering wheel to stop the control.

● If exit parallel parking assist mode is mistakenly used in the following situations, the vehicle may make contact with an obstacle.
The departure function is operated in a direction where an obstacle is present, but the obstacle is not detected by the side sensors (situations such as when the vehicle is directly beside a pole).

● Observe the following precautions, as the sensors may stop functioning properly which may lead to an accident.

- Do not subject the sensor to strong shocks by hitting it, etc. The sensors may not function properly.
- When using a high-pressure washer to wash the vehicle, do not spray water directly on the sensors. Equipment may not function properly if subjected to an impact from strong water pressure. If the vehicle bumper strikes something, equipment may not operate properly due to a sensor malfunction. Have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

● In the following situations, the sensors may not operate normally and may lead to an accident. Drive carefully.

- Obstacles cannot be detected in the side areas until a scan of the side areas is completed. (→P.326)
- Even after the scan of the side areas is completed, obstacles such as other vehicles, people or animals that approach from the sides cannot be detected.
- The sensor is frozen (if it thaws, the system returns to normal).
A warning message may display at particularly low temperatures due to the sensor freezing and it may not detect parked vehicles.
- The sensor is blocked by someone's hand.
- The vehicle is tilted a large amount.
- The temperature is extremely hot or cold.
- The vehicle is driven on undulating roads, slopes, gravel roads, in areas with tall grass, etc.
- An ultrasonic wave source is nearby, such as the horn or sensors of another vehicle, a motorcycle engine or the air brake of a large vehicle.
- Heavy rain or a water strikes the vehicle.


WARNING

- The angle of the sensor may be deviated when assist control starts even if there is a parked vehicle in the target parking spot. Have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not install any accessories within the sensor detection range.

Driving mode select switch

The driving modes can be selected to suit driving condition.

Selecting a drive mode

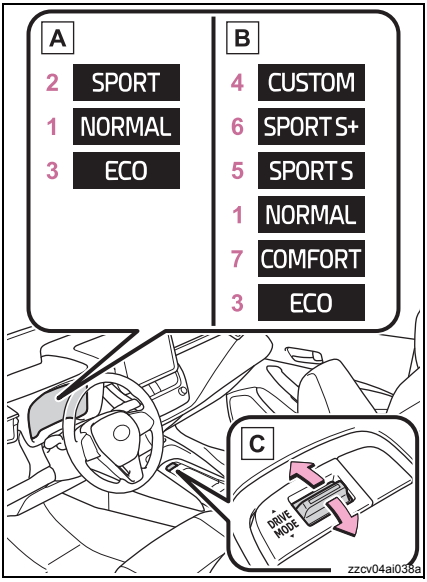

A Multi-information display (without an Adaptive Variable Suspension System)

B Multi-information display (with an Adaptive Variable Suspension System)

C Driving mode select switch

Operate the driving mode select switch forward or backward to select the desired driving mode on the multi-information display.

1 Normal mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for normal driving.

2 Sport mode

Controls the hybrid system to provide quick, powerful acceleration. This mode also changes the steering feel, making it suitable for when agile driving response is desired, such as when driving on roads with many curves.

When Sport mode is selected, Sport mode indicator comes on.

3 Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

When Eco drive mode is selected, Eco drive mode indicator comes on.

4 Custom mode

Allows you to drive with the powertrain, chassis and air conditioning system functions set to your preferred settings. Custom mode settings can only be changed on the drive mode customization display of the Multi-information Display. (→P.610)

When Custom mode is selected, Custom mode indicator comes on.

5 Sport S mode

Controls the hybrid system to provide quick, powerful acceleration. This mode is suitable for when agile driving response is desired, such as when driving on roads with many curves.

When Sport S mode is selected, Sport S mode indicator comes on.

6 Sport S+ mode

Helps to ensure steering performance and driving stability by simultaneously controlling the steering and suspension in addition to Sport S. Suitable for sportier driving.

When Sport S+ mode is selected, Sport S+ mode indicator comes on.

7 Comfort mode

By controlling the suspension, riding comfort is further enhanced. Suitable for city driving.

When Comfort mode is selected, Comfort mode indicator comes on.

■ **Operation of the air conditioning system in Eco drive mode**

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency. To improve air conditioning performance, perform the following operations:

- Turn off air conditioning eco mode (→P.444)
- Adjust the fan speed (→P.445)
- Turn off Eco drive mode

■ **Automatic deactivation of Sport mode/Sport S mode/Sport S+ mode**

If the power switch is turned off after driving in Sport mode, the drive mode will be changed to normal mode.

GPF (Gasoline Particulate Filter) system*

*: If equipped

The GPF system collects particulate matter in the exhaust gas by using an exhaust gas filter.
The system will operate to regenerate the filter automatically, depending on the vehicle conditions.

■ If “Exhaust Filter Full See Owner's Manual” is shown on the multi-information display

- The message may be displayed while high load driving with particulate matter accumulating.
- Hybrid system output is restricted while the message is displayed, however, it is possible to drive the vehicle unless the malfunction indicator lamp comes on.
- Particulate matter can accumulate more quickly if the vehicle is frequently driven short trips or at low speeds, or if the hybrid system is regularly started in an extremely cold environment. Excessive accumulation of particulate matter can be prevented by periodically driving long distances continuously with intermittent releasing of the accelerator pedal, such as when driving on highways and freeways.

■ If the malfunction indicator lamp comes on or “Hybrid System Malfunction Output Power Reduced Visit Your Dealer” is shown on the multi-information display

The amount of accumulated particulate matter has exceeded a certain level. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

NOTICE

■ To prevent the GPF system from not operating properly

- Do not use fuel other than the specified type
- Do not modify the exhaust pipe

Driving assist systems

To keep driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

Summary of the driving assist systems

■ **ECB (Electronically Controlled Brake System)**

The electronically controlled system generates braking force corresponding to the brake operation

■ **ABS (Anti-lock Brake System)**

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

■ **Brake assist**

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

■ **Adaptive Variable Suspension System (if equipped)**

By independently controlling the damping force of the shock absorbers for each of the 4 wheels according to the road and driving conditions, this system helps riding comfort with superior vehicle stability, and helps good vehicle posture. Also, the damping force changes depending on the selected driving mode. (→P.378)

■ **VSC (Vehicle Stability Control)**

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces.

■ **VSC+ (Vehicle Stability Control+)**

Provides cooperative control of the ABS, TRC, VSC and EPS.
Helps to maintain directional stability when swerving on slippery road surfaces by controlling steering performance.

■ **TRC (Traction Control)**

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

■ **Active Cornering Assist (ACA)**

Helps to prevent the vehicle from drifting to the outer side by performing inner wheel brake control when attempting to accelerate while turning

■ **Hill-start assist control**

Helps to reduce the backward movement of the vehicle when starting on an uphill

■ **EPS (Electric Power Steering)**

Employs an electric motor to reduce the amount of effort needed to turn the steering wheel.

■ Emergency brake signal


When the brakes are applied suddenly, the emergency flashers automatically flash to alert the vehicle behind.

■ Secondary Collision Brake (if equipped)

When the SRS airbag sensor detects a collision and the system operates, the brakes and brake lights are automatically controlled to reduce the vehicle speed and help reduce the possibility of further damage due to a secondary collision.

■ When the TRC/VSC/ABS systems are operating

The slip indicator light will flash while the TRC/VSC/ABS systems are operating.

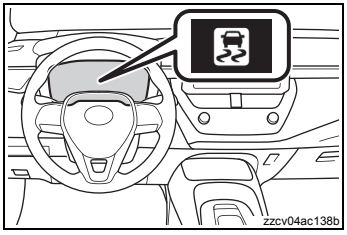


■ Disabling the TRC system

If the vehicle gets stuck in mud, dirt or snow, the TRC system may reduce power from the hybrid system to the wheels. Pressing OFF to turn the system off may make it easier for you to rock the vehicle in order to free it.

To turn the TRC system off, quickly press and release OFF.

The “Traction Control Turned OFF” will be shown on the multi-information display.

Press OFF again to turn the system back on.

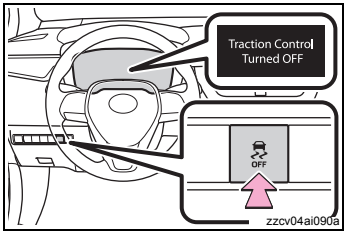

■ Turning off both TRC and VSC systems

To turn the TRC and VSC systems off, press and hold OFF for more than 3 seconds while the vehicle is stopped.

The VSC OFF indicator light will come on and the “Traction Control Turned OFF” will be shown on the multi-information display.*

Press OFF again to turn the system back on.

*: On vehicles with PCS (Pre-Collision System), PCS will also be disabled (only Pre-Collision warning is available). The PCS warning light will come on and a message will be displayed on the multi-information display. (→P.285)

■ When the message is displayed on the multi-information display showing that TRC has been disabled even if OFF has not been pressed

TRC is temporary deactivated. If the information continues to show, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ Operating conditions of hill-start assist control

When the following four conditions are met, the hill-start assist control will oper-

ate:

- The shift lever is in a position other than P or N (when starting off forward/backward on an upward incline).
- The vehicle is stopped
- The accelerator pedal is not depressed
- The parking brake is not engaged

■ Automatic system cancelation of hill-start assist control

The hill-start assist control will turn off in any of the following situations:

- The shift lever is shifted to P or N.
- The accelerator pedal is depressed
- The parking brake is engaged
- 2 seconds at maximum elapsed after the brake pedal is released

■ Sounds and vibrations caused by the ABS, brake assist, VSC, TRC and hill-start assist control systems

- A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the hybrid system is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
  - Vibrations may be felt through the vehicle body and steering.
  - A motor sound may be heard also after the vehicle comes to a stop.

■ ECB operating sound

ECB operating sound may be heard in the following cases, but it does not indicate that a malfunction has occurred.

- Operating sound heard from the engine compartment when the brake pedal is operated.
- Motor sound of the brake system heard from the front part of the vehicle when the driver's door is opened.
- Operating sound heard from the engine compartment when one or two minutes passed after the stop of the hybrid system.

■ Active Cornering Assist operation sounds and vibrations

When the Active Cornering Assist is operated, operation sounds and vibrations may be generated from the brake system, but this is not a malfunction.

■ EPS operation sound

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ Automatic reactivation of TRC and VSC systems

After turning the TRC and VSC systems off, the systems will be automatically re-enabled in the following situations:

- When the power switch is turned off
- If only the TRC system is turned off, the TRC will turn on when vehicle speed increases.
  If both the TRC and VSC systems are turned off, automatic re-enabling will not occur when vehicle speed increases.

■ Operating conditions of Active Cornering Assist

The system operates when the following occurs.

- TRC/VSC can operate
- The driver is attempting to accelerate while turning
- The system detects that the vehicle is drifting to the outer side
- The brake pedal is released

■ Reduced effectiveness of the EPS system

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel

heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the hybrid system off. The EPS system should return to normal within 10 minutes.

■ **Operating conditions of emergency brake signal**

When the following conditions are met, the emergency brake signal will operates:

- The emergency flashers are off
- Actual vehicle speed is over 55 km/h (35 mph)
- The system judges from the vehicle deceleration that it is a sudden braking operation.

■ **Automatic system cancelation of emergency brake signal**

The emergency brake signal will be canceled in any of the following situations:

- The emergency flashers are turned on.
- The system judges from the vehicle deceleration that is not a sudden braking operation.

■ **Secondary Collision Brake operating conditions (if equipped)**

The system operates when the SRS airbag sensor detects a collision while the vehicle is in motion.
However, the system does not operate in any of the following situations.

- The vehicle speed is below 10 km/h (6 mph)
- Components are damaged

■ **Secondary Collision Brake automatic cancellation (if equipped)**

The system is automatically canceled in any of the following situations.

- The vehicle speed drops below approximately 10 km/h (6 mph)
- A certain amount of time elapses during operation
- The accelerator pedal is depressed a large amount

WARNING

■ **The ABS does not operate effectively when**

- The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on wet or slick roads.

■ **Stopping distance when the ABS is operating may exceed that of normal conditions**

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or uneven surfaces

■ **TRC/VSC may not operate effectively when**

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRC/VSC system is operating. Drive the vehicle carefully in conditions where stability and power may be lost.

■ **Active Cornering Assist does not operate effectively when**

- Do not overly rely on Active Cornering Assist. Active Cornering Assist may not operate effectively when accelerating down slopes or driving on slippery road surfaces.

WARNING

- When Active Cornering Assist frequently operates, Active Cornering Assist may temporarily stop operating to ensure proper operation of the brakes, TRC and VSC.

■ Hill-start assist control does not operate effectively when

- Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on steep inclines and roads covered with ice.
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline, as doing so may lead to an accident.

■ When the TRC/ABS/VSC is activated

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

■ When the TRC/VSC systems are turned off

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to help ensure vehicle stability and driving force, do not turn the TRC/VSC systems off unless necessary.

■ Replacing tires

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.
The ABS, TRC and VSC systems will not function correctly if different tires are installed on the vehicle.
Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further information when replacing tires or wheels.

■ Handling of tires and the suspension

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

■ Secondary Collision Brake (if equipped)

Do not rely solely upon the Secondary Collision Brake. This system is designed to help reduce the possibility of further damage due to a secondary collision, however, that effect changes according to various conditions. Overly relying on the system may result in death or serious injury.

Hybrid vehicle driving tips

For economical and ecological driving, pay attention to the following points:

Using Eco drive mode

When using Eco drive mode, the torque corresponding to the accelerator pedal depression amount can be generated more smoothly than it is in normal conditions. In addition, the operation of the air conditioning system (heating/cooling) will be minimized, improving the fuel economy. (→P.378)

Use of Hybrid System Indicator

The Eco-friendly driving is possible by keeping the indicate of Hybrid System Indicator within Eco area. (→P.126)

Shift lever operation

Shift the shift lever to D when stopped at a traffic light, or driving in heavy traffic etc. Shift the shift lever to P when parking. When using the N, there is no positive effect on fuel consumption. In the N, the gasoline engine operates but electricity cannot be generated. Also, when using the air conditioning system, etc., the hybrid battery (traction battery) power is consumed.

Accelerator pedal/brake pedal operation

- Drive your vehicle smoothly. Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will make more effective use of the electric motor (traction motor) without having to use gasoline engine power.
- Avoid repeated acceleration. Repeated acceleration consumes hybrid battery (traction battery) power, resulting in poor fuel consumption. Battery power can be restored by driving with the accelerator pedal slightly released.

When braking

Make sure to operate the brakes gently and in a timely manner. A greater amount of electrical energy can be regenerated when slowing down.

Delays

Repeated acceleration and deceleration, as well as long waits at traffic lights, will lead to bad fuel economy. Check traffic reports before leaving and avoid delays as much as possible. When driving in

a traffic jam, gently release the brake pedal to allow the vehicle to move forward slightly while avoiding overuse of the accelerator pedal. Doing so can help control excessive gasoline consumption.

Highway driving

Control and maintain the vehicle at a constant speed. Before stopping at a toll booth or similar, allow plenty of time to release the accelerator and gently apply the brakes. A greater amount of electrical energy can be regenerated when slowing down.

Air conditioning

Use the air conditioning only when necessary. Doing so can help reduce excessive gasoline consumption.
In summer: When the ambient temperature is high, use the recirculated air mode. Doing so will help to reduce the burden on the air conditioning system and reduce fuel consumption as well.
In winter: Because the gasoline engine will not automatically cut out until it and the interior of the vehicle are warm, it will consume fuel. Also, fuel consumption can be improved by avoiding overuse of the heater.

Checking tire inflation pressure

Make sure to check the tire inflation pressure frequently. Improper tire inflation pressure can cause poor fuel economy.
Also, as snow tires can cause large amounts of friction, their use on dry roads can lead to poor fuel economy. Use tires that are appropriate for the season.

Luggage

Carrying heavy luggage will lead to poor fuel economy. Avoid carrying unnecessary luggage. Installing a large roof rack will also cause poor fuel economy.

Warming up before driving

Since the gasoline engine starts up and cuts out automatically when cold, warming up the engine is unnecessary. Moreover, frequently driving short distances will cause the engine to repeatedly warm up, which can lead to excess fuel consumption.

Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

Pre-winter preparations

- Use fluids that are appropriate to the prevailing outside temperatures.
  - Engine oil
  - Engine/power control unit coolant
  - Washer fluid
- Have a service technician inspect the condition of the 12-volt battery.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the front tires.

Ensure that all tires are the same size and brand, and that chains match the size of the tires.

WARNING

■ Driving with snow tires

Observe the following precautions to reduce the risk of accidents.
Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the size specified.
- Maintain the recommended level of air pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being used.
- Use snow tires on all, not just some wheels.

■ Driving with tire chains

Observe the following precautions to reduce the risk of accidents.
Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LTA (Lane Tracing Assist) system. (if equipped)

NOTICE

■ Repairing or replacing snow tires

Request repairs or replacement of snow tires from any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or legitimate tire retailers.
This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

Before driving the vehicle

Perform the following according to

the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

When driving the vehicle

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

When parking the vehicle


- Park the vehicle and shift the shift lever to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If the vehicle is parked without setting the parking brake, make sure to block the wheels.

  Failure to do so may be dangerous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.
- If the vehicle is parked without setting the parking brake, confirm that the shift lever cannot be moved out of P*.

*: The shift lever will be locked if it is attempted to be shifted from P to any other position without depressing the brake pedal. If the shift lever can be shifted from P, there may be a problem with the shift lock system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or legitimate tire retailers immediately.

Selecting tire chains

Use the correct tire chain size when mounting the tire chains.
Chain size is regulated for each tire size.

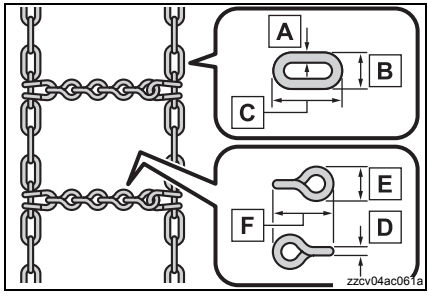

A Side chain (3 mm [0.12 in.] in diameter)

B Side chain (10 mm [0.39 in.] in width)

C Side chain (30 mm [1.18 in.] in length)

D Cross chain (4 mm [0.16 in.] in diameter)

E Cross chain (14 mm [0.55 in.] in width)

F Cross chain (25 mm [0.98 in.] in length)

Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the front tires only. Do not install tire chains on the rear tires.
- Install tire chains on the front tires as tightly as possible. Retighten chains after driving 0.5—1.0 km (1/4—1/2 mile).
- Install tire chains following the instructions provided with the tire chains.

NOTICE

Fitting tire chains

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

5-1. Basic Operations

Audio system types 392

Using the steering wheel audio switches.....393

AUX port/USB port 394

5-2. Using the audio system

Optimal use of the audio system 395

5-3. Using the radio

Radio operation 397

5-4. Playing an audio CD and MP3/WMA discs

CD player operation.....399

5-5. Using an external device

Listening to an iPod 405

Listening to USB memory device 410

Using the AUX port 414

5-6. Using Bluetooth® devices

Bluetooth® audio/phone....415

Using the steering wheel switches.....420

Register a Bluetooth® device 420

5-7. "SETUP" menu

Using the "SETUP" menu ("Bluetooth" menu).....422

Using the "SETUP" menu ("TEL" menu) 424

5-8. Bluetooth® Audio

Operating a Bluetooth® enabled portable player.....428

5-9. Bluetooth® Phone

Making a phone call.....430

When receiving a phone call 431

Speaking on the phone.....431

5-10. Bluetooth®

Bluetooth® 433

Audio system types*

*: If equipped


Overview

▶ Vehicles with navigation/multimedia system

Refer to the “Navigation and multimedia system Owner’s manual”.

▶ Vehicles without navigation/multimedia system

CD player with AM/FM radio

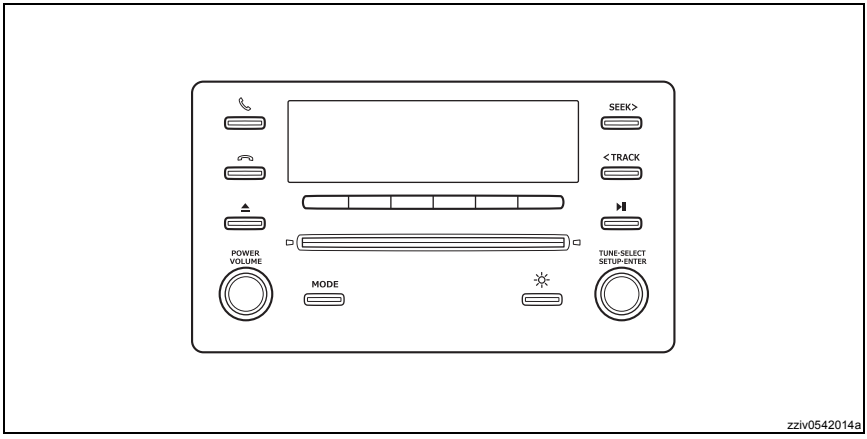

Using cellular phones

Interference may be heard through the audio system’s speakers if a cellular phone is being used inside or close to the vehicle while the audio system is operating.

NOTICE

To prevent 12-volt battery discharge

Do not leave the audio system on longer than necessary with the hybrid system is stopped.

To avoid damaging the audio system


Take care not to spill drinks or other fluids over the audio system.

Using the steering wheel audio switches

Some audio features can be controlled using the switches on the steering wheel.

Operation may differ depending on the type of audio system or navigation system. For details, refer to the manual provided with the audio system or navigation system.

Operating the audio system using the steering wheel switches

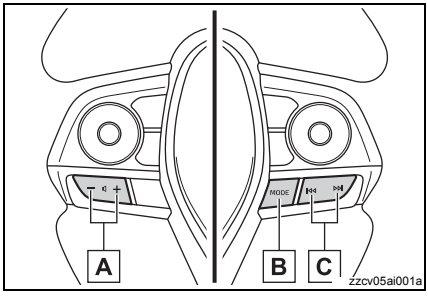

A Volume
- Press: Increases/decreases volume
- Press and hold: Continuously increases/decreases volume

B "MODE" switch
- Press: Turn the power on, select an audio source
- Press and hold until you hear a beep:

Radio or AUX mode: Mute

CD, MP3/WMA/AAC disc, iPod, USB or Bluetooth® audio mode: Pause the current operation.

To cancel the mute or pause, press and hold the switch again.

C Radio mode:
- Press: Select a radio station saved in preset channels.
- Press and hold until you hear a beep: Seek up/down

CD, MP3/WMA/AAC disc, iPod, USB or Bluetooth® audio mode:
- Press: Select a track/file
- Press and hold until you hear a beep: Select a folder or album (MP3/WMA/AAC disc, USB or Bluetooth® audio)

Changing the audio source

Press the "MODE" switch when the audio system is turned on. The audio source changes as follows each time the button is pressed. If a mode cannot be used, it will be skipped.

AM→FM→CD or MP3/WMA/AAC→iPod or USB memory→Bluetooth® audio→AUX


WARNING

To reduce the risk of an accident

Exercise care when operating the audio switches on the steering wheel.

AUX port/USB port

Connect an iPod, USB memory device or portable audio player to the AUX port/USB port as indicated below. Press the “MODE” button to select “iPod”, “USB” or “AUX”.

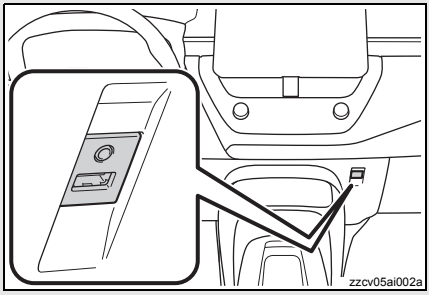

Connecting using the AUX port/USB port

■ **iPod**

Connect an iPod using an iPod cable.

Turn on the power of the iPod if it is not turned on.

■ **USB memory**

Connect the USB memory device.

Turn on the power of the USB memory device if it is not turned on.

■ **Portable audio player**

Connect the portable audio player.

Turn on the power of the portable audio player if it is not turned on.

■ **AUX port**

The AUX port only supports audio input.

WARNING


■ **While driving**

Do not connect a device or operate the device controls.

Optimal use of the audio system

The sound quality, volume balance and ASL settings can be adjusted and the day mode can be selected.

Operation method

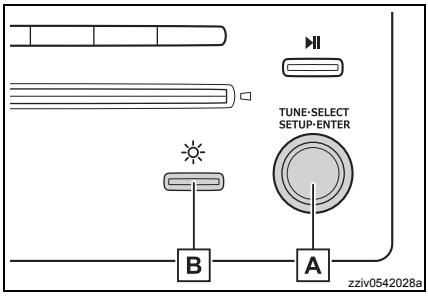

A "TUNE•SELECT" knob

Press: Displays the "SETUP" menu/Selects the mode

Turn: Changes the following settings

- "Sound setting"

→P.395

- "Radio"

→P.397

- "Bluetooth"

→P.422

- "TEL"

→P.424

B Day mode switch

Day mode

When the headlights are turned on, the screen dims.

However, the screen can be switched to day mode by selecting day mode.

The screen will stay in day mode when the headlights are turned on until day mode is selected again.

Using the audio control function

■ Changing sound quality modes

1. Press the "TUNE•SELECT" knob.
2. Turn the knob to select "Sound setting".
3. Press the knob.
4. Turn the knob as corresponds to the desired mode.

"Bass", "Treble", "Fader", "Balance", or "ASL" can be selected.

5. Press the knob.

■ Adjusting sound quality

Turning the "TUNE•SELECT" knob adjusts the level.

Sound quality mode	Mode displayed	Level	Turn to the left	Turn to the right
Bass*	"Bass"	-5 to 5	Low	High
Treble*	"Treble"	-5 to 5		

Sound quality mode	Mode displayed	Level	Turn to the left	Turn to the right
Front/rear volume balance	“Fader”	R7 to F7	Shifts to rear	Shifts to front
Left/right volume balance	“Balance”	L7 to R7	Shifts to left	Shifts to right

*: The sound quality level is adjusted individually in each audio mode.

Press the knob or ▭ (Back) to return to the sound setting menu.

■ Adjusting the Automatic Sound Levelizer (ASL)

When ASL is selected, turn the “TUNE•SELECT” knob to change the amount of ASL.

“Low”, “Mid”, “High” or “Off” can be selected.


ASL automatically adjusts the volume and tone quality according to vehicle speed.

Press the knob or ▭ (Back) to return to the sound setting menu.

Radio operation

Press the “MODE” button until “AM” or “FM” is displayed.

Control panel

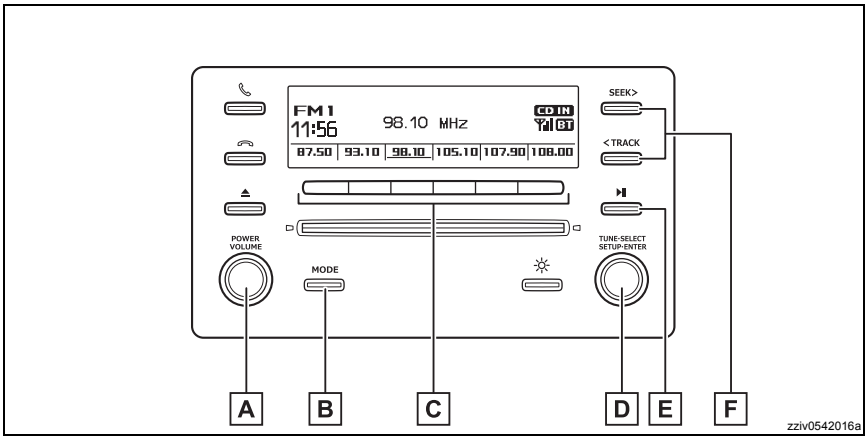

A “POWER VOLUME” knob

Press: Turning the audio system on or off

Turn: Adjusting the volume

B AM/FM mode button

C Station selectors

D “TUNE•SELECT” knob

Adjusting the frequency

E Mute

F Seeking the frequency

Setting station presets

1 Search for the desired stations by turning the “TUNE•SELECT” knob or pressing the “SEEK >” or “< TRACK” button.

2 Press and hold one of the station selectors ▭ to be set until you hear a beep.

■ Reception sensitivity

● Maintaining perfect radio reception at all times is difficult due to the continually changing position of the antenna, differences in signal strength and sur-


rounding objects, such as trains, transmitters, etc.

- The radio antenna is mounted on the roof.

CD player operation

Insert a disc, press the “MODE” button to begin listening to a CD.

Control panel

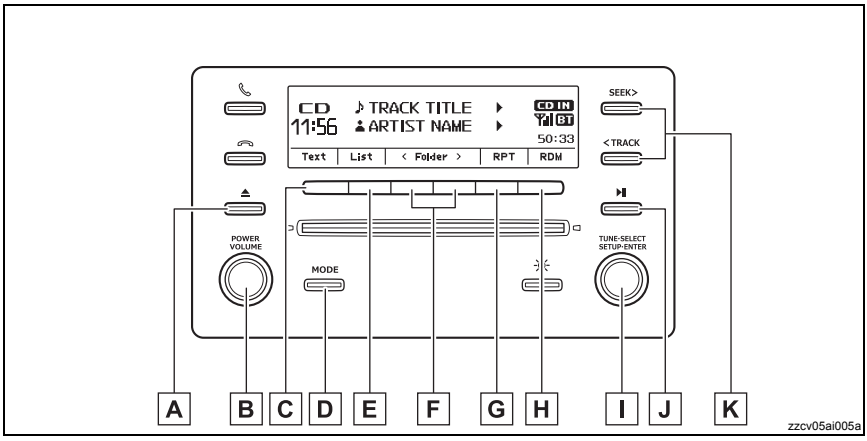

A Disc eject

B “POWER VOLUME” knob

Press: Turning the audio system on or off

Turn: Adjusting the volume

C Displaying text message

D Changing the audio source/playback

E Displaying track/folder list

F Selecting a folder (MP3/WMA/AAC discs only)

G Repeat play

H Random play or back button

I “TUNE•SELECT” knob

Selecting a track/file

J Pause/playback

K Selecting a track, fast-forwarding or rewinding

Loading a CD or MP3/WMA/AAC disc

Insert a disc.

Ejecting a CD or MP3/WMA/AAC disc

Press the disc eject button and remove the disc.

Using the CD player

■ Selecting a track

Turn the “TUNE•SELECT” knob or press the “SEEK >” or “< TRACK” button to move up or down until the desired track number is displayed.

■ Selecting a track from a track list

1 Press ▭ (List).

The track list will be displayed.

2 Turn and press the “TUNE•SELECT” knob to select a track.

To return to the previous display, press ▭(Back).

■ Fast-forwarding and rewinding tracks

Press and hold the “SEEK >” or “< TRACK” button until you hear a beep.

■ Random play

Press ▭ (RDM).

To cancel, press ▭ (RDM) again.

■ Repeat play

Press ▭(RPT).

To cancel, press ▭(RPT) again.

■ Switching the display

Press ▭(Text) to display or hide the CD title.

If there are continuing texts, ▶ is displayed.

Press and hold ▭(Text) until you hear a beep to display the remaining texts.

Playing back MP3/WMA/AAC disc

■ Selecting folders one at a time

Press ▭(<Folder) or ▭(Folder>) to select the desired folder.

■ Selecting a folder and file from folder list

1 Press “TUNE•SELECT” knob or ▭(List).

The folder list will be displayed.

2 Turn and press the knob to select a folder and a file.

To return to the previous display, press ▭(Back).

■ Returning to the first folder

Press and hold ▭(<Folder) until you hear a beep.

■ Selecting a file

Turn the “TUNE•SELECT” knob or press the “SEEK >” or “< TRACK” button to move up or down to select

the desired file.

■ Fast-forwarding and rewinding files

Press and hold the “SEEK >” or “< TRACK” button until you hear a beep.

■ Random play

Pressing ▭(RDM) changes modes in the following order:
Folder random→Disc random→Off

■ Repeat play

Pressing ▭(RPT) changes modes in the following order: File repeat→Folder repeat*→Off

*: Available except when “RDM” (random play) is selected

■ Switching the display

Press ▭(Text) to display or hide the album title.

If there are continuing texts, ▶ is displayed.

Press and hold ▭(Text) until you hear a beep to display the remaining texts.

■ Display

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

■ Error messages

If an error message is displayed, refer to the following table and take the appropriate measures. If the problem is not rectified, take the vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Message	Cause/Correction procedures
“CD check”	The disc may be dirty, damaged or inserted upside-down. Clean the disc or insert it correctly.
“Error 3”	There is a trouble inside the system. Eject the disc.
“Error 4”	An over current error has occurred. Turn the power switch off.
“Wait”	Operation has stopped due to a high temperature inside the player. Wait for a while and then press the “MODE” button. If the CD still cannot be played back, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
“No support”	This indicates that the MP3, WMA or AAC file is not included in the CD.

■ Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



zziv0542001a



zziv0542002a



zziv0542003a



zziv0542004a

CDs with copy-protect features may not play correctly.

■ CD player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected while the CD player is being used.

■ If a CD is left inside the CD player or in the ejected position for extended periods

The CD may be damaged and may not play properly.

■ Lens cleaners

Do not use lens cleaners. Doing so may damage the CD player.

■ MP3, WMA and AAC files

MP3 (MPEG Audio LAYER3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG2 and MPEG4.

There is a limit to the MP3, WMA and AAC file standards and to the media/formats recorded by them that can be used.

● MP3 file compatibility
- Compatible standards

MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)

- Compatible sampling frequencies

MPEG1 LAYER3: 32, 44.1, 48 (kHz)

MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)

- Compatible bit rates (compatible with VBR)

MPEG1 LAYER3: 32-320 (kbps)

MPEG2 LSF LAYER3: 8-160 (kbps)

- Compatible channel modes: stereo, joint stereo, dual channel and monaural

● WMA file compatibility
- Compatible standards

WMA Ver. 7, 8, 9 (9.1/9.2)

- Compatible sampling frequencies

32, 44.1, 48 (kHz)

- Compatible bit rates (only compatible with 2-channel playback)

Ver. 7, 8: CBR 48-192 (kbps)

Ver. 9 (9.1/9.2): CBR 48-320 (kbps)

● AAC file compatibility
- Compatible standards

MPEG4/AAC-LC

- Compatible sampling frequencies

11.025/12/16/22.05/24/32/44.1/48 (kHz)

- Compatible bit rates (compatible with VBR)

8-320 (kbps)

- Compatible channel modes

1ch, 2ch (Dual channel is not supported)

● Compatible media

Media that can be used for MP3, WMA and AAC playback are CD-Rs and CD-RWs.

Playback in some instances may not be possible, depending on the status of the CD-R or CD-RW. Playback may not be possible or the audio may jump if the disc is scratched or marked with finger-

prints.

● Compatible disc formats

The following disc formats can be used.

- Disc formats:
  CD-ROM Mode 1 and Mode 2
  CD-ROM XA Mode 2, Form 1 and Form 2
- File formats:
  ISO9660 Level 1, Level 2, (Romeo, Joliet)
  UDF2.01

MP3, WMA and AAC files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows.

- Maximum directory hierarchy: 8 levels (including the root)
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

● File names

The only files that can be recognized as MP3/WMA/AAC and played are those with the extension .mp3, .wma or .m4a.

● Multi-sessions

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3, WMA and AAC files. However, only the first session can be played.

● ID3, WMA and AAC tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

AAC tags can be added to AAC files, making it possible to record the track title and artist name in the same way as with ID3 tags.

● MP3, WMA and AAC playback

When a disc containing MP3, WMA or AAC files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3, WMA or AAC file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3, WMA or AAC files or create any unnecessary folders.

If the discs contain a mixture of music data and MP3, WMA or AAC format data, only music data can be played.

● Extensions

If the file extensions .mp3, .wma and .m4a. are used for files other than MP3, WMA and AAC files, they will be mistakenly recognized and played as MP3, WMA and AAC files. This may result in large amounts of interference and damage to the speakers.

● Playback

- To play MP3 file with steady sound quality, we recommend a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3, WMA and AAC files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.

- When files other than MP3, WMA or AAC files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

NOTICE


Discs and adapters that cannot be used

Do not use the following types of discs.


Also, do not use 8 cm (3 in.) disc adapters, DualDiscs or printable discs.

Doing so may damage the player and/or the disc insert/eject function.


- Discs that have a diameter that is not 12 cm (4.7 in.)

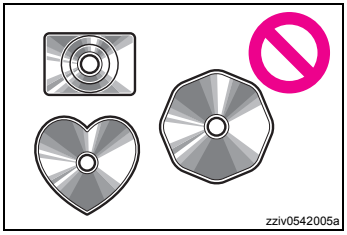


- Low-quality and deformed discs

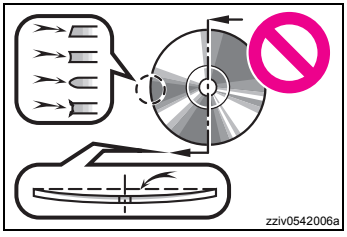

- Discs with a transparent or translucent recording area

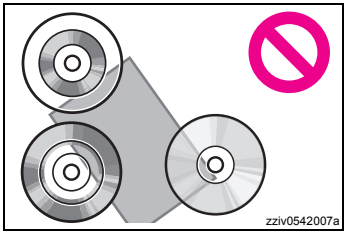

- Discs that have tape, stickers or CD-R labels attached to them, or that have had the label peeled off

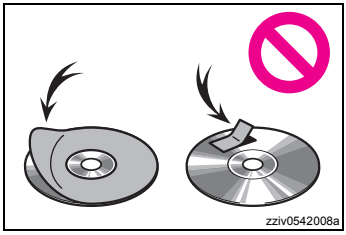

Player precautions

Failure to follow the precautions below may result in serious damage to the discs or the player itself.

- Do not insert anything other than discs into the disc slot.
- Do not apply oil to the player.
- Store discs away from direct sunlight.
- Never try to disassemble any part of the player.


Listening to an iPod

Connecting an iPod enables you to enjoy music from the vehicle speakers. Press the “MODE” button until “iPod” is displayed.

Connecting an iPod

→P.394

Control panel

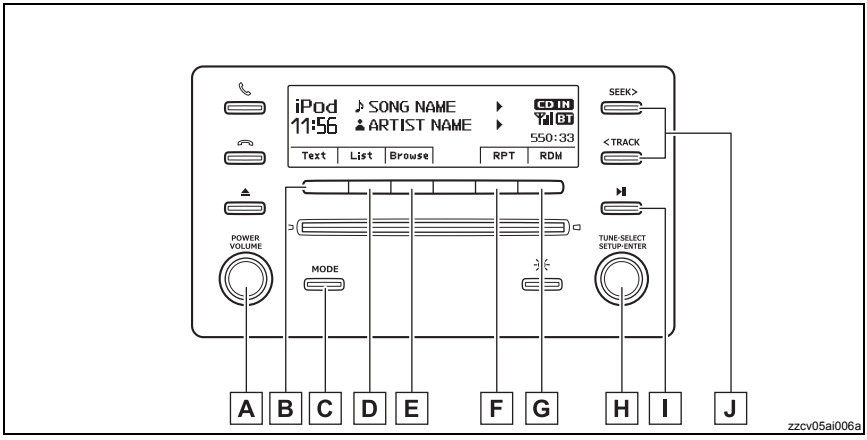

A “POWER VOLUME” knob

Press: Turning the audio system on or off

Turn: Adjusting the volume

B Displaying text message

C Changing the audio source/playback

D Displaying a song list

E Displaying play mode

F Repeat play

G Random play or back button

H “TUNE•SELECT” knob

Press: Displaying list of the current folder

Turn: Selecting an iPod menu/song

I Pause/playback

J Selecting a song, fast-forwarding or rewinding

Selecting a play mode

1 Press ▭ (Browse) to select iPod play mode.

2 Turning the “TUNE•SELECT” knob clockwise changes the play mode in the following order:

“Playlists”→“Artists”→“Albums”→“Songs”→“Genres”→“Composers”→“Radio”→“Audiobooks”→“Podcasts”→“iTunes U”

3 Press the knob to select the desired play mode.

■ Play mode list

Play mode	First selection	Second selection	Third selection	Fourth selection
“Playlists”	Playlists select	Songs select	-	-
“Artists”	Artists select	Albums select	Songs select	-
“Albums”	Albums select	Songs select	-	-
“Songs”	Songs select	-	-	-
“Genres”	Genre select	Artists select	Albums select	Songs select
“Composers”	Composers select	Albums select	Songs select	-
“Radio”	Stations	-	-	-
“Audiobooks”	Audiobooks select	Chapter select	-	-
“Podcasts”	Programs	Episodes select	-	-
“iTunes U”	Courses	Episodes select	-	-

■ Selecting a list

1 Turn the “TUNE•SELECT” knob to display the first selection list.

2 Press the knob to select the desired item and display the second selection list.

3 Repeat the same procedure to select the desired item.

To return to the previous selection list, press ▭ (Back).

Press ▭ (Play) to play the desired selection.

Selecting songs

Turn the “TUNE•SELECT” knob or press the “SEEK >” or “< TRACK” button to select the desired song.

Selecting a song from the song list

1 Press ▭(List).

The song list will be displayed.

2 Turn the “TUNE•SELECT” knob to select a song.

3 Press the knob to play the song.

To return to the previous display, press ▭(Back).

Fast-forwarding and rewinding songs

Press and hold the “SEEK >” or “< TRACK” button until you hear a beep.

Repeat play

Pressing ▭(RPT) changes modes in the following order: Track repeat→Album repeat*→Off

*: Album repeat mode may not be available depending on the iPod devices you have.

Random play

Pressing ▭(RDM) changes modes in the following order: Track random→Album random→Off

Switching the display

Press the ▭(Text) to display or hide the album title.

If there are continuing texts, ▶ is displayed.

Press and hold ▭(Text) until you hear a beep to display the remaining texts.

About iPod

Made for iPhone | iPod

zzcn03ac023a

- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

iPod functions

- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume play from the same point in which it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available. Disconnecting the device and reconnecting it once again may resolve some malfunctions.
- While connected to the system, the iPod cannot be operated with its own controls. It is necessary to use the controls of the vehicle’s audio system

instead.

■ **iPod problems**

To resolve most problems encountered when using your iPod, disconnect your iPod from the vehicle iPod connection and reset it.

For instructions on how to reset your iPod, refer to your iPod Owner's Manual.

■ **Display**

→P.401

■ **Error messages**

If an error message is displayed, refer to the following table and take the appropriate measures. If the problem is not rectified, take the vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Message	Cause/Correction procedures
"iPod error"	This indicates that the data in the iPod cannot be read.
"Error 3"	This indicates that the iPod may be malfunctioning.
"Error 4"	This indicates that an over current error has occurred.
"Error 5"	This indicates that an iPod communication error has occurred.
"Error 6"	This indicates that an authentication error has occurred.
"No songs"	This indicates that there is no music data in the iPod.
"No playlists"	This indicates that some available songs are not found in a selected playlist.
"Update your iPod"	This indicates that the version of the iPod is not compatible. Upgrade your iPod software to the latest version.

■ **Compatible models**

The following devices can be used with this system.

● Made for
- iPhone 7
- iPhone 7 Plus
- iPhone SE
- iPhone 6s
- iPhone 6s Plus
- iPhone 6
- iPhone 6 Plus
- iPhone 5s
- iPhone 5c
- iPhone 5
- iPhone 4s
- iPod touch (6th generation)
- iPod touch (5th generation)
- iPod nano (7th generation)

This system only supports audio playback.

Depending on differences between models or software versions etc., some models might be incompatible with this system.

Items related to standards and limitations are as follows:

● Maximum number of lists in device: 8000

● Maximum number of songs in device: 65535

● Maximum number of songs per list: 8000

WARNING

■ **While driving**

Do not connect iPod or operate the controls. Doing so may cause an accident, resulting in death or serious injury.

NOTICE

■ **To prevent damage to iPod**

- Do not leave iPod in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the iPod.
- Do not push down on or apply unnecessary pressure to the iPod while it is connected as this may damage the iPod or its terminal.
- Do not insert foreign objects into the port as this may damage the iPod or its terminal.


Listening to USB memory device

Connecting a USB memory enables you to enjoy music from the vehicle speakers. Press the “MODE” button until “USB” is displayed.

Connecting a USB memory

→P.394

Control panel

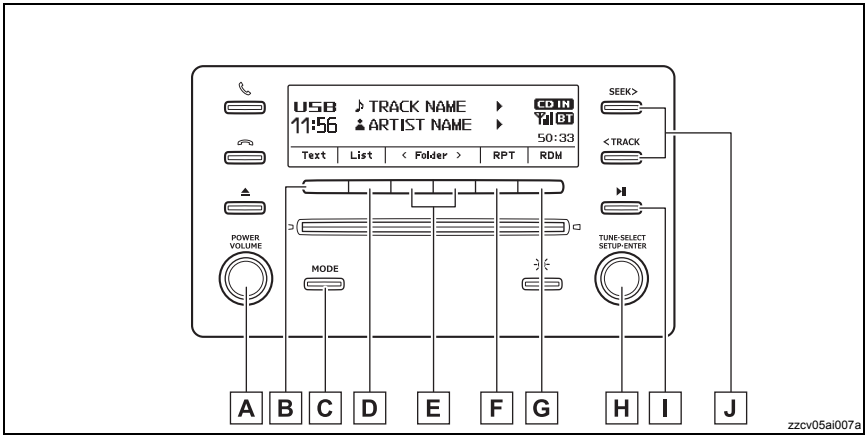

A “POWER VOLUME” knob

Press: Turning the audio system on or off

Turn: Adjusting the volume

B Displaying text message

C Changing the audio source/playback

D Displaying folder list

E Selecting a folder

F Repeat play

G Random play or back button

H “TUNE•SELECT” knob

Selecting a file

I Pause/playback

J Selecting a file, fast-forwarding or rewinding

Using a USB memory

■ Selecting folders one at a time

Press ▭(<Folder) or ▭(Folder>) to select the desired folder.

■ Selecting a folder and file from folder list

1 Press ▭(List).

The folder list will be displayed.

2 Turn and press the knob to select a folder and file.

To return to the previous display, press ▭(Back).

■ Returning to the first folder

Press and hold ▭(<Folder) until you hear a beep.

■ Selecting a file

Turn the “TUNE•SELECT” knob or press the “SEEK >” or “< TRACK” button to move up or down to select the desired file.

■ Fast-forwarding and rewinding files

Press and hold the “SEEK >” or “< TRACK” button until you hear a beep.

■ Random play

Pressing ▭(RDM) changes modes in the following order: Folder random→All folder random→Off

■ Repeat play

Pressing ▭(RPT) changes modes in the following order: File repeat→Folder repeat*→Off

*: Available except when “RDM” (random play) is selected

■ Switching the display

Press ▭(Text) to display or hide the album title.

If there are continuing texts, ▶ is displayed.

Press and hold ▭(Text) until you hear a beep to display the remaining texts.

■ USB memory functions

- Depending on the USB memory that is connected to the system, the device itself may not be operable and certain functions may not be available. If the device is inoperable or a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- If the USB memory still does not begin operation after being disconnected and reconnected, format the memory.

■ Display

→P.401

■ Error messages

If an error message is displayed, refer to the following table and take the appropriate measures. If the problem is not rectified, take the vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Message	Cause/Correction procedures
“USB error”	This indicates that the data in the USB memory cannot be read.
“Error 3”	This indicates that the USB memory may be malfunctioning.
“Error 4”	This indicates that an over current error has occurred.
“Error 5”	This indicates that the USB memory communication error has occurred.
“No music”	This indicates that no MP3/WMA/AAC files are included on the USB memory device.
“Hubs are not supported”	This indicates that the hub connect error occurs.

■ **USB memory**

● Compatible devices

USB memory that can be used for MP3, WMA and AAC playback

● Compatible device formats

The following device formats can be used:

- USB communication formats: USB2.0 FS (12mbps)
- File formats: FAT16/32 (Windows)
- Correspondence class: Mass storage class

MP3, WMA and AAC files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels (including the root)
- Maximum number of folders in a device: 3000
- Maximum number of files in a device: 9999
- Maximum number of files per folder: 255

● MP3, WMA and AAC files

MP3 (MPEG Audio LAYER3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG2 and MPEG4.

There is a limit to the MP3, WMA and AAC file standards and to the media/formats recorded by them that can be used.

● MP3 file compatibility

- Compatible standards
  MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
- Compatible sampling frequencies
  MPEG1 LAYER3: 32, 44.1, 48 (kHz)
  MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR)
  MPEG1 LAYER3: 32-320 (kbps)
  MPEG2 LSF LAYER3: 8-160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monau-

ral

● WMA file compatibility
- Compatible standards
  WMA Ver. 7, 8, 9 (9.1/9.2)
- Compatible sampling frequencies
  32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)
  Ver. 7, 8: CBR 48-192 (kbps)
  Ver. 9 (9.1/9.2): CBR 48-320 (kbps)

● AAC file compatibility
- Compatible standards

MPEG4/AAC-LC

- Compatible sampling frequencies

11.025/12/16/22.05/24/32/44.1/48(kHz)

- Compatible bit rates (compatible with VBR)

8-320(kbps)

- Compatible channel modes

1ch, 2ch (Dual channel is not supported)

● File names

The only files that can be recognized as MP3/WMA/AAC and played are those with the extension .mp3, .wma or .m4a.

● ID3, WMA and AAC tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3, 2.4 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

AAC tags can be added to AAC files, making it possible to record the track title and artist name in the same way as with ID3 tags.

● MP3, WMA and AAC playback
- When a device containing MP3, WMA or AAC files is connected, all files in the USB memory device are checked. Once the file check is finished, the first MP3, WMA or AAC file is played. To make the file check finish more quickly, we recommend that you do not include any files other than MP3, WMA or AAC files or create any unnecessary folders.
- When the USB device is connected and the audio source is changed to USB memory mode, the USB device will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB memory will resume play from the same point in which it was last used.

● Extensions

If the file extensions .mp3, .wma and .m4a. are used for files other than MP3, WMA and AAC files, they will be skipped (not played).

● Playback
- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- There is a wide variety of freeware and other encoding software for MP3, WMA and AAC files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

WARNING

■While driving

Do not connect USB memory or operate the controls. Doing so may cause an accident, resulting in death or serious injury.

NOTICE

■ **To prevent damage to USB memory**

- Do not leave USB memory in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the USB memory.
- Do not push down on or apply unnecessary pressure to the USB memory while it is connected as this may damage the USB memory or its terminal.
- Do not insert foreign objects into the port as this may damage the USB memory or its terminal.

Using the AUX port

This port can be used to connect a portable audio device and listen to it using the vehicle's speakers. Press the "MODE" button until "AUX" is displayed.

Connecting a portable player

→P.394

■ **Operating portable audio devices connected to the audio system**

The volume can be adjusted using the vehicle audio controls. All other adjustments must be made on the portable audio device itself.

■ **When using a portable audio device connected to the power outlet**

Noise may occur during playback. Use the power source of the portable audio device.

Bluetooth® audio/phone

The following can be performed using Bluetooth® wireless communication:

Bluetooth® audio

The Bluetooth® audio system enables you to enjoy music played on a portable digital audio player (portable player) from the vehicle speakers via wireless communication.

This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.

Bluetooth® phone (hands-free phone system)

This system supports Bluetooth®, which allows you to make or receive calls without using cables to connect a cellular phone and the system, and without operating the cellular phone.

Device registration/connection flow

1 Register the Bluetooth® device to be used with audio system (→P.420)


2 Select the Bluetooth® device to be used (→P.422, 422)

3 Set automatic connection of the device (→P.423)

4 Check Bluetooth® connection condition (→P.415)

- To be used for audio: →P.428
- To be used for hands-free phone: →P.430

Audio unit

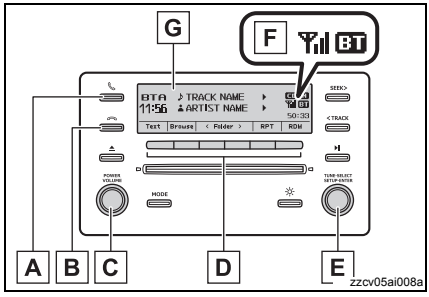

A Off-hook button

Turns the hands-free system on/starts a call

B On-hook button

Turns the hands-free system off/ends a call/refuses a call

C “POWER VOLUME” knob

Press: Turning the audio system on or off

Turn: Adjusting the volume

D Function button

E “TUNE•SELECT” knob

Displays setup menu or selects items such as menu and number

Turn: Selects an item

Press: Inputs the selected item


F Bluetooth® connection condition

If “BT” is not displayed, the Bluetooth® audio/phone cannot be used.

G Display

A message, name, number, etc. is displayed.

■ **Microphone**

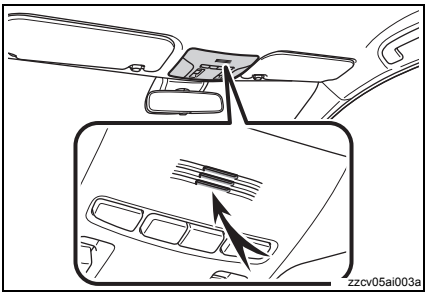

Menu list of the Bluetooth® audio/phone

To enter a menu, press the “TUNE•SELECT” knob and navigate menus by using the knob.

▶ “Bluetooth” menu

First menu	Second menu	Third menu	Operation details
“Bluetooth”	“Pairing”	-	Registering a Bluetooth® device (→P.420)
	“List phone”	-	Listing the registered cellular phones (→P.422)
	“List audio”	-	Listing the registered portable players (→P.422)
	“Passkey”	-	Changing the passkey (→P.423)
	“BT power On” “BT power Off”	-	Setting automatic connection of the device on or off (→P.423)
	“Bluetooth info”	“Device name” “Device address”	Displaying the device status (→P.423)
	“Display setting On” “Display setting Off”	-	Setting the automatic connection confirmation display to on or off (→P.423)
	“Reset”	-	Initializing the settings (→P.423)

▶ “TEL” menu

First menu	Second menu	Third menu	Operation details
“TEL”	“Phonebook”	“Auto transfer On” “Auto transfer Off”	Setting automatic contact/history transfer on or off (→P.424)
		“Add contacts”	Adding a new number (→P.424)
		“Delete contacts”*	Deleting a contact stored in the phonebook (→P.425)
		“Sort contacts”	Sorting contacts by the first name or last name field (→P.425)
		“Transfer history”	Transferring the call histories (→P.425)
		“Delete call history”*	Deleting a number stored in the call history (→P.425)
	“Favourites”	“Add favourites”	Adding a new contact to the favorite list (→P.426)
		“Delete favourites”	Deleting a contact from the favorite list (→P.426)
	“HF sound setting”	“Call volume”	Setting call volume (→P.427)
		“Ringtone volume”	Setting ring tone volume (→P.427)
		“Ringtone”	Setting the ring tone (→P.427)

*: For PBAP compatible Bluetooth® phones, this function is available when “Auto transfer On” is set to off.


■ Bluetooth® audio/phone system functions

Depending on the Bluetooth® device, certain functions may not be available.

Using the steering wheel switches

The steering wheel switches can be used to operate a connected cellular phone, or portable digital audio player (portable player).

Operating Bluetooth® phone using the steering wheel switches

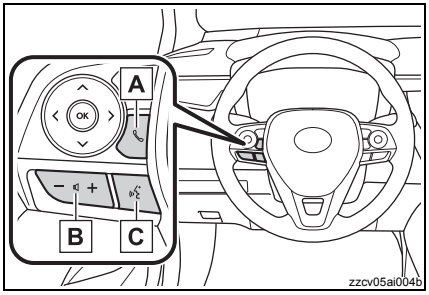

A Phone switch

- If the switch is pressed during a call, the call will end.
- If the switch is pressed when an incoming call is received, the call will be answered.
- If the switch is pressed when a call waiting call is received, the waiting call will be answered.

B Volume control switch

- Press the “+” side to increase the volume.
- Press the “-” side to decrease the volume.

C Talk switch

A message will be displayed.

Register a Bluetooth® device

Before using the Bluetooth® audio/phone, it is necessary to register a Bluetooth® device in the system. You can register up to 5 Bluetooth® devices.

How to register a Bluetooth® device

1. Press the “TUNE•SELECT” knob and select “Bluetooth” using the knob.
2. Press the knob and select “Pairing” using the knob.

A passkey will be displayed.

3. SSP (Secure Simple Pairing) incompatible Bluetooth® devices: Input the passkey into the device.
3. SSP (Secure Simple Pairing) compatible Bluetooth® devices: Select “Yes” to register the device. Depending on the type of device, it may register automatically.

If a Bluetooth® device has both music player and cellular phone functions, both functions will be registered at the same time. When deleting the device, both functions will be deleted at the same time.

If the off-hook button is pressed and the “TEL” mode is entered

when no phones have been registered, the registration screen will be automatically displayed.

Using the “SETUP” menu (“Bluetooth” menu)

Registering a Bluetooth® device in the system allows the system to function. The following functions can be used for registered devices. To enter the setup menu, press the “TUNE•SELECT” knob and select “Bluetooth” using the knob.

Registering a Bluetooth® device

Select “Pairing” using the “TUNE•SELECT” knob, and perform the procedure for registering a device. (→P.420)

Listing the registered cellular phones

Select “List phone” using the “TUNE•SELECT” knob. The list of registered cellular phones will be displayed.

▶ Connecting the registered cellular phone to the audio system

1 Select the name of the cellular phone to be connected using the “TUNE•SELECT” knob.

2 Select “Select” using the knob.

▶ Deleting a registered cellular phone

1 Select the name of the cellular phone to be deleted using the “TUNE•SELECT” knob.

2 Select “Delete” using the knob.

3 Press ▭(Yes).

▶ Disconnecting the registered cellular phone from the audio system

1 Select the name of the cellular phone to be disconnected using the “TUNE•SELECT” knob.

2 Select “Disconnect” using the knob.

3 Press ▭(Yes).

Listing the registered portable players

Select “List audio” using the “TUNE•SELECT” knob. The list of registered portable players will be displayed.

▶ Connecting the registered portable player to the audio system

1 Select the name of the portable player to be connected using the “TUNE•SELECT” knob.

2 Select “Select” using the knob.

▶ Deleting the registered portable player

1 Select the name of the portable player to be deleted using the “TUNE•SELECT” knob.

2 Select “Delete” using the knob.

3 Press ▭ (Yes).

▶ Disconnecting the registered portable player from the audio system

1 Select the name of the portable player to be disconnected using the “TUNE•SELECT” knob.

2 Select “Disconnect” using the knob.

3 Press ▭ (Yes).

▶ Selecting the connection method

1 Select the name of the desired portable player using the “TUNE•SELECT” knob.

2 Select “Connection method” using the knob.

3 Select “From vehicle” or “From audio” using the knob.

Changing the passkey

1 Select “Passkey” using the “TUNE•SELECT” knob.

2 Select a 4 to 8-digit passkey using the knob.

Input the number 1 digit at a time.

3 When the entire number to be registered as a passkey has been input, press ▭ (Enter).

If the passkey to be registered has 8 digits, pressing ▭ (Enter) is not necessary.

Setting automatic connection of the device on or off

If “BT power Off” is set to on, the registered device will be connected automatically when the power switch is turned to ACC.

Select “BT power On” or “BT power Off” using the “TUNE•SELECT” knob.

Displaying the device status

Select “Bluetooth info” using the “TUNE•SELECT” knob.

▶ Displaying the device name

Select “Device name” using the “TUNE•SELECT” knob.

▶ Displaying the device address

Select “Device address” using the “TUNE•SELECT” knob.

Setting the automatic connection confirmation display to on or off

If the “Display setting” is set to on, the portable player connection status will be displayed when the power switch is turned to ACC.

Select “Display setting On” or “Display setting Off” using the “TUNE•SELECT” knob.

Initialization

Select “Reset” using the “TUNE•SELECT” knob.

▶ Initializing the “HF sound setting”

Select “Sound setting” using the “TUNE•SELECT” knob and press ▭(Yes).

For details about “HF sound setting”: →P.427

▶ Initializing the device information

Select “Car device info” using the “TUNE•SELECT” knob and press ▭(Yes).

Automatic connection of a portable device, automatic connection confirmation display and the passkey will be initialized.

▶ Initializing the all settings

Select “Reset All” using the “TUNE•SELECT” knob and press ▭(Yes).

Using the “SETUP” menu (“TEL” menu)

To enter the setup menu, press the “TUNE•SELECT” knob and select “TEL” using the knob.

Setting automatic contact/history transfer

The automatic transfer function is available for PBAP compatible Bluetooth® phones only.

1 Select “Phonebook” using the “TUNE•SELECT” knob.

2 Select “Auto transfer On” or “Auto transfer Off” using the knob.

When set to on, the phone’s contact data and history are automatically transferred.

Adding a new phone number

1 Select “Phonebook” using the “TUNE•SELECT” knob.

2 Select “Add contacts” using the knob.

▶ Transferring all contacts from the cellular phone

3 Select “Overwrite all” using the “TUNE•SELECT” knob and press ▭(Yes).

▶ Transferring one contact from the cellular phone

3 Select “Add one contact” using the “TUNE•SELECT” knob and press ▭(Yes).

Deleting a registered phone number

1 Select “Phonebook” using the “TUNE•SELECT” knob.

2 Select “Delete contacts” using the knob.

3 Select the desired phone number using the knob and press ▭(Yes).

To delete all the registered phone numbers, press ▭(All) and then press ▭(Yes).

Press ▭ (A-Z) to display the registered names in alphabetical order of the initial.

Changing the sorting order of the contacts

1 Select “Phonebook” using the “TUNE•SELECT” knob.

2 Select “Sort contacts” using the knob.

3 Select “Sort by first” or “Sort by last” using the knob.

Transferring call histories

This function is available for PBAP compatible Bluetooth® phones only.

1 Select “Phonebook” using the “TUNE•SELECT” knob.

2 Select “Transfer history” using the knob and press ▭(Yes).

Deleting call histories

1 Select “Phonebook” using the “TUNE•SELECT” knob.

2 Select “Delete call history” using the knob.

▶ Deleting outgoing call history

3 Select “Outgoing calls” using the “TUNE•SELECT” knob.

4 Select the desired phone number using the knob and press ▭(Yes).

To delete all outgoing call history data, press ▭(All) and then press ▭(Yes).

▶ Deleting incoming call history

3 Select “Incoming calls” using the “TUNE•SELECT” knob.

4 Select the desired phone number using the knob and press ▭(Yes).

To delete all incoming call history data, press ▭(All) and then press ▭(Yes).

▶ Deleting missed call history

3 Select “Missed calls” using the “TUNE•SELECT” knob.

4 Select the desired phone number using the knob and press ▭(Yes).

To delete all missed call history data, press ▭(All) and then press ▭(Yes).

▶ Deleting a number from all call histories (Outgoing calls, Incoming calls and Missed calls)

3 Select “All calls” using the “TUNE•SELECT” knob.

4 Select the desired phone number using the knob and press ▭(Yes).

To delete all of the call histories data, press ▭(All) and then press ▭(Yes).

Registering favorites

Up to 15 contacts can be registered in the favorites list.

■ Registering the contacts from the “SETUP” mode

1 Press the “TUNE•SELECT” knob.

2 Select “TEL” using the knob.

3 Select “Favourites” using knob.

4 Select “Add favourites” using the knob.

Press ▭ (A-Z) to display the registered names in alphabetical order of the initial.

5 Select desired contact using the knob.

■ Registering the contacts from the “TEL” mode

1 Press the off-hook button.

2 Select “Phonebook”, “All calls”, “Missed calls”, “Incoming calls” or “Outgoing calls” using the “TUNE•SELECT” knob.

3 Select a desired number using the knob.

4 Press ▭(Add favourites).

● When 15 contacts have already been registered to the favorites list, a registered contact needs to be replaced.

1 Select the contact to be replaced using the “TUNE•SELECT” knob.

2 Select ▭(Yes) when the confirmation screen appears.

Deleting favorites

■ Deleting the contacts from the “SETUP” mode

1 Press the “TUNE•SELECT” knob.

2 Select “TEL” using the knob.

3 Select “Favourites” using the knob.

4 Select “Delete favourites” using the knob.

5 Select desired contact using the knob.

You can select all contacts by selecting ▭(All).

6 Select ▭(Yes) when the confirmation screen appears.

■ Deleting the contacts from the “TEL” mode

1 Press the off-hook button.

2 Select “Favourites” using the “TUNE•SELECT” knob.

3 Select a desired number using the knob.

4 Press ▭ (Delete favourites).

5 Select desired contact using the knob.

Press ▭ (All) to delete all favorites.

6 Select ▭ (Yes) when the confirmation screen appears.

Setting call volume

1 Select “HF sound setting” using the “TUNE•SELECT” knob.

2 Select “Call volume” using the knob.

3 Change the call volume.

To decrease the volume: Turn the knob counterclockwise.

To increase the volume: Turn the knob clockwise.

To set the volume, press ▭ (Back).

Setting ring tone volume

1 Select “HF sound setting” using the “TUNE•SELECT” knob.

2 Select “Ringtone volume” using the knob.

3 Change the ring tone volume.

To decrease the volume: Turn the knob counterclockwise.

To increase the volume: Turn the knob clockwise.

To set the volume, press ▭ (Back).

Setting ring tone

1 Select “HF sound setting” using the “TUNE•SELECT” knob.

2 Select “Ringtone” using the knob.

3 Using the knob, select a ring tone (1 - 3 or “From phone”). To set the selected ring tone, press ▭ (Back).

■ Phone number

Up to 5000 names (maximum of 1000 names per device) can be stored.

■ Call history

Up to 10 numbers can be stored in each of the outgoing, incoming and missed call history memories.

■ Limitation of number of digits


A phone number that exceeds 24 digits cannot be registered.

■ Bluetooth® phone system functions

Certain functions may not be available during driving.

Operating a Bluetooth® enabled portable player

Control panel

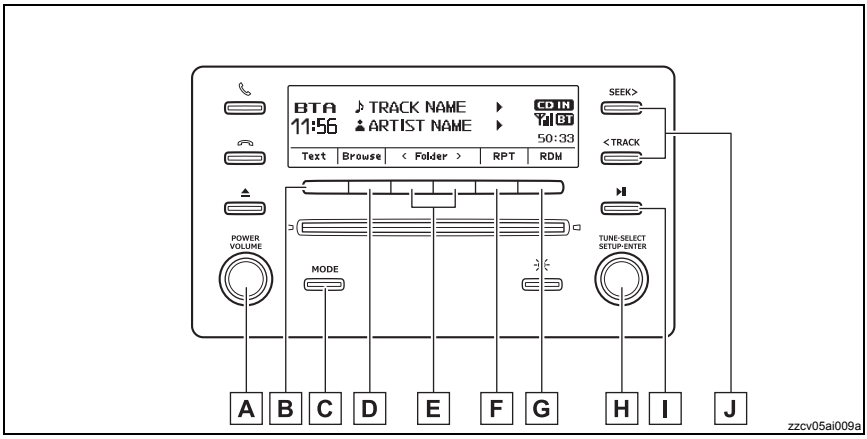

A "POWER VOLUME" knob

Press: Turning the audio system on or off

Turn: Adjusting the volume

B Displaying text message

C Changing the audio source/playback

D Displaying play mode

E Selecting an album

F Repeat play

G Random play or back button

H "TUNE•SELECT" knob

Press: Displaying list of the current folder

Turn: Selecting an item

I Pause/playback

J Selecting a track, fast-forwarding or rewinding

Selecting an album

Press ▭(<Folder) or ▭(Folder>) to select desired album.

Selecting a track

Turn the "TUNE•SELECT" knob or press the "SEEK >" or "< TRACK"

button to move up or down.

Fast-forwarding and rewinding tracks

Press and hold the “SEEK >” or “< TRACK” button until you hear a beep.

Repeat play

Pressing ▭(RPT) changes modes in the following order: Track repeat→Album repeat*→Off

*: Available except when “RDM” (random play) is selected

Random play

Pressing ▭(RDM) changes modes in the following order: Album random→All album random→Off

Selecting a play mode

1 Press ▭(Browse).

The playlist will be displayed.

2 Turn the “TUNE•SELECT” knob to display the folder/file list.

3 Press the knob to select the desired item.

4 Repeat the same procedure to select the desired file.

To return to the previous display, press ▭(Back).

Switching the display

Press ▭(Text) to display or hide the album title.

If there are continuing texts, ▶ is displayed.

Press and hold ▭(Text) until you hear a beep to display the remaining texts.

■ Bluetooth® audio system functions

Depending on the portable player that is connected to the system, certain functions may not be available.

■ Display

→P.401

Making a phone call

To enter the “TEL” mode, press the off-hook button.

Dialing from the phonebook

1 Select “Phonebook” using the “TUNE•SELECT” knob.

2 Select the desired name using the knob and press the off-hook button.

Press ▭ (A-Z) to display the registered names in alphabetical order of the initial.

Dialing from favorites

1 Select “Favourites” using the “TUNE•SELECT” knob.

2 Select the desired name using the knob and press the off-hook button.

Dialing by entering the number

1 Select “Dial by number” using the “TUNE•SELECT” knob.

2 Enter the phone number and press the off-hook button.

Dialing from call histories

1 Select “All calls”, “Missed calls”, “Incoming calls” or “Outgoing calls” using the “TUNE•SELECT” knob.

2 Select a desired number using the knob and press the off-hook button.

The following operations can be performed:

- Registering a number as a Favorite

→P.426

- Deleting the selected number

Press ▭ (Delete) and press ▭ (Yes).

When receiving a phone call

Answering the phone

Press the off-hook button.

Refusing the call

Press the on-hook button.

Receiving a call when on another call

Press the off-hook button.

Pressing the off-hook button again returns you to the previous call.

Adjusting the ring tone volume when receiving a call

To decrease the volume: Turn the “POWER VOLUME” knob counterclockwise.

To increase the volume: Turn the “POWER VOLUME” knob clockwise.

Speaking on the phone

Transferring a call

A call can be transferred between the cellular phone and system while dialing, receiving a call, or during a call. Use one of the following methods:

a. Operate the cellular phone.

Refer to the manual that comes with the cellular phone for the operation of the phone.

b. Press ▭(TEL).*

*: This operation can be performed only when transferring a call from the cellular phone to the system during a call.

Muting your voice

Press ▭(Mute).

Press ▭(Unmute) to cancel the mute.

Inputting tones

This operation cannot be performed while driving.

1. Press ▭ (0-9)
2. Turn the “TUNE•SELECT” knob to select the desired number.
3. Press the knob to decide the number.
4. Press ▭(Send) to send tones.

Pressing ▭(Back) preserves the num-

ber and returns to the previous screen.

Pressing ▭(Exit) deletes the number and go to “Enter a number” screen.

▶ Phone number containing a “p” symbol

When the “p” symbol is dialed in an outgoing call, there will be a pause for 2 seconds before the following digits are dialed automatically.

▶ Phone number containing a “w” symbol

When the “w” symbol is dialed in an outgoing call, you need to press ▭(Send) again to dial following digits.

This operation can be performed while driving.

Adjusting the outgoing volume

Your voice volume that the other party hears from their speaker can be adjusted.

1 Press ▭(Send vol)

2 Use the “TUNE•SELECT” knob to adjust the volume. (-5 to +5)

Setting call volume

To decrease the volume: Turn the “POWER VOLUME” knob counterclockwise.

To increase the volume: Turn the “POWER VOLUME” knob clockwise.

■ When talking on the phone

- Do not talk simultaneously with the other party.
- Keep the volume of the received voice down. Otherwise, voice echo will increase.

■ Automatic volume adjustment

When vehicle speed is 80 km/h (50 mph) or more, the volume automatically increases. The volume returns to the previous volume setting when vehicle speed drops to 70 km/h (43 mph) or less.

■ Phone call system functions

Depending on the cellular phone, certain functions may not be available.

■ Situations where the system may not recognize your voice

- When driving on a rough road
- When driving at high speeds
- When air is blowing out of the vents onto the microphone
- When the air conditioning fans emits a loud noise

Bluetooth®

Overview

■ When using the Bluetooth® audio/phone

- In the following situations, the system may not function.
  - The portable player does not support Bluetooth®
  - The cellular phone is located outside the service area
  - The Bluetooth® device is switched off
  - The Bluetooth® device has a low battery
  - The Bluetooth® device is not connected to the system
  - The Bluetooth® device is behind the seat or in the glove box or console box, or metal material covers or touches the device
- There may be a delay if a cellular phone connection is made during Bluetooth® audio play.
- Depending on the type of portable audio player that is connected to the system, operation may differ slightly and certain functions may not be available.
- This system is not guaranteed to operate with all Bluetooth® devices.

■ When transferring ownership of the vehicle

Be sure to initialize the system to prevent personal data from being improperly accessed. (→P.423)

■ About Bluetooth®

Bluetooth is a registered trademark of Bluetooth SIG, Inc.



■ Compatible models

The Bluetooth® audio system supports portable audio players with the following specifications

- Bluetooth® specifications: Ver. 1.1 or higher (Recommended: Ver. 4.1)
- Profiles:
  - A2DP (Advanced Audio Distribution Profile) Ver. 1.0, or higher (Recommended: Ver. 1.3)

This is a profile to transmit stereo audio or high quality sound to the audio system.

  - AVRCP (Audio/Video Remote Control Profile) Ver. 1.0 or higher (Recommended: Ver. 1.6)

This is a profile to allow remote control the A/V equipment.

However, please note that some functions may be limited depending on the type of portable audio player connected.

The hands-free system supports cellular phones with the following specifications.

- Bluetooth® specifications: Ver.

2.0 or higher (Recommended: Ver. 4.1 +EDR or higher)

- Profiles:

• HFP (Hands Free Profile) Ver. 1.0 or higher (Recommended: Ver. 1.7)

This is a profile to allow hands-free phone calls using a cellular phone or head set. It has outgoing and incoming call functions.

• OPP (Object Push Profile) Ver. 1.1 or higher (Recommended: Ver. 1.2)

This is a profile to transfer phonebook data. When a Bluetooth® compatible cellular phone has both PBAP and OPP, OPP cannot be used.

• PBAP (Phone Book Access Profile) Ver. 1.0 or higher (Recommended: Ver. 1.2)

This is a profile to transfer phonebook data.

■ Certification

Information of the radio device: Type FT0117A

1. Name and postal address of the manufacturer

   Name: DENSO TEN Limited
   Address: 2-28, Gosho-dori 1-chome, Hyogo-ku, Kobe, 652-8510 Japan

2. Simplified EU declaration of conformity

С настоящото DENSO TEN Limited декларира, че този тип радиосъоръжение FT0117A е в съответствие с Директива 2014/53/ЕС.
Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
https://www.denso-ten.com/support/regulation/eu_doc/

Функция	Работна честотна лента	Максимална радиочестотна мощност
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Ovim putem, DENSO TEN Limited izjavljuje da je vrsta radio opreme FT0117A u saglasnosti s Direktivom 2014/53/EU.
Cijeli tekst EC deklaracije o usaglašenosti je dostupan na sljedećoj internetskoj adresi:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Tímto DENSO TEN Limited prohlašuje, že typ rádiového zařízení FT0117A je v souladu se směrnicí 2014/53/EU.
Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkce	Provozní frekvenční pásmu	Maximální radiofrekvenční výkon
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

zziv0542031a

Hermed erklærer DENSO TEN Limited, at radioudstyrstypen FT0117A er i overensstemmelse med direktiv 2014/53/EU.
EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
https://www.denso-ten.com/support/regulation/eu_doc/

Funktion	Driftsfrekvensbandet	Maksimal radio-frekvens effekt
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Hiermit erklärt DENSO TEN Limited, dass der Funkanlagentyp FT0117A der Richtlinie 2014/53/EU entspricht.
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
https://www.denso-ten.com/support/regulation/eu_doc/

Funktion	Betriebsfrequenzband	Maximale Hochfrequenzleistung
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Με την παρούσα ο/η DENSO TEN Limited, δηλώνει ότι ο ραδιοεξοπλισμός FT0117A πληροί την οδηγία 2014/53/ΕΕ.
Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
https://www.denso-ten.com/support/regulation/eu_doc/

Λειτουργία	Ζώνη συχνοτήτων λειτουργίας	Μέγιστη ισχύς ραδιοσυχνότητας
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Hereby, DENSO TEN Limited declares that the radio equipment type FT0117A is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
https://www.denso-ten.com/support/regulation/eu_doc/

Function	Operating frequency band	Maximum radio-frequency power
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

zziv0542032a

Por la presente, DENSO TEN Limited declara que el tipo de equipo radioeléctrico FT0117A es conforme con la Directiva 2014/53/UE.
El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
https://www.denso-ten.com/support/regulation/eu_doc/

Función	Banda de frecuencia operativa	Potencia máxima de la radiofrecuencia
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Käesolevaga deklareerib DENSO TEN Limited, et käesolev raadioseadme tüüp FT0117A vastab direktiivi 2014/53/EL nõuetele.
ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
https://www.denso-ten.com/support/regulation/eu_doc/

Funktsioon	Töösageduse laineala	Maksimaalne raadiosageduslik võimsus
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

DENSO TEN Limited vakuuttaa, että radiolaitetyyppi FT0117A on direktiivin 2014/53/EU mukainen.
EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
https://www.denso-ten.com/support/regulation/eu_doc/

Toiminto	Toimintataajuuskaista	Maksimi radiotaajuusteho
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Le soussigné, DENSO TEN Limited, déclare que l'équipement radioélectrique du type FT0117A est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
https://www.denso-ten.com/support/regulation/eu_doc/

Fonction	Bande de fréquence de fonctionnement	Puissance maximale de la radiofréquence
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Leis seo, dearbhaíonn DENSO TEN Limited go gcomhlíonann an cineál trealaimh raidió FT0117A Treoir 2014/53/EU.
Tá an téacs iomlán den dearbhú comhréireachta AE ar fáil ag an seoladh Idirlín seo a leanas:
https://www.denso-ten.com/support/regulation/eu_doc/

Feidhm	Banda minicíochta oibriúcháin	Uaschumhacht radaimhinicíochta
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

zziv0542033a

DENSO TEN Limited ovime izjavljuje da je radijska oprema tipa FT0117A u skladu s Direktivom 2014/53/EU.
Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

DENSO TEN Limited igazolja, hogy a FT0117A típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.
Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkció	Üzemi frekvencia-tartomány	Maximális rádiófrekvenciás teljesítmény
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Hér með, lýsir DENSO TEN Limited því yfir að gerð útvarpsbúnaðarins FT0117A samræmist tilskipun 2014/53/EU.
Allur texti ESB-samræmisyfirlýsingarinnar er aðgengilegur á eftirfarandi veffangi:
https://www.denso-ten.com/support/regulation/eu_doc/

Aðgerð	Notkunartíðni hljómsveit	Hámarks útvarp-tíðni vald
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Il fabbricante, DENSO TEN Limited, dichiara che il tipo di apparecchiatura radio FT0117A è conforme alla direttiva 2014/53/UE.
Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
https://www.denso-ten.com/support/regulation/eu_doc/

Funzione	Frequenza operative	Massima potenza a radiofrequenza
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Aš, DENSO TEN Limited, patvirtinu, kad radijo įrenginių tipas FT0117A atitinka Direktyvą 2014/53/ES.
Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Veikimo dažnių juosta	Maksimalus radijo dažnių galingumas
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

zziv0542034a

Ar šo DENSO TEN Limited deklarē, ka radioiekārta FT0117A atbilst Direktīvai 2014/53/ES.
Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Darba frekvences josla	Maksimālā radiofrekvences jauda
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Со ова, DENSO TEN Limited изјавува дека радио опремата од типот FT0117A е во согласност со Директивата 2014/53/EU.
Целиот текст на ЕУ изјавата за сообразност е достапен на следната интернет адреса:
https://www.denso-ten.com/support/regulation/eu_doc/

Функција	Работен фреквенциски опсег	Максимална радио-фреквенциска моќ
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Ovim, DENSO TEN Limited izjavljuje da je tip radio opreme FT0117A u skladu sa Direktivom 2014/53/EU.
Cjelokupan tekst EU deklaracije o usklađenosti dostupan je na sljedećoj internet adresi:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Operativni frekvencijski opseg	Maksimalna jačina radio frekvencije
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

B'dan, DENSO TEN Limited, niddikjara li dan it-tip ta' tagħmir tar-radju FT0117A huwa konformi mad-Direttiva 2014/53/UE.
It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:
https://www.denso-ten.com/support/regulation/eu_doc/

Funzjoni	Band tal-frekwenza operattiva	l-enerġija massima bi frekwenza tar-radju
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Hierbij verklaar ik, DENSO TEN Limited, dat het type radioapparatuur FT0117A conform is met Richtlijn 2014/53/EU.
De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
https://www.denso-ten.com/support/regulation/eu_doc/

Functie	Actieve frequentieband	Maximale radiofrequentie
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

zziv0542035a

DENSO TEN Limited erklærer herved at radioutstyrstypen FT0117A er i samsvar med direktiv 2014/53/EU.
Den fullstendige teksten i EU-erklæringen er tilgjengelig på følgende internettadresse:
https://www.denso-ten.com/support/regulation/eu_doc/

Funksjon	Driftsfrekvensbånd	Maksimal radiofrekvent strøm
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

DENSO TEN Limited niniejszym oświadcza, że typ urządzenia radiowego FT0117A jest zgodny z dyrektywą 2014/53/UE.
Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkcja	Pasmo częstotliwości pracy	Maksymalna moc częstotliwości radiowej
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

O(a) abaixo assinado(a) DENSO TEN Limited declara que o presente tipo de equipamento de rádio FT0117A está em conformidade com a Diretiva 2014/53/UE.
O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
https://www.denso-ten.com/support/regulation/eu_doc/

Função	Faixa de freqüência operacional	Potência máxima de radiofreqüência
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Prin prezenta, DENSO TEN Limited declară că tipul de echipamente radio FT0117A este în conformitate cu Directiva 2014/53/UE.
Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
https://www.denso-ten.com/support/regulation/eu_doc/

Funcție	Bandă de frecvență activă	Puterea maximă a radio-frecvenței
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

zziv0542036a

DENSO TEN Limited týmto vyhlasuje, že rádiové zariadenie typu FT0117A je v súlade so smernicou 2014/53/EÚ.
Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkcia	Prevádzkové frekvenčné pásmo	Maximálny rádiofrekvenčný výkon
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

DENSO TEN Limited potrjuje, da je tip radijske opreme FT0117A skladen z Direktivo 2014/53/EU.
Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Delovni frekvenčni pas	Maksimalna radiofrekvenčna moč
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Nëpërmjet kësaj, DENSO TEN Limited deklaron se lloji i aparatit të radios FT0117A është në përputhje me Direktivën 2014/53/EU.
Teksti i plotë i deklaratës së BE-së mbi përputhshmërinë është i disponueshëm në adresën e mëposhtme të internetit:
https://www.denso-ten.com/support/regulation/eu_doc/

Funksion	Banda e frekuencës së punës	Fuqia maksimale e frekuencave radio
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Ovim, DENSO TEN Limited izjavljuje da je ovaj tip radijske opreme FT0117A u skladu sa odredbama Direktive 2014/53/EU.
Kompletan tekst EU deklaracije o konformitetu je dostupan na sledećoj internet adresi:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

Härmed försäkrar DENSO TEN Limited att denna typ av radioutrustning FT0117A överensstämmer med direktiv 2014/53/EU.
Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
https://www.denso-ten.com/support/regulation/eu_doc/

Funktion	Operationsfrekvensbandet	Maximal radiofrekvenseffekt
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

zziv0542037a

DENSO TEN Limited, FT0117A türü telsiz ekipmanının 2014/53/EU Direktifine uygun olduğunu beyan etmektedir.
AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşılabilir:
https://www.denso-ten.com/support/regulation/eu_doc/

İşlev	Çalışma frekans bandı	Maksimum radyo-frekans gücü
Bluetooth	2402 – 2480 MHz	8.53 mW e.i.r.p.

zziv0542038a

WARNING

■ While driving

Do not operate the portable audio player, cellular phone or connect a device to the Bluetooth® system.

■ Caution regarding interference with electronic devices

- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

NOTICE

■ When leaving the vehicle

Do not leave your portable audio player or cellular phone in the vehicle. The inside of the vehicle may become hot, causing damage to the portable audio player or cellular phone.

6-1. Using the air conditioning system and defogger

Automatic air conditioning system 444

Heated steering wheel/seat heaters 451

6-2. Using the interior lights

Interior lights list.....453

6-3. Using the storage features

List of storage features 456

Luggage compartment features 459

6-4. Other interior features


Other interior features.....468

Automatic air conditioning system

Air outlets are automatically selected and fan speed is automatically adjusted according to the set temperature setting.
The illustrations below are for left-hand drive vehicles.
The button positions and shapes will differ for right-hand drive vehicles.
Also, the display and button positions will differ depending on the type of the system.

Air conditioning controls

▶ Type A

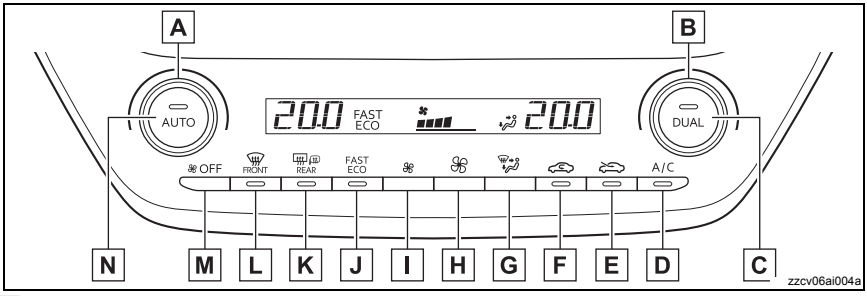

A Left-hand side temperature control switch

B Right-hand side temperature control switch

C "DUAL" switch

D "A/C" switch

E Outside air mode switch

F Recirculated air mode switch

G Airflow mode control switch

H Fan speed increases switch

I Fan speed decreases switch

J "FAST/ECO" switch


K Rear window defogger and outside rear view mirror defoggers switch

L Windshield defogger switch

M Off switch

N Automatic mode switch

▶ Type B

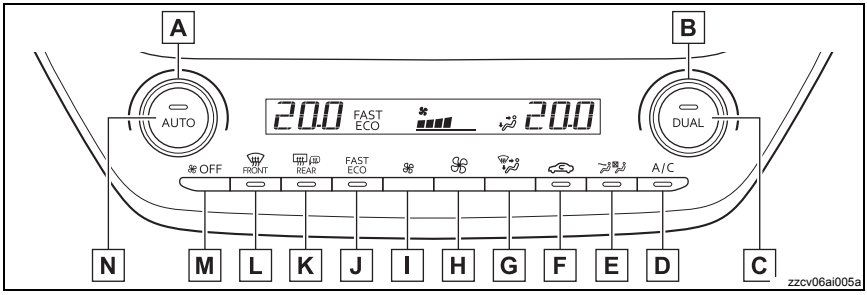

A Left-hand side temperature control switch

B Right-hand side temperature control switch

C "DUAL" switch

D "A/C" switch

E S-FLOW mode switch

F Outside/recirculated air mode switch

G Airflow mode control switch

H Fan speed increases switch

I Fan speed decreases switch

J "FAST/ECO" switch

K Rear window defogger and outside rear view mirror defoggers switch

L Windshield defogger switch

M Off switch

N Automatic mode switch

■ Adjusting the temperature setting

To adjust the temperature setting, turn the temperature control switch clockwise (warm) or counterclockwise (cool).

If "A/C" switch is not pressed, the system will blow ambient temperature air or heated air.

■ Setting the fan speed


Operate the fan speed increases switch to increase the fan speed and the fan speed decreases switch to decrease the fan speed.

Pressing the off switch to turns off the fan.

■ Change the airflow mode

Press the airflow mode control switch.

The airflow mode changes as follows each time the switch is pressed.

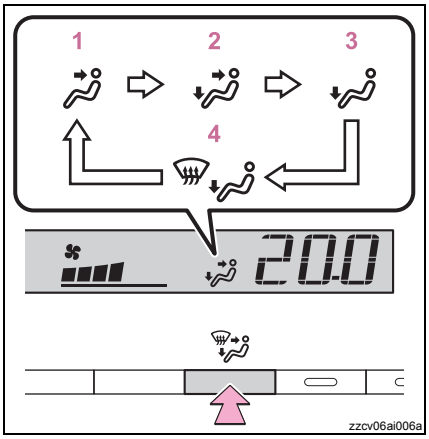

1 Upper body
2 Upper body and feet
3 Feet
4 Feet and the windshield defogger operates

■ Switching between outside air and recirculated air modes

▶ Type A

- To change to recirculated air mode, press the recirculated air mode switch.

The indicator illuminates on the recirculated air mode switch.

- To change to outside air mode, press the outside air mode switch.

The indicator illuminates on the outside air mode switch.

▶ Type B

Press the outside/recirculated air mode switch.

The mode switches between outside air mode and recirculated air mode modes each time the switch is operated.
When recirculated air mode is selected, the indicator illuminates on the outside/recirculated air mode switch.

■ Set cooling and dehumidification function

Press the “A/C” switch.

When the function is on, the indicator illuminates on the “A/C” switch.

■ Defogging the windshield

Defoggers are used to defog the windshield and front side windows.

Press the windshield defogger switch.

Set the outside/recirculated air mode switch to outside air mode if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the side windows quickly, turn the air flow and temperature up.

To return to the previous mode, press the windshield defogger switch again when the windshield is defogged.

When the windshield defogger switch is on, the indicator illuminates on the windshield defogger switch.

■ Defogging the rear window and outside rear view mirrors

Defoggers are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

Press the rear window and outside rear view mirror defoggers switch.

The defoggers will automatically turn off after a while.

When the rear window and outside rear view mirror defoggers switch is on, the indicator illuminates on the rear window and outside rear view mirror defoggers switch.

■ Using the Climate Preference

1 Press the automatic mode switch.

2 Press the “FAST/ECO” switch.

Each time the “FAST/ECO” switch is pressed, the fan speed setting mode toggles as follows.

Normal→“ECO”→“FAST”→Normal

When “ECO” is displayed on the air conditioning screen, the air conditioning is controlled with low fuel consumption prioritized such as reducing fan speed, etc.

When “FAST” is displayed on the screen, fan speed will be increased.

■ S-FLOW mode (if equipped)

In S-FLOW mode, priority for the airflow is given to the driver’s seat, reducing the airflow and air conditioning effect on the front passenger’s seat and rear seats.

When the S-FLOW mode switch is pressed, S-FLOW mode will be manually enabled/ disabled.

When the S-FLOW mode is on, the indicator illuminates on the S-FLOW mode switch and the temperature indicator for the passenger side will turn off.

■ Fogging up of the windows

- The windows will easily fog up when the humidity in the vehicle is high. Turning “A/C” on will dehumidify the air from the outlets and defog the windshield effectively.
- If you turn “A/C” off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

■ Outside/recirculated air mode

- When driving on dusty roads such as tunnels or in heavy traffic, set the outside/recirculated air mode switch to the recirculated air mode. This is effective in preventing outside air from entering the vehicle interior. During cooling operation, setting the recirculated air mode will also cool the vehicle interior effectively.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

■ Operation of the air conditioning system in Eco drive mode

- In Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:
  - Engine speed and compressor operation controlled to restrict heating/cooling capacity
  - Fan speed restricted when automatic mode is selected
- To improve air conditioning performance, perform the following operations:
  - Adjust the fan speed
  - Turn off Eco drive mode (→P.378)
- Even when the drive mode is set to Eco drive mode, the air conditioning eco mode can be turned off by pressing the “FAST/ECO” switch. (→P.447)

■ When the outside temperature falls to nearly 0°C (32°F)

The dehumidification function may not operate even when “A/C” switch is

pressed.

■ **Ventilation and air conditioning odors**

- To let fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
  - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
  - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.
- When parking, the system automatically switches to outside air mode to encourage better air circulation throughout the vehicle, helping to reduce odors that occur when starting the vehicle.

■ **Air conditioning filter**

→P.517

■ **Customization**

Some functions can be customized. (→P.610)

WARNING

■ **To prevent the windshield from fogging up**

Do not use the windshield defogger switch during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

■ **When the outside rear view mirror defoggers are operating**

Do not touch the outside rear view mirror surfaces, as they can become very hot and burn you.

NOTICE

■ **To prevent 12-volt battery discharge**

Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

Using automatic mode

1. Press the automatic mode switch.
2. Adjust the temperature setting.
3. To stop the operation, press the off switch.


If the fan speed setting or air flow modes are operated, the automatic mode indicator goes off. However, automatic mode for functions other than that operated is maintained.

■ **Using automatic mode**

Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.

Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after the automatic mode switch pressed.

Windshield wiper de-icer (if equipped)

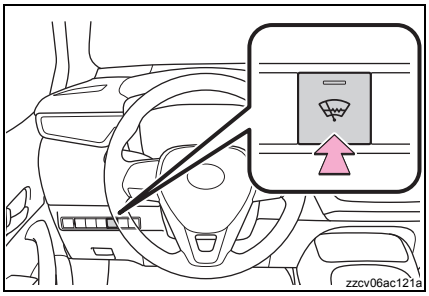

Prevent ice from building up on the windshield and wiper blades.

When the windshield wiper de-icer switch is on, the indicator illuminates on the windshield wiper de-icer switch.

The windshield wiper de-icer will automatically turn off after a period of time.

WARNING

■ To prevent burns

Do not touch the glass at lower part of the windshield or to the side of the front pillars when the windshield wiper de-icer is on.

Adjusting the temperature for the driver and front passenger seat separately

To turn on the “DUAL” mode, perform any of the following procedures:

- Press the “DUAL” switch.
- Adjust the front passenger’s side temperature setting.


The indicator on the “DUAL” switch comes on when the “DUAL” mode is on.

Pressing the “DUAL” switch when in “DUAL” mode will disable “DUAL” mode, and the temperature setting for the front passenger’s side will become linked to the driver’s side.

Air outlet layout and operations

■ Location of air outlets


The air outlets and air volume changes according to the selected air flow mode.

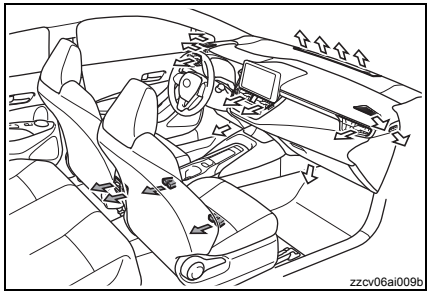

⇦: If equipped

■ Adjusting the position of and opening and closing the air outlets

▶ Front center

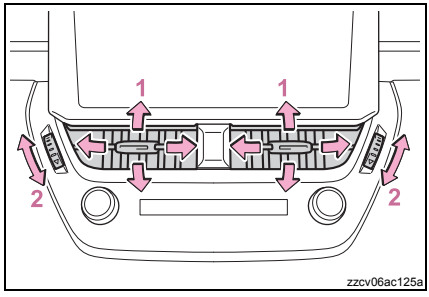


1 Direct air flow to the left or right, up or down

2 Turn the knob to open or close


the vent

▶ Front right-hand side

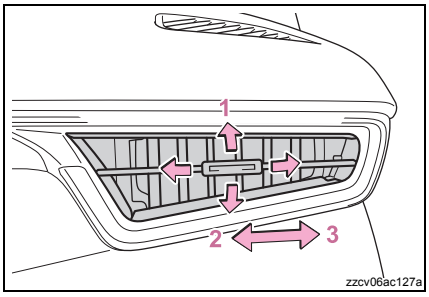


1 Direct air flow to the left or right, up or down
2 Open the vent
3 Close the vent

▶ Front left-hand side

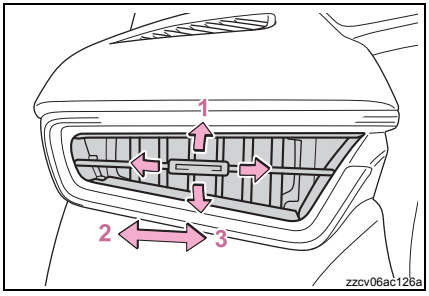

1 Direct air flow to the left or right, up or down
2 Close the vent
3 Open the vent

▶ Rear center (if equipped)

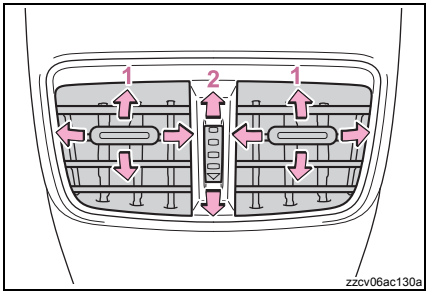


1 Direct air flow to the left or right, up or down
2 Turn the knob to open or close the vent

WARNING

■ To prevent the windshield defogger from operating improperly

Do not place anything on the instrument panel which may cover the air outlets. Otherwise, air flow may be obstructed, preventing the windshield defoggers from defogging.

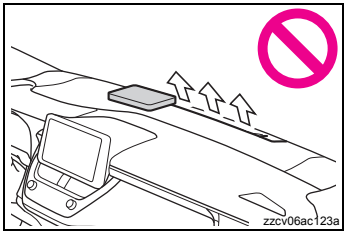

Heated steering wheel*/seat heaters*

*: If equipped

- Heated steering wheel

Warms up the grip of the steering wheel

- Seat heaters

Warm up the seat upholstery

WARNING

■To prevent minor burn injuries

Care should be taken if anyone in the following categories comes in contact with the steering wheel or seats when the heater is on:

- Babies, small children, the elderly, the sick and the physically challenged
- Persons with sensitive skin
- Persons who are fatigued
- Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)

NOTICE

■To prevent damage to the seat heaters

Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.

■To prevent 12-volt battery discharge


Do not use the functions when the hybrid system is off.

Operation instructions

■ Heated steering wheel

Turns heated steering wheel on/off


When the heated steering wheel is on, the indicator illuminates on the heated steering wheel switch.

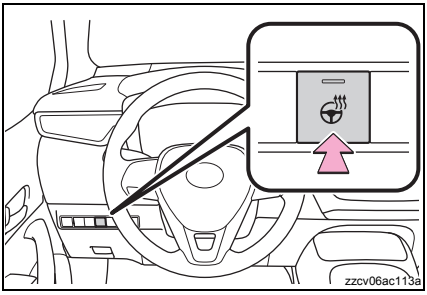

■ Seat heaters

▶ Front

Turns seat heaters on/off

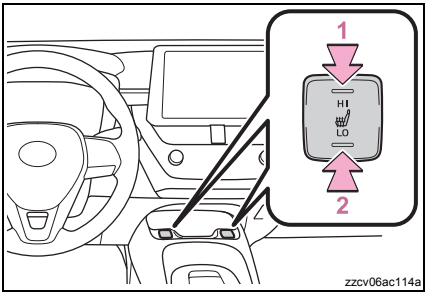

1 High temperature

2 Low temperature


When the seat heater is on, the indicator illuminates on the seat heater switch.

When not in use, put the switch in the neutral position. The indicator will turn off.

▶ Rear

Turns seat heaters on/off

When the seat heater is on, the indicator illuminates on the seat heater switch.

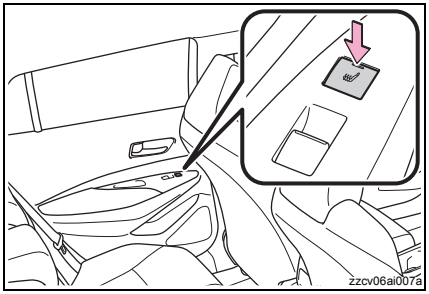

■ The heated steering wheel and seat heaters can be used when

The power switch is in ON.

⚠ WARNING


■ To prevent overheating and minor burn injuries

Observe the following precautions when using the seat heaters.

- Do not cover the seat with a blanket or cushion when using the seat heater.
- Do not use seat heater more than necessary.

Interior lights list

Location of the interior lights

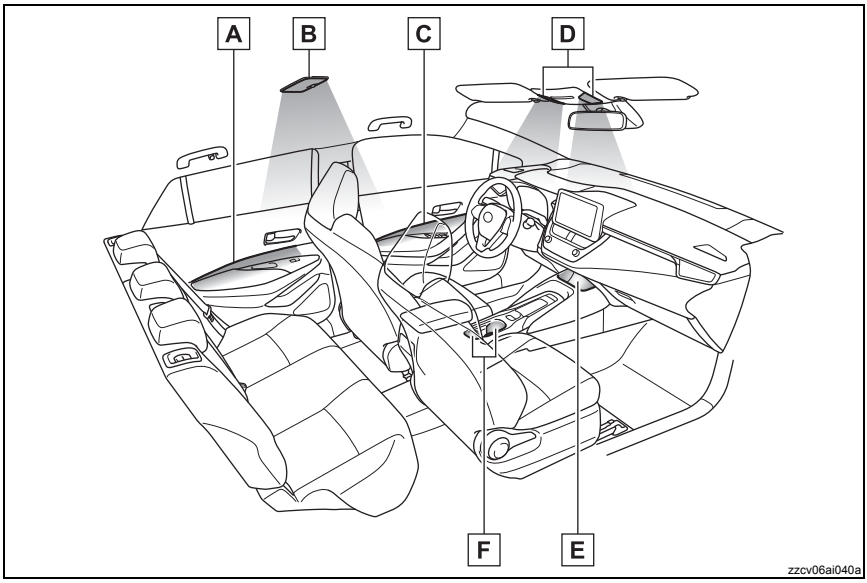

A Rear door trim lights (wagon) (if equipped)

B Rear interior light (if equipped) (→P.454)
Rear personal light (if equipped) (→P.454)

C Front door trim lights (if equipped)


D Front interior/personal lights (→P.453, 454)

E Center tray light (if equipped)

F Cup holder lights (if equipped)

Operating the interior lights

■ Front

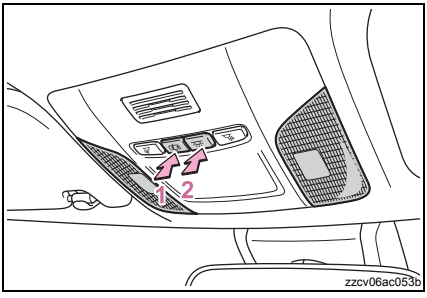


1 Turns the door position on/off

When a door is opened while the door position is on, the lights turn on.

2 Turns the lights on/off

■ **Rear (if equipped)**

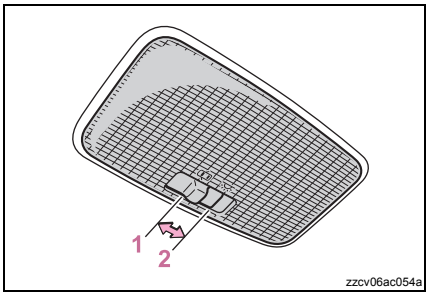

1 Turns the door position on


The rear interior light turns on/off together the front interior lights.

When a door is opened while the front and rear interior light door position is on, the lights turn on.

2 Turns the light on


Operating the personal lights

■ **Front**

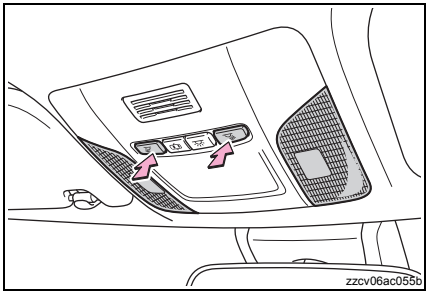

Turns the lights on/off

■ **Rear (wagon) (if equipped)**

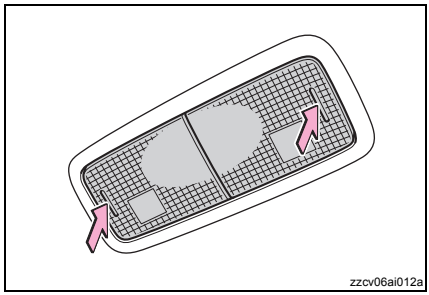

Turns the lights on/off

■ **Illuminated entry system**

The lights automatically turn on/off according to the power switch mode, the presence of the electronic key (vehicles with entry function), whether the doors are locked/unlocked, and whether the doors are opened/closed.

■ **To prevent the 12-volt battery from being discharged**

If the interior lights remain on when the power switch is turned off, the lights will go off automatically after 20 minutes.

■ **The interior lights may turn on automatically when**

If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the interior lights will turn on automatically.
The interior lights will turn off automatically after approximately 20 minutes.
The interior lights can be turned off manually. However, in order to help prevent further collisions, it is recommended that they be left on until safety can be ensured.
(The interior lights may not turn on automatically depending on the force of the impact and conditions of the collision.)

■ **Customization**

Some functions can be customized.
(→P.610)


NOTICE

■ To prevent 12-volt battery discharge

Do not leave the lights on longer than necessary when the hybrid system is off.

List of storage features

Location of the storage features

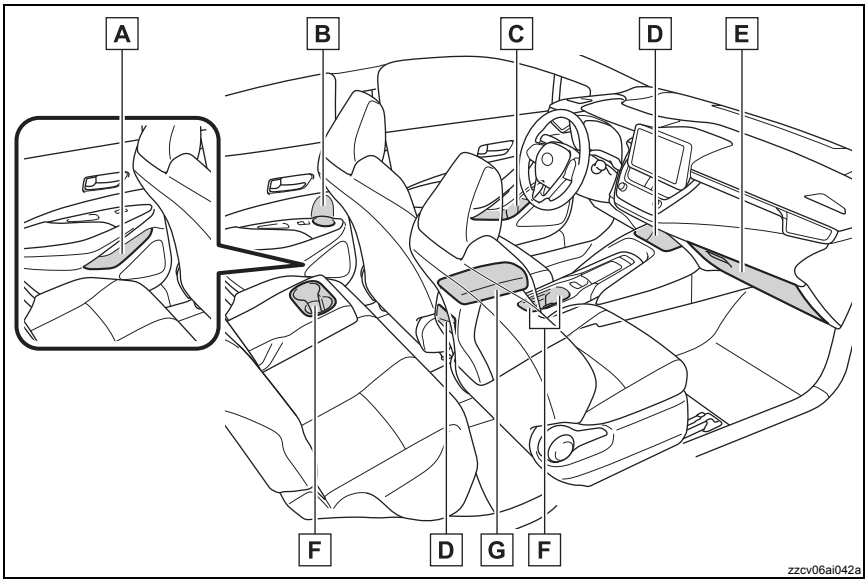

A Bottle holders (wagon) (→P.457)

B Bottle holders (hatchback) (→P.457)

C Bottle holders/door pockets (→P.457)

D Open trays (if equipped) (→P.458)

E Glove box (→P.457)

F Cup holders (→P.457)

G Console box (→P.458)


WARNING

■ **Items that should not be left in the storage spaces**

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

- Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.

Glove box

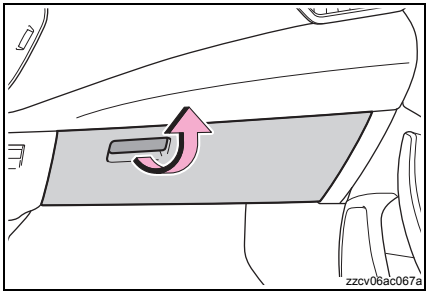

Pull up the lever to open the glove box.

■ Glove box light (if equipped)

The glove box light turns on when the tail lights are on.


⚠ WARNING

■ Caution while driving

Keep the glove box closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open glove box or the items stored inside.


Cup holders

▶ Front

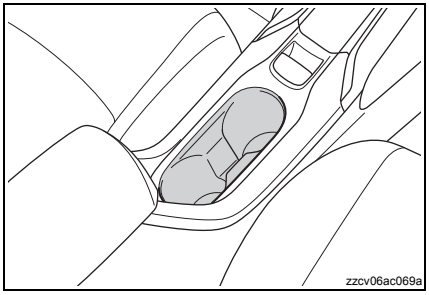

▶ Rear (if equipped)

Pull the armrest down.

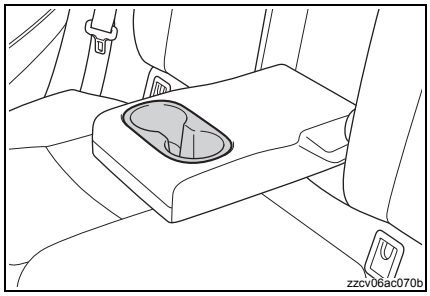


⚠ WARNING

■ Items unsuitable for the cup holder


Do not place anything other than cups or beverage cans in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury. If possible, cover hot drinks to prevent burns.

Bottle holders/door pockets


▶ Front

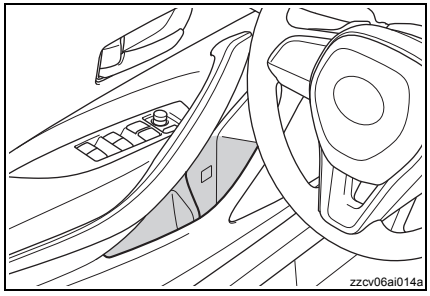

▶ Rear (hatchback)

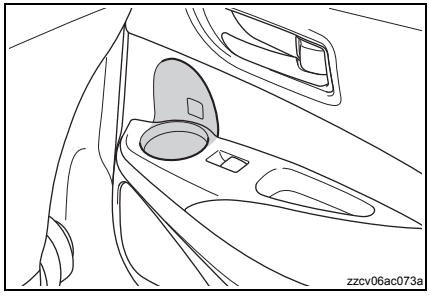

▶ Rear (wagon)

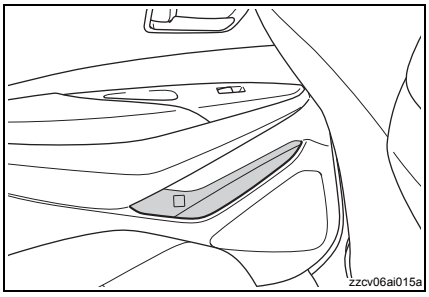

■ Bottle holders


- When storing a bottle, close the cap.
- The bottle may not be stored depending on its size or shape.

⚠ WARNING

■ Items unsuitable for the bottle holders

Do not place anything other than a bottle in the bottle holders.
Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury.


Console box

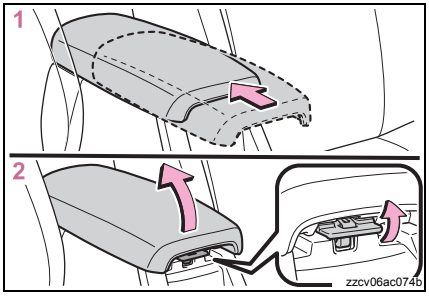

1 Slide the lid to the rear most position. (vehicles with a slide function)

2 Lift the lid while pulling up the knob.

■ Slide function (if equipped)

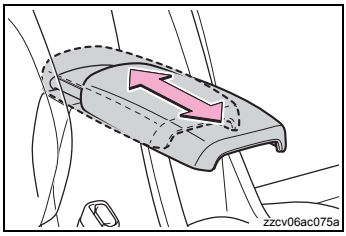

The console box lid can be slid forward or backward.


⚠ WARNING

■ Caution while driving


Keep the console box closed.
Injuries may result in the event of an accident or sudden braking.

Open tray

▶ Front (if equipped)

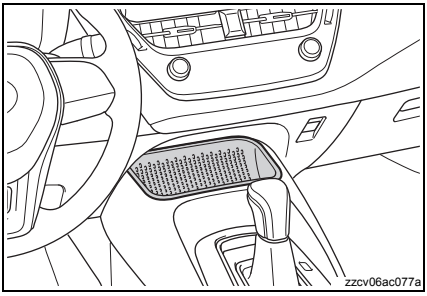

▶ Rear (if equipped)

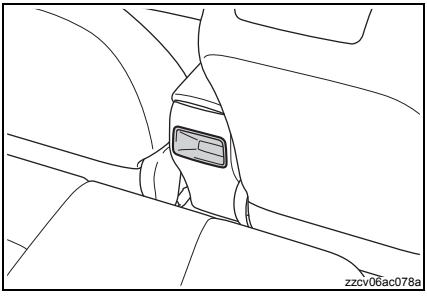

WARNING

■ Caution while driving


Observe the following precautions when putting items in the open tray. Failure to do so may cause items to be thrown out of the tray in the event of sudden braking or steering. In these cases, the items may interfere with pedal operation or cause driver distraction, resulting in an accident.

- Do not store items in the tray that can easily shift or roll out.
- Do not stack items in the tray higher than the tray's edge.
- Do not put items in the tray that may protrude over the tray's edge.

Luggage compartment features

Cargo hooks (if equipped)

The cargo hooks are provided for securing loose items.

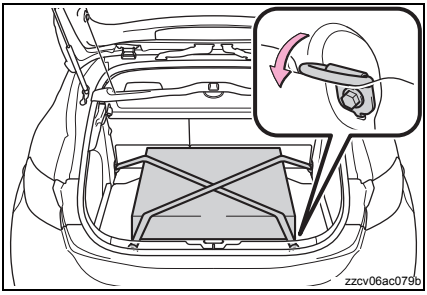


WARNING

■ When cargo hooks are not in use


To avoid injury, always return the hooks to their stowed positions when not in use.

Grocery bag hooks

▶ Hatchback

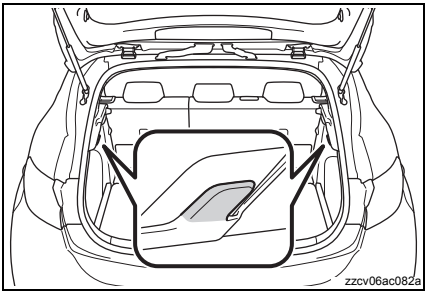

▶ Wagon

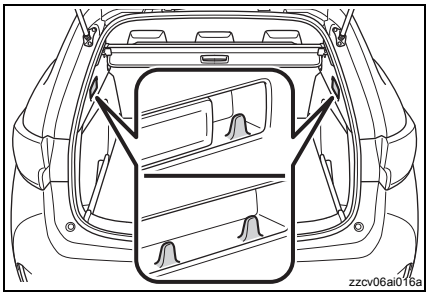

WARNING

■ To prevent damage to the grocery bag hooks


Hatchback: Do not hang any object heavier than 2 kg (4.4 lb.) on the grocery bag hooks.
Wagon: Do not hang any object heavier than 4 kg (8.8 lb.) on the grocery bag hooks.

Deck board (if equipped)

■ Opening the deck board


▶ Hatchback

Press the button to raise the deck board handle and then lift the deck board.

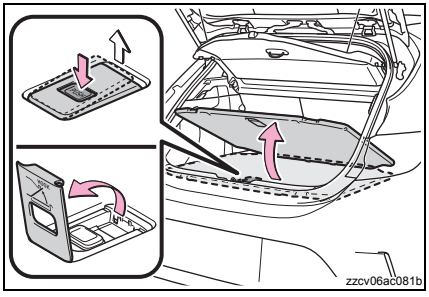


▶ Wagon

Raise the deck board handle and then lift the deck board.

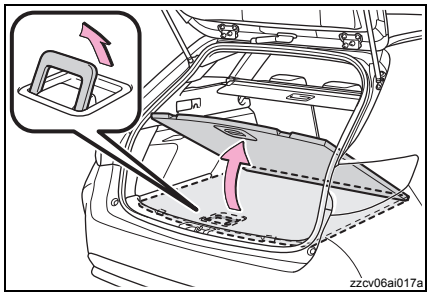

■ Changing the height of the luggage compartment floor (vehicles with a dual level deck board)

By changing the position of the deck board, the height of the luggage compartment floor can be changed.

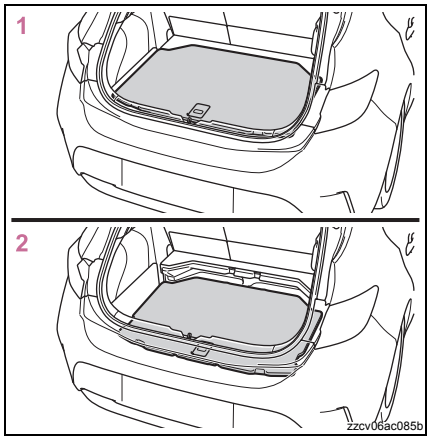


1 Upper position
2 Lower position

■ Securing the deck board (hatchback)

Vehicles with a dual level deck board: When the deck board is in the lower position, it cannot be secured in a lifted position.


▶ When the luggage cover (if equipped) is installed

Hook the deck board handle onto the underside of the luggage cover as shown in the illustration, to secure the deck board.

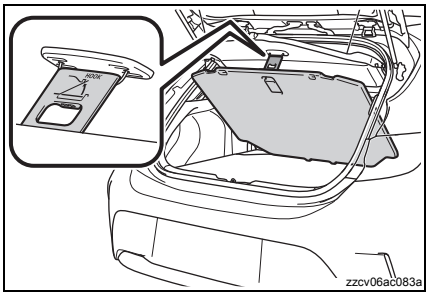


▶ When the luggage cover is not installed

Hook the deck board handle onto the upper edge of the back door opening as shown in the illustration.

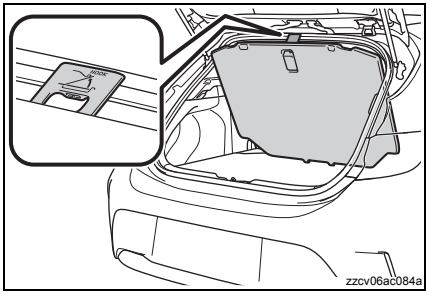

■ Deck board (hatchback)

M20A-FXS engine: Both the left and right side of the deck board can be opened.

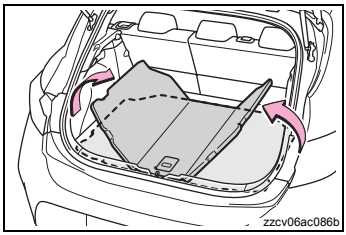

■ Deck board (wagon)

The deck board can be flipped over and the inner side, which is easy to clean, can be used.

WARNING

■ When changing the position of the dual level deck board

Do not change the position of the deck board when luggage is placed on top of it.
Doing so may lead to fingers getting pinched, etc.

NOTICE

■ When the deck board is secured

Make sure not to close the back door when the deck board is hooked onto the luggage cover or the back door opening. Doing so may lead to damage to interior parts.


■ When using the inner side of the deck board (wagon)

Make sure to place heavy and/or sharp objects on the deck board gently, and be sure to secure them so that they do not move.
Failing to so do may lead to damage to the surface of the deck board.


Auxiliary box (if equipped)


▶ Hatchback

Vehicles without deck board: Lift the deck mat.

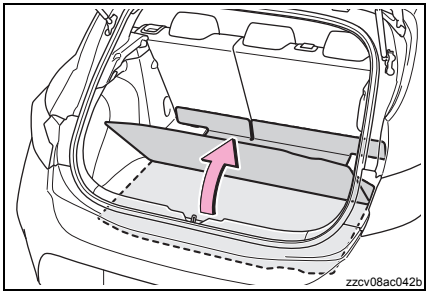


Vehicles with deck board: Press the button to raise the deck board handle and then lift the deck board.

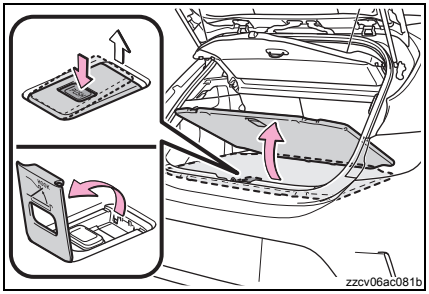


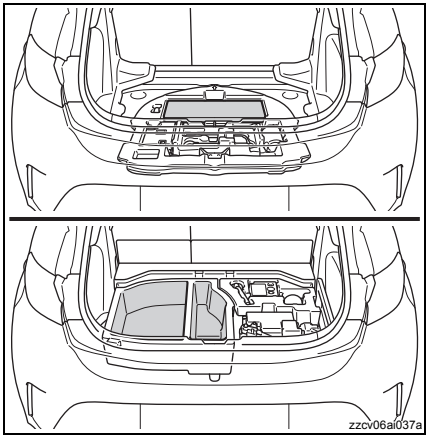


▶ Wagon


Front: Lift the deck board.

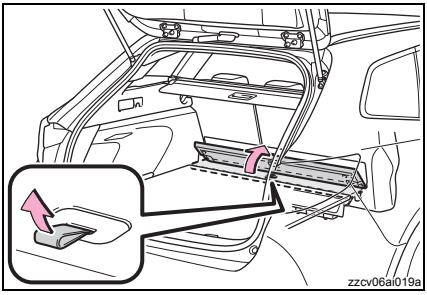

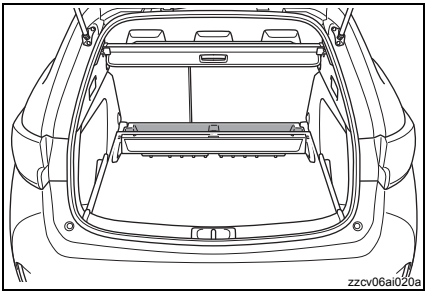


Rear: Raise the deck board handle and then lift the deck board.

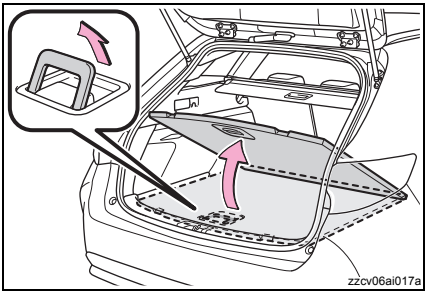

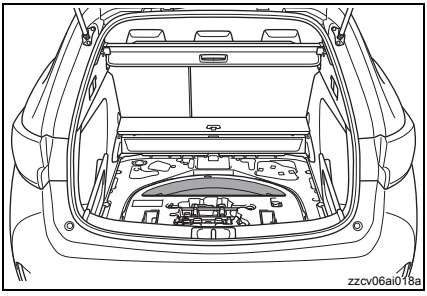


Side tray (if equipped)

▶ Hatchback

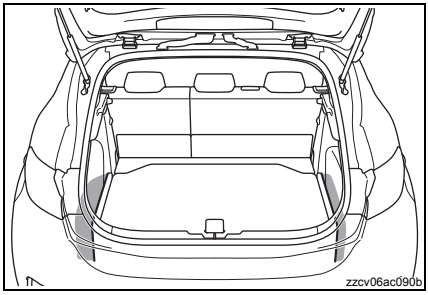


▶ Wagon

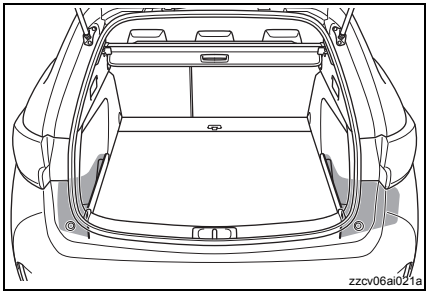


■ Side tray separators


- The side tray separators can be removed when the dual level deck board is in the lower position.

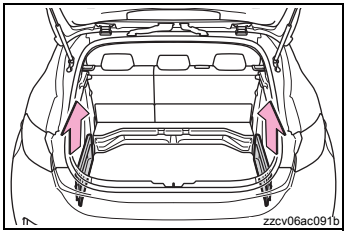

- Hatchback: The removed luggage side tray separators can be stored in the luggage under tray (if equipped).

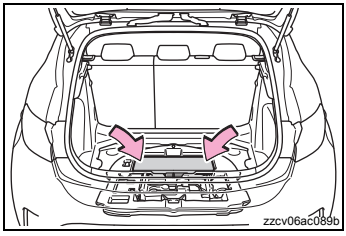

Removing the luggage cover (hatchback) (if equipped)

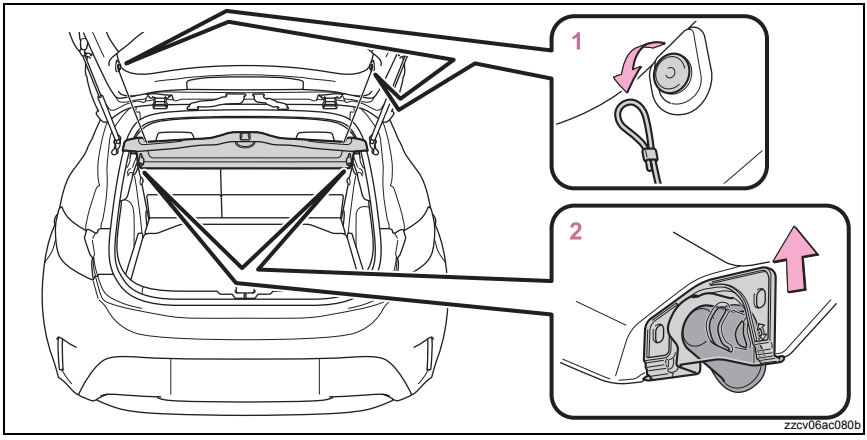


1 Unhook the cords.

2 Remove the cover from the anchors.

■ **Storing the luggage cover (vehicles with a dual level deck board)**


When the dual level deck board is in the upper position, the luggage cover can be stored under the deck board.

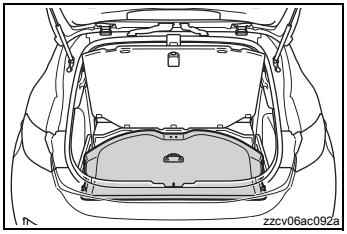

Luggage cover (wagon) (if equipped)

■ **Using the luggage cover**


Pull out the luggage cover and engage it to the anchors.

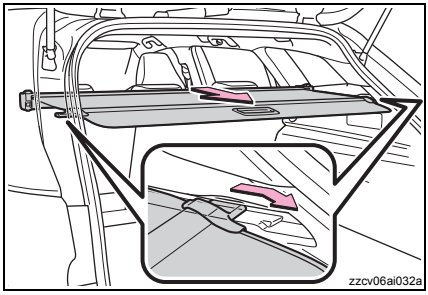

■ **Removing the luggage cover**


▶ Front

Push the left and right buttons of the luggage cover unit.

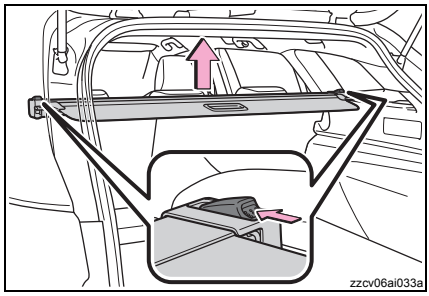

▶ Rear

Pull the left or right side bracket down to disengage it. Then disengage the other 3 brackets.

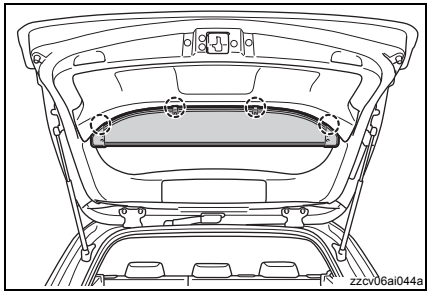

WARNING

■ **When installing the luggage cover**

Make sure that the luggage cover is securely installed. Failure to do so may result in serious injury in the event of sudden braking or a collision.

■ **Caution for the luggage cover**

- Do not place anything on the luggage cover to avoid death or serious injury.
- Do not allow children to climb on the luggage cover. Climbing on the luggage cover could result in damage to the luggage cover, possibly causing death or serious injury to the child.


Partition net (if equipped)

■ Using the partition net


▶ Front position

1 Fold the rear seatbacks down. (→P.199)

2 Install the partition net unit to the anchors on the right seatback. When the anchors are engaged, slide the partition net unit leftward.

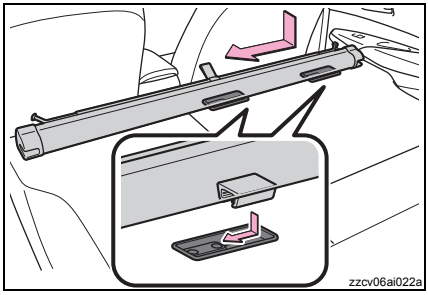


3 Open the anchor covers on both sides.

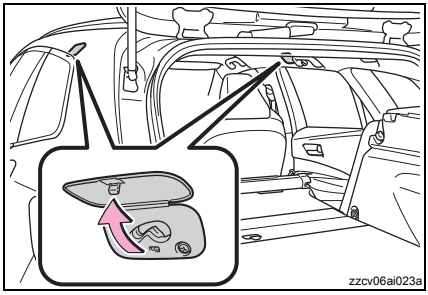

4 Pull out the net, push in the left and right hooks and engage them to the anchors.


If the net is pulled out slowly, it may lock partway. To pull it out fully, allow the net to roll back slightly then pull it out again.

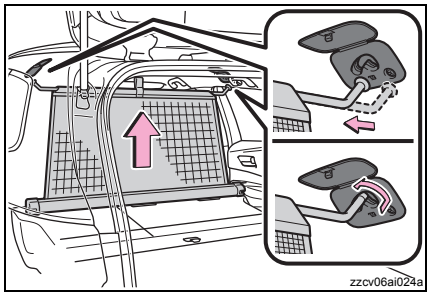


▶ Rear position

1 Install the partition net unit behind the rear seats to the anchors on the side deck.


When the partition net unit is secured, the lock release buttons are pushed in and the red marking on the button's sidewall is not visible.

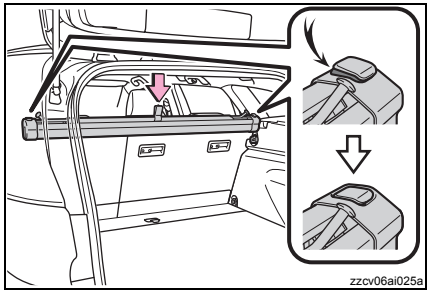

2 Open the anchor covers on both sides.

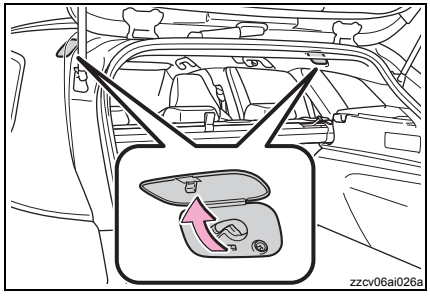

3 Pull out the net, push in the left and right hooks and engage them to the anchors.

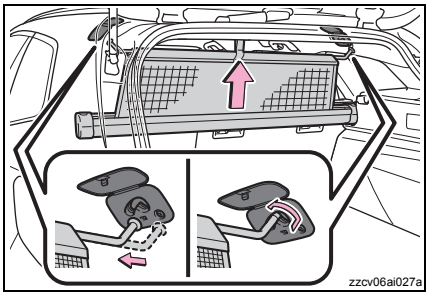


■ Removing the partition net

▶ Front position


Slide the partition net unit rightward to disengage the anchors and lift it.

After removing the partition net unit, return the rear seat backs to their original position.

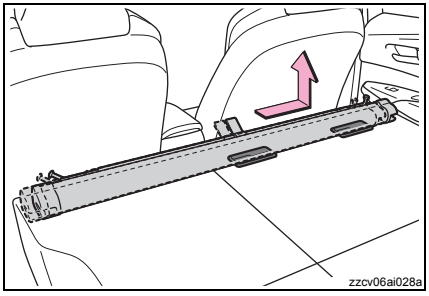

▶ Rear position

Push the left and right lock release buttons and lift up the partition net unit.

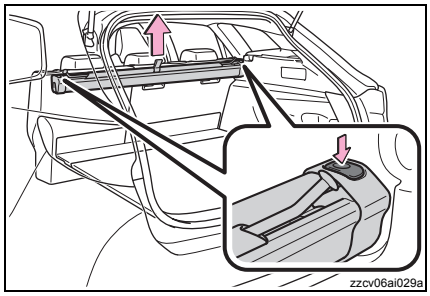

■ Locking of the partition net partway when pulled out

The partition net is designed to lock partway, at the length suited for use in the rear position, when pulled out slowly. (Quickly pulling out the partition net will allow it to be pulled out to its full length.)

To release the lock: allow the net to roll back slightly then pull it out again.


⚠ WARNING

■ When installing the partition net

Make sure that the partition net unit is securely installed. Failure to do so may result in serious injury in the event of sudden braking or a collision.

■ When using the partition net

Make sure that the hooks are engaged in the correct position on the anchors. Failure to do so may result in serious injury in the event of sudden braking or a collision.

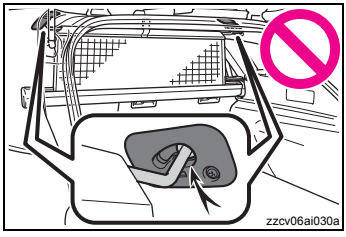

WARNING

■ Storage precaution

As the partition net is not designed to protect passengers and driver from all type of luggage stored in the luggage compartment if thrown, make sure that the luggage is securely fixed even if the partition net is used.


Other interior features

USB charging port (if equipped)

The USB charging port are used to supply 2.1 A of electricity at 5 V to external devices.
The USB charging port are for charging only. They are not designed for data transfer or other purposes.
Depending on the external device, it may not charge properly. Refer to the manual included with the device before using a USB charging port.

■ Using the USB charging port

Open the console box lid.

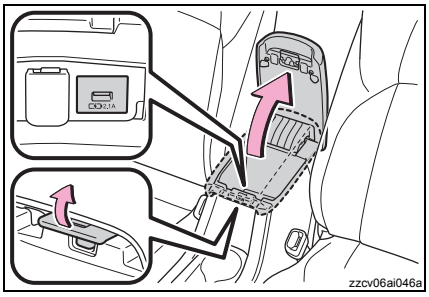

■ The USB charging port can be used when

The power switch is in ACC or ON.

■ Situations in which the USB charging port may not operate correctly

- If a device which consumes more than 2.1 A at 5 V is connected
- If a device designed to communicate with a personal computer, such as a USB memory device, is connected
- If the connected external device is turned off (depending on device)
- If the temperature inside the vehicle is high, such as after the vehicle has been parked in the sun

■ About connected external device

Depending on the connected external device, charging may occasionally be suspended and then start again. This is not a malfunction.

NOTICE

■ To prevent damage to the USB charging port

- Do not insert foreign objects into the port.
- Do not spill water or other liquids into the port.
- Do not apply excessive force to or impact the USB charging port.
- Do not disassemble or modify the USB charging port.

■ To prevent damage to external devices

- Do not leave external devices in the vehicle. The temperature inside the vehicle may become high, resulting in damage to an external device.
- Do not push down on or apply unnecessary force to an external device or the cable of an external device while it is connected.

■ To prevent 12-volt battery discharge


Do not use the USB charging port for a long period of time with the hybrid system stopped.

Power outlet

The power outlet can be used for 12 V accessories that run on less than 10 A.

▶ Front


Open the console box lid and open the lid.

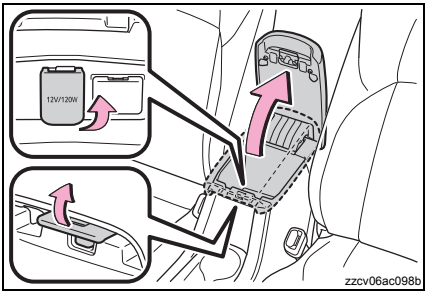


▶ Luggage compartment (wagon)

Open the cover.

2ZR-FXE engine:

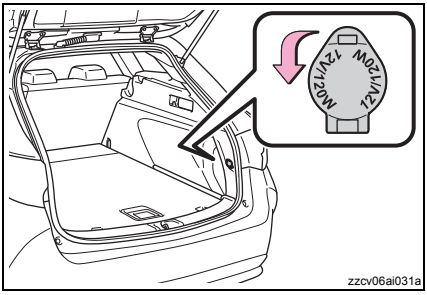

M20A-FXS engine:

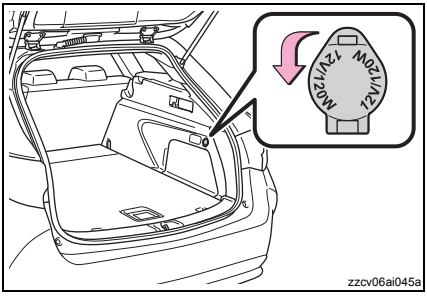

■ The power outlet can be used when

The power switch is in ACC or ON.

■ When stopping the hybrid system

Disconnect electrical devices with charging functions, such as mobile battery packs.
If such devices are left connected, the hybrid system may not stop normally.

NOTICE

■ To prevent the fuse from being blown

Do not use an accessory that uses more than 12 V 10 A.

■ To avoid damaging the power outlet

Close the power outlet lid when the power outlet is not in use.
Foreign objects or liquids that enter the power outlet may cause a short circuit.

■ To prevent 12-volt battery discharged

Do not use the power outlet longer than necessary when the hybrid system is off.

Wireless charger (if equipped)

A portable device, such as a smartphone or mobile battery, can be charged by just placing it on the charging area, provided the device is compatible with the Qi wireless charging standard created by the Wireless Power Consortium.


The wireless charger cannot be used with a portable device that is larger than the charging area. Additionally, depending on the portable device, the wireless charger may not operate properly. Refer to the operation manual of the portable device.

■ The “Qi” symbol

The “Qi” symbol is a trademark of the Wireless Power Consortium.



■ Name for all parts

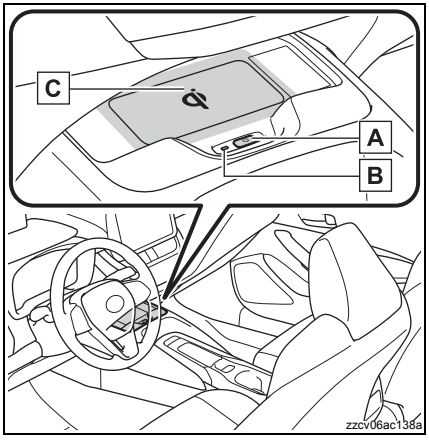

A Power supply switch


B Operation indicator light

C Charge area

■ Using the wireless charger


1 Press the power supply switch of the wireless charger.

Pressing the switch again turns the wireless charger off.
When turned on, the operation indicator light (green) comes on.
When the power switch is turned off, the on/off state of the wireless charger will be memorized.

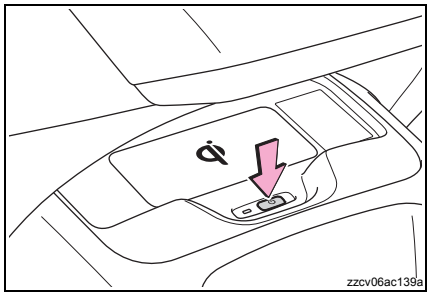

2 Place a portable device on the charging area with its charging surface facing down.

While charging, the operation indicator light (orange) will be illuminated.
If charging does not begin, move the portable device as close to the center of the charging area as possible.
When charging is complete, the operation indicator light (green) will illuminate.

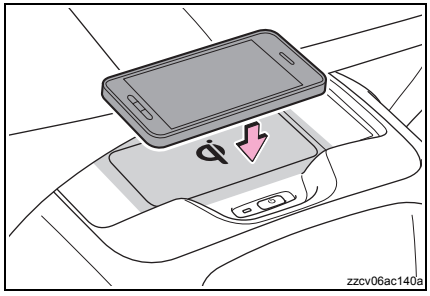

■ Recharging function

- If a certain amount of time has elapsed since charging completed and the portable device has not been moved, the wireless charger will restart charging.
- If the portable device is moved within the charging area, charging will stop temporarily then restart.

■ Operation indicator light status

Operation indicator light	State
Off	The Wireless charger is off
Green (illuminated)	Standby (charging is possible)
	Charging is complete*
Orange (illuminated)	A portable device has been placed on the charging area (identifying the portable device)
	Charging in progress

*: Depending on the portable device, the operation indicator light may stay illuminated (orange) after charging has completed.

- If the operation indicator light blinks

If an error is detected, the operation indicator light will blink (orange). Take the appropriate measures according to the table below.

Operation indicator light	Suspected cause	Measure
Blinks (orange) at a one second interval continuously	Vehicle to charger communication failure.	Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
Blinks (orange) 3 times repeatedly	A foreign object exists between the portable device and charging area.	Remove the foreign object.
	Portable device is not positioned properly on the charging area.	Move the portable device toward the center of the charging area.
Blinks (orange) 4 times repeatedly	The temperature of the wireless charger is excessively high.	Stop charging immediately and continue charging after a while.

■ The wireless charger can be operated when

The power switch is in ACC or ON.

■ Portable devices that can be charged

- Portable devices compatible with the Qi wireless charging standard can be charged by the wireless charger. However, compatibility with all devices which meet the Qi wireless charging standard is not guaranteed.
- The wireless charger is designed to supply low power electricity (5 W or less) to a cellular phone, smartphone, or other portable device.

■ If a cover or accessory is attached to the portable device

Do not charge a portable device if a cover or accessory which is not Qi compatible is attached. Depending on the

type of cover and/or accessory attached, it may not be possible to charge the portable device. If the portable device is placed on the charging area and does not charge, remove the cover and/or accessories.

■ **If interference is heard in AM radio broadcasts while charging**

Turn off the wireless charger and check if the noise is reduced. If noise is reduced, press and hold the power supply switch of the wireless charger for 2 seconds. The frequency of the wireless charger is changed and noise may be reduced. When the frequency is changed, the operation indicator light will blink (orange) 2 times.

■ **Charging precautions**

- If the electronic key cannot be detected in the cabin, charging cannot be performed. When a door is opened and closed, charging may be temporarily suspended.
- While charging, the wireless charger and the portable device will become warm.
  This is not a malfunction.If a portable device becomes warm while charging and charging stops due to the protection function of the portable device, wait until the portable device cools down and charge it again.

■ **Sound generated during operation**

When the power supply switch is turned on or while a portable device is being identified, operation sounds may be heard. This is not a malfunction.

■ **Cleaning the wireless charger**

→P.481

WARNING

■ **Caution while driving**

When charging a portable device while driving, for safety reasons, the driver should not operate the portable device.

■ **Caution regarding interference with electronic devices**

People with implantable cardiac pacemakers, cardiac resynchronization therapy pacemakers or implantable cardioverter defibrillators, as well as any other electrical medical device, should consult their physician about the usage of the wireless charger. Operations of the wireless charger may have an affect on medical devices.

■ **To prevent damage or burns**

Observe the following precautions. Failure to do so may result in the possibility of fire, equipment failure or damage, or burns due to heat.

- Do not put any metallic objects between the charging area and the portable device while charging.
- Do not attach metallic objects, such as aluminum stickers, to the charging area.
- Do not cover the wireless charger with a cloth or other object while charging.
- Do not attempt to charge portable devices which are not compatible with the Qi wireless charging standard.
- Do not disassemble, modify or remove the wireless charger.
- Do not apply force or impact to the wireless charger.

NOTICE

■ **Conditions in which the wireless charger may not operate correctly**

In the following situations, the wireless charger may not operate correctly:

- When a portable device is fully charged

NOTICE

- When there is a foreign object between the charging area and portable device
- When a portable device becomes hot while charging
- When a portable device is placed on the wireless area with its charging surface facing up
- When a portable device is not centered on the charging area
- When the vehicle is near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When the portable device is in contact with, or is covered by any of the following metallic objects:
  - Cards to which aluminum foil is attached
  - Cigarette boxes that have aluminum foil inside
  - Metallic wallets or bags
  - Coins
  - Metal hand warmers
  - Media such as CDs and DVDs
- When wireless keys (that emit radio waves) other than those of your vehicle are being used nearby.

If in situations other than above the wireless charger does not operate properly or the operation indicator light is blinking, the wireless charger may be malfunctioning. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


To prevent failure or damage to data

- Do not bring magnetic cards, such as a credit card, or magnetic recording media, close to the wireless charger while charging. Otherwise, data may be erased due to the influence of magnetism. Additionally, do not bring precision instruments such as wrist watches, close to the wireless charger, as such objects may malfunction.
- Do not leave portable devices in the cabin. The temperature inside the cabin may become high when parked in the sun, and cause damage to the device.

To prevent 12-volt battery discharge

Do not use the wireless charger for a long period of time with the hybrid system stopped.

Sun visors

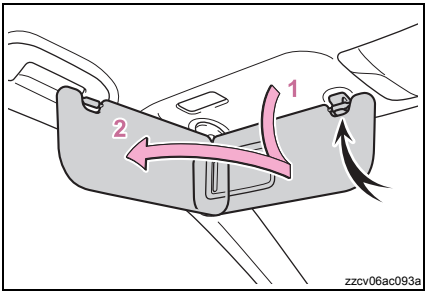


1 To set the visor in the forward position, flip it down.

2 To set the visor in the side position, flip down, unhook, and swing it to the side.

Vanity mirrors

Slide the cover to open.

The vanity light turns on. (if equipped)

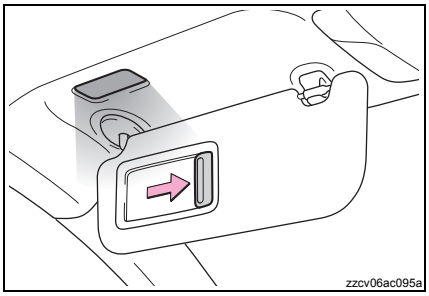

To prevent 12-volt battery discharge

If the vanity lights remain on when the power switch is OFF, the lights will go off automatically after 20 minutes.


NOTICE

To prevent the 12-volt battery from being discharged

Do not leave the vanity lights on for extended periods while the hybrid system is off.

Armrest (if equipped)

Fold down the armrest for use.

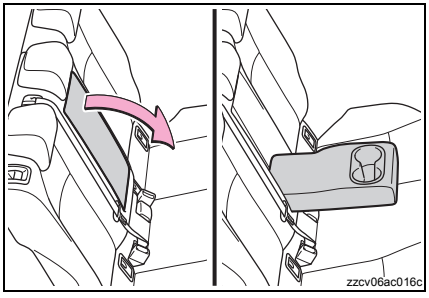


NOTICE

To prevent damage to the armrest

Do not apply too much load on the armrest.

Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

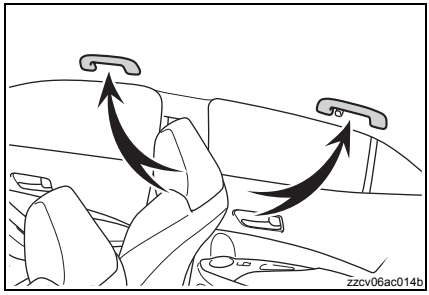

WARNING

Assist grip

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.


NOTICE

To prevent damage to the assist grip

Do not hang any heavy object or put a heavy load on the assist grip.

Coat hooks

The coat hooks are provided with the rear assist grips.

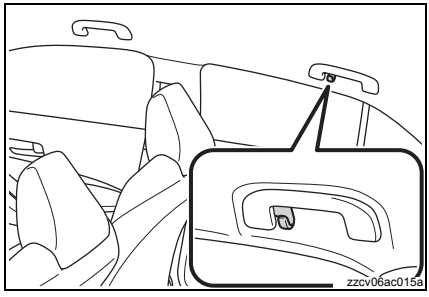

WARNING

■ Items that cannot be hung on the coat hook

Do not hang coat hangers or other hard or sharp objects on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles, causing death or serious injury.

7-1. Maintenance and care

Cleaning and protecting the vehicle exterior 478

Cleaning and protecting the vehicle interior 481

7-2. Maintenance

Maintenance requirements 484

7-3. Do-it-yourself maintenance

Do-it-yourself service precautions 486

Hood 488

Positioning a floor jack.....489

Engine compartment 490

12-volt battery.....498

Tires.....500

Tire inflation pressure 514

Wheels.....515

Air conditioning filter 517

Cleaning the hybrid battery (traction battery) air intake vent and filter.....519

Electronic key battery 522

Checking and replacing fuses 524

Light bulbs 528

Cleaning and protecting the vehicle exterior

Perform cleaning in a manner appropriate to each component and its material.

Cleaning instructions

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

■ Automatic car washes

● Before washing the vehicle:
- Fold the mirrors.
- Turn off the power back door system. (if equipped)

Start washing from the front of the vehicle. Extend the mirrors before driving.

● Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.

● In certain automatic car washes, the rear spoiler may interfere with machine operation. This may prevent the vehicle from being cleaned properly or result in damage to the rear spoiler.

■ High pressure car washes

As water may enter the cabin, do not bring the nozzle tip near the gaps around the doors or perimeter of the windows, or spray these areas continuously.

■ When using a car wash (vehicles with entry function)

If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:

● Place the key in a position 2 m (6 ft.) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)

● Set the electronic key to battery-saving mode to disable the smart entry & start system. (→P.163)

■ Aluminum wheels (if equipped)

● Remove any dirt immediately by using a neutral detergent.

● Wash detergent off with water immediately after use.

● To protect the paint from damage, make sure to observe the following precautions.
- Do not use acidic, alkaline or abrasive detergent
- Do not use hard brushes
- Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather

■ Bumpers

Do not scrub with abrasive cleaners.


WARNING

■When washing the vehicle

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components, etc. to catch fire.

■When cleaning the windshield (vehicles with rain-sensing windshield wipers)

Set the wiper switch to off. If the wiper switch is in “AUTO”, the wipers may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

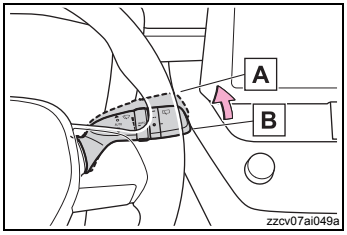

A Off

B AUTO

- When the upper part of the windshield where the raindrop sensor is located is touched by hand
- When a wet rag or similar is held close to the raindrop sensor
- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor

■Precautions regarding the exhaust pipe

Exhaust gasses cause the exhaust pipe to become quite hot.
When washing the vehicle, be careful not to touch the pipe until it has cooled sufficiently, as touching a hot exhaust pipe can cause burns.

■Precaution regarding the rear bumper with Blind Spot Monitor (if equipped)

If the paint of the rear bumper is chipped or scratched, the system may malfunction. If this occurs, consult with any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

NOTICE

■To prevent paint deterioration and corrosion on the body and components (aluminum wheels, etc.)

- Wash the vehicle immediately in the following cases:
  - After driving near the sea coast
  - After driving on salted roads
  - If coal tar or tree sap is present on the paint surface
  - If dead insects, insect droppings or bird droppings are present on the paint surface
  - After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
  - If the vehicle becomes heavily soiled with dust or mud
  - If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.

NOTICE

- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

■ Cleaning the exterior lights

- Wash carefully. Do not use organic substances or scrub with a hard brush.
  This may damage the surfaces of the lights.
- Do not apply wax to the surfaces of the lights.
  Wax may cause damage to the lenses.

■ To prevent damage to the windshield wiper arms

When lifting the wiper arms away from the windshield, pull the driver side wiper arm upward first, and repeat for the passenger side. When returning the wipers to their original position, do so from the passenger side first.

■ When using an automatic car wash (vehicles with rain-sensing windshield wipers)

Set the wiper switch to the off position. If the wiper switch is in “AUTO”, the wipers may operate and the wiper blades may be damaged.

■ When using a high pressure car wash

- Vehicles with rear view monitor system: When washing the vehicle, do not spray the camera or its surrounding area directly with a high pressure washer. Shock applied from high pressure water may cause the device to not operate normally.
- Do not bring the nozzle tip close to boots (rubber or resin manufactured cover), connectors or the following parts. The parts may be damaged if they come into contact with high-pressure water.
  - Traction related parts
  - Steering parts
  - Suspension parts
  - Brake parts
- Keep the cleaning nozzle at least 30 cm (11.9 in.) away from the vehicles body. Otherwise resin section, such as moldings and bumpers, may be deformed and damaged. Also, do not continuously hold the nozzle in the same place.
- Do not spray the lower part of the windshield continuously. If water enters the air conditioning system intake located near the lower part of the windshield, the air conditioning system may not operate correctly.
- Do not wash the underside of the vehicle using a high pressure car washer.

Cleaning and protecting the vehicle interior

Perform cleaning in a manner appropriate to each component and its material.

Protecting the vehicle interior

- Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.
- If dirt cannot be removed, wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
  Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

■ Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

■ Handling the seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

WARNING

■ Water in the vehicle

- Do not splash or spill liquid in the vehicle, such as on the floor, in the hybrid battery (traction battery) air intake vent, and in the luggage compartment. (→P.481)
  Doing so may cause the hybrid battery, electrical components, etc. to malfunction or catch fire.
- Do not get any of the SRS components or wiring in the vehicle interior wet. (→P.37)
  An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.
- Vehicles with wireless charger:
  Do not let the wireless charger (→P.469) get wet. Failure to do so may cause the charger to become hot and cause burns or could cause electric shock resulting in death or serious injury.

■ Cleaning the interior (especially instrument panel)

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

NOTICE

■ Cleaning detergents

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
  - Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, and bleach

NOTICE

- Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol

● Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

■ Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

● Remove any dust or dirt from leather surfaces immediately.

● Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.

● Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

■ Water on the floor

Do not wash the vehicle floor with water.
Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

■ When cleaning the inside of the windshield (vehicles with Toyota Safety Sense)

Do not allow glass cleaner to contact the lens. Also, do not touch the lens. (→P.267)

■ Cleaning the inside of the rear window

● Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna.

● Be careful not to scratch or damage the heater wires or antenna.

Cleaning the areas with satin-finish metal accents

- Remove dirt using a water-dampened soft cloth or synthetic chamois.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.

■ Cleaning the areas with satin-finish metal accents

The metal areas use a layer of real metal for the surface. It is necessary to clean them regularly. If dirty areas are left uncleaned for long periods of time, they may be difficult to clean.

Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted detergent.

Use a diluted water solution of approximately 5% neutral wool detergent.

- Wring out any excess water from

the cloth and thoroughly wipe off all remaining traces of detergent.

- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

Caring for leather areas

Toyota recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

Cleaning the synthetic leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Toyota recommends the maintenance below.

Where to go for maintenance service?

In order to maintain your vehicle in the best possible condition, Toyota recommends that maintenance service operations as well as other inspections and repairs be carried out by authorized Toyota retailers or Toyota authorized repairers, or any reliable repairers. For repairs and services covered by your warranty, please visit an authorized Toyota retailer or repairer, who will use genuine Toyota parts in repairing any difficulties you may encounter. There can also be advantages in utilizing authorized Toyota retailers or repairers for non-warranty repairs and services, as members of the Toyota network will be able to expertly assist you with any difficulties you may encounter.

Your Toyota retailer or Toyota authorized repairer, or any reliable repairer will perform all of the scheduled maintenance on your vehicle reliably and economically due to their experience with Toyota vehicles.

WARNING

If your vehicle is not properly maintained

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

Handling of the 12-volt battery

12-volt battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P.495, 498)

Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For full details of your maintenance schedule, read the “Toyota Service Booklet” or “Toyota Warranty Booklet”.

Do-it-yourself maintenance

What about do-it-yourself maintenance?

Many of the maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools.

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you're an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Any authorized Toyota retailer or repairer will keep a record of maintenance, which could be useful should you ever require Warranty Service. Should you choose to select a qualified and equipped professional other than an authorized Toyota repairer to service or maintain your vehicle, we recommend that you

request that a record of maintenance be kept.

Does your vehicle need repairs?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning system after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driven straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floor, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal (→P.113, 117)

If you notice any of these clues, take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible. Your vehicle may need adjustment or repair.

Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure as given in these sections.

Maintenance

Items	Parts and tools
12-volt battery condition (→P.495, 498)	▶ 2ZR-FXE engine • Warm water • Baking soda • Grease • Conventional wrench (for terminal clamp bolts) ▶ M20A-FXS engine • Grease • Conventional wrench (for terminal clamp bolts)
Engine/power control unit coolant level (→P.493)	• “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology. “Toyota Super Long Life Coolant” is pre-mixed with 50% coolant and 50% deionized water. • Funnel (used only for adding coolant)
Engine oil level (→P.491)	• “Toyota Genuine Motor Oil” or equivalent • Rag or paper towel • Funnel (used only for adding engine oil)
Fuses (→P.524)	• Fuse with same amperage rating as original
Hybrid battery (traction battery) air intake vent (→P.519)	• Vacuum cleaner, etc. • Phillips screwdriver
Light bulbs (→P.528)	• Bulb with same number and wattage rating as original • Flathead screwdriver • Wrench
Radiator and condenser (→P.495)	—
Tire inflation pressure (→P.514)	• Tire pressure gauge • Compressed air source
Washer fluid (→P.497)	• Water or washer fluid containing antifreeze (for winter use) • Funnel (used only for adding water or washer fluid)

WARNING

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions.

WARNING

■ When working on the engine compartment

- Make sure that the “ACCESSORY” or “IGNITION ON” on the multi-information display and the “READY” indicator are both off.
- Keep hands, clothing and tools away from the moving fans.
- Be careful not to touch the engine, power control unit, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel or 12-volt battery. Fuel and 12-volt battery fumes are flammable.
- Be extremely cautious when working on the 12-volt battery. It contains poisonous and corrosive sulfuric acid.
- Take care because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.
  If you still experience discomfort, consult a doctor.

■ When working near the electric cooling fans or radiator grille

Be sure the power switch is OFF. With the power switch in ON, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P.495)

■ Safety glasses

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting in your eyes.

NOTICE

■ If you remove the air cleaner filter

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.

■ If the fluid level is low or high


It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.
If the reservoir needs frequent refilling, it may indicate a serious problem.

Hood


Opening the hood

1 Pull the hood lock release lever.


The hood will pop up slightly.

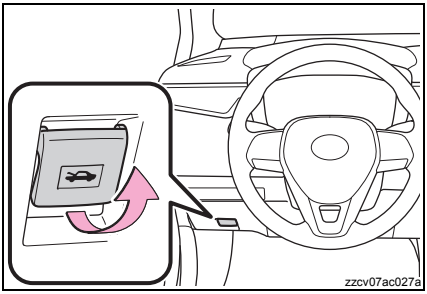

2 Pull the auxiliary catch lever to the left and lift the hood.

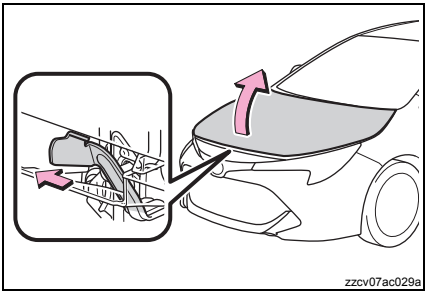

3 Hold the hood open by inserting the support rod into the slot.

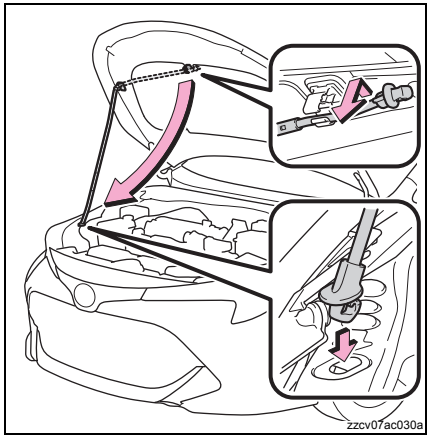

WARNING

■ Pre-driving check

Check that the hood is fully closed and locked.
If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

■ After installing the support rod into the slot

Make sure the rod supports the hood securely preventing it from falling down onto your head or body.

NOTICE

■ When closing the hood


Be sure to return the support rod to its clip before closing the hood. Closing the hood with the support rod not clipped could cause the hood to bend.

Positioning a floor jack

When using a floor jack, follow the instructions in the manual provided with the jack and perform the operation safely.
When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.


Location of the jack point

■ **Front**

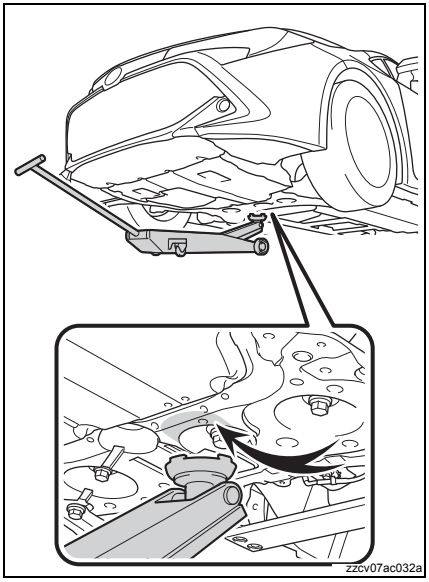


■ **Rear**

▶ Hatchback

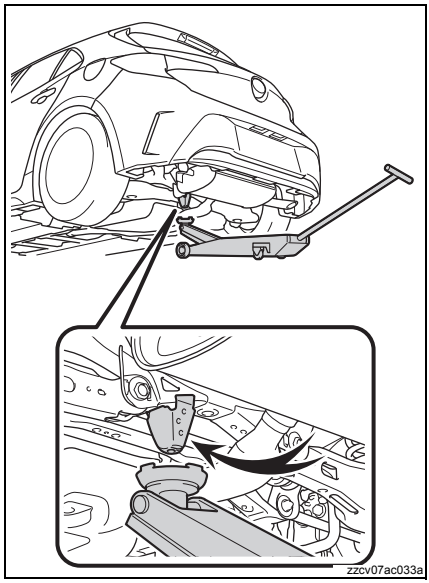


▶ Wagon

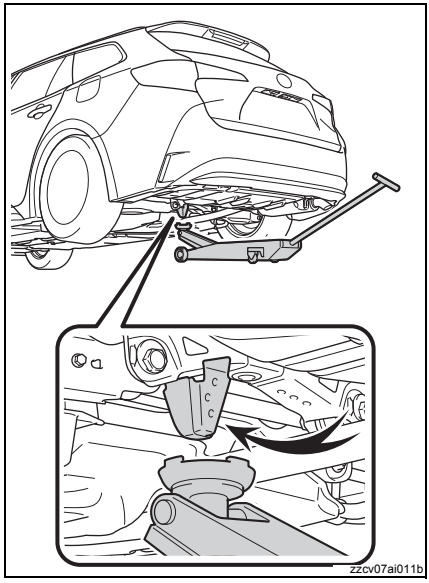

Engine compartment

Components

▶ 2ZR-FXE engine

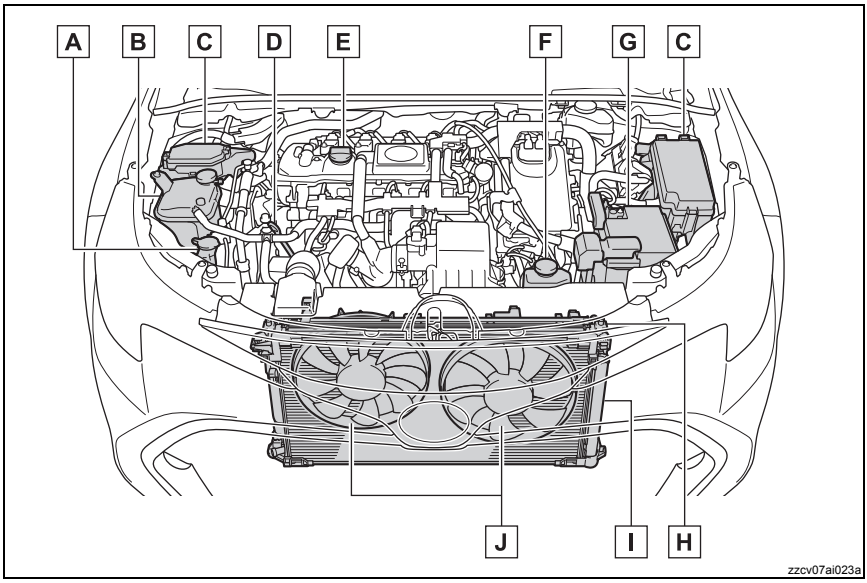

A Washer fluid tank (→P.497)

B Engine coolant reservoir (→P.493)

C Fuse boxes (→P.524)

D Engine oil level dipstick (→P.491)

E Engine oil filler cap (→P.492)

F Power control unit coolant reservoir (→P.493)


G 12-volt battery (→P.495)

H Radiator (→P.495)

I Condenser (→P.495)

J Electric cooling fans

▶ M20A-FXS engine

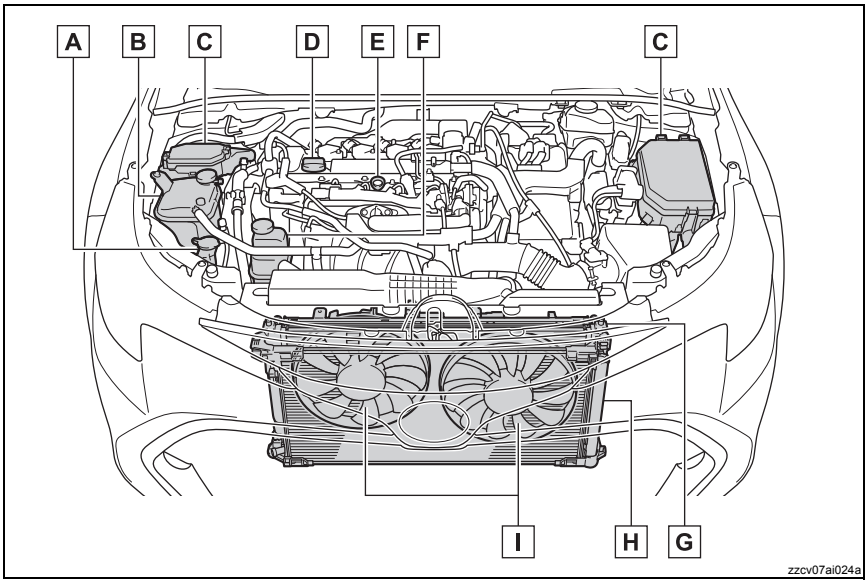

A Washer fluid tank (→P.497)

B Engine coolant reservoir (→P.490)

C Fuse boxes (→P.524)

D Engine oil filler cap (→P.492)

E Engine oil level dipstick (→P.491)

F Power control unit coolant reservoir (→P.493)

G Radiator (→P.495)

H Condenser (→P.495)

I Electric cooling fans

■ **12-volt battery (M20A-FXS engine)**
→P.498

Checking and adding the engine oil


With the engine at operating temperature and turned off, check the oil level on the dipstick.

■ **Checking the engine oil**


1 Park the vehicle on level ground. After warming up the engine and turning off the hybrid system, wait more than 5 minutes for the oil to drain back into the bottom of the engine.

2 Holding a rag under the end, pull the dipstick out.

▶ 2ZR-FXE engine

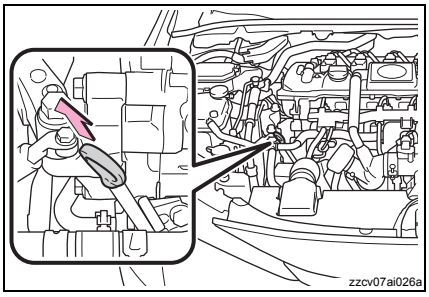


▶ M20A-FXS engine

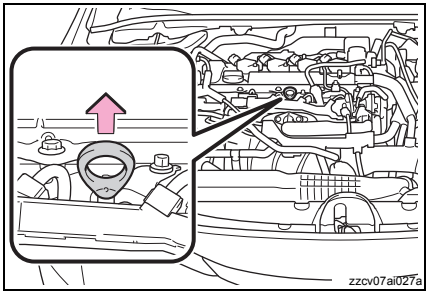

3 Wipe the dipstick clean.

4 Reinsert the dipstick fully.

5 Holding a rag under the end, pull the dipstick out and check the oil level.

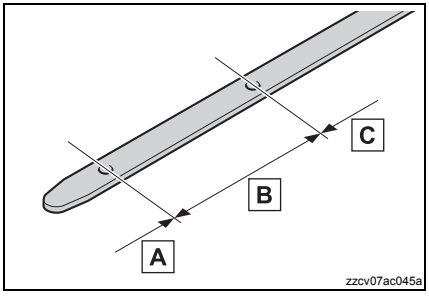

A Low

B Normal

C Excessive

The shape of the dipstick may differ depending on the type of vehicle or engine.

6 Wipe the dipstick and reinsert it fully.

■ Checking the oil type and preparing the item needed


Make sure to check the oil type and prepare the items needed before adding oil.

- Engine oil selection
  →P.602
- Oil quantity (Low → Full)
  1.5 L (1.6 qt., 1.3 Imp. qt.)
- Item
  Clean funnel


■ Adding engine oil

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

▶ 2ZR-FXE engine

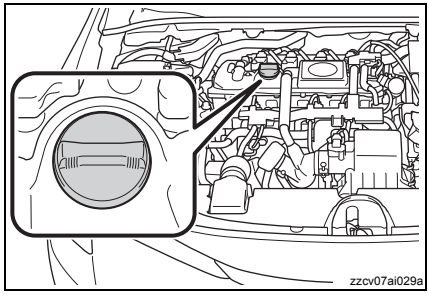

▶ M20A-FXS engine

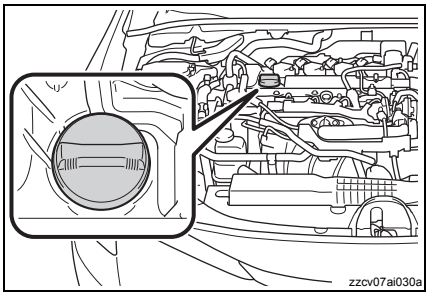

1 Remove the oil filler cap by turning it counterclockwise.

2 Add engine oil slowly, checking the dipstick.

3 Install the oil filler cap by turning it clockwise.

Engine oil consumption

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, when towing, or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic

WARNING

Used engine oil

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground. Call any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

NOTICE

To prevent serious engine damage

Check the oil level on a regular basis.

When replacing the engine oil


- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.

Checking the coolant

Engine coolant reservoir

The coolant level is satisfactory if it is between the “FULL” and “LOW”

lines on the reservoir when the engine is cold.

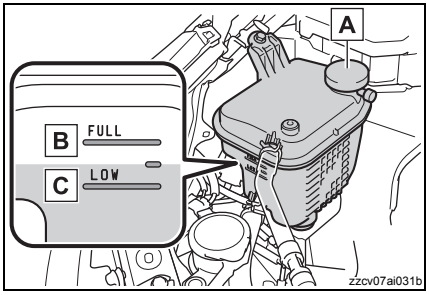

A Reservoir cap

B "FULL" line


C "LOW" line

If the level is on or below the "LOW" line, add coolant up to the "FULL" line. (→P.590)

■ Power control unit coolant reservoir

▶ 2ZR-FXE engine

The coolant level is satisfactory if it is between the "FULL" and "LOW" lines on the reservoir when the hybrid system is cold.

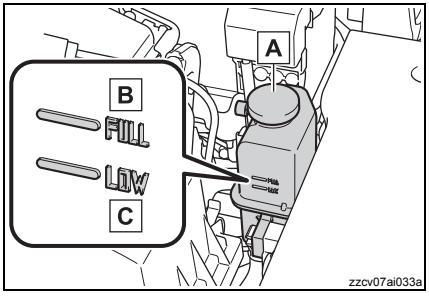

A Reservoir cap


B "FULL" line

C "LOW" line

If the level is on or below the "LOW" line, add coolant up to the "FULL" line. (→P.590)

▶ M20A-FXS engine

The coolant level is satisfactory if it is between the "F" and "L" lines on the reservoir when the hybrid system is cold.

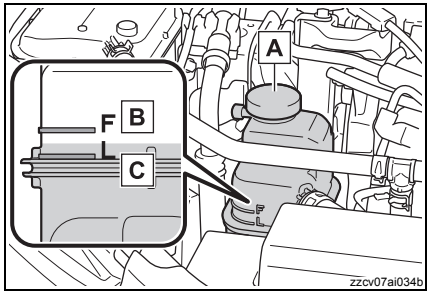

A Reservoir cap

B "F" line

C "L" line

If the level is on or below the "L" line, add coolant up to the "F" line. (→P.590)

■ Coolant selection

Only use "Toyota Super Long Life Coolant" or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

"Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -35°C [-31°F])

For more details about coolant, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ If the coolant level drops within a short time of replenishing

Visually check the radiator, hoses, engine/power control unit coolant reservoir caps, drain cock and water pump. If you cannot find a leak, have any authorized Toyota retailer or Toyota authorized repairer, or any reliable

repairer, test the cap and check for leaks in the cooling system.

WARNING

■When the hybrid system is hot

Do not remove the engine/power control unit coolant reservoir caps.

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.

NOTICE

■When adding coolant

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

■If you spill coolant

Be sure to wash it off with water to prevent it from damaging parts or paint.

Checking the radiator and condenser

Check the radiator and condenser and clear away any foreign objects. If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■When the hybrid system is hot


Do not touch the radiator or condenser as they may be hot and cause serious injuries, such as burns.

12-volt battery (2ZR-FXE engine)

Check the 12-volt battery as follows.

■ 12-volt battery exterior

Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

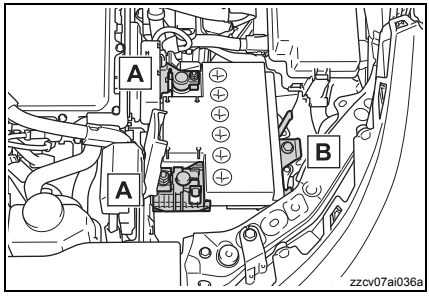

A Terminals

B Hold-down clamp

■Before recharging

When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.

■ **After recharging/reconnecting the 12-volt battery**

- Vehicles with entry function: Unlocking the doors using the smart entry & start system may not be possible immediately after reconnecting the 12-volt battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.
- Start the hybrid system with the power switch in ACC. The hybrid system may not start with the power switch turned off. However, the hybrid system will operate normally from the second attempt.
- The power switch mode is recorded by the vehicle. If the 12-volt battery is reconnected, the vehicle will return the power switch mode to the status it was in before the 12-volt battery was disconnected. Make sure to turn off the power before disconnecting the 12-volt battery. Take extra care when connecting the 12-volt battery if the power switch mode prior to discharge is unknown.

If the system will not start even after multiple attempts, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ **Chemicals in the 12-volt battery**

The 12-volt battery contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:

- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the 12-volt battery.
- Keep children away from the 12-volt battery.

■ **Where to safely charge the 12-volt battery**

Always charge the 12-volt battery in an open area. Do not charge the 12-volt battery in a garage or closed room where there is insufficient ventilation.

■ **Emergency measures regarding electrolyte**

- If electrolyte gets in your eyes
  Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin
  Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes
  It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte
  Drink a large quantity of water or milk. Get emergency medical attention immediately.

WARNING

■When disconnecting the 12-volt battery

Do not disconnect the negative (-) terminal on the body side. The disconnected negative (-) terminal may touch the positive (+) terminal, which may cause a short and result in death or serious injury.

NOTICE

■When recharging the 12-volt battery


Never recharge the 12-volt battery while the hybrid system is operating. Also, be sure all accessories are turned off.

Adding the washer fluid

▶ Vehicles with a washer fluid level gauge

The washer fluid level is extremely low.


Raise the cap keeping your finger pressed down on the hole in the center and check the fluid level in the tube.

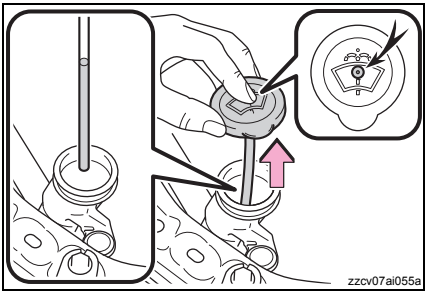

▶ Vehicles without a washer fluid level gauge

Add washer fluid in the following situations:

- A washer does not work.
- The warning message appears on the multi-information display.

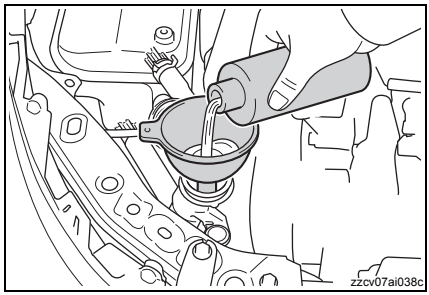

WARNING

■When adding washer fluid

Do not add washer fluid when the hybrid system is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the engine, etc.

NOTICE

■Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces, as well as damaging the pump leading to problems of the washer fluid not spraying.

■Diluting washer fluid


Dilute washer fluid with water as necessary.
Refer to the freezing temperatures listed on the label of the washer fluid bottle.

12-volt battery (M20A-FXS engine)

Location

▶ Hatchback


The 12-volt battery is located in the luggage compartment under the deck mat or deck board.

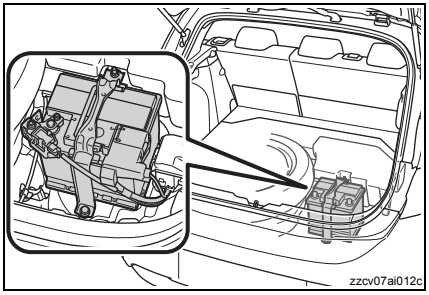

Opening the deck board (→P.460) or lift the deck mat (→P.461).

▶ Wagon


The 12-volt battery is located in the right-hand side of luggage compartment.

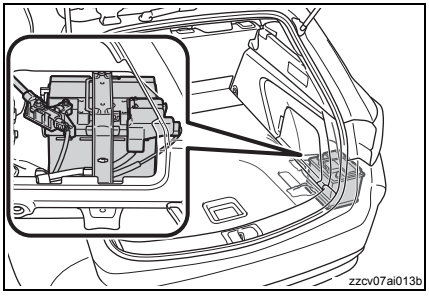

Removing the 12-volt battery cover (wagon)

1 Opening the deck board (→P.460).

2 Removing the 12-volt battery cover.

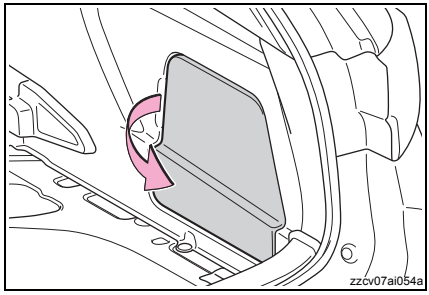

■ Before recharging

When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.

■ After recharging/reconnecting the 12-volt battery

- Vehicles with entry function: Unlocking the doors using the smart entry & start system may not be possible immediately after reconnecting the 12-volt battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.
- Start the hybrid system with the power switch in ACC. The hybrid system may not start with the power switch turned off. However, the hybrid system will operate normally from the second attempt.
- The power switch mode is recorded by the vehicle. If the 12-volt battery is reconnected, the vehicle will return the power switch mode to the status it was in before the 12-volt battery was

disconnected. Make sure to turn off the power before disconnecting the 12-volt battery. Take extra care when connecting the 12-volt battery if the power switch mode prior to discharge is unknown.

If the system will not start even after multiple attempts, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ Chemicals in the 12-volt battery

The 12-volt battery contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:

- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the 12-volt battery.
- Keep children away from the 12-volt battery.

■ Where to safely charge the 12-volt battery

Always charge the 12-volt battery in an open area. Do not charge the 12-volt battery in a garage or closed room where there is insufficient ventilation.

■ Emergency measures regarding electrolyte

- If electrolyte gets in your eyes
  Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin
  Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes
  It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte
  Drink a large quantity of water or milk. Get emergency medical attention immediately.

■ When replacing the 12-volt battery

Use a 12-volt battery designed for this vehicle. Failure to do so may cause gas (hydrogen) to enter the passenger compartment, causing a fire or explosion.

For replacement of the 12-volt battery, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

NOTICE


■ When recharging the 12-volt battery

Never recharge the 12-volt battery while the hybrid system is operating. Also, be sure all accessories are turned off.

Exterior

Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.


▶ Hatchback

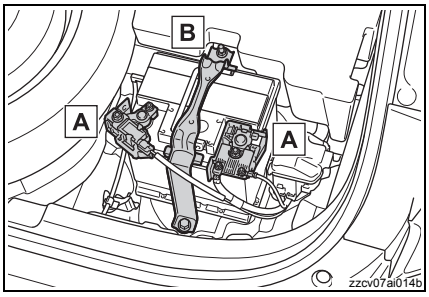

A Terminals

B Hold-down clamp

▶ Wagon

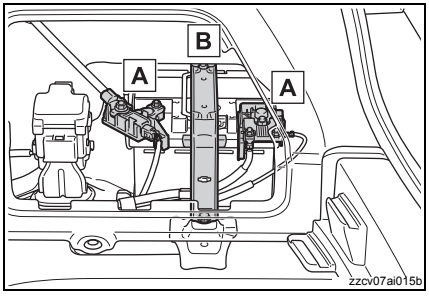

A Terminals

B Hold-down clamp


Tires

Replace or rotate tires in accordance with maintenance schedules and treadwear.

Checking tires

Check if the treadwear indicators are showing on the tires. Also check the tires for uneven wear, such as excessive wear on one side of the tread.

Check the spare tire condition and pressure if not rotated.

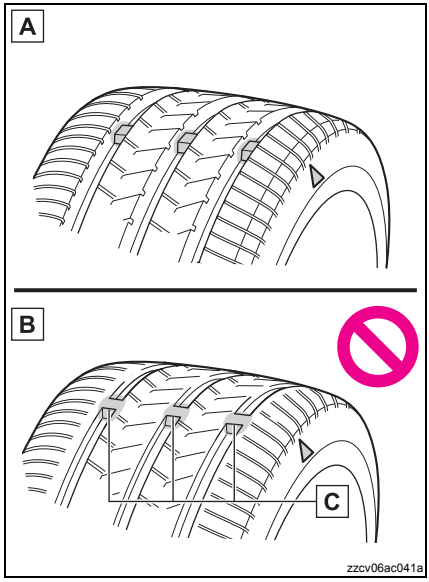

A New tread

B Worn tread

C Treadwear indicator

The location of treadwear indicators is shown by a “TWI” or “ △ ” mark, etc., molded into the sidewall of each tire.

Replace the tires if the treadwear indicators are showing on a tire.

When to replace your vehicle's tires

Tires should be replaced if:

- The treadwear indicators are showing on a tire.
- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Tire life

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

If the tread on snow tires wears down below 4 mm (0.16 in.)

The effectiveness of the tires as snow tires is lost.

Checking the tire valves

When replacing the tires, check the tire valves for deformation, cracks, and other damage.

WARNING

When inspecting or replacing tires

Observe the following precautions to prevent accidents.
Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes, models or tread patterns.
  Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Toyota.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.
  Do not use tires if you do not know how they were used previously.

NOTICE

If tire inflation pressure of each tire becomes low while driving


Do not continue driving, or your tires and/or wheels may be ruined.

Driving on rough roads

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

Tire rotation (vehicles with a tire pressure warning system)

Rotate the tires in the order shown.

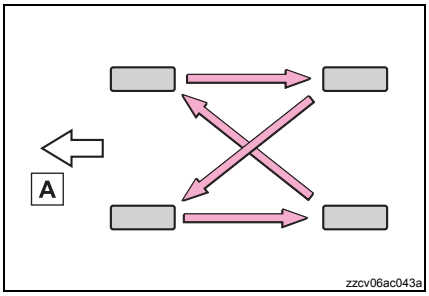

A Front


To equalize tire wear and help extend tire life, Toyota recommends that tire rotation is carried out approximately every 10000 km (6000 miles).

When rotating front and rear tires which have different tire inflation pressures, do not fail to initialize the tire pressure warning system after tire rotation.

Tire rotation (vehicles without a tire pressure warning system)


Rotate the tires in the order shown.

▶ Vehicles without a full-size spare tire.

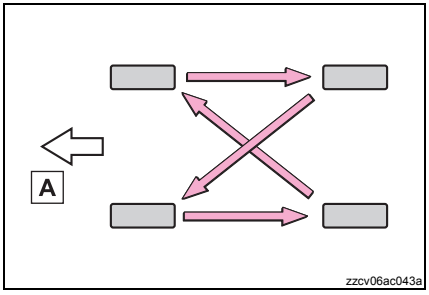

A Front

▶ Vehicles with a full-size spare tire

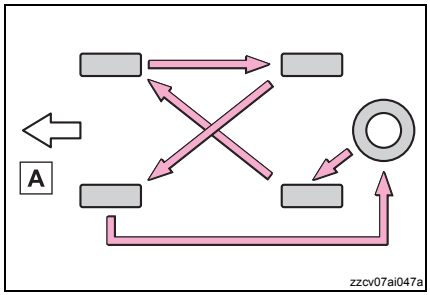

A Front

To equalize tire wear and help extend tire life, Toyota recommends that tire rotation is carried out approximately every 10000 km (6000 miles).

Tire pressure warning system (if equipped)

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

If the tire pressure drops below a predetermined level, the driver is warned by a warning light. (→P.546)

■ Routine tire inflation pressure checks

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

■ Situations in which the tire pressure warning system may not operate properly

● In the following cases, the tire pres-

sure warning system may not operate properly.
- If non-genuine Toyota wheels are used.
- A tire has been replaced with a tire that is not an OE (Original Equipment) tire.
- A tire has been replaced with a tire that is not of the specified size.
- Tire chains, etc. are equipped.
- An auxiliary-supported run-flat tire is equipped.
- If a window tint that affects the radio wave signals is installed.
- If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings.
- If the tire inflation pressure is extremely higher than the specified level.
- If tires not equipped with tire pressure warning valves and transmitters are used.
- If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer.

●Performance may be affected in the following situations.
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise.
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device.

●When the vehicle is parked, the time taken for the warning to start or go off could be extended.

●When tire inflation pressure declines rapidly for example when a tire has burst, the warning may not function.

■Warning performance of the tire pressure warning system

The warning of the tire pressure warning system will change in accordance with driving conditions. For this reason, the system may give a warning even if the tire pressure does not reach a low enough level, or if the pressure is higher than the pressure that was adjusted to when the system was initialized.

■Tire pressure warning system certification

・Manufacturer's name: PACIFIC INDUSTRIAL CO.,LTD.

・Registered trademark:

This trademark is registered in the following countries:
UK, Italy, Austria, Greece, Germany, France, Belgium, the Netherlands, Luxembourg, Portugal.

・Manufacturer's address:
1300-1 Yokoi, Godo-cho, Anpachi-gun, Gifu, 503-2397 JAPAN

・Operating frequency band: 433.05 — 434.79MHz

・Maximum radio-frequency power: 100dBμV/m@3m(Radiated)

zzcv07al050a

Hereby, PACIFIC INDUSTRIAL CO.,LTD. declares that the radio equipment type PMV-E100 is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO.,LTD. vakuuttaa, että radiolaitetyyppi PMV-E100 on direktiivin 2014/53/EU mukainen.
EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hierbij verklaar ik, PACIFIC INDUSTRIAL CO.,LTD., dat het type radioapparatuur PMV-E100 conform is met Richtlijn 2014/53/EU.
De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Le soussigné, PACIFIC INDUSTRIAL CO.,LTD., déclare que l'équipement radioélectrique du type PMV-E100 est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

zzcv07ai051a

Härmed försäkrar PACIFIC INDUSTRIAL CO.,LTD. att denna typ av radioutrustning PMV-E100 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Hermed erklærer PACIFIC INDUSTRIAL CO.,LTD., at radioudstyrstypen PMV-E100 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Hiermit erklärt PACIFIC INDUSTRIAL CO.,LTD. , dass der Funkanlagentyp PMV-E100 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Με την παρούσα ο/η PACIFIC INDUSTRIAL CO.,LTD., δηλώνει ότι ο ραδιοεξοπλισμός PMV-E100 πληροί την οδηγία 2014/53/ΕΕ.Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

zzcv07ai051b

Il fabbricante, PACIFIC INDUSTRIAL CO.,LTD. , dichiara che il tipo di apparecchiatura radio PMV-E100 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Por la presente, PACIFIC INDUSTRIAL CO.,LTD.declara que el tipo de equipo radioeléctrico PMV-E100 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
O(a) abaixo assinado(a) PACIFIC INDUSTRIAL CO.,LTD. declara que o presente tipo de equipamento de rádio PMV-E100 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponí vel no seguinte endereço de Internet: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
B'dan, PACIFIC INDUSTRIAL CO.,LTD., niddikjara li dan it-tip ta' tagħmir tar-radju PMV-E100 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Käesolevaga deklareerib PACIFIC INDUSTRIAL CO.,LTD., et käesolev raadioseadme tüüp PMV-E100 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav jä rgmisel internetiaadressil: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

zzcv07ai051c

PACIFIC INDUSTRIAL CO.,LTD. igazolja, hogy a PMV-E100 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.
Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a kö vetkező internetes címen:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO.,LTD. týmto vyhlasuje, že rádiové zariadenie typu PMV-E100 je
v súlade so smernicou 2014/53/EÚ.
Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Tímto PACIFIC INDUSTRIAL CO.,LTD. prohlašuje, že typ rá diového zařízení PMV-E100 je v souladu
se směrnicí 2014/53/EU.
Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO.,LTD. potrjuje, da je tip radijske opreme PMV-E100 skladen z Direktivo
2014/53/EU.
Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Aš, PACIFIC INDUSTRIAL CO.,LTD. , patvirtinu, kad radijo į renginių tipas PMV-E100 atitinka Direktyvą 2014/53/ES.
Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

zzcv07ai051d

Ar šoPACIFIC INDUSTRIAL CO.,LTD. deklarē, ka radioiekārta PMV-E100 atbilst Direktīvai 2014/53/ES.
Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO.,LTD. niniejszym oświadcza, że typ urządzenia radiowego PMV-E100 jest zgodny z dyrektywą 2014/53/UE.
Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hér með lýsir PACIFIC INDUSTRIAL CO.,LTD. yfir því að PMV-E100 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.
Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO.,LTD. erklærer at PMV-E100 er i overensstemmelse med direktiv 2014/53/EU.
Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

zzcv07ai051e

С настоящото PACIFIC INDUSTRIAL CO.,LTD. декларира, че този тип радиосъоръжение PMV-E100 е в съответствие с Директива 2014/53/ЕС.
Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Prin prezenta, PACIFIC INDUSTRIAL CO.,LTD. declară că tipul de echipamente radio PMV-E100 este în conformitate cu Directiva 2014/53/UE.
Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Ovim, PACIFIC INDUSTRIAL CO.,LTD. , izjavljuje da ovaj PMV-E100 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Ovim, PACIFIC INDUSTRIAL CO.,LTD., deklariše da je PMV-E100 u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 1999/5/EC.
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO.,LTD. ovime izjavljuje da je radijska oprema tipa PMV-E100 u skladu s Direktivom 2014/53/EU.
Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

zzcv07ai0511

Nepermjet kesaj, PACIFIC INDUSTRIAL CO.,LTD. , deklaroj qe ky PMV-E100 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.

http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

zzcv07ai051g



zzcv07ai052a

AGREE PAR L' ANRT MAROC
Numéro d' agrément :MR 15379 ANRT 2017
Date d' agrément :13/12/2017

zzcv07ai053a

Installing tire pressure warning valves and transmitters (vehicles with a tire pressure warning system)

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer and the tire pressure warning system must be initialized. Have tire pressure warning valves and transmitter ID codes registered any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (→P.512)

Replacing tires and wheels

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 10 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.

NOTICE

Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps

- When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as the tire pressure warning valves and transmitters may be damaged if not handled correctly.

NOTICE

- Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves and the tire pressure warning valves could be bound.
- When replacing tire valve caps, do not use tire valve caps other than those specified. The cap may become stuck.

■ To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P.510)

Initializing the tire pressure warning system (if equipped)

■ The tire pressure warning system must be initialized in the following circumstances:

- When rotating front and rear tires which have different tire inflation pressures.
- When changing the tire size.
- When the tire inflation pressure is changed such as when changing traveling speed or load weight.
- When changing between two registered wheel sets.

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the benchmark pressure.

■ How to initialize the tire pressure warning system

1. Park the vehicle in a safe place and turn the power switch off.


Initialization cannot be performed while the vehicle is moving.

2. Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P.606)

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

3. Turn the power switch to ON.
4. Press ❮ or ❯ of the meter control switch to select ⚙.
5. Press ∧ or ∨ to select “Vehicle Settings” and then press and hold OK.
6. Press ∧ or ∨ to select “TPWS” and then press OK.
7. Press ∧ or ∨ to select “Set Pressure”. Then press and hold

OK until the tire pressure warning light blinks 3 times.

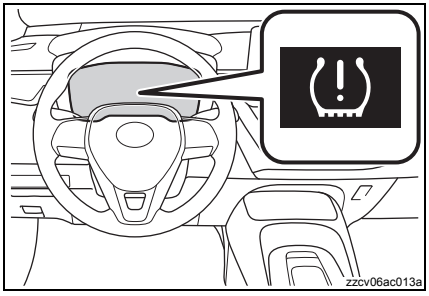

■ **Initialization procedure**

- Make sure to carry out initialization after adjusting the tire inflation pressure.
  Also, make sure the tires are cold before carrying out initialization or tire inflation pressure adjustment.
- If you have accidentally turned the power switch off during initialization, it is not necessary to press the reset switch again as initialization will restart automatically when the power switch is turned to ON the next time.
- If you accidentally press the reset switch when initialization is not necessary, adjust the tire inflation pressure to the specified level when the tires are cold, and conduct initialization again.

■ **When initialization of the tire pressure warning system has failed**

Initialization can be completed in a few minutes. However, in the following cases, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When operating the tire pressure warning reset switch, the tire pressure warning light does not blink 3 times.
- After driving for a certain period of time since the initialization has been completed, the warning light comes on after blinking for 1 minute.

WARNING

■ **When initializing the tire pressure warning system**

Do not initialize the tire pressure warning system without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

Registering ID codes (vehicles with a tire pressure warning system)

The tire pressure warning valve and transmitter is equipped with a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code. Have the ID code registered by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Selecting wheel set (vehicles with a tire pressure warning system)

Your vehicle is equipped with tire pressure warning system with the function to have ID codes registered for a second wheel set, for example a winter set, by any authorized Toyota retailer or Toyota authorized repairer, or any reliable

repairer.

After registration of a second wheel set, either of these two wheel sets can be selected for usage with the tire pressure warning system.

■ **Operating conditions for the function**

- This function will perform the change of wheel set only if a second wheel set has been registered. If no second wheel set has been registered, no change will be made when selecting this function in the menu.
- Only a change between both registered wheel set is possible, mixing between these wheel sets is not supported.

■ **How to change between wheel sets**


1 Have the vehicle fitted with the preferred wheel set.

2 Press ❮ or ❯ of the meter control switch to select ⚙.

3 Press ∧ or ∨ to select “Vehicle Settings” and then press OK.

4 Press ∧ or ∨ to select “TPWS” and then press OK.

5 Press ∧ or ∨ to select “Change Wheel”. Then press and hold OK until the tire pressure warning light blinks slowly 3 times.

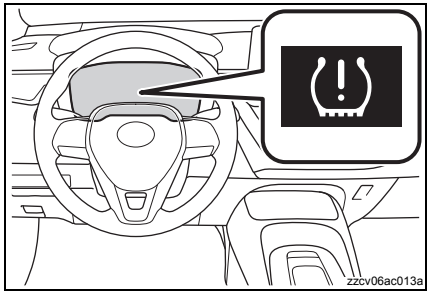


6 Initialize the tire pressure warning system. (→P.511)

Tire inflation pressure

Make sure to maintain proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Toyota recommends that tire inflation pressure be checked once every two weeks. (→P.606)

Tire-loading information label

Tire inflation pressure is specified on the label on the driver's side door frame as shown.

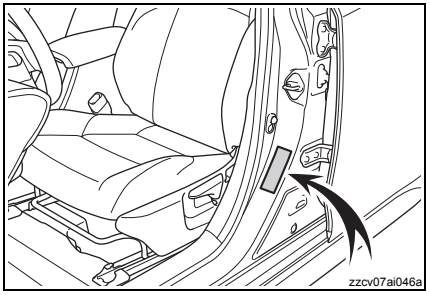

■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel economy
- Reduced driving comfort and poor handling
- Reduced tire life due to wear
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold. If your vehicle has been parked for at least 3 hours or has not been driven for more than 1.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge. It is difficult to judge if a tire is properly inflated based only on its appearance.
- It is normal for the tire inflation pressure to be higher after driving as heat is generated in the tire. Do not reduce tire inflation pressure after driving.
- Passengers and luggage weight should be placed so that the vehicle is balanced.

⚠ WARNING

■ Proper inflation is critical to save tire performance

Keep your tires properly inflated.
If the tires are not properly inflated, the following conditions may occur which could lead to an accident resulting in death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Air leaking from between tire and wheel
- Wheel deformation and/or tire damage
- Greater possibility of tire damage while driving (due to road hazards, expansion joints, sharp edges on the road, etc.)

NOTICE

When inspecting and adjusting tire inflation pressure

Be sure to put the tire valve caps back on.
If a valve cap is not installed, dirt or moisture may get into the valve and cause an air leak, resulting in decreased tire inflation pressure.

Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset*.

Replacement wheels are available at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*: Conventionally referred to as offset.

Toyota does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened


When replacing wheels (vehicles with a tire pressure warning system)

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, the tire pressure warning valves and transmitters must be installed. (→P.510)

When removing the wheel ornament (vehicles with a wheel cap clip)

Remove the wheel ornament using the wheel cap clip*.

*: The wheel cap clip is installed in the glove box. (→P.457)

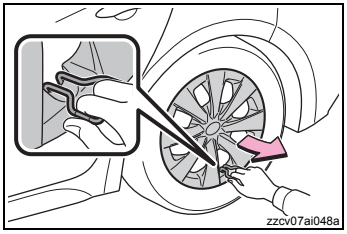


WARNING

When replacing wheels

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire.
  Doing so may result in an accident, causing death or serious injury.

When installing the wheel nuts

- Be sure to install the wheel nuts with the tapered ends facing inward. Installing the nuts with the tapered ends facing outward can cause the wheel to break and eventually cause the wheel to come off while driving, which could lead to an accident resulting in death or serious injury.

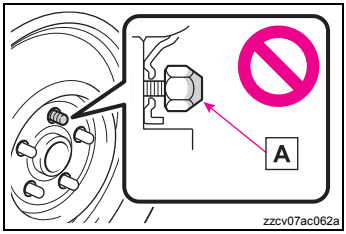

A Tapered portion

- Never use oil or grease on the wheel bolts or wheel nuts.
  Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing an accident and resulting in death or serious injury. Remove any oil or grease from the wheel bolts or wheel nuts.

Use of defective wheels prohibited

Do not use cracked or deformed wheels. Doing so could cause the tire to leak air during driving, possibly causing an accident.

NOTICE

■ Replacing tire pressure warning valves and transmitters (vehicles with a tire pressure warning system)

- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. In addition, make sure to purchase your tire pressure warning valves and transmitters at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Ensure that only genuine Toyota wheels are used on your vehicle. Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

Aluminum wheel precautions (if equipped)

- Use only Toyota wheel nuts and wheel nut wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Toyota genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.


Air conditioning filter

The air conditioning filter must be changed regularly to maintain air conditioning efficiency.


Removing the air conditioning filter

1 Turn the power switch off.

2 Open the glove box. Slide off the damper.

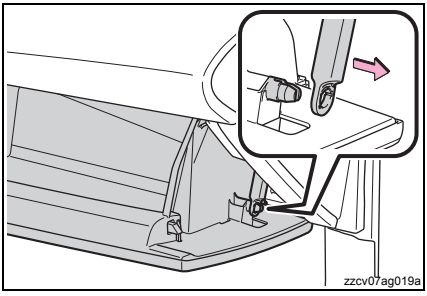


3 Push in the glove box on the vehicle's outer side to disconnect the claws. Then pull out the glove box and disconnect the lower claws.

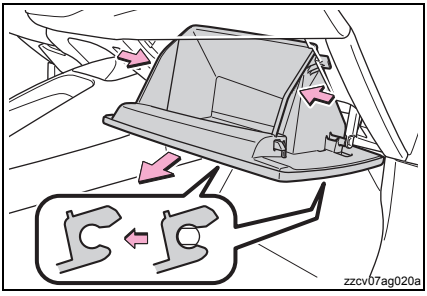


4 Unlock the filter cover (A), pull the filter cover out of the claws

(B), and remove the filter cover.

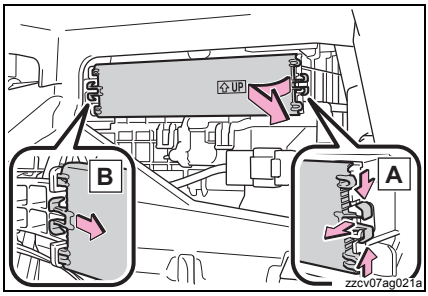


5 Remove the filter case.

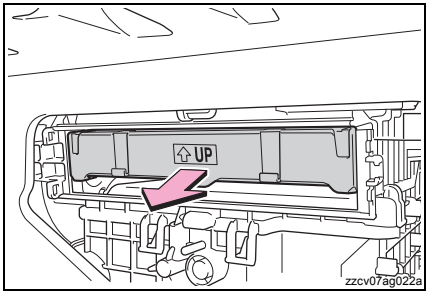

6 Remove the air conditioning filter from the filter case and replace it with a new one.

The "⇧ UP" marks shown on the filter and the filter case should be pointing up.

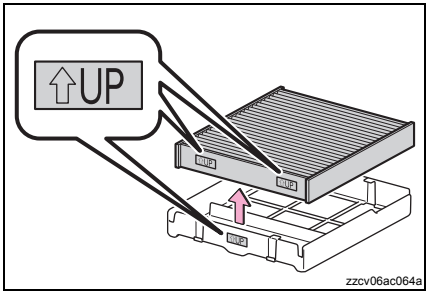

■ Checking interval

Inspect and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the "Toyota Service Booklet" or "Toyota Warranty Booklet".)

■ If air flow from the vents decreases dramatically

The filter may be clogged. Check the filter and replace if necessary.


⚠ NOTICE

■ When using the air conditioning system

Make sure that a filter is always installed.
Using the air conditioning system without a filter may cause damage to the system.

■ To prevent damage to the filter cover

When moving the filter cover in the direction of arrow to release the fitting, pay attention not to apply excessive force to the claws. Otherwise, the claws may be damaged.

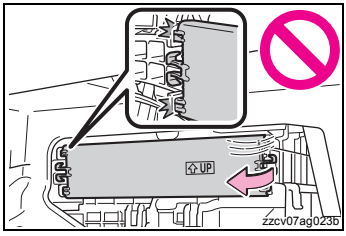


Cleaning the hybrid battery (traction battery) air intake vent and filter

To prevent the fuel economy from being affected, visually inspect the hybrid battery (traction battery) air intake vent periodically for dust and clogs. If it is dusty or clogged or if "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is displayed on the multi-information display, clean the air intake vent using the following procedures:

Cleaning the air intake vent

Remove the dust from the air intake vent with a vacuum cleaner, etc.

Make sure to only use a vacuum to suck out dust and clogs. Attempting to blow out dust and clogs using an airgun, etc. may push it into the air intake vent. (→P.521)

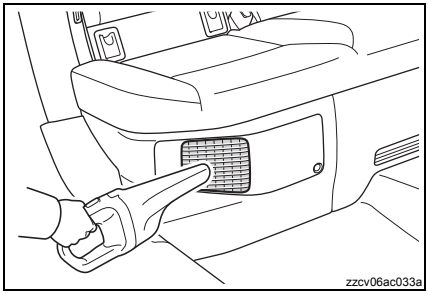


If dust and clogs cannot be completely removed


If dust and clogs cannot be completely removed with the air intake vent cover installed, remove the cover and clean the filter.

1 Turn the power switch off.

2 Using a Phillips screwdriver, remove the clip.

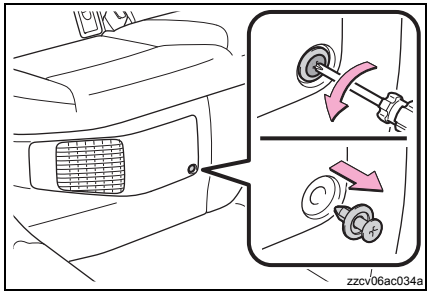


3 Remove the air intake vent cover.

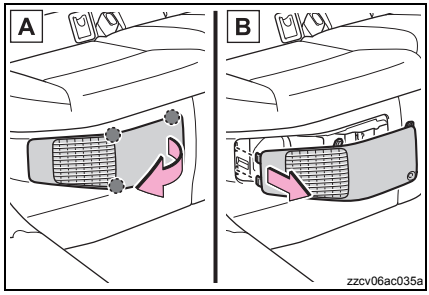

A Pull the cover as shown in the illustration to disengage the 3 claws, starting from the claw in the upper right corner.

B Pull the cover toward the front of the vehicle to remove it.

4 Remove the air intake vent filter.

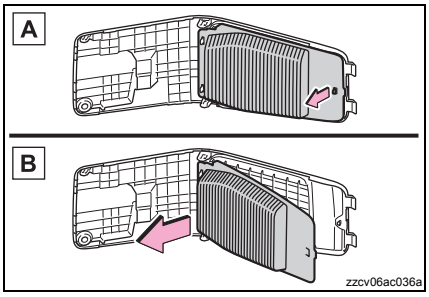


A Disengage the claw as shown in the illustration.


B Remove the filter from the cover.

5 Remove the dust and clogs from the filter using a vacuum cleaner, etc.

Make sure to also remove the dust and clogs from the inside of the air intake vent cover.

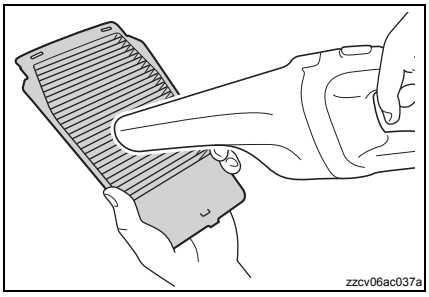

6 Reinstall the filter to the cover.

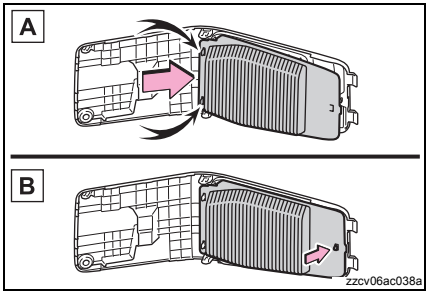


A Engage the filter to the 2 claws as shown in the illustration.

B Engage the claw to install the filter.

Make sure that the filter is not crooked or deformed when installing it.


7 Install the air intake vent cover.

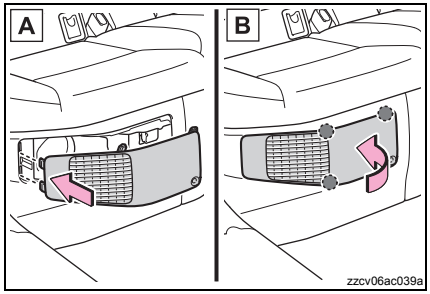

A Insert the tab of the cover as shown in the illustration.

B Push the cover to engage the 3 claws.

8 Using a Phillips screwdriver, install the clip.

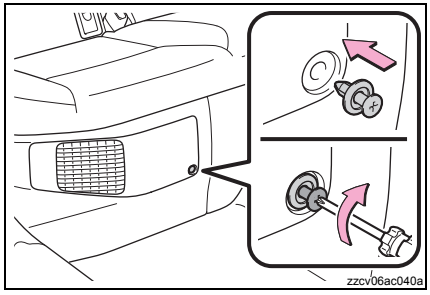

Scheduled maintenance of the air intake vent is necessary when

In some situations such as when the vehicle is used frequently or in heavy traffic or dusty areas, the air intake vent may need to be cleaned more regularly. For details, refer to “Toyota Service Booklet” or “Toyota Warranty Booklet”.

Cleaning the air intake vent

- Dust in the air intake vent may interfere with the cooling of the hybrid battery (traction battery). If charging/discharging of the hybrid battery (traction battery) becomes limited, the distance that the vehicle can be driven using the electric motor (traction motor) may be reduced and the fuel economy may be reduced. Inspect and clean the air intake vent periodically.
- Improper handling of the air intake vent cover and filter may result in damage to them. If you have any concerns about cleaning the filter, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is displayed on the multi-information display

- If this warning message is displayed on the multi-information display, remove the air intake vent cover and clean the filter. (→P.519)
- After cleaning the air intake vent, start the hybrid system and check that the warning message is no longer displayed.
  After the hybrid system is started, it may be necessary to drive the vehicle up to approximately 20 minutes before the warning message disappears. If the warning message does not disappear after driving for appropriately 20 minutes, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

When cleaning the air intake vent

- Do not use water or other liquids to clean the air intake vent. If water is applied to the hybrid battery (traction battery) or other components, a malfunction or fire may occur.
- Before cleaning the air intake vent, make sure to turn the power switch off to stop the hybrid system.


When removing the air intake vent cover

Do not touch the service plug located near the air intake vent. (→P.90)

NOTICE

When cleaning the air intake vent

When cleaning the air intake vent, make sure to only use a vacuum to suck out dust and clogs. If a compressed air blow gun, etc. is used to blow out dust and clogs, the dust or clogs may be pushed into the air intake vent, which may affect the performance of the hybrid battery (traction battery) and cause a malfunction.

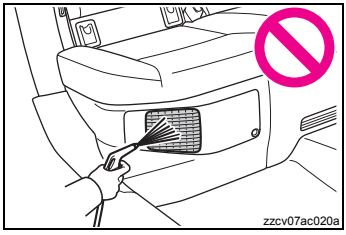

To prevent damage to the vehicle

- Do not allow water or foreign matter to enter the air intake vent when the cover is removed.
- Carefully handle the removed filter so that it will not be damaged.
  If the filter is damaged, have it replaced with a new filter by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Make sure to reinstall the filter and cover to their original positions after cleaning.

NOTICE

- Do not install anything to the air intake vent other than the exclusive filter for this vehicle or use the vehicle without the filter installed.

■ If "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is displayed on the multi-information display

If the vehicle is continuously driven with the warning message (indicating that charging/discharging of the hybrid battery [traction battery] may become limited) displayed, the hybrid battery (traction battery) may malfunction. If the warning message is displayed, clean the air intake vent immediately.

Electronic key battery

Replace the battery with a new one if it is depleted.
As the key may be damaged if the following procedure is not performed properly, it is recommended that key battery replacement be performed by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ If the electronic key battery is depleted

The following symptoms may occur:

- The smart entry & start system and wireless remote control will not function properly.
- The operational range will be reduced.

Items to prepare


- Flathead screwdriver
- Small flathead screwdriver
- Lithium battery CR2032

■ Use a CR2032 lithium battery

- Batteries can be purchased at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, local electrical appliance shops or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to local laws.


Replacing the battery

1 Release the lock and remove the mechanical key.

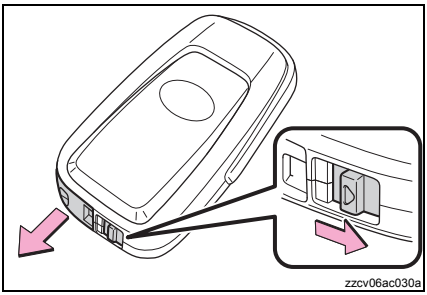

2 Remove the key cover.


To prevent damage to the key, cover the tip of the flathead screwdriver with a rag.

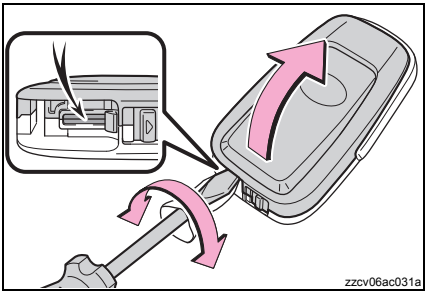

3 Remove the depleted battery using a small flathead screwdriver.

When removing the cover, the electronic key module may stick to the cover and the battery may not be visible. In this case, remove the electronic key module in order to remove the battery.

Insert a new battery with the “+” terminal facing up.

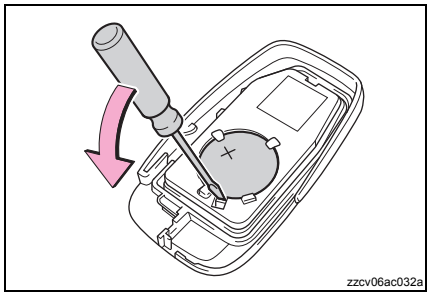

4 When installing the key cover and mechanical key, install by conducting step 2 and step 1 with the directions reversed.

5 Operate the or switch and check that the doors can be locked/unlocked.

WARNING

■Removed battery and other parts

These parts are small and if swallowed by a child, they can cause choking. Keep away from children. Failure to do so could result in death or serious injury.

■Lithium battery precautions

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

NOTICE

■When replacing the battery

Use a flathead screwdriver of appropriate size. Applying excessive force may deform or damage the cover.

NOTICE

■ For normal operation after replacing the battery

Observe the following precautions to prevent accidents:

- Always work with dry hands. Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.

Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.


Checking and replacing fuses

1 Turn the power switch off.

2 Open the fuse box cover.


▶ Engine compartment: type A fuse box

Push the tabs in and lift the lid off.

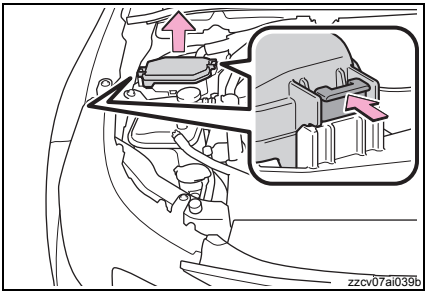


▶ Engine compartment: type B fuse box (2ZR-FXE engine)

Push the tabs in and lift the lid off.

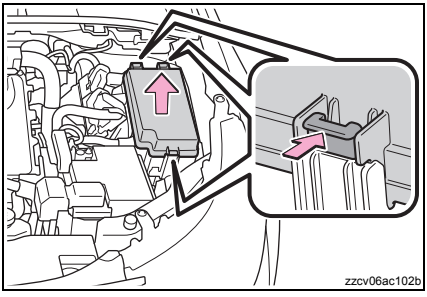

▶ Engine compartment: type B fuse box (M20A-FXS engine)


Push the tabs in and lift the lid off.

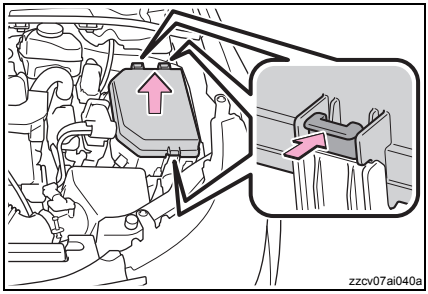

▶ Under the driver's side instrument panel (left-hand drive vehicles)

Remove the lid.


Make sure to push the claw when removing/installing the lid.

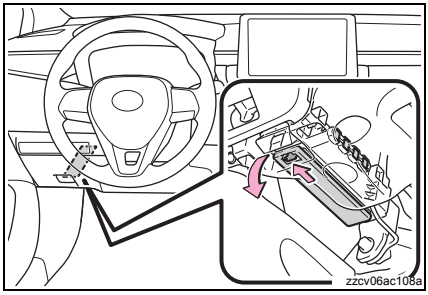

▶ Under the passenger's side instrument panel (right-hand drive vehicles)


Remove the cover and then remove the lid.

Make sure to push the claw when removing/installing the lid.

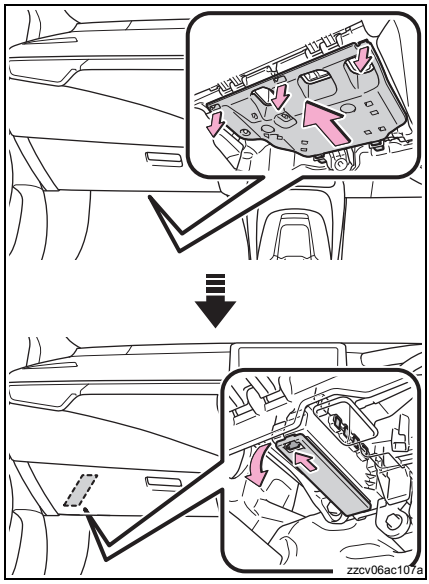


▶ Luggage compartment (hatchback)

Remove the deck board. (→P.460)

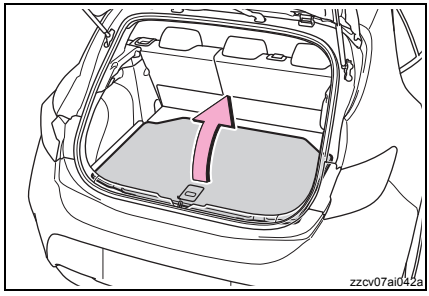


Push the tab in and lift the lid off.

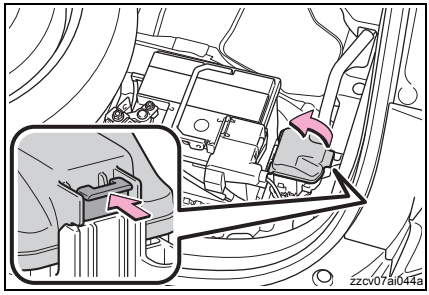


▶ Luggage compartment (Wagon)

Remove the deck board (→P.460) and 12-volt battery cover (→P.498).

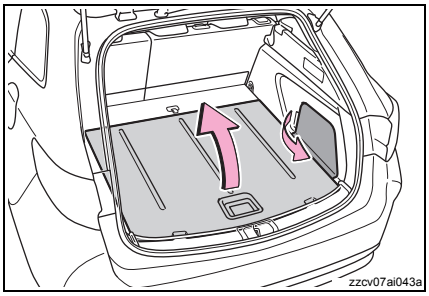


Push the tab in and lift the lid off.

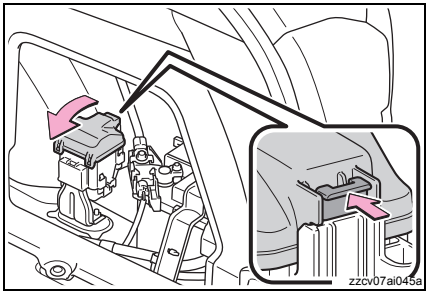


3 Remove the fuse with the pull-out tool.

Only type A fuse can be removed using the pullout tool.

▶ 2ZR-FXE engine

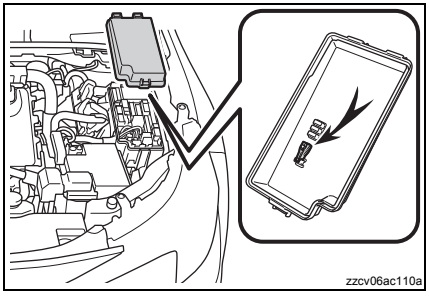


▶ M20A-FXS engine

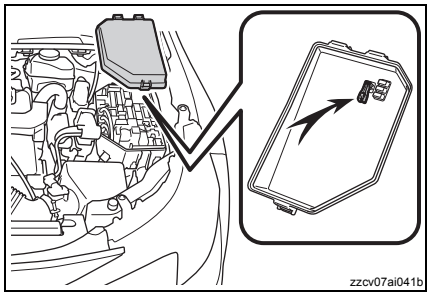

4 Check if the fuse is blown.

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.


▶ Type A

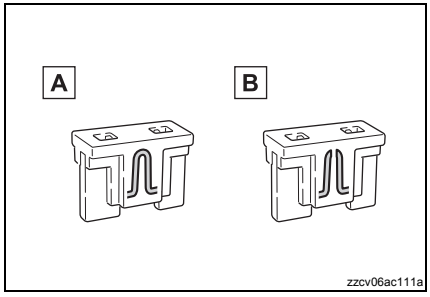

A Normal fuse

B Blown fuse


▶ Type B

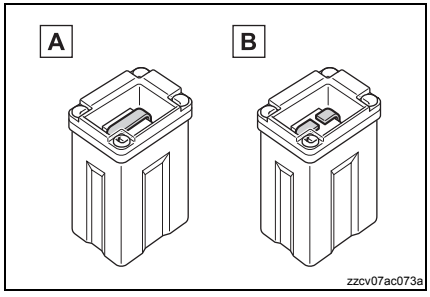

A Normal fuse

B Blown fuse


▶ Type C

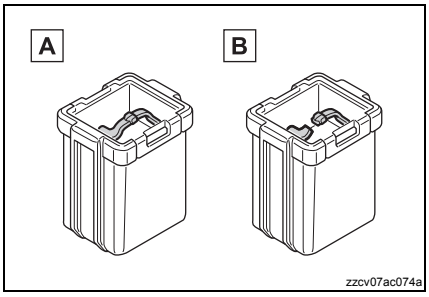

A Normal fuse

B Blown fuse

▶ Type D

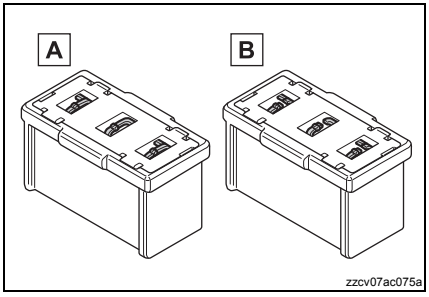

A Normal fuse

B Blown fuse

■ After a fuse is replaced

- When installing the lid, make sure that the tab is installed securely.
- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P.528)
- If the replaced fuse blows again, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ If there is an overload in a circuit

The fuses are designed to blow, protecting the wiring harness from damage.

■ When replacing light bulbs

Toyota recommends that you use genuine Toyota products designed for this vehicle.
Because certain bulbs are connected to circuits designed to prevent overload, non-genuine parts of parts not designed for this vehicle may be unusable.

WARNING

■ To prevent system breakdowns and vehicle fire

Observe the following precautions. Failure to do so may cause damage to the vehicle, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- Always use a genuine Toyota fuse or equivalent.
  Never replace a fuse with a wire, even as a temporary fix.
- Do not modify the fuses or fuse boxes.

NOTICE

■ Before replacing fuses

Have the cause of electrical overload determined and repaired by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

Light bulbs

You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. As there is a danger that components may be damaged, we recommend that replacement is carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Preparing for light bulb replacement


Check the wattage of the light bulb to be replaced. (→P.608)

Canceling the power back door system (if equipped)

→P.614


Bulb locations

▶ Hatchback

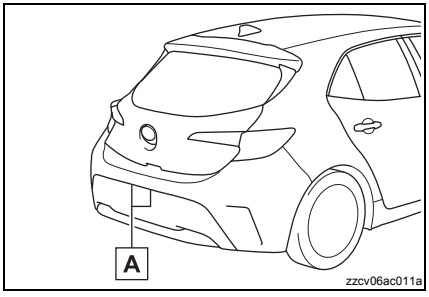

A License plate lights

▶ Wagon

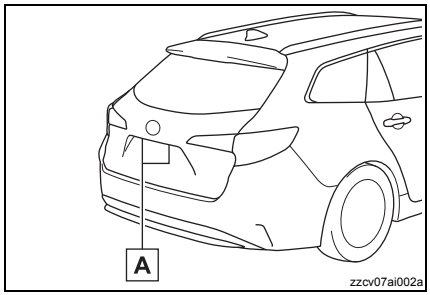

A License plate lights

■ **Bulbs that need to be replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer**

- Headlights
- Front position lights
- Daytime running lights
- Turn signal lights
- Front fog lights (if equipped)
- Tail lights
- Stop lights
- Back-up light
- Rear fog light (if equipped)
- High mounted stoplight

■ **LED light bulbs**

The lights other than the license plate lights consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer to have the light replaced.

■ **Condensation build-up on the inside of the lens**

Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction. Contact any

authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for more information in the following situations:

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the headlight.

■ **When replacing light bulbs**

→P.527

Replacing light bulbs


■ License plate lights

▶ Hatchback


1 Remove the light unit.

Insert a flathead screwdriver or similar into the hole next to the light and remove it as shown in the illustration.


To prevent damaging the vehicle, wrap the flathead screwdriver with a tape.

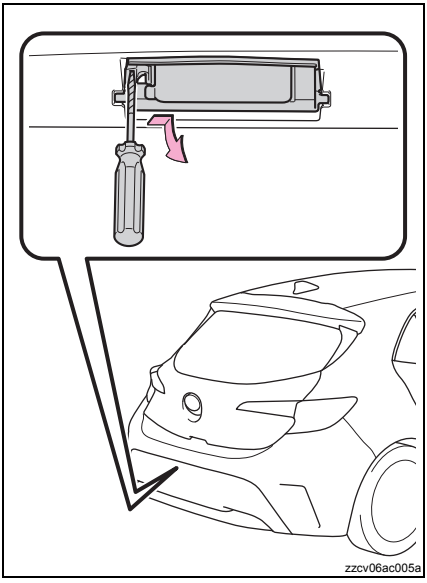

2 Turn the bulb base counterclockwise and remove it.

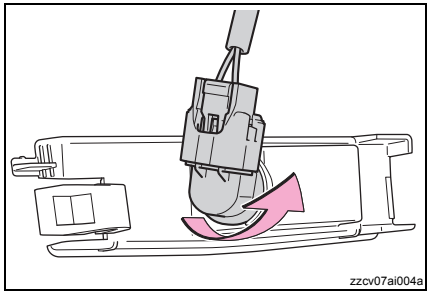


3 Remove the light bulb.

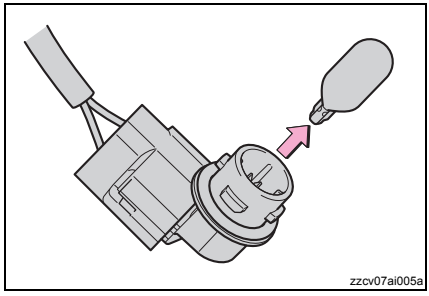

4 When installing, reverse the steps listed.

▶ Wagon

1 Remove the cover.

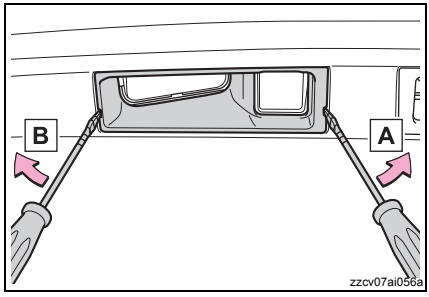


A Insert a flathead screwdriver, etc. into the slot on the right side and disengage the claw.

B Insert a flathead screwdriver, etc. into the slot on the left side

and disengage the claw, then remove the cover.

To prevent damaging the vehicle, wrap the tip of the screwdriver with tape.


2 Insert a small flathead screwdriver, etc. into either the right or left hole of the lens.

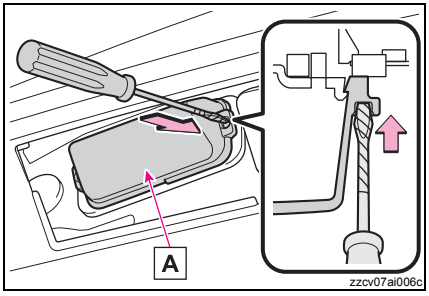

A Lens


3 Remove the lens.

Push the screwdriver sideways in the direction of the arrow shown in the illustration, disengage the hook, and then remove the lens.

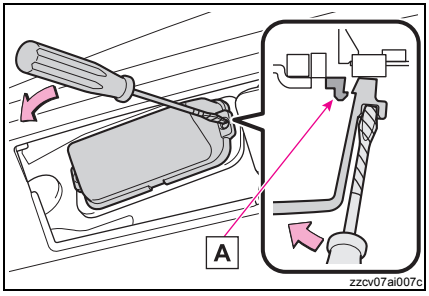


A Hook


4 Remove the light bulb.

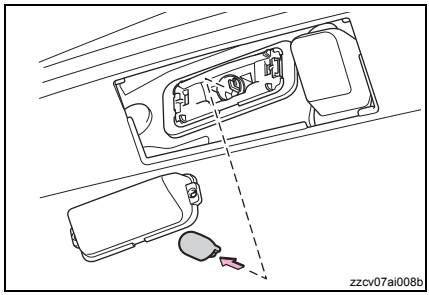

5 Install a new light bulb.

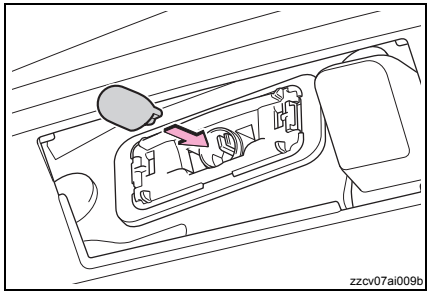

6 Install the lens.

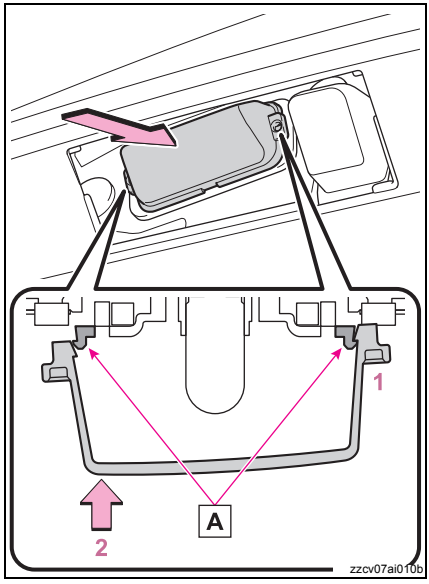


1 Fit the lens into either the right

or left hooks A.

2 Push the lens into place.

7 After installation, confirm that the lens is properly installed by gently pulling it.

8 Reinstall the cover.

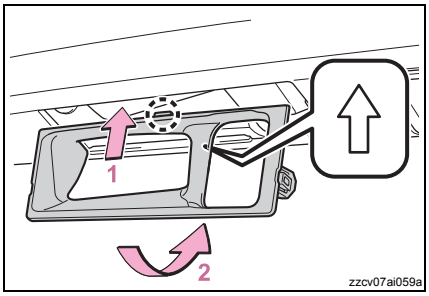

1 With the arrow on the inside of the cover pointing up, insert the tab (indicated by the dotted line).

2 Push the lower part of the cover in the direction of the arrow shown in the illustration to engage the two claws.

WARNING

■ Replacing light bulbs

- Turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights. The bulbs become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture and oils on the bulb. Also, if the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulbs and any parts used to secure them. Failure to do so may result in heat damage, fire, or water entering the light unit. This may damage the lights or cause condensation to build up on the lens.

■ To prevent damage or fire

Make sure bulbs are fully seated and locked.

8-1. Essential information

Emergency flashers.....534

If your vehicle has to be stopped in an emergency 534

If the vehicle is trapped in rising water.....535

8-2. Steps to take in an emergency

If your vehicle needs to be towed.....537

If you think something is wrong 540

If a warning light turns on or a warning buzzer sounds...542

If a warning message is displayed.....551

If you have a flat tire (vehicles with an emergency tire puncture repair kit) 554

If you have a flat tire (vehicles with a spare tire).....566

If the hybrid system will not start 580

If you lose your keys.....582

If the electronic key does not operate properly 582

If the 12-volt battery is discharged 584

If your vehicle overheats...590

If the vehicle becomes stuck 594

Emergency flashers


The emergency flashers are used to warn other drivers when the vehicle has to be stopped on the road due to a breakdown, etc.

Operating instructions

Press the switch.

All the turn signal lights will flash.

To turn them off, press the switch once again.

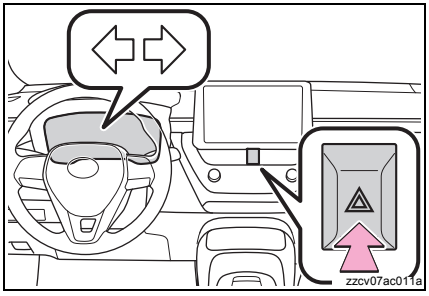

■ Emergency flashers

- If the emergency flashers are used for a long time while the hybrid system is not operating (while the “READY” indicator is not illuminated), the 12-volt battery may discharge.
- If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the emergency flashers will turn on automatically.
  The emergency flashers will turn off automatically after operating for approximately 20 minutes. To manually turn the emergency flashers off, press the switch twice.
  (The emergency flashers may not turn on automatically depending on the force of the impact and conditions of the collision.)

If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

Stopping the vehicle

1 Steadily step on the brake pedal with both feet and firmly depress it.

Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.

2 Shift the shift lever to N.

▶ If the shift lever is shifted to N

3 After slowing down, stop the vehicle in a safe place by the road.


4 Stop the hybrid system.

▶ If the shift lever cannot be shifted to N

3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

4 To stop the hybrid system, press and hold the power switch for 2 consecutive seconds or more,

or press it briefly 3 times or more in succession.

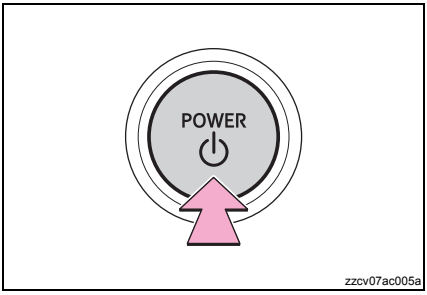

5 Stop the vehicle in a safe place by the road.

WARNING

■ If the hybrid system has to be turned off while driving

Power assist for the steering wheel will be lost, making the steering wheel heavier to turn. Decelerate as much as possible before turning off the hybrid system.

If the vehicle is trapped in rising water

In the event the vehicle is submerged in water, remain calm and perform the following.

- Remove the seat belt first.
- If the door can be opened, open the door and exit the vehicle.
- If the door can not be opened, open the window using the power window switch and exit the vehicle through the window.
- If the window can not be opened using the power window switch, remain calm, wait until the water level inside the vehicle rises to the point that the water pressure inside of the vehicle equals the water pressure outside of the vehicle, and then open the door and exit the vehicle.

WARNING

■ Using an emergency hammer*1 for emergency escape

The rear side windows and rear window of this vehicle can be shattered by an emergency hammer*1 used for emergency escape, however, since the windshield and front side windows*2 are laminated glass they can not be shattered by an emergency hammer*1.

*1: Contact your Toyota dealer or aftermarket accessory manufacturer for further information about an emergency hammer.

*2: Vehicles with laminated glass


WARNING

■ Escaping the vehicle from the window

There are cases where escaping the vehicle from the window is not possible due to seating position, passenger body type, etc.
When using an emergency hammer, consider your seat location and the size of the window opening to ensure that the opening is accessible and large enough to escape.

■ How to distinguish laminated glass

When looking from the cross-sectional view point, laminated glass is two sheets of glass pasted together.

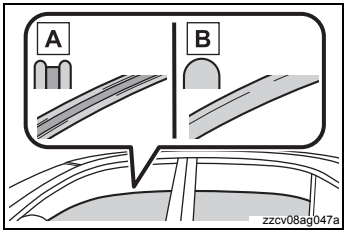

A Laminated glass

B Tempered glass

If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service, using a wheel-lift type truck or flatbed truck.


Use a safety chain system for all towing, and abide by all state/provincial and local laws.

WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

■ When towing the vehicle

Be sure to transport the vehicle with the front wheels raised or with all four wheels raised off the ground. If the vehicle is towed with the front wheels contacting the ground, the drivetrain and related parts may be damaged or electricity generated by the operation of the motor may cause a fire to occur depending on the nature of the damage or malfunction.

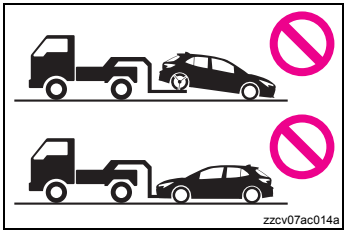

■ While towing

- When towing using cables or chains, avoid sudden starts, etc. which place excessive stress on the towing eyelets, cables or chains. The towing eyelets, cables or chains may become damaged, broken debris may hit people, and cause serious damage.
- Do not turn the power switch off. There is a possibility that the steering wheel is locked and cannot be operated.

■ Installing towing eyelets to the vehicle

Make sure that towing eyelets are installed securely.
If not securely installed, towing eyelets may come loose during towing.

NOTICE

■ To prevent damage to the vehicle when towing using a wheel-lift type truck

- Do not tow the vehicle from the rear when the power switch is off. The steering lock mechanism is not strong enough to hold the front wheels straight.
- When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

■ To prevent damage to the vehicle when towing with a sling-type truck

Do not tow with a sling-type truck, either from the front or rear.

■ To prevent damage to the vehicle during emergency towing

Do not secure cables or chains to the suspension components.


Situations when it is necessary to contact dealers before towing

The following may indicate a problem with your transmission. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service before towing.

- The hybrid system warning message is shown on the multi-information display and the vehicle does not move.
- The vehicle makes an abnormal sound.


Towing with a sling-type truck

Do not tow with a sling-type truck to prevent body damage.

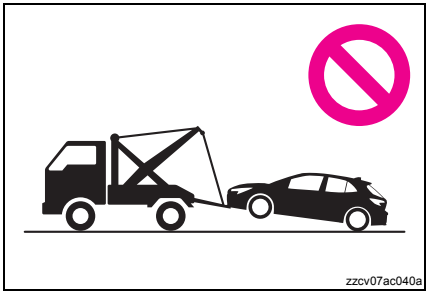


Towing with a wheel-lift type truck

▶ From the front

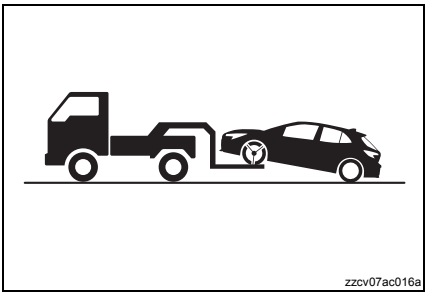

Release the parking brake.

▶ From the rear

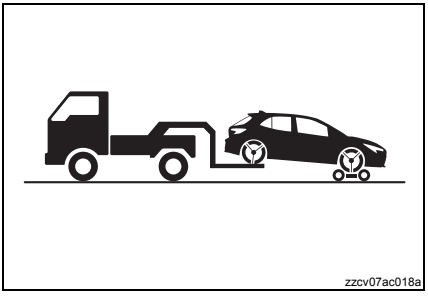

Use a towing dolly under the front wheels.


Using a flatbed truck

1 Apply the parking brake and turn the power switch off.


Use wheel chocks for all four wheels to prevent the vehicle from rolling.

2 Secure the vehicle by strapping the tires to the deck of the tow truck as shown.

▶ Hatchback

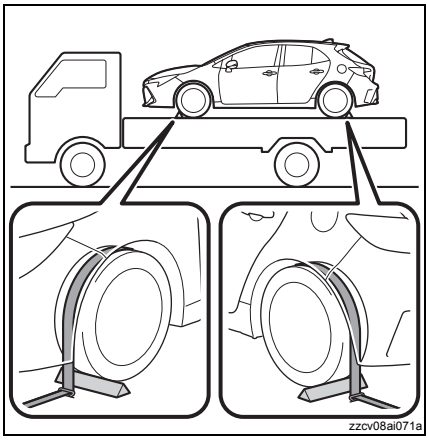

▶ Wagon

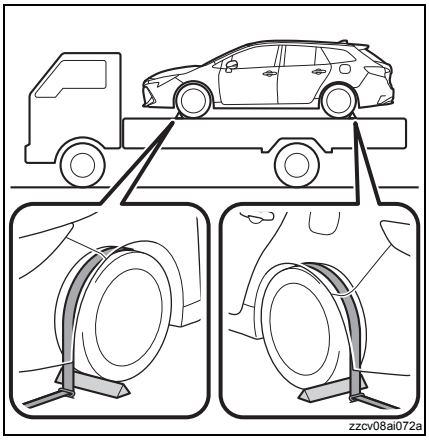

Emergency towing


If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing eyelets. This should only be attempted on hard surfaced roads for a short distance at under 30 km/h (18 mph).
A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

Emergency towing procedure


1 Take out the towing eyelet. (→P.556, 567)

2 Remove the eyelet cover using a flathead screwdriver.


To protect the bodywork, place a rag between the screwdriver and the vehicle body as shown in the illustration.

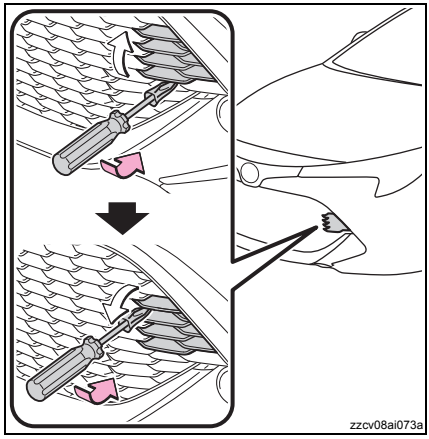

3 Insert the towing eyelet into the hole and tighten partially by hand.

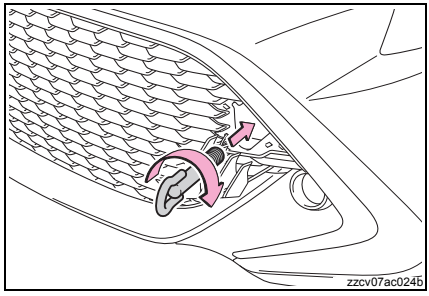

4 Tighten down the towing eyelet securely using a wheel nut wrench or hard metal bar.

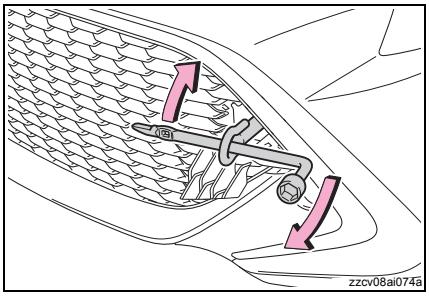

5 Securely attach cables or chains to the towing eyelet.

Take care not to damage the vehicle body.

6 Enter the vehicle being towed and start the hybrid system.

If the hybrid system does not start, turn the power switch to ON.

7 Shift the shift lever to N and release the parking brake.
When the shift lever cannot be shifted: →P.237

■ While towing

If the hybrid system is off, the power assist for the brakes and steering will not function, making steering and braking more difficult.

■ Wheel nut wrench

Wheel nut wrench is installed in luggage compartment. (→P.567)

If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

Visible symptoms

- Fluid leaks under the vehicle. (Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge needle continually points higher than normal.

Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the hybrid system

Operational symptoms

- Engine missing, stumbling or running roughly
- Appreciable loss of power

- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

If a warning light turns on or a warning buzzer sounds

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Actions to the warning lights or warning buzzers

■ Brake system warning light (warning buzzer)

Warning light	Details/Actions
 (Red)	Indicates that: ● The brake fluid level is low; or ● The brake system is malfunctioning → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.**

■ Brake system warning light

Warning light	Details/Actions
 (Yellow)	Indicates a malfunction in: ● The regenerative braking system; ● The electronically controlled brake system; or ● The parking brake system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**

■ High coolant temperature warning light* (warning buzzer)

Warning light	Details/Actions
	Indicates that the engine coolant temperature is excessively high → **Immediately stop the vehicle in a safe place.** **Handling method (→P.590)**

*: This light illuminates on the multi-information display.

■ Hybrid system overheat warning light* (warning buzzer)

Warning light	Details/Actions
	Indicates that the temperature of the hybrid system is excessively high → **Stop the vehicle in a safe place.** **Handling method (→P.590)**

*: This light illuminates on the multi-information display.

■ Charging system warning light

Warning light	Details/Actions
	Indicates a malfunction in the vehicle's charging system → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**

■ Low engine oil pressure warning light* (warning buzzer)

Warning light	Details/Actions
	Indicates that the engine oil pressure is excessively low → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**

*: This light illuminates on the multi-information display.

■ Malfunction indicator lamp (warning buzzer)

Warning light	Details/Actions
	Indicates a malfunction in: ● The hybrid system; ● The electronic engine control system; ● The electronic throttle control system; ● The electronic hybrid transmission control system; or → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**

■ SRS warning light (warning buzzer)

Warning light	Details/Actions
	Indicates a malfunction in: ● The SRS airbag system; or ● The seat belt pretensioner system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**

■ ABS warning light

Warning light	Details/Actions
	Indicates a malfunction in: ● The ABS; or ● The brake assist system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**

■ Brake Override System warning light/Drive-Start Control warning light* (warning buzzer)

Warning light	Details/Actions
	When a buzzer sounds: Indicates a malfunction in: ● The Brake Override System; or ● The Drive-Start Control system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.** Indicates that the shift position was changed and Drive-Start Control was operated while depressing the accelerator pedal. → **Momentarily release the accelerator pedal.** When a buzzer does not sound: Indicates that the accelerator and brake pedals are being depressed simultaneously, and the Brake Override System is operating. → **Release the accelerator pedal and depress the brake pedal.**

*: This light illuminates on the multi-information display.

■ Electric power steering system warning light (warning buzzer)

Warning light	Details/Actions
 (Red) or  (Yellow)	Indicates a malfunction in the EPS (Electric Power Steering) system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**

■ Low fuel level warning light

Warning light	Details/Actions
	Indicates that remaining fuel is approximately 6.4 L (1.7 gal., 1.4 Imp. gal.) or less → **Refuel the vehicle.**

■ Driver's and front passenger's seat belt reminder light (warning buzzer)*

Warning light	Details/Actions
	Warns the driver and/or front passenger to fasten their seat belts → **Fasten the seat belt.** **If the front passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) turn off.**

*: Driver's and front passenger's seat belt warning buzzer:

The driver's and front passenger's seat belt warning buzzer sounds to alert the driver and front passenger that his or her seat belt is not fastened. The buzzer sounds for 30 seconds after the vehicle reaches a speed of 20 km/h (12 mph). Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 90 more seconds.

■ Rear passengers' seat belt reminder lights (warning buzzer)*

Warning light	Details/Actions
	Warns the rear passengers to fasten their seat belts → **Fasten the seat belt.**

*: Rear passengers' seat belt warning buzzer:

The rear passengers' seat belt warning buzzer sounds to alert the rear passenger

that his or her seat belt is not fastened. The buzzer sounds once if the vehicle reaches a speed of 20 km/h (12 mph). If the seat belt is still unfastened, the buzzer will sound intermittently for 6 seconds. Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 60 more seconds.

■ Tire pressure warning light

Warning light	Details/Actions
 (if equipped)	When the light comes on after blinking for approximately 1 minute: Malfunction in the tire pressure warning system → **Have the system checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.** When the light comes on: Low tire inflation pressure such as ● Natural causes ● Flat tire → **Immediately stop the vehicle in a safe place. Handling method (→P.549)**

■ LTA indicator (warning buzzer)

Warning light	Details/Actions
 (Orange) (if equipped)	Indicates a malfunction in the LTA (Lane Tracing Assist) → **Follow the instructions displayed on the multi-information display. (→P.295)**

■ Toyota parking assist-sensor OFF indicator (warning buzzer)

Warning light	Details/Actions
 (Flashes) (if equipped)	Indicates a malfunction in the Toyota parking assist-sensor function → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.** Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc. → **Follow the instructions displayed on the multi-information display. (→P.326)**

■ RCTA OFF indicator (warning buzzer)

Warning light	Details/Actions
 (Flashes) (if equipped)	Indicates a malfunction in the RCTA (Rear Crossing Traffic Alert) function → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.** Indicates that the rear bumper around the radar sensor is covered with dirt, etc. (→P.320) → **Follow the instructions displayed on the multi-information display. (→P.332)**

■ PKSB OFF indicator (warning buzzer)

Warning light	Details/Actions
 (Flashes) (if equipped)	When a buzzer sounds: Indicates a malfunction in the PKSB (Parking Support Brake) system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.** When a buzzer does not sound: Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc. → **Follow the instructions displayed on the multi-information display. (→P.341, 551)**

■ PCS warning light

Warning light	Details/Actions
 (Flashes or illuminates) (if equipped)	When a buzzer sounds simultaneously: Indicates a malfunction has occurred in the PCS (Pre-Collision System). **→ Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.** If a buzzer does not sound: The PCS (Pre-Collision System) has become temporarily unavailable, corrective action may be necessary. **→ Follow the instructions displayed on the multi-information display. (→P.276)** If the PCS (Pre-Collision System) or VSC (Vehicle Stability Control) system is disabled, the PCS warning light will illuminate. **→ P.285**

■ Slip indicator

Warning light	Details/Actions
	Indicates a malfunction in: ● The VSC system; ● The TRC system; or ● The hill-start assist control system **→ Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**

■ Parking brake indicator

Warning light	Details/Actions
 (Flashes)	It is possible that the parking brake is not fully engaged or released **→ Operate the parking brake switch once again.** This light comes on when the parking brake is not released. If the light turns off after the parking brake is fully released, the system is operating normally.

■ Brake hold operated indicator

Warning light	Details/Actions
 (Flashes)	Indicates a malfunction in the brake hold system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**

■ Warning buzzer

In some cases, the buzzer may not be heard due to being in a noisy location or audio sound.

■ Front passenger detection sensor, seat belt reminder and warning buzzer

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

■ If the malfunction indicator lamp comes on while driving

For some models, the malfunction indicator lamp will come on if the fuel tank becomes completely empty. If the fuel tank is empty, refuel the vehicle immediately. The malfunction indicator lamp will go off after several trips.

If the malfunction indicator lamp does not go off, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

■ Electric power steering system warning light (warning buzzer)

When the 12-volt battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on and the warning buzzer may sound.

■ When the tire pressure warning light comes on (vehicles with a tire pressure warning system)

Inspect the tires to check if a tire is punctured.

If a tire is punctured: →P.554, 566

If none of the tires are punctured:
Turn the power switch off then turn it to ON. Check if the tire pressure warning light comes on or blinks.

▶ If the tire pressure warning light blinks for approximately 1 minute then stays on

There may be a malfunction in the tire pressure warning system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

▶ If the tire pressure warning light comes on

1. After the temperature of the tires has lowered sufficiently, check the inflation pressure of each tire and adjust them to the specified level.
2. If the warning light does not turn off even after several minutes have elapsed, check that the inflation pressure of each tire is at the specified level and perform initialization. (→P.511)

■ The tire pressure warning light may come on due to natural causes (vehicles with a tire pressure warning system)

The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation

pressure will turn off the warning light (after a few minutes).

■ When a tire is replaced with a spare tire (vehicles with a tire pressure warning system)

Vehicles with a compact spare tire: The compact spare tire is not equipped with a tire pressure warning valve and transmitter. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire. Replace the spare tire with the repaired tire and adjust the tire inflation pressure. The tire pressure warning light will go off after a few minutes.

Vehicles with a full-size spare tire: The spare tire is also equipped with a tire pressure warning valve and transmitter. The tire pressure warning light will turn on if the tire inflation pressure of the spare tire is low. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire. Replace the spare tire with the repaired tire and adjust the tire inflation pressure. The tire pressure warning light will go off after a few minutes.

■ Conditions that the tire pressure warning system may not function properly (vehicles with a tire pressure warning system)

→P.502

⚠ WARNING

■ If both the ABS and the brake system warning lights remain on

Stop your vehicle in a safe place immediately and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

■ When the electric power steering system warning light comes on

When the light comes on yellow, the assist to the power steering is restricted. When the light comes on red, the assist to the power steering is lost and handling operations of the steering wheel become extremely heavy.
When steering wheel operations are heavier than usual, grip the steering wheel firmly and operate it using more force than usual.

■ If the tire pressure warning light comes on (vehicles with a tire pressure warning system)

Be sure to observe the following precautions.
Failure to do so could cause a loss of vehicle control and result in death or serious injury.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
- Vehicles with a compact spare tire and full-size spare tire: If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, change it with the spare tire and have the flat tire repaired by the nearest any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Vehicles with emergency tire puncture repair kit: If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, repair the flat tire by using emergency tire puncture repair kit.

WARNING

- Avoid abrupt maneuvering and braking.
  If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

■ If a blowout or sudden air leakage should occur (vehicles with a tire pressure warning system)

The tire pressure warning system may not activate immediately.

NOTICE

■ To ensure the tire pressure warning system operates properly (vehicles with a tire pressure warning system)

Do not install tires with different specifications or makers, as the tire pressure warning system may not operate properly.

If a warning message is displayed

The multi-information display shows warnings for system malfunctions and incorrectly performed operations, and messages that indicate a need for maintenance. When a message is displayed, perform the appropriate corrective action for the message.

If a warning message is displayed again after the appropriate actions have been performed, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Additionally, if a warning light comes on or flashes at the same time that a warning message is displayed, take the appropriate corrective action for the warning light. (→P.542)

■ Warning messages

The warning messages explained below may differ from the actual messages according to operation conditions and vehicle specifications.

■ Warning buzzer

A buzzer may sound when a message is displayed.
The buzzer may not be audible if the vehicle is in a noisy location or if the audio system volume is high.

■ If “Engine Oil Level Low Add or Replace” is displayed

The engine oil level is low. Check the

level of the engine oil, and add if necessary.

This message may appear if the vehicle is stopped on a slope. Move the vehicle to a level surface and check to see if the message disappears.

If “Hybrid System Stopped Steering Power Low” is displayed

This message is displayed if the hybrid system is stopped while driving.

When steering wheel operations are heavier than usual, grip the steering wheel firmly and operate it using more force than usual.

If “Hybrid System Overheated Output Power Reduced” is displayed

This message may be displayed when driving under severe operating conditions. (For example, when driving up a long steep hill.)
Handling method: →P.590

If “Traction Battery Needs to be Protected Refrain from the Use of N Position” is displayed

This message may be displayed when the shift lever is in N.

As the hybrid battery (traction battery) cannot be charged when the shift lever is in N, shift the shift lever to P when the vehicle is stopped.

If “Traction Battery Needs to be Protected Shift into P to Restart” is displayed

This message is displayed when the hybrid battery (traction battery) charge has become extremely low because the shift lever has been left in N for a certain amount of time.

When operating the vehicle, shift to P and restart the hybrid system.

If “Shift Out of N Release Accelerator Before Shifting” is displayed

The accelerator pedal has been depressed when the shift lever is in N.

Release the accelerator pedal and shift the shift lever to D or R.

If “Press Brake when Vehicle is Stopped Hybrid System may Overheat” is displayed

The message may be displayed when the accelerator pedal is depressed to hold the vehicle while the vehicle is stopped on an incline, etc. The hybrid system may overheat. Release the accelerator pedal and depress the brake pedal.

If “Auto Power OFF to Conserve Battery” is displayed

Power was cut off due to the automatic power off function. Next time when starting the hybrid system, operate the hybrid system for approximately 5 minutes to recharge the 12-volt battery.

If “Headlight System Malfunction Visit Your Dealer” is displayed

The following systems may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

- The LED headlight system
- The automatic headlight leveling system (if equipped)
- AHS (Adaptive High-beam System) (if equipped)
- Automatic High Beam (if equipped)

If “Front Camera Unavailable” or “Front Camera Temporarily Unavailable See Owner’s Manual” is displayed

The following systems may be suspended until the problem shown in the message is resolved. (→P.276, 542)

- PCS (Pre-Collision system) (if equipped)
- LTA (Lane Tracing Assist) (if equipped)
- AHS (Adaptive High-beam System) (if equipped)
- Automatic High Beam (if equipped)
- RSA (Road Sign Assist) (if equipped)
- Dynamic radar cruise control with

full-speed range (if equipped)

■ If “Radar Cruise Control Unavailable” is displayed (if equipped)

The dynamic radar cruise control with full-speed range system is suspended temporarily or until the problem shown in the message is resolved. (causes and coping methods: →P.276)

■ If a message that indicates the need for visiting your Toyota dealer is displayed

The system or part shown on the multi-information display is malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ If a message that indicates the need for referring to Owner’s Manual is displayed

- If “Engine Coolant Temp High” is displayed, follow the instructions accordingly. (→P.590)
- If “Exhaust Filter Full” is displayed, follow the instructions accordingly. (→P.380)
- If any of the following messages are displayed on the multi-information display, it may indicate a malfunction. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.
  - “Smart Entry & Start System Malfunction”
  - “Hybrid System Malfunction”
  - “Check Engine”
  - “Hybrid Battery System Malfunction”
  - “Accelerator System Malfunction”
- If any of the following messages are displayed on the multi-information display, it may indicate a malfunction. Immediately stop the vehicle and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
  - “Braking Power Low”
  - “Charging System Malfunction”
  - “Oil Pressure Low”
- If any of the following messages are shown on the multi-information display, the vehicle may have run out of fuel. Stop the vehicle in a safe place and, if the fuel level is low, refuel the vehicle. (→P.89)
  - “Hybrid System Stopped”
  - “Engine Stopped”
- If “Maintenance Required for Traction Battery Cooling Parts See Owner's Manual” is shown, the filters may be clogged, the air intake vents may be blocked, or there may be a gap in the duct. Therefore, perform the following correction procedure.
  - If the air intake vents and filters of the hybrid battery (traction battery) are dirty, perform the procedure on P.519 to clean them.
  - If the warning message is shown when the air intake vents and filters of the hybrid battery (traction battery) are not dirty, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

NOTICE

■ If “High Power Consumption Partial Limit on AC/Heater Operation” is displayed frequently

There is a possible malfunction relating to the charging system or the 12-volt battery may be deteriorating. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ If “Have Traction Battery Inspected” is shown (2ZR-FXE engine)

The hybrid battery (traction battery) is scheduled to be inspected or replaced. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

NOTICE

- Continuing to drive the vehicle without having the hybrid battery (traction battery) inspected will cause the hybrid system not to start.
- If the hybrid system does not start, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

If you have a flat tire (vehicles with an emergency tire puncture repair kit)

Your vehicle is not equipped with a spare tire, but instead is equipped with an emergency tire puncture repair kit.

A puncture caused by a nail or screw passing through the tire tread can be repaired temporarily using the emergency tire puncture repair kit. (The kit contains a bottle of sealant. The sealant can be used only once to temporarily repair one tire without removing the nail or screw from the tire.) Depending on the damage, this kit cannot be used to repair the tire. (→P.555)

After temporarily repairing the tire with the kit, have the tire repaired or replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Repairs conducted using the emergency tire puncture repair kit are only a temporary measure. Have the tire repaired and replaced as soon as possible.

WARNING


■ If you have a flat tire

Do not continue driving with a flat tire. Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

Before repairing the tire

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Stop the hybrid system.
- Turn on the emergency flashers.
- Check the degree of the tire damage.

Do not remove the nail or screw from the tire. Removing the object may widen the opening and make emergency repair with the repair kit impossible.

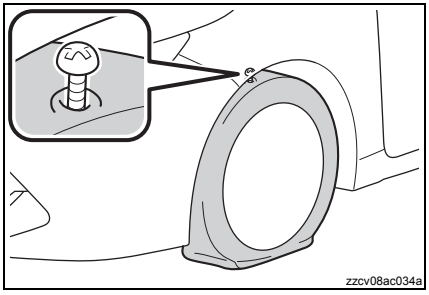


■ A flat tire that cannot be repaired with the emergency tire puncture repair kit

In the following cases, the tire cannot be repaired with the emergency tire puncture repair kit. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When the tire is damaged due to driving without sufficient air pressure
- When there are any cracks or damage at any location on the tire, such as on the side wall, except the tread
- When the tire is visibly separated from the wheel
- When the cut or damage to the tread is 4 mm (0.16 in.) long or more
- When the wheel is damaged
- When two or more tires have been punctured
- When more than 2 sharp objects such as nails or screws have passed through the tread on a single tire
- When the sealant has expired

Location of the emergency tire puncture repair kit and tools


▶ Hatchback (type A)

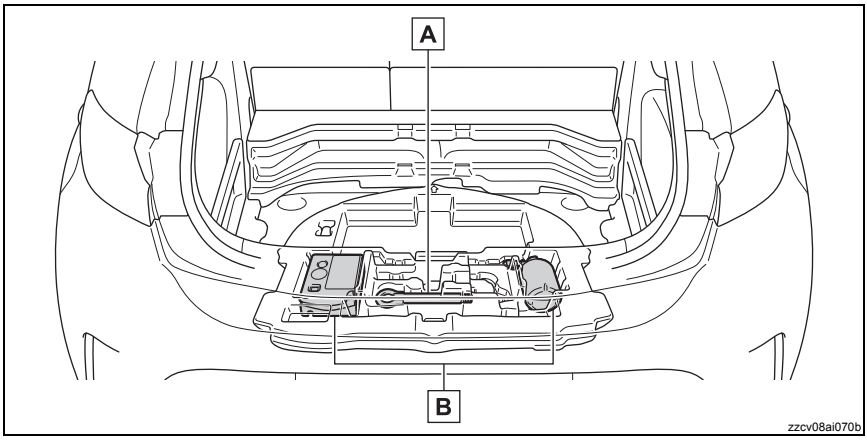

A Towing eyelet

B Emergency tire puncture repair kit


▶ Hatchback (type B)

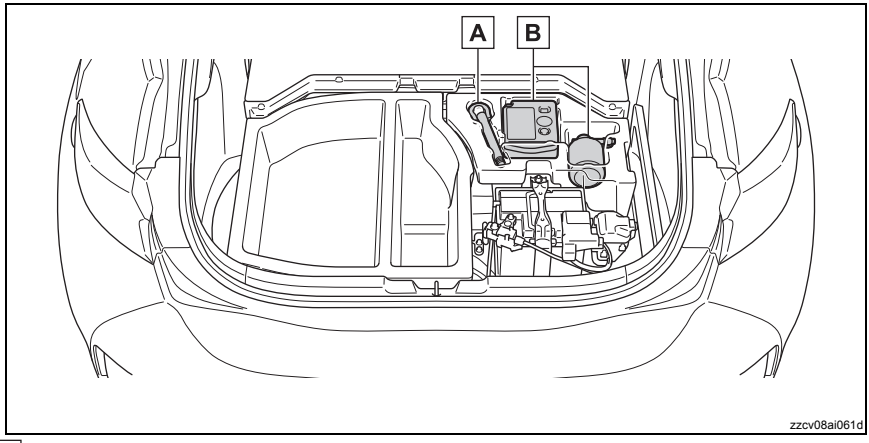

A Towing eyelet

B Emergency tire puncture repair kit

▶ Wagon

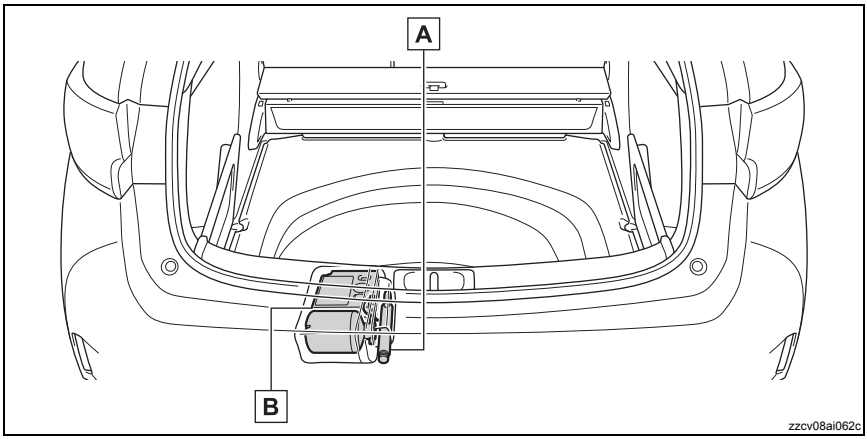


A Towing eyelet

B Emergency tire puncture repair kit

Emergency tire puncture repair kit components


▶ Bottle

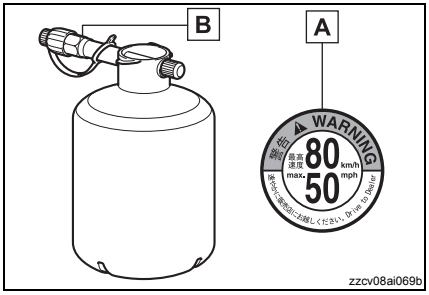

A Sticker

B Nozzle

▶ Compressor

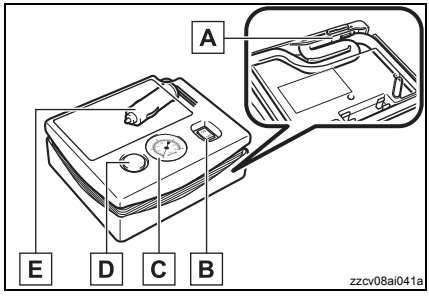

A Hose

B Compressor switch

C Air pressure gauge

D Pressure release button

E Power plug

■ Note for checking the emergency tire puncture repair kit

Check the sealant expiry date occasionally.
The expiry date is shown on the bottle.
Do not use sealant whose expiry date

has already passed. Otherwise, repairs conducted using the emergency tire puncture repair kit may not be performed properly.

■ Emergency tire puncture repair kit

- The emergency tire puncture repair kit is for filling the car tire with air.
- The sealant has a limited life span. The expiry date is marked on the bottle. The sealant should be replaced before the expiry date. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for replacement.
- The sealant stored in the emergency tire puncture repair kit can be used only once to temporarily repair a single tire. If the sealant has been used and needs to be replaced, purchase a new bottle at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. The compressor is reusable.
- The sealant can be used when the outside temperature is from -30°C (-22°F) to 60°C (140°F).
- The kit is exclusively designed for size and type of tires originally installed on your vehicle. Do not use it for tires that a different size than the original ones, or for any other purposes.
- If the sealant gets on your clothes, it may stain.
- If the sealant adheres to a wheel or the surface of the vehicle body, the stain may not be removable if it is not cleaned at once. Immediately wipe away the sealant with a wet cloth.
- During operation of the repair kit, a loud operation noise is produced. This does not indicate a malfunction.
- Do not use to check or to adjust the tire pressure.

WARNING

■ Caution while driving

- Store the repair kit in the luggage compartment.
  Injuries may result in the event of an accident or sudden braking.
- The repair kit is exclusively only for your vehicle.
  Do not use repair kit on other vehicles, which could lead to an accident causing death or serious injury.
- Do not use repair kit for tires that are different size than the original ones, or for any other purpose. If the tires have not been completely repaired, it could lead to an accident causing death or serious injury.

■ Precautions for use of the sealant


- Ingesting the sealant is hazardous to your health. If you ingest sealant, consume as much water as possible, and then immediately consult a doctor.
- If sealant gets in eyes or adheres to skin, immediately wash it off with water. If discomfort persists, consult a doctor.

Taking out the emergency tire puncture repair kit

▶ Hatchback

1 Vehicles with deck board: Open the deck board. (→P.460)


Vehicles without deck board: Lift the deck mat.

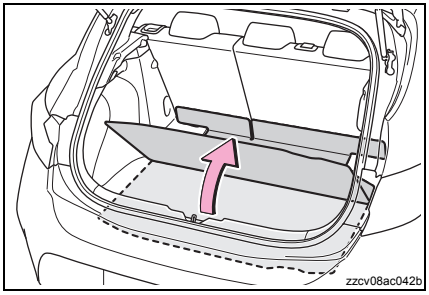


2 Take out the emergency tire puncture repair kit. (→P.556)

▶ Wagon

1 Raise the deck board handle and then remove the deck board.

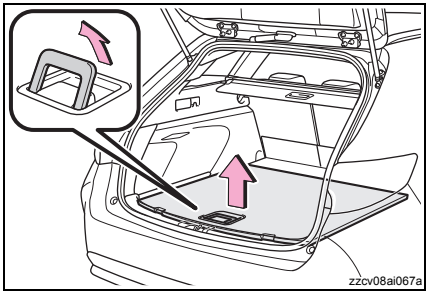

2 Take out the emergency tire puncture repair kit.

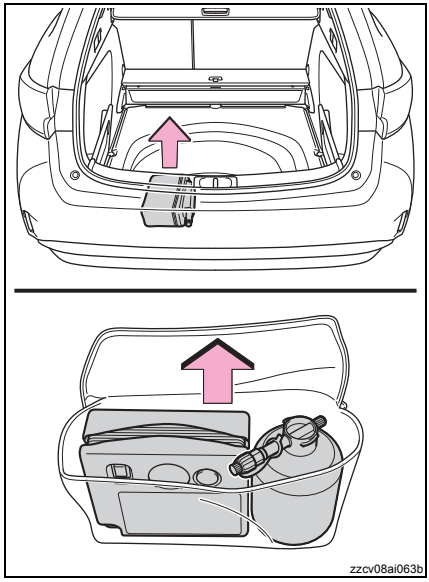

Emergency repair method


1 Wagon: Take out the repair kit from the bag.

2 Attach the sticker provided with the tire puncture repair kit to a


position easily seen from the driver's seat.



3 Remove the valve cap from the valve of the punctured tire.

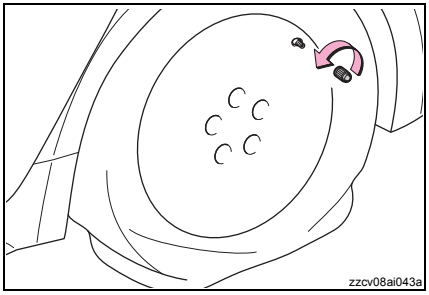


4 Remove the cap from the nozzle.

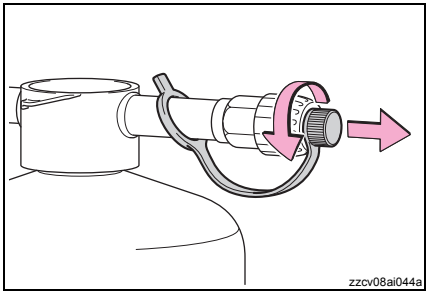


5 Connect the nozzle to the valve.

Screw the end of the nozzle clockwise as far as possible.


The bottle should hang vertically without contacting the ground. If the bottle does not hang vertically, move the vehicle so that the tire valve is located properly.

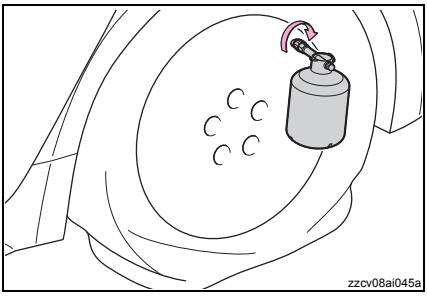

6 Remove the cap from the bottle.

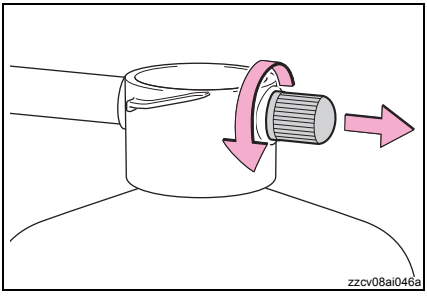


7 Pull the hose out from the compressor.

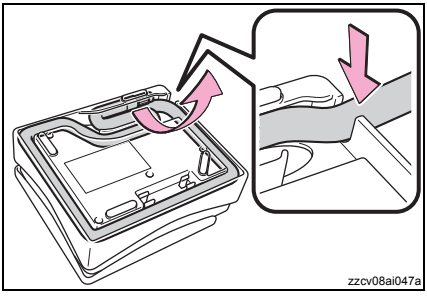


8 Connect the bottle to the compressor.

Screw the end of the nozzle clockwise


as far as possible.

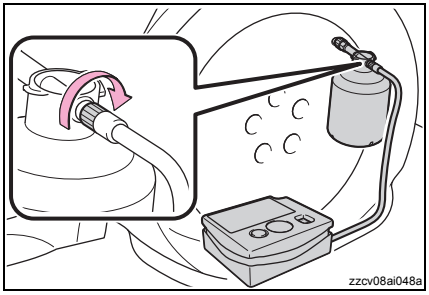


9 Make sure that the compressor switch is off.

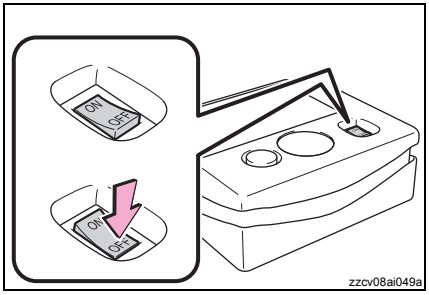

10 Remove the power plug from the compressor.

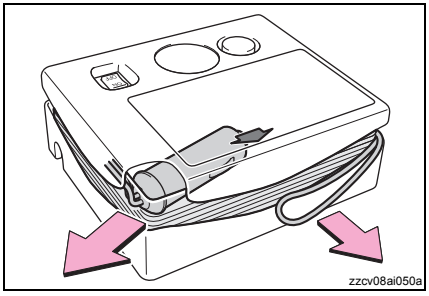


11 Connect the power plug to the power outlet socket. (→P.468)

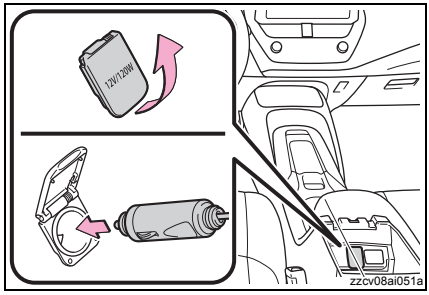


12 Check the specified tire inflation pressure.

Tire inflation pressure is specified on the label as shown. (→P.606)

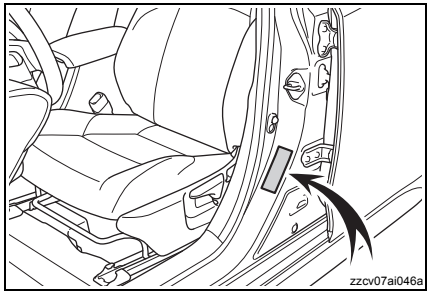


13 Start the hybrid system.

14 To inject the sealant and inflate the tire, turn the compressor switch on.

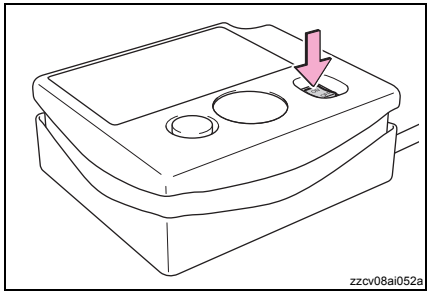

15 Inflate the tire until the specified air pressure is reached.

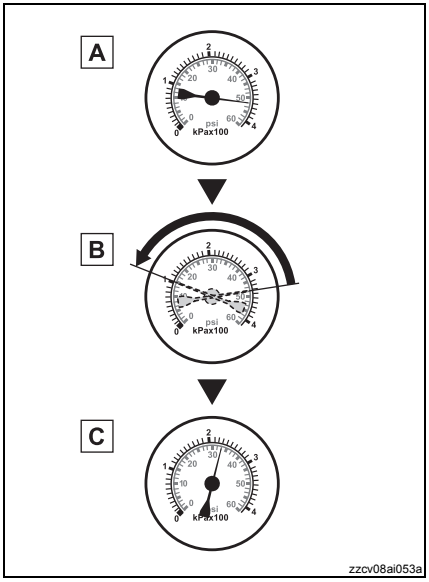


A The sealant will be injected and the pressure will surge and then gradually decrease.

B The air pressure gauge will display the actual tire inflation pressure about 1 minute (5 minutes at low temperature) after the switch is turned on.

C Inflate the tire until the specified air pressure.

- If the tire inflation pressure is still lower than the specified point after inflation for 35 minutes with the switch on, the tire is too damaged to be repaired. Turn the compressor switch off and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- If the tire inflation pressure exceeds the specified air pressure, let out some air to adjust the tire inflation pressure. (→P.564, 606)


16 Turn the compressor off.

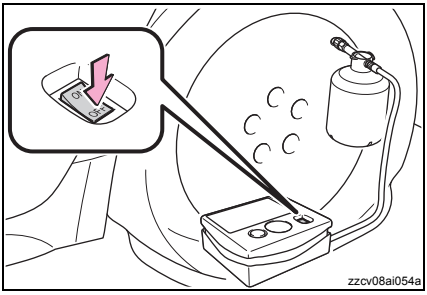


17 Disconnect the nozzle from the valve on the tire and then pull out the power plug from the power outlet socket.

Some sealant may leak when the hose is removed.

18 Press the button to release pressure from the bottle.

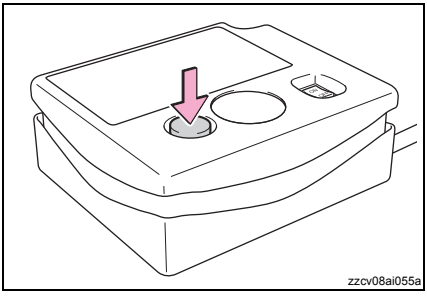


19 Attach the cap to the nozzle.

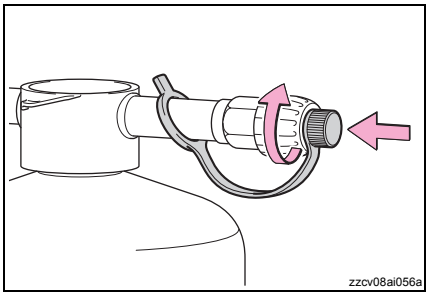

20 Install the valve cap onto the valve of the repaired tire.

21 Disconnect the hose from the bottle and attach the cap to the bottle.


Wagon: Place the bottle in the original bag.

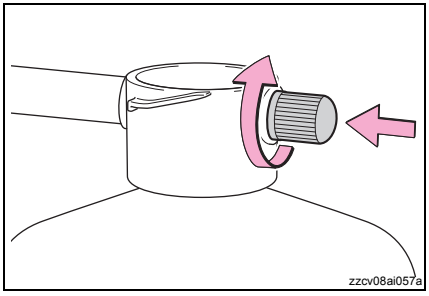


22 Temporarily store the bottle and compressor in the luggage compartment.

23 To spread the liquid sealant evenly within the tire, immediately drive safely for about 5 km (3 miles) below 80 km/h (50 mph).

24 After driving for about 5 km (3miles), stop your vehicle in a safe place on a hard, flat surface and connect the compressor.

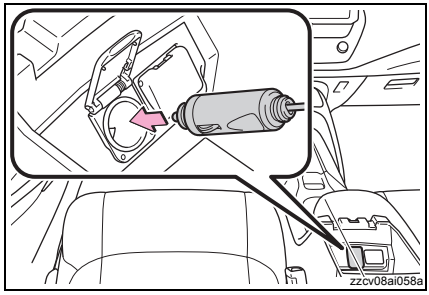

25 Check the tire inflation pressure.

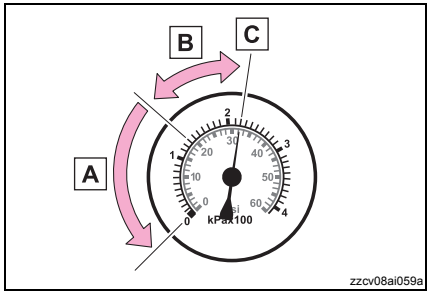

A If the tire inflation pressure is under 130 kPa (1.3 kgf/cm^2 or bar, 19 psi): The puncture cannot be repaired. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

B If the tire inflation pressure is 130 kPa (1.3 kgf/cm^2 or bar, 19 psi) or higher, but less than the specified air pressure: Proceed to step **26**.

C If the tire inflation pressure is the specified air pressure (→P.606): Proceed to step **27**.

26 Turn the compressor switch on to inflate the tire until the speci-

fied air pressure is reached. Drive for about 5 km (3 miles) and then perform step **24**.


27 Hatchback: Store the compressor in the luggage compartment. Wagon: Place the compressor in the original bag and store the repair kit in the luggage compartment.

28 Taking precautions to avoid sudden braking, sudden acceleration and sharp turns, drive carefully at under 80 km/h (50 mph) to the nearest any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for tire repair or replacement.

When having the tire repaired or replaced, make sure to tell any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer that the sealant is injected.

If the tire is inflated to more than the specified air pressure

1 Press the button to let some air out.

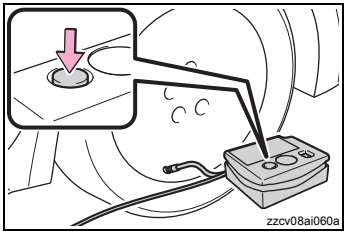

2 Check that the air pressure indicator shows the specified air pressure.

If the air pressure is under the designated pressure, turn the compressor switch on again and repeat the inflation procedure until the specified air pressure is reached.

The valve of a tire that has been repaired (vehicles without a tire pressure warning system)

After a tire is repaired with the emergency tire puncture repair kit, the valve should be replaced.

After a tire is repaired with the emergency tire puncture repair kit (vehicles with a tire pressure warning system)

- The tire pressure warning valve and transmitter should be replaced.
- Even if the tire inflation pressure is at the recommended level, the tire pressure warning light may come on/flash.

WARNING

Do not drive the vehicle with a flat tire

Do not continue driving with a flat tire. Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

Driving with a flat tire may cause a circumferential groove on the side wall. In such a case, the tire may explode when using a repair kit.

When fixing the flat tire

- Stop your vehicle in a safe and flat area.
- Do not touch the wheels or the area around the brakes immediately after the vehicle has been driven. After the vehicle has been driven, the wheels and the area around the brakes may be extremely hot. Touching these areas with hands, feet or other body parts may result in burns.
- Connect the valve and hose securely with the tire installed on the vehicle. If the hose is not properly connected to the valve, air leakage may occur as sealant may be sprayed out.

WARNING

- If the hose comes off the valve while inflating the tire, there is a risk that the hose will move abruptly due to air pressure.
- After inflation of the tire has completed, the sealant may splatter when the hose is disconnected or some air is let out of the tire.
- Follow the operation procedure to repair the tire. If the procedures not followed, the sealant may spray out.
- Keep back from the tire while it is being repaired, as there is a chance of it bursting while the repair operation is being performed. If you notice any cracks or deformation of the tire, turn off the compressor switch and stop the repair operation immediately.
- The repair kit may overheat if operated for a long period of time. Do not operate the repair kit continuously for more than 40 minutes.
- Parts of the repair kit become hot during operation. Be careful when handling the repair kit during and after operation. Do not touch the metal part around the connecting area between the bottle and compressor. It will be extremely hot.
- Do not attach the vehicle speed warning sticker to an area other than the one indicated. If the sticker is attached to an area where an SRS airbag is located, such as the pad of the steering wheel, it may prevent the SRS airbag from operating properly.
- To avoid risk of burst or severe leakage, do not drop or damage the bottle. Visually inspect the bottle before use. Do not use a bottle with shock, crack, scratch, leakage or any other damage. In such case, immediately replace.

■ Driving to spread the liquid sealant evenly

Observe the following precautions to reduce the risk of accidents.
Failing to do so may result in a loss of vehicle control and cause death or serious injury.

- Drive the vehicle carefully at a low speed. Be especially careful when turning and cornering.
- If the vehicle does not drive straight or you feel a pull through the steering wheel, stop the vehicle and check the following.
  - Tire condition. The tire may have separated from the wheel.
  - Tire inflation pressure. If the tire inflation pressure is 130 kPa (1.3 kgf/cm^2 or bar, 19 psi) or less, the tire may be severely damaged.

NOTICE

■ When performing an emergency repair

- A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a sharp object such as nail or screw passing through the tire tread.
  Do not remove the sharp object from the tire. Removing the object may widen the opening and disenable emergency repair with the repair kit.
- The repair kit is not waterproof. Make sure that the repair kit is not exposed to water, such as when it is being used in the rain.

NOTICE

- Do not put the repair kit directly onto dusty ground such as sand at the side of the road. If the repair kit vacuums up dust etc., a malfunction may occur.
- Do not turn the bottle upside down when using it, as doing so may cause damage to the compressor.

■ Precautions for the emergency tire puncture repair kit

- The repair kit power source should be 12 V DC suitable for vehicle use. Do not connect the repair kit to any other source.
- If fuel splatters on the repair kit, the repair kit may deteriorate. Take care not to allow fuel to contact it.
- Place the repair kit in a storage to prevent it from being exposed to dirt or water.
- Store the repair kit in the luggage compartment out of reach of children.
- Do not disassemble or modify the repair kit. Do not subject parts such as the air pressure indicator to impacts. This may cause a malfunction.

■ To avoid damage to the tire pressure warning valves and transmitters (vehicles with a tire pressure warning system)

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop as soon as possible. After use of liquid sealant, make sure to replace the tire pressure warning valve and transmitter when repairing or replacing the tire. (→P.510)

If you have a flat tire (vehicles with a spare tire)

Your vehicle is equipped with a spare tire. The flat tire can be replaced with the spare tire.

For details about tires: →P.500

WARNING

■ If you have a flat tire


Do not continue driving with a flat tire. Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

Before jacking up the vehicle

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Stop the hybrid system.
- Turn on the emergency flashers.

Location of the spare tire, jack and tools

▶ Hatchback (type A)

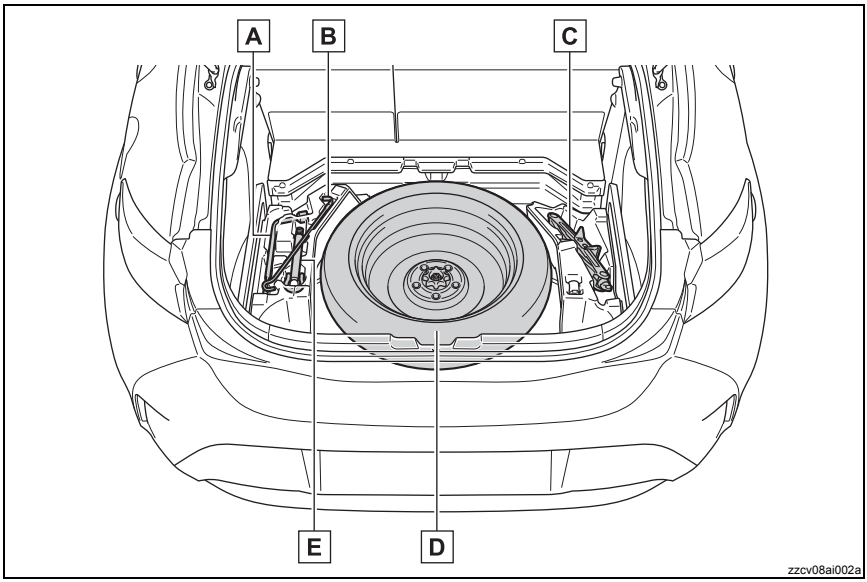

A Wheel nut wrench


B Jack handle

C Jack

D Spare tire

E Towing eyelet

▶ Hatchback (type B)

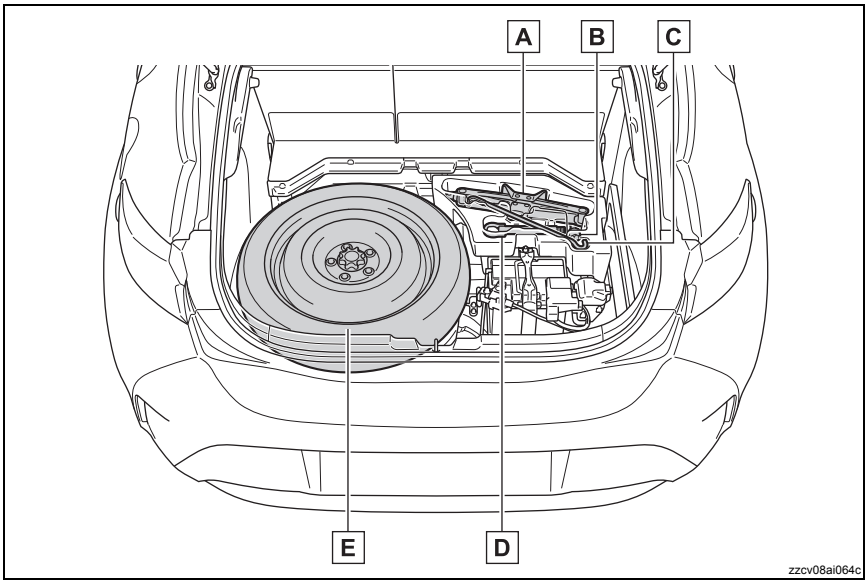

A Jack


B Wheel nut wrench

C Jack handle

D Towing eyelet

E Spare tire

▶ Wagon (vehicles with a compact spare tire)

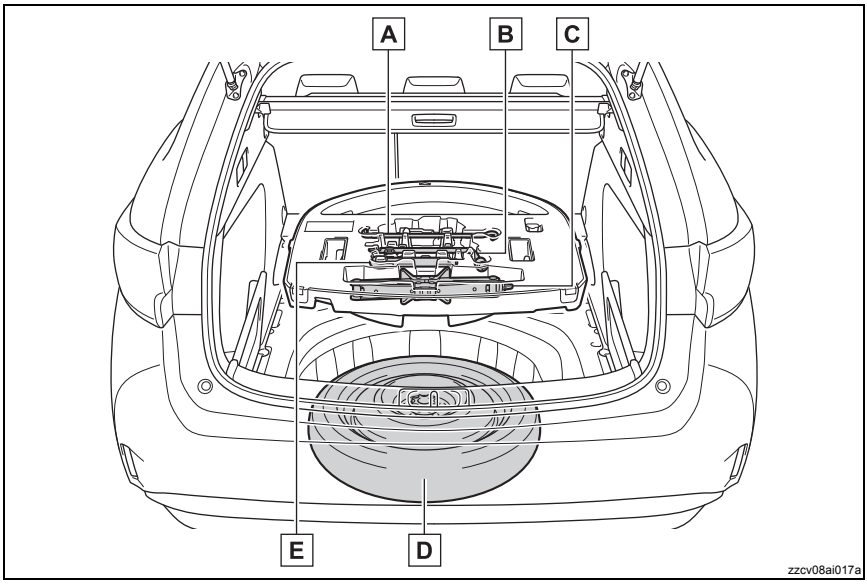

A Jack handle


B Wheel nut wrench

C Jack

D Spare tire

E Towing eyelet

▶ Wagon (vehicles with a full-size spare tire)

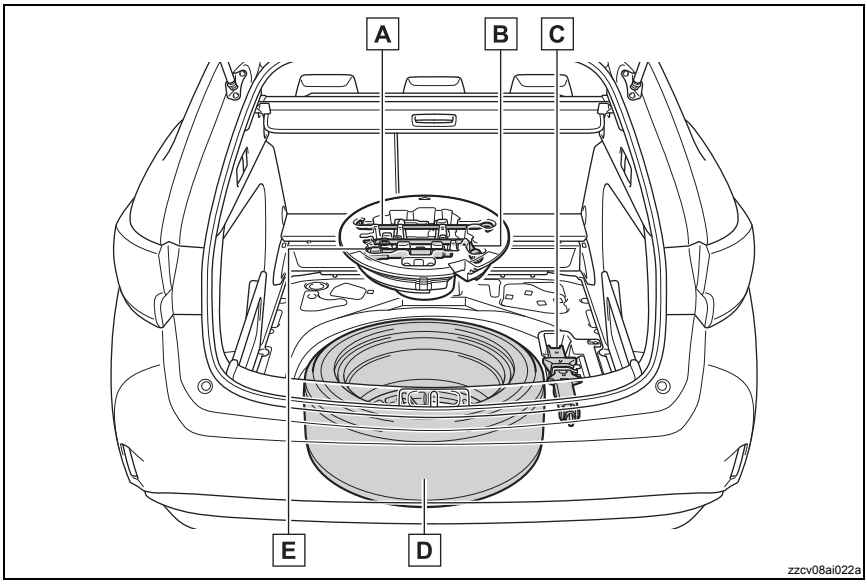

A Jack handle

B Wheel nut wrench

C Jack

D Spare tire


E Towing eyelet

WARNING

■ Using the tire jack

Observe the following precautions. Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Put the jack properly in its jack point.

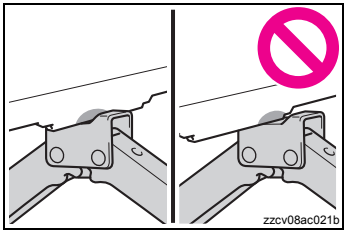

- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start the hybrid system or drive the vehicle while the vehicle is supported by the jack.


WARNING

- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- When lowering the vehicle, make sure that there is no-one near the vehicle. If there are people nearby, warn them vocally before lowering.

Taking out the jack


▶ Hatchback

1 Press the button to raise the deck board handle and then lift the deck board.

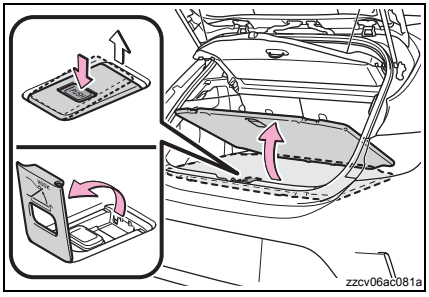


2 Secure the deck board.

When the luggage cover is installed:
Hook the deck board handle onto the underside of the luggage cover as shown in the illustration, to secure the deck board.

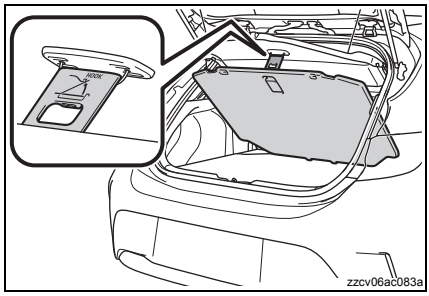


When the luggage cover is not installed:
Hook the deck board handle onto the upper edge of the back door opening as shown in the illustration.

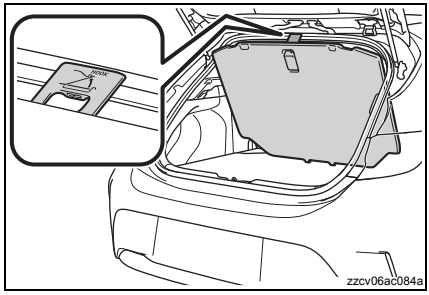

3 Take out the jack.


Type A:

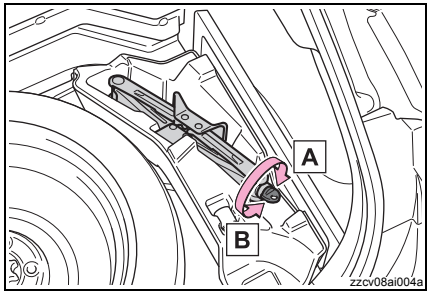

A For tightening

B For loosening

Type B:

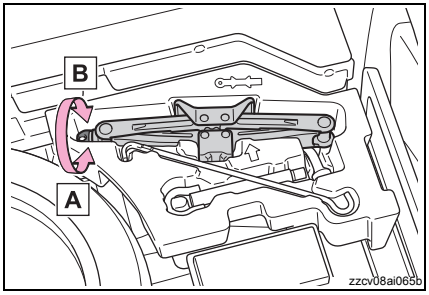


A For tightening

B For loosening


▶ Wagon

1 Raise the deck board handle and then remove the deck board.

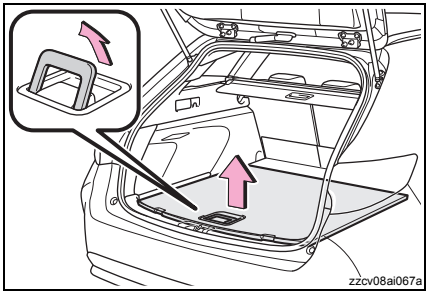

2 Take out the jack.


Vehicles with a compact spare tire:

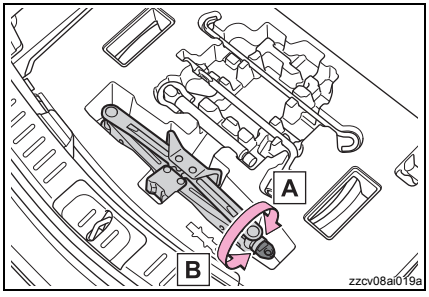

A For tightening

B For loosening

Vehicles with a full-size spare tire:

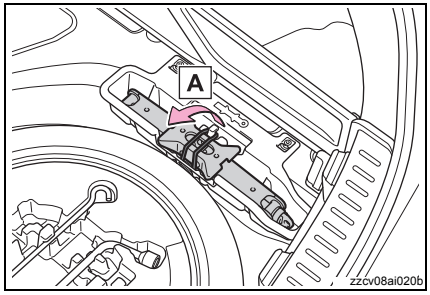


A Disengage the tightening strap.

Taking out the spare tire

▶ Hatchback

1 Secure the deck board. (→P.571)

2 Loosen the center fastener that secures the spare tire.

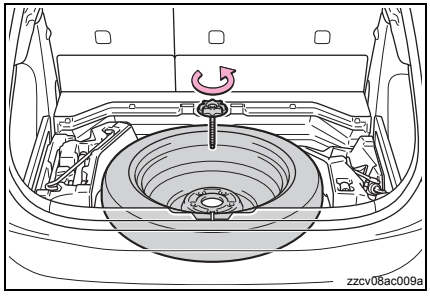


▶ Wagon


1 Remove the deck board. (→P.571)

2 Remove the tray.


Vehicles with a compact spare tire:

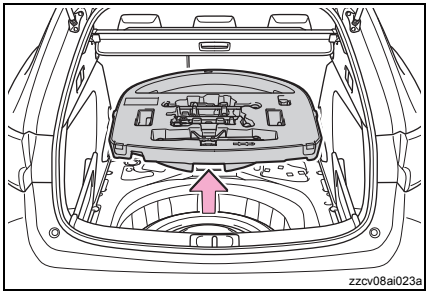

Vehicles with a full-size spare tire:

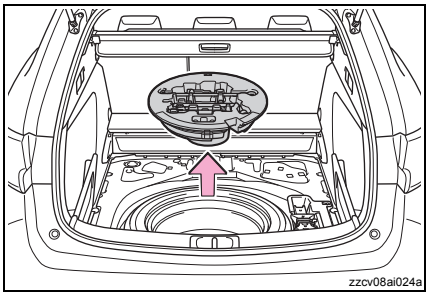

3 Loosen the center fastener that secures the spare tire.

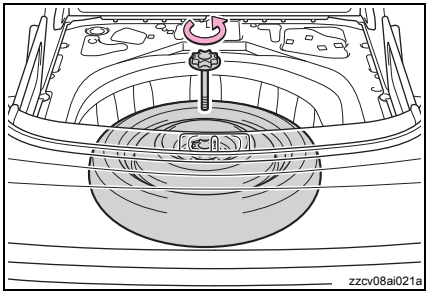


WARNING

■When storing the spare tire

Be careful not to catch fingers or other body parts between the spare tire and the body of the vehicle.

Replacing a flat tire


1 Chock the tires.

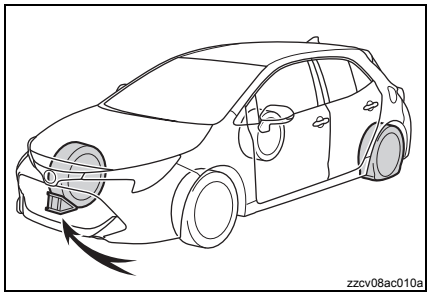


Flat tire	Wheel chock positions
Front left-hand side	Behind the rear right-hand side tire
Front right-hand side	Behind the rear left-hand side tire
Rear left-hand side	In front of the front right-hand side tire
Rear right-hand side	In front of the front left-hand side tire

2 Vehicles with a steel wheel: Remove the wheel ornament (if equipped) using the wrench.


To protect the wheel ornament, place a rag between the wrench and the wheel ornament.

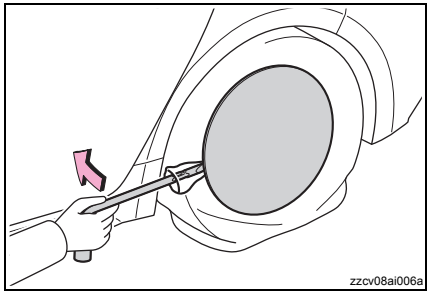


3 Slightly loosen the wheel nuts (one turn).

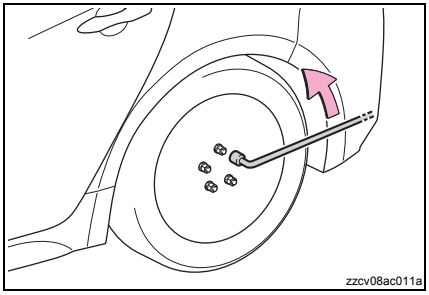


4 Turn the tire jack portion A by hand until the center of the recessed portion of the jack is in contact with the center of the jack point.

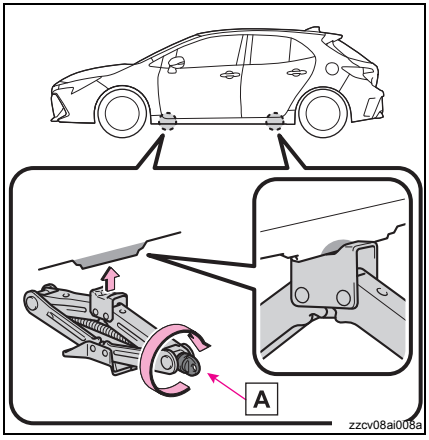

5 Assemble the jack handle extension.

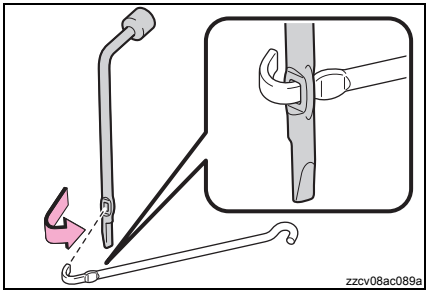


6 Raise the vehicle until the tire is slightly raised off the ground.

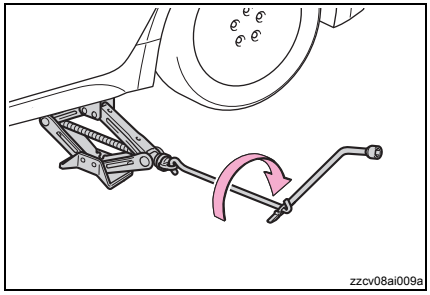

7 Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

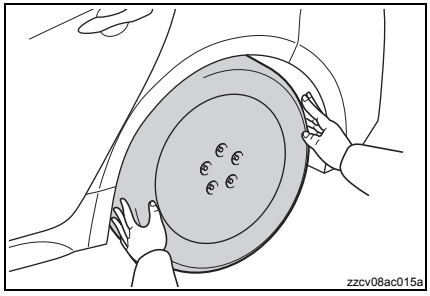

WARNING

■ Replacing a flat tire

- Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven. After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.

WARNING

- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
- Never use oil or grease on the wheel bolts or wheel nuts.
  Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing an accident and resulting in death or serious injury. Remove any oil or grease from the wheel bolts or wheel nuts.
- Have the wheel nuts tightened with a torque wrench to 103 N•m (10.5 kgf•m, 76 ft•lbf) as soon as possible after changing wheels.
- Do not attach a heavily damaged wheel ornament, as it may fly off the wheel while the vehicle is moving.
- When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
- If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- When installing the wheel nuts, be sure to install them with the tapered ends facing inward. (→P.516)


■ Replacing a flat tire for vehicles with power back door

In cases such as when replacing tires, make sure to cancel the power back door system (→P.614). Failure to do so may cause the back door to operate unintentionally if the power back door switch is accidentally touched, resulting in hands and fingers being caught and injured.

Installing the spare tire


1 Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

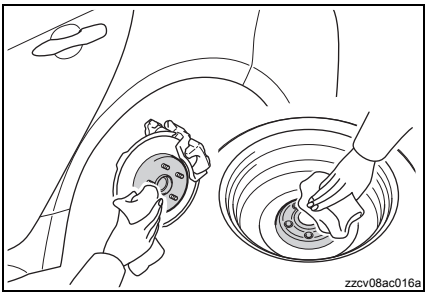


2 Install the tire and loosely tighten each wheel nut by hand by approximately the same amount.

When replacing a steel wheel with a steel wheel (including a compact spare tire), tighten the wheel nuts until the tapered portion A comes into loose contact with the disc wheel seat B.

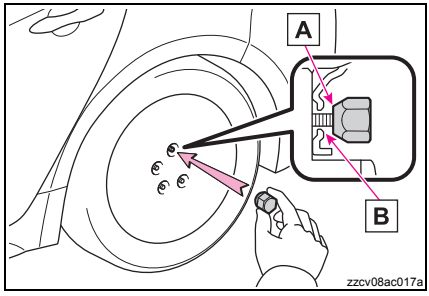


When replacing an aluminum wheel with a steel wheel (including a compact spare tire), tighten the wheel nuts until the tapered portion A comes into loose contact with the disc wheel seat


B.

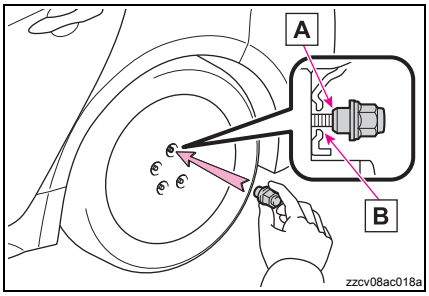

When replacing an aluminum wheel with an aluminum wheel, turn the wheel nuts until the washers A come into loose contact with the disc wheel B.

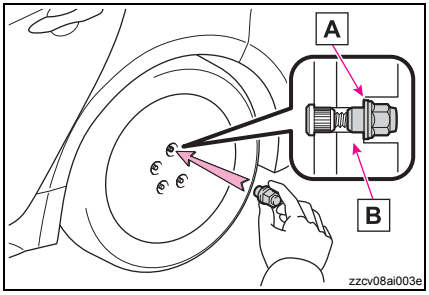


3 Lower the vehicle.

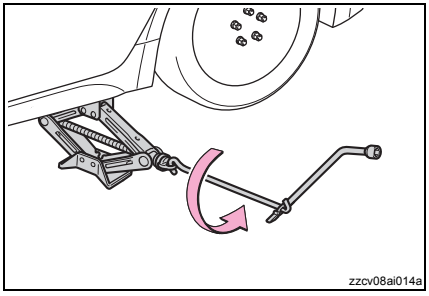

4 Firmly tighten each wheel nut two or three times in the order shown in the illustration.

Tightening torque:

103 N•m (10.5 kgf•m, 76 ft•lbf)

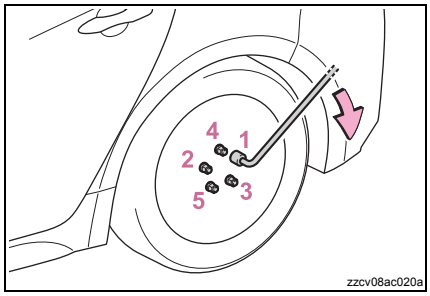

5 Stow the flat tire, tire jack and all tools.

■ The full-size spare tire

- Vehicles with a tire pressure warning system: The full-size spare tire has a “Temporary use only” label on the outer surface of the wheel. Use the full-size spare tire temporarily, and only in an emergency.
- Make sure to check the tire inflation pressure of the full-size spare tire. (→P.606)

■ The compact spare tire

- The compact spare tire is identified by the label “TEMPORARY USE ONLY” on the tire sidewall. Use the compact spare tire temporarily, and only in an emergency.
- Make sure to check the tire inflation pressure of the compact spare tire. (→P.606)

■ When the compact spare tire is equipped

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires.

■ After completing the tire change (vehicles with a tire pressure warning system)

The tire pressure warning system must be reset. (→P.511)

When using the spare tire (vehicles with a tire pressure warning system)

As the spare tire is not equipped with a tire pressure warning valve and transmitter, low inflation pressure of the spare tire will not be indicated by the tire pressure warning system. Also, if you replace the spare tire after the tire pressure warning light comes on, the light remains on.


If you have a flat front tire on a road covered with snow or ice

Install the compact spare tire on one of the rear wheels of the vehicle. Perform the following steps and fit tire chains to the front tires:

1. Replace a rear tire with the compact spare tire.
2. Replace the flat front tire with the tire removed from the rear of the vehicle.
3. Fit tire chains to the front tires.

When reinstalling the wheel ornament (if equipped)

Align the cutout of the wheel ornament with the valve stem as shown in the illustration.

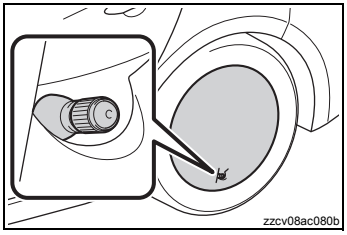

Certification for the jack

CE

Manufacturer's Declaration of Conformity

Manufacturer:

ARIKAN KRiKO A.Ş
Organize Sanayi Bölgesi Teknoloji Bul. NO:13 26110 ESKiŞEHiR / TURKEY

The EU Directives covered by this Declaration

2006 / 42 / EC Machinery Directive

The product covered by this declaration

JACK SUB-ASSY. PANTOGRAPH

model

0.8 ton , 1.1 ton

The basis on which conformity is being declared

The product identified above complies with the requirements of the Machinery Directive
Directive above by meeting following standards

857 – ISO 8720

The technical documentation required to demonstrate that the product meets the requirement the Machinery Directive has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities.

A sample of the product has been tested by the manufacturer

Technical File No :2010 - TOYOTA JACK -IS08720-1

The CE mark was first applied in:2010

Ahmet ARIKAN
General Manager

Signature :

Date of Issue : 26.02.2016

JACK_EU

WARNING

■ When using the full-size spare tire

- Replace the full-size spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

■ When using the compact spare tire

- Remember that the compact spare tire provided is specifically designed for use with your vehicle. Do not use your compact spare tire on another vehicle.
- Do not use more than one compact spare tires simultaneously.
- Replace the compact spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

■ When the compact spare tire is attached

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- ABS & Brake assist
- VSC
- TRC
- Automatic High Beam (if equipped)
- AHS (Adaptive High-beam System) (if equipped)
- Cruise control (if equipped)
- Dynamic radar cruise control with full-speed range (if equipped)
- EPS
- PCS (Pre-Collision System) (if equipped)
- LTA (Lane Tracing Assist) (if equipped)
- Tire pressure warning system (if equipped)
- Toyota parking assist-sensor (if equipped)
- PKSB (Parking Support Brake) (if equipped)
- BSM (Blind Spot Monitor) (if equipped)
- Rear view monitor system (if equipped)
- Adaptive Variable Suspension System (if equipped)
- S-IPA (Simple Intelligent Parking Assist System) (if equipped)
- Navigation system (if equipped)

■ Speed limit when using the compact spare tire

Do not drive at speeds in excess of 80 km/h (50 mph) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

■ After using the tools and jack

Before driving, make sure all the tools and jack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

NOTICE

■ Be careful when driving over bumps with the compact spare tire installed on the vehicle.

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires. Be careful when driving over uneven road surfaces.

■ Driving with tire chains and the compact spare tire

Do not fit tire chains to the compact spare tire. Tire chains may damage the vehicle body and adversely affect driving performance.

■ When replacing the tires (vehicles with a tire pressure warning system)

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

■ To avoid damage to the tire pressure warning valves and transmitters (vehicles with a tire pressure warning system)

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P.510)

If the hybrid system will not start

Reasons for the hybrid system not starting vary depending on the situation. Check the following and perform the appropriate procedure:

The hybrid system will not start even though the correct starting procedure is being followed. (→P.230)

One of the following may be the cause of the problem:

- The electronic key may not be functioning properly. (→P.582)
- There may not be sufficient fuel in the vehicle's tank. Refuel the vehicle.
- There may be a malfunction in the immobilizer system. (→P.94)
- There may be a malfunction in the steering lock system.
- The hybrid system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse. However, depending on the type of malfunction, an interim measure is available to start the hybrid system. (→P.581)
- 2ZR-FXE engine: The temperature of the hybrid battery (traction battery) may be extremely low (below approximately -30°C

[-22°F]). (→P.230)

The interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P.584)
- The 12-volt battery terminal connections may be loose or corroded. (→P.495)

The interior lights and headlights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P.584)
- One or both of the 12-volt battery terminals may be disconnected. (→P.495)

Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer if the problem cannot be repaired, or if repair procedures are unknown.

Emergency start function

When the hybrid system does not start, the following steps can be used as an interim measure to start the hybrid system if the power switch is functioning normally.

Do not use this starting procedure except in case of emergency.

1 Pull the parking brake switch to check that the parking brake is set. (→P.243)

Parking brake indicator will come on.

2 Check that the shift lever is in P.

3 Turn the power switch to ACC.

4 Press and hold the power switch for about 15 seconds while depressing the brake pedal firmly.

Even if the hybrid system can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If you lose your keys

New genuine mechanical keys can be made by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer using another mechanical key and the key number stamped on your key number plate.

Keep the plate in a safe place such as your wallet, not in the vehicle.

NOTICE

■When an electronic key is lost

If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately with all remaining electronic keys that were provided with your vehicle.

If the electronic key does not operate properly

If communication between the electronic key and vehicle is interrupted (→P.164) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors can be opened and the hybrid system can be started by following the procedure below.

■When the electronic key does not work properly

- Make sure that the smart entry & start system has not been deactivated in the customization setting. If it is off, turn the function on. (Customizable features: →P.610)
- Check if battery-saving mode is set. If it is set, cancel the function. (→P.163)

NOTICE


■In case of a smart entry & start system malfunction or other key-related problems

Take your vehicle with all the electronic keys provided with your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Locking and unlocking the doors

Use the mechanical key (→P.143) in order to perform the following


operations:

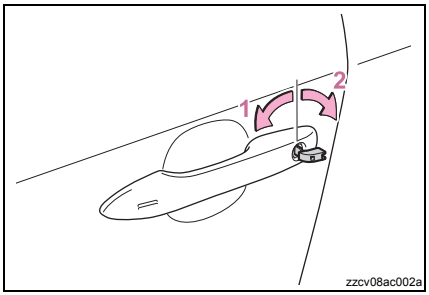

1 Locks all the doors

2 Unlocks all the doors

■ Key linked functions

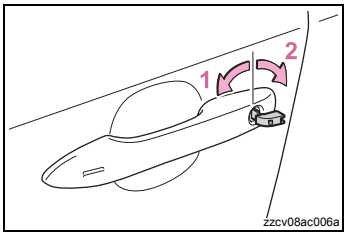

1 Closes the windows and panoramic moon roof*1 (turn and hold)*2

2 Opens the windows and panoramic moon roof*1 (turn and hold)*2

*1: If equipped

*2: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ When using the mechanical key and operating the power windows or panoramic moon roof (if equipped)

Operate the power window or panoramic moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window or panoramic moon roof.
Also, do not allow children to operate the mechanical key. It is possible for children and other passengers to get caught in the power window or panoramic moon roof.


Starting the hybrid system

1 Ensure that the shift lever is in P and depress the brake pedal.

2 Touch the Toyota emblem side of the electronic key to the power switch.

When the electronic key is detected, a buzzer sounds and the power switch will turn to ON.

When the smart entry & start system is deactivated in customization setting, the power switch will turn to ACC.

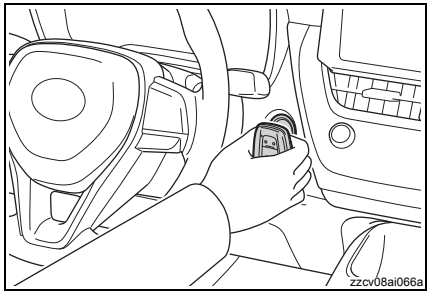

3 Firmly depress the brake pedal and check that  is shown on the multi-information display.

4 Press the power switch shortly and firmly.

In the event that the hybrid system still cannot be started, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Stopping the hybrid system**

Shift the shift lever to P and press the power switch as you normally do when stopping the hybrid system.

■ **Electronic key battery**

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P.522)

■ **Alarm (if equipped)**

Using the mechanical key to lock the doors will not set the alarm system.
If a door is unlocked using the mechanical key when the alarm system is set, the alarm may be triggered. (→P.102)

■ **Changing power switch modes**

Release the brake pedal and press the power switch in step **3** above.
The hybrid system does not start and modes will be changed each time the switch is pressed. (→P.232)

If the 12-volt battery is discharged


The following procedures may be used to start the hybrid system if the 12-volt battery is discharged.
You can also call any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or a qualified repair shop.

Restarting the hybrid system

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.


1 Vehicles with an alarm (→P.102): Confirm that the electronic key is being carried.

When connecting the jumper (or booster) cables, depending on the situation, the alarm may activate and doors locked. (→P.104)

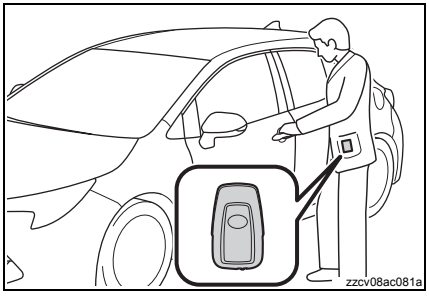


2 2ZR-FXE engine: Open the hood. (→P.488)

M20A-FXS engine: Open the hood (→P.488) and fuse box cover.

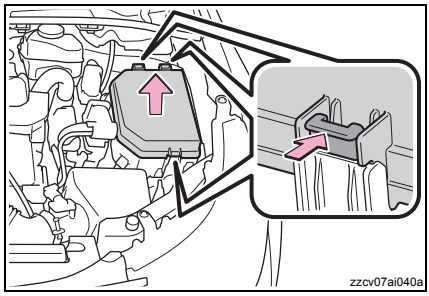


3 M20A-FXS engine: Open the exclusive jump starting terminal cover.

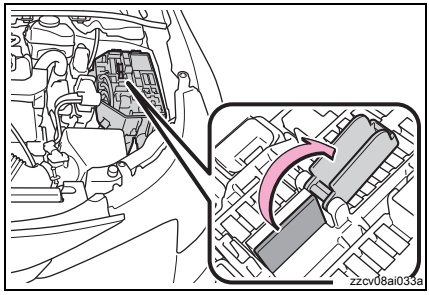

4 Connect a positive jumper cable clamp to A on your vehicle and connect the clamp on the other end of the positive cable to B on the second vehicle. Then, connect a negative cable clamp to C on the second vehicle and connect the clamp at the other end of the negative cable to D.

▶ 2ZR-FXE engine

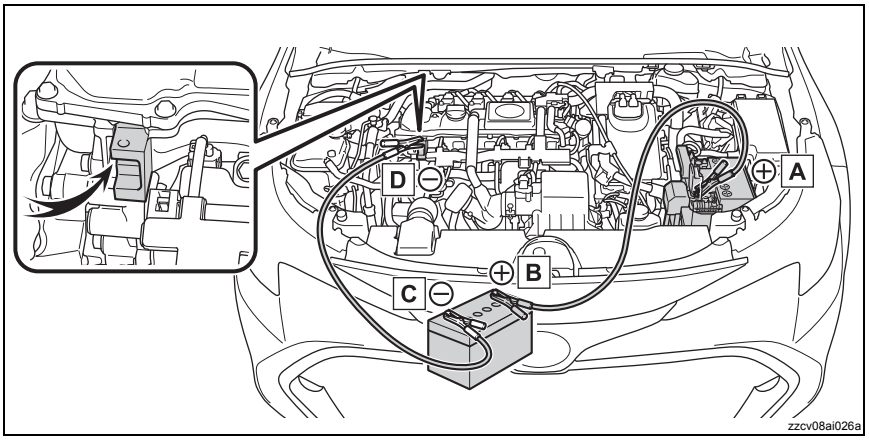


A Positive (+) battery terminal (your vehicle)

B Positive (+) battery terminal (second vehicle)

C Negative (-) battery terminal (second vehicle)

D Solid, stationary, unpainted metallic point away from the battery and any moving parts as shown in the illustration

▶ M20A-FXS engine

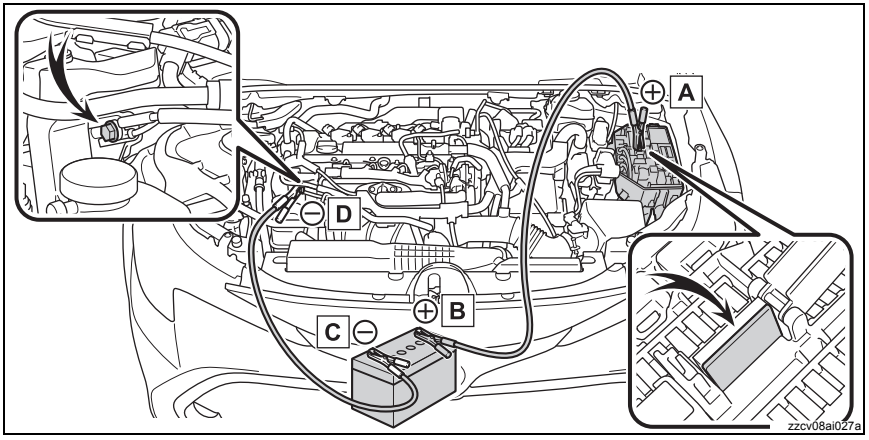

A Exclusive jump starting terminal (your vehicle)

B Positive (+) battery terminal (second vehicle)

C Negative (-) battery terminal (second vehicle)

D Solid, stationary, unpainted metallic point away from the exclusive jump

starting terminal and any moving parts as shown in the illustration

5 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the 12-volt battery of your vehicle.

6 Open and close any of the doors of your vehicle with the power switch OFF.

7 Maintain the engine speed of the second vehicle and start the hybrid system of your vehicle by turning the power switch to ON.

8 Make sure the “READY” indicator comes on. If the indicator does not come on, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

9 Once the hybrid system has started, remove the jumper cables in the exact reverse order from which they were connected.

10 M20A-FXS engine: Close the exclusive jump starting terminal cover and install the fuse box cover to its original position.

Once the hybrid system starts, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

■ Starting the hybrid system when the 12-volt battery is discharged

The hybrid system cannot be started by push-starting.

■ To prevent 12-volt battery discharge

- Turn off the headlights and the audio system while the hybrid system is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

■ When the 12-volt battery is removed or discharged

- Information stored in the ECU is cleared. When the 12-volt battery is depleted, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Some systems may require initialization. (→P.620)

■ When removing the 12-volt battery terminals

When the 12-volt battery terminals are removed, the information stored in the ECU is cleared. Before removing the 12-volt battery terminals, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ Charging the 12-volt battery

The electricity stored in the 12-volt battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the 12-volt battery may discharge, and the hybrid system may be unable to start. (The 12-volt battery recharges automatically while the hybrid system is operating.)

■ When recharging or replacing the 12-volt battery

- Vehicles with entry function: In some

cases, it may not be possible to unlock the doors using the smart entry & start system when the 12-volt battery is discharged. Use the wireless remote control or the mechanical key to lock or unlock the doors.

- The hybrid system may not start on the first attempt after the 12-volt battery has recharged but will start normally after the second attempt. This is not a malfunction.
- The power switch mode is memorized by the vehicle. When the 12-volt battery is reconnected, the system will return to the mode it was in before the 12-volt battery was discharged. Before disconnecting the 12-volt battery, turn the power switch off. If you are unsure what mode the power switch was in before the 12-volt battery discharged, be especially careful when reconnecting the 12-volt battery.


When replacing the 12-volt battery (2ZR-FXE engine)

- Use a 12-volt battery that conforms to European regulations.
- Use a 12-volt battery with the same case size as the previous 12-volt battery and an equivalent 20 hour rate capacity (20HR) or greater.
  - If the sizes differ, the 12-volt battery cannot be properly secured.
  - If the 20 hour rate capacity is low, even if the time period where the vehicle is not used is a short time, the 12-volt battery may discharge and the hybrid system may not be able to start.
- For details, consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

When replacing the 12-volt battery (M20A-FXS engine)

- Use a Central Degassing type 12-volt battery (European Regulations).
- Use a 12-volt battery with the same case size as the previous 12-volt battery and an equivalent 20 hour rate capacity (20HR) or greater.
  - If the sizes differ, the 12-volt battery cannot be properly secured.
  - If the 20 hour rate capacity is low, even if the time period where the vehicle is not used is a short time, the 12-volt battery may discharge and the hybrid system may not be able to start.
- Use a 12-volt battery with a handle. If a 12-volt battery without a handle is used, removal is more difficult.
- After replacing, firmly attach the following items to the exhaust hole of the 12-volt battery.
  - Use the exhaust hose that was attached to the 12-volt battery before replacing and confirm that it is firmly connected to the hole section of the vehicle.
  - Use the exhaust hole plug included with the 12-volt battery replaced or the one installed on the 12-volt battery prior to the replacement. (Depending on the 12-volt battery to be replaced, the exhaust hole may be plugged.)

▶ Hatchback

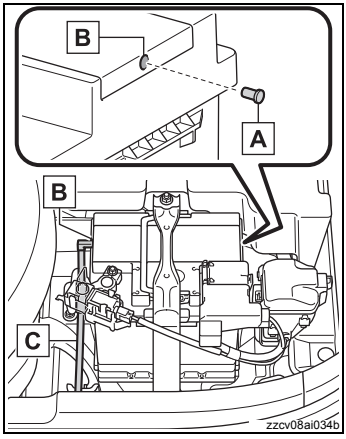


A Exhaust hole plug

B Exhaust hole

C Exhaust hose

▶ Wagon

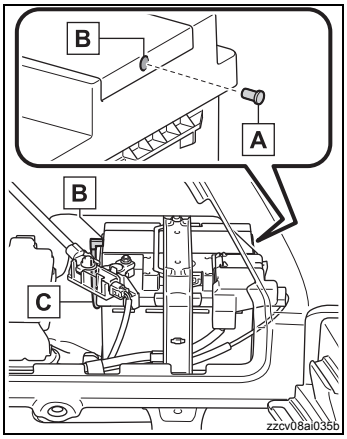

A Exhaust hole plug

B Exhaust hole

C Exhaust hose

- For details, consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ When removing the 12-volt battery terminals

Always remove the negative (-) terminal first. If the positive (+) terminal contacts any metal in the surrounding area when the positive (+) terminal is removed, a spark may occur, leading to a fire in addition to electrical shocks and death or serious injury.

■ Avoiding 12-volt battery fires or explosions

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the 12-volt battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the other end of the jumper cable connected to the “+” terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and - clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the 12-volt battery.

■ 12-volt battery precautions

The 12-volt battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the 12-volt battery:

- When working with the 12-volt battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the 12-volt battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the 12-volt battery support, terminals, and other battery-related parts.
- Do not allow children near the 12-volt battery.

WARNING

■ After recharging the 12-volt battery (M20A-FXS engine)

Have the 12-volt battery inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.
If the 12-volt battery is deteriorating, continued use may cause the 12-volt battery to emit a malodorous gas, which may be detrimental to the health of passengers.

■ When replacing the 12-volt battery

- When the vent plug and indicator are close to the hold down clamp, the battery fluid (sulfuric acid) may leak.
- For information regarding 12-volt battery replacement, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- M20A-FXS engine: After replacing, securely attach the exhaust hose and exhaust hole plug to the exhaust hole of the replaced 12-volt battery. If not properly installed, gases (hydrogen) may leak into the vehicle interior, and there is the possible danger of the gas igniting and exploding.

NOTICE

■ When handling jumper cables

When connecting the jumper cables, ensure that they do not become entangled in the cooling fans, etc.

■ To prevent damaging the vehicle (M20A-FXS engine)

The exclusive jump starting terminal is to be used when charging the 12-volt battery from another vehicle in an emergency. It cannot be used to jump start another vehicle.

If your vehicle overheats

The following may indicate that your vehicle is overheating.

- The engine coolant temperature gauge (→P.113, 117) is in the red zone or a loss of hybrid system power is experienced. (For example, the vehicle speed does not increase.)
- “Engine Coolant Temp High Stop in a Safe Place See Owner’s Manual” or “Hybrid System Overheated Output Power Reduced” is shown on the multi-information display.
- Steam comes out from under the hood.

Correction procedures


▶ If the engine coolant temperature gauge enters the red zone or “Engine Coolant Temp High Stop in a Safe Place See Owner’s Manual” is shown on the multi-information display

1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the hybrid system.

2 If you see steam: Carefully lift the hood after the steam subsides.
If you do not see steam: Carefully lift the hood.

3 After the hybrid system has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.

▶ 2ZR-FXE engine

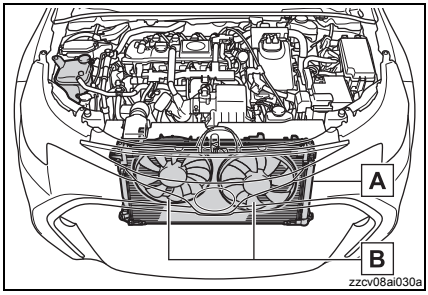


A Radiator

B Cooling fans

If a large amount of coolant leaks, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

▶ M20A-FXS engine

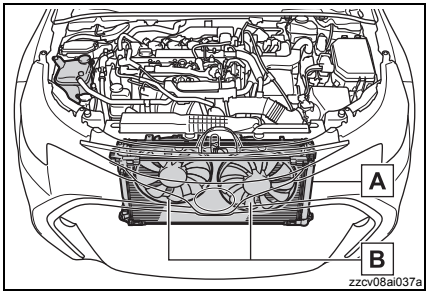


A Radiator

B Cooling fans

If a large amount of coolant leaks, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

4 The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir.

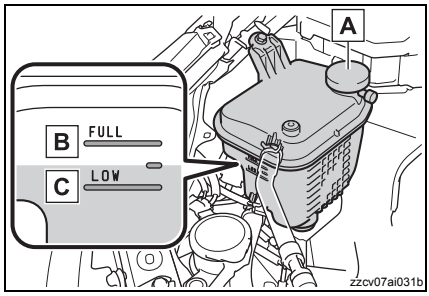


A Reservoir

B “FULL” line

C “LOW” line

5 Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

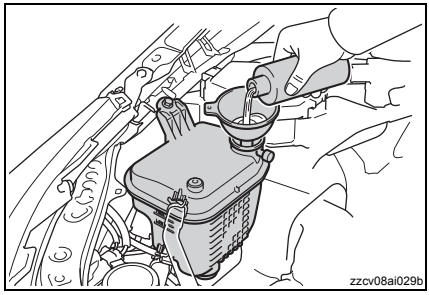

6 Start the hybrid system and turn the air conditioning system on to check that the radiator cooling fans operate and to check for coolant leaks from the radiator or hoses.

The fans operate when the air conditioning system is turned on immediately after a cold start. Confirm that the fans are operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly. (The fans

may not operate in freezing temperatures.)

7 If the fans are not operating: Stop the hybrid system immediately and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
If the fans are operating: Have the vehicle inspected at the nearest any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


▶ If “Hybrid System Overheated Output Power Reduced” is shown on the multi-information display

1 Stop the vehicle in a safe place.

2 Stop the hybrid system and carefully lift the hood.

3 After the hybrid system has cooled down, inspect the hoses and radiator core (radiator) for any leaks.

▶ 2ZR-FXE engine

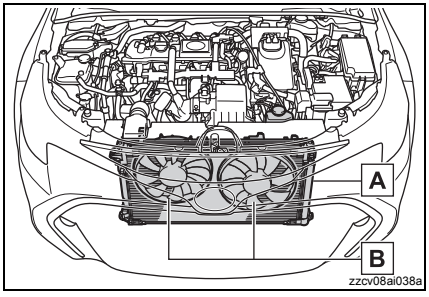


A Radiator

B Cooling fans

If a large amount of coolant leaks, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

▶ M20A-FXS engine

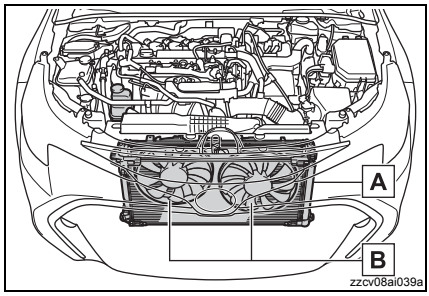


A Radiator

B Cooling fans

If a large amount of coolant leaks, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

4 The coolant level is satisfactory if it is between the “FULL” or “F” and “LOW” or “L” lines on the reservoir.

▶ 2ZR-FXE engine

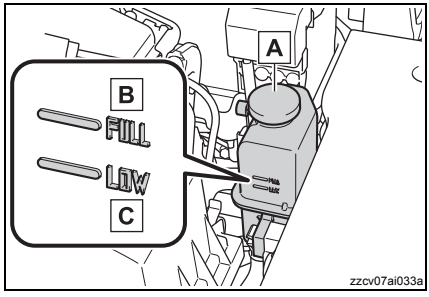


A Reservoir

B “FULL” line

C “LOW” line

▶ M20A-FXS engine

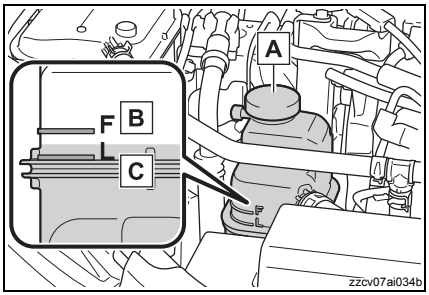

A Reservoir


B "F" line

C "L" line


5 Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

▶ 2ZR-FXE engine

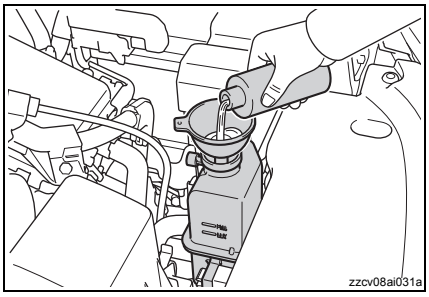

▶ M20A-FXS engine

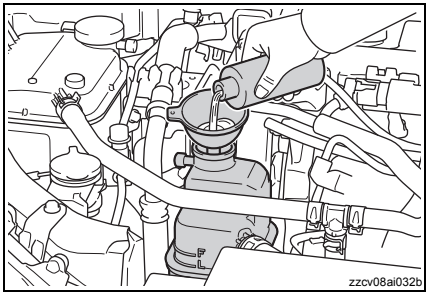

6 After stopping the hybrid system and waiting for 5 minutes or more, start the hybrid system again and check for the multi-information display.

If the message does not disappear: Stop the hybrid system and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the message is not displayed: The hybrid system temperature has dropped and the vehicle may be driven normally.

However, if the message appears again frequently, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■When inspecting under the hood of your vehicle

Observe the following precautions. Failure to do so may result in serious injury such as burns.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- After the hybrid system has been turned off, check that the "READY" indicator is off. When the hybrid system is operating, the gasoline engine may automatically start, or the cooling fans may suddenly operate even if the gasoline engine stops. Do not touch or approach rotating parts such as the fan, which may lead to fingers or clothing (especially a tie, a scarf or a muffler) getting caught, resulting in serious injury.

WARNING

- Do not loosen the coolant reservoir caps while the hybrid system and radiator are hot.
  High temperature steam or coolant could spray out.

NOTICE

When adding engine/power control unit coolant

Add coolant slowly after the hybrid system has cooled down sufficiently. Adding cool coolant to a hot hybrid system too quickly can cause damage to the hybrid system.

To prevent damage to the cooling system

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use any coolant additive.

If the vehicle becomes stuck


Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

Recovering procedure

1. Stop the hybrid system. Set the parking brake and shift the shift lever to P.
2. Remove the mud, snow or sand from around the front wheels.
3. Place wood, stones or some other material under the front wheels to help provide traction.
4. Restart the hybrid system.
5. Shift the shift lever to D or R and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

When it is difficult to free the vehicle

Press the OFF switch to turn off TRC.

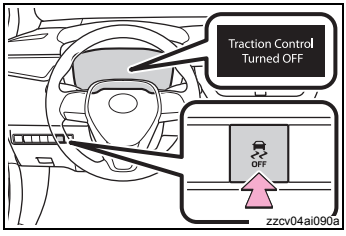

WARNING

■ When attempting to free a stuck vehicle

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

■ When shifting the shift lever

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.

NOTICE

■ To avoid damaging the transmission and other components

- Avoid spinning the front wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

9-1. Specifications

Maintenance data (fuel, oil level, etc.) 598

Fuel information 609

9-2. Customization

Customizable features 610

9-3. Initialization

Items to initialize 620

Maintenance data (fuel, oil level, etc.)

Dimensions and weights

▶ Hatchback

Overall length		4370 mm (172.0 in.)
Overall width		1790 mm (70.5 in.)
Overall height[*1]		1435 mm (56.5 in.)[*2] 1460 mm (57.5 in.)[*3]
Wheelbase		2640 mm (103.9 in.)
Tread	Front	1530 mm (60.2 in.)
	Rear	1530 mm (60.2 in.)
Gross vehicle mass	2ZR-FXE engine	1820 kg (4012 lb.)
	M20A-FXS engine	1890 kg (4167 lb.)[*4] 1910 kg (4211 lb.)[*5]
Maximum permissible axle capacity	Front	1050 kg (2315 lb.)
	Rear	970 kg (2138 lb.)
Drawbar load		75 kg (165 lb.)
Towing capacity	Without brake	450 kg (992 lb.)
	With brake	750 kg (1653 lb.)

▶ Wagon

Overall length		4650 mm (183.0 in.)
Overall width		1790 mm (70.5 in.)
Overall height[*1]		1435 mm (56.5 in.)[*2] 1460 mm (57.5 in.)[*3]
Wheelbase		2700 mm (106.3 in.)
Tread	Front	1530 mm (60.2 in.)
	Rear	1530 mm (60.2 in.)

Gross vehicle mass	2ZR-FXE engine	1835 kg (4045 lb.)
	M20A-FXS engine	1925 kg (4244 lb.)*4 1955 kg (4310 lb.)*5
Maximum permissible axle capacity	Front	1050 kg (2315 lb.)
	Rear	970 kg (2138 lb.)
Drawbar load		75 kg (165 lb.)
Towing capacity	Without brake	450 kg (992 lb.)
	With brake	750 kg (1653 lb.)

*1: Unladen vehicles

*2: Vehicles without a roof antenna

*3: Vehicles with a roof antenna

*4: Vehicles without a rear window wiper


*5: Vehicles with a rear window wiper

Vehicle identification


■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Toyota. It is used in registering the ownership of your vehicle.


This number is stamped under the right-hand front seat.

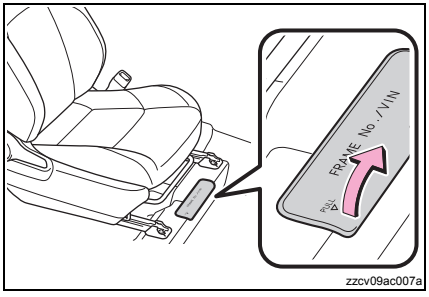

Right-hand drive vehicles: This number is also stamped on the top left of the instrument panel.

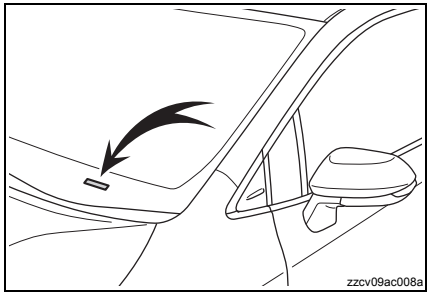


This number is also on the manufacturer's label.

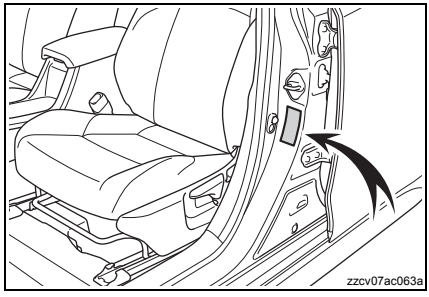


■ Engine number

The engine number is stamped on the engine block as shown.

▶ 2ZR-FXE engine

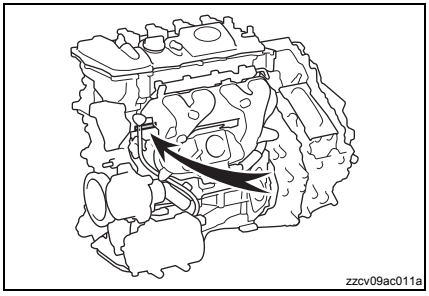

▶ M20A-FXS engine

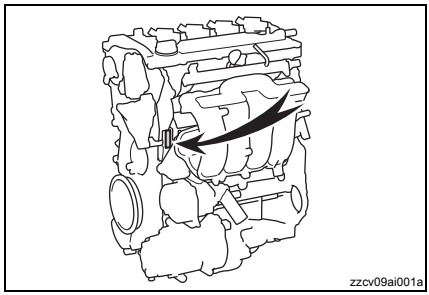

Engine

▶ 2ZR-FXE engine

Model	2ZR-FXE
Type	4-cylinder in line, 4-cycle, gasoline
Bore and stroke	80.5 × 88.3 mm (3.17 × 3.48 in.)
Displacement	1798 cm^3 (109.7 cu. in.)
Valve clearance	Automatic adjustment

▶ M20A-FXS engine

Model	M20A-FXS
Type	4-cylinder in line, 4-cycle, gasoline
Bore and stroke	80.5 × 97.6 mm (3.17 × 3.84 in.)
Displacement	1987 cm^3 (121.3 cu. in.)
Valve clearance	Automatic adjustment

Fuel

Fuel type	When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.  EU area: Unleaded gasoline conforming to European standard EN228 only Except EU area: Unleaded gasoline only
Research Octane Number	95 or higher
Fuel tank capacity (Reference)	43.0 L (11.4 gal., 9.5 Imp. gal.)

Electric motor (traction motor)

	2ZR-FXE	M20A-FXS
Type	Permanent magnet synchronous motor	
Maximum output	53 kW	80 kW
Maximum torque	163 N•m (16.6 kgf•m, 120.2 ft•lbf)	202 N•m (20.6 kgf•m, 149 ft•lbf)

Hybrid battery (traction battery)

	2ZR-FXE	M20A-FXS
Type	Lithium-ion battery	Nickel-Metal hydride battery
Voltage	3.7 V/cell	7.2 V/module
Capacity	3.6 Ah (3HR)	6.5 Ah (3HR)
Quantity	56 cells	30 modules
Overall voltage	207.2 V	216 V

Lubrication system

■ Oil capacity (Drain and refill [Reference*])

With filter	▶ 2ZR-FXE engine 4.2 L (4.4 qt., 3.7 Imp. qt.) ▶ M20A-FXS engine 4.3 L (4.5 qt., 3.8 Imp. qt.)
Without filter	3.9 L (4.1 qt., 3.4 Imp. qt.)

*: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up the engine and turn off the hybrid system, wait more than 5 minutes, and check the oil level on the dipstick.

■ Engine oil selection

"Toyota Genuine Motor Oil" is used in your Toyota vehicle. Toyota recommends the use of approved "Toyota Genuine Motor Oil". Another motor oil of matching quality can also be used.


Oil grade:

0W-16:
API grade SN "Resource-Conserving" multigrade engine oil

0W-20, 5W-30 and 10W-30:
API grade SL "Energy-Conserving", SM "Energy-Conserving" or SN "Resource-Conserving"; or ILSAC multigrade engine oil

15W-40:
API grade SL, SM or SN multigrade engine oil

Recommended viscosity (SAE):

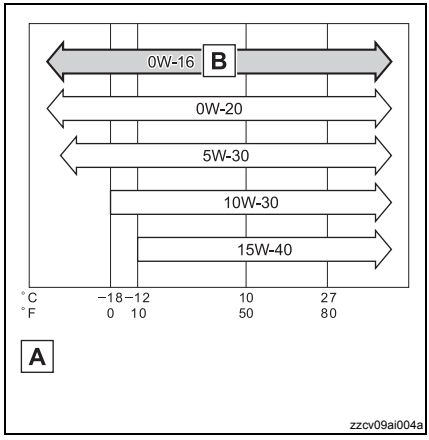

A Temperature range anticipated before next oil change

B Preferred

SAE 0W-16 is filled into your Toyota vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather. If SAE 0W-16 oil is not available, SAE 0W-20 oil may be used. However, it should be replaced with SAE 0W-16 at the next oil change.

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 0W-16, 0W-20 or 5W-30 engine oil is recommended.


Oil viscosity (0W-16 is explained here as an example):

- The 0W in 0W-16 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.

- The 16 in 0W-16 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container labels:

Either or both API registered marks are added to some oil containers to help you select the oil you should use.

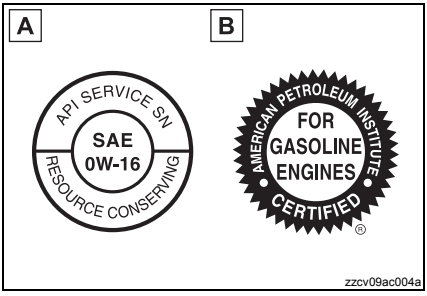

A API Service Symbol

Top portion: “API SERVICE SN” means the oil quality designation by American Petroleum Institute (API).

Center portion: “SAE 0W-16” means the SAE viscosity grade.

Lower portion: “Resource-Conserving” means that the oil has fuel-saving and environmental protection capabilities.

B ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

Cooling system

Capacity (Reference)	Gasoline engine	▶ 2ZR-FXE engine 5.4 L (5.7 qt., 4.8 Imp. qt.) ▶ M20A-FXS engine Without exhaust heat recirculation system: 5.9 L (6.2 qt., 5.2 Imp. qt.) With exhaust heat recirculation system: 6.5 L (6.9 qt., 5.7 Imp. qt.)
	Power control unit	▶ 2ZR-FXE engine 1.4 L (1.5 qt., 1.2 Imp. qt.) ▶ M20A-FXS engine 1.6 L (1.7 qt., 1.4 Imp. qt.)
Coolant type		Use either of the following: • “Toyota Super Long Life Coolant” • Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

Ignition system (spark plug)

Make	▶ 2ZR-FXE engine DENSO FC16HR-CY9 ▶ M20A-FXS engine DENSO FC16HR-Q8
Gap	▶ 2ZR-FXE engine 0.9 mm (0.035 in.) ▶ M20A-FXS engine 0.8 mm (0.032 in.)

NOTICE

■ Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.

Electrical system (12-volt battery)

Open voltage at 20°C (68°F):	12.3 V or higher (Turn the power switch off and turn on the high beam headlights for 30 seconds.)
Charging rates	
Quick charge	15 A max.
Slow charge	5 A max.

Hybrid transmission

Fluid capacity*	▶ 2ZR-FXE engine 3.6 L (3.8 qt., 3.2 Imp. qt.) ▶ M20A-FXS engine 3.8 L (4.0 qt., 3.3 Imp. qt.)
Fluid type	Toyota Genuine ATF WS

*: The fluid capacity is a reference quantity.
If replacement is necessary, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

NOTICE

■ Hybrid transmission fluid type

Using transmission fluid other than “Toyota Genuine ATF WS” may ultimately damage to the vehicle’s transmission.

Brakes

Pedal clearance*1	114 mm (4.5 in.) Min.
Pedal free play	1 — 6 mm (0.04 — 0.24 in.)
Parking brake indicator*2	When pulling the parking brake switch for 1 to 2 seconds: comes on When pushing the parking brake switch for 1 to 2 seconds: turns off
Fluid type	SAE J1703 or FMVSS No.116 DOT 3 SAE J1704 or FMVSS No.116 DOT 4

*1: Minimum pedal clearance when depressed with a force of 300 N (30.6 kgf, 67.4 lbf) while the hybrid system is operating.

*2: Make sure to confirm that the brake warning light (yellow) does not illuminate. (If the brake warning light illuminates, refer to P.542.)

Steering

Free play	Less than 30 mm (1.2 in.)

Tires and wheels

▶ 15-inch tires

Tire size	195/65R15 91H		
Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm^2 or bar, psi)	Rear wheel kPa (kgf/cm^2 or bar, psi)
	More than 160 km/h (100 mph)	Type A*: 280 (2.8, 41) Type B*: 250 (2.5, 36)	Type A*: 270 (2.7, 39) Type B*: 250 (2.5, 36)
	160 km/h (100 mph) or less	Type A*: 250 (2.5, 36) Type B*: 220 (2.2, 32)	Type A*: 240 (2.4, 35) Type B*: 220 (2.2, 32)
Wheel size	15 × 6 1/2J		
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)		

*: The tire inflation pressure is specified on the tire-loading information label. (→P.514)

▶ 16-inch tires

Tire size	205/55R16 91V

Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm^2 or bar, psi)	Rear wheel kPa (kgf/cm^2 or bar, psi)
	More than 160 km/h (100 mph)	Type A*: 280 (2.8, 41) Type B*: 250 (2.5, 36)	Type A*: 270 (2.7, 39) Type B*: 250 (2.5, 36)
	160 km/h (100 mph) or less	Type A*: 250 (2.5, 36) Type B*: 220 (2.2, 32)	Type A*: 240 (2.4, 35) Type B*: 220 (2.2, 32)
Wheel size	16 × 7J		
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)		

*: The tire inflation pressure is specified on the tire-loading information label. (→P.514)

▶ 17-inch tires

Tire size	225/45R17 91W		
Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm^2 or bar, psi)	Rear wheel kPa (kgf/cm^2 or bar, psi)
	More than 160 km/h (100 mph)	260 (2.6, 38)	240 (2.4, 35)
	160 km/h (100 mph) or less	230 (2.3, 33)	210 (2.1, 30)
Wheel size	17 × 7 1/2J		
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)		

▶ 18-inch tires

Tire size	225/40R18 92W

Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm^2 or bar, psi)	Rear wheel kPa (kgf/cm^2 or bar, psi)
	More than 160 km/h (100 mph)	260 (2.6, 38)	240 (2.4, 35)
	160 km/h (100 mph) or less	230 (2.3, 33)	210 (2.1, 30)
Wheel size	18 × 8J		
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)		

▶ Compact spare tire (if equipped)

Tire size	T125/70D17 98M
Tire inflation pressure (Recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm^2 or bar, 60 psi)
Wheel size	17 × 4T
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

■ When towing a trailer

Add 20.0 kPa (0.2 kgf/cm^2 or bar, 3 psi) to the recommended tire inflation pressure and drive at speeds below 100 km/h (62 mph).

Light bulbs

	Light bulbs	W	Type
Exterior	License plate lights	5	A
Interior	Front interior lights/personal lights	5	A
	Vanity lights (if equipped)	8	A
	Rear interior light (if equipped)	8	B
	Rear personal light (if equipped)	8	A
	Luggage compartment light	5	A

A: Wedge base bulbs (clear)

B: Double end bulbs

Fuel information

When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.



EU area:
You must only use unleaded gasoline conforming to European standard EN228.
Select premium unleaded gasoline with a Research Octane Number of 95 or higher for optimum engine performance.

Except EU area:
You must only use unleaded gasoline.
Select premium unleaded gasoline with a Research Octane Number of 95 or higher for optimum engine performance.

Use of ethanol blended gasoline in a gasoline engine

Toyota allows the use of ethanol blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.

If your engine knocks

- Consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

NOTICE

Notice on fuel quality

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use gasoline with metallic additives, for example manganese, iron or lead, otherwise it may cause damage on your engine or emission control system.
- Do not add aftermarket fuel additives which contain metallic additives.
- EU area: Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. The use of these fuels will damage the vehicle’s fuel system. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Except EU area: Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. Your vehicle can use gasoline mixed with 10% max ethanol. The use of fuel with more than 10% ethanol content (E10) will damage the vehicle’s fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not use the methanol blended gasoline such as M15, M85, M100. The use of gasoline containing methanol may cause engine damage or failure.

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed using the multi-information display, the navigation/multimedia system screen or at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Customizing vehicle features

■ Changing by using the navigation/multimedia system screen (vehicles with navigation/multimedia system)

1 Press the “MENU” button.

2 Select “Setup” on the “Menu” screen.

3 Select “Vehicle” on the “Setup” screen.

Various setting can be changed. Refer to the list of settings that can be changed for details.

■ Changing by using the meter control switches

1 Press ❮ or ❯ of the meter control switch to select ⚙.

2 Press ^ or ⌄ of the meter control switch to select the desired item to be customized.

3 Press or press and hold OK .

The available settings will differ depending on if OK is pressed or pressed and held. Follow the instructions on the display.

⚠ WARNING

■ During customization

As the hybrid system needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

NOTICE

■ During customization

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.

Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further details.

A Settings that can be changed using the navigation/multimedia system screen (vehicles with navigation/multimedia system)

B Settings that can be changed using the meter control switches

C Settings that can be changed by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer

Definition of symbols: O = Available, — = Not available

■ **Gauges, meters and multi-information display (→P.108, 113, 117, 123)**

Function[*1]	Default setting	Customized setting	A	B	C
Language[*2]	English	[*3]	—	O	—
Units[*2]	L/100 km	km/L	—	O	—
		miles (MPG)[*4]			
Speedometer display[*5]	Analog	Digital	—	O	—
		Digital+[*4]			
EV indicator	On	Off	—	O	—
Eco Accelerator Guidance	On	Off	—	O	—
Fuel economy display	Total average (Average fuel consumption [after reset])	Trip average (Average fuel consumption [after start])	—	O	—
		Tank average (Average fuel consumption [after refuel])			
Audio system linked display[*4]	On	Off	—	O	—
Energy monitor	On	Off	—	O	—
Drive information type	After start	After reset	—	O	—
Drive information items (First item)	Distance	Average vehicle speed	—	O	—
		Elapsed time			
Drive information items (Second item)	Elapsed time	Average vehicle speed	—	O	—
		Distance			
Current trip result display	Drive information	Eco score	—	O	—
Pop-up display	On	Off	—	O	—

[*1]: For details about each function: →P.123

*2: The default setting varies according to country.

*3: Arabic, Spanish, Russian, French, German, Italian, Dutch, Turkish, Polish, Hebrew, Norwegian, Swedish, Danish, Ukrainian, Finnish, Greek, Czech, Portuguese, Romanian, Slovakian, Hungarian, Flemish

*4: If equipped

*5: 7-inch display

■ Head-up display* (→P.131)

Function	Default setting	Customized setting	A	B	C
Head-up display	On	Off	—	O	—
Gauge information	Hybrid System Indicator	Tachometer	—	O	—
		No content			
Route guidance to destination/street name*	On	Off	—	O	—
Driving support system display	On	Off	—	O	—
Compass*	On	Off	—	O	—
Audio system operation status*	On	Off	—	O	—

*: If equipped

■ Door lock (→P.145, 149, 582)

Function	Default setting	Customized setting	A	B	C
Unlocking using a mechanical key	All doors unlocked in one step	Driver's door unlocked in one step, all doors unlocked in two step	—	—	O

■ Entry function* and wireless remote control (→P.145, 160)

Function	Default setting	Customized setting	A	B	C
Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	30 seconds	60 seconds	—	—	O
		120 seconds			
Open door warning buzzer	On	Off	—	—	O

*: If equipped

■ Smart entry & start system (→P.145, 160)

Function	Default setting	Customized setting	A	B	C
Smart entry & start system	On	Off	O	—	O
Smart door unlocking*1	All the doors	Driver's door	O	—	O
Time elapsed before unlocking all the door when gripping and holding the driver's door handle*1	Off	1.5 seconds	—	—	O
		2.0 seconds			
		2.5 seconds			
Number of consecutive door lock operations*2	2 times	As many as desired	—	—	O

*1: Vehicles with entry function

*2: On some models

■ Wireless remote control (→P.143, 145, 149)

Function	Default setting	Customized setting	A	B	C
Wireless remote control	On	Off	—	—	O
Unlocking operation	All doors unlocked in one step	Driver's door unlocked in one step, all doors unlocked in two step	O	—	O
Power back door unlocking operation*	Press and hold (short)	One short press	—	—	O
		Push twice			
		Press and hold (long)			
		Off			

*: If equipped

■ Power back door* (→P.149)

Function	Default setting	Customized setting	A	B	C
Power back door operations	On	Off	—	O	—
Kick sensor	On	Off	—	O	—
Set at the desired position(height): Back door automatic open and stop position	Initial settings position	Stop at the desired position (height)	—	O	—
5 step configuration: Back door automatic open and stop position	5	1 to 5	—	O	—
Operation buzzer volume	3	1	—	O	—
		2			

*: If equipped

■ Outside rear view mirrors (→P.205)

Function	Default setting	Customized setting	A	B	C
Automatic mirror folding and extending operation*	Linked to the locking/ unlocking of the doors	Off	—	—	O
		Linked to operation of the power switch			

*: If equipped

■ Power windows and panoramic moon roof* (→P.208, 210)

Function	Default setting	Customized setting	A	B	C
Mechanical key linked operation	Off	On	—	—	O
Wireless remote control linked operation	Off	On	—	—	O
Wireless remote control linked operation signal (buzzer)	On	Off	—	—	O

*: If equipped

■ Automatic light control system (→P.249)

Function	Default setting	Customized setting	A	B	C
Light sensor sensitivity	Standard	-2 to 2	O	—	O
Follow me home (Time elapsed before headlights automatically turn off)	30 seconds	60 seconds	—	—	O
		90 seconds			
		120 seconds			

■ AHS (Adaptive High-beam System)*1 (→P.255)

Function	Default setting	Customized setting	A	B	C
Adaptive High-beam System	On	Off*2	—	—	O
Clearance between a vehicle ahead and the shaded high beams	Wide	Narrow	—	—	O
		Standard			
Vehicle speed at which the brightness and illuminated area adjustment of the high beams changes mode	Approximately 120 km/h (75 mph) or more	Approximately 100 km/h (63 mph) or more	—	—	O
		Approximately 80 km/h (50 mph) or more			
Intensity adjustment of the high beams when driving around a curve (illuminates the area in the direction vehicle is turning more brightly)	On	Off	—	—	O
Projection distance adjustment of the low beams according to the distance to a preceding vehicle	On	Off	—	—	O
High beam light distribution control for rain	On	Off	—	—	O
Light distribution control for urban areas	On	Off	—	—	O

*1: If equipped

*2: The headlights will operate under Automatic High Beam control. (→P.252)

■ PCS (Pre-Collision System)* (→P.278)

Function	Default setting	Customized setting	A	B	C
PCS (Pre-Collision System)	On	Off	—	O	—
Adjust alert timing	Middle	Far	—	O	—
		Near			

*: If equipped

■ LTA (Lane Tracing Assist)* (→P.286)

Function	Default setting	Customized setting	A	B	C
Lane centering function	On	Off	—	O	—
Steering assist function	On	Off	—	O	—
Alert sensitivity	High	Standard	—	O	—
Vehicle sway warning function	On	Off	—	O	—
Vehicle sway warning sensitivity	Standard	High	—	O	—
		Low			

*: If equipped

■ RSA (Road Sign Assist)*1 (→P.311)

Function	Default setting	Customized setting	A	B	C
RSA (Road Sign Assist)	On	Off	—	O	—
Excess speed notification method	Display only	No notification	—	O	—
		Display and buzzer			
Excess speed notification level	2 km/h (1 mph)	10 km/h (5 mph)	—	O	—
		5 km/h (3 mph)			
No overtaking notification method	Display only	No notification	—	O	—
		Display and buzzer			
Other notifications method (No-entry notification)*2	Display only	No notification	—	O	—
		Display and buzzer			

*1: If equipped

*2: Vehicles with navigation system

■ Dynamic radar cruise control with full-speed range* (→P.295)

Function	Default setting	Customized setting	A	B	C
Dynamic Radar Cruise Control with Road Sign Assist	Off	On	—	O	—

*: If equipped

■ BSM (Blind Spot Monitor)* (→P.315)

Function	Default setting	Customized setting	A	B	C
BSM (Blind Spot Monitor)	On	Off	—	O	—
Outside rear view mirror indicator brightness	Bright	Dim	—	O	—
Alert timing for presence of approaching vehicle (sensitivity)	Intermediate	Early	—	O	—
		Late			
		Only when vehicle detected in blind spot			

*: If equipped

■ Toyota parking assist-sensor* (→P.323)

Function	Default setting	Customized setting	A	B	C
Toyota parking assist-sensor	On	Off	—	O	—
Buzzer volume	Level2	Level1	—	O	—
		Level3			

*: If equipped

■ RCTA (Rear crossing traffic alert) function* (→P.331)

Function	Default setting	Customized setting	A	B	C
RCTA (Rear crossing traffic alert) function	On	Off	—	O	—
Buzzer volume	Level2	Level1	—	O	—
		Level3			

*: If equipped

■ PKSB (Parking Support Brake)* (→P.336)

Function	Default setting	Customized setting	A	B	C
PKSB (Parking Support Brake) function	On	Off	—	O	—

*: If equipped

■ Driving mode select switch (→P.378)

Function	Default setting	Customized setting	A	B	C
Powertrain control in custom mode*	Normal	Power	O	—	—
		Eco			
Chassis control in custom mode*	Normal	Sport	O	—	—
		Comfort			
Air conditioning operation in custom mode*	Normal	Eco	O	—	—

*: If equipped

■ Automatic air conditioning system (→P.444)

Function	Default setting	Customized setting	A	B	C
Switching between outside air and recirculated air mode linked to automatic mode switch operation	On	Off	O	—	O
A/C auto switch operation	On	Off	O	—	O

■ Illumination (→P.453)

Function	Default setting	Customized setting	A	B	C
Time elapsed before the interior lights turn off	15 seconds	Off	O	—	O
		7.5 seconds			
		30 seconds			
Operation after the power switch is turned off	On	Off	—	—	O
Operation when the doors are unlocked	On	Off	—	—	O

Function	Default setting	Customized setting	A	B	C
Operation when you approach the vehicle with the electronic key on your person*	On	Off	—	—	O
Cup holder lights* and center tray light*	On	Off	—	—	O
Door trim lights*	On	Off	—	—	O

*: If equipped

■ **Vehicle customization**

When the smart entry & start system is off, Smart door unlocking cannot be customized.

■ **In the following situations, customize mode in which the settings can be changed through the multi-information display will automatically be turned off**

- A warning message appears after the customize mode screen is displayed
- The power switch is turned off.
- The vehicle begins to move while the customize mode screen is displayed.

Items to initialize

The following items must be initialized for normal system operation after such cases as the 12-volt battery being reconnected, or maintenance being performed on the vehicle:

List of items to initialize

Item	When to initialize	Reference
PKSB (Parking Support Brake)*	• After reconnecting or changing the 12-volt battery	P.341
S-IPA (Simple Intelligent Parking Assist System)*	• After reconnecting or changing the 12-volt battery	P.369
Tire pressure warning system*	• When rotating front and rear tires which have different tire inflation pressures • When changing the tire size • When the tire inflation pressure is changed such as when changing traveling speed or load weight • When changing between two registered wheel sets	P.511

*: If equipped

Index

What to do if... (Troubleshooting) 622
Alphabetical Index 625

What to do if... (Troubleshooting)

If you have a problem, check the following before contacting any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

The doors cannot be locked, unlocked, opened or closed


zzcv99ac047a

You lose your keys

- If you lose your mechanical keys, new genuine mechanical keys can be made by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (→P.582)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately. (→P.582)


zzcv99ac048a

The doors cannot be locked or unlocked

- Is the electronic key battery weak or depleted? (→P.522)
- Is the power switch in ON?

When locking the doors, turn the power switch off. (→P.232)

- Is the electronic key left inside the vehicle?

When locking the doors, make sure that you have the electronic key on your person.

- The function may not operate properly due to the condition of the radio wave. (→P.164)


zzcv99ac048a

The rear door cannot be opened

- Is the child-protector lock set?

The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P.148)

If you think something is wrong



zzcv99ac051a

The hybrid system does not start

- Did you press the power switch while firmly depressing the brake pedal? (→P.230)
- Is the shift lever in P? (→P.230)
- Is the electronic key anywhere detectable inside the vehicle? (→P.162)
- Is the steering wheel unlocked? (→P.231)
- Is the electronic key battery weak or depleted?

In this case, the hybrid system can be started in a temporary way. (→P.583)

- Is the 12-volt battery discharged? (→P.584)



The shift lever cannot be shifted from P even if you depress the brake pedal

- Is the power switch in ON?

If you cannot release the shift lever by depressing the brake pedal with the power switch in ON. (→P.237)



The steering wheel cannot be turned after the hybrid system is stopped

- It is locked automatically to prevent theft of the vehicle. (→P.231)



The windows do not open or close by operating the power window switches

- Is the window lock switch pressed?

The power window except for the one at the driver's seat cannot be operated if the window lock switch is pressed. (→P.210)



The power switch is turned off automatically

- The auto power off function will be operated if the vehicle is left in ACC or ON (the hybrid system is not operating) for a period of time. (→P.233)



A warning buzzer sounds during driving

- The seat belt reminder light is flashing

Are the driver and the passenger wearing the seat belts? (→P.545)

- The parking brake indicator is on

Is the parking brake released? (→P.243)

Depending on the situation, other types of warning buzzer may also sound. (→P.542, 551)



An alarm is activated and the horn sounds (vehicles with an alarm)

- Did anyone inside the vehicle open a door or anything move inside the vehicle during setting the alarm?

The sensor detects it and the alarm sounds. (→P.102)

Do one of the following to deactivate or stop the alarms:

- Unlock the doors using the entry function (if equipped) or wireless remote control.
- Starting the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)



A warning buzzer sounds when leaving the vehicle

- Is the electronic key left inside the vehicle?

Check the message on the multi-information display. (→P.551)



A warning light turns on or a warning message is displayed

- When a warning light turns on or a warning message is displayed, refer to P.542, 551.

When a problem has occurred



If you have a flat tire

- Vehicles with an emergency tire puncture repair kit: Stop the vehicle in a safe place and repair the flat tire temporarily with the emergency tire puncture repair kit. (→P.554)
- Vehicles with spare tire: Stop the vehicle in a safe place and replace the flat tire with the spare tire. (→P.566)



The vehicle becomes stuck

- Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow. (→P.594)

Alphabetical Index

A

A/C
Air conditioning filter....517
Automatic air conditioning system 444
ABS (Anti-lock Brake System) 381
Warning light 544
ACA (Active Cornering Assist)....381
Active Cornering Assist (ACA)....381
Adaptive High-beam System....255
Adaptive Variable Suspension System....381
Air conditioning filter....517
Air conditioning system
Air conditioning filter....517
Automatic air conditioning system 444
Airbag manual on-off system....46
Airbags
Airbag manual on-off system 46
Airbag operating conditions 39
Airbag precautions for your child .41
Correct driving posture....31
Curtain shield airbag operating conditions 39
Curtain shield airbag precautions 41
General airbag precautions....41
Locations of airbags....37
Modification and disposal of airbags 44
Side airbag operating conditions..39
Side airbag precautions 41
Side and curtain shield airbags operating conditions....39
Side and curtain shield airbags precautions 41
SRS airbags....37
SRS warning light 544
Alarm
Alarm....102
Warning buzzer....542
Antennas (smart entry & start system)....160, 161
Anti-lock Brake System (ABS)....381
Warning light 544
Approach warning 301
Armrest....474
Assist grips 474
Audio input....414
Audio system
Audio input 414
AUX port/USB port....394
Bluetooth® audio 415
CD player 399
iPod....405
MP3/WMA disc....399
Optimal use 395
Portable music player....414
Radio....397
Steering wheel audio switch....393
USB memory....410
Audio system-linked display 128
Automatic air conditioning system 444
Automatic headlight leveling system 250
Automatic High Beam 252
Automatic light control system...249
AUX port....394
Average fuel economy 125
Average vehicle speed 128

B

Back door 149
Back-up light
Replacing light bulbs....528
Battery (12-volt battery)
Battery checking....495, 498
If the 12-volt battery is discharged 584
Preparing and checking before winter....388
Warning light 543
Battery (traction battery)....89
Blind Spot Monitor (BSM) 315
Bluetooth®
Audio system....415

Hands-free system (for cellular phone) 430
Bottle holders 457
Brake
Brake hold 246
Emergency brake signal 382
Fluid 605
Parking brake 243
Regenerative braking 87
Warning light 542
Brake assist 381
Break-in tips 217
Brightness control
Instrument panel light control ... 114, 120
BSM (Blind Spot Monitor) 315

C

Care
Aluminum wheels 478
Exterior 478
Interior 481
Seat belts 481
Cargo hooks 459
CD player 399
Chains 389
Child restraint system
Points to remember 49
Riding with children 47
Child safety
12-volt battery precautions 496, 499, 589
Airbag precautions 41
Child restraint system 48
Heated steering wheel and seat heater precautions 451
How your child should wear the seat belt 34
Installing child restraints 48
Panoramic moon roof precautions 213
Power window lock switch 210
Power window precautions 209
Rear door child-protectors 148
Removed electronic key battery precautions 523
Seat belt precautions 48
Child-protectors 148
Cleaning
Aluminum wheels 478
Exterior 478
Interior 481
Radar sensor 268
Seat belts 481
Clock 113, 115, 117, 121
Coat hooks 474
Condenser 495
Console box 458
Cooling system 493
Engine overheating 590
Hybrid system overheating 592
Cruise control
Dynamic radar cruise control with full-speed range 295
Warning message 308
Cup holders 457
Current fuel consumption 125
Curtain shield airbags 37
Customizable features 610

D

Daytime running light system 249
Daytime running lights
Replacing light bulbs 528
Deck board 460
Defogger
Outside rear view mirrors 446
Rear window 446
Windshield 446
Dimensions 598
Display
Cruise control 306
Dynamic radar cruise control with full-speed range 295
Energy monitor 135
Head-up display 131
LTA (Lane-Tracing Assist) 291
Multi-information display 123

RCTA....331
Speed limitter....308
Toyota parking assist-sensor....324
Warning message....551
Display change button....114, 120
Do-it-yourself maintenance....484
Door
Double locking system....101
Door lock
Back door....149
Side doors....145
Smart entry & start system....160
Wireless remote control....143
Doors
Back door....149
Door glasses....208
Door lock....145, 149
Open door warning buzzer....146, 148
Outside rear view mirrors....205
Rear door child-protectors....148
Side doors....145
Double locking system....101
Drive distance....128
Drive information....128
Drive-start control....217
Driving
Break-in tips....217
Correct driving posture....31
Driving mode select switch....378
Hybrid vehicle driving tips....386
Procedures....216
Winter drive tips....388
Driving information display....124
Driving range....125
Driving support system information display....128
Dynamic radar cruise control with full-speed range....295
Warning message....304

E

eCall....69
"SOS" button....69
ECB (Electronically Controlled Brake System)....381
ECO Accelerator Guidance....126
Eco score....126
Elapsed time....128
Electric motor (traction motor)....86
Electric Power Steering (EPS)....381
Warning light....545
Electronic key....142
Battery-saving function....163
If the electronic key does not operate properly....582
Replacing the battery....522
Electronic roof sunshade
Jam protection function....211
Operation....210
Electronically Controlled Brake System (ECB)....381
Emergency brake signal....382
Emergency flashers....534
Emergency tire puncture....554
Emergency, in case of
If a warning buzzer sounds....542
If a warning light turns on....542
If a warning message is displayed....551
If the 12-volt battery is discharged....584
If the electronic key does not operate properly....582
If the hybrid system will not start....580
If the vehicle is trapped in rising water....535
If you have a flat tire....554, 566
If you lose your keys....582
If you think something is wrong....540
If your vehicle becomes stuck....594
If your vehicle has to be stopped in an emergency....534
If your vehicle needs to be towed....537
If your vehicle overheats....590
Energy monitor....135
Engine
ACCESSORY mode....232

Compartment 490
Engine switch 230
Hood 488
How to start the hybrid system ... 230
Identification number 600
If the hybrid system will not start 580
If your vehicle has to be stopped in an emergency 534
Ignition switch (power switch) 230
Overheating 590
Power switch 230
Tachometer 113, 117

Engine coolant
Capacity 604
Checking 493
Preparing and checking before winter 388

Engine coolant temperature gauge 113, 117

Engine oil
Capacity 602
Checking 491
Preparing and checking before winter 388
Warning light 543

Engine switch (power switch) 230
If your vehicle has to be stopped in an emergency 534

EPS (Electric Power Steering) 381
Warning light 545

EV drive mode 234

EV indicator 87

F

Flat tire
Tire pressure warning system 502
Vehicles with a spare tire 566
Vehicles without a spare tire 554

Floor mats 30

Fluid
Brake 605
Hybrid transmission 605
Washer 497

Fog lights
Replacing light bulbs 528
Switch 258

Follow me home system 250

Front fog lights
Replacing light bulbs 528
Switch 258

Front position lights
Replacing light bulbs 528

Front seats
Adjustment 198
Cleaning 481
Correct driving posture 31
Head restraints 201
Seat heaters 451

Front turn signal lights
Replacing light bulbs 528
Turn signal lever 243

Fuel
Capacity 601
Fuel gauge 113, 117
Information 609
Refueling 265
Type 601
Warning light 545

Fuel consumption
Average fuel economy 125
Current fuel consumption 125

Fuel economy 125

Fuel filler door
Refueling 265

Fuel gauge 113, 117

Fuses 524

G

Gauges 113, 117

Glove box 457

Glove box light 457

Grocery bag hooks 459

H

Hands-free system (for cellular phone) 430

Head restraints 201
Headlights
Adaptive High-beam System 255
Automatic High Beam system 252
Follow me home system 250
Light switch 249
Replacing light bulbs 528
Head-up display 131
Driving information display area. 131
Driving support system display area 133
Hybrid System Indicator 134
Navigation system-linked display 131
Navigation system-linked display area 133
Pop-up display 133
Settings 132
Heated steering wheel 451
Heaters
Automatic air conditioning system 444
Heated steering wheel 451
Outside rear view mirrors 446
Seat heaters 451
High mounted stoplight
Replacing light bulbs 528
High-voltage components 89
Hill-start assist control 381
Hood
Open 488
Hooks
Cargo hooks 459
Coat hooks 474
Grocery bag hooks 459
Retaining hooks (floor mat) 30
Horn 203
Hybrid battery (traction battery)
Location 89
Specification 601
Warning message 93
Hybrid battery (traction battery) air intake vent 519
Hybrid battery (traction battery) air vents 92
Hybrid system 86
Emergency shut off system 92
Energy monitor/consumption screen 135
EV drive mode 234
High voltage components 89
Hybrid system precautions 89
If the hybrid system will not start 580
Overheating 592
Power (ignition) switch 230
Regenerative braking 87
Starting the hybrid system 230
Hybrid System Indicator 126, 134
Hybrid transmission 236, 239
Paddle shift switches 241
Hybrid vehicle driving tips 386

I

Identification
Engine 600
Vehicle 599
Ignition switch (power switch) 230
Auto power off function 233
Changing the power switch modes 232
If your vehicle has to be stopped in an emergency 534
Illuminated entry system 454
Immobilizer system 94
Indicators 110
Initialization
Items to initialize 620
Power windows 208
Tire pressure warning system 511
Inside rear view mirror 204
Interior lights 453
Front interior light 453
Rear interior light 453
Wattage 608
Intrusion sensor 104

J

Jack
Positioning a floor jack 489
Vehicle-equipped jack 567
Jack handle 567
Jam protection function
Electronic roof sunshade 211
Panoramic moon roof..... 211
Power back door 156
Power windows 208

K

Keyless entry
Smart entry & start system..... 160
Wireless remote control 143
Keys
Battery-saving function 163
Electronic key..... 142
If the electronic key does not operate properly..... 582
If you lose your keys 582
Key number plate..... 142
Keyless entry 145, 150, 160
Mechanical key 142
Power switch..... 230
Replacing the battery 522
Warning buzzer..... 163
Wireless remote control 143
Knee airbags 37

L

Lane Tracing Assist (LTA)
Operation 286
Warning messages 295
Language (multi-information display) 129
Lever
Auxiliary catch lever 488
Hood lock release lever 488
Shift lever 236, 239
Turn signal lever 243
Wiper lever..... 260
License plate lights
Light switch 249
Replacing light bulbs 529
Wattage 608
Light bulbs
Replacing 528
Lights
Adaptive High-beam System..... 255
Automatic High Beam system 252
Fog light switch 258
Follow me home system 250
Front interior lights 453
Front personal lights..... 454
Headlight switch 249
Interior lights..... 453
Interior lights list 453
Luggage compartment light 152, 154
Rear interior lights 453
Rear personal lights 454
Replacing light bulbs 528
Turn signal lever..... 243
Vanity lights 473
Wattage 608
Lock steering column..... 231
LTA (Lane Tracing Assist)
Operation 286
Warning messages..... 295
Luggage compartment features .. 459
Luggage compartment light
Wattage 608
Luggage cover 463, 464

M

Maintenance
Do-it-yourself maintenance 486
Maintenance data..... 598
Maintenance requirements..... 484
Malfunction indicator lamp 543
Manual headlight leveling dial..... 251
Menu icons 123
Meter
Clock 113, 117
Indicators..... 110

Instrument panel light control... 114, 120
Meter control switches 124
Meters 113, 117
Multi-information display 123
Settings 129
Warning lights 542
Warning message 551
Mirrors
Inside rear view mirror 204
Outside rear view mirror defoggers 446
Outside rear view mirrors 205
Vanity mirrors 473
MP3 disc 399
Multi-information display
Audio system-linked display 128
Clock 115, 121
Cruise control 306, 308
Driving information display 124
Driving support system information display 128
Dynamic radar cruise control with full-speed range 295
ECO Accelerator Guidance 126
Eco score 126
Energy monitor 135
Fuel economy 125
Hybrid System Indicator 126
LTA (Lane-Tracing Assist) 291
Menu icons 123
Meter control switches 124
Navigation system-linked display 128
Settings 129
Tire pressure 502
Vehicle information display 128
Warning message 551

N

Navigation system-linked display 128, 131

O

Odometer 114, 120
Odometer and trip meter display
Display change button 114, 120
Display items 114, 120
Oil
Engine oil 602
Open tray 458
Opener
Back door 151, 152
Fuel filler door 265
Hood 488
Outside rear view mirrors
Adjustment 205
BSM (Blind Sport Monitor) 315
Folding 206
Outside rear view mirror defoggers 446
RCTA function 331
Outside temperature 113, 117
Overheating 590

P

Paddle shift switches 241
Panoramic moon roof
Door lock linked panoramic moon roof operation 212
Jam protection function 211
Operation 210
Parking assist sensors (Toyota parking assist-sensor) 323
Parking brake
Operation 243
Parking brake engaged warning buzzer 245
Warning light 548
Warning message 245
Parking Support Brake function (for rear-crossing vehicles) 348
Function 348
Parking Support Brake function (rear-crossing vehicles) 336

Parking Support Brake function (static objects)..... 336, 342
Function 342
Partition net 465
PCS (Pre-Collision System)
Function 278
Warning light 548
Personal lights..... 453
Wattage..... 608
PKSB (Parking Support Brake) ... 336
Warning message 341
Power control unit..... 89
Power control unit coolant
Capacity 604
Checking 493
Preparing and checking before winter 388
Power outlet..... 468
Power steering (Electric power steering system)..... 381
Warning light 545
Power switch 230
Auto power off function 233
Changing the power switch modes 232
Power switch (engine switch)
If your vehicle has to be stopped in an emergency..... 534
Power windows
Door lock linked window operation 209
Jam protection function..... 208
Operation 208
Window lock switch..... 210
Pre-Collision System (PCS)
Function 278
Warning light 548

R

Radar cruise control (dynamic radar cruise control with full-speed range) 295
Radiator..... 495
Radio 397
RCTA
Function 331
Warning message 332
RCTA function..... 333
Rear Crossing Traffic Alert (RCTA) 331
Rear fog lights
Replacing light bulbs..... 528
Switch..... 258
Rear seats..... 199
Head restraints..... 201
Seat heaters..... 451
Rear turn signal lights
Replacing light bulbs..... 528
Turn signal lever..... 243
Rear view mirror
Inside rear view mirror..... 204
Outside rear view mirrors 205
Rear window defogger 446
Rear window wiper 263
Refueling
Capacity 601
Fuel types..... 601
Opening the fuel tank cap 265
Regenerative braking 87
Replacing
Electronic key battery..... 522
Fuses 524
Light bulbs..... 528
Tires 566
Road accident cautions 90
Road Sign Assist 311
RSA (Road Sign Assist) 311

S

Seat belt reminder light..... 545
Seat belts..... 33
Adjusting the seat belt..... 35
Child restraint system installation. 48
Cleaning and maintaining the seat belt 481
Emergency Locking Retractor..... 35
How to wear your seat belt..... 34

How your child should wear the seat belt....34
Pregnant women, proper seat belt use....33
Reminder light and buzzer....545
Seat belt pretensioners....35
SRS warning light....544
Seat heaters....451
Seats
Adjustment....198
Adjustment precautions....198
Child seats/child restraint system installation....48
Cleaning....481
Head restraints....201
Properly sitting in the seat....31
Seat heaters....451
Secondary Collision Brake....382
Sensor
Automatic headlight system....249
Automatic High Beam system....252
BSM (Blind Sport Monitor)....315
Inside rear view mirror....205
Intrusion sensor....104
Kick sensor....154
LTA (Lane Tracing Assist)....286
Parking Support Brake function (rear-crossing vehicles)....348
Parking Support Brake function (static objects)....343
Radar sensor....267, 320
Rain-sensing windshield wipers....262
RCTA....332
Toyota parking assist-sensor....323
Service plug....89
Shift lever
Hybrid transmission....236, 239
If the shift lever cannot be shifted from P....237, 240
Shift lock system....237, 240
Side airbags....37
Side mirrors
Adjustment....205
BSM (Blind Sport Monitor)....315
Folding....206
RCTA function....331
Side turn signal lights
Turn signal lever....243
Side windows....208
S-IPA (Simple Intelligent Parking Assist System)
Function....352
Smart entry & start system
Antenna location....160, 161
Entry functions....145, 150
Starting the hybrid system....230
Snow tires....388
Spare tire....566
Inflation pressure....606
Storage location....567
Spark plug....604
Specifications....598
Speed limiter....308
Warning message....310
Speedometer....113, 117
Steering lock
Column lock release....231
Steering lock system warning message....231
Steering wheel
Adjustment....203
Heated steering wheel....451
Meter control switches....124
Stop lights
Emergency brake signal....382
Replacing light bulbs....528
Storage features....456
Stuck
If the vehicle becomes stuck....594
Sun visors....473
Sunshade
Panoramic moon roof....210
Switches
Activating the Adaptive High-beam System....255
Airbag manual on-off switch....46
Audio remote control switches....393
Automatic High Beam system....252
Brake Hold switch....246
Cruise control switch....306

Display change button 114, 120
Door lock switches 147
Driving mode select switch 378
Dynamic radar cruise control with full-speed range switch 296
Electronic roof sunshade switches 210
Emergency flashers switch 534
EV drive mode switch 234
Heated steering wheel switch 451
Ignition switch 230
Light switches 249
LTA (Lane-Tracing Assist) switch 291
Meter control switches 124
Outside rear view mirror switches 205
Paddle shift switches 241
Panoramic moon roof switches .. 210
Parking brake switch 243
PKSB (Parking Support Brake) switch 337
Power door lock switch 147
Power switch 230
Power window switches 208
RCTA switch 332
Rear window and outside rear view mirror defoggers switch 444
Seat heater switches 451
“SOS” button 69
Speed limitter switch 308
Talk switch 420
Telephone switch 420
Toyota parking assist-sensor switch 324
Vehicle-to-vehicle distance switch 296
VSC OFF switch 382
Window lock switch 210
Windshield wiper and washer switch 260

T

Tachometer 113, 117
Tail lights
Light switch 249
Replacing light bulbs 528
Talk switch 420
Telephone switch 420
Theft deterrent system
Alarm 102
Double locking system 101
Immobilizer system 94
Intrusion sensor 104
Tire inflation pressure 514
Maintenance data 606
Warning light 546
Tire pressure warning system
Function 502
Initializing 511
Installing tire pressure warning valves and transmitters 510
Registering ID codes 512
Warning light 546
Tires
Chains 389
Checking 500
Emergency tire puncture repair kit 554
If you have a flat tire 554, 566
Inflation pressure 514
Replacing 566
Rotating tires 501, 502
Size 606
Snow tires 388
Spare tire 566
Tire pressure warning system 502
Warning light 546
Tools 556, 567
Top tether anchorages 63
Towing
Emergency towing 537
Towing capacity 598
Towing eyelet 539
Trailer towing 223
Toyota parking assist-sensor
Function 323
Warning message 326

Toyota Safety Sense
Adaptive High-beam System 255
Automatic High Beam 252
Dynamic radar cruise control with full-speed range 295
LTA (Lane Tracing Assist) 286
PCS (Pre-Collision System) 278
RSA (Road Sign Assist) 311
Traction battery (hybrid battery)
Hybrid battery (traction battery) air vents 92
Location 89
Specification 601
Warning message 93
Traction Control (TRC) 381
Traction motor (electric motor) 86
Trailer towing 223
Transmission
Driving mode select switch 378
Hybrid transmission 236, 239
If the shift lever cannot be shifted from P 237, 240
Paddle shift switches 241
S mode 241
TRC (Traction Control) 381
Trip meters 114, 120
Turn signal lights
Replacing light bulbs 528
Turn signal lever 243

U

USB charging port 468
USB port 394

V

Vanity lights 473
Wattage 608
Vanity mirrors 473
Vehicle data recording 7
Vehicle identification number 599
Vehicle information display 128
Vehicle Stability Control (VSC) 381
Vehicle Stability Control+ (VSC+) 381
VSC (Vehicle Stability Control) 381
VSC+ (Vehicle Stability Control+) 381

W


Warning buzzers
ABS 544
Airbags 544
Approach warning 301
Brake hold 549
Brake Override System 544
Brake system 542
Charging system 543
Downshifting 242
Drive-Start Control 544
Electric power steering 545
Engine 543
High coolant temperature 542
Hybrid system 543
Hybrid system overheat 543
Low engine oil pressure 543
LTA (Lane Tracing Assist) ... 286, 546
Open door 146, 148
PKSB (Parking Support Brake) .. 547
RCTA (Rear Crossing Traffic Alert) 547
Seat belt 545
Toyota parking assist-sensor 330, 546
Warning label 89
Warning lights 542
ABS 544
Brake hold operated indicator 549
Brake Override System 544
Brake system 542
Charging system 543
Drive-Start Control 544
Electric power steering 545
High coolant temperature 542
Hybrid system overheat 543
Low engine oil pressure 543
Low fuel level 545
LTA indicator 546
Malfunction indicator lamp 543
Parking brake indicator 548

PKSB OFF indicator 547
Pre-collision system 548
RCTA OFF indicator 547
Seat belt reminder light 545
Slip indicator 548
SRS 544
Tire pressure 546
Toyota parking assist-sensor OFF indicator 546
Warning messages 551
Washer
Checking 497
Preparing and checking before winter 388
Switch 260
Washing and waxing 478
Weight 598
Wheels 515
Replacing 515
Size 606
Window lock switch 210
Windows
Power windows 208
Rear window defogger 446
Washer 260
Windshield wiper de-icer 449
Windshield wipers 260
Winter driving tips 388
Wireless charger 469
Wireless remote control
Battery-Saving Function 163
Locking/Unlocking 143
Replacing the battery 522
WMA disc 399

For vehicles with navigation/multimedia system, refer to "Navigation and multimedia system Owner's manual" for information regarding the equipment listed below.

- Navigation system
- Audio/visual system
- Rear view monitor system

GAS STATION INFORMATION

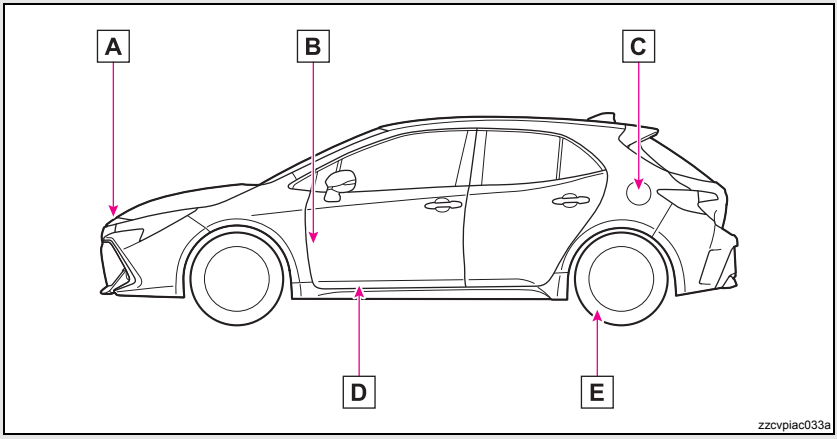

A Auxiliary catch lever (→P.488)

B Hood lock release lever (→P.488)

C Fuel filler door (→P.266)

D Fuel filler door opener (→P.266)

E Tire inflation pressure (→P.606)

Fuel tank capacity (Reference)	43.0 L (11.4 gal., 9.5 Imp. gal.)	
Fuel type		P.601 P.609
Cold tire inflation pressure		P.606
Engine oil capacity (Drain and refill — reference)		P.602
Engine oil type	“Toyota Genuine Motor Oil” or equivalent	P.602