	Pictorial index	Search by illustration
1	**For safety and security**	Make sure to read through them
2	**Instrument cluster**	How to read the gauges and meters, the variety of warning lights and indicators, etc.
3	**Operation of each component**	Opening and closing the doors and windows, adjustment before driving, etc.
4	**Driving**	Operations and advice which are necessary for driving
5	**Interior features**	Usage of the interior features, etc.
6	**Maintenance and care**	Caring for your vehicle and maintenance procedures
7	**When trouble arises**	What to do in case of malfunction or emergency
8	**Vehicle specifications**	Vehicle specifications, customizable features, etc.
	Index	Search by symptom
		Search alphabetically

For your information 6
Reading this manual.....10
How to search 11
Pictorial index.....12

1 For safety and security

1-1. For safe use
Before driving.....30
For safe driving 32
Seat belts.....34
SRS airbags.....41
Airbag manual on-off system 51
Safety information for children.....53
Child restraint systems 54
Installing child restraints 65
Exhaust gas precautions 75
1-2. Hybrid system
Hybrid system features 76
Hybrid system precautions 80
1-3. Theft deterrent system
Immobilizer system 85
Double locking system.....107
Alarm 108

2 Instrument cluster

2. Instrument cluster
Warning lights and indicators..... 116
Gauges and meters..... 120
Multi-information display..... 124
Energy monitor/ consumption screen..... 128

3 Operation of each component

3-1. Key information
Keys 134
3-2. Opening, closing and locking the doors
Side doors 186
Back door 191
Smart entry & start system..... 207
3-3. Adjusting the seats
Front seats 263
Rear seats..... 265
Driving position memory.... 268
Head restraints..... 270
3-4. Adjusting the steering wheel and mirrors
Steering wheel 273
Inside rear view mirror..... 275
Outside rear view mirrors..... 277
3-5. Opening, closing the windows and moon roof
Power windows 280
Moon roof..... 283

4 Driving

4-1. Before driving

Driving the vehicle 288
Cargo and luggage 297
Trailer towing 299

4-2. Driving procedures

Power (ignition) switch.....311
EV drive mode 317
Hybrid transmission 319
Turn signal lever 325
Parking brake.....326

4-3. Operating the lights and wipers

Headlight switch.....327
Automatic High Beam 332
Fog light switch 336
Windshield wipers and washer 338
Rear window wiper and washer 341

4-4. Refueling

Opening the fuel tank cap 343

4-5. Using the driving support systems

Toyota Safety Sense 346
PCS (Pre-Crash Safety system) 358
LDA (Lane Departure Alert with steering control) 374
RSA (Road Sign Assist) 383
Dynamic radar cruise control 388
Cruise control 400
Toyota parking assist-sensor 404
BSM (Blind Spot Monitor) 412
• The Blind Spot Monitor function 419
• The Rear Crossing Traffic Alert function 422
Driving assist systems..... 425

4-6. Driving tips

Hybrid vehicle driving tips 432
Winter driving tips..... 435
Utility vehicle precautions 439

5 Interior features

5-1. Using the air conditioning system and defogger
Automatic air conditioning system 444
Heated steering wheel/ seat heaters.....452
5-2. Using the interior lights
Interior lights list.....455
• Interior lights.....456
• Personal lights.....456
5-3. Using the storage features
List of storage features 458
• Glove box 459
• Console box 459
• Cup holders 460
• Bottle holders 461
• Auxiliary box 462
Luggage compartment features.....463
5-4. Using the other interior features
Other interior features.....475
• Sun visors.....475
• Vanity mirrors 475
• Portable ashtray 476
• Power outlets.....477
• Armrest.....478
• Coat hooks 478
• Assist grips 479
ERA-GLONASS/EVAK 480

6 Maintenance and care

6-1. Maintenance and care
Cleaning and protecting the vehicle exterior..... 486
Cleaning and protecting the vehicle interior..... 490
6-2. Maintenance
Maintenance requirements 493
6-3. Do-it-yourself maintenance
Do-it-yourself service precautions 496
Hood..... 498
Positioning a floor jack 500
Engine compartment 501
12-volt battery 509
Tires 514
Tire inflation pressure..... 536
Wheels 538
Air conditioning filter..... 541
Electronic key battery..... 543
Checking and replacing fuses 546
Light bulbs..... 550

7 When trouble arises

7-1. Essential information

Emergency flashers 562

If your vehicle has to be stopped in an emergency 563

7-2. Steps to take in an emergency

If your vehicle needs to be towed 564

If you think something is wrong 570

If a warning light turns on or a warning buzzer sounds 571

If a warning message is displayed 578

If you have a flat tire (vehicles with spare tire) 599

If you have a flat tire (vehicles without spare tire) 611

If the hybrid system will not start 625

If the electronic key does not operate properly 627

If the 12-volt battery is discharged 630

If your vehicle overheats 635

If the vehicle becomes stuck 640

8 Vehicle specifications

8-1. Specifications

Maintenance data (fuel, oil level, etc.) 644

Fuel information 655

8-2. Customization

Customizable features 657

8-3. Initialization

Items to initialize 666

Index

What to do if... (Troubleshooting) 668

Alphabetical index 672

For vehicles with navigation system or multimedia system, refer to the “Navigation and multimedia system Owner’s manual” for information regarding the equipment listed below.

- Navigation system
- Audio system
- Toyota parking assist monitor
- Panoramic view monitor

Toyota Motor Europe NV/SA, Avenue du Bourget 60 - 1140 Brussels, Belgium www.toyota-europe.com

For your information

Main Owner's Manual

Please note that this manual applies to all models and all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Toyota policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of equipment.

Accessories, spare parts and modification of your Toyota

Both genuine Toyota and a wide variety of other spare parts and accessories for Toyota vehicles are currently available on the market. Should it be determined that any of the genuine Toyota parts or accessories supplied with the vehicle need to be replaced, Toyota recommends that genuine Toyota parts or accessories, be used to replace them. Other parts or accessories of matching quality can also be used. Toyota cannot accept any liability or guarantee spare parts and accessories which are not genuine Toyota products, nor for replacement or installation involving such parts. In addition, damage or performance problems resulting from the use of nongenuine Toyota spare parts or accessories may not be covered under warranty.

Installation of an RF-transmitter system

The installation of an RF-transmitter system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Toyota Safety Sense
- Cruise control system
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for precautionary measures or special instructions regarding installation of an RF-transmitter system.

Further information regarding frequency bands, power levels, antenna positions and installation provisions for the installation of RF-transmitters, is available on request at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

High voltage parts and cables on the hybrid vehicles emit approximately the same amount of electromagnetic waves as the conventional gasoline powered vehicles or home electronic appliances despite of their electromagnetic shielding.

Unwanted noise may occur in the reception of the radio frequency transmitter (RF-transmitter).

Scrapping of your Toyota

The SRS airbag and seat belt pretensioner devices in your Toyota contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, before you scrap your vehicle.

⚠ WARNING

■ General precautions while driving

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

■ General precaution regarding children's safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Reading this manual


WARNING:
Explains something that, if not obeyed, could cause death or serious injury to people.

NOTICE:
Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.

1 2 3 ··· Indicates operating or working procedures. Follow the steps in numerical order.


Indicates the action (pushing, turning, etc.) used to operate switches and other devices.

Indicates the outcome of an operation (e.g. a lid opens).

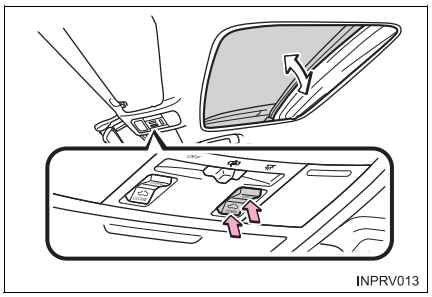
INPRV013

Indicates the component or position being explained.


Means “Do not”, “Do not do this”, or “Do not let this happen”.

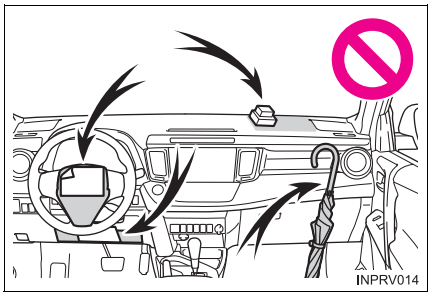
INPRV014

How to search


■ **Searching by name**

• Alphabetical index ..... P. 672

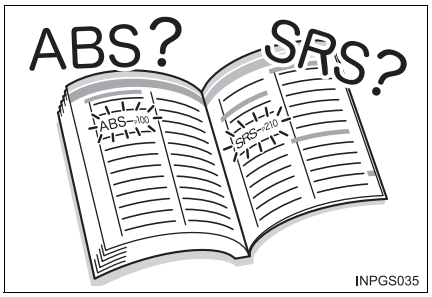

■ **Searching by installation position**

• Pictorial index ..... P. 12

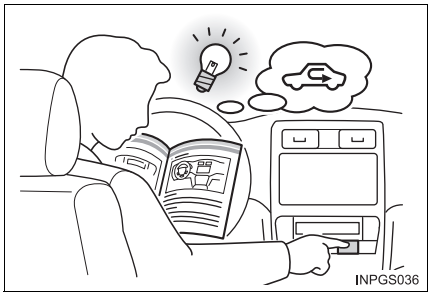


■ **Searching by symptom or sound**

• What to do if... (Troubleshooting) ..... P. 668




■ **Searching by title**

• Table of contents ..... P. 2

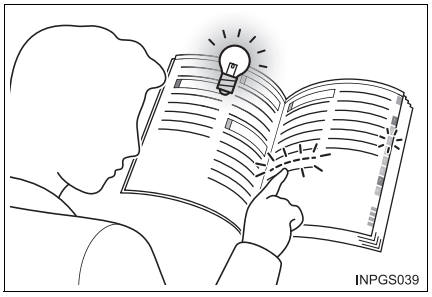

Pictorial index

Exterior

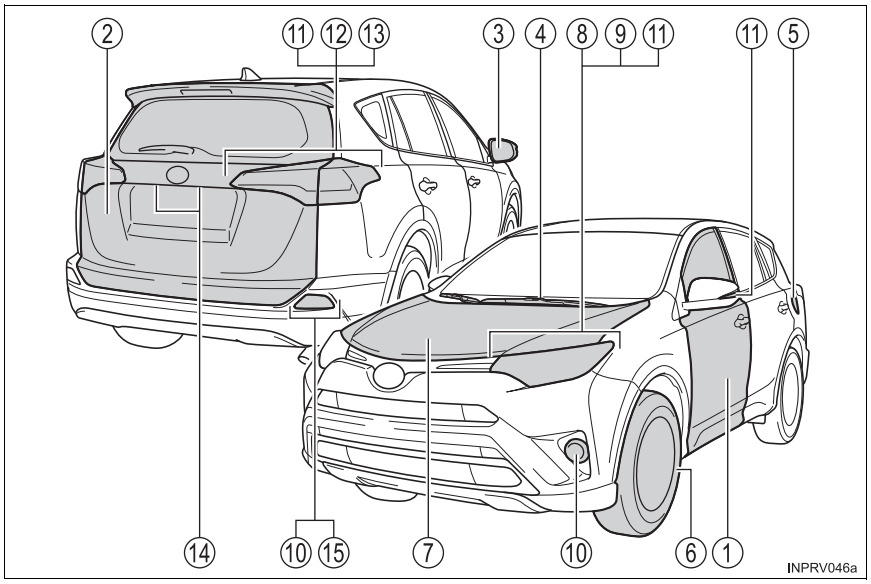

① **Side doors . . . . . P. 186**
Locking/unlocking . . . . . P. 186
Opening/closing the door glasses . . . . . P. 280
Locking/unlocking by using the mechanical key . . . . . P. 627
Warning messages . . . . . P. 580

② **Back door . . . . . P. 191**
Opening from inside the cabin . . . . . P. 191
Opening from outside . . . . . P. 192
Warning messages . . . . . P. 580

③ **Outside rear view mirrors . . . . . P. 277**
Adjusting the mirror angle . . . . . P. 277
Folding the mirrors . . . . . P. 278
Defogging the mirrors . . . . . P. 446

④ **Windshield wipers . . . . . P. 338**
Precautions against winter season . . . . . P. 435
To prevent freezing (windshield wiper de-icer/Heated Windshield Defroster)* . . . . . P. 446
Precautions against car wash . . . . . P. 488

⑤ **Fuel filler door . . . . . P. 343**
Refueling method . . . . . P. 343
Fuel type/fuel tank capacity . . . . . P. 646

⑥ **Tires . . . . . P. 514**
Tire size/inflation pressure . . . . . P. 653
Winter tires/tire chain . . . . . P. 435
Checking/rotation/tire pressure warning system* . . . . . P. 514
Coping with flat tires . . . . . P. 599

⑦ **Hood . . . . . P. 498**
Opening . . . . . P. 498
Engine oil . . . . . P. 648
Coping with overheat . . . . . P. 635

Light bulbs of the exterior lights for driving
(Replacing method: P. 550, Watts: P. 654)

⑧ **Headlights . . . . . P. 327**

⑨ **Front position lights/daytime running lights . . . . . P. 327**

⑩ **Front fog lights*/rear fog lights . . . . . P. 336**

⑪ **Turn signal lights . . . . . P. 325**

⑫ **Tail lights . . . . . P. 327**


⑬ **Stop/tail lights . . . . . P. 327**
Hill-start assist control . . . . . P. 425

⑭ **License plate lights . . . . . P. 327**

⑮ **Back-up lights**
Shifting the shift lever to R . . . . . P. 319

*: If equipped

Instrument panel (Left-hand drive vehicles)

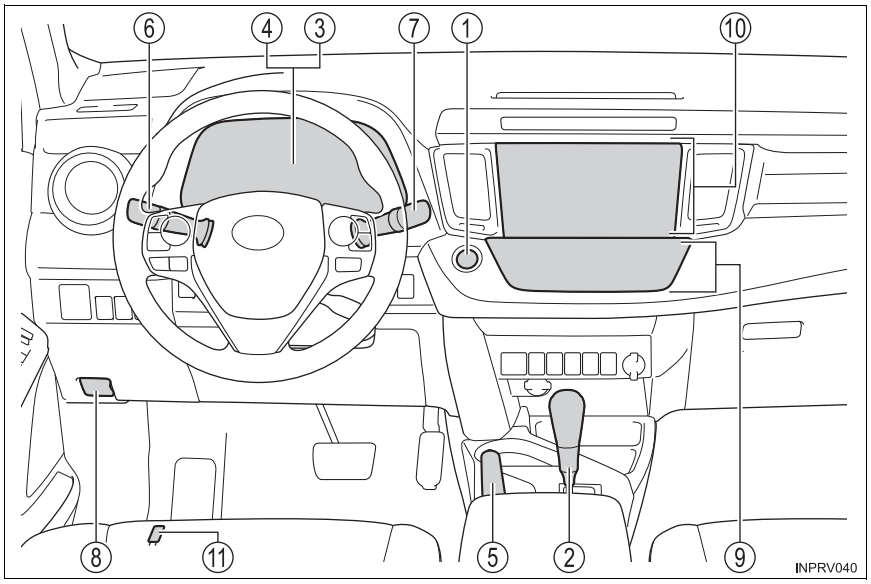

① **Power switch . . . . . P. 311**
Starting the hybrid system/changing the modes . . . . . P. 311, 312
Emergency stop of the hybrid system . . . . . P. 563
When the hybrid system will not start . . . . . P. 625
Warning messages . . . . . P. 594

② **Shift lever . . . . . P. 319**
Changing the shift position . . . . . P. 319
Precautions against towing . . . . . P. 564
When the shift lever does not move . . . . . P. 323

③ **Meters . . . . . P. 120**
Reading the meters/adjusting the instrument cluster light . . . . P. 120
Warning lights/indicator lights . . . . . P. 116
When the warning lights come on . . . . . P. 571

④ **Multi-information display . . . . . P. 124**
Energy monitor . . . . . P. 128
When the warning messages are displayed . . . . . P. 578

⑤ **Parking brake lever . . . . . P. 326**
Applying/releasing . . . . . P. 326
Precautions against winter season . . . . . P. 436
Warning buzzer/message . . . . . P. 583

⑥ **Turn signal lever . . . . . P. 325**
Headlight switch . . . . . P. 327
Headlights/front position lights/tail lights/daytime running lights . . . . . P. 327
Front fog lights*1/rear fog lights . . . . . P. 336

⑦ **Windshield wiper and washer switch . . . . . P. 338**
Rear window wiper and washer switch . . . . . P. 341
Usage . . . . . P. 338, 341
Adding washer fluid . . . . . P. 507
Warning message . . . . . P. 590

⑧ **Hood lock release lever . . . . . P. 498**


⑨ **Automatic air conditioning system . . . . . P. 444**
Usage . . . . . P. 444
Rear window defogger. . . . . P. 446

⑩ **Navigation system/Multimedia system*1, 2**


⑪ **Fuel filler door opener. . . . . P. 345**

*1: If equipped
*2: Refer to “Navigation and multimedia system Owner’s manual”.

Switches (Left-hand drive vehicles)

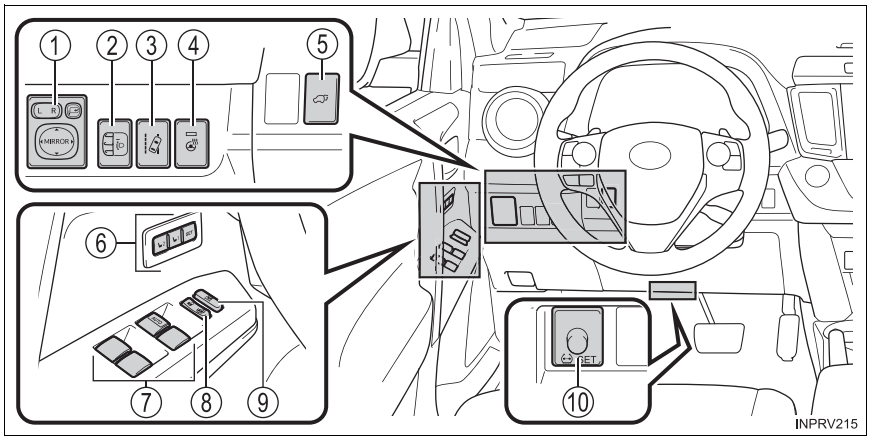

① **Outside rear view mirror switches . . . . . P. 277**
② **Manual headlight leveling dial*1 . . . . . P. 329**
③ **LDA (Lane Departure Alert with steering control) switch*1 . . . . . P. 374**
④ **Heated steering wheel switch*1 . . . . . P. 453**
⑤ **Power back door switch*1 . . . . . P. 191**
⑥ **Driving position memory switches*1 . . . . . P. 268**
⑦ **Power window switches . . . . . P. 280**
⑧ **Door lock switch . . . . . P. 188**
⑨ **Window lock switch . . . . . P. 280**
⑩ **Tire pressure warning reset switch*1 . . . . . P. 516**

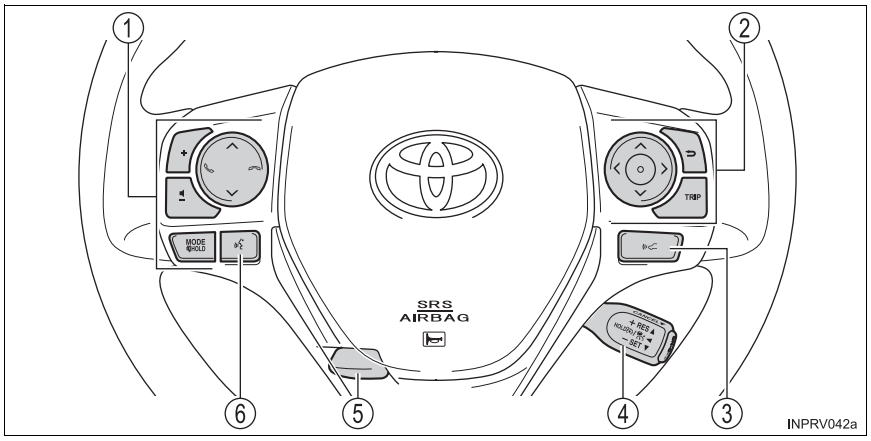

① **Audio remote control switches*2**
Telephone switches*2

② **Meter control switches . . . . . P. 125**


③ **Vehicle-to-vehicle distance switch*1 . . . . . P. 388**

④ **Cruise control switch**
Cruise control*1 . . . . . P. 400
Dynamic radar cruise control*1 . . . . . P. 388

⑤ **Tilt and telescopic steering lock release lever . . . . . P. 273**

⑥ **Talk switch*1, 2**

*1: If equipped
*2: Refer to “Navigation and multimedia system Owner’s manual”.

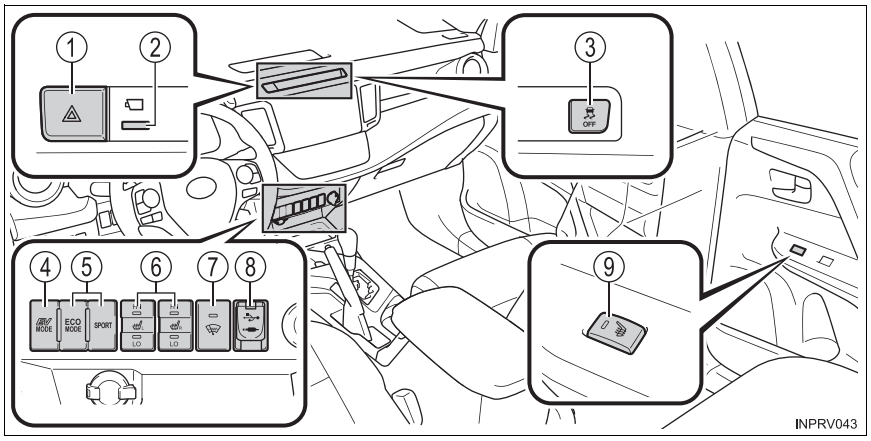

① **Emergency flasher switch . . . . . P. 562**

② **Panoramic view monitor switch*1, 2**

③ **VSC OFF switch. . . . . P. 427**

④ **EV drive mode switch . . . . . P. 317**

⑤ **Driving mode select switches . . . . . P. 320**


⑥ **Front seat heater switches*1 . . . . . P. 453**

⑦ **Windshield wiper de-icer switch*1. . . . . P. 447**
Heated Windshield Defroster switch*1 . . . . . P. 447

⑧ **AUX port/USB port*1, 2**

⑨ **Rear seat heater switches*1. . . . . P. 454**


Interior (Left-hand drive vehicles)

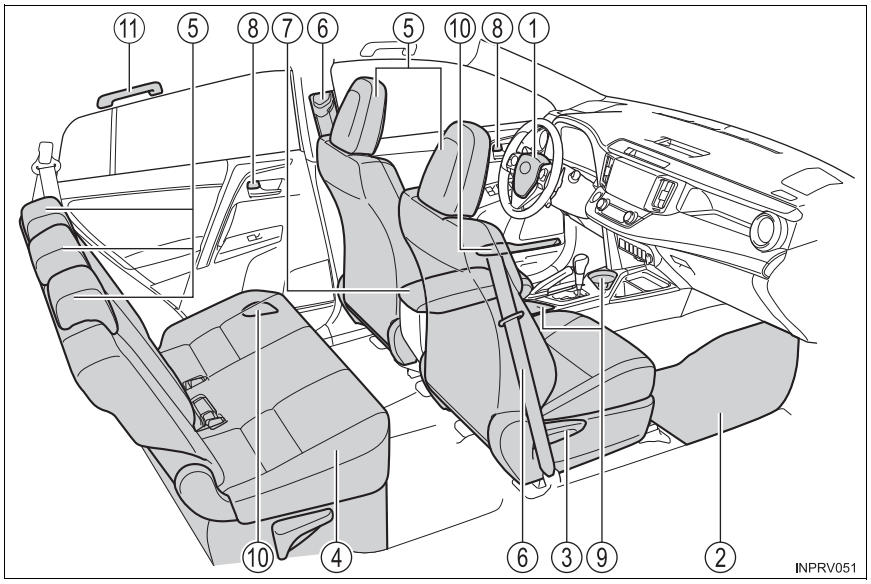

① **SRS airbags** . . . . . **P. 41**
② **Floor mats** . . . . . **P. 30**
③ **Front seats** . . . . . **P. 263**
④ **Rear seats** . . . . . **P. 265**
⑤ **Head restraints** . . . . . **P. 270**
⑥ **Seat belts** . . . . . **P. 34**
⑦ **Console box** . . . . . **P. 459**
⑧ **Inside lock buttons** . . . . . **P. 188**
⑨ **Cup holders** . . . . . **P. 460**
⑩ **Bottle holders** . . . . . **P. 461**
⑪ **Assist grips** . . . . . **P. 479**

*1: If equipped

*2: Refer to “Navigation and multimedia system Owner’s manual”.

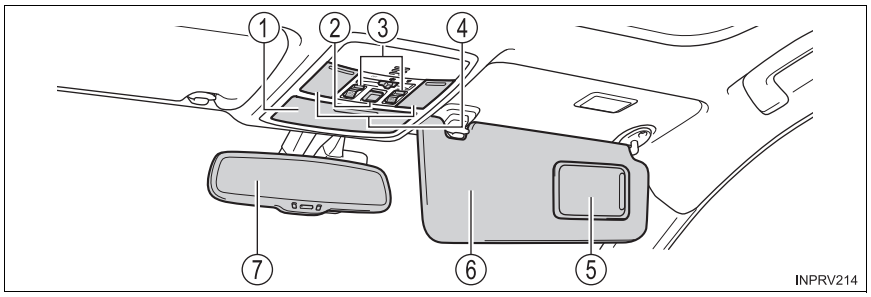

① **Auxiliary box** . . . . . **P. 462**
② **“SOS” button*1** . . . . . **P. 480**
③ **Moon roof switches*1** . . . . . **P. 283**
④ **Interior lights*2** . . . . . **P. 456**
Personal lights . . . . . **P. 456**
⑤ **Vanity mirrors** . . . . . **P. 475**
⑥ **Sun visors*3** . . . . . **P. 475**
⑦ **Inside rear view mirror** . . . . . **P. 275**


*1: If equipped

*2: The illustration shows the front, but they are also equipped in the rear.

*3: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P. 73)



Instrument panel (Right-hand drive vehicles)

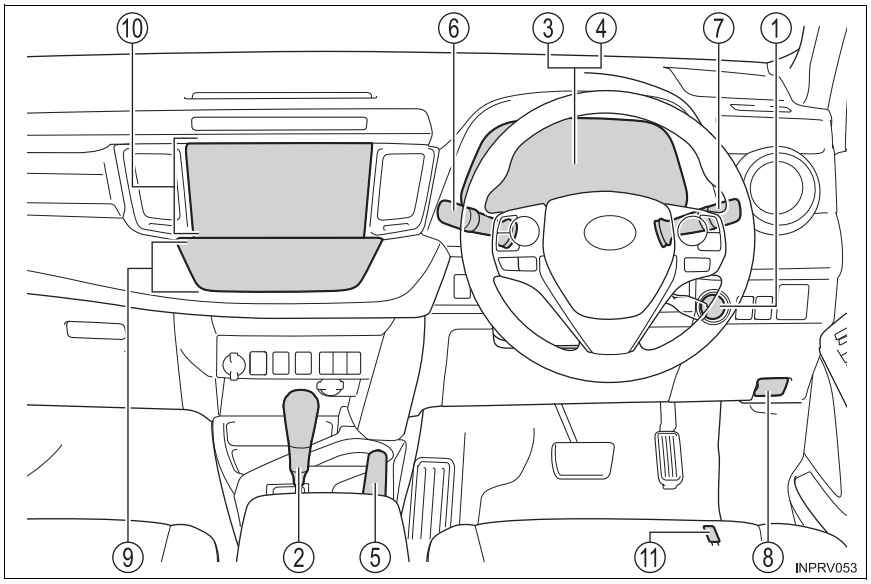

① **Power switch . . . . . P. 311**
Starting the hybrid system/changing the modes . . . . . P. 311, 312
Emergency stop of the hybrid system . . . . . P. 563
When the hybrid system will not start . . . . . P. 625
Warning messages . . . . . P. 594

② **Shift lever . . . . . P. 319**
Changing the shift position . . . . . P. 319
Precautions against towing . . . . . P. 564
When the shift lever does not move . . . . . P. 323

③ **Meters . . . . . P. 120**
Reading the meters/adjusting the instrument cluster light . . . . P. 120
Warning lights/indicator lights . . . . . P. 116
When the warning lights come on . . . . . P. 571

④ **Multi-information display . . . . . P. 124**
Energy monitor . . . . . P. 128
When the warning messages are displayed . . . . . P. 578

⑤ **Parking brake lever . . . . . P. 326**
Applying/releasing . . . . . P. 326
Precautions against winter season . . . . . P. 436
Warning buzzer/message . . . . . P. 578

⑥ **Turn signal lever . . . . . P. 325**
Headlight switch . . . . . P. 327
Headlights/front position lights/tail lights/daytime running lights . . . . . P. 327
Front fog lights*1/rear fog lights . . . . . P. 336

⑦ **Windshield wiper and washer switch . . . . . P. 338**
Rear window wiper and washer switch . . . . . P. 341
Usage . . . . . P. 338, 341
Adding washer fluid . . . . . P. 507
Warning message . . . . . P. 590


⑧ **Hood lock release lever . . . . . P. 498**

⑨ **Automatic air conditioning system . . . . . P. 444**
Usage . . . . . P. 444
Rear window defogger. . . . . P. 446

⑩ **Navigation system/Multimedia system*1, 2**

⑪ **Fuel filler door opener. . . . . P. 345**


Switches (Right-hand drive vehicles)

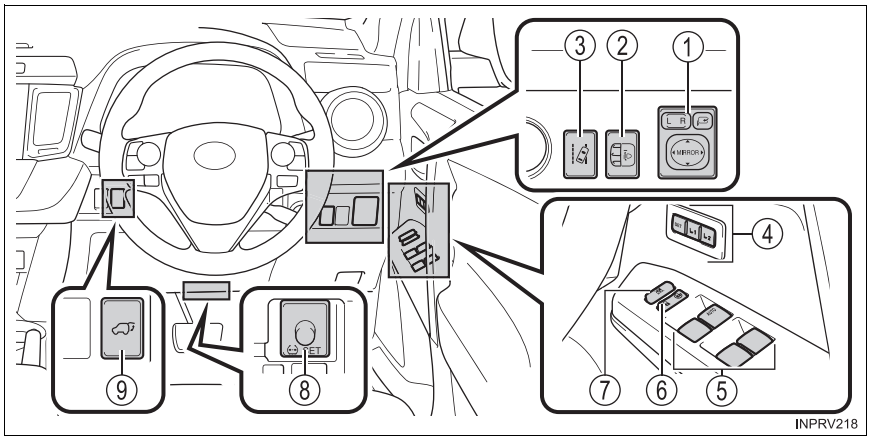

① **Outside rear view mirror switches . . . . . P. 277**
② **Manual headlight leveling dial*1 . . . . . P. 329**
③ **LDA (Lane Departure Alert with steering control) switch*1 . . . . . P. 374**
④ **Driving position memory switches*1 . . . . . P. 268**
⑤ **Power window switches . . . . . P. 280**
⑥ **Door lock switch . . . . . P. 188**
⑦ **Window lock switch . . . . . P. 280**
⑧ **Tire pressure warning reset switch*1 . . . . . P. 516**
⑨ **Power back door switch*1 . . . . . P. 191**

*1: If equipped

*2: Refer to “Navigation and multimedia system Owner’s manual”.

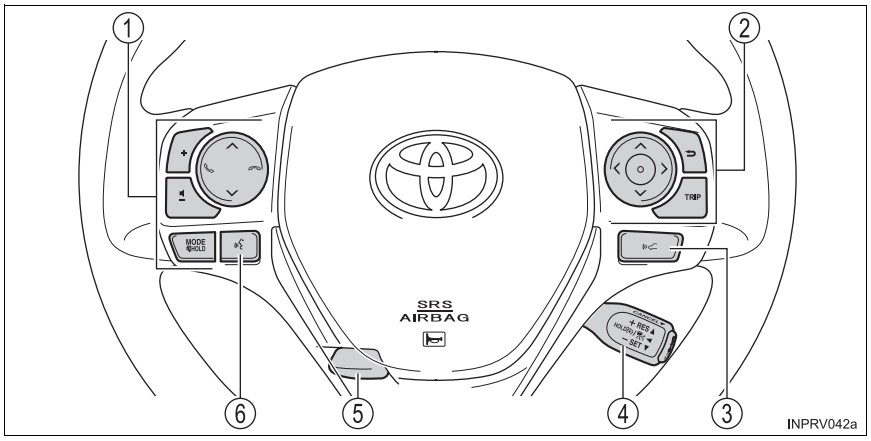

① **Audio remote control switches*1**
Telephone switches*1


② **Meter control switches . . . . . P. 125**

③ **Vehicle-to-vehicle distance switch*2 . . . . . P. 388**

④ **Cruise control switch**
Cruise control*2 . . . . . P. 400
Dynamic radar cruise control*2 . . . . . P. 388

⑤ **Tilt and telescopic steering lock release lever . . . . . P. 273**


⑥ **Talk switch*1, 2**

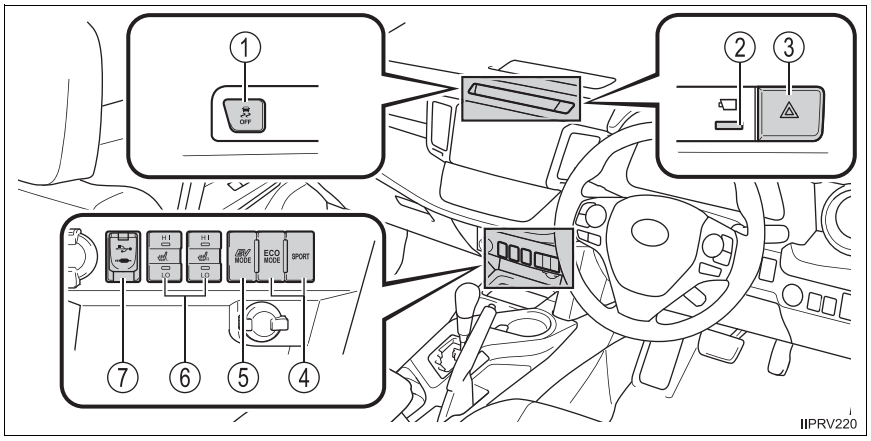


① **VSC OFF switch . . . . . P. 427**
② **Panoramic view monitor switch*1, 2**
③ **Emergency flasher switch . . . . . P. 562**
④ **Driving mode select switches . . . . . P. 320**
⑤ **EV drive mode switch . . . . . P. 317**
⑥ **Front seat heater switches*2 . . . . . P. 453**
⑦ **AUX port/USB port*1, 2**

*1: Refer to “Navigation and multimedia system Owner’s manual”.
*2: If equipped

Interior (Right-hand drive vehicles)

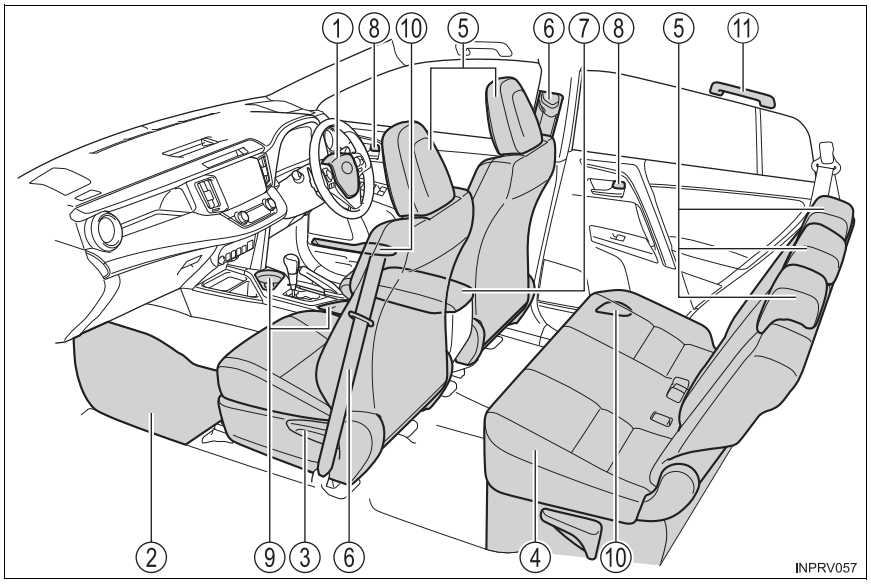

① **SRS airbags** . . . . . **P. 41**
② **Floor mats** . . . . . **P. 30**
③ **Front seats** . . . . . **P. 263**
④ **Rear seats** . . . . . **P. 265**
⑤ **Head restraints** . . . . . **P. 270**
⑥ **Seat belts** . . . . . **P. 34**
⑦ **Console box** . . . . . **P. 459**
⑧ **Inside lock buttons** . . . . . **P. 188**
⑨ **Cup holders** . . . . . **P. 460**
⑩ **Bottle holders** . . . . . **P. 461**
⑪ **Assist grips** . . . . . **P. 479**

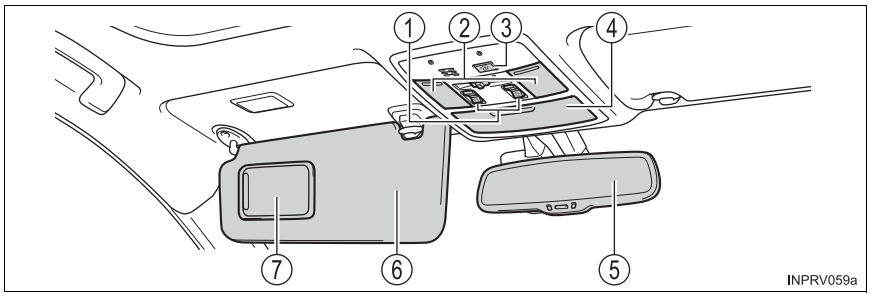

① **Moon roof switches*1** . . . . . **P. 283**

② **Interior lights*2** . . . . . **P. 456**
Personal lights . . . . . **P. 456**

③ **Intrusion sensor and tilt sensor cancel switch*1** . . . . . **P. 111**

④ **Auxiliary box** . . . . . **P. 462**

⑤ **Inside rear view mirror** . . . . . **P. 275**

⑥ **Sun visors*3** . . . . . **P. 475**

⑦ **Vanity mirrors** . . . . . **P. 475**

*1: If equipped

*2: The illustration shows the front, but they are also equipped in the rear.

*3: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P. 73)



For safety and security 1


1-1. For safe use
Before driving.....30
For safe driving.....32
Seat belts.....34
SRS airbags.....41
Airbag manual on-off system.....51
Safety information for children.....53
Child restraint systems.....54
Installing child restraints.....65
Exhaust gas precautions.....75
1-2. Hybrid system
Hybrid system features.....76
Hybrid system precautions.....80
1-3. Theft deterrent system
Immobilizer system.....85
Double locking system.....107
Alarm.....108

Before driving

Floor mat


Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

1 Insert the retaining hooks (clips) into the floor mat eyelets.

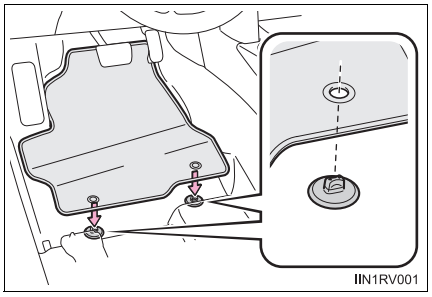

2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the △ marks.

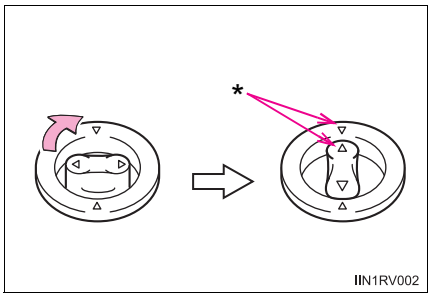

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

WARNING


Observe the following precautions.
Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle. This could lead to an accident, resulting in death or serious injury.

■ When installing the driver's floor mat

- Do not use floor mats designed for other models or different model year vehicles, even if they are Toyota Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

■ Before driving


- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.
- With the hybrid system stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

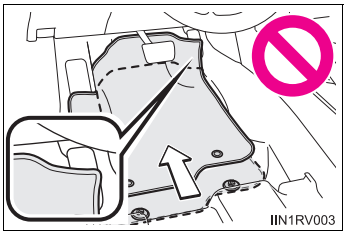

For safe driving

For safe driving, adjust the seat and mirror to an appropriate position before driving.

Correct driving posture

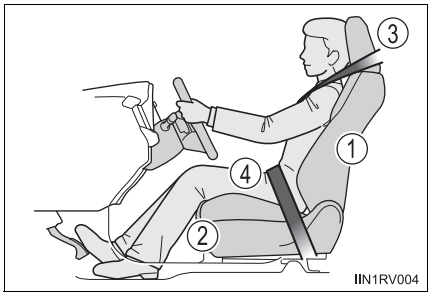

① Adjust the angle of the seatback so that you are sitting straight up and so that you do not have to lean forward to steer. (→P. 263)

② Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P. 263)

③ Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P. 270)

④ Wear the seat belt correctly. (→P. 34)

Correct use of the seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle. (→P. 34)

Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 54)

Adjusting the mirrors

Make sure that you can see backward clearly by adjusting the inside and outside rear view mirrors properly. (→P. 275, 277)

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.


- Do not adjust the position of the driver's seat while driving.
  Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback.
  A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.
- Do not place anything under the front seats.
  Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- Always observe the legal speed limit when driving on public roads.
- When driving over long distances, take regular breaks before you start to feel tired.
  Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

Seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle.

Correct use of the seat belts


- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seat-back. Sit up straight and well back in the seat.
- Do not twist the seat belt.

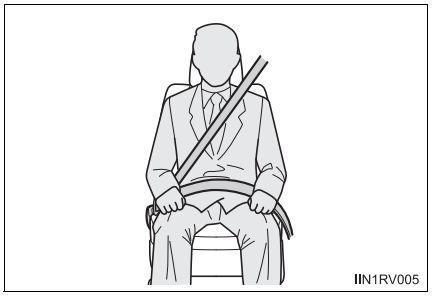

Fastening and releasing the seat belt (except for the rear center seat)


① To fasten the seat belt, push the plate into the buckle until a click sound is heard.

② To release the seat belt, press the release button.

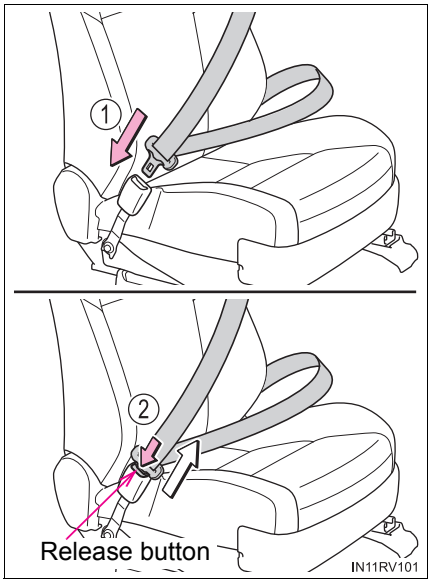


Fastening the seat belt (for the rear center seat)


1 Press plate “B” to release. Then pull the seat belt down toward the rear seat bottom cushion.

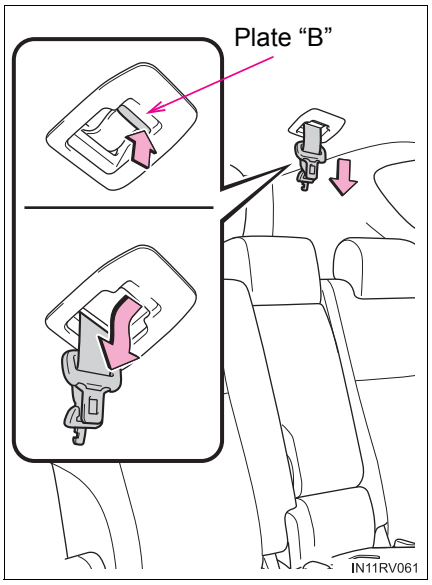

2 Push plate “A” into buckle “A” until a clicking sound is heard.

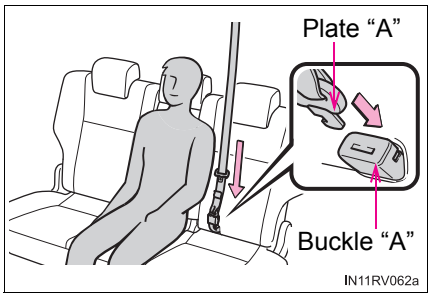


3 Push plate “B” into buckle “B” until a clicking sound is heard.

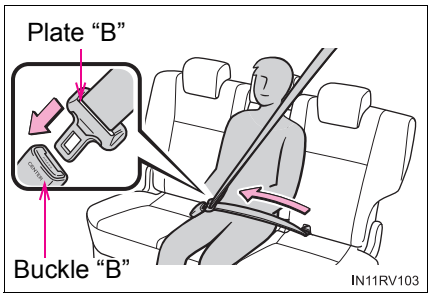


Releasing and stowing the seat belt (for the rear center seat)

1 To release the hooked buckle “B”, push the release button.

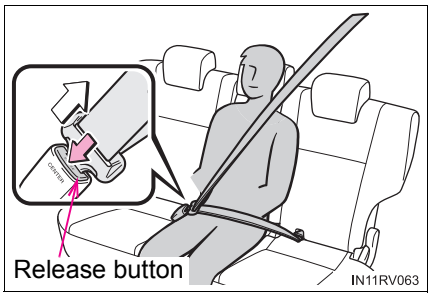

2 To release the hooked plate “A”, insert the plate “B” or mechanical key (→P. 134) into the hole on the buckle.

When releasing the seat belt, retract it slowly.

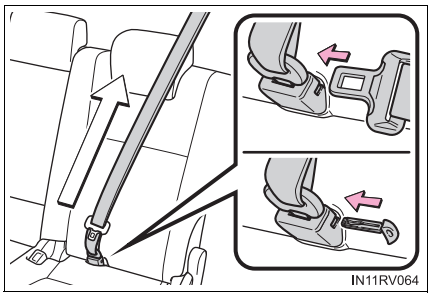


3 Stow the plates in the holder.

① Put plates “A” and “B” together, and then stow the plates in the holder.

② Fully insert the plates all the way.

③ Push down the plate until a click is heard to lock it.

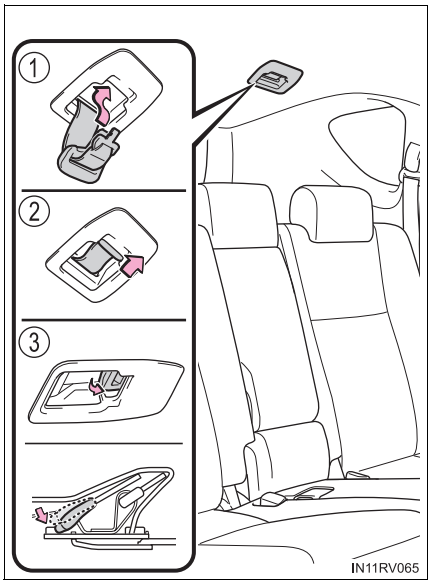


Adjusting the seat belt shoulder anchor height (front seats)

① Push the seat belt shoulder anchor down while pressing the release button.

② Push the seat belt shoulder anchor up.


Move the height adjuster up and down as needed until you hear a click.

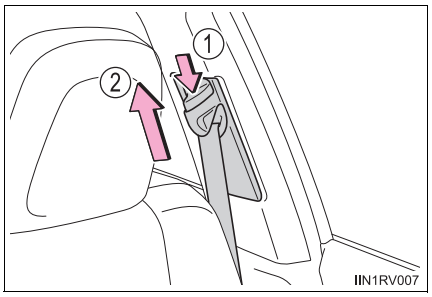

Seat belt pretensioners (front seats)

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal or side collision.

The pretensioners do not activate in the event of a minor frontal impact, a minor side impact, a rear impact or a vehicle rollover.

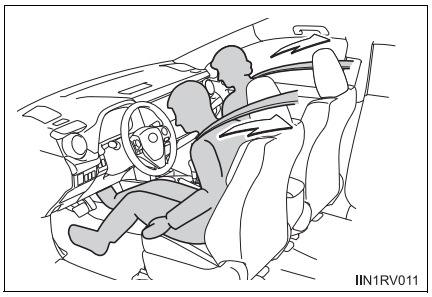

■ **Emergency locking retractor (ELR)**

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

■ **Child seat belt usage**

The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 54)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions regarding seat belt usage. (→P. 34)

■ **Replacing the belt after the pretensioner has been activated**

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

■ **Seat belt regulations**

If seat belt regulations exist in the country where you reside, please contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for seat belt replacement or installation.

⚠ WARNING

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.
Failure to do so may cause death or serious injury.

■ **Wearing a seat belt**

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at one time, including children.
- Toyota recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.


WARNING

■ **Pregnant women**

Obtain medical advice and wear the seat belt in the proper way. (→P. 34)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

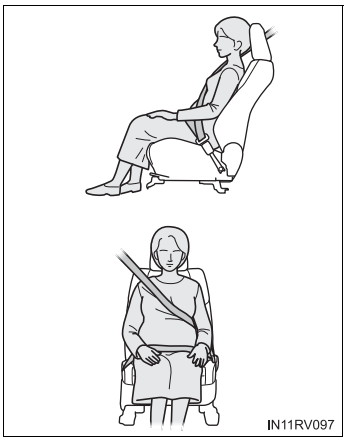

■ **People suffering illness**

Obtain medical advice and wear the seat belt in the proper way. (→P. 34)

■ **When children are in the vehicle**

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.
If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

■ **Seat belt pretensioners**

If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Adjustable shoulder anchor**

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident. (→P. 37)


WARNING

■ **Seat belt damage and wear**

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Inappropriate handling of the pretensioner may prevent it from operating properly, resulting in death or serious injury.


■ **When using the rear center seat belt**

Do not use the rear center seat belt with either buckle released. Fastening only one of the buckles may result in death or serious injury in case of sudden braking, sudden swerving or an accident.

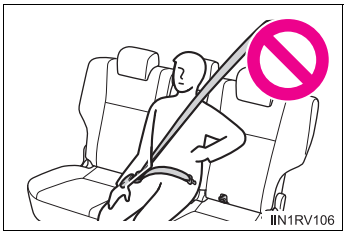

SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

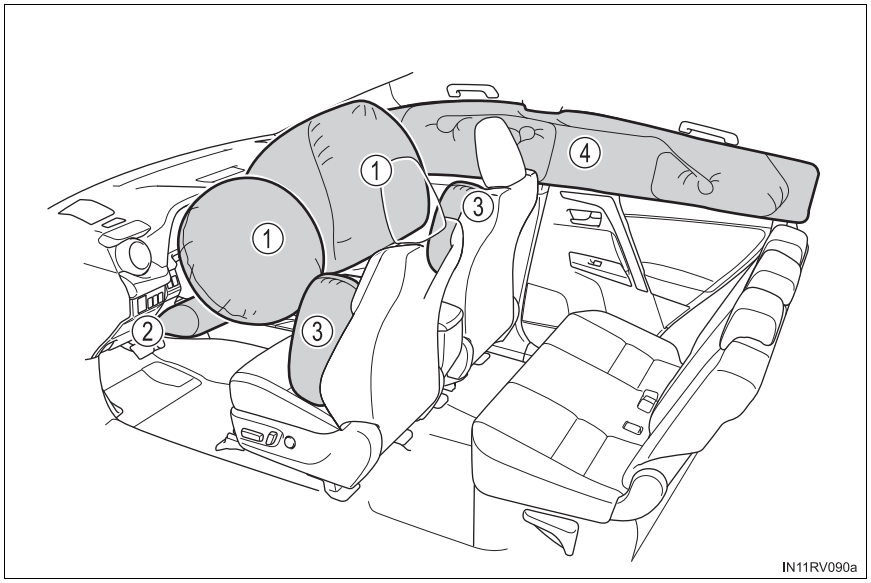

SRS front airbags

① SRS driver airbag/front passenger airbag
Can help protect the head and chest of the driver and front passenger from impact with interior components


② SRS driver knee airbag
Can help provide driver protection

SRS side and curtain shield airbags

③ SRS side airbags
Can help protect the torso of the front seat occupants

④ SRS curtain shield airbags
Can help protect primarily the head of occupants in the outer seats

SRS airbag system components

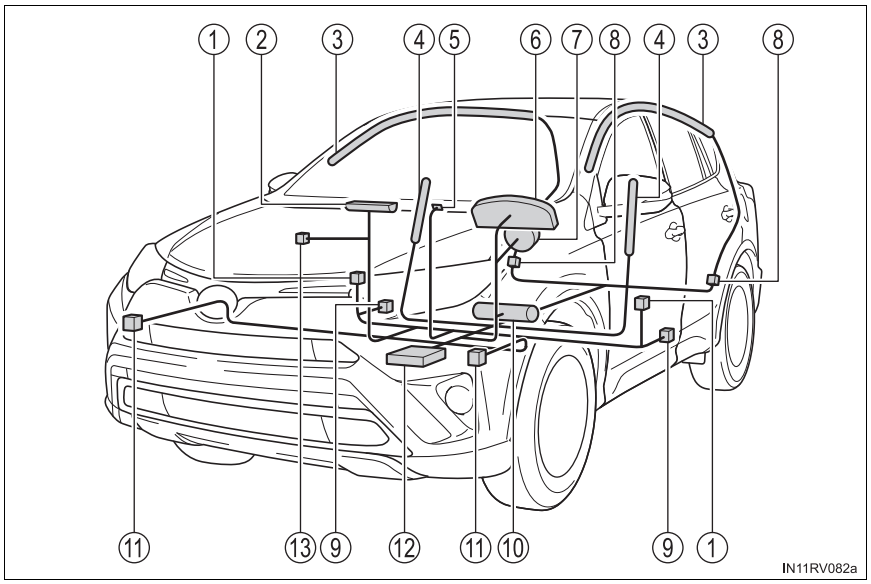

① Side impact sensors (front doors)
② Front passenger airbag
③ Curtain shield airbags
④ Side airbags
⑤ “PASSENGER AIR BAG” indicator light
⑥ SRS warning light
⑦ Driver airbag
⑧ Side impact sensors (rear)
⑨ Seat belt pretensioners and force limiters
⑩ Driver knee airbag
⑪ Front impact sensors
⑫ Airbag sensor assembly
⑬ Airbag manual on-off switch

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

WARNING

■ **SRS airbag precautions**

Observe the following precautions regarding the SRS airbags.
Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly.
  The SRS airbags are supplemental devices to be used with the seat belts.
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag.

  Since the risk zone for the driver's airbag is the first 50 - 75 mm (2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:


  • Move your seat to the rear as far as you can while still reaching the pedals comfortably.
  • Slightly recline the back of the seat. Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
  • If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

  The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.


WARNING

■ **SRS airbag precautions**

- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Toyota strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P. 54)
- Do not sit on the edge of the seat or lean against the dashboard.

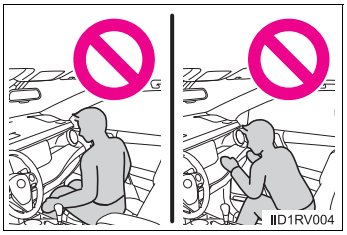

- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not allow the front seat occupants to hold items on their knees.

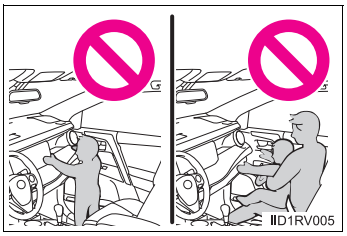


- Do not lean against the door, the roof side rail or the front, side and rear pillars.




WARNING

■ **SRS airbag precautions**


- Do not allow anyone to kneel on the passenger seat toward the door or put their head or hands outside the vehicle.

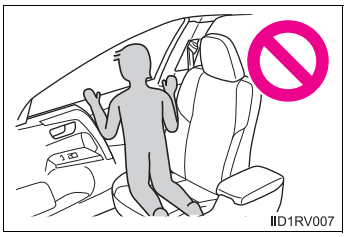

- Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the instrument panel.
  These items can become projectiles when the SRS driver, front passenger and knee airbags deploy.

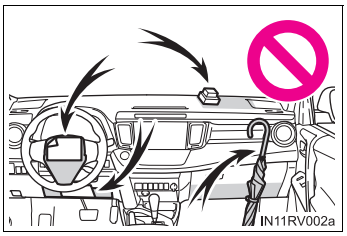

- Do not attach anything to areas such as a door, windshield glass, side door glass, front or rear pillar, roof side rail and assist grip. (Except for the speed limit label →P. 618)

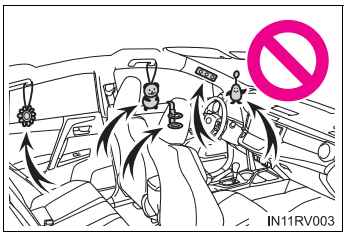

- Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- If a vinyl cover is put on the area where the SRS knee airbag will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the airbags. Such accessories may prevent the side airbags from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.

WARNING

■ **SRS airbag precautions**

- Do not strike or apply significant levels of force to the area of the SRS airbag components.
  Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Modification and disposal of SRS airbag system components**

Do not dispose of your vehicle or perform any of the following modifications without consulting any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars or roof side rails
- Repairs or modifications of the front fender, front bumper or side of the occupant compartment
- Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows or winches
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as mobile two-way radios (RF-transmitter) and CD players
- Modifications to your vehicle for a person with a physical disability

■ **If the SRS airbags deploy (inflate)**

- Slight abrasions, burns, bruising etc., may be sustained from SRS airbags, due to the extremely high speed deployment (inflation) by hot gases.
- A loud noise and white powder will be emitted.
- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats, parts of the front and rear pillars, and roof side rails may be hot for several minutes. The airbag itself may also be hot.
- The windshield may crack.
- Vehicles with ERA-GLONASS/EVAK: If the SRS airbags deploy, the system is designed to send an emergency call* to the ERA-GLONASS/EVAK control center, notifying them of the vehicle's location (without needing to push the "SOS" button) and an agent will attempt to speak with the occupants to ascertain the level of emergency and assistance required. If the occupants are unable to communicate, the agent automatically treats the call as an emergency and helps to dispatch the necessary emergency services. (→P. 480)

*: In some cases, the call cannot be made. (→P. 483)

■ **SRS airbag deployment conditions (SRS front airbags)**

- The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 20 - 30 km/h [12 - 18 mph] frontal collision with a fixed wall that does not move or deform).

  However, this threshold velocity will be considerably higher in the following situations:

  - If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
  - If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle "underrides", or goes under, the bed of a truck
- Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.


■ **SRS airbag deployment conditions (SRS side and curtain shield airbags)**

- The SRS side and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 20 - 30 km/h [12 - 18 mph]).
- The SRS side and curtain shield airbags may also deploy in the event of a severe frontal collision.

■ **Conditions under which the SRS airbags may deploy (inflate), other than a collision**

The SRS front airbags and SRS side and curtain shield airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.


- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

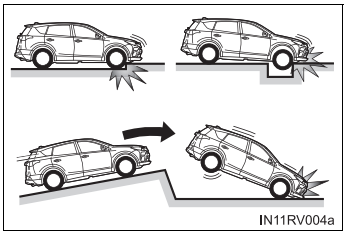

■ **Types of collisions that may not deploy the SRS airbags (SRS front airbags)**

The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.


- Collision from the side
- Collision from the rear
- Vehicle rollover

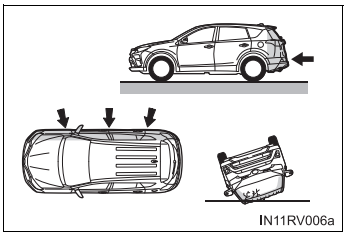

■ **Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)**


The SRS side and curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

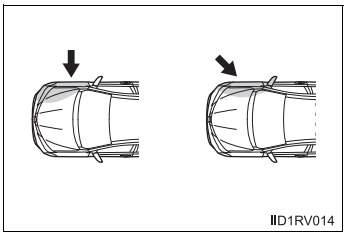

The SRS side and curtain shield airbags do not generally inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed side collision or low-speed frontal collision.


- Collision from the rear
- Vehicle rollover

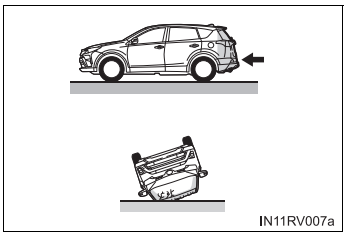


When to contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer

In the following cases, the vehicle will require inspection and/or repair. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.


- Any of the SRS airbags have been inflated.
- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.

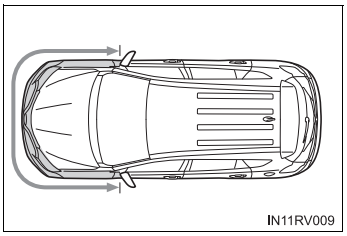


- A portion of a door or its surrounding area is damaged or deformed, or the vehicle was involved in an accident that was not severe enough to cause the SRS side and curtain shield airbags to inflate.

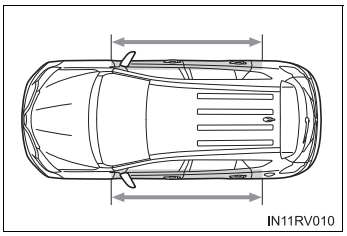


- The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.

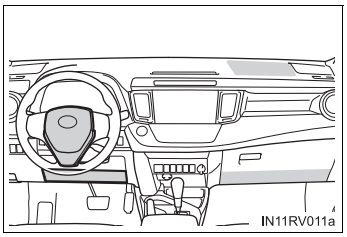

- The surface of the seats with the side airbag is scratched, cracked, or otherwise damaged.

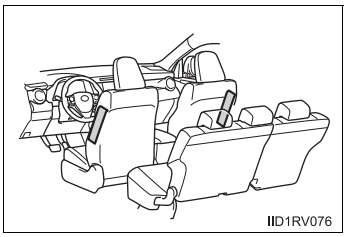

- The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the curtain shield airbags inside is scratched, cracked or otherwise damaged.

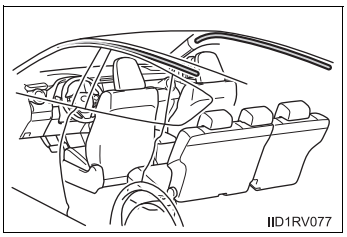


Airbag manual on-off system

This system deactivates the front passenger airbag.
Only deactivate the airbags when using a child restraint system on the front passenger seat.

① “PASSENGER AIR BAG” indicator

The ON indicator light turns on when the airbag system is on (only when the power switch is in ON mode).


② Airbag manual on-off switch

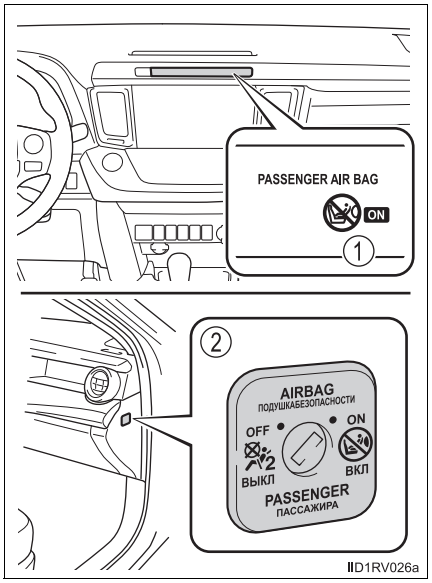

Deactivating the airbags for the front passenger

Insert the mechanical key into the cylinder and rotate to the “OFF” position.

The “OFF” indicator light turns on (only when the power switch is in ON mode).

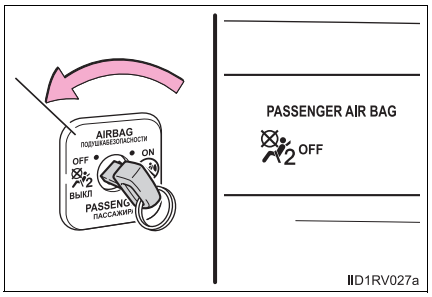

“PASSENGER AIR BAG” indicator information

If any of the following problems occur, it is possible that there is a malfunction in the system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- Neither “ON” nor “OFF” comes on.
- The indicator light does not change when the airbag manual on-off switch is switched to “ON” or “OFF”.

WARNING

When installing a child restraint system

For safety reasons, always install a child restraint system in a rear seat. In the event that the rear seat cannot be used, the front seat can be used as long as the airbag manual on-off system is set to “OFF”.
If the airbag manual on-off system is left on, the strong impact of the airbag deployment (inflation) may cause serious injury or even death.

When a child restraint system is not installed on the front passenger seat

Ensure that the airbag manual on-off system is set to “ON”.
If it is left off, the airbag may not deploy in the event of an accident, which may result in serious injury or even death.

Safety information for children

Observe the following precautions when children are in the vehicle.
Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch etc.
- Use the rear door child-protector lock or the window lock switch to avoid children opening the door while driving or operating the power window accidentally. (→P. 189, 280)
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, back door, seats etc.

⚠ WARNING

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof (if equipped) or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Child restraint systems

Toyota strongly urges the use of child restraint systems.

Points to remember

Studies have shown that installing a child restraint on a rear seat is much safer than installing one on the front passenger seat.

- Choose a child restraint system that suits your vehicle and is appropriate to the age and size of the child.
- For installation details, follow the instructions provided with the child restraint system.
  General installation instructions are provided in this manual.
  (→P. 65)
- If child restraint system regulations exist in the country where you reside, please contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for the child restraint system installation.
- Toyota recommends that you use a child restraint system which conforms to the regulation ECE No.44.

Types of child restraints

Child restraint systems are classified into the following 5 groups according to the regulation ECE No.44:

Group 0: Up to 10 kg (22 lb.) (0 - 9 months)

Group 0^+: Up to 13 kg (28 lb.) (0 - 2 years)


Group I: 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)

Group II: 15 to 25 kg (34 to 55 lb.) (4 years - 7 years)

Group III: 22 to 36 kg (49 to 79 lb.) (6 years - 12 years)


In this owner's manual, the following 3 types of popular child restraint systems that can be secured with the seat belts are explained:

▶ Baby seat

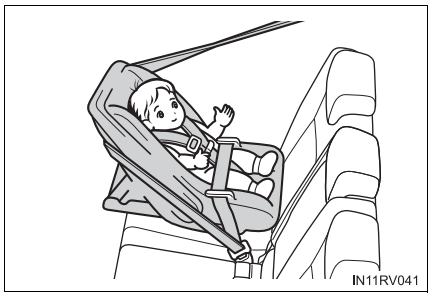


Equal to Group 0 and 0^+ of ECE No.44

▶ Child seat

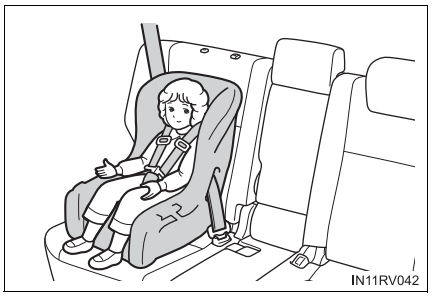

Equal to Group 0^+ and I of ECE No.44

▶ Junior seat

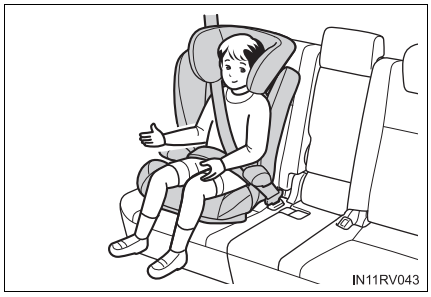

Equal to Group II and III of ECE No.44

Child restraint system suitability for various seating positions

Information provided in the table shows your child restraint system suitability for various seating positions.

Seating position / Mass groups	Front passenger seat		Rear seat	
	Airbag manual on-off switch			
	ON	OFF	Outboard	Center
0 Up to 10 kg (22 lb.) (0 - 9 months)	X	U*1 L*1	U L	X
0+ Up to 13 kg (28 lb.) (0 - 2 years)	X	U*1 L*1	U L	X
I 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	Rear-facing — X Forward-facing — UF*1, 2	U*1, 2	U*2	X
II, III 15 to 36 kg (34 to 79 lb.) (4 - 12 years)	UF*1, 2	U*1, 2	U*2	X

Key of letters inserted in the above table:

U: Suitable for “universal” category child restraint systems approved for the use in this mass group.

UF: Suitable for forward-facing “universal” category child restraint systems approved for the use in this mass group.

L: Suitable for child restraint systems shown in the child restraint system list.

X: Not suitable seat position for children in this mass group.

*1: Adjust the front seatback to the 4th lock position from the most upright position.
Move the front seat cushion to the fully rearward.
Follow these procedures:

- For installing a baby seat with support base
  If the baby seat interferes with the seatback when latching the baby seat into the support base, adjust the seatback rearward until there is no interference.
- For installing a forward-facing child seat
  If there is gap between the child seat and the seatback, tilt the seatback rearward until good contact is achieved. If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.
- For installing a junior seat
  If the child in your child restraint system is in a very upright position, adjust the seatback to the most comfortable position.
  If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

*2: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.

When securing some types of child restraint systems in rear seats, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

The child restraint systems mentioned in the table may not be available outside of the EU area.

Other child restraint systems which are different from the system mentioned in the table can be used, but the suitability of the systems must be carefully checked with the child restraint system manufacturer concerned and the seller of those seats.

■ **Child restraint system list**

Mass groups	Child restraint systems	Category
0 Up to 10 kg (22 lb.) (0 - 9 months)	TOYOTA G 0+, BABYSAFE PLUS with SEAT BELT FIXATION, BASE PLATFORM	Semi-universal
0+ Up to 13 kg (28 lb.) (0 - 2 years)	TOYOTA G 0+, BABYSAFE PLUS with SEAT BELT FIXATION, BASE PLATFORM	Semi-universal
I 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	—	—
II, III 15 to 36 kg (34 to 79 lb.) (4 - 12 years)	TOYOTA KIDFIX	Universal (Can be fitted to the vehicle's ISOFIX mountings)

Child restraint system suitability for various seating positions (with ISOFIX rigid anchor)

Information provided in the table shows your child restraint system suitability for various seating positions.

Mass groups	Size class	Fixture	Vehicle ISOFIX positions
			Rear outboard seat
Carrycot	F	ISO/L1	X
	G	ISO/L2	X
0 Up to 10 kg (22 lb.) (0 - 9 months)	E	ISO/R1	IL
0^+ Up to 13 kg (28 lb.) (0 - 2 years)	E	ISO/R1	IL
	D	ISO/R2	IL
	C	ISO/R3	IL
I 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	D	ISO/R2	IL
	C	ISO/R3	IL
	B	ISO/F2	IUF, IL*
	B1	ISO/F2X	IUF, IL*
	A	ISO/F3	IUF, IL*

Key of letters inserted in the above table:


IUF: Suitable for ISOFIX forward-facing child restraints systems of universal category approved for the use in the mass group.

IL: Suitable for ISOFIX child restraint systems of the categories for “specific vehicles”, “restricted” or “semi-universal” approved for use in this mass group.

When using a “TOYOTA MINI” or “TOYOTA MIDI”, adjust the support leg and ISOFIX connectors as follows:

① Lock the ISOFIX connectors where numbers 4 and 5 can be seen.

② Lock the support leg where 4th hole can be seen.

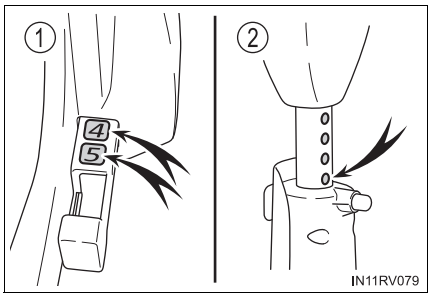

X: ISOFIX position not suitable for ISOFIX child restraint systems in this mass group and/or this size class.

*: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.

When securing some types of child restraint systems in rear seats, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

The child restraint systems mentioned in the table may not be available outside of the EU area.

Other child restraint systems which are different from the systems mentioned in the table can be used, but the suitability of the systems must be carefully checked with the child restraint system manufacturer concerned and the seller of those seats.


■ ISOFIX child restraint system list

Mass groups	Size class	Fixture	ISOFIX child restraint systems	Category
0 Up to 10 kg (22 lb.) (0 - 9 months)	E	ISO/R1	TOYOTA MINI	Semi-universal
	E	ISO/R1	TOYOTA MIDI	Semi-universal
0+ Up to 13 kg (28 lb.) (0 - 2 years)	E	ISO/R1	TOYOTA MINI	Semi-universal
	E	ISO/R1	TOYOTA MIDI	Semi-universal
	D	ISO/R2	TOYOTA MINI	Semi-universal
	D	ISO/R2	TOYOTA MIDI	Semi-universal
	C	ISO/R3	TOYOTA MINI	Semi-universal
	C	ISO/R3	TOYOTA MIDI	Semi-universal
I 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	B	ISO/F2	TOYOTA MIDI	Semi-universal
	B1	ISO/F2X	TOYOTA MIDI	Semi-universal
	A	ISO/F3	TOYOTA MIDI	Semi-universal


■ **When installing a child restraint system on the front passenger seat**

When you have to use a child restraint system on the front passenger seat, adjust the following:


- The seat cushion to the fully rearward position

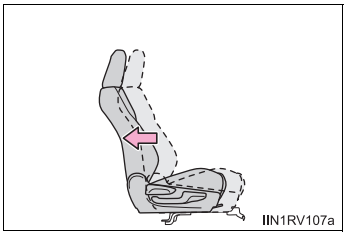

If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

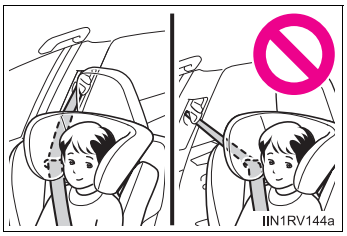

- Fold the seatback forward and then back to the 1st lock position (most upright position) until it locks into place.
  Adjust the seatback to the 4th lock position.
  ① 1st locking position
  ② 4th locking position

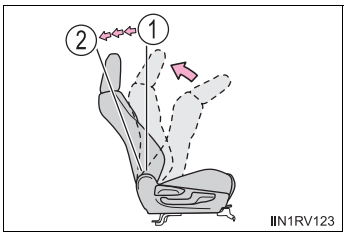

In case the child restraint system interferes with the seatback when latching the child restraint system into the support base, adjust the seatback rearward until there is no interference.

In case the child in your child restraint system is in a very upright position, adjust the seatback to the most comfortable position.

- Remove the head restraint if it interferes with your child restraint system.

■ **Selecting an appropriate child restraint system**

- Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt.
- If the child is too large for a child restraint system, sit the child on a rear seat and use the vehicle's seat belt. (→P. 34)

WARNING

■ **Using a child restraint system**

The use of a child restraint system not suitable for the vehicle may not properly secure the infant or child. It may result in death or serious injury (in the event of sudden braking or an accident).

■ **Child restraint precautions**

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system depending on the age and size of the child. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior. This may cause death or serious injury to the child in the event of a sudden stop, sudden swerve or accident.
- Toyota strongly urges the use of a proper child restraint system that conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on. (→P. 51)
  In the event of an accident, the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child if the rear-facing child restraint system is installed on the front passenger seat.
- A forward-facing child restraint system may be installed on the front passenger seat only when it is unavoidable. A child restraint system that requires a top strap should not be used in the front passenger seat since there is no top strap anchor for the front passenger seat. Move the seat as far back as possible because the front passenger airbag could inflate with considerable speed and force. If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward. Otherwise, the child may be killed or seriously injured.

WARNING

■ **Child restraint precautions**

- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front and rear pillars or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured. If it is not secured properly, it may cause death or serious injury to the child in the event of a sudden stop, sudden swerve or accident.

■ **When children are in the vehicle**

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.
If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.


■ **When the child restraint system is not in use**

- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment. This will prevent it from injuring passengers in the event of a sudden stop, sudden swerve or an accident.

Installing child restraints


Follow the child restraint system manufacturer's instructions. Firmly secure child restraints to the seats using a seat belt or ISOFIX rigid anchors. Attach the top strap when installing a child restraint.

Seat belts (An ELR belt requires a locking clip)

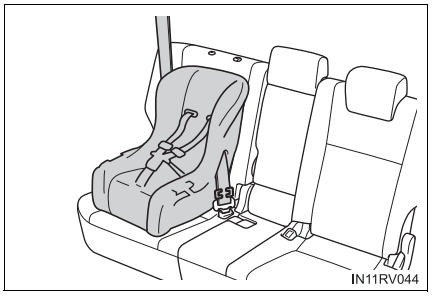


ISOFIX rigid anchors (ISOFIX child restraint system)

Lower anchors are provided for the outboard rear seats. (Tags displaying the location of the anchors are attached to the seats.)

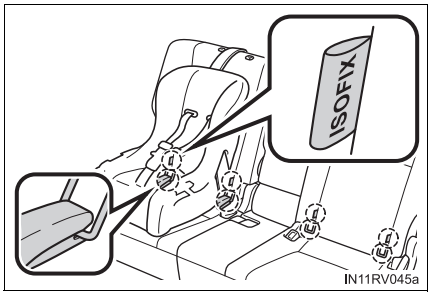

Anchor brackets (for the top strap)

An anchor bracket is provided for the outboard rear seats. (Labels displaying the location of the anchor bracket.)

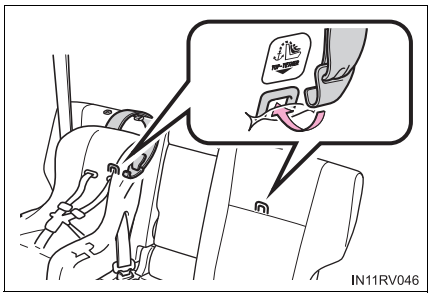


Installing child restraints using a seat belt

■ Rear-facing — Baby seat/child seat

1 Adjust the seatback to the 3rd lock position from the most upright position. (→P. 265)


① Most upright position

② 3rd lock position

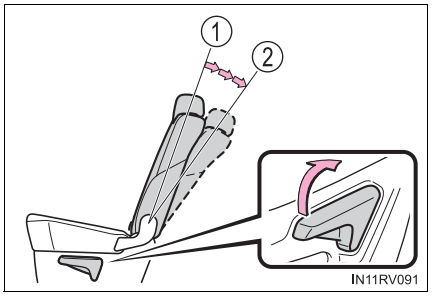


If your child restraint system interferes with a head restraint and cannot be installed properly, install the child restraint system after removing the head restraint. (→P. 270)


2 Place the child restraint system on the rear seat facing the rear of the vehicle.

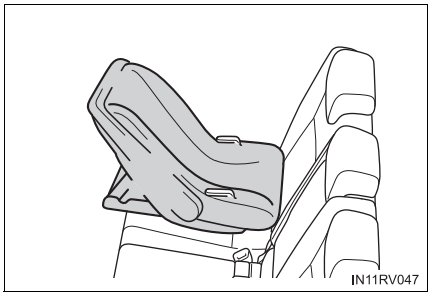

3 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

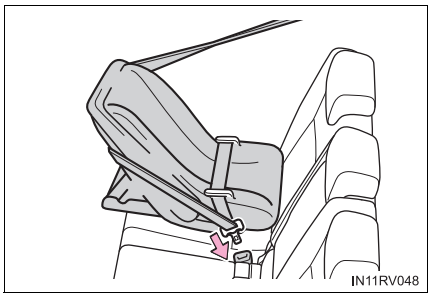

4 Install a locking clip near the tab of the lap and shoulder belt by inserting the lap and shoulder webbing through the recesses of the locking clip. Buckle the belt again. If the belt has any slack, release the buckle and reinstall the locking clip.

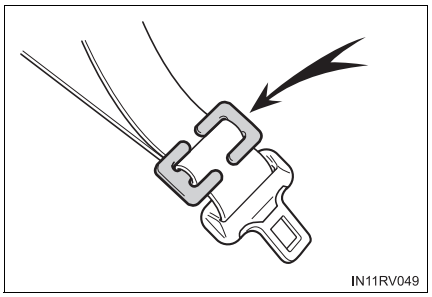


■ **Forward-facing — Child seat**

1 Adjust the seatback to the 3rd lock position from the most upright position. (→P. 265)


① Most upright position

② 3rd lock position

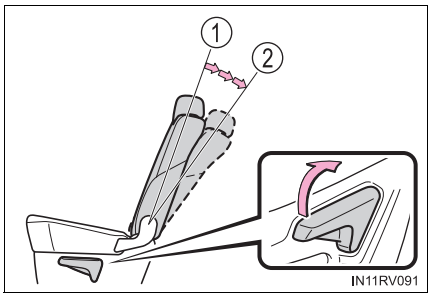


If your child restraint system interferes with a head restraint and cannot be installed properly, install the child restraint system after removing the head restraint. (→P. 270)


2 Place the child restraint system on the seat facing the front of the vehicle.

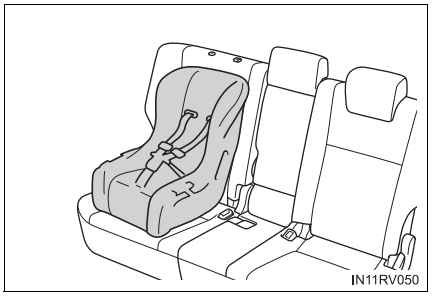

3 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

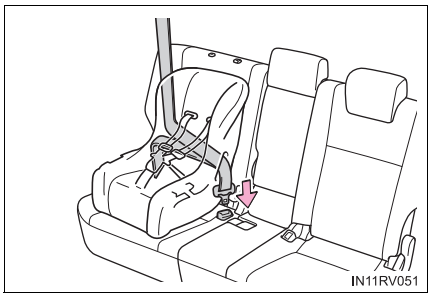

4 Install a locking clip near the tab of the lap and shoulder belt by inserting the lap and shoulder webbing through the recesses of the locking clip. Buckle the belt again. If the belt has any slack, release the buckle and reinstall the locking clip.

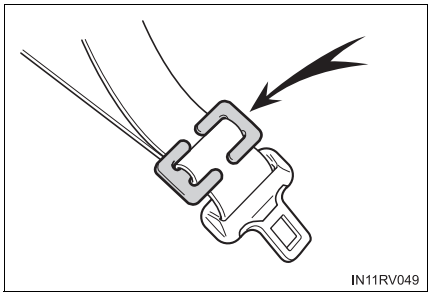


■ **Junior seat**

1 Adjust the seatback to the 3rd lock position from the most upright position. (→P. 265)

① Most upright position


② 3rd lock position

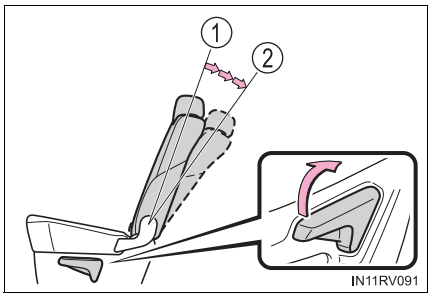


If your child restraint system interferes with a head restraint and cannot be installed properly, install the child restraint system after removing the head restraint. (→P. 270)

2 Place the child restraint system on the seat facing the front of the vehicle.


▶ Booster type

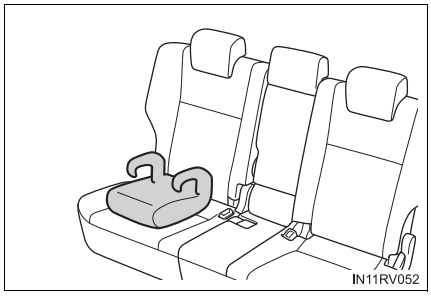

▶ High back type

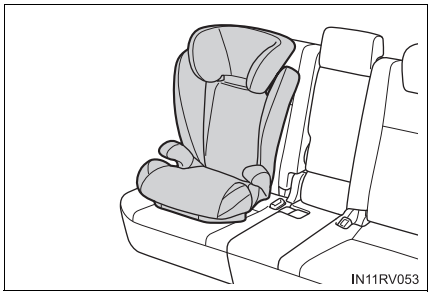


3 Sit the child in the child restraint system. Fit the seat belt to the child restraint system according to the manufacturer's instructions and insert the plate into the buckle. Make sure that the belt is not twisted.

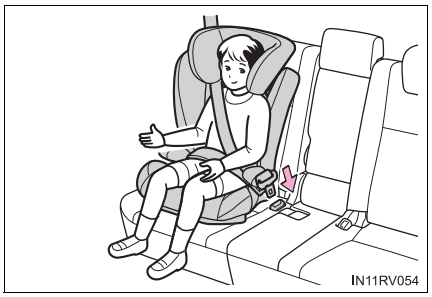

Check that the shoulder belt is correctly positioned over the child's shoulder and that the lap belt is as low as possible. (→P. 34)

Removing a child restraint installed with a seat belt

Push the buckle release button and fully retract the seat belt.

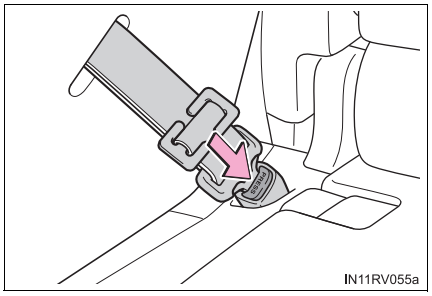


Installation with ISOFIX rigid anchor

1 Adjust the seatback to the 3rd lock position from the most upright position. (→P. 265)

① Most upright position

② 3rd lock position

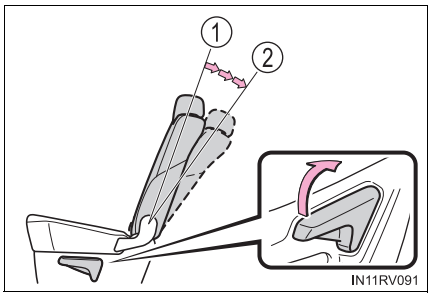


For a rear-facing child restraint system with ISOFIX attached to shell, if latching is difficult, adjust the seatback by reclining the seatback.

If your child restraint system interferes with a head restraint and cannot be installed properly, install the child restraint system after removing the head restraint. (→P. 270)

2 Widen the gap between the seat cushion and seatback slightly.


3 Latch the buckles onto the exclusive fixing bars.

If the child restraint has a top strap, the top strap should be latched onto the anchor bracket.

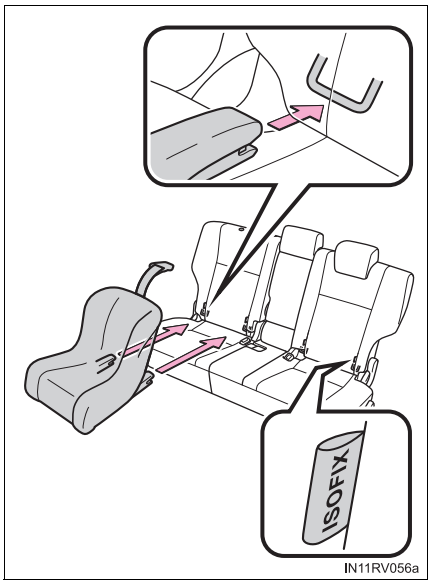


Child restraint systems with a top strap

1 Remove the head restraint.

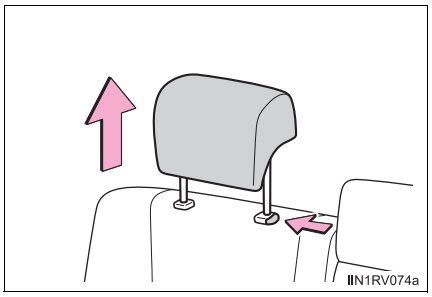

2 Secure the child restraint system using the seat belt or ISO-FIX rigid anchors.

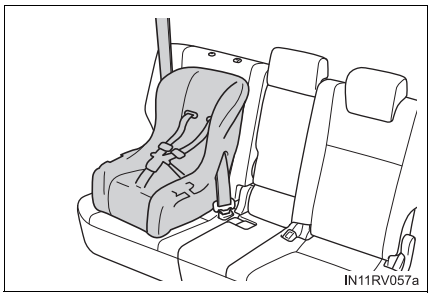

3 Latch the hook onto the anchor bracket and tighten the top strap.

Make sure the top strap is securely latched.



When installing a child restraint system

You need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer:


Locking clip for child restraint system
(Part No. 73119-22010)

WARNING

When installing a child restraint system

Follow the directions given in the child restraint system installation manual and fix the child restraint system securely in place.
If the child restraint system is not correctly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving or an accident.

- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat (left-hand drive vehicles) or the left-hand rear seat (right-hand drive vehicles).

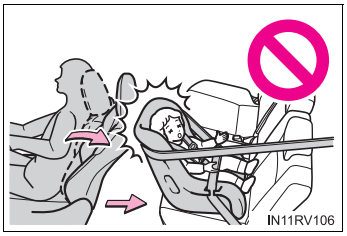


- Adjust the front passenger seat so that it does not interfere with the child restraint system.
- Only put a forward-facing child restraint system on the front seat when unavoidable.
  When installing a forward-facing child restraint system on the front passenger seat, move the seat as far back as possible. If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.
  Failure to do so may result in death or serious injury if the airbags deploy (inflate).



WARNING


■ **When installing a child restraint system**

- Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on. (→P. 51)
  The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

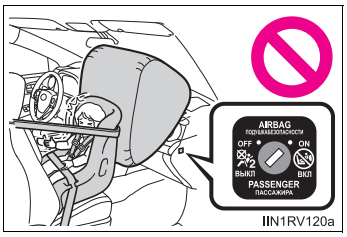

IIN1RV120a

- There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat.
  Details of the label(s) are shown in the illustration below.

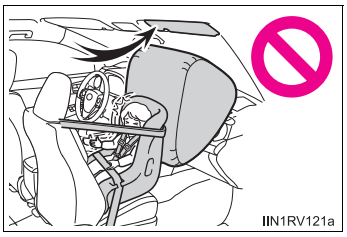
IIN1RV121a




ITI17I118a

WARNING

■ **When installing a child restraint system**

- If child restraint system regulations exist in the country where you reside, please contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for the child restraint system installation.
- When installing a child restraint system in the rear center seat, adjust both seatbacks at the same angle. Otherwise, the child restraint system cannot be securely restrained and this may cause death or serious injuries in the event of sudden braking, sudden swerving or an accident.
- When a junior seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder. Failing to do so may result in death or serious injury in the event of sudden braking, sudden swerving or an accident.
- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When using the left side seat for the child restraint system, do not sit in the center seat. Seat belt function may be impaired, such as being positioned overly high or loose-fitting, which may result in death or serious injury in the event of sudden braking or an accident.

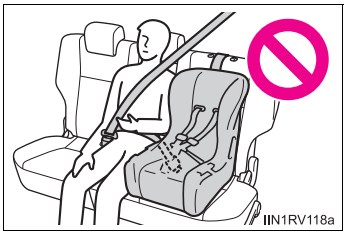

■ **To correctly attach a child restraint system to the anchors**

When using the lower anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint system. Make sure the child restraint system is securely attached, or it may cause death or serious injury to the child or other passengers in the event of sudden braking, sudden swerving or an accident.

Exhaust gas precautions

Harmful substance to the human body is included in exhaust gases if inhaled.

WARNING

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.
Failure to do so may cause exhaust gases enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard.

■ Important points while driving

- Keep the back door closed.
- If you smell exhaust gases in the vehicle even when the back door is closed, open the windows and have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

■ When parking

- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the hybrid system.
- Do not leave the vehicle with the hybrid system on for a long time.
  If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.
- Do not leave the hybrid system operating in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the hybrid system is operating, exhaust gases may collect and enter the vehicle.


■ Exhaust pipe

The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Hybrid system features

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

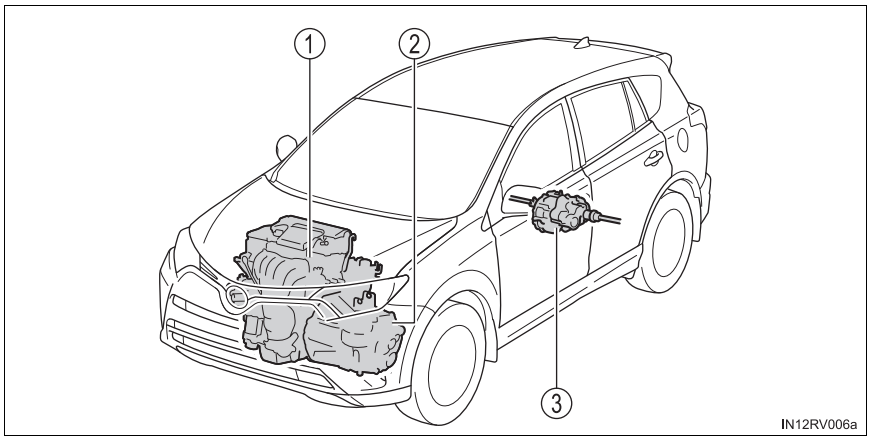

The illustration is an example for explanation and may differ from the actual item.

① Gasoline engine

② Front electric motor (traction motor)

③ Rear electric motor (traction motor) (AWD models)

When stopped/during start off

The gasoline engine stops* when the vehicle is stopped. During start off, the electric motor (traction motor) drives the vehicle. At slow speeds or when traveling down a gentle slope, the engine is stopped* and the electric motor (traction motor) is used.

When the shift lever is in N, the hybrid battery (traction battery) is not being charged.

*: When the hybrid battery (traction battery) requires charging or the engine is warming up, etc., the gasoline engine will not automatically stop.
(→P. 78)

During normal driving

The gasoline engine is predominantly used. The electric motor (traction motor) charges the hybrid battery (traction battery) as necessary.

When accelerating sharply

When the accelerator pedal is depressed heavily, the power of the hybrid battery (traction battery) is added to that of the gasoline engine via the electric motor (traction motor).

When braking (regenerative braking)

The wheels operate the electric motor (traction motor) as a power generator, and the hybrid battery (traction battery) is charged.


■ **Regenerative braking**

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift lever in D or S.
- The brake pedal is depressed while driving with the shift lever in D or S.

■ **EV indicator**

The EV indicator comes on when the vehicle is driven using only the electric motor (traction motor) or the gasoline engine is stopped.

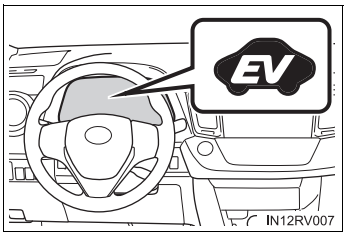

■ **Conditions in which the gasoline engine may not stop**

The gasoline engine starts and stops automatically. However, it may not stop automatically in the following conditions:

- During gasoline engine warm-up
- During hybrid battery (traction battery) charging
- When the temperature of the hybrid battery (traction battery) is high or low
- When the heater is switched on

■ **Charging the hybrid battery (traction battery)**

As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery (traction battery) will slowly discharge. For this reason, be sure to drive the vehicle at least once every few months for at least 30 minutes or 16 km (10 miles). If the hybrid battery (traction battery) becomes fully discharged and you are unable to start the hybrid system, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Charging the 12-volt battery**

→P. 632

■ **After the 12-volt battery has discharged or when the terminal has been removed and installed during exchange, etc.**

The gasoline engine may not stop even if the vehicle is being driven by the hybrid battery (traction battery). If this continues for a few days, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Sounds and vibrations specific to a hybrid vehicle**

There may be no engine sound or vibration even though the vehicle is able to move with the “READY” indicator is illuminated. For safety, apply the parking brake and make sure to shift the shift lever to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) when the hybrid system starts or stops.
- Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery), behind the rear seats, when the hybrid system is started or stopped.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed or as the accelerator pedal is released.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents on the lower sides of the rear seat.

■ **Maintenance, repair, recycling, and disposal**


Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.

■ **Customization**

Settings (e.g. on/off operation of the EV indicator) can be changed.
(Customizable features →P. 658)

Hybrid system precautions

Take care when handling the hybrid system, as it is a high voltage system (about 650V at maximum) as well as contains parts that become extremely hot when the hybrid system is operating. Obey the warning labels attached to the vehicle.

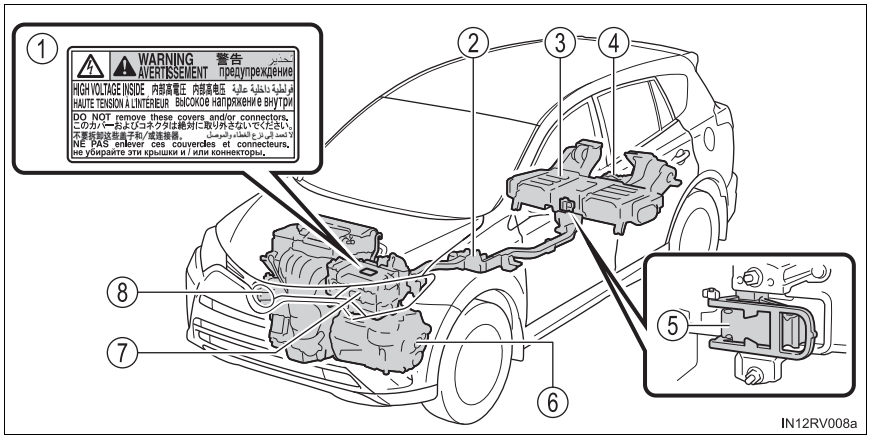


The illustration is an example for explanation and may differ from the actual item.

① Warning label
② High voltage cables (orange)
③ Hybrid battery (traction battery)
④ Rear electric motor (traction motor) (AWD models)
⑤ Service plug
⑥ Front electric motor (traction motor)
⑦ Power control unit
⑧ Air conditioning compressor

Hybrid battery (traction battery) air intake and discharge vents

The cooling air intake and discharge vents for the hybrid battery (traction battery) are located under the rear seats and between the rear seats and deck board, respectively. If the air intake vents are blocked, it could lead to a reduction in hybrid battery (traction battery) output.

The hybrid battery (traction battery) output will not be reduced, even if the space between the upper part of the air discharge vents on the back of the rear seat and deck board is blocked with luggage, etc.

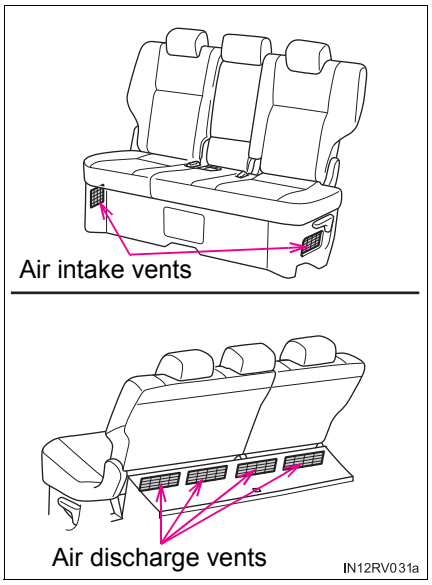


Emergency shut off system

When a certain level of impact is detected by the impact sensor, the emergency shut off system blocks the high voltage current and stops the fuel pump to minimize the risk of electrocution and fuel leakage. If the emergency shut off system activates, your vehicle will not restart. To restart the hybrid system, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

If a warning message is shown on the multi-information display, read the message and follow the instructions. (→P. 578)

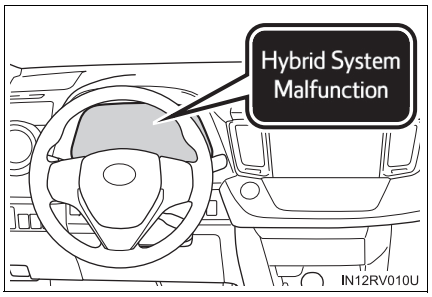

■ **If a warning light comes on, a warning message is displayed, or the 12-volt battery is disconnected**

The hybrid system may not start. In this case, try to start the system again. If the “READY” indicator does not come on, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Running out of fuel**

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light (→P. 573) go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The standard amount of fuel is about 10.1 L [2.7 gal., 2.2 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope. Add extra fuel when the vehicle is inclined.)

■ **Electromagnetic waves**

- High voltage parts and cables on hybrid vehicles incorporate electromagnetic shielding, and therefore emit approximately the same amount of electromagnetic waves as conventional gasoline powered vehicles or home electronic appliances.
- Your vehicle may cause sound interference in some third party-produced radio parts.

■ **Hybrid battery (traction battery)**

The hybrid battery (traction battery) has a limited service life. The lifespan of the hybrid battery (traction battery) can change in accordance with driving style and driving conditions.

■ **Declaration of conformity**


This model conforms to hydrogen emissions according to regulation ECE100 (Battery electric vehicle safety).

WARNING

■ **High voltage precautions**

This vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.

- Never touch, disassemble, remove or replace the high voltage parts, cables or their connectors.
- The hybrid system will become hot after starting as the system uses high voltage. Be careful of both the high voltage and the high temperature, and always obey the warning labels attached to the vehicle.
- Never try to open the service plug access hole located under the rear seat. The service plug is used only when the vehicle is serviced and is subject to high voltage.

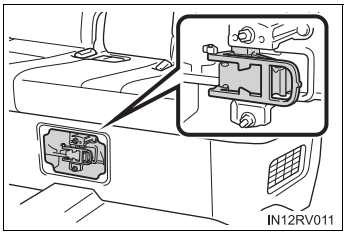

■ **Road accident cautions**

Observe the following precautions to reduce the risk of death or serious injury:

- Pull your vehicle off the road, apply the parking brake, shift the shift lever to P, and turn the hybrid system off.
- Do not touch the high voltage parts, cables and connectors.
- If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.
- If a fluid leak occurs, do not touch the fluid as it may be strong alkaline electrolyte from the hybrid battery (traction battery). If it comes into contact with your skin or eyes, wash it off immediately with a large amount of water or, if possible, boric acid solution. Seek immediate medical attention.
- If a fire occurs in the hybrid vehicle, leave the vehicle as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.
- If your vehicle needs to be towed, do so with front wheels (2WD models) or four wheels (AWD models) raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause a fire. (→P. 564)
- Carefully inspect the ground under the vehicle. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. Leave the vehicle as soon as possible.

WARNING

■ Hybrid battery (traction battery)

- Never resell, hand over or modify the hybrid battery. To prevent accidents, hybrid batteries that have been removed from a disposed vehicle are collected through any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Do not dispose of the battery yourself.

  Unless the battery is properly collected, the following may occur, resulting in death or serious injury:

  - The hybrid battery may be illegally disposed of or dumped, and it is hazardous to the environment or someone may touch a high voltage part, resulting in an electric shock.
  - The hybrid battery is intended to be used exclusively with your hybrid vehicle. If the hybrid battery is used outside of your vehicle or modified in any way, accidents such as electric shock, heat generation, smoke generation, an explosion and electrolyte leakage may occur.

  When reselling or handing over your vehicle, the possibility of an accident is extremely high because the person receiving the vehicle may not be aware of these dangers.
- If your vehicle is disposed of without the hybrid battery having been removed, there is a danger of serious electric shock if high voltage parts, cables and their connectors are touched. In the event that your vehicle must be disposed of, the hybrid battery must be disposed of by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. If the hybrid battery is not disposed of properly, it may cause electric shock that can result in death or serious injury.

NOTICE

■ Hybrid battery (traction battery) air intake vents

- Do not place objects that will block the air intake vents. The hybrid battery (traction battery) may overheat and be damaged.
- Clean the air intake vents regularly to prevent the hybrid battery (traction battery) from overheating.
- Do not get water or foreign materials in the air intake vents as this may cause a short circuit and damage the hybrid battery (traction battery).
- Do not carry large amounts of water such as water cooler bottles in the vehicle. If water spills onto the hybrid battery (traction battery), the battery may be damaged. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


Immobilizer system

The vehicle's keys have built-in transponder chips that prevent the hybrid system from starting if a key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

This system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.

The indicator light flashes after the power switch has been turned off to indicate that the system is operating.
The indicator light stops flashing after the power switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

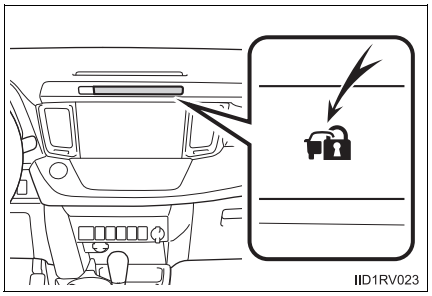

■ **System maintenance**

The vehicle has a maintenance-free type immobilizer system.

■ **Conditions that may cause the system to malfunction**

- If the grip portion of the key is in contact with a metallic object
- If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

■ **Certifications for the immobilizer system**

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type RI-42BTY is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.tokai-rika.co.jp/pc Frequency band: 134.2 kHz Maximum radio-frequency power: 55.5dBμA/m @10m
TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi RI-42BTY on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.tokai-rika.co.jp/pc Radiotaajuus: 134.2 kHz suurin mahdollinen lähetysteho: 55.5dBμA/m @10m
Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur RI-42BTY conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tokai-rika.co.jp/pc Frequentieband: 134.2 kHz Maximaal radiofrequentievermogen: 55.5dBμA/m @10m

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type RI-42BTY est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
http://www.tokai-rika.co.jp/pc

Bande de fréquences: 134.2 kHz
Puissance de radiofréquence maximale: 55.5dBμA/m @10m

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning RI-42BTY överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
http://www.tokai-rika.co.jp/pc

Frekvensband: 134.2 kHz
Maximal radiofrekvenseffekt: 55.5dBμA/m @10m

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen RI-42BTY er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
http://www.tokai-rika.co.jp/pc

Frekvensbånd: 134.2 kHz
Maksimal radiofrekvenseffekt: 55.5dBμA/m @10m

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp RI-42BTY der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
http://www.tokai-rika.co.jp/pc

Frequenzband: 134.2 kHz
Abgestrahlte maximale Sendeleistung: 55.5dBμA/m @10m

Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός RI-42BTY πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
http://www.tokai-rika.co.jp/pc

Ζώνη συχνοτήτων: 134.2 kHz
Μέγιστη ισχύς ραδιοσυχνότητας: 55.5dBμA/m @10m

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio RI-42BTY è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
http://www.tokai-rika.co.jp/pc

Banda di frequenza: 134.2 kHz
Potenza massima radiofrequenza: 55.5dBμA/m @10m

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico RI-42BTY es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.tokai-rika.co.jp/pc Banda de frecuencia: 134.2 kHz Potencia máxima de radiofrecuencia: 55.5dBμA/m @10m
O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio RI-42BTY está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc Banda de frequência: 134.2 kHz Potência máxima de radiofrequências: 55.5dBμA/m @10m
B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju RI-42BTY huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc Tíðnisvið: 134.2 kHz Hámarks útvarpsbylgjutíðni: 55.5dBμA/m @10m

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp RI-42BTY vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
http://www.tokai-rika.co.jp/pc

Sagedusriba: 134.2 kHz
Maksimaalne saatevõimsus: 55.5dBμA/m @10m

TOKAI RIKA CO., LTD. igazolja, hogy a RI-42BTY típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
http://www.tokai-rika.co.jp/pc

Frekvenciasáv: 134.2 kHz
Maximális jelerősség: 55.5dBμA/m @10m

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu RI-42BTY je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
http://www.tokai-rika.co.jp/pc

Frekvenčné pásmo: 134.2 kHz
Maximálny rádiofrekvenčný výkon: 55.5dBμA/m @10m

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení RI-42BTY je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.tokai-rika.co.jp/pc Kmitočtové pásmo: 134.2 kHz Maximální radiofrekvenční výkon: 55.5dBμA/m @10m
TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme RI-42BTY skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.tokai-rika.co.jp/pc Frekvenčni pas: 134.2 kHz Največja moč radijske frekvence: 55.5dBμA/m @10m
Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas RI-42BTY atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.tokai-rika.co.jp/pc Dažnių juosta: 134.2 kHz Didžiausia radijo dažnių galia: 55.5dBμA/m @10m

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta RI-42BTY atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.tokai-rika.co.jp/pc Frekvenču josla: 134.2 kHz Maksimālā radiofrekvenču jauda: 55.5dBμA/m @10m
TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego RI-42BTY jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tokai-rika.co.jp/pc Zakres częstotliwości: 134.2 kHz Maksymalna moc częstotliwości radiowej: 55.5dBμA/m @10m
TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð RI-42BTY er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc Tíðnisvið: 134.2 kHz Hámarks útvarpsbylgjutíðni: 55.5dBμA/m @10m

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen RI-42BTY er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:
http://www.tokai-rika.co.jp/pc

Frekvensbånd: 134.2 kHz
Maksimal radiofrekvenseffekt: 55.5dBμA/m @10m

С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение RI-42BTY е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
http://www.tokai-rika.co.jp/pc

Радиочестотна лента: 134.2 kHz
Максимална радиочестотна мощност: 55.5dBμA/m @10m

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio RI-42BTY este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
http://www.tokai-rika.co.jp/pc

Banda de frecvență: 134.2 kHz
Puterea maximă de radiofrecvență: 55.5dBμA/m @10m

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa RI-42BTY u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://www.tokai-rika.co.jp/pc Frekvencijski opseg: 134.2 kHz Maksimalna radio-frekvencijska snaga: 55.5dBμA/m @10m
Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes RI-42BTY është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc Brezi i frekuencës: 134.2 kHz Fuqia maksimale e radiofrekuencës: 55.5dBμA/m @10m
TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa RI-42BTY u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.tokai-rika.co.jp/pc Frekvencijski pojas: 134.2 kHz Maksimalna RF snaga: 55.5dBμA/m @10m

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa RI-42BTY u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:
http://www.tokai-rika.co.jp/pc

Frekventni opseg: 134.2 kHz
Maksimalna radio-frekventna snaga: 55.5dBμA/m @10m

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün RI-42BTY 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:
http://www.tokai-rika.co.jp/pc

Frekans bandı: 134.2 kHz
Maksimum radyo frekans gücü: 55.5dBμA/m @10m

CE

Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

TOYOTA

TOYOTA MOTOR CORPORATION

1, TOYOTA-CHO, TOYOTA, AICHI, 471-8571, JAPAN TEL.:+81-565-28-2121

EU Declaration of Conformity

CE

1. Radio equipment (Product / Type):

   Immobilizer / TMIMB-3

2. Name and address of the manufacturer:

   TOYOTA MOTOR CORPORATION
   1, Toyota -cho, Toyota, Aichi, 471-8572, Japan

3. This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Object of the declaration:

   TMIMB-3

5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

   Directive 2014/53/EU

6. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

(Health & safety requirements)	EN 60950-1:2006 / A11:2009
(EMC requirements)	EN 301 489-1 V1.8.1 & EN 301 489-3 V1.4.1
(Effective uses of radio spectrum)	EN 300 330 V2.1.1

7. The notified body:

   Not Applicable

8. Accessories and components, including software, which allow the radio equipment to operate as intended and covered by the EU declaration of conformity:

   Not Applicable

9. Additional information:

   None

Place and date of issue: Japan, April 5, 2017

Signature: Tomoo Kakegawa

Tomoo Kakegawa

Function: General Manager

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type TMIMB-3 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://my.toyota.eu Frequency band: 119 - 135 kHz Maximum radio-frequency power: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi TMIMB-3 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://my.toyota.eu Radiotaajuus: 119 - 135 kHz suurin mahdollinen lähetysteho: 55dBμA/m @10m
Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur TMIMB-3 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://my.toyota.eu Frequentieband: 119 - 135 kHz Maximaal radiofrequentievermogen: 55dBμA/m @10m

Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type TMIMB-3 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://my.toyota.eu Bande de fréquences: 119 - 135 kHz Puissance de radiofréquence maximale: 55dBμA/m @10m
Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning TMIMB-3 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://my.toyota.eu Frekvensband: 119 - 135 kHz Maximal radiofrekvenseffekt: 55dBμA/m @10m
Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen TMIMB-3 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m

Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp TMIMB-3 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://my.toyota.eu Frequenzband: 119 - 135 kHz Abgestrahlte maximale Sendeleistung: 55dBμA/m @10m
Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός TMIMB-3 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://my.toyota.eu Ζώνη συχνοτήτων: 119 - 135 kHz Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m @10m
Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio TMIMB-3 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://my.toyota.eu Banda di frequenza: 119 - 135 kHz Potenza massima radiofrequenza: 55dBμA/m @10m

Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico TMIMB-3 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://my.toyota.eu Banda de frecuencia: 119 - 135 kHz Potencia máxima de radiofrecuencia: 55dBμA/m @10m
O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio TMIMB-3 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://my.toyota.eu Banda de frequência: 119 - 135 kHz Potência máxima de radiofrequências: 55dBμA/m @10m
B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju TMIMB-3 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m

Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp TMIMB-3 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://my.toyota.eu Sagedusriba: 119 - 135 kHz Maksimaalne saatevõimsus: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION igazolja, hogy a TMIMB-3 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://my.toyota.eu Frekvenciasáv: 119 - 135 kHz Maximális jelerősség: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu TMIMB-3 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://my.toyota.eu Frekvenčné pásmo: 119 - 135 kHz Maximálny rádiofrekvenčný výkon: 55dBμA/m @10m

Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení TMIMB-3 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://my.toyota.eu Kmitočtové pásmo: 119 - 135 kHz Maximální radiofrekvenční výkon: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme TMIMB-3 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://my.toyota.eu Frekvenčni pas: 119 - 135 kHz Največja moč radijske frekvence: 55dBμA/m @10m
Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas TMIMB-3 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://my.toyota.eu Dažnių juosta: 119 - 135 kHz Didžiausia radijo dažnių galia: 55dBμA/m @10m

Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta TMIMB-3 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://my.toyota.eu Frekvenču josla: 119 - 135 kHz Maksimālā radiofrekvenču jauda: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego TMIMB-3 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://my.toyota.eu Zakres częstotliwości: 119 - 135 kHz Maksymalna moc częstotliwości radiowej: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð TMIMB-3 er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m

TOYOTA MOTOR CORPORATION erklærer herved at radioutstyrtypen TMIMB-3 er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m
С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение TMIMB-3 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://my.toyota.eu Радиочестотна лента: 119 - 135 kHz Максимална радиочестотна мощност: 55dBμA/m @10m
Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio TMIMB-3 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://my.toyota.eu Banda de frecvență: 119 - 135 kHz Puterea maximă de radiofrecvență: 55dBμA/m @10m

Ovime TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMIMB-3 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://my.toyota.eu Frekvencijski opseg: 119 - 135 kHz Maksimalna radio-frekvencijska snaga: 55dBµA/m @10m
Me anë të këtij dokumenti, TOYOTA MOTOR CORPORATION deklaron se tipi i radiopajisjes TMIMB-3 është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://my.toyota.eu Brezi i frekuencës: 119 - 135 kHz Fuqia maksimale e radiofrekuencës: 55dBµA/m @10m
TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa TMIMB-3 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://my.toyota.eu Frekvencijski pojas: 119 - 135 kHz Maksimalna RF snaga: 55dBµA/m @10m

Ovim TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMIMB-3 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://my.toyota.eu Frekventni opseg: 119 - 135 kHz Maksimalna radio-frekventna snaga: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION, işbu belgeyle telsiz cihazı türünün TMIMB-3 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://my.toyota.eu Frekans bandı: 119 - 135 kHz Maksimum radyo frekans gücü: 55dBμA/m @10m

⚠ NOTICE


■ **To ensure the system operates correctly**

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Double locking system*

Unauthorized access to the vehicle is prevented by disabling the door unlocking function from both the interior and exterior of the vehicle.

Vehicles employing this system have labels on the window glass of both front doors.

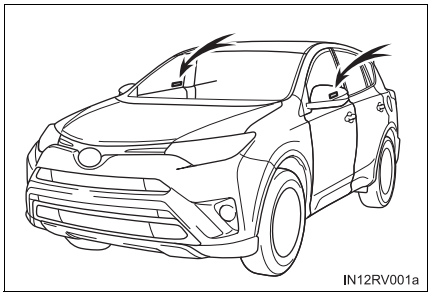

Setting the double locking system

Turn the power switch off, have all the passengers exit the vehicle and ensure that all the doors are closed.

Using the entry function:
Touch the sensor area on the front outside door handle twice within 5 seconds.
Using the wireless remote control:
Press twice within 5 seconds.

Canceling the double locking system

Using the entry function: Hold the front outside door handle.
Using the wireless remote control: Press .

WARNING

■ Double locking system precaution

Never activate the double locking system when there are people in the vehicle because all the doors cannot be opened from inside the vehicle.

*: If equipped

Alarm*

The alarm

The alarm uses light and sound to give an alert when an intrusion is detected.


The alarm is triggered in the following situations when the alarm is set:

- A locked door is unlocked or opened in any way other than using the entry function or wireless remote control. (The doors will lock again automatically.)
- The hood is opened.
- The intrusion sensor detects something moving inside the vehicle. (An intruder gets in the vehicle.)
- The tilt sensor detects a change of vehicle inclination. (if equipped)
- The back door window is broken.

Setting the alarm system

Close the doors and hood, and lock all the doors using the entry function or wireless remote control. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

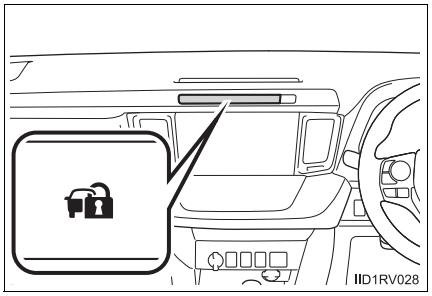

*: If equipped

Deactivating or stopping the alarm

Do one of the following to deactivate or stop the alarms:

- Unlock the doors using the entry function or wireless remote control.
- Start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)

System maintenance

The vehicle has a maintenance-free type alarm system.

Items to check before locking the vehicle


To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:

- Nobody is in the vehicle.
- The windows and moon roof (if equipped) are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.


Triggering of the alarm

The alarm may be triggered in the following situations:
(Stopping the alarm deactivates the alarm system.)


- The doors are unlocked using the mechanical key.

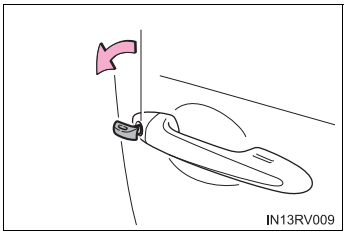

- A person inside the vehicle opens a door or hood.

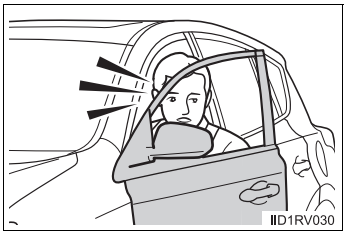

- The 12-volt battery is recharged or replaced when the vehicle is locked. (→P. 632)

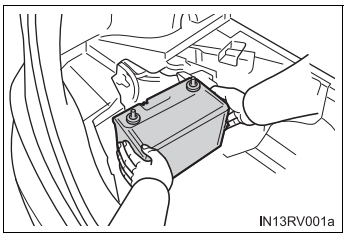

Alarm-operated door lock

In the following cases, depending on the situation, the door may automatically lock to prevent improper entry into the vehicle:

- When a person remaining in the vehicle, unlocks the door and the alarm is activated.
- While the alarm is activated, a person remaining in the vehicle unlocks the door.
- When recharging or replacing the 12-volt battery.

Customization

The alarm can be set to deactivate when the mechanical key is used to unlock.
(Customizable features: →P. 664)

NOTICE

To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Intrusion sensor and tilt sensor

- The intrusion sensor detects intruders or movement in the vehicle.
- The tilt sensor detects changes in vehicle inclination, such as when the vehicle is towed away. (if equipped)

This system is designed to deter and prevent vehicle theft but does not guarantee absolute security against all intrusions.

Setting the intrusion sensor and tilt sensor

The intrusion sensor and tilt sensor will be set automatically when the alarm is set. (→P. 108)

Canceling the intrusion sensor and tilt sensor


If you are leaving pets or other moving things inside the vehicle, make sure to stop the intrusion sensor and tilt sensor before setting the alarm, as they will respond to movement inside the vehicle.

1 Turn the power switch off.

2 Press the intrusion sensor and tilt sensor cancel switch.

To set the alarm with the intrusion sensor and tilt sensor disabled, the alarm must be set within 5 minutes after canceling the sensor.

The intrusion sensor and tilt sensor will revert to on each time the power switch is turned to ON mode.

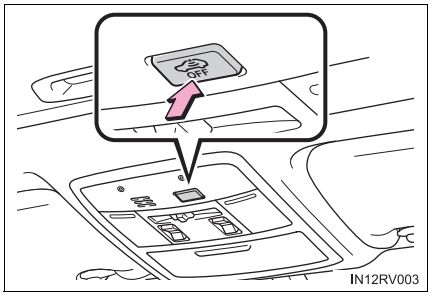


■ **Canceling and automatic re-enabling of the intrusion sensor and tilt sensor**

- The alarm will still be set even when the intrusion sensor and tilt sensor are canceled.
- After the intrusion sensor and tilt sensor are canceled, pressing the power switch or unlocking the doors using the entry function or wireless remote control will re-enable the intrusion sensor and tilt sensor.
- The intrusion sensor and tilt sensor will automatically be re-enabled when the alarm system is deactivated.


■ **Intrusion sensor detection considerations**

The sensor may trigger the alarm in the following situations:

- A window or the moon roof (if equipped) is open.
  In this case, the sensor may detect the following:
  - Wind or the movement of objects such as leaves and insects inside the vehicle

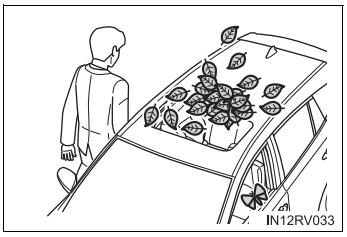

  - Ultrasonic waves emitted from devices such as the intrusion sensors of other vehicles
  - The movement of people outside the vehicle
- Unstable items, such as dangling accessories or clothes hanging on the coat hooks, are in the vehicle.

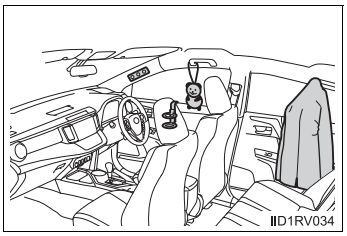

- Places with extreme vibrations or noises, or situations in which the vehicle is subject to repeated impacts or vibrations:
  - When parked in a parking garage
  - When the vehicle is transported by a ferry, trailer, train, etc.
  - When ice adhering to the vehicle is removed
  - When the vehicle is in an automatic or high-pressure car wash
  - When in a hail or lightning storm

■ Tilt sensor detection considerations (if equipped)


The sensor may trigger the alarm in the following situations:

- The vehicle is transported by a ferry, trailer, train, etc.
- The vehicle is parked in a parking garage.
- The vehicle is inside a car wash that moves the vehicle.
- Any of the tires loses air pressure.
- The vehicle is jacked up.
- An earthquake occurs or the road caves in.
- Cargo is loaded onto or unloaded from the roof luggage carrier.


⚠ NOTICE

■ To ensure the intrusion sensor functions correctly

- To ensure that the sensors operate properly, do not touch or cover them.

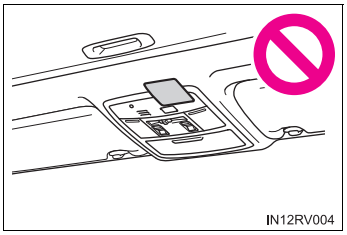

- Do not spray air fresheners or other products directly into the sensor holes.

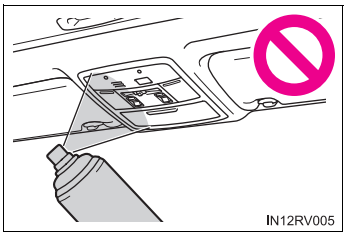

- Installing accessories other than genuine Toyota parts or leaving objects between the driver's seat and front passenger's seat may reduce the detection performance.


Instrument cluster 2

2. Instrument cluster

Warning lights and indicators 116
Gauges and meters 120
Multi-information display 124
Energy monitor/ consumption screen 128

Warning lights and indicators

The warning lights and indicators on the instrument cluster and center panel inform the driver of the status of the vehicle's various systems.
For the purpose of explanation, the following illustration displays all warning lights and indicators illuminated.

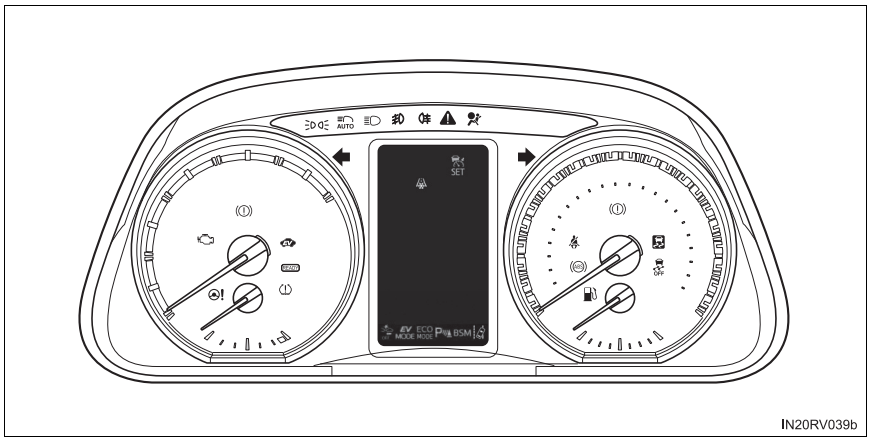

The units used on the meters and some indicators may differ depending on the target region.

Warning lights

Warning lights inform the driver of malfunctions in the indicated vehicle's systems.

*1  (red)
Brake system warning light (→P. 571)

*1  (yellow)
Brake system warning light (→P. 571)

*1 
Malfunction indicator lamp (→P. 571)

*1 
SRS warning light (→P. 572)

*1 
ABS warning light (→P. 572)

*1 
Electric power steering system warning light (→P. 572)

*1, 2  (if equipped)
PCS warning light (→P. 572)

*1 
Slip indicator (→P. 572)


Low fuel level warning light (→P. 573)


Seat belt reminder light (→P. 573)

*3 
Rear passengers' seat belt reminder lights (→P. 573)

*1 
Master warning light (→P. 578)

*1  (if equipped)
Tire pressure warning light (→P. 573)

 (amber) (if equipped)
LDA warning light (→P. 573)

*1: These lights turn on when the power switch is turned to ON mode, to indicate that a system check is being performed. They will turn off after the hybrid system is on, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*2: The light flashes or illuminates to indicate a malfunction.

*3: This light illuminates on the center panel.

Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.


Turn signal indicator (→P. 325)


Tail light indicator (→P. 327)


Headlight high beam indicator (→P. 328)



(if equipped)
Automatic High Beam indicator (→P. 332)


(if equipped)
Front fog light indicator (→P. 336)


Rear fog light indicator (→P. 336)


(if equipped)
Cruise control indicator (→P. 388, 400)


(if equipped)
Dynamic radar cruise control indicator (→P. 388)



Cruise control "SET" indicator (→P. 388, 400)


*1, 2
Slip indicator (→P. 427)



*1
VSC OFF indicator (→P. 427)



"READY" indicator (→P. 311)



*1, 3
(if equipped)
PCS warning light (→P. 363)


*4
Security indicator (→P. 85, 108)



"SPORT" indicator (→P. 320)



"ECO MODE" indicator (→P. 320)



EV indicator (→P. 78)




EV drive mode indicator (→P. 317)


(if equipped)
Toyota parking assist-sensor indicator (→P. 404)


(if equipped)
LDA indicator (→P. 378)

*5 
Ice warning indicator (→P. 590)

*6, 7 
(if equipped)
BSM outside rear view mirror indicators (→P. 412)



(if equipped)
BSM indicator (→P. 412)

*1, 4 

"PASSENGER AIR BAG" indicator (→P. 51)

*1: These lights turn on when the power switch is turned to ON mode, to indicate that a system check is being performed. They will turn off after the hybrid system is on, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*2: The light flashes to indicate that the system is operating.

*3: The light comes on when the system is turned off.

*4: This light illuminates on the center panel.

*5: When the outside temperature is approximately 3°C (37°F) or lower, the indicator will flash for approximately 10 seconds, then stay on.

*6: In order to confirm operation, the BSM outside rear view mirror indicators illuminate in the following situations:

- When the power switch is turned to ON mode while the system is set to on.
- When the system is set to on while the power switch is in ON mode.

If the system is functioning correctly, the BSM outside rear view mirror indicators will turn off after a few seconds.

If the BSM outside rear view mirror indicators do not illuminate or do not turn off, there may be a malfunction with the system. If this occurs, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


*7: This light illuminates on the outside rear view mirrors.

WARNING

■ If a safety system warning light does not come on

Should a safety system light such as the ABS and SRS warning light not come on when you start the hybrid system, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately if this occurs.

Gauges and meters

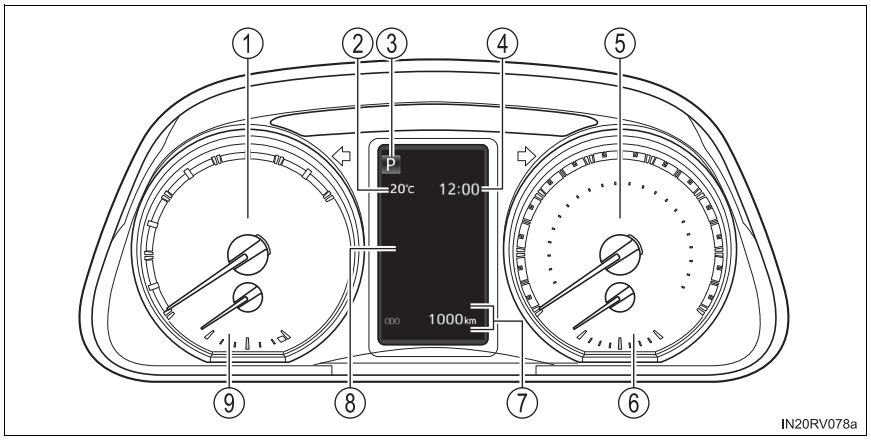

The units used on the meter and display may differ depending on the target region.

① Hybrid System Indicator

Displays hybrid system power output or regeneration level (→P. 122)

② Outside temperature display

→P. 122

③ Shift position and shift range

Displays the selected shift position or selected shift range (→P. 319)

④ Clock

→P. 126

⑤ Speedometer

Displays the vehicle speed

⑥ Fuel gauge

Displays the quantity of fuel remaining in the tank

ⓖ Odometer, trip meter and instrument cluster light control display

Odometer:
Displays the total distance that the vehicle has been driven

Trip meter:
Displays the distance the vehicle has been driven since the meter was last reset. Trip meters “A” and “B” can be used to record and display different distances independently.

Instrument cluster light control:
Displays the brightness of the instrument cluster lights that can be adjusted.

ⓗ Multi-information display

Presents the driver with a variety of driving-related data (→P. 124)


ⓘ Engine coolant temperature gauge

Displays the engine coolant temperature

Changing the odometer, trip meter and instrument cluster light control display

Switches the items of the odometer, trip meter and instrument cluster light control display by pressing the “TRIP” switch.

- When the trip meter is displayed, pressing and holding the “TRIP” switch will reset the trip meter.
- When the instrument cluster light control display is displayed, pressing and holding the “TRIP” switch will adjust the brightness of the instrument cluster lights.

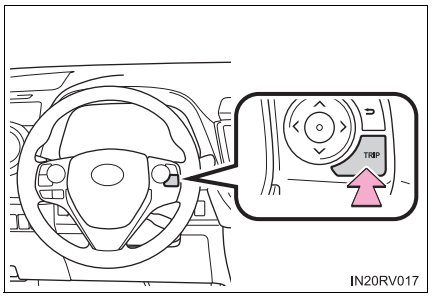


■ The meters and display illuminate when

The power switch is in ON mode.

■ Instrument cluster brightness adjustment

The brightness level of the meters when the surroundings are bright (day mode) and dark (night mode) can be adjusted individually. However, when in day mode, adjusting the brightness level will also change the brightness level of night mode.

■ **Hybrid System Indicator**

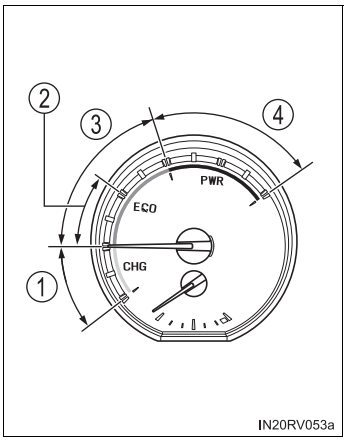

① Charge area
Shows that energy is being recovered via the regenerative brake.

② Hybrid Eco area
Shows that gasoline engine power is not being used very often.

The gasoline engine will automatically stop and restart under various conditions.

③ Eco area
Shows that the vehicle is being driven in an Eco-friendly manner.

④ Power area
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

- By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.
- Charge area indicates regeneration* status. Regenerated energy will be used to charge the hybrid battery (traction battery).

*: When used in this manual, “regeneration” refers to the conversion of energy created by the movement of the vehicle into electrical energy.

■ **Outside temperature display**

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.
  - When stopped, or driving at low speeds (less than 20 km/h [12 mph])
  - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When “--” is displayed, the system may be malfunctioning.
  Take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- The temperature range that can be displayed is from -40°C (-40°F) to 50°C (122°F).

■ **Pop-up display**

In some situations, a pop-up display will be temporarily displayed on the multi-information display.
The pop-up display function can be set on/off. (→P. 126)

WARNING

■ The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.
For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to down-shift again, causing rapid and excessive engine braking and possibly an accident resulting in personal death or injury.

NOTICE


■ To prevent damage to the engine and its components

The engine may be overheating if the engine coolant temperature gauge is in the red zone ("H"). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 635)

Multi-information display

Display contents

The multi-information display presents the driver with a variety of vehicle data.

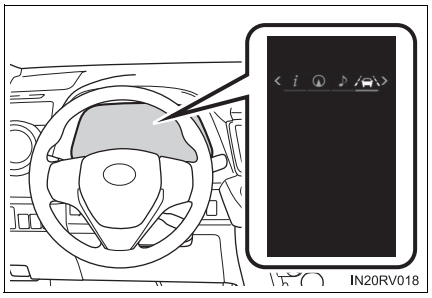

● Menu icons

Displays the following information when an icon is selected. (→P. 125)

Some of the information may be displayed automatically depending on the situation.

Drive information

Select to display various drive data. (→P. 125)

Navigation system-linked display*

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)

Audio system-linked display*

Select to enable selection of an audio source or track on the display using the meter control switches.

Driving assist information*

Select to display the dynamic radar cruise control* or LDA (Lane Departure Alert with steering control)* information, when the system is used. (→P. 374, 388)

The displayed icon changes depending on the system used.

Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected. (→P. 578)

Settings display

Select to change the system settings and meter display settings. (→P. 126)

*: If equipped


Operating the meter control switches

The multi-information display is operated using the meter control switches.

① Enter/Set

② Select an item/change pages

③ Return to the previous screen

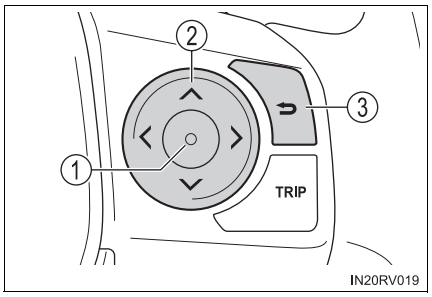

Drive information

Items displayed can be switched by pressing 〈 or 〉 of the meter control switches to select *i* and pressing ∧ or ∨.

■ **Energy monitor**

→P. 128

■ **Average fuel economy (after start/after reset*/after refuel)**

Displays the average fuel consumption since the hybrid system was started, the function was reset and the vehicle was refueled, respectively

Use the displayed average fuel consumption as a reference.

■ **Average speed (after start/after reset*/after refuel)**

Displays the average vehicle speed since the hybrid system was started, the function was reset and the vehicle was refueled, respectively

■ **Range (after refuel)**

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated.
  When refueling, turn the power switch off. If the vehicle is refueled without turning the power switch off, the display may not be updated.

■ **LDA (Lane Departure Alert with steering control) vehicle sway warning (if equipped)**

→P. 374

■ **Display off**

A blank screen is displayed

*: The function can be reset by pressing and holding the ⊙ of the meter control switches when the reset item is displayed.

Settings display

The settings of the following items can be changed, refer to P. 657

For functions that can be enabled or disabled, the function switches between on and off each time ⊙ is pressed.

-  (Lane Departure Alert with steering control)* (→P. 374)
-  (Pre-Crash Safety system)* (→P. 358)
-  (Blind Spot Monitor)* (→P. 412)
-  (Toyota parking assist-sensor)* (→P. 404)
-  (Road Sign Assist)* (→P. 383)
- Clock
  Adjusts the hour and minute, and switches between 12-hour and 24-hour display of the clock.
-  (Power back door)* (→P. 194)
- Meter Settings
  - Language
    Select to change the language on the display.
  - Units
    Select to change the unit of measure for fuel consumption.
  - EV indicator
    Select to activate/deactivate the EV indicator
  - Pop-up display
    Select to set the pop-up displays, which may appear in some situations, on/off.
  - Accent color
    Select to change the accent colors on the screen, such as the cursor color.

- Default settings
  Registered or changed meter settings will be deleted or returned to their default setting.

*: If equipped

■ **System check display**

After turning the power switch to ON mode, opening image is displayed while system operation is checked. When the system check is complete, the normal screen will return.

■ **Suspension of the settings display**

In the following situations, the settings display using the meter control switches will be suspended.

- When a warning message appears on the multi-information display
- When the vehicle begins to move

■ **When disconnecting and reconnecting 12-volt battery terminals**

The drive information will be reset.

■ **Liquid crystal display**

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

WARNING

■ **Caution for use while driving**

For safety, avoid operating the meter control switch while driving as much as possible, and do not look continuously at the multi-information display while driving. Stop the vehicle and operate the meter control switch. Failure to do so may cause a steering wheel operation error, resulting in an unexpected accident.

■ **Cautions during setting up the display**

As the hybrid system needs to be operating during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

NOTICE


■ **During setting up the display**

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while setting up the display features.

Energy monitor/consumption screen

You can view the status of your vehicle on the multi-information display and the audio system screen (if equipped).

① Multi-information display
② Audio system screen (if equipped)
③ Meter control switches

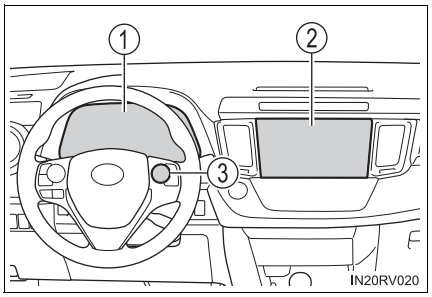





Energy monitor








▶ Multi-information display

Press 〈 or 〉 of the meter control switches and select *i*, and then press ∧ or ∨ to select the energy monitor display.

▶ Audio system screen (if equipped)

Press the “CAR” button, and then select “Energy monitor” on the screen.

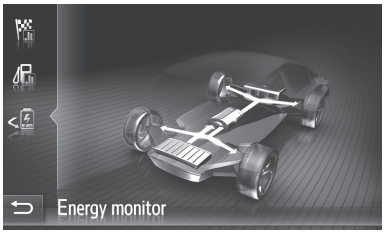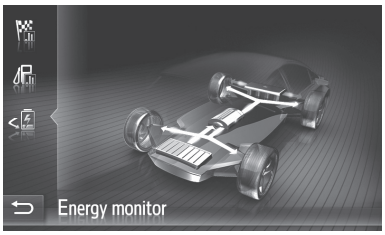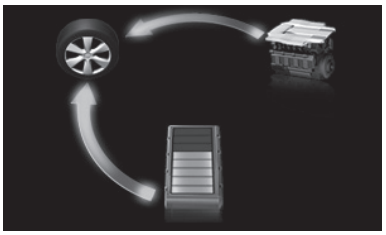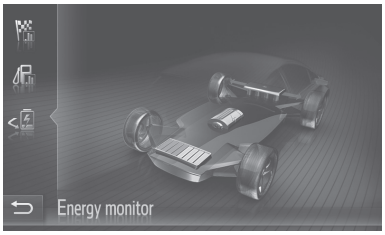Audio system screen	Multi-information display
When the vehicle is powered by the electric motor (traction motor)	
	
When the vehicle is powered by both the gasoline engine and the electric motor (traction motor)	
	
When the vehicle is powered by the gasoline engine	
	

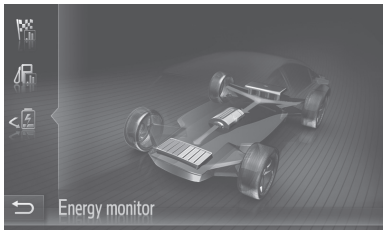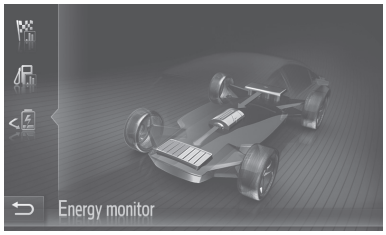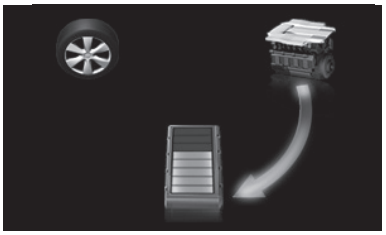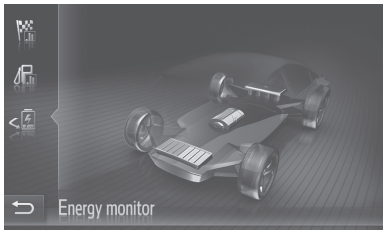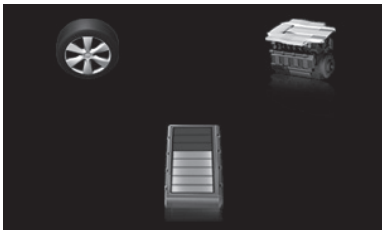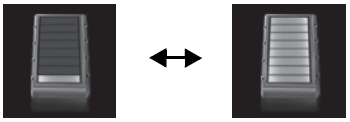
Audio system screen	Multi-information display
When the vehicle is charging the hybrid battery (traction battery)	
	
	
When there is no energy flow	
	
Hybrid battery (traction battery) status	
Low Full 	Low Full 

These images are examples only, and may vary slightly from actual conditions.

Fuel consumption (if equipped)

Press the “CAR” button, and then select “Trip information” or “Past record” on the screen.

■ Trip information

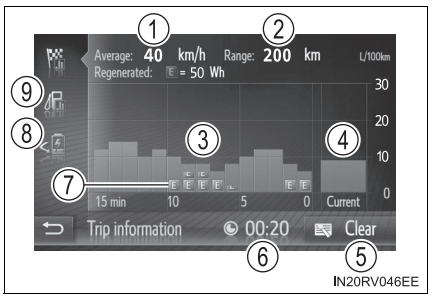

① Average vehicle speed

② Cruising range

③ Previous fuel consumption per minute

④ Current fuel consumption

⑤ Reset the trip information data

⑥ Elapsed time

⑦ Regenerated energy in the past 15 minutes


⑧ “Energy monitor” screen appears

⑨ “Past record” screen appears

Average fuel consumption for the past 15 minutes is divided by color into past averages and averages attained since the power switch was last turned to ON mode. Use the displayed average fuel consumption as a reference.

These images are examples only, and may vary slightly from actual conditions.

■ **Past record**

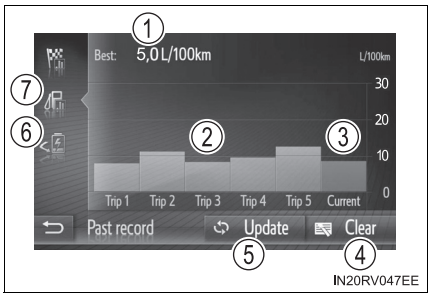

① Best recorded fuel consumption

② Previous fuel consumption record

③ Current fuel consumption

④ Reset the past record data

⑤ Update the past record data

⑥ “Energy monitor” screen appears

⑦ “Trip information” screen appears

These images are examples only, and may vary slightly from actual conditions.

■ **Resetting the data**

- Selecting “Clear” on the “Trip information” screen will reset the trip information data.
- Selecting “Clear” on the “Past record” screen will reset the past record data.

■ **Updating the past record data**

Selecting “Update” on the “Past record” screen will update the past record data.
Also, the average fuel consumption displayed in the multi-information display will be reset at the same time.

■ **Cruising range**

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.
This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.

Operation of each component 3

3-1. Key information
Keys.....134
3-2. Opening, closing and locking the doors
Side doors.....186
Back door.....191
Smart entry & start system 207
3-3. Adjusting the seats
Front seats.....263
Rear seats 265
Driving position memory 268
Head restraints 270
3-4. Adjusting the steering wheel and mirrors
Steering wheel.....273
Inside rear view mirror 275
Outside rear view mirrors 277
3-5. Opening, closing the windows and moon roof
Power windows.....280
Moon roof.....283

Keys


The keys

The following keys are provided with the vehicle.

① Electronic keys
- Operating the smart entry & start system (→P. 207)
- Operating the wireless remote control function

② Mechanical keys

③ Key number plate

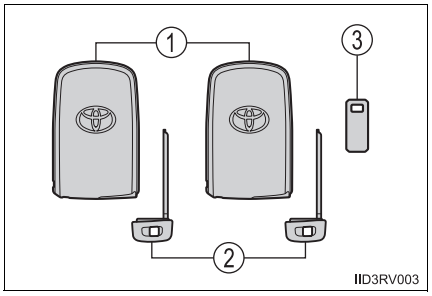


Wireless remote control

① Locks all the doors (→P. 186)

② Unlocks all the doors (→P. 186)

③ Opens and closes the power back door* (→P. 191)


*: If equipped

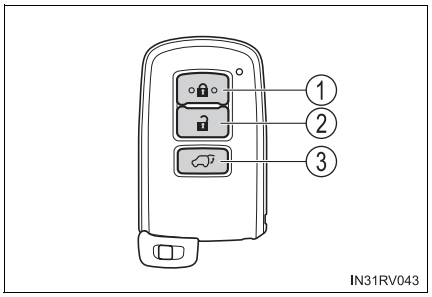

Using the mechanical key

To take out the mechanical key, push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

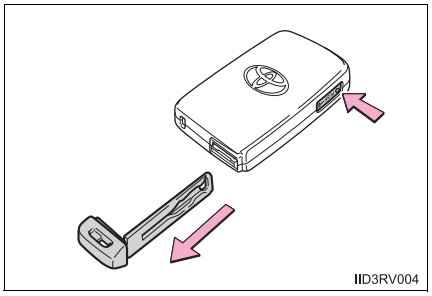

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. (→P. 627)

■ **When required to leave the vehicle's key with a parking attendant**

Lock the glove box as circumstances demand. (→P. 459)

Remove the mechanical key for your own use and provide the attendant with the electronic key only.

■ **If you lose your mechanical keys**

New genuine mechanical keys can be made by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer using the other mechanical key and the key number stamped on your key number plate. Keep the plate in a safe place such as your wallet, not in the vehicle.

■ **When riding in an aircraft**

When bringing a key with wireless remote control function onto an aircraft, make sure you do not press any buttons on the key while inside the aircraft cabin. If you are carrying the key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the key to emit radio waves that could interfere with the operation of the aircraft.

■ **Conditions affecting operation**

→P. 209

■ **Replacing the battery**

→P. 543

■ **Confirmation of the registered key number**

The number of keys already registered to the vehicle can be confirmed. Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.

■ **If a wrong key is used**

The key cylinder rotates freely to isolate inside mechanism.

■ **Customization**

Settings (e.g. wireless remote control system) can be changed.
(Customizable features: →P. 662)

■ Certification for wireless remote control

TOYOTA

TOYOTA MOTOR CORPORATION

1, TOYOTA-CHO, TOYOTA, AICHI, 471-8571, JAPAN TEL: +81-565-28-2121

EU Declaration of Conformity

CE

1. Radio equipment (Product / Type):

   Smart LF Oscillator / TMLF10-51

2. Name and address of the manufacturer:

   TOYOTA MOTOR CORPORATION
   1, Toyota -cho, Toyota, Aichi, 471-8572, Japan

3. This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Object of the declaration:

   TMLF10-51

5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

   Directive 2014/53/EU

6. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

(Health & safety requirements)	EN 60950-1:2006 + Amd.11:2009 + Amd.1:2010 + Amd.12:2011
(EMC requirements)	EN 301 489-1 V1.9.2 & EN 301 489-3 V1.4.1
(Effective uses of radio spectrum)	EN 300 330 V2.1.1

7. The notified body:

   Not Applicable

8. Accessories and components, including software, which allow the radio equipment to operate as intended and covered by the EU declaration of conformity:

   Not Applicable

9. Additional information:

   None

Place and date of issue: Japan, April 10, 2017

Signature: Tomoo Kakegawa

Function: Tomoo Kakegawa, General Manager

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type TMLF10-51 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://my.toyota.eu Frequency band: 119 - 135 kHz Maximum radio-frequency power: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi TMLF10-51 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://my.toyota.eu Radiotaajuus: 119 - 135 kHz suurin mahdollinen lähetysteho: 55dBμA/m @10m
Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur TMLF10-51 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://my.toyota.eu Frequentieband: 119 - 135 kHz Maximaal radiofrequentievermogen: 55dBμA/m @10m

Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type TMLF10-51 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://my.toyota.eu Bande de fréquences: 119 - 135 kHz Puissance de radiofréquence maximale: 55dBμA/m @10m
Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning TMLF10-51 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://my.toyota.eu Frekvensband: 119 - 135 kHz Maximal radiofrekvenseffekt: 55dBμA/m @10m
Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen TMLF10-51 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m

Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp TMLF10-51 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://my.toyota.eu Frequenzband: 119 - 135 kHz Abgestrahlte maximale Sendeleistung: 55dBμA/m @10m
Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός TMLF10-51 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://my.toyota.eu Ζώνη συχνοτήτων: 119 - 135 kHz Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m @10m
Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio TMLF10-51 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://my.toyota.eu Banda di frequenza: 119 - 135 kHz Potenza massima radiofrequenza: 55dBμA/m @10m

Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico TMLF10-51 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://my.toyota.eu Banda de frecuencia: 119 - 135 kHz Potencia máxima de radiofrecuencia: 55dBμA/m @10m
O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio TMLF10-51 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://my.toyota.eu Banda de frequência: 119 - 135 kHz Potência máxima de radiofrequências: 55dBμA/m @10m
B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju TMLF10-51 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m

Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp TMLF10-51 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://my.toyota.eu Sagedusriba: 119 - 135 kHz Maksimaalne saatevõimsus: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION igazolja, hogy a TMLF10-51 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://my.toyota.eu Frekvenciasáv: 119 - 135 kHz Maximális jelerősség: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu TMLF10-51 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://my.toyota.eu Frekvenčné pásmo: 119 - 135 kHz Maximálny rádiofrekvenčný výkon: 55dBμA/m @10m

Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení TMLF10-51 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://my.toyota.eu Kmitočtové pásmo: 119 - 135 kHz Maximální radiofrekvenční výkon: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme TMLF10-51 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://my.toyota.eu Frekvenčni pas: 119 - 135 kHz Največja moč radijske frekvence: 55dBμA/m @10m
Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas TMLF10-51 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://my.toyota.eu Dažnių juosta: 119 - 135 kHz Didžiausia radijo dažnių galia: 55dBμA/m @10m

Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta TMLF10-51 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://my.toyota.eu Frekvenču josla: 119 - 135 kHz Maksimālā radiofrekvenču jauda: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego TMLF10-51 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://my.toyota.eu Zakres częstotliwości: 119 - 135 kHz Maksymalna moc częstotliwości radiowej: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð TMLF10-51 er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m

TOYOTA MOTOR CORPORATION erklærer herved at radioutstyrtypen TMLF10-51 er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m
С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение TMLF10-51 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://my.toyota.eu Радиочестотна лента: 119 - 135 kHz Максимална радиочестотна мощност: 55dBμA/m @10m
Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio TMLF10-51 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://my.toyota.eu Banda de frecvență: 119 - 135 kHz Puterea maximă de radiofrecvență: 55dBμA/m @10m

Ovime TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF10-51 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://my.toyota.eu Frekvencijski opseg: 119 - 135 kHz Maksimalna radio-frekvencijska snaga: 55dBµA/m @10m
Me anë të këtij dokumenti, TOYOTA MOTOR CORPORATION deklaron se tipi i radiopajisjes TMLF10-51 është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://my.toyota.eu Brezi i frekuencës: 119 - 135 kHz Fuqia maksimale e radiofrekuencës: 55dBµA/m @10m
TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa TMLF10-51 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://my.toyota.eu Frekvencijski pojas: 119 - 135 kHz Maksimalna RF snaga: 55dBµA/m @10m

Ovim TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF10-51 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://my.toyota.eu Frekventni opseg: 119 - 135 kHz Maksimalna radio-frekventna snaga: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION, işbu belgeyle telsiz cihazı türünün TMLF10-51 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://my.toyota.eu Frekans bandı: 119 - 135 kHz Maksimum radyo frekans gücü: 55dBμA/m @10m

TOYOTA

TOYOTA MOTOR CORPORATION

1, TOYOTA-CHO, TOYOTA, AICHI, 471-8571, JAPAN TEL: +81-565-28-2121

EU Declaration of Conformity

CE

1. Radio equipment (Product / Type):

   Smart LF Oscillator / TMLF10-54

2. Name and address of the manufacturer:

   TOYOTA MOTOR CORPORATION
   1, Toyota -cho, Toyota, Aichi, 471-8572, Japan

3. This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Object of the declaration:

   TMLF10-54

5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

   Directive 2014/53/EU

6. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

(Health & safety requirements)	EN 60950-1:2006 + Amd.11:2009 + Amd.1:2010 + Amd.12:2011
(EMC requirements)	EN 301 489-1 V1.9.2 & EN 301 489-3 V1.6.1
(Effective uses of radio spectrum)	EN 300 330 V2.1.1

7. The notified body:

   Not Applicable

8. Accessories and components, including software, which allow the radio equipment to operate as intended and covered by the EU declaration of conformity:

   Not Applicable

9. Additional information:

   None

Place and date of issue: Japan, April 10, 2017

Signature: Tomoo Kakegawa

Function: Tomoo Kakegawa
General Manager

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type TMLF10-54 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://my.toyota.eu Frequency band: 119 - 135 kHz Maximum radio-frequency power: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi TMLF10-54 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://my.toyota.eu Radiotaajuus: 119 - 135 kHz suurin mahdollinen lähetysteho: 55dBμA/m @10m
Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur TMLF10-54 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://my.toyota.eu Frequentieband: 119 - 135 kHz Maximaal radiofrequentievermogen: 55dBμA/m @10m

Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type TMLF10-54 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://my.toyota.eu Bande de fréquences: 119 - 135 kHz Puissance de radiofréquence maximale: 55dBμA/m @10m
Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning TMLF10-54 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://my.toyota.eu Frekvensband: 119 - 135 kHz Maximal radiofrekvenseffekt: 55dBμA/m @10m
Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen TMLF10-54 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m

Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp TMLF10-54 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://my.toyota.eu Frequenzband: 119 - 135 kHz Abgestrahlte maximale Sendeleistung: 55dBμA/m @10m
Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός TMLF10-54 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://my.toyota.eu Ζώνη συχνοτήτων: 119 - 135 kHz Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m @10m
Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio TMLF10-54 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://my.toyota.eu Banda di frequenza: 119 - 135 kHz Potenza massima radiofrequenza: 55dBμA/m @10m

Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico TMLF10-54 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://my.toyota.eu Banda de frecuencia: 119 - 135 kHz Potencia máxima de radiofrecuencia: 55dBμA/m @10m
O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio TMLF10-54 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://my.toyota.eu Banda de frequência: 119 - 135 kHz Potência máxima de radiofrequências: 55dBμA/m @10m
B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju TMLF10-54 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m

Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp TMLF10-54 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://my.toyota.eu Sagedusriba: 119 - 135 kHz Maksimaalne saatevõimsus: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION igazolja, hogy a TMLF10-54 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://my.toyota.eu Frekvenciasáv: 119 - 135 kHz Maximális jelerősség: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu TMLF10-54 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://my.toyota.eu Frekvenčné pásmo: 119 - 135 kHz Maximálny rádiofrekvenčný výkon: 55dBμA/m @10m

Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení TMLF10-54 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://my.toyota.eu Kmitočtové pásmo: 119 - 135 kHz Maximální radiofrekvenční výkon: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme TMLF10-54 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://my.toyota.eu Frekvenčni pas: 119 - 135 kHz Največja moč radijske frekvence: 55dBμA/m @10m
Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas TMLF10-54 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://my.toyota.eu Dažnių juosta: 119 - 135 kHz Didžiausia radijo dažnių galia: 55dBμA/m @10m

Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta TMLF10-54 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://my.toyota.eu Frekvenču josla: 119 - 135 kHz Maksimālā radiofrekvenču jauda: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego TMLF10-54 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://my.toyota.eu Zakres częstotliwości: 119 - 135 kHz Maksymalna moc częstotliwości radiowej: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð TMLF10-54 er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m

TOYOTA MOTOR CORPORATION erklærer herved at radioutstyrtypen TMLF10-54 er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m
С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение TMLF10-54 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://my.toyota.eu Радиочестотна лента: 119 - 135 kHz Максимална радиочестотна мощност: 55dBμA/m @10m
Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio TMLF10-54 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://my.toyota.eu Banda de frecvență: 119 - 135 kHz Puterea maximă de radiofrecvență: 55dBμA/m @10m

Ovime TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF10-54 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://my.toyota.eu Frekvencijski opseg: 119 - 135 kHz Maksimalna radio-frekvencijska snaga: 55dBµA/m @10m
Me anë të këtij dokumenti, TOYOTA MOTOR CORPORATION deklaron se tipi i radiopajisjes TMLF10-54 është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://my.toyota.eu Brezi i frekuencës: 119 - 135 kHz Fuqia maksimale e radiofrekuencës: 55dBµA/m @10m
TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa TMLF10-54 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://my.toyota.eu Frekvencijski pojas: 119 - 135 kHz Maksimalna RF snaga: 55dBµA/m @10m

Ovim TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF10-54 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://my.toyota.eu Frekventni opseg: 119 - 135 kHz Maksimalna radio-frekventna snaga: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION, işbu belgeyle telsiz cihazı türünün TMLF10-54 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://my.toyota.eu Frekans bandı: 119 - 135 kHz Maksimum radyo frekans gücü: 55dBμA/m @10m

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BA1EQ is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.tokai-rika.co.jp/pc Frequency band: 433.050 - 434.790 MHz Maximum radio-frequency power: 10mW(ERP)
TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BA1EQ on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.tokai-rika.co.jp/pc Radiotaajuus: 433.050 - 434.790 MHz suurin mahdollinen lähetysteho: 10mW(ERP)
Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BA1EQ conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tokai-rika.co.jp/pc Frequentieband: 433.050 - 434.790 MHz Maximaal radiofrequentievermogen: 10mW(ERP)

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BA1EQ est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tokai-rika.co.jp/pc Bande de fréquences: 433.050 - 434.790 MHz Puissance de radiofréquence maximale: 10mW(ERP)
Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BA1EQ överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc Frekvensband: 433.050 - 434.790 MHz Maximal radiofrekvenseffekt: 10mW(ERP)
Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BA1EQ er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BA1EQ der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.tokai-rika.co.jp/pc Frequenzband: 433.050 - 434.790 MHz Abgestrahlte maximale Sendeleistung: 10mW(ERP)
Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BA1EQ πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.tokai-rika.co.jp/pc Ζώνη συχνοτήτων: 433.050 - 434.790 MHz Μέγιστη ισχύς ραδιοσυχνότητας: 10mW(ERP)
Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BA1EQ è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.tokai-rika.co.jp/pc Banda di frequenza: 433.050 - 434.790 MHz Potenza massima radiofrequenza: 10mW(ERP)

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BA1EQ es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.tokai-rika.co.jp/pc Banda de frecuencia: 433.050 - 434.790 MHz Potencia máxima de radiofrecuencia: 10mW(ERP)
O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BA1EQ está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc Banda de frequência: 433.050 - 434.790 MHz Potência máxima de radiofrequências: 10mW(ERP)
B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BA1EQ huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc Tíðnisvið: 433.050 - 434.790 MHz Hámarks útvarpsbylgjutíðni: 10mW(ERP)

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BA1EQ vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://www.tokai-rika.co.jp/pc Sagedusriba: 433.050 - 434.790 MHz Maksimaalne saatevõimsus: 10mW(ERP)
TOKAI RIKA CO., LTD. igazolja, hogy a BA1EQ típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.tokai-rika.co.jp/pc Frekvenciasáv: 433.050 - 434.790 MHz Maximális jelerősség: 10mW(ERP)
TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BA1EQ je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.tokai-rika.co.jp/pc Frekvenčné pásmo: 433.050 - 434.790 MHz Maximálny rádiofrekvenčný výkon: 10mW(ERP)

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BA1EQ je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.tokai-rika.co.jp/pc Kmitočtové pásmo: 433.050 - 434.790 MHz Maximální radiofrekvenční výkon: 10mW(ERP)
TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BA1EQ skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.tokai-rika.co.jp/pc Frekvenčni pas: 433.050 - 434.790 MHz Največja moč radijske frekvence: 10mW(ERP)
Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BA1EQ atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.tokai-rika.co.jp/pc Dažnių juosta: 433.050 - 434.790 MHz Didžiausia radijo dažnių galia: 10mW(ERP)

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BA1EQ atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.tokai-rika.co.jp/pc Frekvenču josla: 433.050 - 434.790 MHz Maksimālā radiofrekvenču jauda: 10mW(ERP)
TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BA1EQ jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tokai-rika.co.jp/pc Zakres częstotliwości: 433.050 - 434.790 MHz Maksymalna moc częstotliwości radiowej: 10mW(ERP)
TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BA1EQ er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc Tíðnisvið: 433.050 - 434.790 MHz Hámarks útvarpsbylgjutíðni: 10mW(ERP)

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BA1EQ er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://www.tokai-rika.co.jp/pc Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)
С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BA1EQ е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.tokai-rika.co.jp/pc Радиочестотна лента: 433.050 - 434.790 MHz Максимална радиочестотна мощност: 10mW(ERP)
Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BA1EQ este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.tokai-rika.co.jp/pc Banda de frecvență: 433.050 - 434.790 MHz Puterea maximă de radiofrecvență: 10mW(ERP)

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BA1EQ u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://www.tokai-rika.co.jp/pc Frekvencijski opseg: 433.050 - 434.790 MHz Maksimalna radio-frekvencijska snaga: 10mW(ERP)
Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BA1EQ është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc Brezi i frekuencës: 433.050 - 434.790 MHz Fuqia maksimale e radiofrekuencës: 10mW(ERP)
TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BA1EQ u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.tokai-rika.co.jp/pc Frekvencijski pojas: 433.050 - 434.790 MHz Maksimalna RF snaga: 10mW(ERP)

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BA1EQ u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:
http://www.tokai-rika.co.jp/pc

Frekventni opseg: 433.050 - 434.790 MHz
Maksimalna radio-frekventna snaga: 10mW(ERP)

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BA1EQ 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:
http://www.tokai-rika.co.jp/pc

Frekans bandı: 433.050 - 434.790 MHz
Maksimum radyo frekans gücü: 10mW(ERP)

CE

Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan


И 005 15

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BA2EQ is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.tokai-rika.co.jp/pc Frequency band: 433.050 - 434.790 MHz Maximum radio-frequency power: 10mW(ERP)
TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BA2EQ on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.tokai-rika.co.jp/pc Radiotaajuus: 433.050 - 434.790 MHz suurin mahdollinen lähetysteho: 10mW(ERP)
Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BA2EQ conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tokai-rika.co.jp/pc Frequentieband: 433.050 - 434.790 MHz Maximaal radiofrequentievermogen: 10mW(ERP)

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BA2EQ est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tokai-rika.co.jp/pc Bande de fréquences: 433.050 - 434.790 MHz Puissance de radiofréquence maximale: 10mW(ERP)
Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BA2EQ överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc Frekvensband: 433.050 - 434.790 MHz Maximal radiofrekvenseffekt: 10mW(ERP)
Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BA2EQ er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BA2EQ der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.tokai-rika.co.jp/pc Frequenzband: 433.050 - 434.790 MHz Abgestrahlte maximale Sendeleistung: 10mW(ERP)
Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BA2EQ πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.tokai-rika.co.jp/pc Ζώνη συχνοτήτων: 433.050 - 434.790 MHz Μέγιστη ισχύς ραδιοσυχνότητας: 10mW(ERP)
Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BA2EQ è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.tokai-rika.co.jp/pc Banda di frequenza: 433.050 - 434.790 MHz Potenza massima radiofrequenza: 10mW(ERP)

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BA2EQ es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.tokai-rika.co.jp/pc Banda de frecuencia: 433.050 - 434.790 MHz Potencia máxima de radiofrecuencia: 10mW(ERP)
O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BA2EQ está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc Banda de frequência: 433.050 - 434.790 MHz Potência máxima de radiofrequências: 10mW(ERP)
B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BA2EQ huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc Tíðnisvið: 433.050 - 434.790 MHz Hámarks útvarpsbylgjutíðni: 10mW(ERP)

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BA2EQ vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://www.tokai-rika.co.jp/pc Sagedusriba: 433.050 - 434.790 MHz Maksimaalne saatevõimsus: 10mW(ERP)
TOKAI RIKA CO., LTD. igazolja, hogy a BA2EQ típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.tokai-rika.co.jp/pc Frekvenciasáv: 433.050 - 434.790 MHz Maximális jelerősség: 10mW(ERP)
TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BA2EQ je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.tokai-rika.co.jp/pc Frekvenčné pásmo: 433.050 - 434.790 MHz Maximálny rádiofrekvenčný výkon: 10mW(ERP)

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BA2EQ je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.tokai-rika.co.jp/pc Kmitočtové pásmo: 433.050 - 434.790 MHz Maximální radiofrekvenční výkon: 10mW(ERP)
TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BA2EQ skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.tokai-rika.co.jp/pc Frekvenčni pas: 433.050 - 434.790 MHz Največja moč radijske frekvence: 10mW(ERP)
Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BA2EQ atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.tokai-rika.co.jp/pc Dažnių juosta: 433.050 - 434.790 MHz Didžiausia radijo dažnių galia: 10mW(ERP)

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BA2EQ atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.tokai-rika.co.jp/pc Frekvenču josla: 433.050 - 434.790 MHz Maksimālā radiofrekvenču jauda: 10mW(ERP)
TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BA2EQ jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tokai-rika.co.jp/pc Zakres częstotliwości: 433.050 - 434.790 MHz Maksymalna moc częstotliwości radiowej: 10mW(ERP)
TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BA2EQ er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc Tíðnisvið: 433.050 - 434.790 MHz Hámarks útvarpsbylgjutíðni: 10mW(ERP)

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BA2EQ er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://www.tokai-rika.co.jp/pc Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)
С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BA2EQ е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.tokai-rika.co.jp/pc Радиочестотна лента: 433.050 - 434.790 MHz Максимална радиочестотна мощност: 10mW(ERP)
Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BA2EQ este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.tokai-rika.co.jp/pc Banda de frecvență: 433.050 - 434.790 MHz Puterea maximă de radiofrecvență: 10mW(ERP)

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BA2EQ u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://www.tokai-rika.co.jp/pc Frekvencijski opseg: 433.050 - 434.790 MHz Maksimalna radio-frekvencijska snaga: 10mW(ERP)
Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BA2EQ është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc Brezi i frekuencës: 433.050 - 434.790 MHz Fuqia maksimale e radiofrekuencës: 10mW(ERP)
TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BA2EQ u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.tokai-rika.co.jp/pc Frekvencijski pojas: 433.050 - 434.790 MHz Maksimalna RF snaga: 10mW(ERP)

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BA2EQ u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://www.tokai-rika.co.jp/pc Frekventni opseg: 433.050 - 434.790 MHz Maksimalna radio-frekventna snaga: 10mW(ERP)
TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BA2EQ 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://www.tokai-rika.co.jp/pc Frekans bandı: 433.050 - 434.790 MHz Maksimum radyo frekans gücü: 10mW(ERP)

CE

Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BC2UM is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BC2UM on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.tokai-rika.co.jp/pc
Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BC2UM conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tokai-rika.co.jp/pc
Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BC2UM est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tokai-rika.co.jp/pc
Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BC2UM överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BC2UM er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc
Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BC2UM der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.tokai-rika.co.jp/pc
Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BC2UM πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.tokai-rika.co.jp/pc
Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BC2UM è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.tokai-rika.co.jp/pc
Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BC2UM es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.tokai-rika.co.jp/pc

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BC2UM está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc
B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BC2UM huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc
Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BC2UM vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. igazolja, hogy a BC2UM típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BC2UM je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.tokai-rika.co.jp/pc

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BC2UM je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BC2UM skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.tokai-rika.co.jp/pc
Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BC2UM atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.tokai-rika.co.jp/pc
Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BC2UM atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BC2UM jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BC2UM er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BC2UM er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://www.tokai-rika.co.jp/pc
С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BC2UM е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.tokai-rika.co.jp/pc
Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BC2UM este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.tokai-rika.co.jp/pc
Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BC2UM u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://www.tokai-rika.co.jp/pc

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BC2UM është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BC2UM u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.tokai-rika.co.jp/pc
Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BC2UM u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BC2UM 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://www.tokai-rika.co.jp/pc

CE

Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category: 3

NOTICE

■ **To prevent key damage**

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for long periods of time.
- Do not get the keys wet or wash them in an ultrasonic washer etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the electronic key.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers, or medical electrical equipment, such as low-frequency therapy equipment.

■ **Carrying the electronic key on your person**

Carry the electronic key 10 cm (3.9 in.) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 10 cm (3.9 in.) of the electronic key may interfere with the key, causing the key to not function properly.

■ **In case of a smart entry & start system malfunction or other key-related problems**

Take your vehicle with all the electronic keys provided with your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **When an electronic key is lost**


If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately with all remaining electronic keys that was provided with your vehicle.

Side doors

Locking and unlocking the doors from the outside

◆ Smart entry & start system

Carry the electronic key to enable this function.

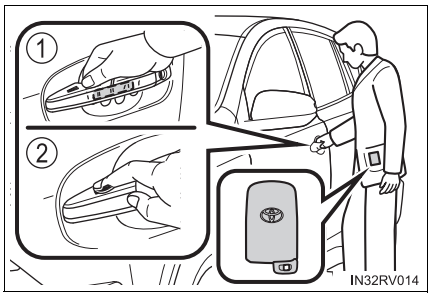


① Grip the door handle to unlock the doors.

Make sure to touch the sensor on the back of the handle.
The doors cannot be unlocked for 3 seconds after the doors are locked.

② Touch the lock sensor (the indentation on the upper part of the door handle) to lock all the doors.

Check that the door is securely locked.

◆ Wireless remote control

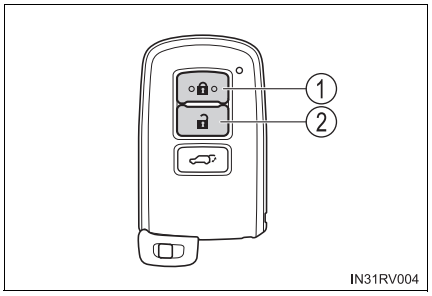

① Locks all the doors

Check that the door is securely locked.

② Unlocks all the doors

■ **Operation signals**


The emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)

■ **Security feature**

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

■ **When the door cannot be locked by the lock sensor on the upper part of the door handle**

If the door will not lock even when the topside sensor area is touched, try touching both the topside and underside sensor areas at the same time.

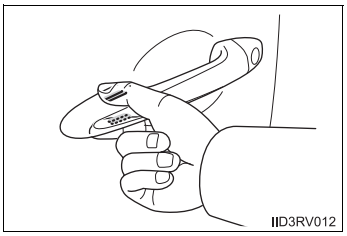

■ **Door lock buzzer**

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously for 5 seconds. Fully close the door to stop the buzzer, and lock the vehicle once more.

■ **Setting the alarm (if equipped)**

Locking the doors will set the alarm system. (→P. 108)

■ **If the smart entry & start system or the wireless remote control does not operate properly**


- Use the mechanical key to lock and unlock the doors. (→P. 627)
- Replace the key battery with a new one if it is depleted. (→P. 543)

Locking and unlocking the doors from the inside

◆ Door lock switch

① Locks all the doors

② Unlocks all the doors

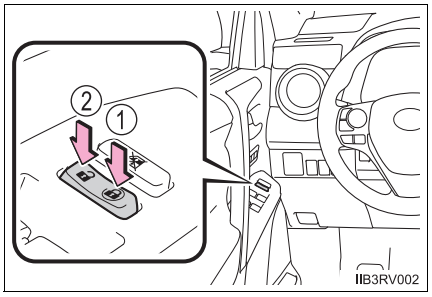


◆ Inside lock buttons

① Locks the door

② Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock button is in the lock position.

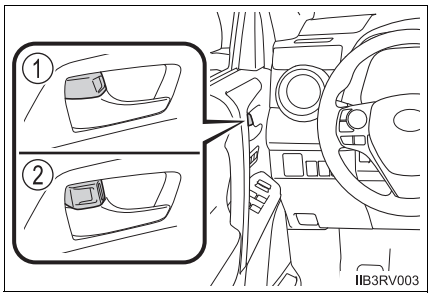

Locking the front doors from the outside without a key

1 Move the inside lock button to the lock position.

2 Close the door while pulling the door handle.

The door cannot be locked if the power switch is in ACCESSORY or ON mode, or the electronic key is left inside the vehicle.

Depending on the position of the electronic key, the key may not be detected correctly and the door may be locked.


Rear door child-protector lock

The door cannot be opened from inside the vehicle when the lock is set.

① Unlock

② Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

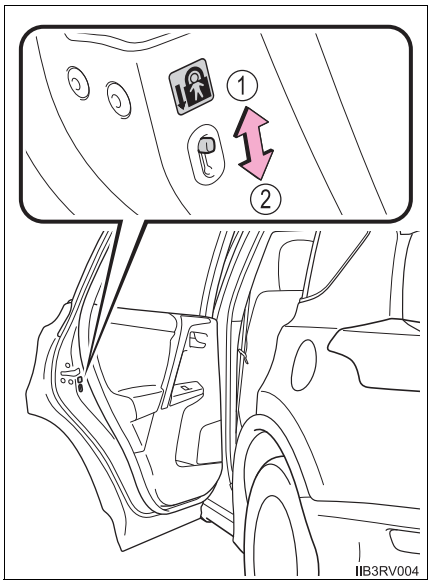

Automatic door locking and unlocking systems

The following functions can be set or canceled:

For instructions on customizing, refer to P. 657.

Function	Operation
Speed linked door locking function	All doors are automatically locked when vehicle speed is approximately 20 km/h (12 mph) or higher.
Shift position linked door locking function	All doors are automatically locked when shifting the shift lever to position other than P.
Shift position linked door unlocking function	All doors are automatically unlocked when shifting the shift lever to P.
Driver's door linked door unlocking function	All doors are automatically unlocked when driver's door is opened.

■ **Impact detection door lock release system**

In the event that the vehicle is subject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

■ **When all the doors are locked with the entry function or wireless remote control**

- The doors cannot be unlocked with the door lock switch.
- The door lock switch can be reset by unlocking all the doors with the entry function or wireless remote control.

■ **Conditions affecting operation**

→P. 209

■ **Customization**

Settings (e.g. unlocking function using a key) can be changed.
(Customizable features: →P. 662)

⚠ WARNING

■ **To prevent an accident**

Observe the following precautions while driving the vehicle.
Failure to do so may result in a door opening and an occupant throwing out of the vehicle, resulting in death or serious injury.

- Ensure that all doors are properly closed.
- Do not pull the inside handle of the doors while driving.
  Be especially careful for the front doors, as the doors may be opened even if the inside lock buttons are in locked position.
- Set the rear door child-protector locks when children are seated in the rear seats.

Back door

The back door can be locked/unlocked and opened/closed by the following procedures.

Locking and unlocking the back door


◆ Smart entry & start system

Carry the electronic key to enable this function.

① Press the button to unlock all the doors.

The doors cannot be unlocked for 3 seconds after the doors are locked.

Lock the back door again when you leave the vehicle. The back door will not lock automatically after it has been opened and then closed.

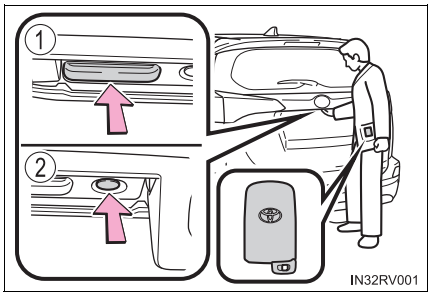

② Press the button to lock all the doors.

Check that the door is securely locked.

◆ Wireless remote control

→P. 186


◆ Door lock switch

→P. 188

Opening/closing the back door from inside the vehicle (vehicles with power back door)


Press and hold the switch to open or close, when the power back door is unlocked. (A buzzer sounds.)

Pressing the switch while the back door is opening/closing stops the operation.

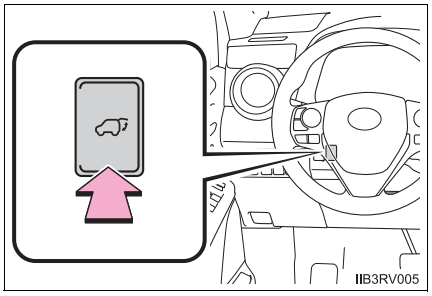

Opening the back door from outside the vehicle

◆ Back door opener

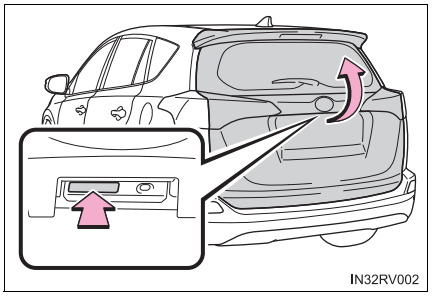
IN32RV002

▶ Vehicles without power back door

Raise the back door while pressing up the back door opener switch.


▶ Vehicles with power back door

When the back door is unlocked: Press the back door opener switch.

When the back door is locked: While carrying the electronic key on your person, press the back door opener switch twice.

Pressing the switch while the back door is opening/closing stops the operation.

◆ Wireless remote control (vehicles with power back door)

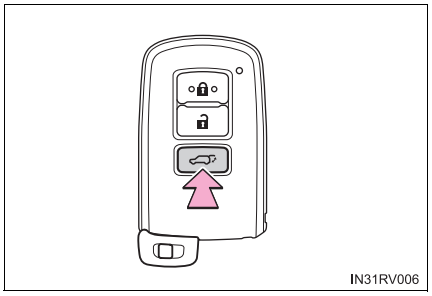

IN31RV006

Press and hold the switch to open/close the power back door.

Pressing the button while the back door is opening/closing stops the operation.

◆ Touchless sensor (vehicles with touchless power back door)

The touchless power back door enables automatic opening and closing of the power back door by putting your foot near the lower center part of the rear bumper and moving it away from the rear bumper. When operating the touchless power back door, make sure that the touchless sensor operation is enabled (→P. 660) and that you are carrying an electronic key.

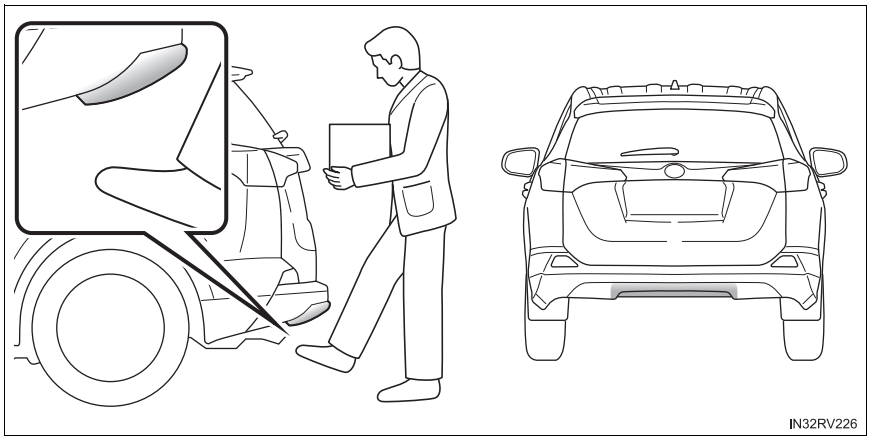

1 While carrying an electronic key, put your foot within 100 mm (3.94 in.) of the lower center part of the rear bumper and move it away from the rear bumper, the touchless sensor detects the movement.

When all of the doors are locked: When the movement is detected by the touchless sensor, all of the doors will be unlocked.


2 Check to make sure that the power back door begins to operate.

To stop the power back door partway or operate it again, use the touchless sensor, or the wireless remote control (→P. 192) or, power back door switch (→P. 194).

Power back door switch (vehicles with power back door)

Pressing the switch closes the back door automatically. (A buzzer sounds.)

Pressing the switch while the back door is opening/closing stops the operation. Pressing the switch again will reverse the operation.

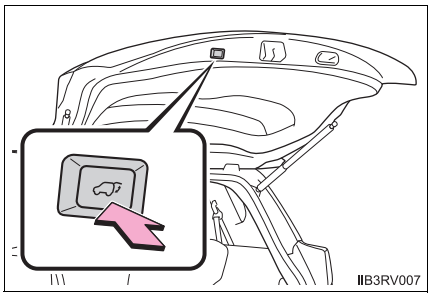

When closing the back door


Lower the back door using the back door handle.

▶ Vehicles without power back door

Make sure to push the back door down from the outside to close it.

▶ Vehicles with power back door

The back door closing assist will activate, and the back door will fully close automatically.

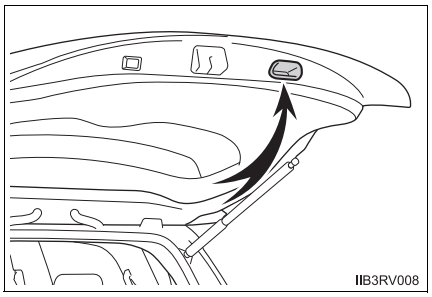

Canceling the power back door system (vehicles with power back door)

The power back door system can be disabled by operating the multi-information display.

1 Press 〈 or 〉 of the meter control switches and select ⚙ on the multi-information display.

2 Press ∧ or ∨ of the meter control switches and select , and then press ⊙.

3 Select “System Settings” and then press ⊙.

4 Press ⊙. (“All Off” will be displayed on the multi-information display.)

Each time ⊙ is pressed, the system will be enabled/disabled.

Canceling the touchless power back door system (vehicles with touchless power back door)

The touchless power back door system can be disabled by operating the multi-information display.

1 Press ❮ or ❯ of the meter control switches and select ⚙ on the multi-information display.

2 Press ∧ or ∨ of the meter control switches and select , and then press ⊙.

3 Select “Touchless Sensor” and then press ⊙.

4 “Push ⊙ to Change Power Back Door foot activation mode” will be displayed on the multi-information display.
Each time ⊙ is pressed, the system will be enabled/disabled.

Adjusting the open position of the back door (vehicles with power back door)

The open position of the power back door can be adjusted.

■ **Using the multi-information display**

1 Press ❮ or ❯ of the meter control switches and select ⚙ on the multi-information display.

2 Press ∧ or ∨ of the meter control switches and select , and then press ⊙.

3 Select “Opening Adjustment” and then press ⊙.

4 Select the desired position and then press ⊙. (→P. 660)

■ **Using the power back door switch**

1 Open the back door, and adjust it to the desired position.


2 Press and hold the power back door switch on the back door until the buzzer sounds 4 times.

■ **Luggage compartment light**

The luggage compartment light turns on when the back door is opened with the luggage compartment light switch on.

① On

② Off

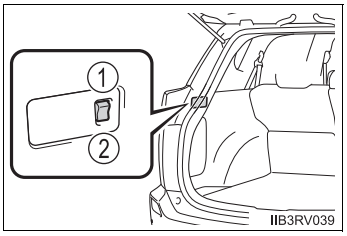


■ **If the back door opener is inoperative**

The back door can be unlocked from the inside.


1 Remove the cover on the back door trim.

Use a cloth to prevent scratches.

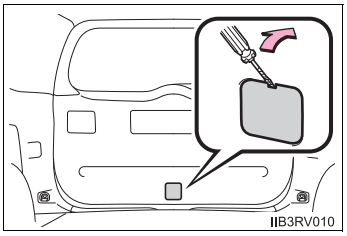


▶ Vehicles without power back door

2 After loosening the screw, move the cover.

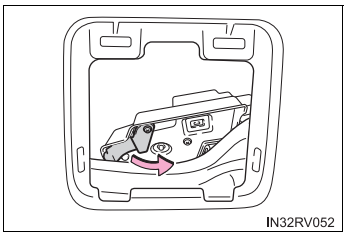


3 Push the lever for the back door motor.

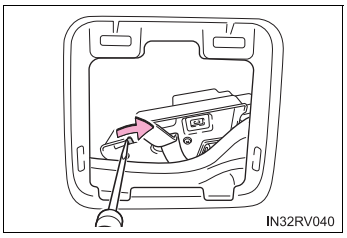


▶ Vehicles with power back door

2 After loosening the screw, move the cover.

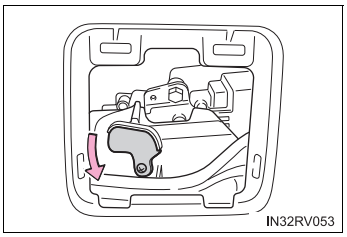

3 Push the lever for the back door motor.

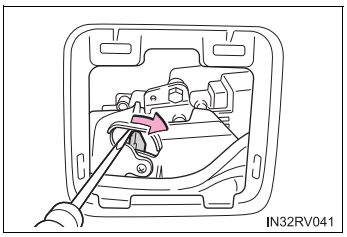

■ **Back door operation**

- The emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)
- Power back door (if equipped): A buzzer sounds and the emergency flashers flash twice to indicate that the back door is opening/closing.
- Power back door (if equipped): The back door can be opened even if it is locked. The back door and side doors will be unlocked when the power back door is opened. Lock all the doors again when you leave the vehicle. All the doors will not lock automatically after the back door has been opened and then closed.

■ **Touchless sensor (vehicles with touchless power back door)**

The power back door will open/close automatically when the touchless sensor operation is enabled (→P. 660) and the following conditions are met:

- The power back door is fully closed/opened.
- The electronic key is within the operational range. (→P. 207)
- A foot is put near the lower center part of the rear bumper and moved away from the rear bumper.
  The power back door may also be operated by putting a hand, an elbow, a knee, etc. near the lower center part of the rear bumper and moving it away from the rear bumper. Make sure to put it close enough to the center part of the rear bumper.

■ **Security feature**

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

■ **Jam protection function (vehicles with power back door)**

If anything obstructs the power back door while it is closing/opening, the back door will automatically operate in the opposite direction or stop.

■ **When reconnecting the 12-volt battery (vehicles with power back door)**

To enable the power back door to operate properly, close the back door manually.

■ **Back door closer (vehicles with power back door)**

In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position.

■ **Fall-down protection function (vehicles with power back door)**

While the power back door is opening automatically, applying excessive force to it will stop the opening operation to prevent the power back door from suddenly shutting.

■ **Back door closing assist (vehicles with power back door)**

If the back door is lowered manually when the back door is stopped at an open position, the back door will fully close automatically.

■ **Canceling the adjusted open position of the back door (vehicles with power back door)**

Press and hold the power back door switch on the back door until the buzzer sounds 4 times, pauses momentarily, and then sounds 2 times. The open position is initialized to the fully opened position.

■ **Situations in which the touchless sensor may operate unintentionally (vehicles with touchless power back door)**

In the following situations, the touchless sensor may operate unintentionally.

To prevent unintentional operation, keep the electronic key out of the luggage compartment and effective range (detection area) or disable the touchless sensor operation. (→P. 660)

- When water is applied to the lower center part of the rear bumper, such as in the rain or in a car wash
- When dirt is wiped off the lower center part of the rear bumper
- When pets or other moving things suddenly enter the area below the rear bumper
- When attempting to remove an object from below the lower center part of the rear bumper
- When accessories or a vehicle cover is installed or removed
- When attempting to remove snow, etc. from below the lower center part of the rear bumper
- When the vehicle is parked at an area where an electromagnetic field is generated
- When the vehicle is parked at an area where there are objects that may move and contact the lower center part of the rear bumper, such as grass or trees

■ **Situations in which the touchless sensor does not operate properly (vehicles with touchless power back door)**

If the touchless sensor does not operate in the following situations, use the back door opener switch or power back door switch or wireless remote control to open the power back door. (→P. 192)

- When the rear bumper is subjected to strong impact
- When an external radio wave source interferes with the communication between the vehicle and electronic key (→P. 209)
- When a large amount of water is kept applying to the lower center part of the rear bumper, such as in heavy rain
- When the vehicle is being washed and water is kept applying to the lower center part of the rear bumper
- When the lower center part of the rear bumper is covered with mud, snow, ice, etc.
- When a metal object, etc., such as a towing hitch is installed near the lower center part of the rear bumper
- When the vehicle has been parked for a while near objects that may move and contact the lower center part of the rear bumper, such as grass or trees
- When the vehicle is parked at an area where an electromagnetic field is generated, such as a road with an electric snow melting system or parking meters

■ **Customization (vehicles with power back door)**

Settings (e.g. power back door opening angle) can be changed.
(Customizable features: →P. 660)

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ Before driving

- Make sure that the back door is fully closed. If the back door is not fully closed, it may open unexpectedly while driving and hit near-by objects or luggage in the luggage compartment may be thrown out, causing an accident.
- Do not allow children to play in the luggage compartment.
  If a child is accidentally locked in the luggage compartment, they could have heat exhaustion or other injuries.
- Do not allow a child to open or close the back door.
  Doing so may cause the back door to operate unexpectedly, or cause the child's hands, head, or neck to be caught by the closing back door.

■ Important points while driving

- Keep the back door closed while driving.
  If the back door is left open, it may hit near-by objects or luggage in the luggage compartment may be thrown out, causing an accident.
- Never let anyone sit in the luggage compartment. In the event of sudden braking, sudden swerving or a collision, they are susceptible to death or serious injury.


■ Operating the back door

Observe the following precautions.
Failure to do so may cause parts of the body to be caught, resulting in death or serious injury.


- Remove any heavy loads, such as snow and ice, from the back door before opening it. Failure to do so may cause the back door suddenly shut again after it is opened.
- When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind.

WARNING

- Vehicles without power back door: The back door may suddenly shut if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. Make sure that the back door is fully open and secure before using the luggage compartment.

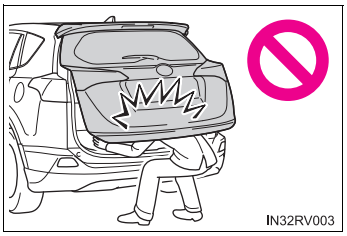


- When closing the back door, take extra care to prevent your fingers etc. from being caught.
- Vehicles without power back door: When closing the back door, make sure to press it lightly on its outer surface. If the back door handle is used to fully close the back door, it may result in hands or arms being caught.

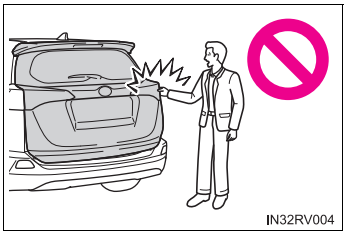

- Do not pull on the back door damper stay (vehicles without power back door) or back door spindle (vehicles with power back door) to close the back door, and do not hang on the back door damper stay (vehicles without power back door) or back door spindle (vehicles with power back door).
  Doing so may cause hands to be caught or the back door damper stay (vehicles without power back door) or back door spindle (vehicles with power back door) to break, causing an accident.
- Vehicles without power back door: If a bicycle carrier or similar heavy object is attached to a back door, it may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Toyota part is recommended.

WARNING

■ **Back door closer (vehicles with power back door)**

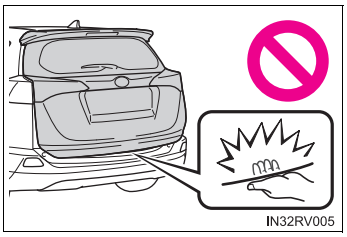

- In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position. It takes several seconds before the back door closer begins to operate. Be careful not to catch fingers or anything else in the back door, as this may cause bone fractures or other serious injuries.
- Use caution when using the back door closer as it still operates when the power back door system is canceled.

■ **Power back door (if equipped)**

Observe the following precautions when operating the power back door. Failure to do so may cause death or serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- If the power back door system is turned off while the back door is operating during automatic operation, the back door stops operating. Take extra care when on an incline, as the back door may open or close suddenly.
- If the operating conditions of the power back door are no longer met, a buzzer may sound and the back door may stop opening or closing. The back door then has to be operated manually. Take extra care in this situation, as the back door may move abruptly.
- On an incline, the back door may suddenly shut after it opens automatically. Make sure the back door is fully open and secure.
- In the following situations, the power back door may detect an abnormality and automatic operation may be stopped. In this case, the back door has to be operated manually. Take extra care in this situation, as the stopped back door may suddenly open or close, causing an accident.
  - When the back door contacts an obstacle
  - When the 12-volt battery voltage suddenly drops, such as when the power switch is turned to ON mode or the hybrid system is started during automatic operation

WARNING

- If a bicycle carrier or similar heavy object is attached to the back door, the power back door may not operate, causing itself to malfunction, or the back door may move slightly in the closing direction after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.

■ Touchless sensor (vehicles with touchless power back door)

Observe the following precautions when operating the touchless power back door.
Failure to do so may cause death or serious injury.

- Do not leave the electronic key within the effective range (detection area) of the luggage compartment.
- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- When putting your foot near the lower center part of the rear bumper and moving it from the rear bumper, be careful not to touch the exhaust pipes until they have cooled down sufficiently, as touching hot exhaust pipes can cause burns.

■ Jam protection function (vehicles with power back door)

Observe the following precautions.
Failure to do so may cause death or serious injury.


- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the back door fully closes. Be careful not to catch fingers or anything else.
- The jam protection function may not work depending on the shape of the object that is caught. Be careful not to catch fingers or anything else.

NOTICE

Back door damper stays (vehicles without power back door)

The back door is equipped with damper stays that hold the back door in place.
Observe the following precautions.
Failure to do so may cause damage to the back door damper stay, resulting in malfunction.

- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.
- Do not touch the damper stay rod with gloves or other fabric items.
- Do not attach any accessories other than genuine Toyota parts to the back door.

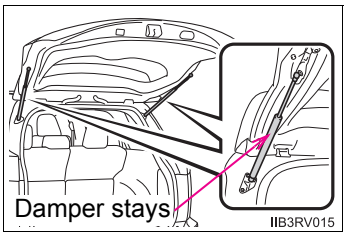


- Do not place your hand on the damper stay or apply lateral forces to it.

NOTICE

■ **Back door spindles (vehicles with power back door)**

The back door is equipped with spindles that hold the back door in place. Observe the following precautions.
Failure to do so may cause damage to the back door spindle, resulting in malfunction.

- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the spindle rod.
- Do not touch the spindle rod with gloves or other fabric items.
- Do not attach heavy accessories to the back door. When attaching, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.

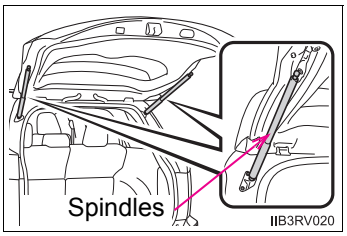

- Do not place your hand on the spindle or apply lateral forces to it.

■ **To prevent back door closer malfunction (vehicles with power back door)**

Do not apply excessive force to the back door while the back door closer is operating.

■ **To prevent damage to the power back door (if equipped)**

- Make sure that there is no ice between the back door and frame that would prevent movement of the back door. Operating the power back door when excessive load is present on the back door may cause a malfunction.
- Do not apply excessive force to the back door while the power back door is operating.
- Take care not to damage the sensors (installed on the right and left edges of the power back door) with a knife or other sharp object. If the sensor is disconnected, the power back door will not close automatically.

NOTICE

Touchless sensor precautions (vehicles with touchless power back door)

The touchless sensor is located behind lower center part of the rear bumper. Observe the following to ensure that the touchless power back door function operates properly:

- Keep the lower center part of the rear bumper clean at all times.

  If the lower center part of the rear bumper is dirty or covered with snow, the touchless sensor may not operate. In this situation, clean off the dirt or snow, move the vehicle from the current position and then check if the touchless sensor operates.
  If it does not operate, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not apply coatings that have a rain clearing (hydrophilic) effect, or other coatings, to the lower center part of the rear bumper.
- Do not park the vehicle near objects that may move and contact the lower center part of the rear bumper, such as grass or trees.
  If the vehicle has been parked for a while near objects that may move and contact the lower center part of the rear bumper, such as grass or trees, the touchless sensor may not operate. In this situation, move the vehicle from the current position and then check if the touchless sensor operates. If it does not operate, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not subject the touchless sensor or its surrounding area to a strong impact.

  If the touchless sensor or its surrounding area has been subjected to a strong impact, the touchless sensor may not operate properly. If the touchless sensor does not operate in the following situations, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
  - The touchless sensor or its surrounding area has been subjected to a strong impact.
  - The lower center part of the rear bumper is scratched or damaged.
- Do not disassemble the rear bumper.
- Do not attach stickers to the rear bumper.
- Do not paint the rear bumper.
- If a bicycle carrier or similar heavy object is attached to the power back door, disable the touchless sensor. (→P. 660)

Smart entry & start system

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key.


- Locks and unlocks the side doors (→P. 186)
- Locks and unlocks the back door (→P. 186)
- Starts the hybrid system (→P. 311)

■ Antenna location

① Antennas outside the cabin

② Antennas inside the cabin


③ Antenna outside the luggage compartment

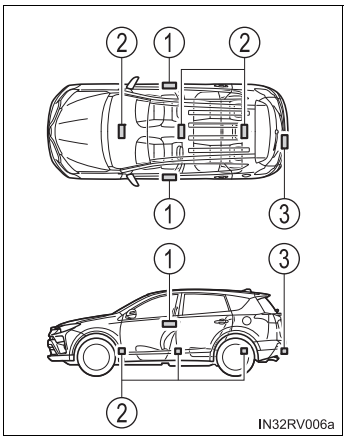

■ Effective range (areas within which the electronic key is detected)

When locking or unlocking the doors

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of either of the outside front door handles and back door opener switch. (Only the doors detecting the key can be operated.)

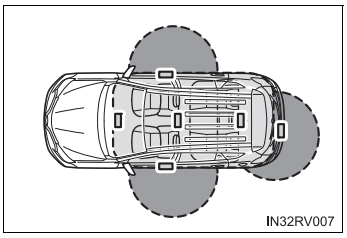

When starting the hybrid system or changing power switch modes

The system can be operated when the electronic key is inside the vehicle.

■ **Alarms and warning indicators**

A combination of exterior and interior alarms as well as warning messages shown on the multi-information display are used to prevent theft of the vehicle and accidents resulting from erroneous operation. Take appropriate measures in response to any warning message on the multi-information display. (→P. 578)

The following table describes circumstances and correction procedures when only alarms are sounded.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 5 seconds	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
Interior alarm sounds continuously	The power switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the power switch was in ACCESSORY mode).	Turn the power switch off and close the driver's door.

■ **Battery-saving function**


The battery-saving function will be activated in order to prevent the electronic key battery and the 12-volt battery from being discharged while the vehicle is not in operation for a long time.

- In the following situations, the smart entry & start system may take some time to unlock the doors.
  - The electronic key has been left in an area of approximately 2 m (6 ft.) of the outside of the vehicle for 10 minutes or longer.
  - The smart entry & start system has not been used for 5 days or longer.
- If the smart entry & start system has not been used for 14 days or longer, the doors cannot be unlocked at any doors except the driver's door. In this case, take hold of the driver's door handle, or use the wireless remote control or the mechanical key, to unlock the doors.

Electronic Key Battery-Saving Function

When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

Press twice while pressing and holding . Confirm that the electronic key indicator flashes 4 times.
While the battery-saving mode is set, the smart entry & start system cannot be used. To cancel the function, press any of the electronic key buttons.

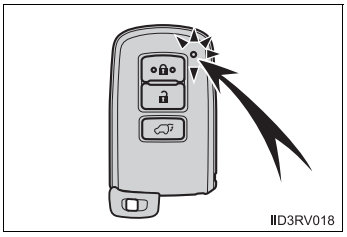

Conditions affecting operation

The smart entry & start system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system, wireless remote control and immobilizer system from operating properly.
(Ways of coping: →P. 627)

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device
- When the electronic key is in contact with, or is covered by the following metallic objects
  - Cards to which aluminum foil is attached
  - Cigarette boxes that have aluminum foil inside
  - Metallic wallets or bags
  - Coins
  - Hand warmers made of metal
  - Media such as CDs and DVDs
- When other wireless keys (that emit radio waves) are being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
  - Another vehicle's electronic key or a wireless key that emits radio waves
  - Personal computers or personal digital assistants (PDAs)
  - Digital audio players
  - Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window
- When the electronic key is placed near a battery charger or electronic devices

■ **Note for the entry function**

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
  - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
  - The electronic key is near the ground or in a high place, or too close to the rear bumper center when the back door is opened.
  - The electronic key is on the instrument panel, luggage cover or floor, or in the door pockets or glove box when the hybrid system is started or power switch modes are changed.
- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
- Even if the electronic key is not inside the vehicle, it may be possible to start the hybrid system if the electronic key is near the window.
- The doors may unlock or lock if a large amount of water splashes on the door handle, such as in the rain or in a car wash when the electronic key is within the effective range. (The doors will automatically be locked after approximately 30 seconds if the doors are not opened and closed.)
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
- Touching the door lock sensor while wearing gloves may delay or prevent lock operation. Remove the gloves and touch the lock sensor again.
- When the lock operation is performed using the lock sensor, recognition signals will be shown up to two consecutive times. After this, no recognition signals will be given. (If equipped)
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:
  - Place the electronic key in a location 2 m (6 ft.) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
  - Set the electronic key to battery-saving mode to disable the smart entry & start system. (→P. 209)

- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again, or use the lock sensor on the lower part of the door handle.
- A sudden handle operation or a handle operation immediately after entering the effective range may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.
- Gripping the door handle when wearing a glove may not unlock the door.
- If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.

■ **When the vehicle is not driven for extended periods**

- To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
- The smart entry & start system can be deactivated in advance. (→P. 657)

■ **To operate the system properly**

Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention function may not operate.)

■ **If the smart entry & start system does not operate properly**

- Locking and unlocking the doors: Use the mechanical key. (→P. 627)
- Starting the hybrid system: →P. 628

■ **Electronic key battery depletion**

- The standard battery life is 1 to 2 years.
- If the battery becomes low, an alarm will sound in the cabin when the hybrid system stops. (→P. 597)
- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary. (→P. 543)
  - The smart entry & start system or the wireless remote control does not operate.
  - The detection area becomes smaller.
  - The LED indicator on the key surface does not turn on.
- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
  - TVs
  - Personal computers
  - Cellular phones, cordless phones and battery chargers
  - Recharging cellular phones or cordless phones
  - Table lamps
  - Induction cookers

■ **Customization**

Settings (e. g. smart entry & start system) can be changed.
(Customizable features: →P. 662)

■ **If the smart entry & start system has been deactivated in a customized setting**

- Locking and unlocking the doors:
  Use the wireless remote control or mechanical key. (→P. 186, 627)
- Starting the hybrid system and changing power switch modes: →P. 628
- Stopping the hybrid system: →P. 312

Certifications for the smart entry & start system

TOYOTA

TOYOTA MOTOR CORPORATION

1, TOYOTA-CHO, TOYOTA, AICHI, 471-8571, JAPAN TEL: +81-565-28-2121

EU Declaration of Conformity

CE

1. Radio equipment (Product / Type):

   Smart LF Oscillator / TMLF10-51

2. Name and address of the manufacturer:

   TOYOTA MOTOR CORPORATION
   1, Toyota -cho, Toyota, Aichi, 471-8572, Japan

3. This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Object of the declaration:

   TMLF10-51

5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

   Directive 2014/53/EU

6. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

(Health & safety requirements)	EN 60950-1:2006 + Amd.11:2009 + Amd.1:2010 + Amd.12:2011
(EMC requirements)	EN 301 489-1 V1.9.2 & EN 301 489-3 V1.4.1
(Effective uses of radio spectrum)	EN 300 330 V2.1.1

7. The notified body:

   Not Applicable

8. Accessories and components, including software, which allow the radio equipment to operate as intended and covered by the EU declaration of conformity:

   Not Applicable

9. Additional information:

   None

Place and date of issue: Japan, April 10, 2017

Signature: Tomoo Kakegawa

Function: Tomoo Kakegawa, General Manager

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type TMLF10-51 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
http://my.toyota.eu

Frequency band: 119 - 135 kHz
Maximum radio-frequency power: 55dBμA/m @10m

TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi TMLF10-51 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
http://my.toyota.eu

Radiotaajuus: 119 - 135 kHz
suurin mahdollinen lähetysteho: 55dBμA/m @10m

Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur TMLF10-51 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
http://my.toyota.eu

Frequentieband: 119 - 135 kHz
Maximaal radiofrequentievermogen: 55dBμA/m @10m

Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type TMLF10-51 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://my.toyota.eu Bande de fréquences: 119 - 135 kHz Puissance de radiofréquence maximale: 55dBμA/m @10m
Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning TMLF10-51 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://my.toyota.eu Frekvensband: 119 - 135 kHz Maximal radiofrekvenseffekt: 55dBμA/m @10m
Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen TMLF10-51 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m

Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp TMLF10-51 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://my.toyota.eu Frequenzband: 119 - 135 kHz Abgestrahlte maximale Sendeleistung: 55dBμA/m @10m
Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός TMLF10-51 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://my.toyota.eu Ζώνη συχνοτήτων: 119 - 135 kHz Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m @10m
Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio TMLF10-51 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://my.toyota.eu Banda di frequenza: 119 - 135 kHz Potenza massima radiofrequenza: 55dBμA/m @10m

Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico TMLF10-51 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://my.toyota.eu Banda de frecuencia: 119 - 135 kHz Potencia máxima de radiofrecuencia: 55dBμA/m @10m
O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio TMLF10-51 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://my.toyota.eu Banda de frequência: 119 - 135 kHz Potência máxima de radiofrequências: 55dBμA/m @10m
B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju TMLF10-51 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m

Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp TMLF10-51 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://my.toyota.eu Sagedusriba: 119 - 135 kHz Maksimaalne saatevõimsus: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION igazolja, hogy a TMLF10-51 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://my.toyota.eu Frekvenciasáv: 119 - 135 kHz Maximális jelerősség: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu TMLF10-51 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://my.toyota.eu Frekvenčné pásmo: 119 - 135 kHz Maximálny rádiofrekvenčný výkon: 55dBμA/m @10m

Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení TMLF10-51 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://my.toyota.eu Kmitočtové pásmo: 119 - 135 kHz Maximální radiofrekvenční výkon: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme TMLF10-51 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://my.toyota.eu Frekvenčni pas: 119 - 135 kHz Največja moč radijske frekvence: 55dBμA/m @10m
Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas TMLF10-51 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://my.toyota.eu Dažnių juosta: 119 - 135 kHz Didžiausia radijo dažnių galia: 55dBμA/m @10m

Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta TMLF10-51 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://my.toyota.eu Frekvenču josla: 119 - 135 kHz Maksimālā radiofrekvenču jauda: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego TMLF10-51 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://my.toyota.eu Zakres częstotliwości: 119 - 135 kHz Maksymalna moc częstotliwości radiowej: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð TMLF10-51 er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m

TOYOTA MOTOR CORPORATION erklærer herved at radioutstyrtypen TMLF10-51 er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m
С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение TMLF10-51 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://my.toyota.eu Радиочестотна лента: 119 - 135 kHz Максимална радиочестотна мощност: 55dBμA/m @10m
Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio TMLF10-51 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://my.toyota.eu Banda de frecvență: 119 - 135 kHz Puterea maximă de radiofrecvență: 55dBμA/m @10m

Ovime TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF10-51 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://my.toyota.eu Frekvencijski opseg: 119 - 135 kHz Maksimalna radio-frekvencijska snaga: 55dBμA/m @10m
Me anë të këtij dokumenti, TOYOTA MOTOR CORPORATION deklaron se tipi i radiopajisjes TMLF10-51 është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://my.toyota.eu Brezi i frekuencës: 119 - 135 kHz Fuqia maksimale e radiofrekuencës: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa TMLF10-51 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://my.toyota.eu Frekvencijski pojas: 119 - 135 kHz Maksimalna RF snaga: 55dBμA/m @10m

Ovim TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF10-51 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://my.toyota.eu Frekventni opseg: 119 - 135 kHz Maksimalna radio-frekventna snaga: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION, işbu belgeyle telsiz cihazı türünün TMLF10-51 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://my.toyota.eu Frekans bandı: 119 - 135 kHz Maksimum radyo frekans gücü: 55dBμA/m @10m

TOYOTA

TOYOTA MOTOR CORPORATION

1, TOYOTA-CHO, TOYOTA, AICHI, 471-8571, JAPAN TEL: +81-565-28-2121

EU Declaration of Conformity

CE

1. Radio equipment (Product / Type):

   Smart LF Oscillator / TMLF10-54

2. Name and address of the manufacturer:

   TOYOTA MOTOR CORPORATION
   1, Toyota -cho, Toyota, Aichi, 471-8572, Japan

3. This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Object of the declaration:

   TMLF10-54

5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

   Directive 2014/53/EU

6. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

(Health & safety requirements)	EN 60950-1:2006 + Amd.11:2009 + Amd.1:2010 + Amd.12:2011
(EMC requirements)	EN 301 489-1 V1.9.2 & EN 301 489-3 V1.6.1
(Effective uses of radio spectrum)	EN 300 330 V2.1.1

7. The notified body:

   Not Applicable

8. Accessories and components, including software, which allow the radio equipment to operate as intended and covered by the EU declaration of conformity:

   Not Applicable

9. Additional information:

   None

Place and date of issue: Japan, April 10, 2017

Signature: Tomoo Kakegawa

Function: Tomoo Kakegawa
General Manager

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type TMLF10-54 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://my.toyota.eu Frequency band: 119 - 135 kHz Maximum radio-frequency power: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi TMLF10-54 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://my.toyota.eu Radiotaajuus: 119 - 135 kHz suurin mahdollinen lähetysteho: 55dBμA/m @10m
Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur TMLF10-54 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://my.toyota.eu Frequentieband: 119 - 135 kHz Maximaal radiofrequentievermogen: 55dBμA/m @10m

Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type TMLF10-54 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://my.toyota.eu Bande de fréquences: 119 - 135 kHz Puissance de radiofréquence maximale: 55dBμA/m @10m
Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning TMLF10-54 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://my.toyota.eu Frekvensband: 119 - 135 kHz Maximal radiofrekvenseffekt: 55dBμA/m @10m
Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen TMLF10-54 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m

Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp TMLF10-54 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://my.toyota.eu Frequenzband: 119 - 135 kHz Abgestrahlte maximale Sendeleistung: 55dBμA/m @10m
Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός TMLF10-54 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://my.toyota.eu Ζώνη συχνοτήτων: 119 - 135 kHz Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m @10m
Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio TMLF10-54 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://my.toyota.eu Banda di frequenza: 119 - 135 kHz Potenza massima radiofrequenza: 55dBμA/m @10m

Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico TMLF10-54 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://my.toyota.eu Banda de frecuencia: 119 - 135 kHz Potencia máxima de radiofrecuencia: 55dBμA/m @10m
O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio TMLF10-54 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://my.toyota.eu Banda de frequência: 119 - 135 kHz Potência máxima de radiofrequências: 55dBμA/m @10m
B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju TMLF10-54 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m

Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp TMLF10-54 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://my.toyota.eu Sagedusriba: 119 - 135 kHz Maksimaalne saatevõimsus: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION igazolja, hogy a TMLF10-54 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://my.toyota.eu Frekvenciasáv: 119 - 135 kHz Maximális jelerősség: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu TMLF10-54 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://my.toyota.eu Frekvenčné pásmo: 119 - 135 kHz Maximálny rádiofrekvenčný výkon: 55dBμA/m @10m

Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení TMLF10-54 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://my.toyota.eu Kmitočtové pásmo: 119 - 135 kHz Maximální radiofrekvenční výkon: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme TMLF10-54 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://my.toyota.eu Frekvenčni pas: 119 - 135 kHz Največja moč radijske frekvence: 55dBμA/m @10m
Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas TMLF10-54 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://my.toyota.eu Dažnių juosta: 119 - 135 kHz Didžiausia radijo dažnių galia: 55dBμA/m @10m

Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta TMLF10-54 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://my.toyota.eu Frekvenču josla: 119 - 135 kHz Maksimālā radiofrekvenču jauda: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego TMLF10-54 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://my.toyota.eu Zakres częstotliwości: 119 - 135 kHz Maksymalna moc częstotliwości radiowej: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð TMLF10-54 er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m

TOYOTA MOTOR CORPORATION erklærer herved at radioutstyrtypen TMLF10-54 er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m
С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение TMLF10-54 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://my.toyota.eu Радиочестотна лента: 119 - 135 kHz Максимална радиочестотна мощност: 55dBμA/m @10m
Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio TMLF10-54 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://my.toyota.eu Banda de frecvență: 119 - 135 kHz Puterea maximă de radiofrecvență: 55dBμA/m @10m

Ovime TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF10-54 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://my.toyota.eu Frekvencijski opseg: 119 - 135 kHz Maksimalna radio-frekvencijska snaga: 55dBµA/m @10m
Me anë të këtij dokumenti, TOYOTA MOTOR CORPORATION deklaron se tipi i radiopajisjes TMLF10-54 është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://my.toyota.eu Brezi i frekuencës: 119 - 135 kHz Fuqia maksimale e radiofrekuencës: 55dBµA/m @10m
TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa TMLF10-54 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://my.toyota.eu Frekvencijski pojas: 119 - 135 kHz Maksimalna RF snaga: 55dBµA/m @10m

Ovim TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF10-54 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://my.toyota.eu Frekventni opseg: 119 - 135 kHz Maksimalna radio-frekventna snaga: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION, işbu belgeyle telsiz cihazı türünün TMLF10-54 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://my.toyota.eu Frekans bandı: 119 - 135 kHz Maksimum radyo frekans gücü: 55dBμA/m @10m

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BA1EQ is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.tokai-rika.co.jp/pc Frequency band: 433.050 - 434.790 MHz Maximum radio-frequency power: 10mW(ERP)
TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BA1EQ on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.tokai-rika.co.jp/pc Radiotaajuus: 433.050 - 434.790 MHz suurin mahdollinen lähetysteho: 10mW(ERP)
Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BA1EQ conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tokai-rika.co.jp/pc Frequentieband: 433.050 - 434.790 MHz Maximaal radiofrequentievermogen: 10mW(ERP)

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BA1EQ est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tokai-rika.co.jp/pc Bande de fréquences: 433.050 - 434.790 MHz Puissance de radiofréquence maximale: 10mW(ERP)
Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BA1EQ överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc Frekvensband: 433.050 - 434.790 MHz Maximal radiofrekvenseffekt: 10mW(ERP)
Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BA1EQ er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BA1EQ der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.tokai-rika.co.jp/pc Frequenzband: 433.050 - 434.790 MHz Abgestrahlte maximale Sendeleistung: 10mW(ERP)
Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BA1EQ πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.tokai-rika.co.jp/pc Ζώνη συχνοτήτων: 433.050 - 434.790 MHz Μέγιστη ισχύς ραδιοσυχνότητας: 10mW(ERP)
Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BA1EQ è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.tokai-rika.co.jp/pc Banda di frequenza: 433.050 - 434.790 MHz Potenza massima radiofrequenza: 10mW(ERP)

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BA1EQ es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.tokai-rika.co.jp/pc Banda de frecuencia: 433.050 - 434.790 MHz Potencia máxima de radiofrecuencia: 10mW(ERP)
O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BA1EQ está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc Banda de frequência: 433.050 - 434.790 MHz Potência máxima de radiofrequências: 10mW(ERP)
B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BA1EQ huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc Tíðnisvið: 433.050 - 434.790 MHz Hámarks útvarpsbylgjutíðni: 10mW(ERP)

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BA1EQ vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://www.tokai-rika.co.jp/pc Sagedusriba: 433.050 - 434.790 MHz Maksimaalne saatevõimsus: 10mW(ERP)
TOKAI RIKA CO., LTD. igazolja, hogy a BA1EQ típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.tokai-rika.co.jp/pc Frekvenciasáv: 433.050 - 434.790 MHz Maximális jelerősség: 10mW(ERP)
TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BA1EQ je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.tokai-rika.co.jp/pc Frekvenčné pásmo: 433.050 - 434.790 MHz Maximálny rádiofrekvenčný výkon: 10mW(ERP)

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BA1EQ je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.tokai-rika.co.jp/pc Kmitočtové pásmo: 433.050 - 434.790 MHz Maximální radiofrekvenční výkon: 10mW(ERP)
TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BA1EQ skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.tokai-rika.co.jp/pc Frekvenčni pas: 433.050 - 434.790 MHz Največja moč radijske frekvence: 10mW(ERP)
Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BA1EQ atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.tokai-rika.co.jp/pc Dažnių juosta: 433.050 - 434.790 MHz Didžiausia radijo dažnių galia: 10mW(ERP)

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BA1EQ atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.tokai-rika.co.jp/pc Frekvenču josla: 433.050 - 434.790 MHz Maksimālā radiofrekvenču jauda: 10mW(ERP)
TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BA1EQ jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tokai-rika.co.jp/pc Zakres częstotliwości: 433.050 - 434.790 MHz Maksymalna moc częstotliwości radiowej: 10mW(ERP)
TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BA1EQ er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc Tíðnisvið: 433.050 - 434.790 MHz Hámarks útvarpsbylgjutíðni: 10mW(ERP)

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BA1EQ er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://www.tokai-rika.co.jp/pc Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)
С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BA1EQ е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.tokai-rika.co.jp/pc Радиочестотна лента: 433.050 - 434.790 MHz Максимална радиочестотна мощност: 10mW(ERP)
Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BA1EQ este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.tokai-rika.co.jp/pc Banda de frecvență: 433.050 - 434.790 MHz Puterea maximă de radiofrecvență: 10mW(ERP)

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BA1EQ u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://www.tokai-rika.co.jp/pc Frekvencijski opseg: 433.050 - 434.790 MHz Maksimalna radio-frekvencijska snaga: 10mW(ERP)
Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BA1EQ është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc Brezi i frekuencës: 433.050 - 434.790 MHz Fuqia maksimale e radiofrekuencës: 10mW(ERP)
TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BA1EQ u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.tokai-rika.co.jp/pc Frekvencijski pojas: 433.050 - 434.790 MHz Maksimalna RF snaga: 10mW(ERP)

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BA1EQ u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:
http://www.tokai-rika.co.jp/pc

Frekventni opseg: 433.050 - 434.790 MHz
Maksimalna radio-frekventna snaga: 10mW(ERP)

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BA1EQ 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:
http://www.tokai-rika.co.jp/pc

Frekans bandı: 433.050 - 434.790 MHz
Maksimum radyo frekans gücü: 10mW(ERP)

CE

Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan


И 005 15

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BA2EQ is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.tokai-rika.co.jp/pc Frequency band: 433.050 - 434.790 MHz Maximum radio-frequency power: 10mW(ERP)
TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BA2EQ on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.tokai-rika.co.jp/pc Radiotaajuus: 433.050 - 434.790 MHz suurin mahdollinen lähetysteho: 10mW(ERP)
Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BA2EQ conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tokai-rika.co.jp/pc Frequentieband: 433.050 - 434.790 MHz Maximaal radiofrequentievermogen: 10mW(ERP)

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BA2EQ est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tokai-rika.co.jp/pc Bande de fréquences: 433.050 - 434.790 MHz Puissance de radiofréquence maximale: 10mW(ERP)
Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BA2EQ överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc Frekvensband: 433.050 - 434.790 MHz Maximal radiofrekvenseffekt: 10mW(ERP)
Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BA2EQ er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BA2EQ der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.tokai-rika.co.jp/pc Frequenzband: 433.050 - 434.790 MHz Abgestrahlte maximale Sendeleistung: 10mW(ERP)
Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BA2EQ πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.tokai-rika.co.jp/pc Ζώνη συχνοτήτων: 433.050 - 434.790 MHz Μέγιστη ισχύς ραδιοσυχνότητας: 10mW(ERP)
Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BA2EQ è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.tokai-rika.co.jp/pc Banda di frequenza: 433.050 - 434.790 MHz Potenza massima radiofrequenza: 10mW(ERP)

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BA2EQ es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.tokai-rika.co.jp/pc Banda de frecuencia: 433.050 - 434.790 MHz Potencia máxima de radiofrecuencia: 10mW(ERP)
O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BA2EQ está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc Banda de frequência: 433.050 - 434.790 MHz Potência máxima de radiofrequências: 10mW(ERP)
B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BA2EQ huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc Tíðnisvið: 433.050 - 434.790 MHz Hámarks útvarpsbylgjutíðni: 10mW(ERP)

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BA2EQ vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://www.tokai-rika.co.jp/pc Sagedusriba: 433.050 - 434.790 MHz Maksimaalne saatevõimsus: 10mW(ERP)
TOKAI RIKA CO., LTD. igazolja, hogy a BA2EQ típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.tokai-rika.co.jp/pc Frekvenciasáv: 433.050 - 434.790 MHz Maximális jelerősség: 10mW(ERP)
TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BA2EQ je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.tokai-rika.co.jp/pc Frekvenčné pásmo: 433.050 - 434.790 MHz Maximálny rádiofrekvenčný výkon: 10mW(ERP)

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BA2EQ je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.tokai-rika.co.jp/pc Kmitočtové pásmo: 433.050 - 434.790 MHz Maximální radiofrekvenční výkon: 10mW(ERP)
TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BA2EQ skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.tokai-rika.co.jp/pc Frekvenčni pas: 433.050 - 434.790 MHz Največja moč radijske frekvence: 10mW(ERP)
Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BA2EQ atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.tokai-rika.co.jp/pc Dažnių juosta: 433.050 - 434.790 MHz Didžiausia radijo dažnių galia: 10mW(ERP)

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BA2EQ atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.tokai-rika.co.jp/pc Frekvenču josla: 433.050 - 434.790 MHz Maksimālā radiofrekvenču jauda: 10mW(ERP)
TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BA2EQ jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tokai-rika.co.jp/pc Zakres częstotliwości: 433.050 - 434.790 MHz Maksymalna moc częstotliwości radiowej: 10mW(ERP)
TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BA2EQ er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc Tíðnisvið: 433.050 - 434.790 MHz Hámarks útvarpsbylgjutíðni: 10mW(ERP)

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BA2EQ er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://www.tokai-rika.co.jp/pc Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)
С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BA2EQ е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.tokai-rika.co.jp/pc Радиочестотна лента: 433.050 - 434.790 MHz Максимална радиочестотна мощност: 10mW(ERP)
Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BA2EQ este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.tokai-rika.co.jp/pc Banda de frecvență: 433.050 - 434.790 MHz Puterea maximă de radiofrecvență: 10mW(ERP)

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BA2EQ u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://www.tokai-rika.co.jp/pc Frekvencijski opseg: 433.050 - 434.790 MHz Maksimalna radio-frekvencijska snaga: 10mW(ERP)
Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BA2EQ është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc Brezi i frekuencës: 433.050 - 434.790 MHz Fuqia maksimale e radiofrekuencës: 10mW(ERP)
TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BA2EQ u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.tokai-rika.co.jp/pc Frekvencijski pojas: 433.050 - 434.790 MHz Maksimalna RF snaga: 10mW(ERP)

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BA2EQ u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://www.tokai-rika.co.jp/pc Frekventni opseg: 433.050 - 434.790 MHz Maksimalna radio-frekventna snaga: 10mW(ERP)
TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BA2EQ 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://www.tokai-rika.co.jp/pc Frekans bandı: 433.050 - 434.790 MHz Maksimum radyo frekans gücü: 10mW(ERP)

CE

Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BC2UM is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BC2UM on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.tokai-rika.co.jp/pc
Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BC2UM conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tokai-rika.co.jp/pc
Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BC2UM est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tokai-rika.co.jp/pc
Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BC2UM överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BC2UM er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc
Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BC2UM der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.tokai-rika.co.jp/pc
Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BC2UM πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.tokai-rika.co.jp/pc
Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BC2UM è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.tokai-rika.co.jp/pc
Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BC2UM es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.tokai-rika.co.jp/pc

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BC2UM está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc
B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BC2UM huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc
Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BC2UM vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. igazolja, hogy a BC2UM típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BC2UM je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.tokai-rika.co.jp/pc

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BC2UM je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BC2UM skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.tokai-rika.co.jp/pc
Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BC2UM atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.tokai-rika.co.jp/pc
Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BC2UM atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BC2UM jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BC2UM er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BC2UM er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://www.tokai-rika.co.jp/pc
С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BC2UM е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.tokai-rika.co.jp/pc
Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BC2UM este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.tokai-rika.co.jp/pc
Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BC2UM u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://www.tokai-rika.co.jp/pc

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BC2UM është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BC2UM u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.tokai-rika.co.jp/pc
Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BC2UM u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BC2UM 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://www.tokai-rika.co.jp/pc

CE

Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category: 3

WARNING

■ **Caution regarding interference with electronic devices**


- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the smart entry & start system antennas. (→P. 207)
  The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.
- Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.
  Radio waves could have unexpected effects on the operation of such medical devices.

Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details on disabling the entry function.

Front seats


Adjustment procedure

▶ Manual seat

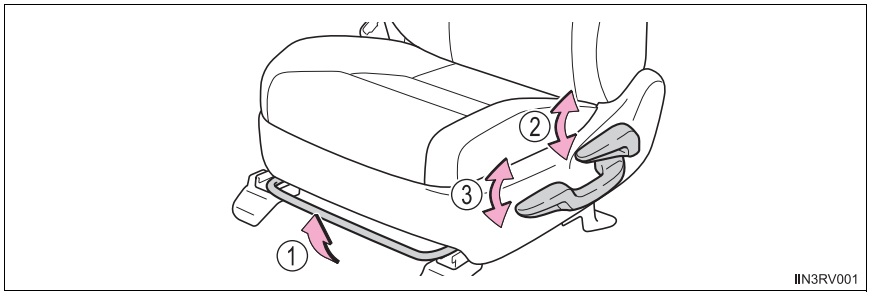

① Seat position adjustment lever
② Seatback angle adjustment lever
③ Vertical height adjustment lever (driver's side only)

▶ Power seat (driver's side only)

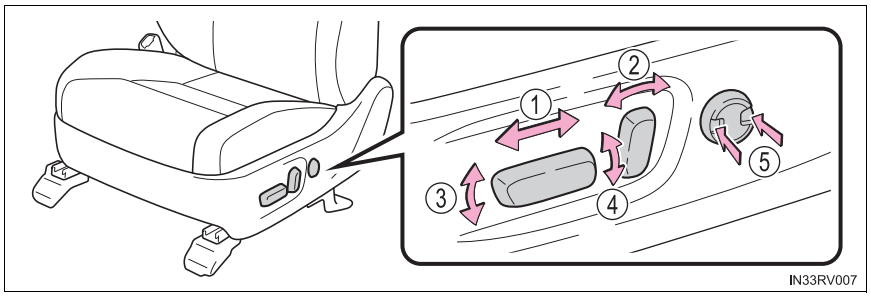

① Seat position adjustment switch
② Seatback angle adjustment switch
③ Seat cushion (front) angle adjustment switch
④ Vertical height adjustment switch
⑤ Lumbar support adjustment switch

WARNING

■ **When adjusting the seat position**


- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury.
  Fingers or hands may become jammed in the seat mechanism.

■ **Seat adjustment**

- To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.
  If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.
  Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.
- Manual seat only: After adjusting the seat, make sure that the seat is locked in position.

Rear seats

Adjustment procedure

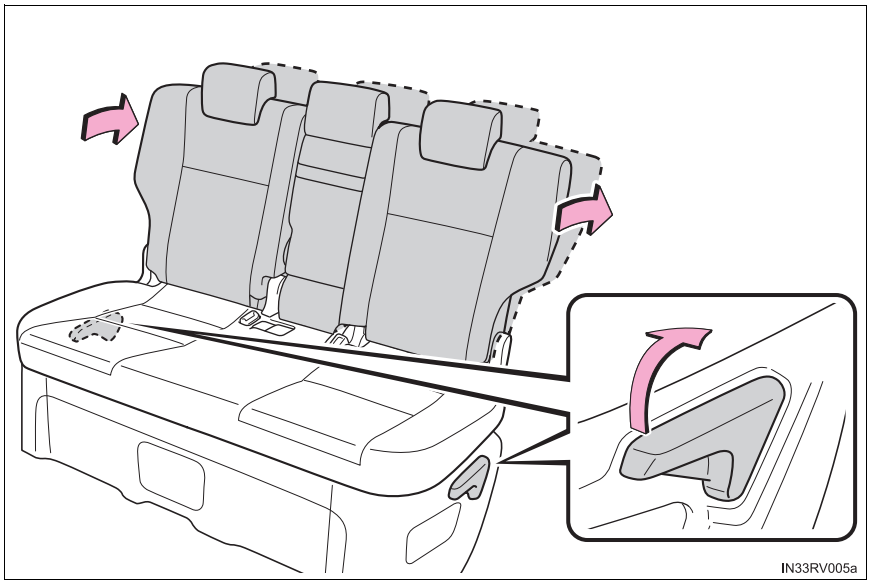

Pull up the lever. Then lean back to the desired angle and release the lever.


When a person sits in the rear center position, align all seatbacks at the same angle.

Folding down the rear seatbacks

■ Before folding down the rear seatbacks

1 Stow the rear center seat belt. (→P. 36)


2 Stow the rear seat belt buckles.

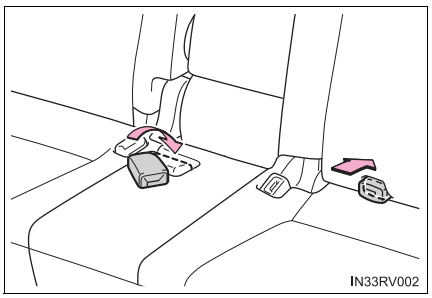

3 Lower the head restraint to the lowest position. (→P. 270)

■ Folding down rear seatbacks

Pull the seatback angle adjustment lever and fold down the seatback.

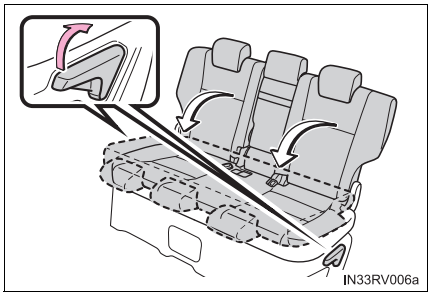

⚠ WARNING

■ When folding the rear seatbacks down

Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not fold the seatbacks down while driving.
- Stop the vehicle on level ground, set the parking brake and shift the shift lever to P.
- Do not allow anyone to sit on a folded seatback or in the luggage compartment while driving.
- Do not allow children to enter the luggage compartment.

WARNING

■ **Seat adjustment**

- To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.
  If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.
  Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.
- Be careful not to get hands or feet pinched between the rear console box and the rear seat when folding down the rear seatback.

■ **After returning the rear seatback to the upright position**

Observe the following precautions. Failure to do so may result in death or serious injury.

- Make sure the seatback is securely locked by pushing it forward and rearward on the top.
- Check that the seat belts are not twisted or caught in the seatback.

NOTICE

■ **Stowing the seat belts**

The seat belts and the buckles must be stowed before you fold down the rear seatbacks.

Driving position memory*

This feature automatically adjusts the driver's seat to suit your preferences.

Driving position memory


Your preferred driving position (the position of the driver's seat) can be recorded and recalled by pressing a button.

Two different driving positions can be recorded into memory.

■ Recording procedure

1. Check that the shift lever is in P.
2. Turn the power switch to ON mode.
3. Adjust the driver's seat to the desired positions.
4. While pressing the "SET" button, press button "1" or "2" until the buzzer sounds.

   If the selected button has already been preset, the previously recorded position will be overwritten.

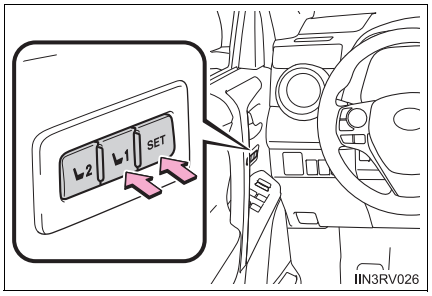


*: If equipped

Recall procedure

1 Check that the shift lever is in P.

2 Turn the power switch to ON mode.

3 Press one of the buttons for the driving position you want to recall until the buzzer sounds.

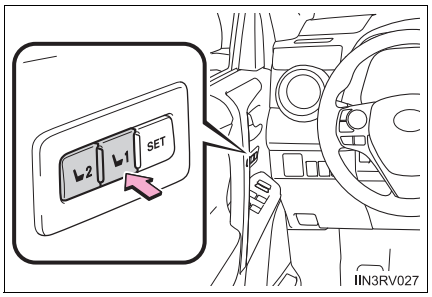

To stop the position recall operation part-way through

Perform any of the following:

- Press the “SET” button.
- Press button “1” or “2”.
- Operate any of the seat adjustment switches.

Operating the driving position memory after turning the hybrid system off

Recorded seat positions can be activated up to 180 seconds after the driver’s door is opened and another 60 seconds after it is closed again.

If the 12-volt battery is disconnected

The memorized positions are erased.

WARNING

Seat adjustment caution

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.

Head restraints

Head restraints are provided for all seats.


Front seats

① Up

Pull the head restraint up.

② Down

Push the head restraint down while pressing the lock release button.

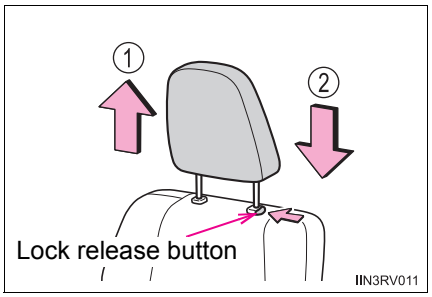


Rear seats

① Up

Pull the head restraints up.

② Down


Push the head restraint down while pressing the lock release button.

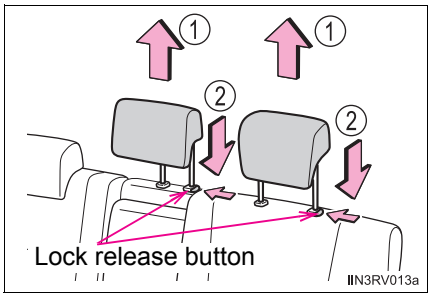

■ Removing the head restraints


▶ Front seats

Pull the head restraint up while pressing the lock release button.

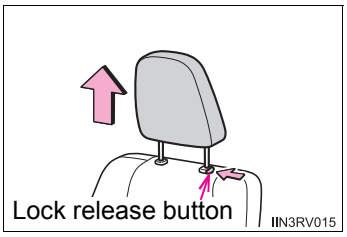

▶ Rear seats

Pull the head restraint up while pressing the lock release button.

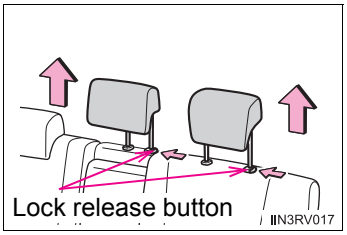


■ Installing the head restraints

▶ Front seats

Align the head restraint with the installation holes and push it down while pressing the lock release button.


Press and hold the lock release button when lowering the head restraint.

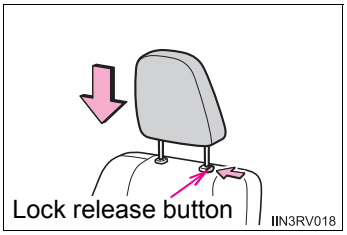

▶ Rear seats


Align the head restraint with the installation holes and push it down while pressing the lock release button.

Press and hold the lock release button when lowering the head restraint.

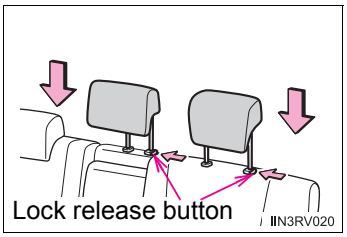

■ Adjusting the height of the head restraints

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

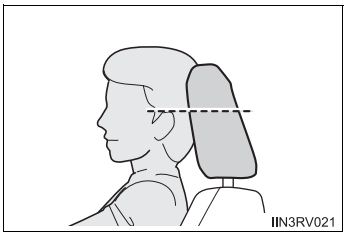

■ Adjusting the rear seat head restraint

Always raise the head restraint one level from the stowed position when using.

⚠ WARNING

■ Head restraint precautions


Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

Steering wheel


Adjustment procedure

1 Hold the steering wheel and press the lever down.

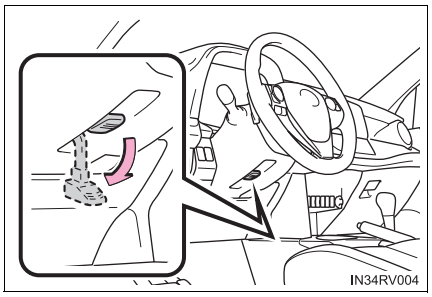


2 Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

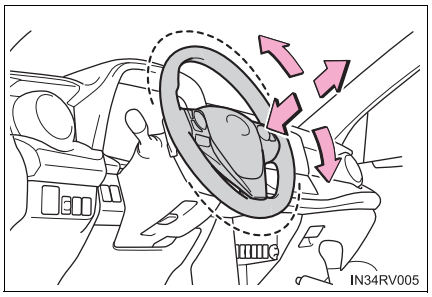

Horn

To sound the horn, press on or close to the mark.

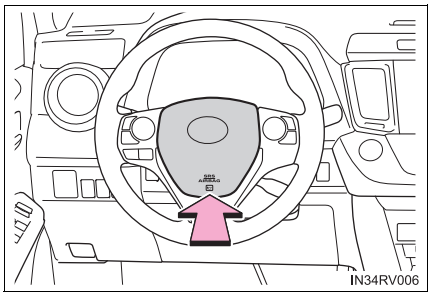

After adjusting the steering wheel

Make sure that the steering wheel is securely locked.
The horn may not sound if the steering wheel is not securely locked.

WARNING

■ **Caution while driving**

Do not adjust the steering wheel while driving.
Doing so may cause the driver to mishandle the vehicle and an accident, resulting in death or serious injury.

■ **After adjusting the steering wheel**

Make sure that the steering wheel is securely locked.
Otherwise, the steering wheel may move suddenly, possibly causing an accident and resulting in death or serious injury.


Inside rear view mirror

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

Adjusting the height of rear view mirror

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

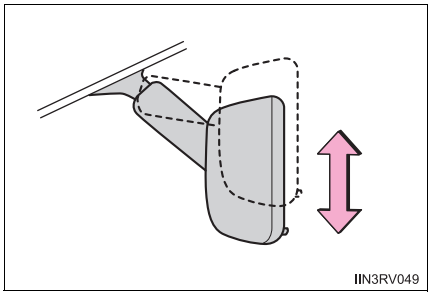

Anti-glare function


Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.

Changing automatic anti-glare function mode

On/off

When the automatic anti-glare function is in ON mode, the indicator illuminates.


The function will set to ON mode each time the power switch is turned to ON mode.

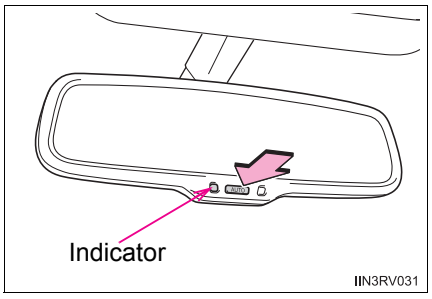

Pressing the button turns the function to OFF mode. (The indicator also turns off.)

■ **To prevent sensor error**

To ensure that the sensors operate properly, do not touch or cover them.

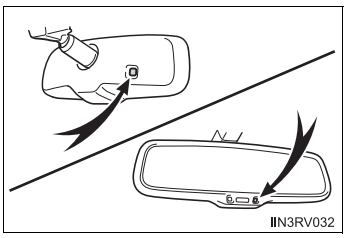

⚠ WARNING

Do not adjust the position of the mirror while driving.
Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.


Outside rear view mirrors

Adjustment procedure

1 To select a mirror to adjust, press the switch.

① Left

② Right

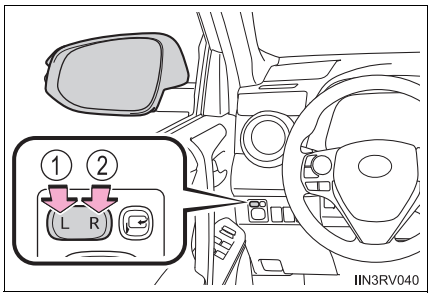


2 To adjust the mirror, press the switch.

① Up

② Right

③ Down


④ Left

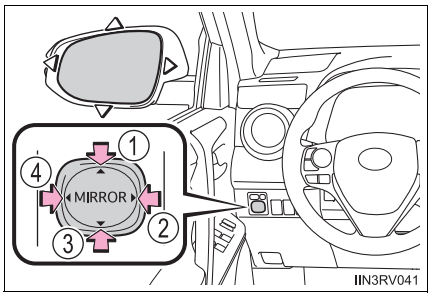

Folding the mirrors

▶ Manual type


Push the mirror back in the direction of the vehicle's rear.

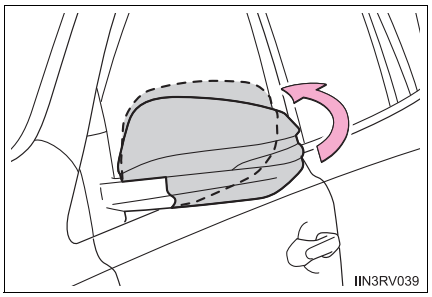

▶ Power type

Press the switch to fold the mirrors.

Press it again to extend them to the original position.

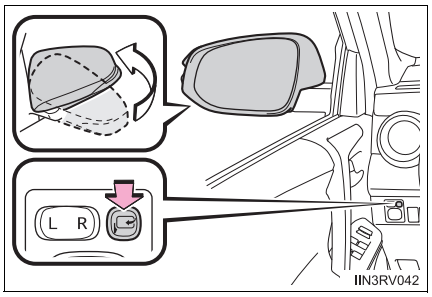

■ Mirror angle can be adjusted when

The power switch is in ACCESSORY or ON mode.

■ When the mirrors are fogged up

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. (→P. 446)

WARNING

■ **Important points while driving**

Observe the following precautions while driving.
Failure to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

■ **When a mirror is moving**

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

■ **When the mirror defoggers are operating**

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

Power windows

Opening and closing procedures

The power windows can be opened and closed using the switches.

Operating the switch moves the windows as follows:


① Closing

② One-touch closing (driver's window only)*

③ Opening

④ One-touch opening (driver's window only)*


*: To stop the window partway, operate the switch in the opposite direction.

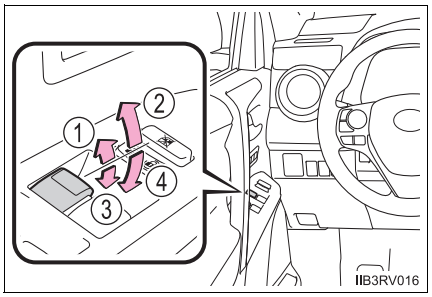

Window lock switch

Press the switch to lock the passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

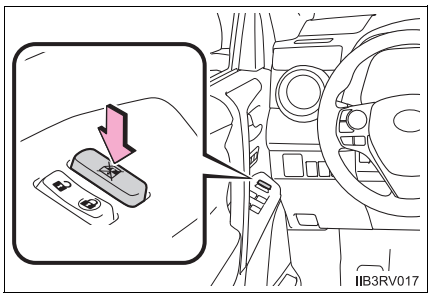

■ **The power windows can be operated when**

The power switch is in ON mode.

■ **Operating the power windows after turning the hybrid system off**

The power windows can be operated for approximately 45 seconds after the power switch is turned to ACCESSORY mode or turned off. They cannot, however, be operated once either front door is opened.

■ **Jam protection function (driver's window)**

If an object becomes jammed between the window and the window frame while the window is closing, window movement is stopped and the window is opened slightly.

■ **Catch protection function (driver's window)**

If an object becomes caught between the door and window while the window is opening, window movement is stopped.

■ **When the power window cannot be opened or closed (driver's window)**

When the jam protection function or catch protection function operates unusually or the window can not be fully opened and closed, perform the following operations with the power window switch of the driver's door.

- Stop the vehicle, with the power switch in ON mode, continually operate the power window switch in the one-touch closing position within 4 seconds after the jam protection function or catch protection function was activated. Otherwise, by continually operating the power window switch in the one-touch opening position, the window can be opened and closed.
- If the window can not be opened and closed even when performing the above operations, implement the following procedure for function initialization.

1 Turn the power switch to ON mode.

2 Pull and hold the power window switch in the one-touch closing position and completely close the window.

3 Release the power window switch for a moment, resume pulling the switch in the one-touch closing direction, and hold it there for approximately 6 seconds or more.

4 Press and hold the power window switch in the one-touch opening position and after the window is completely opened, continue holding the switch for a further 1 second or more.

5 Release the power window switch for a moment, resume pushing the switch in the one-touch opening direction, and hold it there for approximately 4 seconds or more.

6 Pull and hold the power window switch in the one-touch closing position, once more, and after the window is completely closed, continue holding the switch for a further 1 second or more.

If you release the switch while the window is moving, start again from the beginning.
If the window reverses and can not be closed or completely open, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ Closing the windows

- The driver is responsible for all the power window operations, including the operation for the passengers. In order to prevent accidental operation, especially by a child, do not let a child operate the power windows. It is possible for children and other passengers to have body parts caught in the power window. Also, when riding with a child, it is recommended to use the window lock switch. (→P. 280)
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- When exiting the vehicle, turn the power switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

■ Jam protection function (driver's window)

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets jammed just before the window is fully closed. Be careful not to get any part of your body jammed in the window.


■ Catch protection function (driver's window)

- Never use any part of your body or clothing to intentionally activate the catch protection function.
- The catch protection function may not work if something gets caught just before the window is fully opened. Be careful not to get any part of your body or clothing caught in the window.

Moon roof*

Use the overhead switches to open and close the moon roof and tilt it up and down.

Opening and closing

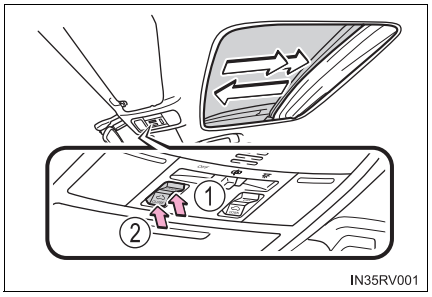

① Opens the moon roof*


The moon roof stops slightly before the fully open position to reduce wind noise.

Press the switch again to fully open the moon roof.

② Closes the moon roof*

*: Lightly press either end of the moon roof switch to stop the moon roof partway.

Tilting up and down

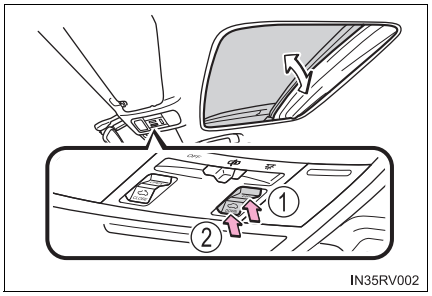

① Tilts the moon roof up*

② Tilts the moon roof down*

*: Lightly press either end of the moon roof switch to stop the moon roof partway.

*: If equipped

■ **The moon roof can be operated when**

The power switch is in ON mode.

■ **Operating the moon roof after turning the hybrid system off**

The moon roof can be operated for approximately 45 seconds after the power switch is turned to ACCESSORY mode or turned off. It cannot, however, be operated once either front door is opened.

■ **Jam protection function**

If an object is detected between the moon roof and the frame while the moon roof is closing or tilting down, travel is stopped and the moon roof opens.

■ **To reduce moon roof wind noise**

When the moon roof is opened automatically, it will stop slightly before the fully open position. Driving with the moon roof in this position can help reduce wind noise.

■ **Sunshade**

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

■ **Opening the moon roof by small degrees**

Quickly press and release the switch.

■ **Moon roof open reminder function**

The buzzer sounds and a message is shown on the multi-information display when the power switch is turned off and the driver's door is opened with the moon roof open.

■ **When the 12-volt battery is disconnected or the moon roof does not close normally**

The moon roof must be initialized in order to ensure proper operation.

1 Turn the power switch to ON mode.

2 Press and hold the "CLOSE" or "UP" switch until the following movement finishes.
The moon roof will tilt up and pause for 1 second or more. Then it will tilt down, open and close fully.

3 Release the switch, and then press it in order to ensure proper operation.

If the moon roof does not move automatically, perform the procedure again from the beginning.

■ **Customization**

Settings (e.g. open reminder function) can be changed.
(Customizable features: →P. 663)

WARNING

Observe the following precautions.
Failure to do so may cause death or serious injury.

■ **Opening the moon roof**

- Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- Do not sit on top of the moon roof.

■ **Closing the moon roof**

- The driver is responsible for moon roof opening and closing operations. In order to prevent accidental operation, especially by a child, do not let a child operate the moon roof. It is possible for children and other passengers to have body parts caught in the moon roof. Also, when riding with a child, it is recommended to use the window lock switch. (→P. 280)
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the moon roof is being operated.
- When exiting the vehicle, turn the power switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

■ **Jam protection function**

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the moon roof fully closes.

Driving 4

4-1. Before driving
Driving the vehicle 288
Cargo and luggage 297
Trailer towing 299

4-2. Driving procedures
Power (ignition) switch.....311
EV drive mode 317
Hybrid transmission 319
Turn signal lever 325
Parking brake 326

4-3. Operating the lights and wipers
Headlight switch 327
Automatic High Beam.....332
Fog light switch 336
Windshield wipers and washer 338
Rear window wiper and washer 341

4-4. Refueling
Opening the fuel tank cap 343

4-5. Using the driving support systems
Toyota Safety Sense 346
PCS (Pre-Crash Safety system) 358
LDA (Lane Departure Alert with steering control).....374
RSA (Road Sign Assist).....383
Dynamic radar cruise control 388
Cruise control.....400
Toyota parking assist-sensor 404
BSM (Blind Spot Monitor).....412
• The Blind Spot Monitor function 419
• The Rear Crossing Traffic Alert function 422
Driving assist systems 425

4-6. Driving tips
Hybrid vehicle driving tips 432
Winter driving tips 435
Utility vehicle precautions 439

Driving the vehicle

The following procedures should be observed to ensure safe driving:

Starting the hybrid system

→P. 311

Driving

1. With the brake pedal depressed, shift the shift lever to D. (→P. 319)
2. Release the parking brake. (→P. 326)
3. Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

Stopping

1. With the shift lever in D, depress the brake pedal.
2. If necessary, set the parking brake.

   If the vehicle is to be stopped for an extended period of time, shift the shift lever to P or N. (→P. 319)

Parking the vehicle

1. With the shift lever in D, depress the brake pedal.
2. Set the parking brake (→P. 326), and shift the shift lever to P (→P. 319).
3. Press the power switch to stop the hybrid system.
4. Lock the door, making sure that you have the key on your person. If parking on a hill, block the wheels as needed.

Starting off on a steep uphill

1 Make sure that the parking brake is set and shift the shift lever to D.

2 Gently depress the accelerator pedal.

3 Release the parking brake.

■ **When starting off on a uphill**

The hill-start assist control will activate. (→P. 425)

■ **For fuel-efficient driving**

Keep in mind that hybrid vehicles are similar to conventional vehicles, and it is necessary to refrain from activities such as sudden acceleration. (→P. 432)

■ **Driving in the rain**

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

■ **Engine speed while driving**

In the following conditions, the engine speed may become high while driving. This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- The vehicle is judged to be driving uphill or downhill
- When the accelerator pedal is released
- When the brake pedal is depressed while sport mode is selected

■ **Breaking in your new Toyota**

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 300 km (200 miles):
  Avoid sudden stops.
- For the first 800 km (500 miles):
  Do not tow a trailer.
- For the first 1000 km (600 miles):
  - Do not drive at extremely high speed.
  - Avoid sudden acceleration.
  - Do not drive continuously in low gears.
  - Do not drive at a constant speed for extended periods.

■ **Drum-in-disc type parking brake system**

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drum are replaced. Have any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer perform the bedding down operation.

■ **Operating your vehicle in a foreign country**

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P. 655)

⚠ WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ **When starting the vehicle**

Always keep your foot on the brake pedal while stopped with “READY” indicator is illuminated. This prevents the vehicle from creeping.

■ **When driving the vehicle**

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
  - Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
  - When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
  - Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
  - Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- The driver should pay extra attention to pedestrians when the vehicle is powered only by the electric motor (traction motor). As there is no engine noise, the pedestrians may misjudge the vehicle’s movement.
- Do not drive the vehicle over or stop the vehicle near flammable materials. The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ When driving the vehicle

- During normal driving, do not turn off the hybrid system. Turning the hybrid system off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so.
  In the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way: →P. 563
- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill.
  Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P. 319)
- Do not adjust the positions of the steering wheel, the seat, or the inside or outside rear view mirrors while driving.
  Doing so may result in a loss of vehicle control.
- Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle.
- Do not drive the vehicle off-road.
  This is not an AWD vehicle designed for off-road driving. Proceed with all due caution if it becomes unavoidable to drive off-road.
- Do not drive across river crossings or through other bodies of water.
  This may cause electric/electronic components to short circuit, damage the hybrid system or cause other serious damage to the vehicle.

■ When driving on slippery road surfaces

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle.
- Sudden acceleration, engine braking due to shifting, or changes in engine speed could cause the vehicle to skid.
- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

When shifting the shift lever

- Do not let the vehicle roll backward while the shift lever is in a driving position, or roll forward while the shift lever is in R.
  Doing so may result in an accident or damage to the vehicle.
- Do not shift the shift lever to P while the vehicle is moving.
  Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to R while the vehicle is moving forward.
  Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to a driving position while the vehicle is moving backward.
  Doing so can damage the transmission and may result in a loss of vehicle control.
- Shifting the shift lever to N while the vehicle is moving will disengage the hybrid system. Engine braking is not available when N is selected.
- Be careful not to shift the shift lever with the accelerator pedal depressed. Shifting the shift lever to any position other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ **If you hear a squealing or scraping noise (brake pad wear indicators)**

Have the brake pads checked and replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.
The rotor damage may result if the pads are not replaced when needed.

Front brakes only: Moderate levels of brake pad and disc wear allow enhanced front braking power. As a result, the discs may wear more quickly than conventional brake discs. Therefore, when replacing the brake pads, Toyota recommends that you also have the thickness of the discs measured.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

■ **When the vehicle is stopped**

- Do not depress the accelerator pedal unnecessarily.
  If the shift lever is in any position other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.
- In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while stopped with the “READY” indicator is illuminated, and apply the parking brake as necessary.
- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.
- Avoid revving or racing the engine.
  Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ When the vehicle is parked

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.
  Doing so may result in the following:
  - Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
  - The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
  - Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Always apply the parking brake, shift the shift lever to P, stop the hybrid system and lock the vehicle.
  Do not leave the vehicle unattended while the "READY" indicator is illuminated.
  If the vehicle is parked with the shift lever in P but the parking brake is not set, the vehicle may start to move, possibly leading to an accident.
- Do not touch the exhaust pipes while the "READY" indicator is illuminated or immediately after turning the hybrid system off.
  Doing so may cause burns.

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

When taking a nap in the vehicle

Always turn the hybrid system off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to hybrid system overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

When braking

- When the brakes are wet, drive more cautiously.
  Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.
- If the electronically controlled brake system does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking.
  In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.
- The brake system consists of 2 or more individual hydraulic systems; if one of the systems fails, the other will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase.
  Have your brakes fixed immediately.

If the vehicle becomes stuck (AWD models)

Do not spin the wheels excessively when any of the tires is up in the air, or the vehicle is stuck in sand, mud, etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident.

NOTICE

When driving the vehicle

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain driving torque.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

When parking the vehicle

Always set the parking brake, and shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

NOTICE

■ **Avoiding damage to vehicle parts**

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.
  Doing so may damage the power steering motor.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

■ **If you get a flat tire while driving**

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds or vibrations.
- The vehicle will lean abnormally.

Information on what to do in case of a flat tire (→P. 599, 611)

■ **When encountering flooded roads**

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer check the following:

- Brake function
- Changes in quantity and quality of oil and fluid used for the engine, hybrid transaxle (front and rear [AWD models]), etc.
- Lubricant condition for the bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load.

WARNING

■ Things that must not be carried in the luggage compartment

The following things may cause a fire if loaded in the luggage compartment:

- Receptacles containing gasoline
- Aerosol cans

■ Storage precautions

Observe the following precautions.
Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- Stow cargo and luggage in the luggage compartment whenever possible.
- Do not stack anything in the luggage compartment higher than the seatbacks.
- Do not place cargo or luggage in or on the following locations.
  - At the feet of the driver
  - On the front passenger or rear seats (when stacking items)
  - On the luggage cover (if equipped)
  - On the instrument panel
  - On the dashboard
- Secure all items in the occupant compartment.
- When you fold down the rear seats, long items should not be placed directly behind the front seats.
- Never allow anyone to ride in the luggage compartment. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened. Otherwise, they are much more likely to suffer death or serious bodily injury, in the event of sudden braking, sudden swerving or an accident.

WARNING

■ **Load and distribution**

- Do not overload your vehicle.
- Do not apply loads unevenly.
  Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

■ **When loading cargo on the roof luggage carrier (if equipped)**

Observe the following precautions:

- Place the cargo so that its weight is distributed evenly between the front and rear axles.
- If loading long or wide cargo, never exceed the vehicle overall length or width. (→P. 644)
- Before driving, make sure the cargo is securely fastened on the roof luggage carrier.
- Loading cargo on the roof luggage carrier will make the center of gravity of the vehicle higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly and result in death or serious injury.
- If driving for a long distance, on rough roads, or at high speeds, stop the vehicle now and then during the trip to make sure the cargo remains in its place.
- Do not exceed 85 kg (187.4 lb.) cargo weight on the roof luggage carrier.

NOTICE

■ **When loading cargo on the roof luggage carrier (if equipped)**


Be careful not to scratch the surface of the moon roof (if equipped).

Trailer towing

▶ For Armenia, Azerbaijan, Bosnia and Herzegovina, Georgia and Macedonia

Toyota does not recommend towing a trailer with your vehicle.

Toyota also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your vehicle is not designed for trailer towing or for the use of tow hitch mounted carriers.

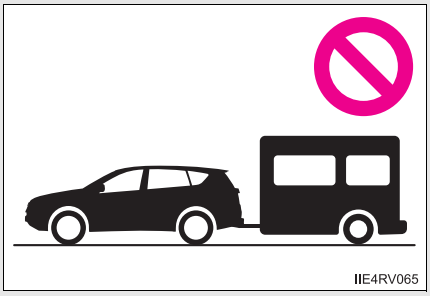

▶ Except for Armenia, Azerbaijan, Bosnia and Herzegovina, Georgia and Macedonia

Your vehicle is designed primarily as a passenger carrying vehicle. Towing a trailer will have an adverse effect on handling, performance, braking, durability, and fuel consumption. Your safety and satisfaction depend on the proper use of correct equipment and cautious driving habits. For your safety and the safety of others, do not overload the vehicle or trailer.

To tow a trailer safely, use extreme care and drive the vehicle in accordance with the trailer's characteristics and operating conditions.

Toyota warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes.

Ask your local authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further details before towing, as there are additional legal requirements in some countries.

◆ Weight limits

Check the allowable towing capacity, GVM (Gross Vehicle Mass), MPAC (Maximum Permissible Axle Capacity), and permissible drawbar load before towing. (→P. 644)

◆ Towing hitch/bracket


Toyota recommends the use of the Toyota hitch/bracket for your vehicle. Other products of a suitable nature and comparable quality may also be used.

Connecting trailer lights

Please consult at any authorized dealer or repairer, or another duly qualified and equipped professional when installing trailer lights, as incorrect installation may cause damage to the vehicle's lights. Please take care to comply with your state's laws when installing trailer lights.

Important points regarding trailer loads

■ Total trailer weight and permissible drawbar load

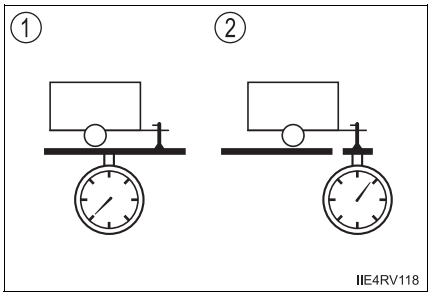

① Total trailer weight

Weight of the trailer itself plus the trailer load should be within the maximum towing capacity. Exceeding this weight is dangerous. (→P. 644)


When towing a trailer, use a friction coupler or friction stabilizer (sway control device).

② Permissible drawbar load


Allocate the trailer load so that the drawbar load is greater than 25 kg (55.1 lb.) or 4% of the towing capacity. Do not let the drawbar load exceed the indicated weight. (→P. 644)

■ Information tag (manufacturer's label)

▶ Type A

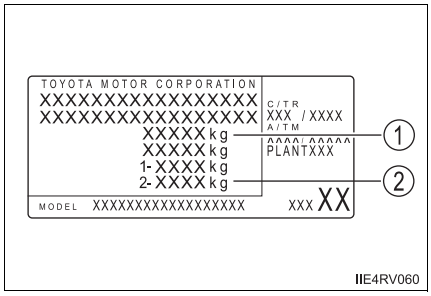

▶ Type B

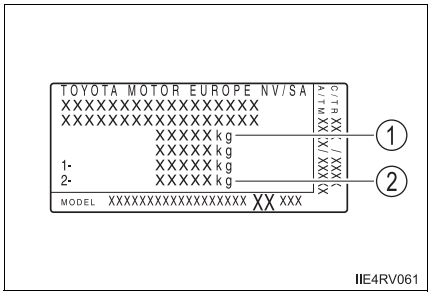

① Gross vehicle mass

The combined weight of the driver, passengers, luggage, towing hitch, total curb mass and drawbar load should not exceed the gross vehicle mass by more than 100 kg (220.5 lb.). Exceeding this weight is dangerous.

② Maximum permissible rear axle capacity

The weight borne by the rear axle should not exceed the maximum permissible rear axle capacity by 15% or more. Exceeding this weight is dangerous.

The values for towing capacity were derived from testing conducted at sea level. Take note that engine output and towing capacity will be reduced at high altitudes.


⚠ WARNING


■ When the gross vehicle mass or maximum permissible axle capacity is exceeded

Failing to observe this precaution may lead to an accident causing death or serious injury.

- Add an additional 20.0 kPa (0.2 kgf/cm^2 or bar, 3 psi) to the recommended tire inflation pressure value. (→P. 653)
- Do not exceed the established speed limit for towing a trailer in built-up areas or 100km/h (62 mph), whichever is lower.

Installation positions for the towing hitch/bracket and hitch ball

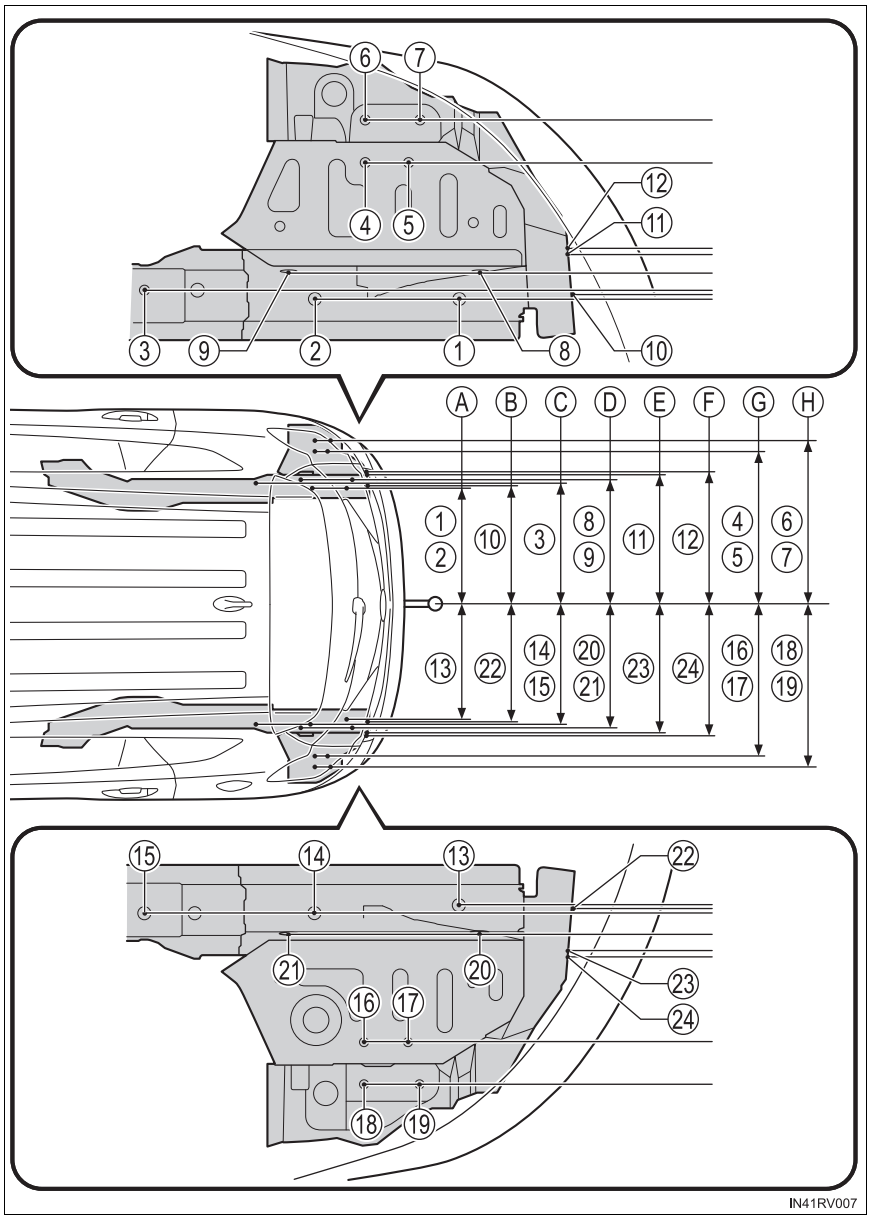

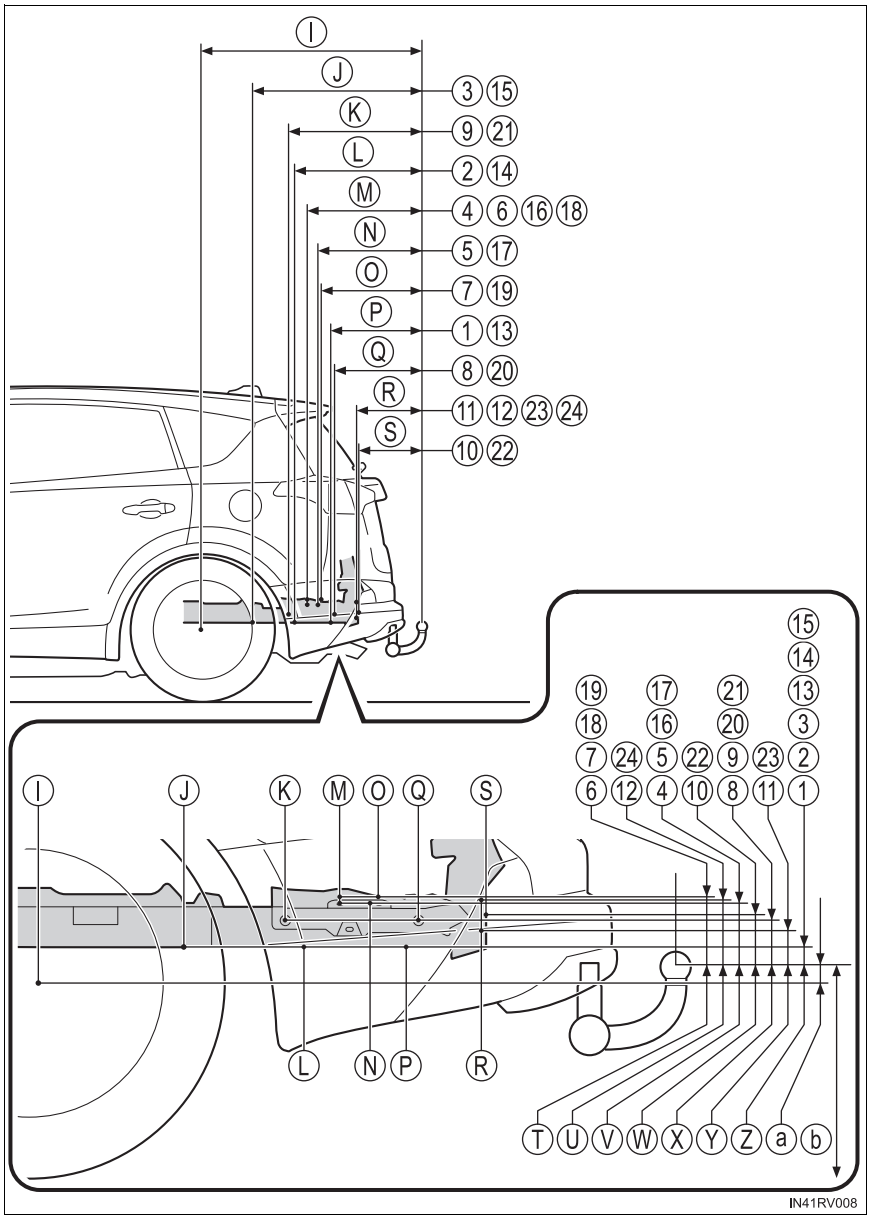
Ⓘ
Ⓙ
Ⓚ
Ⓛ
Ⓜ
Ⓝ
Ⓞ
Ⓟ
Ⓠ
Ⓡ
Ⓢ
3 15
9 21
2 14
4 6 16 18
5 17
7 19
1 13
8 20
11 12 23 24
10 22
15
14
19 17 21 13
18 16 20 3
7 24 5 22 9 23 2
6 12 4 10 8 11 1
Ⓘ Ⓙ Ⓚ Ⓜ Ⓞ Ⓠ Ⓢ
Ⓛ Ⓝ Ⓟ Ⓡ
Ⓣ Ⓤ Ⓥ Ⓦ Ⓧ Ⓨ Ⓩ ⓐ ⓑ
IN41RV008

Ⓐ 546 mm (21.5 in.)
Ⓑ 550 mm (21.7 in.)
Ⓒ 551 mm (21.7 in.)
Ⓓ 583 mm (23.0 in.)
Ⓔ 602 mm (23.7 in.)
Ⓕ 609 mm (24.0 in.)
Ⓖ 713 mm (28.1 in.)
Ⓗ 765 mm (30.1 in.)
Ⓘ 1102 mm (43.4 in.)
Ⓙ 850 mm (33.5 in.)
Ⓚ 675 mm (26.6 in.)
Ⓛ 642 mm (25.3 in.)
Ⓜ 581 mm (22.9 in.)
Ⓝ 528 mm (20.8 in.)
Ⓞ 514 mm (20.2 in.)
Ⓟ 466 mm (18.3 in.)
Ⓠ 445 mm (17.5 in.)
Ⓡ 333 mm (13.1 in.)
Ⓢ 328 mm (12.9 in.)
Ⓣ 107 mm (4.2 in.)
Ⓤ 105 mm (4.1 in.)
Ⓥ 101 mm (4.0 in.)
Ⓦ 79 mm (3.1 in.)
Ⓧ 74 mm (2.9 in.)
Ⓨ 61 mm (2.4 in.)
Ⓩ 34 mm (1.3 in.)
ⓐ 74 mm (2.9 in.)
ⓑ 409 mm (16.1 in.)*

*: 4 persons in the vehicle

■ **Tire information**

- Increase the tire inflation pressure to 20.0 kPa (0.2 kgf/cm^2 or bar, 3 psi) greater than the recommended value when towing. (→P. 653)
- Increase the air pressure of the trailer tires in accordance with the total trailer weight and according to the values recommended by the manufacturer of your trailer.

■ **Break-in schedule**

Toyota recommends that vehicles fitted with new power train components should not be used for towing trailers for the first 800 km (500 miles).

■ **Safety checks before towing**

- Check that the maximum load limit for the towing hitch/bracket and hitch ball is not exceeded. Bear in mind that the coupling weight of the trailer will add to the load exerted on the vehicle. Also make sure that the total load exerted on the vehicle is within the range of the weight limits. (→P. 301)
- Ensure that the trailer load is secure.
- Supplementary outside rear view mirrors should be added to the vehicle if the traffic behind cannot be clearly seen with standard mirrors. Adjust the extending arms of these mirrors on both sides of the vehicle so that they always provide maximum visibility of the road behind.

■ **Maintenance**

- Maintenance must be performed more frequently when using the vehicle for towing due to the greater weight burden placed on the vehicle compared to normal driving.
- Retighten all bolts securing the hitching ball and bracket after towing for approximately 1000 km (600 miles).

■ **If trailer sway occurs**

One or more factors (crosswinds, passing vehicles, rough roads, etc.) can adversely affect handling of your vehicle and trailer, causing instability.

● If trailer swaying occurs:

- Firmly grip the steering wheel. Steer straight ahead.
  Do not try to control trailer swaying by turning the steering wheel.
- Begin releasing the accelerator pedal immediately but very gradually to reduce speed.
  Do not increase speed. Do not apply vehicle brakes.

If you make no extreme correction with the steering or brakes, your vehicle and trailer should stabilize (if enabled, Trailer Sway Control can also help to stabilize the vehicle and trailer.).

● After the trailer swaying has stopped:

- Stop in a safe place. Get all occupants out of the vehicle.
- Check the tires of the vehicle and the trailer.
- Check the load in the trailer.
  Make sure the load has not shifted.
  Make sure the tongue weight is appropriate, if possible.
- Check the load in the vehicle.
  Make sure the vehicle is not overloaded after occupants get in.

If you cannot find any problems, the speed at which trailer swaying occurred is beyond the limit of your particular vehicle-trailer combination.

Drive at a lower speed to prevent instability. Remember that swaying of the towing vehicle-trailer increases as speed increases.

⚠ NOTICE

■ **When the rear bumper strengthening material is aluminum**

Ensure the steel bracket part does not come directly in contact with that area.
When steel and aluminum come into contact, there is a reaction similar to corrosion, which will weaken the section concerned and may result in damage. Apply a rust inhibitor to parts that will come in contact when attaching a steel bracket.

Guidance

Your vehicle will handle differently when towing a trailer. In order to avoid accident, death or serious injury, keep the following in mind when towing:

■ Checking connections between trailer and lights

Stop the vehicle and check the operation of the connection between the trailer and lights after driving for a brief period as well as before starting off.

■ Practicing driving with a coupled trailer

- Get the feel for turning, stopping and reversing with the trailer coupled by practicing in an area with no or light traffic.
- When reversing with a coupled trailer, hold the section of the steering wheel nearest to you and rotate clockwise to turn the trailer left or counterclockwise to turn it right. Always rotate a little at a time to prevent steering error. Have someone guide you when reversing to lessen the risk of an accident.

■ Increasing vehicle-to-vehicle distance

At a speed of 10 km/h (6 mph), the distance to the vehicle running ahead of you should be equivalent to or greater than the combined length of your vehicle and trailer. Avoid sudden braking that may cause skidding. Otherwise, the vehicle may spin out of control. This is especially true when driving on wet or slippery road surfaces.

■ Sudden acceleration/steering input/cornering

Executing sharp turns when towing may result in the trailer colliding with your vehicle. Decelerate well in advance when approaching turns and take them slowly and carefully to avoid sudden braking.

■ Important points regarding turning

The wheels of the trailer will travel closer to the inside of the curve than the wheels of the vehicle. To make allowance for this, take the turns wider than you would normally do.

■ **Important points regarding stability**

Vehicle movement resulting from uneven road surfaces and strong crosswinds will affect handling. The vehicle may also be rocked by passing buses or large trucks. Frequently check behind when moving alongside such vehicles. As soon as such vehicle movement occurs, immediately start to decelerate smoothly by slowly applying the brakes. Always steer the vehicle straight ahead while braking.

■ **Passing other vehicles**

Consider the total combined length of your vehicle and trailer and ensure that the vehicle-to-vehicle distance is sufficient before executing lane changes.

■ **Transmission information**

To maintain engine braking efficiency and charging system performance, when using engine braking, do not use the transmission in D. (→P. 319)

■ **If the engine overheats**

Towing a loaded trailer up a long, steep incline in temperatures exceeding 30°C (85°F) may result in the engine overheating. If the engine coolant temperature gauge indicates that the engine is overheating, turn the air conditioning off immediately, leave the road and stop the vehicle in a safe place. (→P. 635)

■ **When parking the vehicle**

Always place wheel chocks under the wheels of both the vehicle and trailer. Firmly set the parking brake and shift the shift lever to P.

WARNING

Follow all the instructions described in this section.
Failure to do so could cause an accident resulting in death or serious injury.

■ **Trailer towing precautions**

When towing, make sure that none of the weight limits are exceeded.
(→P. 301)

■ **To avoid accident or injury**

- Vehicles with compact spare tire:
  Do not tow a trailer when the compact spare tire is installed on your vehicle.
- Vehicles with the emergency tire puncture repair kit:
  Do not tow a trailer when the tire installed is repaired with the emergency tire puncture repair kit.
- Do not use cruise control or dynamic radar cruise control (if equipped) when trailer towing.

■ **Vehicle speed in towing**

Observe the legal maximum speeds for trailer towing.

■ **Before descending hills or long declines**

Reduce speed and downshift. However, never downshift suddenly while descending steep or long downhill grades.

■ **Operation of the brake pedal**

Do not hold the brake pedal depressed often or for long periods of time.
Doing so may result in the brake overheating or reduce braking effects.

NOTICE

■ **Do not directly splice trailer lights**

Directly splicing trailer lights may damage your vehicle's electrical system and cause a malfunction.

Power (ignition) switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes power switch modes.

Starting the hybrid system

1 Check that the parking brake is set.

2 Check that the shift lever is in P.

3 Firmly depress the brake pedal.

 will be displayed on the multi-information display.

If it is not displayed, the hybrid system cannot be started.


4 Press the power switch shortly and firmly.

When operating the power switch, one short, firm press is enough. It is not necessary to press and hold the switch.

If the “READY” indicator turns on, the hybrid system will operate normally.

Continue depressing the brake pedal until the “READY” indicator is illuminated.

The hybrid system can be started from any power switch mode.

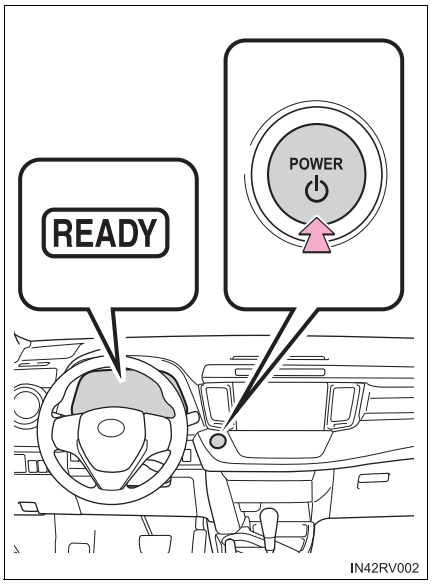

5 Check that the “READY” indicator is illuminated.

The vehicle will not move when the “READY” indicator is off.

Stopping the hybrid system

1 Stop the vehicle completely.

2 Set the parking brake (→P. 326), and shift the shift lever to P.

3 Press the power switch.

4 Release the brake pedal and check that the display on the instrument cluster is off.

Changing power switch modes

Modes can be changed by pressing the power switch with the brake pedal released. (The mode changes each time the switch is pressed.)

① Off*

The emergency flashers can be used.

The multi-information display will not be displayed.

② ACCESSORY mode

Some electrical components such as the audio system can be used.


“POWER ON” will be displayed on the multi-information display.

③ ON mode

All electrical components can be used.

“POWER ON” will be displayed on the multi-information display.

*: If the shift lever is in a position other than P when turning off the hybrid system, the power switch will be turned to ACCESSORY mode, not to off.

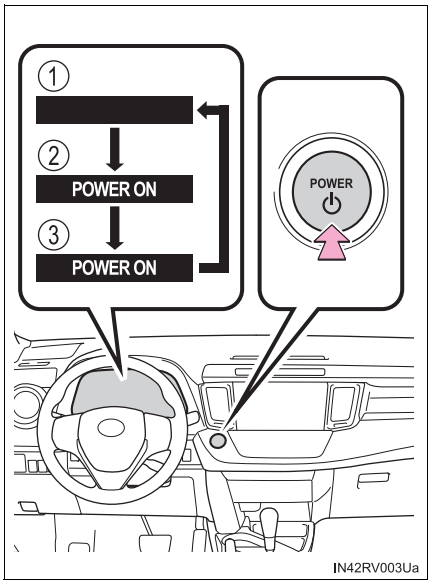

When stopping the hybrid system with the shift lever in a position other than P

If the hybrid system is stopped with the shift lever in a position other than P, the power switch will not be turned off but instead be turned to ACCESSORY mode. Perform the following procedure to turn the switch off:

1 Check that the parking brake is set.

2 Shift the shift lever to P.

3 Check that “Turn Off Vehicle” is displayed on the multi-information display and then press the power switch once.

4 Check that “Turn Off Vehicle” on the multi-information display is off.

■ **Auto power off function**

If the vehicle is left in ACCESSORY mode for more than 20 minutes or ON mode (the hybrid system is not operating) for more than an hour with the shift lever in P, the power switch will automatically turn off. However, this function cannot entirely prevent 12-volt battery discharge. Do not leave the vehicle with the power switch in ACCESSORY or ON mode for long periods of time when the hybrid system is not operating.

■ **Sounds and vibrations specific to a hybrid vehicle**

→P. 79

■ **Electronic key battery depletion**

→P. 212

■ **When the ambient temperature is low, such as during winter driving conditions**

When starting the hybrid system, the flashing time of the “READY” indicator may be long. Leave the vehicle as it is until the “READY” indicator is steady on, as steady means the vehicle is able to move.

■ **Conditions affecting operation**

→P. 209

■ **Notes for the entry function**

→P. 210

■ **If the hybrid system does not start**

- The immobilizer system may not have been deactivated. (→P. 85)
  Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Check that the shift lever is securely set in P. The hybrid system may not start if the shift lever is displaced out of P. A message will be displayed on the multi-information display.


■ **Steering lock**

After turning the power switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the power switch again automatically cancels the steering lock.

■ **When the steering lock cannot be released**

A message will be displayed on the multi-information display.

Check that the shift lever is set in P. Press the power switch while turning the steering wheel left and right.

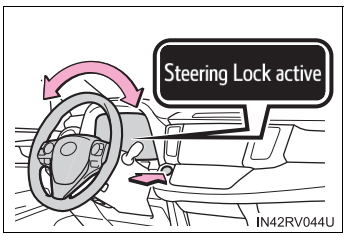

■ **Steering lock motor overheating prevention**

To prevent the steering lock motor from overheating, the motor may be suspended if the hybrid system is turned on and off repeatedly in a short period of time. In this case, refrain from operating the hybrid system. After about 10 seconds, the steering lock motor will resume functioning.

■ **When "Check Entry & Start System" is displayed on the multi-information display**

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ **If the "READY" indicator does not come on**

In the event that the "READY" indicator does not come on even after performing the proper procedures for starting the vehicle, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ **If the hybrid system is malfunctioning**

→P. 578

■ **If the electronic key battery is depleted**

→P. 543

■ **Operation of the power switch**

- If the switch is not pressed shortly and firmly, the power switch mode may not change or the hybrid system may not start.
- If attempting to restart the hybrid system immediately after turning the power switch off, the hybrid system may not start in some cases. After turning the power switch off, please wait a few seconds before restarting the hybrid system.

■ **If the smart entry & start system has been deactivated in a customized setting**

→P. 627

⚠ WARNING

■ **When starting the hybrid system**

Always start the hybrid system while sitting in the driver's seat. Do not depress the accelerator pedal while starting the hybrid system under any circumstances.

Doing so may cause an accident resulting in death or serious injury.

■ **Caution while driving**

If a hybrid system failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.

■ **Stopping the hybrid system in an emergency**

If you want to stop the hybrid system in an emergency while driving the vehicle, press and hold the power switch for more than 2 seconds, or press it briefly 3 times or more in succession. (→P. 563)

However, do not touch the power switch while driving except in an emergency. Turning the hybrid system off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so.

NOTICE

■ **To prevent 12-volt battery discharge**

- Do not leave the power switch in ACCESSORY or ON mode for long periods of time without the hybrid system on.
- If “POWER ON” is displayed on the multi-information display, the power switch is not off. Exit the vehicle after turning the power switch off.
- Do not stop the hybrid system when the shift lever is in a position other than P. If the hybrid system is stopped in another shift lever position, the power switch will not be turned off but instead be turned to ACCESSORY mode. If the vehicle is left in ACCESSORY mode, 12-volt battery discharge may occur.

■ **When starting the hybrid system**

If the hybrid system becomes difficult to start, have your vehicle checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ **Symptoms indicating a malfunction with the power switch**

If the power switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.


EV drive mode

In EV drive mode, electric power is supplied by the hybrid battery (traction battery), and only the electric motor (traction motor) is used to drive the vehicle.

This mode allows you to drive in residential areas late at night, or in indoor parking lots etc. without concern for noises and exhaust gas emissions.

Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

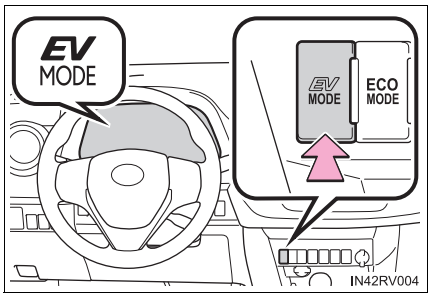

Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multi-information display.

- The temperature of the hybrid system is high.
  The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.
  The vehicle has been left in temperatures lower than about 0°C (32°F) for a long period of time etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.
  The remaining battery level indicated in the energy monitor display is low. (→P. 128)
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.
- The windshield defogger is in use.

■ **Switching to EV drive mode when the gasoline engine is cold**

If the hybrid system is started while the gasoline engine is cold, the gasoline engine will start automatically after a short period of time in order to warm up. In this case, you will become unable to switch to EV drive mode.
After the hybrid system has started and the “READY” indicator has illuminated, press the EV drive mode switch before the gasoline engine starts to switch to EV drive mode.

■ **Automatic cancelation of EV drive mode**

When driving in EV drive mode, the gasoline engine may automatically restart in the following situations. When EV drive mode is canceled, a buzzer will sound and the EV drive mode indicator will flash and go off.

- The hybrid battery (traction battery) becomes low.
  The remaining battery level indicated in the energy monitor display is low. (→P. 128)
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.

When it is possible to inform the driver of automatic cancelation in advance, a prior notice screen will appear on the multi-information display.

■ **Possible driving distance when driving in EV drive mode**

EV drive mode’s possible driving distance ranges from a few hundred meters to approximately 1 km (0.6 mile). However, depending on vehicle conditions, there are situations when EV drive mode cannot be used. (The distance that is possible depends on the hybrid battery [traction battery] level and driving conditions.)

■ **Fuel economy**

The hybrid system is designed to achieve the best possible fuel economy during normal driving (using the gasoline engine and electric motor [traction motor]). Driving in EV drive mode more than necessary may lower fuel economy.


⚠ WARNING

■ **Caution while driving**

When driving in EV drive mode, pay special attention to the area around the vehicle. Because there is no engine noise, pedestrians, people riding bicycles or other people and vehicles in the area may not be aware of the vehicle starting off or approaching them, so take extra care while driving.

Hybrid transmission

Shifting the shift lever

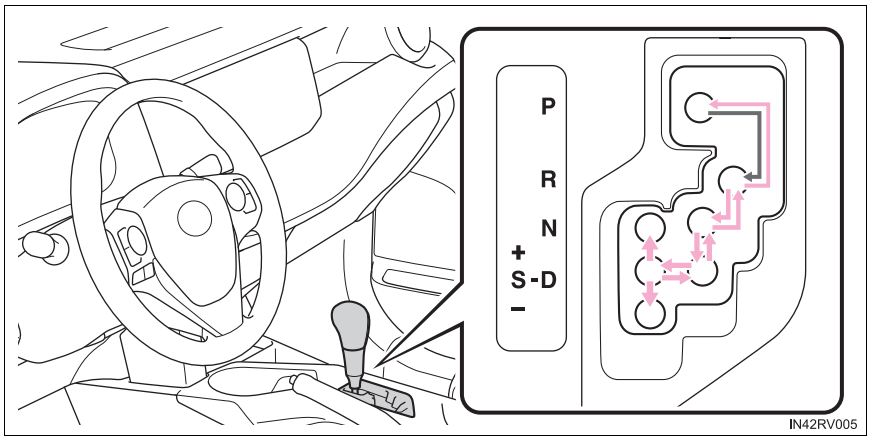

While the power switch is in ON mode, move the shift lever with the brake pedal depressed.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

Shift position purpose

Shift position	Purpose/function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral (Condition in which the power is not transmitted)
D	Normal driving*1
S	S mode driving*2 (→P. 321)

*1: To improve fuel efficiency and reduce noises, set the shift lever in the D position for normal driving.

*2: By selecting shift ranges using S mode, you can control accelerating forces and engine braking forces.

Selecting the driving mode

The following modes can be selected to suit driving conditions.


■ Eco drive mode

Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.

Press the “ECO MODE” button to select Eco drive mode.

The “ECO MODE” indicator light will come on.

Press the button again to cancel Eco drive mode.

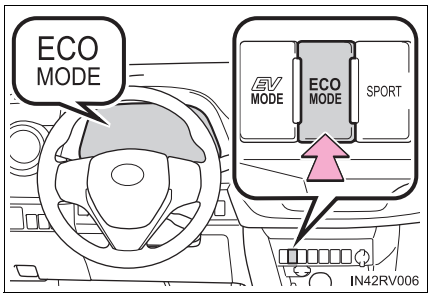


■ Sport mode

Use sport mode for sporty driving or driving in mountainous regions.

Press the “SPORT” button to select sport mode.

The “SPORT” indicator light will come on.

Press the button again to cancel sport mode.

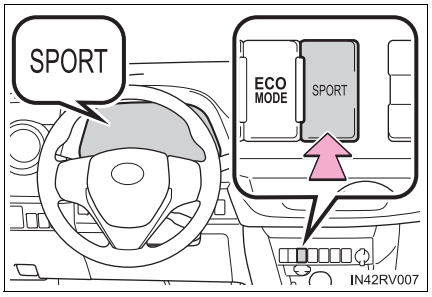


Selecting shift ranges in the S position

To enter S mode, shift the shift lever to S. Shift ranges can be selected by operating the shift lever allowing you to drive in the shift range of your choosing.

① Upshifting

② Downshifting

The selected shift range, from S1 to S6, will be displayed on the multi-information display.
The initial shift range in S mode is automatically set to between S2 and S5 according to vehicle speed.

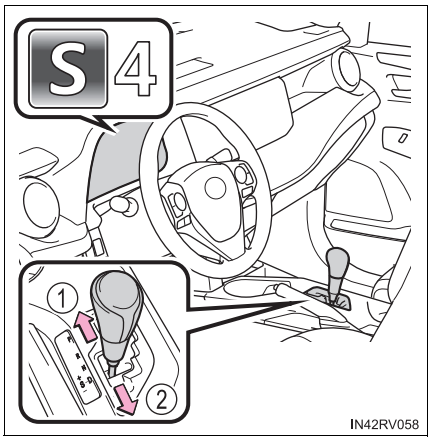

■ Shift ranges and their functions

- You can choose from 6 levels of accelerating force and engine braking force.
- A lower shift range will provide greater accelerating force and engine braking force than a higher shift range, and the engine revolutions will also increase.
- If you accelerate while in ranges 1 to 5, the shift range may automatically shift up in accordance with the engine speed.

■ **Downshifting restrictions warning buzzer**

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever is operated. (A buzzer will sound twice.)

■ **Operation of the air conditioning system in Eco drive mode**

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency (→P. 449). To improve air conditioning performance, adjust the fan speed or turn off Eco drive mode.

■ **Deactivation of the driving mode**

- Eco drive mode will not be canceled until the “ECO MODE” button is pressed, even if the hybrid system is turned off after driving in Eco drive mode.
- Sport mode will be canceled if the hybrid system is turned off after driving in sport mode.

■ **When driving with cruise control or dynamic radar cruise control activated (if equipped)**

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate because cruise control or dynamic radar cruise control will not be canceled.

- While driving in D position or S mode, downshifting to 5 or 4. (→P. 321)
- When switching the driving mode to sport mode while driving in D position. (→P. 320)

■ **Shift lock system**

The shift lock system is a system to prevent accidental operation of the shift lever in starting.

The shift lever can be shifted from P only when the power switch is in ON mode and the brake pedal is being depressed.

■ **If the shift lever cannot be shifted from P**

First, check whether the brake pedal is being depressed.

If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.

Releasing the shift lock:


1 Set the parking brake.

2 Turn the power switch off.

3 Depress the brake pedal.


4 Pry the cover up with a flathead screwdriver or equivalent tool.

To prevent damage to the cover, cover the tip of the screwdriver with a rag.

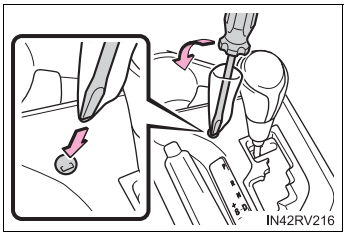

5 Press the shift lock override button.

The shift lever can be shifted while the button is pressed.

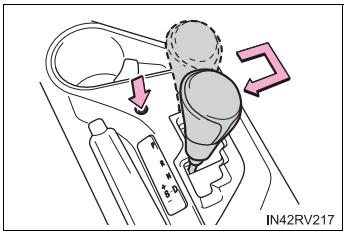

WARNING

■ **When driving on slippery road surfaces**

Be careful of downshifting and sudden acceleration, as this could result in the vehicle skidding to the side or spinning.

■ **To prevent an accident when releasing the shift lock**

Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal.

If the accelerator pedal is accidentally depressed instead of the brake pedal when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start, possibly leading to an accident resulting in death or serious injury.

NOTICE

■ **Hybrid battery (traction battery) charge precaution**

If the shift lever is in N, the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the shift lever in N for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.

Turn signal lever

Operating instructions

① Right turn


② Lane change to the right (move the lever partway and release it)

The right hand signals will flash 3 times.

③ Lane change to the left (move the lever partway and release it)

The left hand signals will flash 3 times.

④ Left turn

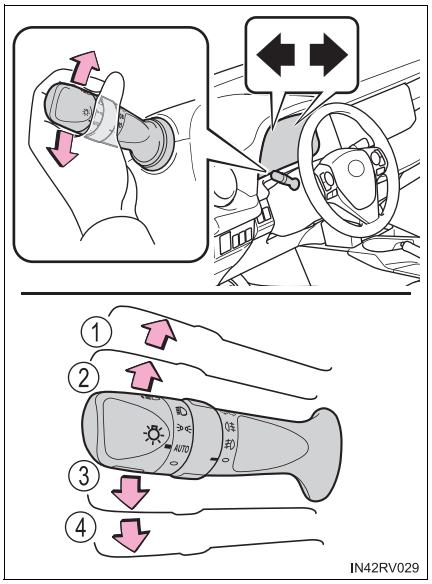

■ **Turn signals can be operated when**

The power switch is in ON mode.

■ **If the indicator flashes faster than usual**

Check that a light bulb in the front or rear turn signal lights has not burned out.

■ **If the turn signals stop flashing before a lane change has been performed**

Operate the lever again.

■ **To discontinue flashing of the turn signals during a lane change**

Operate the lever in the opposite direction.

■ **Customization**

The setting of the turn signals flash during a lane change can be changed. (Customizable features: →P. 663)


Parking brake

① Sets the parking brake

Fully pull the parking brake while depressing the brake pedal.

② Releases the parking brake

Slightly raise the lever and lower it completely while pressing the button.

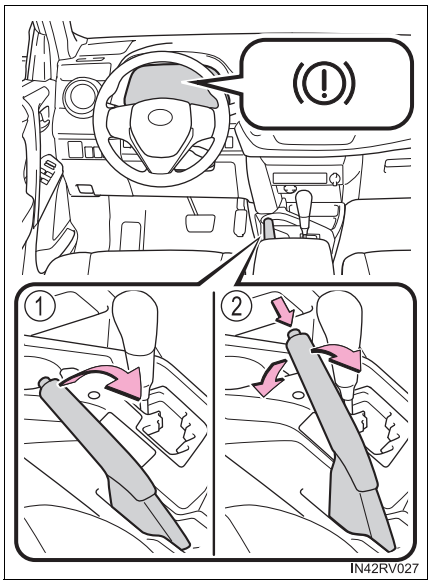

■ **Parking the vehicle**

→P. 288

■ **Parking brake engaged warning buzzer**

→P. 571

■ **Usage in winter time**

→P. 436

⚠ NOTICE

■ **Before driving**

Fully release the parking brake.
Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear.

Headlight switch

The headlights can be operated manually or automatically.

Operating instructions

Turning the end of the lever turns on the lights as follows:


▶ With headlight control sensor

① The front position, tail, license plate and instrument panel lights turn on.

② The headlights and all lights listed above turn on.

③ AUTO The headlights, daytime running lights (→P. 330) and all the lights listed above turn on and off automatically.
(When the power switch is in ON mode)

④ The daytime running lights turn on. (→P. 330)
(if equipped)

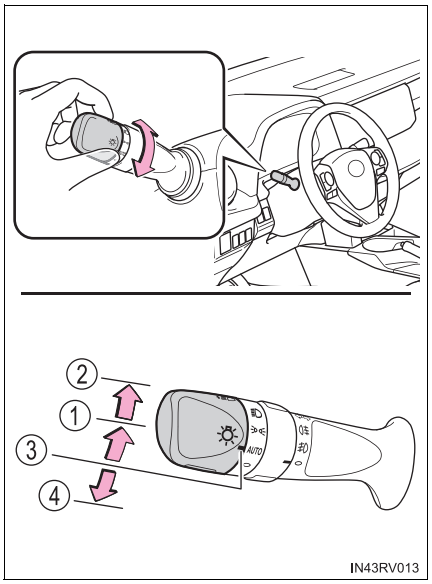


▶ Without headlight control sensor

① The front position, tail, license plate and instrument panel lights turn on.

② The headlights and all lights listed above turn on.

③ The daytime running lights turn on. (→P. 330)

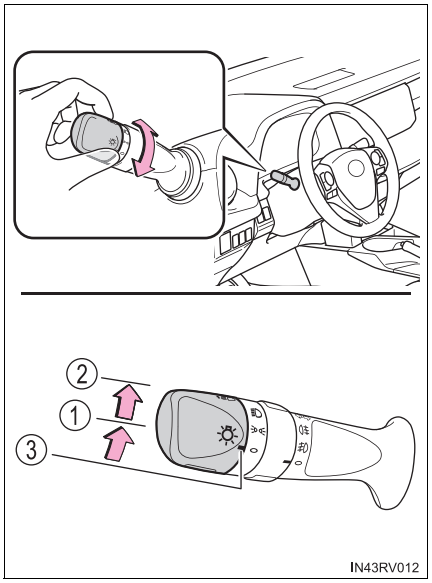


Turning on the high beam headlights

① With the headlights on, push the lever away from you to turn on the high beams.

Pull the lever toward you to the center position to turn the high beams off.

② Pull the lever toward you and release it to flash the high beams once.

You can flash the high beams with the headlights on or off.

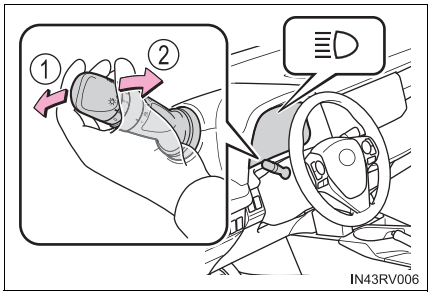


Manual headlight leveling dial (if equipped)

The level of the headlights can be adjusted according to the number of passengers and the loading condition of the vehicle.

① Lowers the level of the headlights

② Raises the level of the headlights

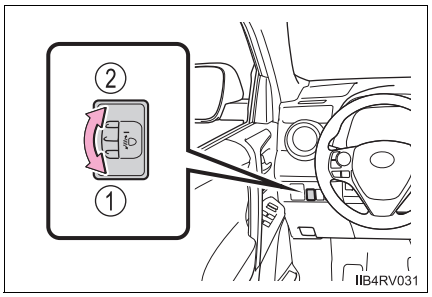

■ Guide to dial settings


Occupancy and luggage load conditions		Dial position
Occupants	Luggage load	
Driver	None	0
Driver and front passenger	None	0
All seats occupied	None	1.5
All seats occupied	Full luggage loading	3
Driver	Full luggage loading	4.5

Follow me home system

This system allows the headlights to be turned on for 30 seconds when the power switch is turned off.

Pull the lever toward you and release it with the light switch is in AUTO or O after turning the power switch off.

Pull the lever toward you and release it again to turn off the lights.

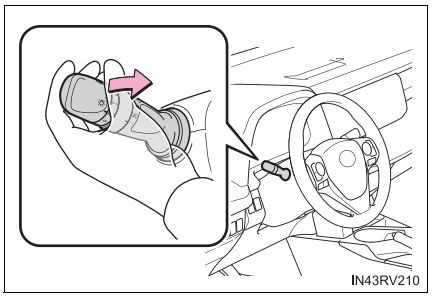


Daytime running light system

To make your vehicle more visible to other drivers during daytime driving, the daytime running lights turn on automatically whenever the hybrid system is started and the parking brake is released with the headlight switch off or in AUTO position. (Illuminate brighter than the front position lights.). Daytime running lights are not designed for use at night.

Headlight control sensor (if equipped)

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.
Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

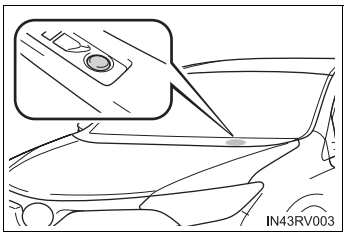

■ **Automatic light off system**

▶ Type A

● When the light switch is in or :
The headlights and front fog lights turn off after the power switch is turned off.

● When the light switch is in AUTO:
The lights turn off after the power switch is turned off.

▶ Type B

● The headlights and front fog lights turn off after the power switch is turned off.

To turn the lights on again, turn the power switch to ON mode, or turn the light switch off once, or turn the light switch to AUTO once and then back to or .

■ **Light reminder buzzer**

A buzzer sounds when the power switch is turned off and the driver's door is opened while the lights are turned on.

■ **Automatic headlight leveling system (if equipped)**

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

■ **Customization**

Settings (e.g. light sensor sensitivity) can be changed.
(Customizable features: →P. 663)

⚠ NOTICE
■ **To prevent 12-volt battery discharge** Do not leave the lights on longer than necessary when the hybrid system is off.

Automatic High Beam*

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of vehicles ahead etc., and automatically turns the high beam on or off as necessary.

⚠ WARNING

■ **Limitations of the Automatic High Beam**

Do not rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning the high beam on or off manually if necessary.


■ **To prevent incorrect operation of the Automatic High Beam system**

Do not overload the vehicle.

Activating the Automatic High Beam system

Push the lever away from you with the headlight switch in the AUTO position.

The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

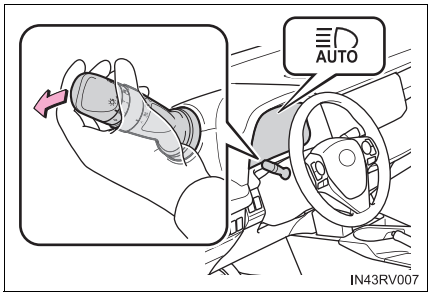

*: If equipped


Turning the high beam on/off manually

■ Switching to low beam

Pull the lever to the original position.

The Automatic High Beam indicator will turn off.


Push the lever away from you to activate the Automatic High Beam system again.

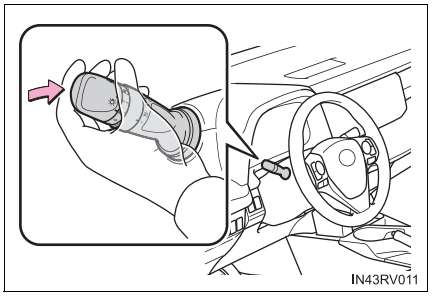

■ Switching to high beam

Turn the light switch to position.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

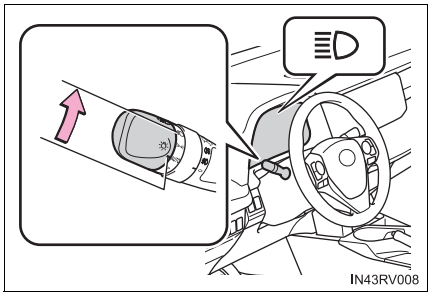

■ **High beam automatic turning on or off conditions**

- When all of the following conditions are fulfilled, the high beam will be automatically turned on (after approximately 1 second):
  - Vehicle speed is above approximately 40 km/h (25 mph).
  - The area ahead of the vehicle is dark.
  - There are no vehicles ahead with headlights or tail lights turned on.
  - There are few streetlights on the road ahead.
- If any of the following conditions are fulfilled, the high beam will be automatically turned off:
  - Vehicle speed drops below approximately 30 km/h (19 mph).
  - The area ahead of the vehicle is not dark.
  - Vehicles ahead have headlights or tail lights turned on.
  - There are many streetlights on the road ahead.

■ **Camera sensor detection information**

- The high beam may not be automatically turned off in the following situations:
  - When oncoming vehicles suddenly appear from a curve
  - When the vehicle is cut in front of by another vehicle
  - When vehicles ahead are hidden from sight due to repeated curves, road dividers or roadside trees
  - When vehicles ahead appear from the faraway lane on wide road
  - When vehicles ahead have no lights
- The high beam may be turned off if vehicles ahead that is using fog lights without using the headlights is detected.
- House lights, street lights, traffic signals, and illuminated billboards or signs may cause the high beam to switch to the low beams, or the low beams to remain on.
- The following factors may affect the amount of time taken to turn the high beam on or off:
  - The brightness of headlights, fog lights, and tail lights of vehicles ahead
  - The movement and direction of vehicles ahead
  - When a vehicle ahead only has operational lights on one side
  - When a vehicle ahead is a two-wheeled vehicle
  - The condition of the road (gradient, curve, condition of the road surface etc.)
  - The number of passengers and amount of luggage
- The high beam may be turned on or off when the driver does not expect it.
- Bicycles or similar objects may not be detected.

● In the situations shown below, the system may not be able to accurately detect surrounding brightness levels. This may cause the low beams to remain on or the high beams to cause problems for pedestrians, vehicles ahead or other parties. In these cases, manually switch between the high and low beams.

- In bad weather (rain, snow, fog, sandstorms etc.)
- The windshield is obscured by fog, mist, ice, dirt etc.
- The windshield is cracked or damaged.
- The camera sensor is deformed or dirty.
- The camera sensor temperature is extremely high.
- Surrounding brightness levels are equal to those of headlights, tail lights or fog lights.
- Vehicles ahead have headlights that are either switched off, dirty, are changing color, or are not aimed properly.
- When driving through an area of intermittently changing brightness and darkness.
- When frequently and repeatedly driving ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel tracks etc.).
- When frequently and repeatedly taking curves or driving on a winding road.
- There is a highly reflective object ahead of the vehicle, such as a sign or a mirror.
- The back of a vehicle ahead is highly reflective, such as a container on a truck.
- The vehicle's headlights are damaged or dirty.
- The vehicle is listing or tilting, due to a flat tire, a trailer being towed etc.
- The high beam and low beam are repeatedly being switched between in an abnormal manner.
- The driver believes that the high beam may be causing problems or distress to other drivers or pedestrians nearby.

■ **If a warning message of the Automatic High Beam is displayed**

It may indicate a malfunction in the system. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Customization**

The Automatic High Beam can be turned off.
(Customizable features: →P. 663)

Fog light switch

The fog lights secure excellent visibility in difficult driving conditions, such as in rain and fog.

▶ Front and rear fog light switch


① Turns the front and rear fog lights off

② Turns the front fog lights on

③ Turns both front and rear fog lights on

Releasing the switch ring returns it to .

Operating the switch ring again turns only the rear fog lights off.

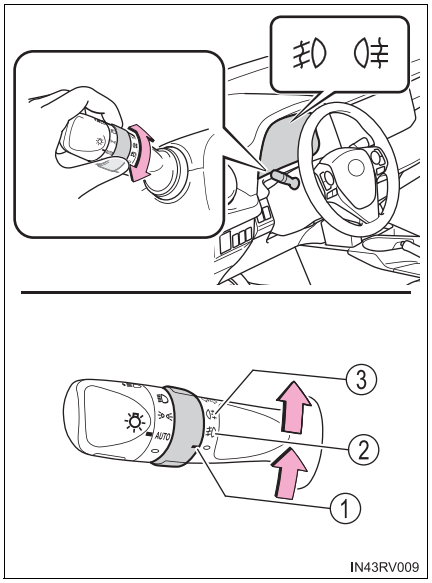


▶ Rear fog light switch

① Turns the rear fog lights off

② Turns the rear fog lights on

Releasing the switch ring returns it to .

Operating the switch ring again turns the rear fog lights off.

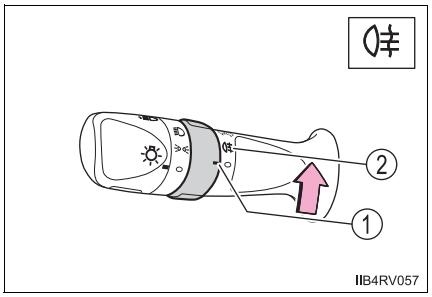

■ **Fog lights can be used when**

▶ Vehicles with front and rear fog light switch

Front fog lights: The headlights or the front position lights are turned on.
Rear fog lights: The front fog lights are turned on.

▶ Vehicles with rear fog light switch

The headlights are turned on.


Windshield wipers and washer

Operating the wiper lever

The wiper operation is selected by moving the lever as follows.


① Rain-sensing operation
② Low speed operation
③ High speed operation
④ Temporary operation

When “AUTO” is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

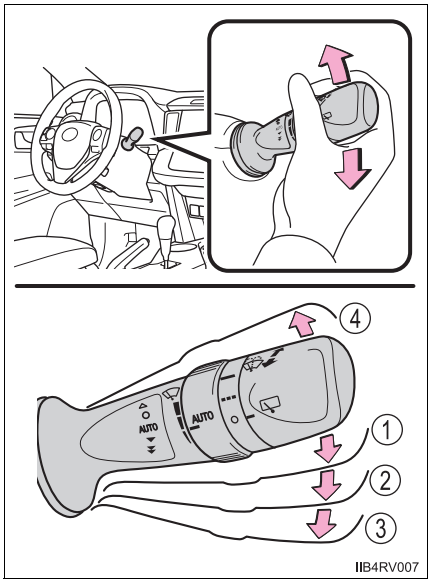

The sensor sensitivity can be adjusted when “AUTO” is selected.


⑤ Increases the sensitivity
⑥ Decreases the sensitivity

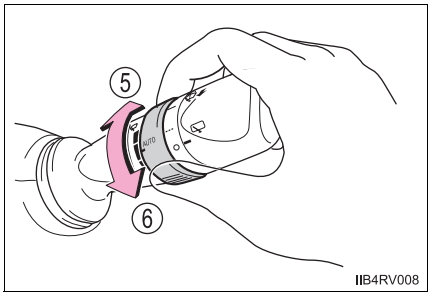

⑦ Washer/wiper dual operation

The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with the headlight cleaners: If the headlights are on, the headlight cleaners will operate once. And then, the headlight cleaners will operate every five times you pull the lever.

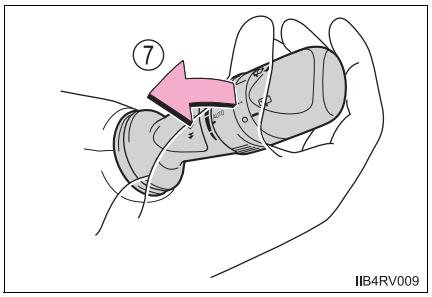


■ **The windshield wipers and washer can be operated when**

The power switch is in ON mode.

■ **Raindrop sensor**

● The raindrop sensor judges the amount of raindrops.

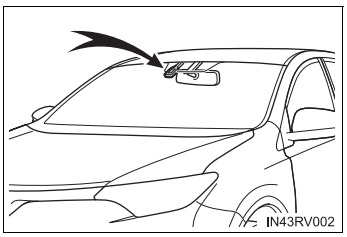

● If the wiper switch is turned to the “AUTO” position while the power switch is in ON mode, the wiper will operate once to show that “AUTO” mode is activated.

● If the wiper sensitivity is adjusted to higher, the wiper may operate once to indicate the change of sensitivity.

● If the temperature of the raindrop sensor is 90°C (194°F) or higher, -15°C (5°F) or lower, the automatic operation may not occur. In this case, operate the wipers in any mode other than “AUTO”.

■ **If no windshield washer fluid sprays**

Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.

■ **Washer nozzle heaters (if equipped)**

The washer nozzle heaters operate to prevent frozen washer nozzle when the outside temperature is 5°C (41°F) or less and the power switch is in ON mode.

WARNING

■ **Caution regarding the use of windshield wipers in “AUTO” mode**

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in “AUTO” mode. Take care that your fingers or anything else do not become caught in the windshield wipers.

■ **Caution regarding the use of washer fluid**

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

■ **When the washer nozzle heaters are operating (if equipped)**

Do not touch the area around the washer nozzle, as they can become very hot and burn you.

NOTICE

■ **When the windshield is dry**

Do not use the wipers, as they may damage the windshield.

■ **When the washer fluid tank is empty**

Do not operate the switch continually as the washer fluid pump may overheat.

■ **When a nozzle becomes blocked**

In this case, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
Do not try to clear it with a pin or other object. The nozzle will be damaged.

■ **To prevent 12-volt battery discharge**


Do not leave the wipers on longer than necessary when the hybrid system is off.

Rear window wiper and washer


Turning the end of the lever turns on the rear window wiper, and pushing the lever away from you turns on the rear window wiper and washer.

① Intermittent operation

② Normal operation

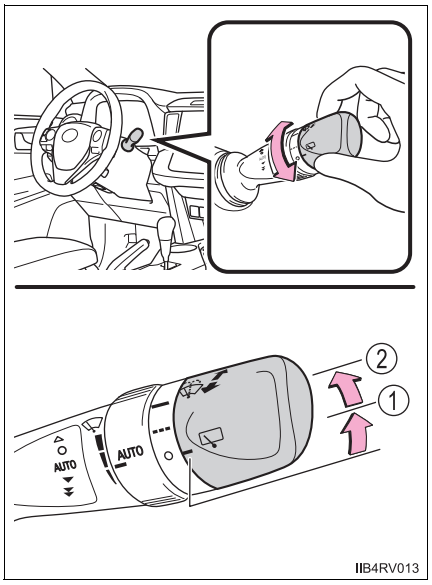

③ Washer/wiper dual operation

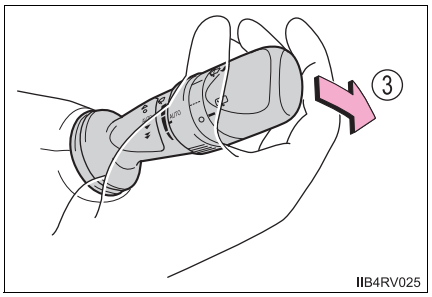

■ **The rear window wiper and washer can be operated when**

The power switch is in ON mode.

■ **If no washer fluid sprays**

Check that the washer nozzle is not blocked if there is washer fluid in the washer fluid reservoir.

⚠ NOTICE

■ **When the rear window is dry**

Do not use the wiper, as it may damage the rear window.

■ **When the washer fluid tank is empty**

Do not operate the switch continually as the washer fluid pump may overheat.

Opening the fuel tank cap

Perform the following steps to open the fuel tank cap:

Before refueling the vehicle

- Close all the doors and windows, and turn the power switch off.
- Confirm the type of fuel.

Fuel types

→P. 655

Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your vehicle has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

WARNING

When refueling the vehicle

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel.
  Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle.
  Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.
  This may cause static electricity to build up, resulting in a possible ignition hazard.

When refueling

Observe the following precautions to prevent fuel overflowing from the fuel tank:

- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.


NOTICE

Refueling


Do not spill fuel during refueling.
Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

Opening the fuel tank cap

1 Pull up the opener to open the fuel filler door.

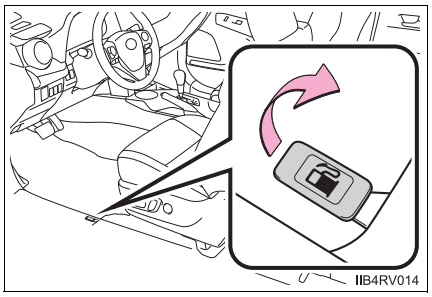


2 Turn the fuel tank cap slowly to remove it and put it into the holder on the fuel filler door.

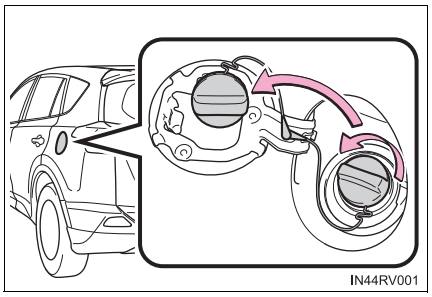

Closing the fuel tank cap

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

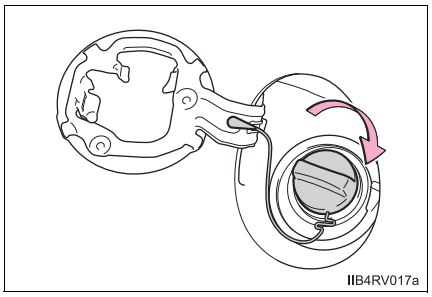

⚠ WARNING

■ When replacing the fuel tank cap

Do not use anything but a genuine Toyota fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

Toyota Safety Sense*

The Toyota Safety Sense consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

◆ PCS (Pre-Crash Safety system)

→P. 358

◆ LDA (Lane Departure Alert with steering control)

→P. 374

◆ Automatic High Beam

→P. 332

◆ RSA (Road Sign Assist)

→P. 383

◆ Dynamic radar cruise control

→P. 388

⚠ WARNING

■ Toyota Safety Sense

The Toyota Safety Sense is designed to operate under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants and the vehicle in the case of a collision or assist the driver in normal driving conditions.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

*: If equipped

Vehicle data recording

The pre-crash safety system is equipped with a sophisticated computer that will record certain data, such as:

- Accelerator status
- Brake status
- Vehicle speed
- Operation status of the pre-crash safety system functions
- Information (such as the distance and relative speed between your vehicle and the vehicle ahead or other objects)

The pre-crash safety system does not record conversations, sounds or pictures.

● Data usage

Toyota may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

Toyota will not disclose the recorded data to a third party except:


- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Toyota in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

Sensors

Two types of sensors, located behind the front grille and windshield, detect information necessary to operate the drive assist systems.

① Radar sensor

② Camera sensor

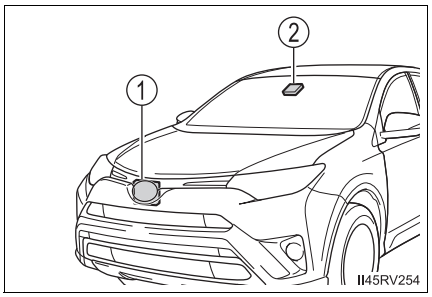

WARNING

■ **To avoid malfunction of the radar sensor**

Observe the following precautions.

Otherwise, the radar sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.


- Keep the radar sensor and front grille emblem clean at all times.

① Radar sensor

② Front grille emblem

If the front of the radar sensor or the front or back of the front grille emblem is dirty or covered with water droplets, snow, etc., clean it.

Clean the radar sensor and front grille emblem with a soft cloth so you do not mark or damage them.

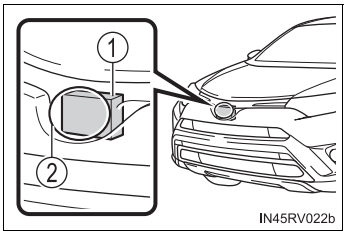

- Do not attach accessories, stickers (including transparent stickers) or other items to the radar sensor, front grille emblem or surrounding area.
- Do not subject the radar sensor or surrounding area to a strong impact.
  If the radar sensor, front grille, or front bumper has been subjected to a strong impact, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not disassemble the radar sensor.
- Do not modify or paint the radar sensor, front grille emblem or surrounding area.
- If the radar sensor, front grille, or front bumper needs to be removed and installed, or replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


WARNING

■ **To avoid malfunction of the camera sensor**

Observe the following precautions.

Otherwise, the camera sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the windshield clean at all times.
  - If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clear the windshield.
  - If a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets, etc. from the area of the windshield in front of the camera sensor.
  - If the inner side of the windshield where the camera sensor is installed is dirty, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not attach objects, such as stickers, transparent stickers, etc., and so forth, to the outer side of the windshield in front of the camera sensor (shaded area in the illustration).
  A: From the top of the windshield to approximately 1 cm (0.4 in.) below the bottom of the camera sensor
  B: Approximately 20 cm (7.9 in.) (Approximately 10 cm (4.0 in.) to the right and left from the center of the camera sensor)

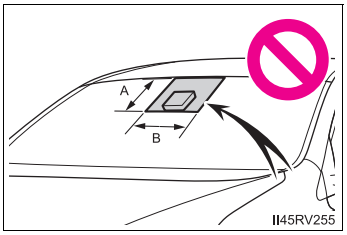

- If the part of the windshield in front of the camera sensor is fogged up or covered with condensation or ice, use the windshield defogger to remove the fog, condensation or ice. (→P. 446)
- If water droplets cannot be properly removed from the area of the windshield in front of the camera sensor by the windshield wipers, replace the wiper insert or wiper blade.
  If the wiper inserts or wiper blades need to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not attach window tinting to the windshield.
- Replace the windshield if it is damaged or cracked.
  If the windshield needs to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not get the camera sensor wet.
- Do not allow bright lights to shine into the camera sensor.

WARNING

- Do not dirty or damage the camera sensor.
  When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens. Also, do not touch the lens.
  If the lens is dirty or damaged, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not subject the camera sensor to a strong impact.
- Do not change the installation position or direction of the camera sensor or remove it.
- Do not disassemble the camera sensor.
- Do not modify any components of the vehicle around the camera sensor (inside rear view mirror, etc.) or ceiling.
- Do not attach any accessories that may obstruct the camera sensor to the hood, front grille or front bumper. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the camera sensor.
- Do not modify the headlights or other lights.

■ **Certification**

Transmitter:	Model: DNMWR008 Operation frequency: 76.5 GHz Maximum output power: 2.14 W or less
Manufacturer:	DENSO CORPORATION
Address:	1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan

Hereby, DENSO CORPORATION declares that the radio equipment type DNMWR008 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.denso.co.jp/en/contactus/form/doc/index.html 01
DENSO CORPORATION vakuuttaa, että radiolaitetyyppi DNMWR008 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.denso.co.jp/en/contactus/form/doc/index.html 02
Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur DNMWR008 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.denso.co.jp/en/contactus/form/doc/index.html 03
Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type DNMWR008 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: https://www.denso.co.jp/en/contactus/form/doc/index.html 04

Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning DNMWR008 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://www.denso.co.jp/en/contactus/form/doc/index.html 05
Hermed erklærer DENSO CORPORATION, at radioudstyrstypen DNMWR008 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www.denso.co.jp/en/contactus/form/doc/index.html 06
Hiermit erklärt DENSO CORPORATION, dass der Funkanlagentyp DNMWR008 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.denso.co.jp/en/contactus/form/doc/index.html 07
Με την παρούσα ο/η DENSO CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός DNMWR008 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: https://www.denso.co.jp/en/contactus/form/doc/index.html 08
Il fabbricante, DENSO CORPORATION, dichiara che il tipo di apparecchiatura radio DNMWR008 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://www.denso.co.jp/en/contactus/form/doc/index.html 09

Por la presente, DENSO CORPORATION declara que el tipo de equipo radioeléctrico DNMWR008 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.denso.co.jp/en/contactus/form/doc/index.html 10
O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio DNMWR008 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: https://www.denso.co.jp/en/contactus/form/doc/index.html 11
B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju DNMWR008 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: https://www.denso.co.jp/en/contactus/form/doc/index.html 12
Käesolevaga deklareerib DENSO CORPORATION, et käesolev raadioseadme tüüp DNMWR008 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://www.denso.co.jp/en/contactus/form/doc/index.html 13
DENSO CORPORATION igazolja, hogy a DNMWR008 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: https://www.denso.co.jp/en/contactus/form/doc/index.html 14

DENSO CORPORATION týmto vyhlasuje, že rádiové zariadenie typu DNMWR008 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: https://www.denso.co.jp/en/contactus/form/doc/index.html 15
Tímto DENSO CORPORATION prohlašuje, že typ rádiového zařízení DNMWR008 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: https://www.denso.co.jp/en/contactus/form/doc/index.html 16
DENSO CORPORATION potrjuje, da je tip radijske opreme DNMWR008 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: https://www.denso.co.jp/en/contactus/form/doc/index.html 17
Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas DNMWR008 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.denso.co.jp/en/contactus/form/doc/index.html 18
Ar šo DENSO CORPORATION deklarē, ka radioiekārta DNMWR008 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.co.jp/en/contactus/form/doc/index.html 19

DENSO CORPORATION niniejszym oświadcza, że typ urządzenia radiowego DNMWR008 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.co.jp/en/contactus/form/doc/index.html 20
Hér með lýsir DENSO CORPORATION yfir því að DNMWR008 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.co.jp/en/contactus/form/doc/index.html 21
DENSO CORPORATION erklærer at DNMWR008 er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.co.jp/en/contactus/form/doc/index.html 22
С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение DNMWR008 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.co.jp/en/contactus/form/doc/index.html 23
Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio DNMWR008 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: https://www.denso.co.jp/en/contactus/form/doc/index.html 24

Ovim, DENSO CORPORATION, izjavljuje da ovaj DNMWR008 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC. 25
Ovim, DENSO CORPORATION, deklariše da je DNMWR008 u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 1999/5/EC. 26
DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa DNMWR008 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: https://www.denso.co.jp/en/contactus/form/doc/index.html 27
Nepermjet kesaj, DENSO CORPORATION, deklaroj qe ky DNMWR008 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC. 28

CE The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:
https://www.denso.co.jp/en/contactus/form/doc/index.html

PCS (Pre-Crash Safety system)*

The pre-crash safety system uses a radar sensor and camera sensor to detect vehicles and pedestrians*1 in front of your vehicle. When the system determines that the possibility of a frontal collision with a vehicle or pedestrian is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with a vehicle or pedestrian is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

The pre-crash safety system can be disabled/enabled and the warning timing can be changed. (→P. 363)

*1: Depending on the region in which the vehicle was sold, the pedestrian detection function may not be available. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.


Countries/areas	Function availability	Regions
Iceland, Ireland, United Kingdom, Italy, Estonia, Austria, Holland, Cyprus, Greece, Croatia, Gibraltar, Malta, Switzerland, Sweden, Spain, Slovakia, Slovenia, Czech Republic, Denmark, Germany, Norway, Hungary, Finland, France, Bulgaria, Belgium, Poland, Portugal, Latvia, Lithuania, Romania, Canary Is, Ukraine	The pedestrian detection function is available	Region A
Israel	The pedestrian detection function is not available	Region B

The countries and areas for each region listed in the table are current as of August 2017. However, depending on when the vehicle was sold, the countries and areas of each region may be different. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.

*: If equipped

◆ Pre-crash warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the multi-information display to urge the driver to take evasive action.

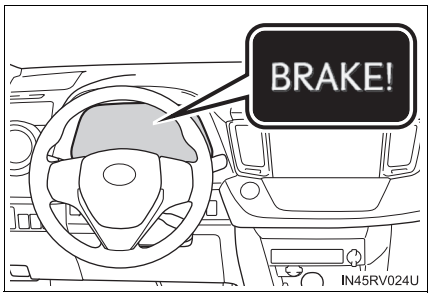

◆ Pre-crash brake assist

When the system determines that the possibility of a frontal collision is high, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

◆ Pre-crash braking

When the system determines that the possibility of a frontal collision is high, the system warns the driver. If the system determines that the possibility of a frontal collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the collision speed.

WARNING

■ **Limitations of the pre-crash safety system**

- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.
  Do not use the pre-crash safety system instead of normal braking operations under any circumstances. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not overly rely on this system. Failure to do so may lead to an accident, resulting in death or serious injury.
- Although this system is designed to help avoid a collision or help reduce the impact of the collision, its effectiveness may change according to various conditions, therefore the system may not always be able to achieve the same level of performance.
  Read the following conditions carefully. Do not overly rely on this system and always drive carefully.
  - Conditions under which the system may operate even if there is no possibility of a collision: →P. 367
  - Conditions under which the system may not operate properly: →P. 369
- Do not attempt to test the operation of the pre-crash safety system yourself, as the system may not operate properly, possibly leading to an accident.

WARNING

■ **Pre-crash braking**

- When the pre-crash braking function is operating, a large amount of braking force will be applied.
- If the vehicle is stopped by the operation of the pre-crash braking function, the pre-crash braking function operation will be canceled after approximately 2 seconds. Depress the brake pedal as necessary.
- The pre-crash braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-crash braking function from operating.
- In some situations, while the pre-crash braking function is operating, operation of the function may be canceled if the accelerator pedal is depressed strongly or the steering wheel is turned and the system determines that the driver is taking evasive action.
- If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-crash braking function.

WARNING

■ **When to disable the pre-crash safety system**

In the following situations, disable the system, as it may not operate properly, possibly leading to an accident resulting in death or serious injury:

- When the vehicle is being towed
- When your vehicle is towing another vehicle
- When transporting the vehicle via truck, boat, train or similar means of transportation
- When the vehicle is raised on a lift with the power switch on and the tires are allowed to rotate freely
- When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer
- When a strong impact is applied to the front bumper or front grille, due to an accident or other reasons
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the tires are not properly inflated
- When the tires are very worn
- When tires of a size other than specified are installed
- When tire chains are installed
- When a compact spare tire or an emergency tire puncture repair kit is used
- If equipment (snow plow, etc.) that may obstruct the radar sensor or camera sensor is temporarily installed to the vehicle

Changing settings of the pre-crash safety system

■ Enabling/disabling the pre-crash safety system

1 Press 〈 or 〉 of the meter control switches and select on the multi-information display.


2 Press ∧ or ∨ of the meter control switches and select , and then press ⊙.

3 Select PCS and then press ⊙.

Each time ⊙ is pressed, the system will be enabled/disabled.

The system is automatically enabled each time the power switch is turned to ON mode.

If the system is disabled, the PCS warning light will turn on and a message will be displayed on the multi-information display.

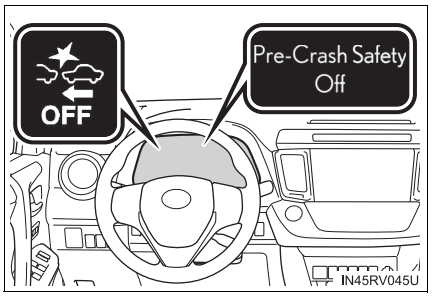

■ **Changing the pre-crash warning timing**

1 Press 〈 or 〉 of the meter control switches and select on the multi-information display.

2 Press ∧ or ∨ of the meter control switches and select , and then press ⊙.

3 Select “Sensitivity” and then press ⊙.

Each time ⊙ is pressed, the operation timing of the warning will be changed.

The operation timing setting is retained when the power switch is turned off.

① Far


The warning will begin to operate earlier than with the default timing.

② Middle

This is the default setting.

③ Near

The warning will begin to operate later than with the default timing.

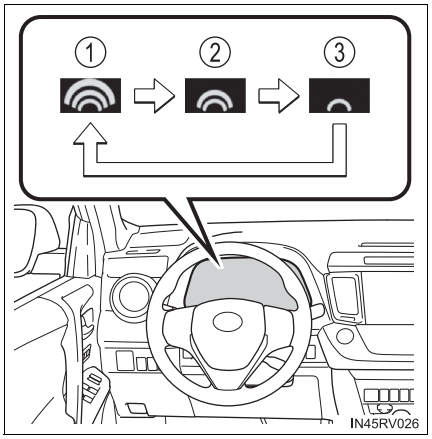

■ **Operational conditions**

Availability of the pedestrian detection function and pre-crash braking function depend on the region in which the vehicle was sold. (For specific countries/areas: →P. 358)

Read the following for details:

▶ Region A
(The pedestrian detection function is available)

The pre-crash safety system is enabled and the system determines that the possibility of a frontal collision with a vehicle or pedestrian is high.

Each function is operational at the following speeds:

● Pre-crash warning:
- Vehicle speed is between approximately 10 and 180 km/h (7 and 110 mph). (For detecting a pedestrian, vehicle speed is between approximately 10 and 80 km/h [7 and 50 mph].)
- The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 10 km/h (7 mph) or more.

● Pre-crash brake assist:
- Vehicle speed is between approximately 30 and 180 km/h (20 and 110 mph). (For detecting a pedestrian, vehicle speed is between approximately 30 and 80 km/h [20 and 50 mph].)
- The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 30 km/h (20 mph) or more.

● Pre-crash braking:
- Vehicle speed is between approximately 10 and 180 km/h (7 and 110 mph). (For detecting a pedestrian, vehicle speed is between approximately 10 and 80 km/h [7 and 50 mph].)
- The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 10 km/h (7 mph) or more.

The system may not operate in the following situations:

● If a 12-volt battery terminal has been disconnected and reconnected and then the vehicle has not been driven for a certain amount of time

● If the shift lever is in R

● If VSC is disabled (only the pre-crash warning function will be operational)

▶ Region B
(The pedestrian detection function is not available)

The pre-crash safety system is enabled and the system determines that the possibility of a frontal collision with a vehicle is high.

Each function is operational at the following speeds:


- Pre-crash warning:
  - Vehicle speed is between approximately 15 and 180 km/h (10 and 110 mph).
  - The relative speed between your vehicle and the vehicle ahead is approximately 10 km/h (7 mph) or more.
- Pre-crash brake assist:
  - Vehicle speed is between approximately 30 and 180 km/h (20 and 110 mph).
  - The relative speed between your vehicle and the vehicle ahead is approximately 30 km/h (20 mph) or more.
- Pre-crash braking:
  - Vehicle speed is between approximately 15 and 180 km/h (10 and 110 mph).
  - The relative speed between your vehicle and the vehicle ahead is approximately 10 km/h (7 mph) or more.

The system may not operate in the following situations:

- If a 12-volt battery terminal has been disconnected and reconnected and then the vehicle has not been driven for a certain amount of time
- If the shift lever is in R
- If VSC is disabled (only the pre-crash warning function will be operational)

■ Pedestrian detection function*2

The pre-crash system detects pedestrians based on the size, profile, and motion of a detected object. However, a pedestrian may not be detected depending on the surrounding brightness and the motion, posture, and angle of the detected object, preventing the system from operating properly. (→P. 367)

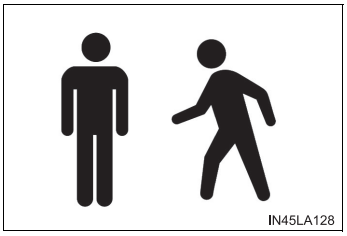

*2: For countries/areas specified as Region B (→P. 358), the pedestrian detection function may not be available.


■ **Cancelation of the pre-crash braking**

If either of the following occur while the pre-crash braking function is operating, it will be canceled:


- The accelerator pedal is depressed strongly.
- The steering wheel is turned sharply or abruptly.

■ **Conditions under which the system may operate even if there is no possibility of a collision**


- In some situations such as the following, the system may determine that there is a possibility of a frontal collision and operate.
  - When passing a vehicle or pedestrian*2
  - When changing lanes while overtaking a preceding vehicle
  - When overtaking a preceding vehicle that is changing lanes
  - When overtaking a preceding vehicle that is making a left/right turn

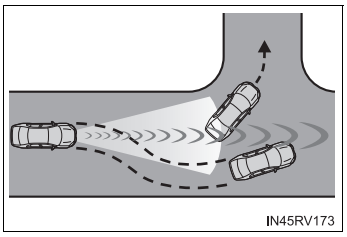


  - When passing a vehicle in an oncoming lane that is stopped to make a right/left turn

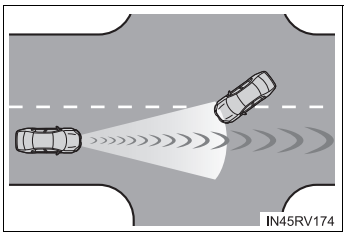


  - When driving on a road where relative location to vehicle ahead in an adjacent lane may change, such as on a winding road

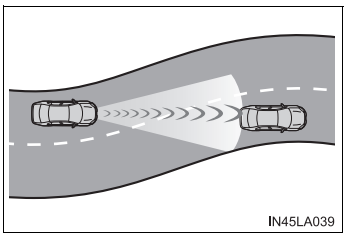


- When rapidly closing on a vehicle ahead
- If the front of the vehicle is raised or lowered, such as when the road surface is uneven or undulating
- When approaching objects on the roadside, such as guardrails, utility poles, trees, or walls
- When there is a vehicle, pedestrian*2, or object by the roadside at the entrance of a curve

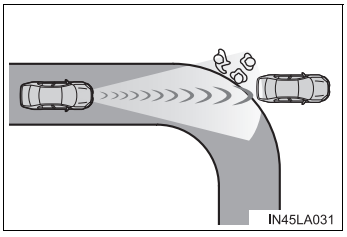


- When driving on a narrow path surrounded by a structure, such as in a tunnel or on an iron bridge
- When there is a metal object (manhole cover, steel plate, etc.), steps, or a protrusion on the road surface or roadside
- When a crossing pedestrian approaches very close to the vehicle*2

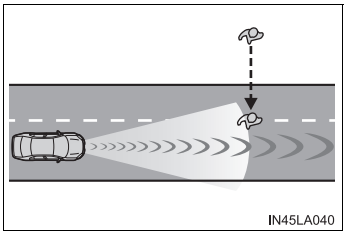


- When passing through a place with a low structure above the road (low ceiling, traffic sign, etc.)

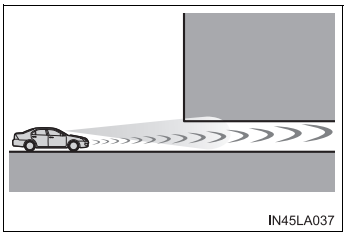

- When passing under an object (billboard, etc.) at the top of an uphill road

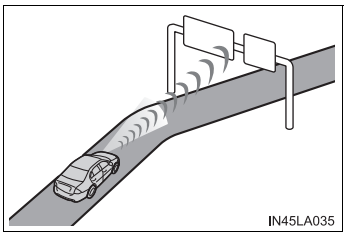

- When rapidly closing on an electric toll gate barrier, parking area barrier, or other barrier that opens and closes
- When using an automatic car wash
- When driving through or under objects that may contact the vehicle, such as thick grass, tree branches, or a banner

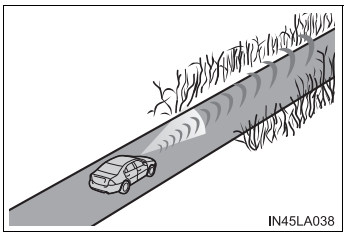


- When the vehicle is hit by water, snow, dust, etc. from a vehicle ahead
- When driving through steam or smoke
- When there are patterns or paint on the road or a wall that may be mistaken for a vehicle or pedestrian*2
- When driving near an object that reflects radio waves, such as a large truck or guardrail
- When driving near a TV tower, broadcasting station, electric power plant, or other location where strong radio waves or electrical noise may be present

*2: For countries/areas specified as Region B (→P. 358), the pedestrian detection function may not be available.


■ Situations in which the system may not operate properly

● In some situations such as the following, a vehicle may not be detected by the radar sensor and camera sensor, preventing the system from operating properly:


- If an oncoming vehicle is approaching your vehicle
- If a vehicle ahead is a motorcycle or bicycle
- When approaching the side or front of a vehicle
- If a preceding vehicle has a small rear end, such as an unloaded truck
- If a preceding vehicle has a low rear end, such as a low bed trailer

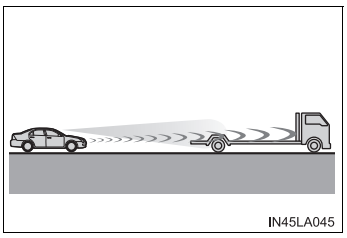

- If a vehicle ahead is carrying a load which protrudes past its rear bumper
- If a vehicle ahead has extremely high ground clearance

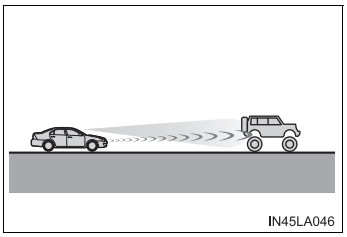


- If a vehicle ahead is irregularly shaped, such as a tractor or side car
- If the sun or other light is shining directly on a vehicle ahead
- If a vehicle cuts in front of your vehicle or emerges from beside a vehicle
- If a vehicle ahead makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)
- When suddenly cutting behind a preceding vehicle
- When a vehicle ahead is not directly in front of your vehicle

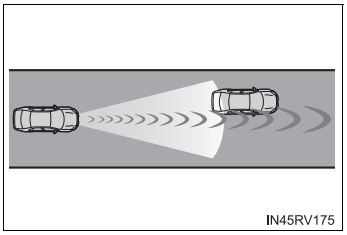

- When driving in inclement weather such as heavy rain, fog, snow or a sandstorm
- When the vehicle is hit by water, snow, dust, etc. from a vehicle ahead
- When driving through steam or smoke
- When driving in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a tunnel
- When a very bright light, such as the sun or the headlights of oncoming traffic, shines directly into the camera sensor
- When the surrounding area is dim, such as at dawn or dusk, or while at night or in a tunnel

- After the hybrid system has started the vehicle has not been driven for a certain amount of time
- While making a left/right turn and for a few seconds after making a left/right turn
- While driving on a curve and for a few seconds after driving on a curve
- If your vehicle is skidding
- If the front of the vehicle is raised or lowered

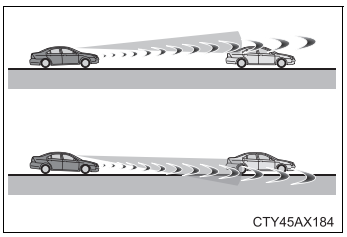

- If the wheels are misaligned
- If a wiper blade is blocking the camera sensor
- The vehicle is wobbling.
- The vehicle is being driven at extremely high speeds.
- When driving on a hill
- If the radar sensor or camera sensor is misaligned

● In some situations such as the following, sufficient braking force may not be obtained, preventing the system from performing properly:

- If the braking functions cannot operate to their full extent, such as when the brake parts are extremely cold, extremely hot, or wet
- If the vehicle is not properly maintained (brakes or tires are excessively worn, improper tire inflation pressure, etc.)
- When the vehicle is being driven on a gravel road or other slippery surface

● Some pedestrians such as the following may not be detected by the radar sensor and camera sensor, preventing the system from operating properly*2:

- Pedestrians shorter than approximately 1 m (3.2 ft.) or taller than approximately 2 m (6.5 ft.)
- Pedestrians wearing oversized clothing (a rain coat, long skirt, etc.), making their silhouette obscure
- Pedestrians who are carrying large baggage, holding an umbrella, etc., hiding part of their body
- Pedestrians who are bending forward or squatting
- Pedestrians who are pushing a stroller, wheelchair, bicycle or other vehicle
- Groups of pedestrians which are close together
- Pedestrians who are wearing white and look extremely bright
- Pedestrians in the dark, such as at night or while in a tunnel
- Pedestrians whose clothing appears to be nearly the same color or brightness as their surroundings
- Pedestrians near walls, fences, guardrails, or large objects
- Pedestrians who are on a metal object (manhole cover, steel plate, etc.) on the road
- Pedestrians who are walking fast
- Pedestrians who are changing speed abruptly
- Pedestrians running out from behind a vehicle or a large object
- Pedestrians who are extremely close to the side of the vehicle (outside rear view mirror, etc.)

*2: For countries/areas specified as Region B (→P. 358), the pedestrian detection function may not be available.

■ **If the PCS warning light flashes or illuminates and a warning message is displayed on the multi-information display**

The pre-crash safety system may be temporarily unavailable or there may be a malfunction in the system.

- In the following situations, the warning light will turn off, the message will disappear and the system will become operational when normal operating conditions return:
  - When the radar sensor or camera sensor or the area around either sensor is hot, such as in the sun
  - When the radar sensor or camera sensor or the area around either sensor is cold, such as in an extremely cold environment
  - When a front sensor is dirty or covered with snow, etc.
  - When the part of the windshield in front of the camera sensor is fogged up or covered with condensation or ice
    (Defogging the windshield: →P. 446)
  - If the camera sensor is obstructed, such as when the hood is open or a sticker is attached to the windshield near the camera sensor
- If the PCS warning light continues to flash or remains illuminated or the warning message does not disappear even though the vehicle has returned to normal, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ **If VSC is disabled**


- If VSC is disabled (→P. 428), the pre-crash brake assist and pre-crash braking functions are also disabled.
- The PCS warning light will turn on and “VSC Turned Off Pre-crash Brake System Unavailable” will be displayed on the multi-information display.

LDA (Lane Departure Alert with steering control)*

Summary of functions

When driving on highways and freeways with white (yellow) lines, this function alerts the driver when the vehicle might depart from its lane and provides assistance by operating the steering wheel to keep the vehicle in its lane.

The LDA system recognizes visible white (yellow) lines with the camera sensor on the upper portion of the front windshield.

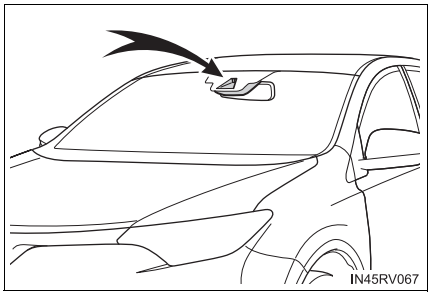


Functions included in LDA system

◆ Lane departure alert function

When the system determines that the vehicle might depart from its lane, a warning is displayed on the multi-information display and the warning buzzer sounds to alert the driver.


When the warning buzzer sounds, check the surrounding road situation and carefully operate the steering wheel to move the vehicle back to the center of the lane.

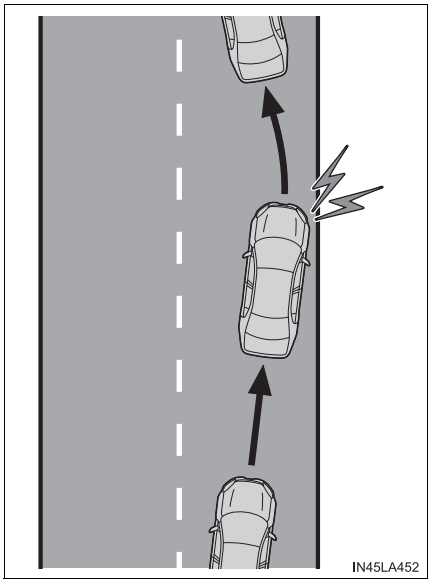

*: If equipped

◆ Steering control function

When the system determines that the vehicle might depart from its lane, the system provides assistance as necessary by operating the steering wheel in small amounts for a short period of time to keep the vehicle in its lane.

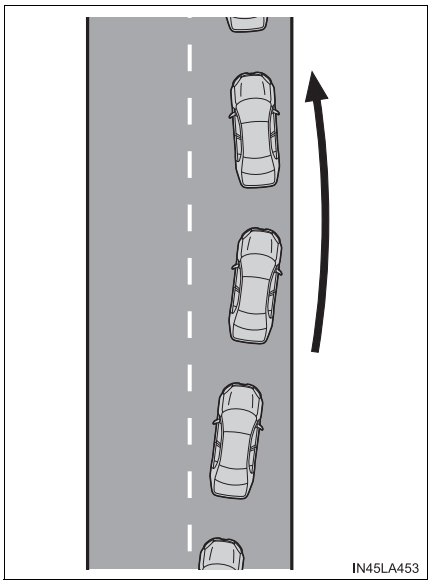


For Israel: If the system detects that the steering wheel has not been operated for a fixed amount of time or the steering wheel is not being firmly gripped, a warning is displayed on the multi-information display and the warning buzzer sounds.

Except for Israel: If the system detects that the steering wheel has not been operated for a fixed amount of time or the steering wheel is not being firmly gripped, a warning is displayed on the multi-information display and the function is temporarily canceled.

◆ Vehicle sway warning

When the vehicle is swaying or appears as if it may depart from its lane multiple times, the warning buzzer sounds and a message is displayed on the multi-information display to alert the driver.

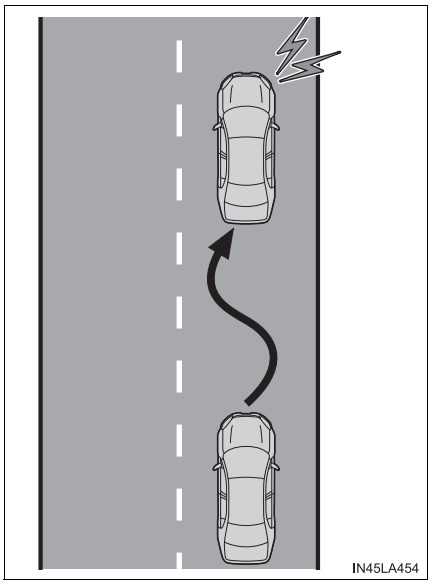

WARNING

■ **Before using LDA system**

Do not rely solely upon the LDA system. The LDA system does not automatically drive the vehicle or reduce the amount of attention that must be paid to the area in front of the vehicle. The driver must always assume full responsibility for driving safely by paying careful attention to the surrounding conditions and operating the steering wheel to correct the path of the vehicle. Also, the driver must take adequate breaks when fatigued, such as from driving for a long period of time.
Failure to perform appropriate driving operations and pay careful attention may lead to an accident, resulting in death or serious injury.

■ **To avoid operating LDA system by mistake**

When not using the LDA system, use the LDA switch to turn the system off.

■ **Situations unsuitable for LDA system**

Do not use the LDA system in the following situations.
The system may not operate properly and lead to an accident, resulting in death or serious injury.

- A spare tire, tire chains, etc., are equipped.
- When the tires have been excessively worn, or when the tire inflation pressure is low.
- Tires which differ by structure, manufacturer, brand or tread pattern are used.
- Objects or patterns that could be mistaken for white (yellow) lines are present on the side of the road (guardrails, curbs, reflective poles, etc.).
- Vehicle is driven on a snow-covered road.
- White (yellow) lines are difficult to see due to rain, snow, fog, dust, etc.
- Asphalt repair marks, white (yellow) line marks, etc., are present due to road repair.
- Vehicle is driven in a temporary lane or restricted lane due to construction work.
- Vehicle is driven on a road surface which is slippery due to rainy weather, fallen snow, freezing, etc.
- Vehicle is driven in traffic lanes other than on highways and freeways.
- Vehicle is driven in a construction zone.
- Vehicle is towing a trailer or another vehicle.

WARNING

■ **Preventing LDA system malfunctions and operations performed by mistake**

- Do not modify the headlights or place stickers, etc., on the surface of the lights.
- Do not modify the suspension etc. If the suspension etc. needs to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not install or place anything on the hood or grille. Also, do not install a grille guard (bull bars, kangaroo bar, etc.).
- If your windshield needs repairs, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Turning LDA system on

Press the LDA switch to turn the LDA system on.

The LDA indicator illuminates and a message is displayed on the multi-information display.

Press the LDA switch again to turn the LDA system off.

When the LDA system is turned on or off, operation of the LDA system continues in the same condition the next time the hybrid system is started.



Indications on multi-information display


① LDA indicator

The illumination condition of the indicator informs the driver of the system operation status.

Illuminated in white:
LDA system is operating.

Illuminated in green:
Steering wheel assistance of the steering control function is operating.

Flashing in amber:
Lane departure alert function is operating.

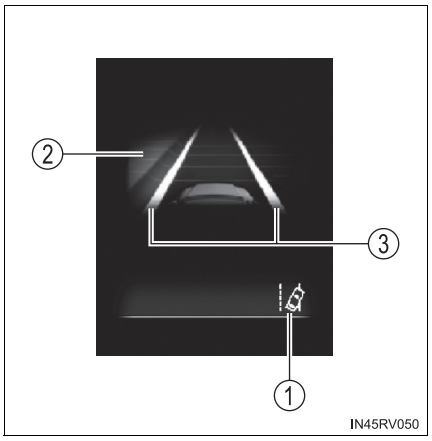


② Operation display of steering wheel operation support

Indicates that steering wheel assistance of the steering control function is operating.

③ Lane departure alert function display


Displayed when the multi-information display is switched to the driving assist system information screen.

▶ Inside of displayed white lines is white

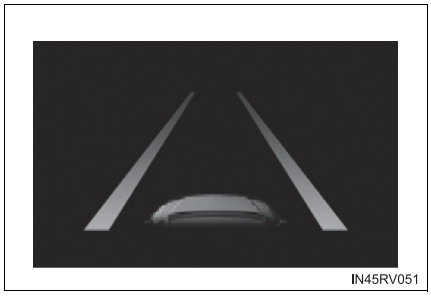

Indicates that the system is recognizing white (yellow) lines. When the vehicle departs from its lane, the white line displayed on the side the vehicle departs from flashes amber.

▶ Inside of displayed white lines is black

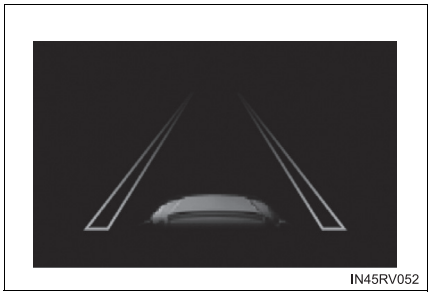

Indicates that the system is not able to recognize white (yellow) lines or is temporarily canceled.

■ **Operation conditions of each function**

● Lane departure alert function

This function operates when all of the following conditions are met.

- LDA is turned on.
- Vehicle speed is approximately 50 km/h (32 mph) or more.
- System recognizes white (yellow) lines.
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- Turn signal lever is not operated.
- Vehicle is driven on a straight road or around a gentle curve with a radius of more than approximately 150 m (492 ft.).
- No system malfunctions are detected. (→P. 382)

● Steering control function

This function operates when all of the following conditions are met in addition to the operation conditions for the lane departure alert function.

- Setting for “Steering Assist” in on the multi-information display is set to “On”. (→P. 658)
- Vehicle is not accelerated or decelerated by a fixed amount or more.
- Steering wheel is not operated with a steering force level suitable for changing lanes.
- ABS, VSC, TRC and PCS are not operating.
- TRC or VSC is not turned off.
- Hands off steering wheel alert is not displayed. (→P. 381)

● Vehicle sway warning

This function operates when all of the following conditions are met.

- Setting for “Sway Warning” in on the multi-information display is set to “On”. (→P. 658)
- Vehicle speed is approximately 50 km/h (32 mph) or more.
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- No system malfunctions are detected. (→P. 382)

■ **Temporary cancellation of functions**

When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. (→P. 380)

■ **Steering control function**

Depending on the vehicle speed, lane departure situation, road conditions, etc., the driver may not feel the function is operating or the function may not operate at all.

■ **Lane departure alert function**

The warning buzzer may be difficult to hear due to external noise, audio playback, etc.

■ **Hands off steering wheel alert**

For Israel: When the system determines that the driver has removed the hands from the steering wheel while the steering control function is operating, a warning message is displayed on the multi-information display.

If the driver continues to keep the hands off of the steering wheel, a buzzer sounds and a warning message is displayed. This alert also operates in the same way when the driver continuously operates the steering wheel only a small amount. However, depending on the road conditions, etc., the function may not cancel.

Except for Israel: When the system determines that the driver has removed the hands from the steering wheel while the steering control function is operating, a warning message is displayed on the multi-information display.

If the driver continues to keep the hands off of the steering wheel, a warning message is displayed and the function is temporarily canceled. This alert also operates in the same way when the driver continuously operates the steering wheel only a small amount. However, depending on the road conditions, etc., the function may not cancel.

■ **White (yellow) lines are only on one side of road**

The LDA system will not operate for the side on which white (yellow) lines could not be recognized.

■ **Conditions in which functions may not operate properly**

In the following situations, the camera sensor may not detect white (yellow) lines and various functions may not operate normally.

- There are shadows on the road that run parallel with, or cover, the white (yellow) lines.
- The vehicle is driven in an area without white (yellow) lines, such as in front of a tollgate or checkpoint, or at an intersection, etc.
- The white (yellow) lines are cracked, “Raised pavement marker” or stones are present.
- The white (yellow) lines cannot be seen or are difficult to see due to sand, etc.
- The vehicle is driven on a road surface that is wet due to rain, puddles, etc.
- The traffic lines are yellow (which may be more difficult to recognize than lines that are white).
- The white (yellow) lines cross over a curb, etc.
- The vehicle is driven on a bright surface, such as concrete.
- The vehicle is driven on a surface that is bright due to reflected light, etc.
- The vehicle is driven in an area where the brightness changes suddenly, such as at the entrances and exits of tunnels, etc.
- Light from the headlights of an oncoming vehicle, the sun, etc., enters the camera.
- The vehicle is driven where the road diverges, merges, etc.

- The vehicle is driven on a slope.
- The vehicle is driven on a road which tilts left or right, or a winding road.
- The vehicle is driven on an unpaved or rough road.
- The vehicle is driven around a sharp curve.
- The traffic lane is excessively narrow or wide.
- The vehicle is extremely tilted due to carrying heavy luggage or having improper tire pressure.
- The distance to the preceding vehicle is extremely short.
- The vehicle is moving up and down a large amount due to road conditions during driving (poor roads or road seams).
- The headlight lenses are dirty and emit a faint amount of light at night, or the beam axis has deviated.
- The vehicle is struck by a crosswind.
- The vehicle has just changed lanes or crossed an intersection.
- Snow tires, etc., are equipped.

■ **Warning messages**

Warning messages are used to indicate a system malfunction or to inform the driver of the need for caution while driving. (→P. 579)

■ **Customization**

The following settings can be changed.


Function	Setting details
Lane departure alert function	Adjust alert sensitivity
Steering control function	Turn steering wheel assistance on and off
Vehicle sway warning function	Turn function on and off
	Adjust alert sensitivity

For how to change settings, refer to P. 657.

RSA (Road Sign Assist)*

Summary of function

RSA recognizes specific road signs using the camera sensor and provides information to the driver via the multi-information display.

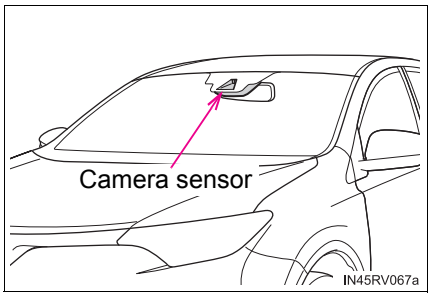

If the system judges that the vehicle is being driven over the speed limit, performing prohibited actions, etc., in relation to the recognized road signs, it alerts the driver using a warning display and warning buzzer*.

*: This setting needs to be customized.

WARNING

■ Before using the RSA

Do not rely solely upon the RSA system. RSA is a system which supports the driver by providing information, but it is not a replacement for a driver's own vision and awareness. Drive safely by always paying careful attention to the traffic rules.


Inappropriate or negligent driving could lead to an unexpected accident.

*: If equipped

Indication on the multi-information display


After the camera sensor recognizes a sign, it is displayed on the multi-information display when the vehicle passes the sign.

- When the driving assist system information is selected, a maximum of 3 signs can be displayed. (→P. 124)

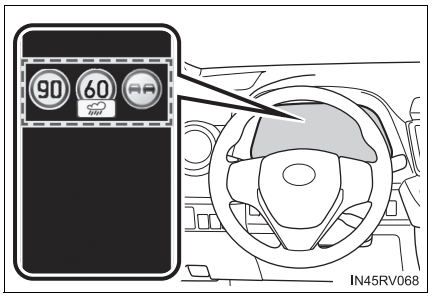

- When other than the driving assist system information is selected, a speed limit sign or an all canceled sign can be displayed. (→P. 124)

  A no overtaking sign and a speed limit sign with supplemental mark are not displayed. However, if signs other than speed limit signs are recognized, they are mentioned in a stack under the current speed limit sign.

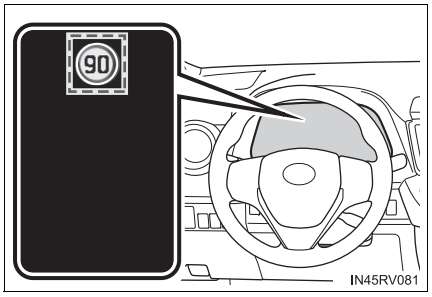

Types of recognized road signs

The following types of road signs, including electronic signs and blinking signs, are recognized.

A non-official (not meeting the Vienna Convention) or a recently introduced traffic sign may not be recognized.

Type		Multi-information display
Speed limit begins/ends		
Speed limit with supplemental mark (Displayed simultaneously with speed limit)  (Display example)	Wet	
	Rain	
	Ice	
	On/off ramp*	
	Supplemental mark exists (Contents not recognized)	
No overtaking begins/ends		
All canceled (All restrictions canceled. Returns to default road regulation.)		

*: If the turn signal indicator is not operated when changing lanes, the mark does not display.

Warning display

In the following situations, the RSA system alerts the driver using a warning display.

- When the vehicle speed exceeds the speed warning threshold applied to the speed limit of the sign displayed on the multi-information display, the sign color becomes inverted.
- If it is detected that your vehicle is overtaking when a no overtaking sign is displayed on the multi-information display, the sign flashes.

Depending on the situation, traffic environment (traffic direction, speed, unit) may be detected incorrectly and a warning display may not operate properly.

■ Automatic turn-off of RSA sign display

One or more signs automatically turn off in the following situations.

- A new sign is not recognized for a certain distance.
- The road changes due to a left or right turn, etc.

■ Conditions in which the function may not operate or detect correctly

In the following situations, RSA does not operate normally and may not recognize signs, display the incorrect sign, etc. However, this does not indicate a malfunction.

- The camera sensor is misaligned due to a strong impact being applied to the sensor, etc.
- Dirt, snow, stickers, etc., are on the windshield near the camera sensor.
- In inclement weather such as heavy rain, fog, snow or sand storms
- Light from an oncoming vehicle, the sun, etc., enters the camera sensor.
- The sign is dirty, faded, tilted or bent, and if an electronic sign, the contrast is poor.
- All or part of the sign is hidden by the leaves of a tree, a pole, etc.
- The sign is only visible to the camera sensor for a short amount of time.
- The driving scene (turning, lane change, etc.) is judged incorrectly.
- Even if it is a sign not appropriate for the currently traveled lane, such a sign exists directly after a freeway branches, or in an adjacent lane just before merging.
- Stickers are attached to the rear of the preceding vehicle.
- A sign resembling a system compatible sign is recognized.
- The vehicle is driven in a country with a different direction of traffic.
- Side road speed signs may be detected and displayed (if positioned in sight of the camera sensor) while the vehicle is traveling on the main road.

- Roundabout exit road speed signs may be detected and displayed (if positioned in sight of the camera sensor) while traveling on a roundabout.
- The speed information displayed on the meter and that displayed on the navigation system (if equipped) may be different due to the navigation system using map data.

■ **When driving vehicle in country with different speed unit**

Since RSA recognizes signs based on the set unit of the meter, it is necessary to change the set unit of the meter. Adjust the set unit of the meter to the speed unit of signs in the current location. (→P. 661)

■ **Turning the system on/off**

1 Press 〈 or 〉 of the meter control switches and select  on the multi-information display.

2 Press ∧ or ∨ of the meter control switches and select , and then press ⊙.

3 Select “Road Sign Assist” and then press ⊙.

■ **Speed limit sign display**

If the power switch was last turned off while a speed limit sign was displayed on the multi-information display, the same sign displays again when the power switch is turned to ON mode.

■ **Customization**

Setting (e.g. speeding warning threshold) can be changed.
(Customizable feature: →P. 661)

Dynamic radar cruise control*


Summary of functions

In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates and decelerates to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control on freeways and highways.

- Vehicle-to-vehicle distance control mode (→P. 391)
- Constant speed control mode (→P. 396)

① Indicators
② Set speed
③ Display
④ Vehicle-to-vehicle distance switch
⑤ Cruise control switch

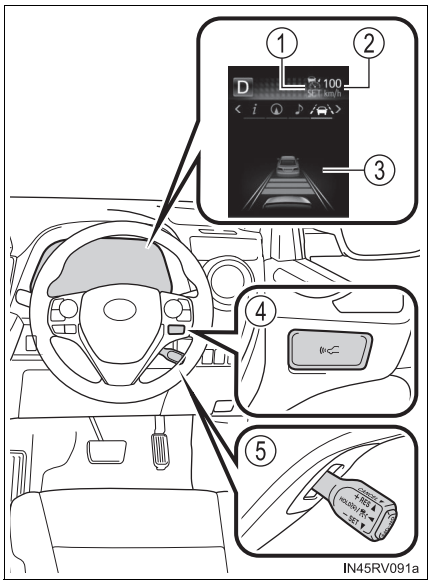

*: If equipped

WARNING

■ **Before using dynamic radar cruise control**

Driving safely is the sole responsibility of the driver. Do not rely solely on the system, and drive safely by always paying careful attention to your surroundings.

The dynamic radar cruise control provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided.

Set the speed appropriately depending on the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for checking the set speed.

Even when the system is functioning normally, the condition of the preceding vehicle as detected by the system may differ from the condition observed by the driver. Therefore, the driver must always remain alert, assess the danger of each situation and drive safely. Relying on this system or assuming the system ensures safety while driving can lead to an accident, resulting in death or serious injury.

■ **Cautions regarding the driving assist systems**

Observe the following precautions, as there are limitations to the assistance provided by the system.

Failure to do so may cause an accident resulting in death or serious injury.

- Assisting the driver to measure following distance

  The dynamic radar cruise control is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for driver to pay close attention to the vehicle's surroundings.

- Assisting the driver to judge proper following distance

  The dynamic radar cruise control determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is within a set range. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

- Assisting the driver to operate the vehicle

  The dynamic radar cruise control has limited capability to prevent or avoid a collision with a vehicle traveling ahead. Therefore, if there is ever any danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

■ **To avoid inadvertent dynamic radar cruise control activation**

Switch the dynamic radar cruise control off using the "ON-OFF" button when not in use.

WARNING

■ **Situations unsuitable for dynamic radar cruise control**


Do not use dynamic radar cruise control in any of the following situations. Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- Roads where there are pedestrians, cyclists, etc.
- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhills, or where there are sudden changes between sharp up and down gradients
  Vehicle speed may exceed the set speed when driving down a steep hill.
- At entrances to freeways and highways
- When weather conditions are bad enough that they may prevent the sensors from detecting correctly (fog, snow, sandstorm, heavy rain, etc.)
- When there is rain, snow, etc. on the front surface of the radar sensor or camera sensor
- In traffic conditions that require frequent repeated acceleration and deceleration
- When your vehicle is towing a trailer or during emergency towing
- When an approach warning buzzer is heard often

Driving in vehicle-to-vehicle distance control mode

This mode employs a radar sensor to detect the presence of vehicles up to approximately 100 m (328 ft.) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead.

Note that vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

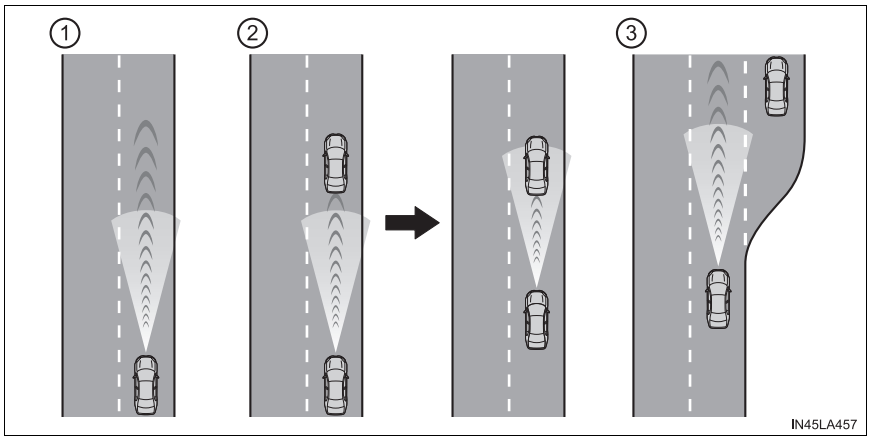

① Example of constant speed cruising

When there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance switch.

② Example of deceleration cruising and follow-up cruising

When a preceding vehicle driving slower than the set speed appears

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the stop lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. Approach warning warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.


③ Example of acceleration

When there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Setting the vehicle speed (vehicle-to-vehicle distance control mode)

1 Press the “ON-OFF” button to activate the cruise control.

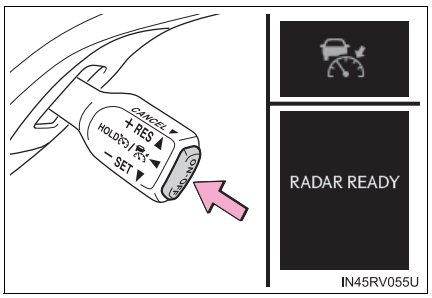


Radar cruise control indicator will come on and a message will be displayed on the multi-information display.

Press the button again to deactivate the cruise control.

If the “ON-OFF” button is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode. (→P. 396)

2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 50 km/h [30 mph]) and push the lever down to set the speed.

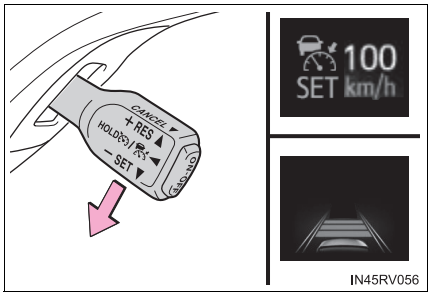

Cruise control “SET” indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

Adjusting the set speed


To change the set speed, operate the lever until the desired set speed is displayed.

① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.

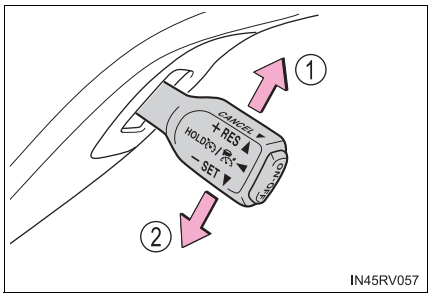

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

▶ For Europe

Fine adjustment: By 5 km/h (3.1 mph)*1 or 5 mph (8 km/h)*2 each time the lever is operated

Large adjustment: Increases or decreases in 5 km/h (3.1 mph)*1 or 5 mph (8 km/h)*2 increments for as long as the lever is held

▶ Except for Europe

Fine adjustment: By 1 km/h (0.6 mph)*1 or 1 mph (1.6 km/h)*2 each time the lever is operated

Large adjustment: Increases or decreases in 5 km/h (3.1 mph)*1 or 5 mph (8 km/h)*2 increments for as long as the lever is held

In the constant speed control mode (→P. 396), the set speed will be increased or decreased as follows:

Fine adjustment: By 1 km/h (0.6 mph)*1 or 1 mph (1.6 km/h)*2 each time the lever is operated

Large adjustment: The speed will continue to change while the lever is held.

*1: When the set speed is shown in “km/h”

*2: When the set speed is shown in “MPH”

Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)


Pressing the switch changes the vehicle-to-vehicle distance as follows:

① Long

② Medium

③ Short

The vehicle-to-vehicle distance is set automatically to long mode when the power switch is turned to ON mode.

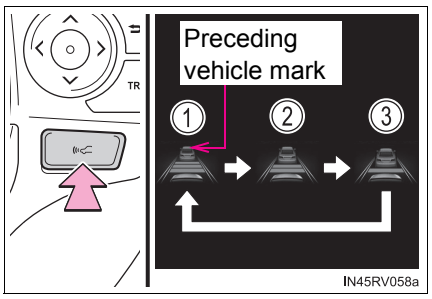

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

Vehicle-to-vehicle distance settings (vehicle-to-vehicle distance control mode)

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 80 km/h (50 mph). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed.


Distance options	Vehicle-to-vehicle distance
Long	Approximately 50 m (160 ft.)
Medium	Approximately 40 m (130 ft.)
Short	Approximately 30 m (100 ft.)

Canceling and resuming the speed control

① Pulling the lever toward you cancels the speed control.

The speed control is also canceled when the brake pedal is depressed.


② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

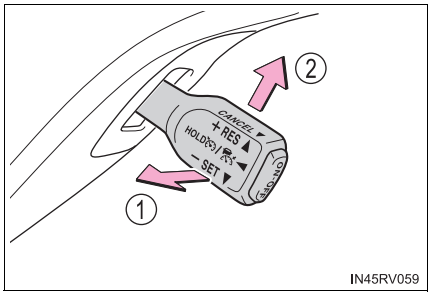

However, cruise control does not resume when the vehicle speed is approximately 40 km/h (25 mph) or less.

Approach warning (vehicle-to-vehicle distance control mode)

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

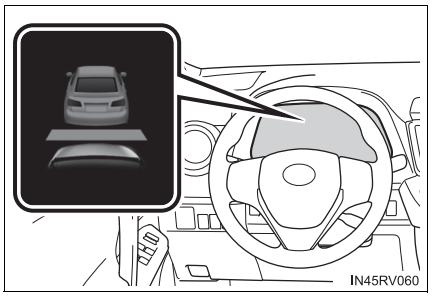

■ Warnings may not occur when


In the following instances, warnings may not occur even when the vehicle-to-vehicle distance is small.

- When the speed of the preceding vehicle matches or exceeds your vehicle speed
- When the preceding vehicle is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- When depressing the accelerator pedal

Selecting constant speed control mode

When constant speed control mode is selected, your vehicle will maintain a set speed without controlling the vehicle-to-vehicle distance. Select this mode only when vehicle-to-vehicle distance control mode does not function correctly due to a dirty radar sensor, etc.


1 With the cruise control off, press and hold the “ON-OFF” button for 1.5 seconds or more.

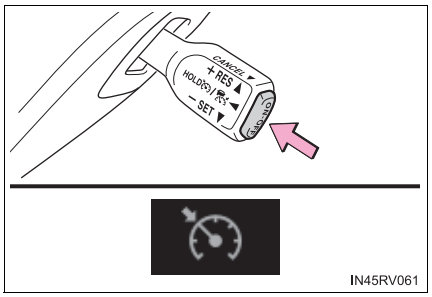

Immediately after the “ON-OFF” button is pressed, the radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.

Switching to constant speed control mode is only possible when operating the lever with the cruise control off.

2 Accelerate or decelerate with accelerator pedal operation to the desired vehicle speed (at or above approximately 50 km/h [30 mph]) and push the lever down to set the speed.

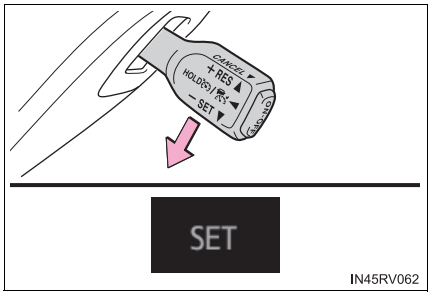

Cruise control “SET” indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

Adjusting the speed setting: →P. 393

Canceling and resuming the speed setting: →P. 394

■ **Dynamic radar cruise control can be set when**

- The shift lever is in D or range 4 or higher of S has been selected.
- Vehicle speed is at or above approximately 50 km/h (30 mph).

■ **Accelerating after setting the vehicle speed**

The vehicle can accelerate by operating the accelerator pedal. After accelerating, the set speed resumes. However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the preceding vehicle.

■ **Automatic cancelation of vehicle-to-vehicle distance control mode**

Vehicle-to-vehicle distance control mode is automatically canceled in the following situations:

- Actual vehicle speed falls at or below approximately 40 km/h (25 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.
- The sensor cannot detect correctly because it is covered in some way.
- Pre-crash braking is activated.

If vehicle-to-vehicle distance control mode is automatically canceled for any other reason, there may be a malfunction in the system. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Automatic cancelation of constant speed control mode**

Constant speed control mode is automatically canceled in the following situations:

- Actual vehicle speed is more than approximately 16 km/h (10 mph) below the set vehicle speed.
- Actual vehicle speed falls at or below approximately 40 km/h (25 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.
- Pre-crash braking is activated.

If constant speed control mode is automatically canceled for any other reason, there may be a malfunction in the system. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


■ **Warning messages and buzzers for dynamic radar cruise control**

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. If a warning message is shown on the multi-information display, read the message and follow the instructions.


■ **When the sensor may not be correctly detecting the vehicle ahead**

In the case of the following and depending on the conditions, operate the brake pedal when deceleration of the system is insufficient or operate the accelerator pedal when acceleration is required.
As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P. 395) may not be activated.


- Vehicles that cut in suddenly
- Vehicles traveling at low speeds
- Vehicles that are not moving in the same lane
- Vehicles with small rear ends (trailers with no load on board, etc.)

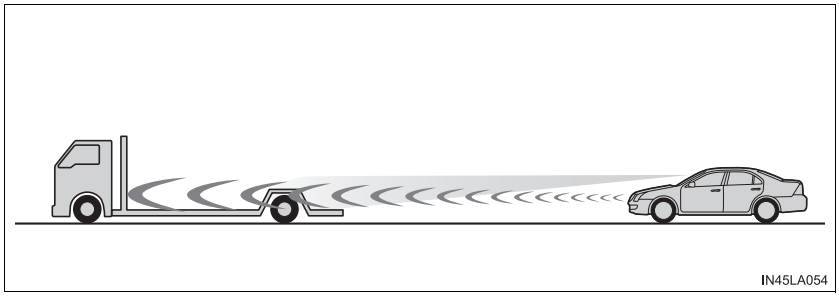

- Motorcycles traveling in the same lane
- When water or snow thrown up by the surrounding vehicles hinders the detecting of the sensor
- When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment, etc.)

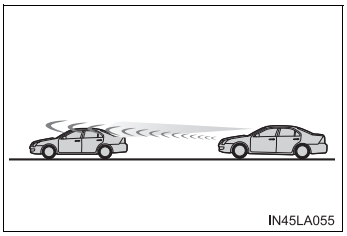


- Preceding vehicle has an extremely high ground clearance

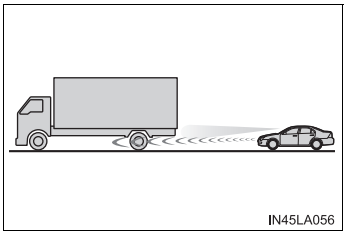


■ **Conditions under which the vehicle-to-vehicle distance control mode may not function correctly**

In the case of the following conditions, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.
As the sensor may not be able to correctly detect vehicles ahead, the system may not operate properly.

● When the road curves or when the lanes are narrow

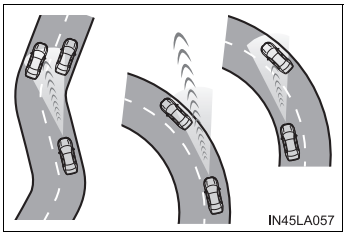

● When steering wheel operation or your position in the lane is unstable

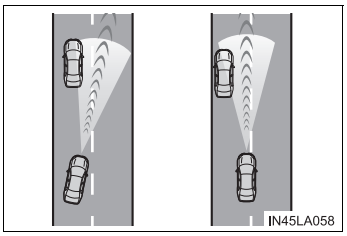


● When the vehicle ahead of you decelerates suddenly

Cruise control*

Summary of functions

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

① Indicators
② Set speed
③ Cruise control switch

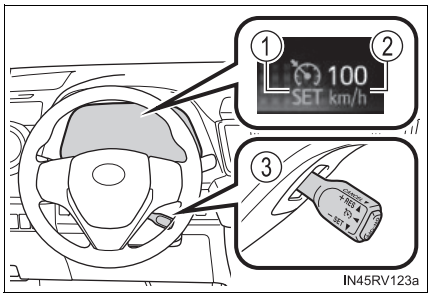


Setting the vehicle speed

1 Press the “ON-OFF” button to activate the cruise control.


Cruise control indicator will be displayed on the multi-information display.

Press the button again to deactivate the cruise control.

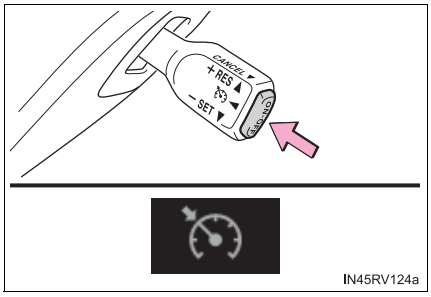

2 Accelerate or decelerate the vehicle to the desired speed (at or above approximately 40 km/h [25 mph]) and push the lever down to set the speed.


Cruise control “SET” indicator and set speed will be displayed on the multi-information display.
The vehicle speed at the moment the lever is released becomes the set speed.

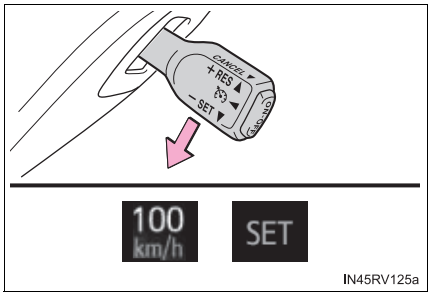

*: If equipped

Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is obtained.

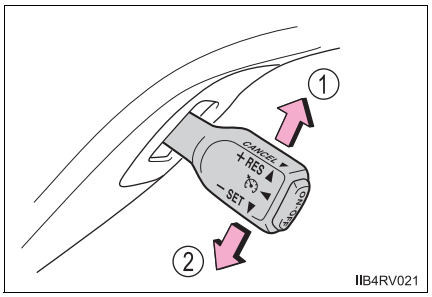

① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

The set speed will be increased or decreased as follows:


Fine adjustment: By 1 km/h (0.6 mph)*1 or 1 mph (1.6 km/h)*2 each time the lever is operated.

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

*1: When the set speed is shown in “km/h”

*2: When the set speed is shown in “MPH”

Canceling and resuming the constant speed control

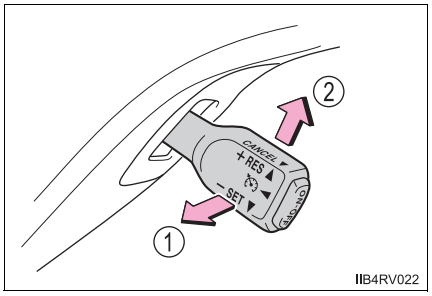

① Pulling the lever toward you cancels the constant speed control.

The speed setting is also canceled when the brakes are applied.

② Pushing the lever up resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 40 km/h (25 mph).

■ **Cruise control can be set when**

- The shift lever is in D or range 4 or higher of S has been selected.
- Vehicle speed is at or above approximately 40 km/h (25 mph).

■ **Accelerating after setting the vehicle speed**

- The vehicle can be accelerated normally. After acceleration, the set speed resumes.
- Even without canceling the cruise control, the set speed can be increased by first accelerating the vehicle to the desired speed and then pushing the lever down to set the new speed.

■ **Automatic cruise control cancelation**

Cruise control will stop maintaining the vehicle speed in any of the following situations.

- Actual vehicle speed falls more than approximately 16 km/h (10 mph) below the preset vehicle speed.
  At this time, the memorized set speed is not retained.
- Actual vehicle speed is at or below approximately 40 km/h (25 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.

■ **If the warning message for the cruise control is shown on the multi-information display**

Press the “ON-OFF” button once to deactivate the system, and then press the button again to reactivate the system.
If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ **To avoid operating the cruise control by mistake**

Switch the cruise control off using the “ON-OFF” button when not in use.

■ **Situations unsuitable for cruise control**

Do not use cruise control in any of the following situations.
Doing so may result in loss of control and could cause an accident resulting in death or serious injury.


- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep hills
  Vehicle speed may exceed the set speed when driving down a steep hill.
- When your vehicle is towing a trailer or during emergency towing

Toyota parking assist-sensor*

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, the audio system screen and a buzzer. Always check the surrounding area when using this system.

Types of sensors

① Front corner sensors
② Front center sensors
③ Rear corner sensors
④ Rear center sensors

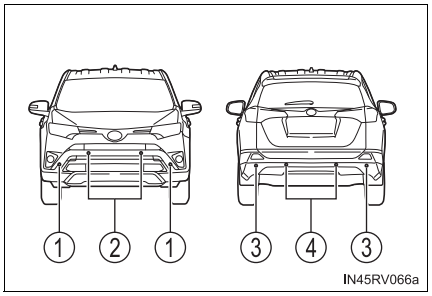

Turning the Toyota parking assist-sensor on/off

1 Press 〈 or 〉 of the meter control switches and select ⚙ on the multi-information display.

2 Press ∧ or ∨ of the meter control switches and select P, and then press ⊙.

The P will be displayed to inform the driver that the system is operational.


*: If equipped

Display

When the sensors detect an obstacle, the following displays inform the driver of the position and distance to the obstacle.

■ Multi-information display

① Front corner sensor detection
② Front center sensor detection
③ Rear corner sensor detection
④ Rear center sensor detection

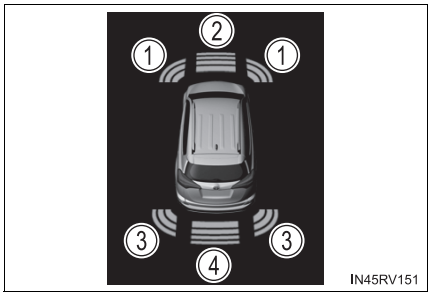

■ Audio system screen (vehicles with navigation system or multimedia system)

① Toyota parking assist-sensor display

When the Toyota parking assist monitor* or panoramic view monitor* is not displayed:


A graphic is automatically displayed when an obstacle is detected. The screen can be set so that the graphic is not displayed. (→P. 408)

: Select to mute the buzzer sounds.

② Insert display

When the Toyota parking assist monitor* is displayed:
A simplified image is displayed on the right upper corner of the audio system screen when an obstacle is detected.

When the panoramic view monitor* is displayed:
The position and distance is displayed on the panoramic view monitor screen when an obstacle is detected.

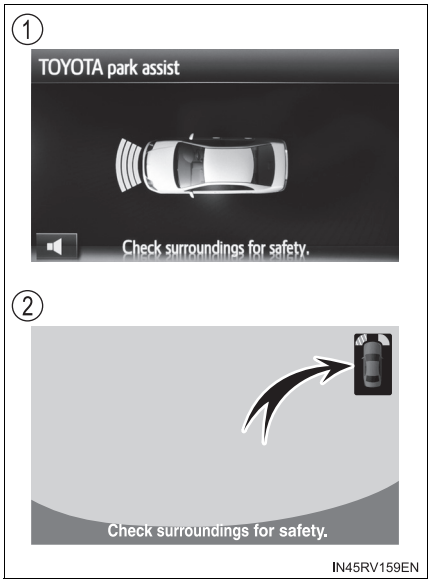

*: If equipped

4 Driving

Sensor detection display, obstacle distance

■ Distance display

Sensors that detect an obstacle will illuminate continuously or blink.

Display*1	Insert display	Approximate distance to obstacle	
		Front corner sensor/ front center sensor	Rear corner sensor/ rear center sensor
 (continuous)	 (blinking slowly)	Front center sensor: 100 cm (3.3 ft.) to 50 cm (1.6 ft.)	Rear center sensor: 150 cm (4.9 ft.) to 60 cm (2.0 ft.)
 (continuous)	 (blinking)	50 cm (1.6 ft.) to 40 cm (1.3 ft.)	Rear corner sensor: 55 cm (1.8 ft.) to 40 cm (1.3 ft.) Rear center sensor: 60 cm (2.0 ft.) to 45 cm (1.5 ft.)
 (continuous)	 (blinking rapidly)	40 cm (1.3 ft.) to 30 cm (1.0 ft.)	Rear corner sensor: 40 cm (1.3 ft.) to 30 cm (1.0 ft.) Rear center sensor: 45 cm (1.5 ft.) to 35 cm (1.1 ft.)
 (blinking*2 or continuous*3)	 (continuous)	Less than 30 cm (1.0 ft.)	Rear corner sensor: Less than 30 cm (1.0 ft.) Rear center sensor: Less than 35 cm (1.1 ft.)

*1: The images may differ from that shown in the illustrations. (→P. 405)

*2: Multi-information display

*3: Audio system screen

■ **Buzzer operation and distance to an obstacle**

A buzzer sounds when the sensors are operating.


- The buzzer sounds faster as the vehicle approaches an obstacle. When the vehicle comes within the following distance of the obstacle, the buzzer sounds continuously.
  - Front and rear corner sensors: Approximately 30 cm (1.0 ft.)
  - Front center sensors: Approximately 30 cm (1.0 ft.)
  - Rear center sensors: Approximately 35 cm (1.1 ft.)
- When 2 or more obstacles are detected simultaneously, the buzzer system responds to the nearest obstacle. If one or both come within the above distances, the beep will repeat a long tone, followed by fast beeps.

Detection range of the sensors

① Approximately 100 cm (3.3 ft.)
② Approximately 150 cm (4.9 ft.)
③ Approximately 55 cm (1.8 ft.)
④ Approximately 50 cm (1.6 ft.)

The diagram shows the detection range of the sensors. Note that the sensors cannot detect obstacles that are extremely close to the vehicle.

The range of the sensors may change depending on the shape of the object etc.

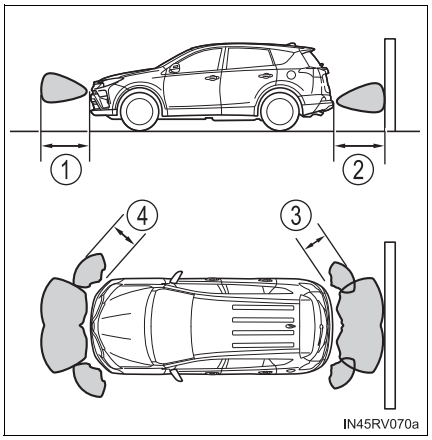

Setting up Toyota parking assist-sensor (vehicles with navigation system or multimedia system)

You can change the buzzer sound volume and the screen operating conditions.

1 Press the “SETUP” button.

2 Select “Vehicle” on the screen.

3 Select “TOYOTA park assist settings” on the screen.

4 Select the desired item.

- The buzzer sound volume can be adjusted.
- On or off can be selected for Toyota parking assist-sensor display.
- Front and rear center sensor display and tone indication can be set.

■ The Toyota parking assist-sensor can be operated when

●Front corner sensors:

- The power switch is in ON mode.
- The shift lever is not in P.
- The vehicle speed is approximately 10 km/h (6 mph) or less.

●Front center sensors:

- The power switch is in ON mode.
- The shift lever is not in P or R.
- The vehicle speed is approximately 10 km/h (6 mph) or less.

●Rear corner and rear center sensors:

- The power switch is in ON mode.
- The shift lever is in R.

■ Toyota parking assist-sensor display (vehicles with Toyota parking assist monitor)

When an obstacle is detected while the Toyota parking assist monitor is in use, the warning indicator will appear in the upper corner of the screen even if the display setting has been set to off.

■ **Sensor detection information**

● The sensor's detection areas are limited to the areas around the vehicle's bumper.

● Certain vehicle conditions and the surrounding environment may affect the ability of the sensor to correctly detect obstacles. Particular instances where this may occur are listed below.

- There is dirt, snow or ice on the sensor. (Wiping the sensors will resolve this problem.)
- The sensor is frozen. (Thawing the area will resolve this problem.)
  In especially cold weather, if a sensor is frozen the screen may show an abnormal display, or obstacles may not be detected.
- The sensor is covered in any way.
- The vehicle is leaning considerably to one side.
- On an extremely bumpy road, on an incline, on gravel, or on grass
- The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
- There is another vehicle equipped with parking assist sensors in the vicinity.
- The sensor is coated with a sheet of spray or heavy rain.
- The vehicle is equipped with a fender pole or wireless antenna.
- The bumper or sensor receives a strong impact.
- The vehicle is approaching a tall or curved curb.
- In harsh sunlight or intense cold weather
- The area directly under the bumpers is not detected.
- If obstacles draw too close to the sensor.
- A non-genuine Toyota suspension (lowered suspension etc.) is installed.
- People may not be detected if they are wearing certain types of clothing.

In addition to the examples above, there are instances in which, because of their shapes, signs and other objects may be judged by the sensor to be closer than they are.

● The shape of the obstacle may prevent the sensor from detecting it. Pay particular attention to the following obstacles:

- Wires, fences, ropes, etc.
- Cotton, snow and other materials that absorb sound waves
- Sharply-angled objects
- Low obstacles
- Tall obstacles with upper sections projecting outwards in the direction of your vehicle

● The following situations may occur during use.

- Depending on the shape of the obstacle and other factors, the detection distance may shorten, or detection may be impossible.
- Obstacles may not be detected if they are too close to the sensor.
- There will be a short delay between obstacle detection and display. Even at slow speeds, there is a possibility that the obstacle will come within the sensor's detection areas before the display is shown and the beep sounds.
- Thin posts or objects lower than the sensor may not be detected when approached, even if they have been detected once.
- It might be difficult to hear beeps due to the volume of audio system or air flow noise of the air conditioning system.

■ **Customization**

Setting of buzzer volume can be changed.
(Customizable features →P. 663)

■ **If a message is displayed on the multi-information display**

→P. 580

⚠ WARNING

■ **When using the Toyota parking assist-sensor**

Observe the following precautions.
Failure to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

● Do not use the sensor at speeds in excess of 10 km/h (6 mph).

● The sensors' detection areas and reaction times are limited. When moving, check the areas surrounding the vehicle (especially the sides of the vehicle) for safety, and drive slowly, using the brake to control the vehicle's speed.

● Do not install accessories within the sensors' detection areas.

NOTICE

When using Toyota parking assist-sensor

In the following situations, the system may not function correctly due to a sensor malfunction etc. Have the vehicle checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- The Toyota parking assist-sensor operation display flashes, and a beep sounds when no obstacles are detected.
- If the area around a sensor collides with something, or is subjected to strong impact.
- If the bumper collides with something.
- If the display shows continuously without a beep.
- If a display error occurs, first check the sensor.
  If the error occurs even when there is no ice, snow or mud on the sensor, it is likely that the sensor is malfunctioning.

Notes when washing the vehicle

Do not apply intensive bursts of water or steam to the sensor area.
Doing so may result in the sensor malfunctioning.

BSM (Blind Spot Monitor)*

Summary of the Blind Spot Monitor

The Blind Spot Monitor is a system that has 2 functions;


- The Blind Spot Monitor function

  Assists the driver in making the decision when changing lanes

- The Rear Crossing Traffic Alert function

  Assists the driver when backing up

These functions use same sensors.

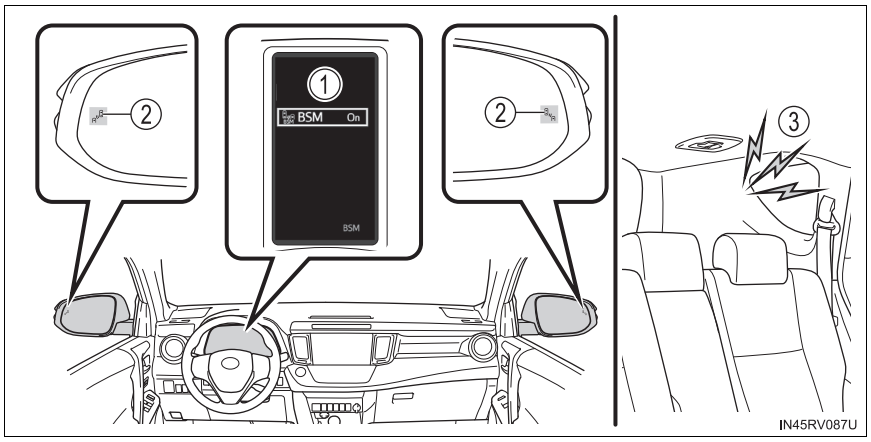

① The Blind Spot Monitor on/off screen and indicator

The Blind Spot Monitor system can be turned on/off on the multi-information display. When the system is set to on, the indicator illuminates on the multi-information display. The Blind Spot Monitor function and the Rear Crossing Traffic Alert function are turned on/off simultaneously.

② Outside rear view mirror indicators

Blind Spot Monitor function:
When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.

Rear Crossing Traffic Alert function:
When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.

*: If equipped

③ Rear Crossing Traffic Alert buzzer (Rear Crossing Traffic Alert function only)

When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the left-hand rear seat.

Turning the Blind Spot Monitor system on/off

1 Press 〈 or 〉 of the meter control switch and select ⚙ on the multi-information display.

2 Press ∧ or ∨ of the meter control switch and select BSM, and then press ⊙.

■ The outside rear view mirror indicators visibility

When under strong sunlight, the outside rear view mirror indicator may be difficult to see.

■ Rear Crossing Traffic Alert buzzer hearing

Rear Crossing Traffic Alert function may be difficult to hear over loud noises such as high audio volume.

■ When there is a malfunction in the Blind Spot Monitor system

If a system malfunction is detected due to any of the following reasons, the warning messages will be displayed: (→P. 585, 587)

- There is a malfunction with the sensors
- The sensors have become dirty
- The outside temperature is extremely high or low
- The sensor voltage has become abnormal

Certification for the Blind Spot Monitor system

Manufacturer Postal Address ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131 Lindau, Germany	
ОПРОСТЕНА ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ	С настоящото ADC Automotive Distance Control Systems GmbH декларира, че този тип радиосъоръжение SRR 2-A е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://continental.automotive-approvals.com/
	радиочестотната лента или ленти, в която или които работи радиосъоръжението: 24.05–24.25 GHz
	максималната радиочестотна мощност, излъчвана в радиочестотната лента или ленти, в която или които работи радиосъоръжението.: 100mW (20 dBm) Peak EIRP
DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA	Por la presente, ADC Automotive Distance Control Systems GmbH declara que el tipo de equipo radioeléctrico SRR 2-A es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://continental.automotive-approvals.com/
	Banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 24.05–24.25 GHz
	Potencia máxima de radiofrecuencia transmitida en la banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 100mW (20 dBm) Peak EIRP
ZJEDNODUŠENÉ EU PROHLÁŠENÍ O SHODĚ	Tímto ADC Automotive Distance Control Systems GmbH prohlašuje, že typ rádiového zařízení SRR 2-A je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://continental.automotive-approvals.com/
	Kmitočtové pásmo (kmitočtová pásma), v němž (v nichž) rádiové zařízení pracuje: 24.05–24.25 GHz
	Maximální radiofrekvenční výkon vysílaný v kmitočtovém pásmu (v kmitočtových pásmech), v němž (v nichž) je rádiové zařízení provozováno: 100mW (20 dBm) Peak EIRP
FORENKLET EU OVERENSSTEMMELSESERKLÆRING	Hermed erklærer ADC Automotive Distance Control Systems GmbH, at radioudstyrstypen SRR 2-A er i overensstemmelse med direktiv 2014/53/EU. EUoverensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://continental.automotive-approvals.com/
	Frekvensbånd, som radioudstyret fungerer på: 24.05–24.25 GHz
	Maksimal radiofrekvenseffekt, der udsendes i de frekvensbånd, som radioudstyret fungerer på: 100mW (20 dBm) Peak EIRP
VEREINFACHTE EUKONFORMITÄTSERKLÄRUNG	Hiermit erklärt ADC Automotive Distance Control Systems GmbH, dass der Funkanlagentyp SRR 2-A der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://continental.automotive-approvals.com/
	Das Frequenzband oder die Frequenzbänder, in dem bzw. denen die Funkanlage betrieben wird: 24.05–24.25 GHz
	Die in dem Frequenzband oder den Frequenzbändern, in dem bzw. denen die Funkanlage betrieben wird, abgestrahlte maximale Sendeleistung: 100mW (20 dBm) Peak EIRP

LIHTSUSTATUD ELI VASTAVUSDEKLA RATSIOON	Käesolevaga deklareerib ADC Automotive Distance Control Systems GmbH, et käesolev raadioseadme tüüp SRR 2-A vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://continental.automotive-approvals.com/
	Sagedusriba(d), millel raadioseade töötab: 24.05–24.25 GHz
	Raadioseadme töösagedus(t)el edastatav maksimaalne saatevõimsus: 100mW (20 dBm) Peak EIRP
ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ	Με την παρούσα ο/η ADC Automotive Distance Control Systems GmbH, δηλώνει ότι ο ραδιοεξοπλισμός SRR 2-A πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://continental.automotive-approvals.com/
	Οι ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός·: 24.05–24.25 GHz
	η μέγιστη ραδιοηλεκτρική ισχύς στις ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 100mW (20 dBm) Peak EIRP
SIMPLIFIED EU DECLARATION OF CONFORMITY	Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type SRR 2-A is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://continental.automotive-approvals.com/
	Frequency band(s) in which the radio equipment operates: 24.05–24.25 GHz
	Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: 100mW (20 dBm) Peak EIRP
DECLARATION UE DE CONFORMITE SIMPLIFIEE	Le soussigné, ADC Automotive Distance Control Systems GmbH, déclare que l'équipement radioélectrique du type SRR 2-A est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://continental.automotive-approvals.com/
	Bandes de fréquences utilisées par l'équipement radioélectrique: 24.05–24.25 GHz
	Puissance de radiofréquence maximale transmise sur les bandes de fréquences utilisées par l'équipement radioélectrique: 100mW (20 dBm) Peak EIRP
POJEDNOSTAVLJE NA EU IZJAVA O SUKLADNOSTI	ADC Automotive Distance Control Systems GmbH ovime izjavljuje da je radijska oprema tipa SRR 2-A u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://continental.automotive-approvals.com/
	Frekvencijski pojas (frekvencijski pojasi) u kojem (kojima) radijska oprema radi: 24.05–24.25 GHz
	Najveća radiofrekvencijska snaga koja se prenosi u frekvencijskom pojasu (frekvencijskim pojasima) u kojem (kojima) radijska oprema radi: 100mW (20 dBm) Peak EIRP
DICHIARAZIONE DI CONFORMITÀ UE SEMPLIFICATA	Il fabbricante, ADC Automotive Distance Control Systems GmbH, dichiara che il tipo di apparecchiatura radio SRR 2-A è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://continental.automotive-approvals.com/
	Bande di frequenza di funzionamento dell'apparecchiatura radio: 24.05–24.25 GHz
	Massima potenza a radiofrequenza trasmessa nelle bande di frequenza in cui opera l'apparecchiatura radio: 100mW (20 dBm) Peak EIRP

VIENKĀRŠOTA ES ATBILSTĪBAS DEKLARĀCIJA	Ar šo ADC Automotive Distance Control Systems GmbH deklarē, ka radioiekārta SRR 2-A atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://continental.automotive-approvals.com/
	Frekvenču joslu(-as), kurā(-ās) radioiekārtas darbojas: 24.05–24.25 GHz
	Frekvenču joslā(-ās), kurā(-ās) darbojas radioiekārtas, maksimālo pārraidītā signāla jaudu.: 100mW (20 dBm) Peak EIRP
SUPAPRASTINTA ES ATITIKTIES DEKLARACIJA	Aš, ADC Automotive Distance Control Systems GmbH, patvirtinu, kad radijo įrenginių tipas SRR 2-A atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://continental.automotive-approvals.com/
	Dažnių juosta (-os), kurioje (-iose) veikia radijo įrenginiai: 24.05–24.25 GHz
	Didžiausia radijo dažnių galia, perduodama toje (tose) dažnių juostoje (-ose), kurioje (-iose) veikia radijo įrenginiai: 100mW (20 dBm) Peak EIRP
EGYSZERŰSÍTETT EU MEGFELELŐSÉGI NYILATKOZAT	ADC Automotive Distance Control Systems GmbH igazolja, hogy a SRR 2-A típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://continental.automotive-approvals.com/
	Az(ok) a frekvenciasáv(ok), amely(ek)en a rádióberendezés működik: 24.05–24.25 GHz
	Az abban a frekvenciasávban vagy azokban a frekvenciasávokban továbbított maximális jelerősség, amely(ek)ben a rádióberendezés üzemel: 100mW (20 dBm) Peak EIRP
DIKJARAZZJONI SSIMPLIFIKATA TA' KONFORMITÀ TALUE	B'dan, ADC Automotive Distance Control Systems GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju SRR 2-A huwa konformi mad-Direttiva 2014/53/UE. It-test kollu taddikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://continental.automotive-approvals.com/
	Il-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar-radju: 24.05–24.25 GHz
	Il-potenza massima tal-frekwenza tar-radju trażmessa fil-medda/meded talfrekwenza li jaħdem fihom it-tagħmir tar- radju: 100mW (20 dBm) Peak EIRP
VEREENVOUDIGDE EUCONFORMITEITSV ERKLARING	Hierbij verklaar ik, ADC Automotive Distance Control Systems GmbH, dat het type radioapparatuur SRR 2-A conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://continental.automotive-approvals.com/
	Frequentieband(en) waarin de radioapparatuur functioneert: 24.05–24.25 GHz
	Maximaal radiofrequent vermogen uitgezonden in de frequentieband(en) waarin de radioapparatuur functioneert: 100mW (20 dBm) Peak EIRP
UPROSZCZONA DEKLARACJA ZGODNOŚCI UE	ADC Automotive Distance Control Systems GmbH niniejszym oświadcza, że typ urządzenia radiowego SRR 2-A jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://continental.automotive-approvals.com/
	Zakresu(-ów) częstotliwości, w którym (których) pracuje urządzenie radiowe: 24.05–24.25 GHz
	Maksymalnej mocy częstotliwości radiowej emitowanej w zakresie(-ach) częstotliwości, w którym (których) pracuje urządzenie radiowe: 100mW (20 dBm) Peak EIRP

DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA	O(a) abaixo assinado(a) ADC Automotive Distance Control Systems GmbH declara que o presente tipo de equipamento de rádio SRR 2-A está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://continental.automotive-approvals.com/
	A(s) banda(s) de frequências em que o equipamento de rádio funciona: 24.05–24.25 GHz
	A potência máxima de radiofrequências transmitida na(s) banda(s) de frequências em que o equipamento de rádio funciona: 100mW (20 dBm) Peak EIRP
DECLARAŢIA UE DE CONFORMITATE SIMPLIFICATĂ	Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio SRR 2-A este în conformitate cu Directiva 2014/53/UE. Textul integral al declaraţiei UE de conformitate este disponibil la următoarea adresă internet: http://continental.automotive-approvals.com/
	Banda (benzile) de frecvenţe în care funcţionează echipamentul radio: 24.05–24.25 GHz
	Puterea maximă de radiofrecvenţă transmisă în banda (benzile) de frecvenţe în care funcţionează echipamentul radio: 100mW (20 dBm) Peak EIRP
ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE	ADC Automotive Distance Control Systems GmbH týmto vyhlasuje, že rádiové zariadenie typu SRR 2-A je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://continental.automotive-approvals.com/
	Frekvenčné pásmo resp. pásma, v ktorých rádiové zariadenie pracuje: 24.05–24.25 GHz
	Maximálny vysokofrekvenčný výkon prenášaný vo frekvenčnom pásme, resp. pásmach, v ktorých rádiové zariadenie pracuje: 100mW (20 dBm) Peak EIRP
POENOSTAVLJENA IZJAVA EU O SKLADNOSTI	ADC Automotive Distance Control Systems GmbH potrjuje, da je tip radijske opreme SRR 2-A skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://continental.automotive-approvals.com/
	Frekvenčni pas ali pasovi, na katerih deluje radijska oprema: 24.05–24.25 GHz
	Največja energija za radijsko frekvenco, preneseno po frekvenčnem pasu ali pasovih, na katerih radijska oprema deluje: 100mW (20 dBm) Peak EIRP
YKSINKERTAISTET TU EU VAATIMUSTENMUK AISUUSVAKUUTUS	ADC Automotive Distance Control Systems GmbH vakuuttaa, että radiolaitetyyppi SRR 2-A on direktiivin 2014/53/EU mukainen. EUvaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://continental.automotive-approvals.com/
	Radiotaajuudet, joilla radiolaite toimii: 24.05–24.25 GHz
	Suurin mahdollinen lähetysteho radiotaajuuksilla, joilla radiolaite toimii: 100mW (20 dBm) Peak EIRP
FÖRENKLAD EUFÖRSÄKRAN OM ÖVERENSSTÄMME LSE	Härmed försäkrar ADC Automotive Distance Control Systems GmbH att denna typ av radioutrustning SRR 2-A överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://continental.automotive-approvals.com/
	Det eller de frekvensband där radioutrustningen arbetar: 24.05–24.25 GHz
	Den maximala radiofrekvenseffekt som överförs inom det eller de frekvensband där radioutrustningen arbetar: 100mW (20 dBm) Peak EIRP

▶ For vehicles sold in Ukraine


028

WARNING

■ Handling the radar sensor

One Blind Spot Monitor sensor is installed inside the left and right side of the vehicle rear bumper respectively. Observe the following to ensure the Blind Spot Monitor system can function correctly.

- Keep the sensor and its surrounding area on the bumper clean at all times.

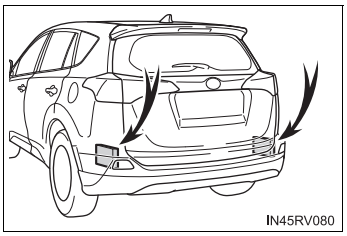

- Do not subject the sensor or surrounding area on the bumper to a strong impact. If the sensor moves even slightly off position, the system may malfunction and vehicles that enter the detection area may not be detected. If the sensor or surrounding area is subject to a strong impact, always have the area inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor or surrounding area on the bumper.
- Do not modify the sensor or surrounding area on the bumper.
- Do not paint the rear bumper any color other than an official Toyota color.

The Blind Spot Monitor function

The Blind Spot Monitor function uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rear view mirror (the blind spot), and advises the driver of the vehicles existence via the outside rear view mirror indicator.

The Blind Spot Monitor detection areas

The blind spot that vehicles can be detected in are outlined below.


The range of the detection area extends to:

① Approximately 3.5 m (11.5 ft.) from the side of the vehicle

The first 0.5 m (1.6 ft.) from the side of the vehicle is not in the detection area

② Approximately 3 m (9.8 ft.) from the rear bumper

③ Approximately 1 m (3.3 ft.) forward of the rear bumper

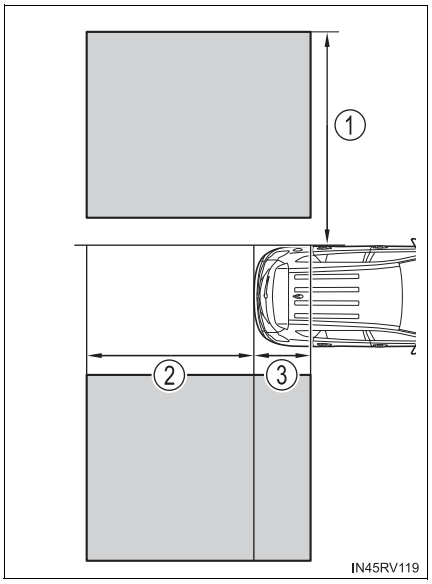

WARNING

■ **Cautions regarding the use of the system**

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The Blind Spot Monitor function is a supplementary function which alerts the driver that a vehicle is present in the blind spot. Do not overly rely on the Blind Spot Monitor function. The function cannot judge if it is safe to change lanes, therefore over reliance could cause an accident resulting in death or serious injury.

According to conditions, the system may not function correctly. Therefore the driver's own visual confirmation of safety is necessary.

■ **The Blind Spot Monitor function is operational when**

- The Blind Spot Monitor system is turned on
- Vehicle speed is greater than approximately 16 km/h (10 mph)

■ **The Blind Spot Monitor will detect a vehicle when**

- A vehicle in an adjacent lane overtakes your vehicle.
- Another vehicle enters the detection area when it changes lanes.

■ **Conditions under which the Blind Spot Monitor function will not detect a vehicle**

The Blind Spot Monitor function is not designed to detect the following types of vehicles and/or objects:

- Small motorcycles, bicycles, pedestrians, etc.*
- Vehicles traveling in the opposite direction
- Guardrails, walls, signs, parked vehicles and similar stationary objects*
- Following vehicles that are in the same lane*
- Vehicles driving 2 lanes across from your vehicle*

*: Depending on conditions, detection of a vehicle and/or object may occur.

■ **Conditions under which the Blind Spot Monitor function may not function correctly**

● The Blind Spot Monitor function may not detect vehicles correctly in the following conditions:


- During bad weather such as heavy rain, fog, snow, etc.
- When ice, mud, etc. is attached to the rear bumper
- When driving on a road surface that is wet due to rain, standing water, etc.
- When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
- When a vehicle is in the detection area from a stop and remains in the detection area as your vehicle accelerates
- When driving up or down consecutive steep inclines, such as hills, a dip in the road, etc.
- When multiple vehicles approach with only a small gap between each vehicle
- When vehicle lanes are wide, and the vehicle in the next lane is too far away from your vehicle
- When the vehicle that enters the detection area is traveling at about the same speed as your vehicle
- When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
- Directly after the Blind Spot Monitor system is turned on
- When towing a trailer (with towing hitch)
- When items such as a bicycle carrier are installed on the rear of the vehicle.

● Instances of the Blind Spot Monitor function unnecessarily detecting a vehicle and/or object may increase under the following conditions:

- When there is only a short distance between your vehicle and a guardrail, wall, etc.
- When there is only a short distance between your vehicle and a following vehicle
- When vehicle lanes are narrow and a vehicle driving 2 lanes across from your vehicle enters the detection area
- When items such as a bicycle carrier are installed on the rear of the vehicle

The Rear Crossing Traffic Alert function

The Rear Crossing Traffic Alert functions when your vehicle is in reverse. It can detect other vehicles approaching from the right or left rear of the vehicle. It uses radar sensors to alert the driver of the other vehicle's existence through flashing the outside rear view mirror indicators and sounding a buzzer.

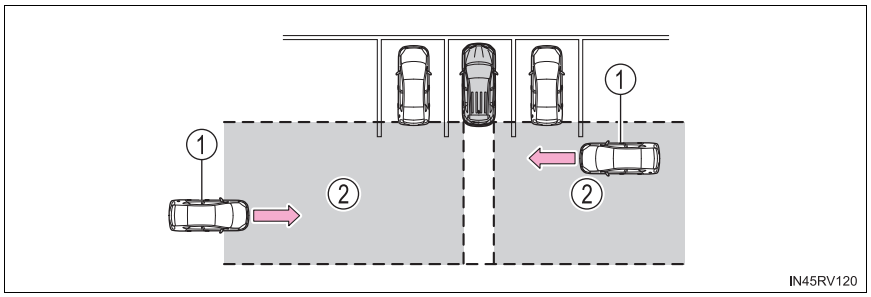

① Approaching vehicles ② Detection areas

WARNING

■ Cautions regarding the use of the system


The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The Rear Crossing Traffic Alert function is only an assist and is not a replacement for careful driving. The driver must be careful when backing up, even when using the Rear Crossing Traffic Alert function. The driver's own visual confirmation of behind you and your vehicle is necessary and be sure there are no pedestrians, other vehicles etc. before backing up. Failure to do so could cause death or serious injury.

According to conditions, the system may not function correctly. Therefore the driver's own visual confirmation of safety is necessary.

The Rear Crossing Traffic Alert function detection areas

The areas that vehicles can be detected in are outlined below.

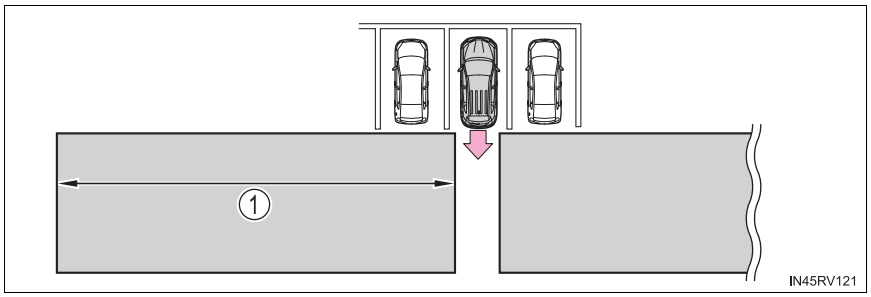

To give the driver a more consistent time to react, the buzzer can alert for faster vehicles from farther away.

Example:

Approaching vehicle	Speed	① Approximate alert distance
Fast	28 km/h (18 mph)	20 m (65 ft.)
Slow	8 km/h (5 mph)	5.5 m (18 ft.)

The Rear Crossing Traffic Alert function is operational when

- The Blind Spot Monitor system is turned on.
- The shift lever is in R.
- Vehicle speed is less than approximately 8 km/h (5 mph).
- Approaching vehicle speed is between approximately 8 km/h (5 mph) and 28 km/h (18 mph).

■ **Conditions under which the Rear Crossing Traffic Alert function will not detect a vehicle**

The Rear Crossing Traffic Alert function is not designed to detect the following types of vehicles and/or objects.


- Small motorcycles, bicycles, pedestrians etc.*
- Vehicles approaching from directly behind
- Guardrails, walls, signs, parked vehicles and similar stationary objects*
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle*
- Vehicles backing up in the parking space next to your vehicle*

*: Depending on conditions, detection of a vehicle and/or object may occur.

■ **Conditions under which the Rear Crossing Traffic Alert function may not function correctly**

The Rear Crossing Traffic Alert function may not detect vehicles correctly in the following conditions:

- When ice or mud etc. is attached to the rear bumper
- During bad weather such as heavy rain, fog, snow etc.
- When multiple vehicles approach continuously
- Shallow angle parking
- When a vehicle is approaching at high speed
- When parking on a steep incline, such as hills, a dip in the road etc.
- Directly after the Blind Spot Monitor system is turned on
- Directly after the hybrid system is started with the Blind Spot Monitor system is set to on
- When towing a trailer
- Vehicles that the sensors cannot detect because of obstacles

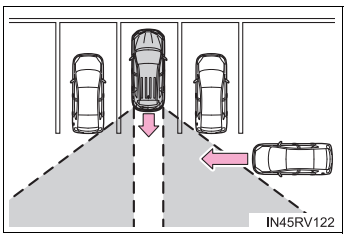

Driving assist systems

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

◆ ECB (Electronically Controlled Brake System)

The electronically controlled system generates braking force corresponding to the brake operation

◆ ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

◆ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

◆ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces

◆ TRC (Traction Control)

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

◆ Hill-start assist control

Helps to reduce the vehicle from rolling backward when starting on an incline

◆ EPS (Electric Power Steering)

Employs an electric motor to reduce the amount of effort needed to turn the steering wheel

◆ E-Four (Electronic On-Demand AWD system) (AWD models)

Automatically switches from front wheel drive to four-wheel drive (AWD) according to the driving conditions, helping to ensure reliable handling and stability. Examples of conditions where the system will switch to AWD are when cornering, going uphill, starting off or accelerating, and when the road surface is slippery due to snow, rain, etc.

◆ Emergency brake signal

When the brakes are applied suddenly, the emergency flashers automatically flash to alert the vehicle behind.


◆ Trailer Sway Control

Helps the driver to control trailer sway by selectively applying brake pressure for individual wheels and reducing engine torque when trailer sway is detected.

Trailer Sway Control is part of the VSC system and will not operate if VSC turned off or experiences a malfunction.

When the TRC/VSC/ABS/Trailer Sway Control systems are operating

The slip indicator will flash while the TRC/VSC/ABS/Trailer Sway Control systems are operating.

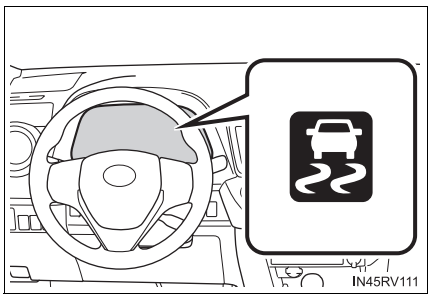


Disabling the TRC system

If the vehicle gets stuck in mud, dirt or snow, the TRC system may reduce power from the hybrid system to the wheels. Pressing [OFF] to turn the system off may make it easier for you to rock the vehicle in order to free it.

To turn the TRC system off, quickly press and release [OFF].

"Traction Control Turned Off" will be shown on the multi-information display.

Press [OFF] again to turn the system back on.

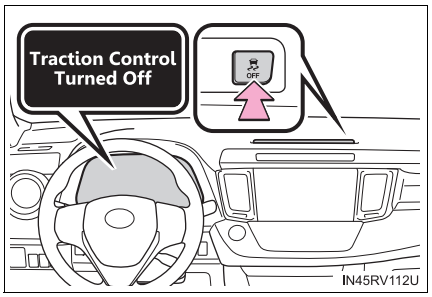

■ **Turning off the TRC, VSC and Trailer Sway Control systems**

To turn the TRC, VSC and Trailer Sway Control systems off, press and hold  for more than 3 seconds while the vehicle is stopped.

"Traction Control Turned Off" will be shown and the VSC OFF indicator light will come on.*

Press  again to turn the systems back on.

*: On vehicles with pre-crash safety system, pre-crash brake assist and pre-crash braking will also be disabled. The PCS warning light will come on and the message will be shown on the multi-information display. (→P. 358)

■ **When the message is displayed on the multi-information display showing that TRC has been disabled even if the VSC OFF switch has not been pressed**

TRC and hill-start assist control cannot be operated. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Sounds and vibrations caused by the ABS, brake assist, VSC, Trailer Sway Control, TRC and hill-start assist control systems**

Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.

- Vibrations may be felt through the vehicle body and steering.
- A motor sound may be heard after the vehicle comes to a stop.
- The brake pedal may pulsate slightly after the ABS is activated.
- The brake pedal may move down slightly after the ABS is activated.

■ **ECB operating sound**

ECB operating sound may be heard in the following cases, but it does not indicate that a malfunction has occurred.

- Operating sound heard from the engine compartment when the brake pedal is operated.
- Motor sound of the brake system heard from the front part of the vehicle when the driver's door is opened.
- Operating sound heard from the engine compartment when 1 or 2 minutes passed after the stop of the hybrid system.

■ **EPS operation sound**

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ **Automatic reactivation of the TRC, VSC and Trailer Sway Control systems**

After turning the TRC, VSC and Trailer Sway Control systems off, the systems will be automatically re-enabled in the following situations:

- When the power switch is turned off.
- If only the TRC system is turned off, the TRC will turn on when vehicle speed increases
  If the TRC, VSC and Trailer Sway Control systems are turned off, automatic re-enabling will not occur when vehicle speed increases.

■ **Reduced effectiveness of the EPS system**

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the hybrid system off. The EPS system should return to normal within 10 minutes.

■ **Operating conditions of hill-start assist control**

When the following four conditions are met, the hill-start assist control will operate:

- The shift lever is in a position other than P or N (when starting off forward/backward on an upward incline).
- The vehicle is stopped.
- The accelerator pedal is not depressed.
- The parking brake is not engaged.

■ **Automatic system cancelation of hill-start assist control**

The hill-start assist control will turn off in any of the following situations:

- The shift lever is moved to P or N.
- The accelerator pedal is depressed.
- The parking brake is engaged.
- Approximately 2 seconds elapse after the brake pedal is released.

WARNING

■ **The ABS does not operate effectively when**

- The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on wet or slick roads.

■ **Stopping distance when the ABS is operating may exceed that of normal conditions**

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or uneven surfaces

■ **TRC may not operate effectively when**

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRC system is operating.
Drive the vehicle carefully in conditions where stability and power may be lost.

■ **Hill- start assist control does not operate effectively when**

- Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on steep inclines and roads covered with ice.
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline, as doing so may lead to an accident.

■ **When the TRC/VSC/ABS/Trailer Sway Control is activated**

The slip indicator flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

WARNING

■ **When the TRC/VSC/Trailer Sway Control systems are turned off**

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to help ensure vehicle stability and driving force, do not turn the TRC/VSC/Trailer Sway Control systems off unless necessary.

■ **Replacing tires**

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS, TRC, VSC and Trailer Sway Control systems will not function correctly if different tires are installed on the vehicle.
Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further information when replacing tires or wheels.

■ **Handling of tires and the suspension**

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

■ **Trailer Sway Control precaution**

The Trailer Sway Control system is not able to reduce trailer sway in all situations. Depending on many factors such as the conditions of the vehicle, trailer, road surface, and driving environment, the Trailer Sway Control system may not be effective. Refer to your trailer owner's manual for information on how to tow your trailer properly.

■ **If trailer sway occurs**

Observe the following precautions.
Failing to do so may cause death or serious injury.

- Firmly grip the steering wheel. Steer straight ahead.
  Do not try to control trailer swaying by turning the steering wheel.
- Begin releasing the accelerator pedal immediately but very gradually to reduce speed.
  Do not increase speed. Do not apply vehicle brakes.

If you make no extreme correction with the steering or brakes, your vehicle and trailer should stabilize. (→P. 307)

Hybrid vehicle driving tips

For economical and ecological driving, pay attention to the following points:

◆ Using Eco drive mode

When using Eco drive mode, the torque corresponding to the accelerator pedal depression amount can be generated more smoothly than it is in normal conditions. In addition, the operation of the air conditioning system (heating/cooling) will be minimized, improving the fuel economy. (→P. 320)

◆ Use of Hybrid System Indicator

The Eco-friendly driving is possible by keeping the Hybrid System Indicator within Eco area. (→P. 122)

◆ Shift lever operation

Shift the shift lever to D when stopped at a traffic light, or driving in heavy traffic etc. Shift the shift lever to P when parking. When using the N, there is no positive effect on fuel consumption. In the N, the gasoline engine operates but electricity cannot be generated. Also, when using the air conditioning system, etc., the hybrid battery (traction battery) power is consumed.

◆ Accelerator pedal/brake pedal operation

- Drive your vehicle smoothly. Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will make more effective use of the electric motor (traction motor) without having to use gasoline engine power.
- Avoid repeated acceleration. Repeated acceleration consumes hybrid battery (traction battery) power, resulting in poor fuel consumption. Battery power can be restored by driving with the accelerator pedal slightly released.

◆ When braking

Make sure to operate the brakes gently and in a timely manner. A greater amount of electrical energy can be regenerated when slowing down.

◆ Delays

Repeated acceleration and deceleration, as well as long waits at traffic lights, will lead to bad fuel economy. Check traffic reports before leaving and avoid delays as much as possible. When driving in a traffic jam, gently release the brake pedal to allow the vehicle to move forward slightly while avoiding overuse of the accelerator pedal. Doing so can help control excessive gasoline consumption.

◆ Highway driving

Control and maintain the vehicle at a constant speed. Before stopping at a toll booth or similar, allow plenty of time to release the accelerator and gently apply the brakes. A greater amount of electrical energy can be regenerated when slowing down.

◆ Air conditioning

Use the air conditioning only when necessary. Doing so can help reduce excessive gasoline consumption.
In summer: When the ambient temperature is high, use the recirculated air mode. Doing so will help to reduce the burden on the air conditioning system and reduce fuel consumption as well.
In winter: Because the gasoline engine will not automatically cut out until it and the interior of the vehicle are warm, it will consume fuel. Also, fuel consumption can be improved by avoiding overuse of the heater.

◆ Checking tire inflation pressure

Make sure to check the tire inflation pressure frequently. Improper tire inflation pressure can cause poor fuel economy.
Also, as snow tires can cause large amounts of friction, their use on dry roads can lead to poor fuel economy. Use tires that are appropriate for the season.

◆ Luggage

Carrying heavy luggage will lead to poor fuel economy. Avoid carrying unnecessary luggage. Installing a large roof rack will also cause poor fuel economy.

◆ Warming up before driving

Since the gasoline engine starts up and cuts out automatically when cold, warming up the engine is unnecessary. Moreover, frequently driving short distances will cause the engine to repeatedly warm up, which can lead to excess fuel consumption.

Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

Preparation for winter

- Use fluids that are appropriate to the prevailing outside temperatures.
  - Engine oil
  - Engine coolant
  - Washer fluid
- Have a service technician inspect the condition of the 12-volt battery.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the front tires.

  Ensure that all tires are the same size and brand, and that chains match the size of the tires.

Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

When driving the vehicle

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

When parking the vehicle

- Park the vehicle and move the shift lever to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If the vehicle is parked without setting the parking brake, make sure to block the wheels.
  Failure to do so may be dangerous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.
- If the vehicle is parked without setting the parking brake, confirm that the shift lever cannot be moved out of P*.

*: The shift lever will be locked if it is attempted to be shifted from P to any other position without depressing the brake pedal. If the shift lever can be shifted from P, there may be a problem with the shift lock system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.


Selecting tire chains

▶ Vehicles without 225/60R18 tires

Use the correct tire chain size when mounting the tire chains.
Chain size is regulated for each tire size.

Side chain:
① 3 mm (0.12 in.) in diameter
② 10 mm (0.39 in.) in width
③ 30 mm (1.18 in.) in length

Cross chain:
④ 4 mm (0.16 in.) in diameter
⑤ 14 mm (0.55 in.) in width
⑥ 25 mm (0.98 in.) in length

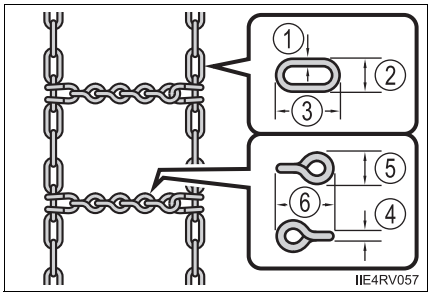

▶ Vehicles with 225/60R18 tires

Tire chains cannot be mounted.

Snow tires should be used instead.

Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the front tires only. Do not install tire chains on the rear tires.
- Install tire chains on front tires as tightly as possible. Retighten chains after driving 0.5 — 1.0 km (1/4 — 1/2 mile).
- Install tire chains following the instructions provided with the tire chains.

WARNING

Driving with snow tires

Observe the following precautions to reduce the risk of accidents.
Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the specified size.
- Maintain the recommended level of air pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being used.
- Use snow tires on all, not just some wheels.

Driving with tire chains

Observe the following precautions to reduce the risk of accidents.
Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LDA (Lane Departure Alert with steering control) system (if equipped).

NOTICE

■ **Repairing or replacing snow tires (vehicles with the tire pressure warning system)**

Request repairs or replacement of snow tires from Toyota dealers or legitimate tire retailers.
This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

■ **Fitting tire chains (vehicles with the tire pressure warning system)**

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

Utility vehicle precautions

This vehicle belongs to the utility vehicle class, which has higher ground clearance and narrower tread in relation to the height of its center of gravity to make it capable of performing in a wide variety of off-road applications.

Utility vehicle feature

- Specific design characteristics give it a higher center of gravity than ordinary passenger cars. This vehicle design feature causes this type of vehicle to be more likely to rollover. And, utility vehicles have a significantly higher rollover rate than other types of vehicles.
- An advantage of the higher ground clearance is a better view of the road allowing you to anticipate problems.
- It is not designed for cornering at the same speeds as ordinary passenger cars any more than low-slung sports cars designed to perform satisfactorily under off-road conditions. Therefore, sharp turns at excessive speeds may cause the vehicle to rollover.

WARNING

■ **Utility vehicle precautions**

Always observe the following precautions to minimize the risk of death, serious injury or damage to your vehicle:

- In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Therefore, the driver and all passengers should always fasten their seat belts.
- Avoid sharp turns or abrupt maneuvers, if at all possible.
  Failure to operate this vehicle correctly may result in loss of control or vehicle rollover causing death or serious injury.
- Loading cargo on the roof luggage carrier (if equipped) will make the center of the vehicle gravity higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly.
- Always slow down in gusty crosswinds. Because of its profile and higher center of gravity, your vehicle is more sensitive to side winds than an ordinary passenger car. Slowing down will allow you to have better control.
- Do not drive horizontally across steep slopes. Driving straight up or straight down is preferred. Your vehicle (or any similar off-road vehicle) can tip over sideways much more easily than forward or backward.

Off-road driving

When driving your vehicle off-road, please observe the following precautions to ensure your driving enjoyment and to help prevent the closure of areas to off-road vehicles.

- Drive your vehicle only in areas where off-road vehicles are permitted to travel.
- Respect private property. Get owner's permission before entering private property.
- Do not enter areas that are closed. Honor gates, barriers and signs that restrict travel.
- Stay on established roads. When conditions are wet, driving techniques should be changed or travel delayed to prevent damage to roads.

WARNING

■ Off-road driving precautions

Always observe the following precautions to minimize the risk of death, serious injury or damage to your vehicle:

- Drive carefully when off the road. Do not take unnecessary risks by driving in dangerous places.
- Do not grip the steering wheel spokes when driving off-road. A bad bump could jerk the wheel and injure your hands. Keep both hands and especially your thumbs on the outside of the rim.
- Always check your brakes for effectiveness immediately after driving in sand, mud, water or snow.
- After driving through tall grass, mud, rock, sand, water, etc., check that there is no grass, bush, paper, rags, stone, sand, etc. adhering or trapped on the underbody. Clear off any such matter from the underbody. If the vehicle is used with these materials trapped or adhering to the underbody, a breakdown or fire could occur.
- When driving off-road or in rugged terrain, do not drive at excessive speeds, jump, make sharp turns, strike objects, etc. This may cause loss of control or vehicle rollover causing death or serious injury. You are also risking expensive damage to your vehicle's suspension and chassis.

NOTICE

■ **To prevent the water damage**

Take all necessary safety measures to ensure that water damage to the hybrid battery (traction battery), hybrid system or other components does not occur.

- Water entering the engine compartment may cause severe damage to the hybrid system. Water entering the interior may cause the hybrid battery (traction battery) stowed under the rear seats to short circuit.
- Water entering the hybrid transmission will cause deterioration in transmission quality. The malfunction indicator may come on, and the vehicle may not be drivable.
- Water can wash the grease from wheel bearings, causing rusting and premature failure, and may also enter the hybrid transaxle case, reducing the gear oil's lubricating qualities.

■ **When you drive through water**

If driving through water, such as when crossing shallow streams, first check the depth of the water and the bottom of the stream for firmness. Drive slowly and avoid deep water.

■ **Inspection after off-road driving**

- Sand and mud that has accumulated around brake drums and around brake discs may affect braking efficiency and may damage brake system components.
- Always perform a maintenance inspection after each day of off-road driving that has taken you through rough terrain, sand, mud, or water.

Interior features 5

5-1. Using the air conditioning system and defogger

Automatic air conditioning system 444

Heated steering wheel/ seat heaters.....452

5-2. Using the interior lights

Interior lights list.....455

• Interior lights.....456

• Personal lights.....456

5-3. Using the storage features

List of storage features 458

• Glove box 459

• Console box 459

• Cup holders 460

• Bottle holders 461

• Auxiliary box 462

Luggage compartment features.....463

5-4. Using the other interior features

Other interior features.....475

• Sun visors.....475

• Vanity mirrors 475

• Portable ashtray 476

• Power outlets.....477

• Armrest.....478

• Coat hooks 478


• Assist grips 479

ERA-GLONASS/EVAK 480

Automatic air conditioning system

Air outlets and fan speed are automatically adjusted according to the temperature setting.

Control panel

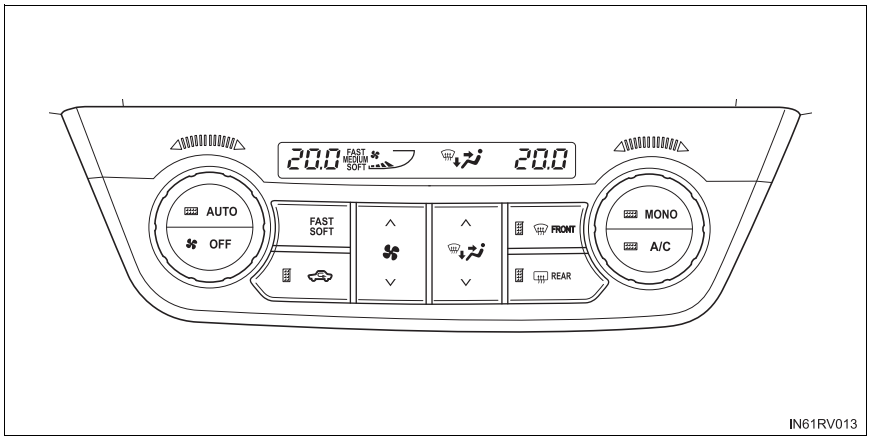

IN61RV013

The illustration below is for left-hand drive vehicles. The button positions are reversed for right-hand drive vehicles.

■ Adjusting the temperature setting

Turn  clockwise to increase the temperature and turn the knob counterclockwise to decrease the temperature.

The air conditioning system switches between individual and simultaneous modes each time  is pressed.

Simultaneous mode (the indicator on  is on):
The driver's side temperature control dial can be used to adjust the temperature for the driver's and passenger's side. At this time, operate the passenger's side temperature control dial to enter individual mode.

Individual mode (the indicator on  is off):
The temperature for the driver's and passenger's side can be adjusted separately.

■ **Adjusting the fan speed setting**

Press "∧" on  to increase the fan speed and "∨" to decrease the fan speed.

Press  to turn the fan off.

■ **Changing the airflow mode**

To change the air outlets, press "∧" or "∨" on .


The air outlets used are switched each time either side of the button is pressed.

① Air flows to the upper body.

② Air flows to the upper body and feet.

③ Air flows to the feet.

④ Air flows to the feet and the windshield defogger operates.

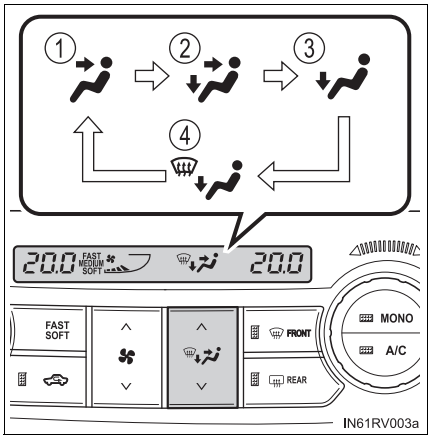

Using the automatic mode

1 Press .

The dehumidification function begins to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting and humidity.

2 Adjust the temperature setting.

■ **Automatic mode indicator**

If the fan speed setting or air flow modes are operated, the automatic mode indicator goes off. However, automatic mode for functions other than that operated is maintained.

5

Interior features

Other functions

■ Switching between outside air and recirculated air modes

Press .

The mode switches between outside air mode (the indicator is off) and recirculated air mode (the indicator is on) each time  is pressed.

■ Blower customization


If automatic mode is selected, only the fan speed can be adjusted according to your preference.

1 Press .

2 Press .

Each time  is pressed, the fan speed changes as follows.

"MEDIUM" → "SOFT" → "FAST"



■ Defogging the windshield

Defoggers are used to defog the windshield and front side windows.

Press .

The dehumidification function operates and fan speed increases.
Set the outside/recirculated air mode button to outside air mode if the recirculated air mode is used. (It may switch automatically.)
To defog the windshield and the side windows early, turn the air flow and temperature up.
To return to the previous mode, press  again when the windshield is defogged.

■ Defogging the rear window and outside rear view mirrors

Defoggers are used to defog the rear window and to remove raindrops, dew and frost from the outside rear view mirrors.


Press .

The defoggers will automatically turn off after a period of time.

■ **Windshield wiper de-icer (if equipped)/Heated Windshield Defroster (if equipped)**

This feature is used to prevent ice from building up on the windshield and wiper blades.

Press the switch to turn the system on/off.

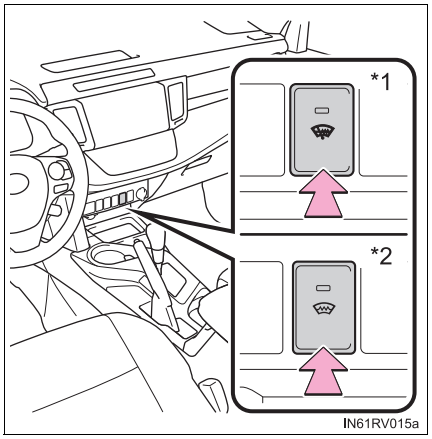

The indicator comes on when the system is on.

Vehicles with windshield wiper de-icer:
The windshield wiper de-icer will automatically turn off after a period of time.

Vehicles with Heated Windshield Defroster:

- The Heated Windshield Defroster will automatically turn off in 4 minutes.
- The Heated Windshield Defroster will not operate if the outside temperature is 5°C (41°F) or higher.


*1: Windshield wiper de-icer switch

*2: Heated Windshield Defroster switch

Air outlets

■ Location of air outlets

The air outlets and air volume changes according to the selected air flow mode.

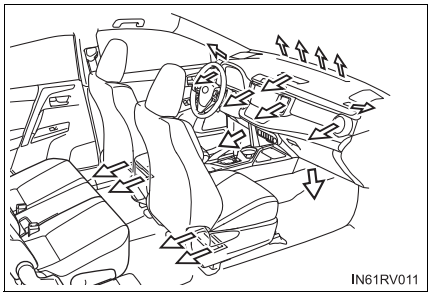


■ Adjusting the position of and opening and closing the air outlets

▶ Front center outlets

① Direct air flow to the left or right, up or down.


② Turn the knobs to open or close the vents.

③ Turn the knob to open or close the vent for rear seat occupants.

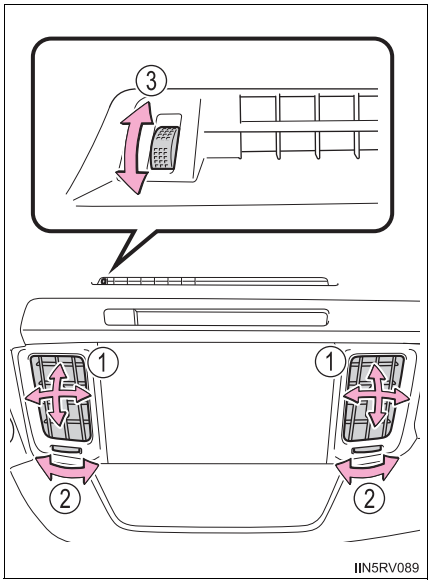


▶ Front side outlets

Direct air flow to the left or right, up or down.

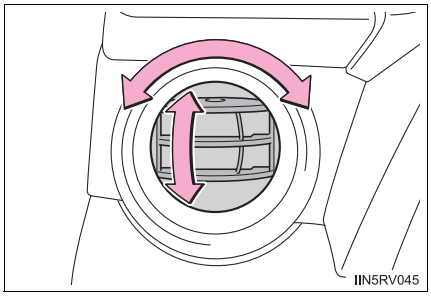

① Open the vent.
② Close the vent.

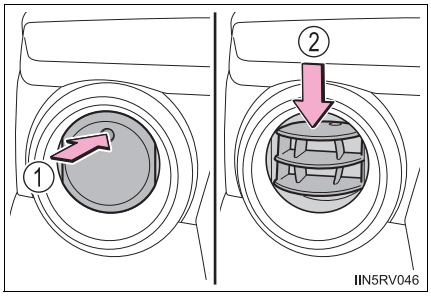

■ **Operation of the air conditioning system in Eco drive mode**

In Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:

- Engine speed and compressor operation controlled to restrict heating/cooling capacity
- Fan speed restricted when automatic mode is selected

To improve air conditioning performance, perform the following operations:

- Adjust the fan speed
- Adjust the temperature setting
- Turn off Eco drive mode (→P. 320)

■ **Using automatic mode**

Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.
Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after AUTO is pressed.

■ **Fogging up of the windows**

- The windows will easily fog up when the humidity in the vehicle is high. Turning A/C on will dehumidify the air from the outlets and defog the windshield effectively.
- If you turn A/C off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

■ **Outside/recirculated air mode**

- When driving on dusty roads such as tunnels or in heavy traffic, set the outside/recirculated air mode button to the recirculated air mode. This is effective in preventing outside air from entering the vehicle interior. During cooling operation, setting the recirculated air mode will also cool the vehicle interior effectively.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

■ **When the outside temperature is low**

The dehumidification function may not operate even when the A/C is pressed.

■ **Heated Windshield Defroster (if equipped)**

If the Heated Windshield Defroster is attempted to be activated when the ambient temperature is 5°C (41°F) or higher, the indicator on the Heated Windshield Defroster switch will blink 5 times. In this situation, the Heated Windshield Defroster does not operate.

■ **Ventilation and air conditioning odors**

- To let fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
  - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
  - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

■ **Air conditioning filter**

→P. 541


■ **Customization**

Settings (e.g. outside/recirculated air mode) can be changed.
(Customizable features: →P. 664)

WARNING

■ **To prevent the windshield from fogging up**

- Do not use  during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.
- Do not place anything on the instrument panel which may cover the air outlets. Otherwise, air flow may be obstructed, preventing the windshield defoggers from defogging.

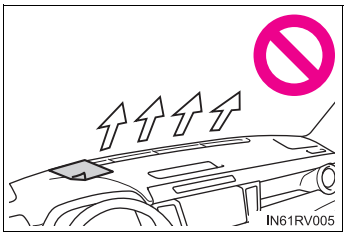

■ **To prevent burns**

- Do not touch the rear view mirror surfaces when the outside rear view mirror defoggers are on.
- Vehicles with windshield wiper de-icer: Do not touch the glass at lower part of the windshield or the side of the front pillars when the windshield wiper de-icer is on.
- Vehicles with Heated Windshield Defroster: Do not touch the windshield or the side of the front pillars when the Heated Windshield Defroster is on.

NOTICE

■ **To prevent 12-volt battery discharge**

Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

Heated steering wheel*/seat heaters*

Heated steering wheel and seat heaters heat the side grips of the steering wheel and seats, respectively.

WARNING

- Care should be taken to prevent injury if anyone in the following categories comes in contact with the steering wheel and seats when the heater is on:
  - Babies, small children, the elderly, the sick and the physically challenged
  - Persons with sensitive skin
  - Persons who are fatigued
  - Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)
- Observe the following precautions to prevent minor burns or overheating:
  - Do not cover the seat with a blanket or cushion when using the seat heater.
  - Do not use seat heater more than necessary.

NOTICE


- Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.
- To prevent 12-volt battery discharge, do not use the functions when the hybrid system is not operating.

*: If equipped

Heated steering wheel

Turns the heated steering wheel on/off

The indicator light comes on when the heated steering wheel is operating.

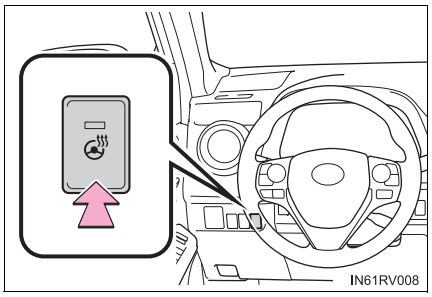

The heated steering wheel can be used when the power switch is in ON mode.

Seat heaters

■ Front seats

Turns seat heater on


① Front left seat (high)

② Front left seat (low)

③ Front right seat (high)

④ Front right seat (low)


The indicator light comes on when the front seat heater is operating.

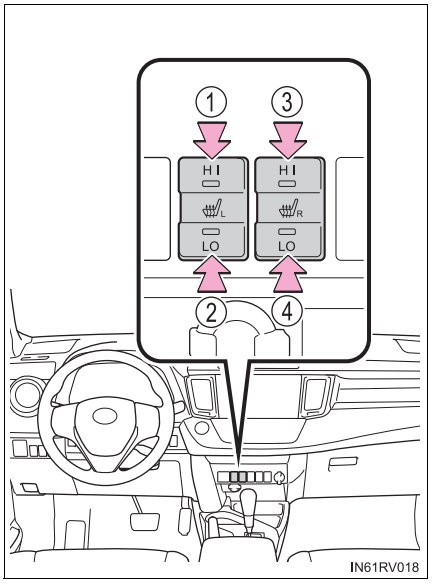

■ **Rear seats (if equipped)**


Turns the rear seat heater on/off

The indicator light comes on when the rear seat heater is operating.

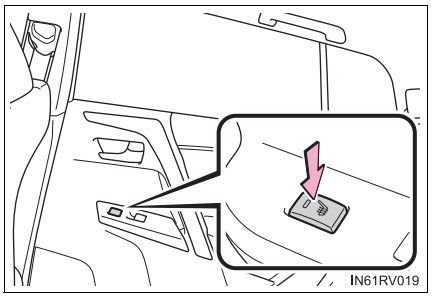

- The seat heaters can be used when the power switch is in ON mode.
- When not in use, turn the front seat heater off by returning the switch to its level position. The indicator light turns off.
- In the following situations, the rear seat heater will not operate and the indicator on the switch will blink 5 times
  - When the Heated Windshield Defroster, headlights and front fog lights are all on
  - When all of the Heated Windshield Defroster, headlights and front fog lights are turned on while the rear seat heater is operating (when any one of the Heated Windshield Defroster, headlights and front fog lights is turned off, the rear seat heater will restart automatically)

Interior lights list

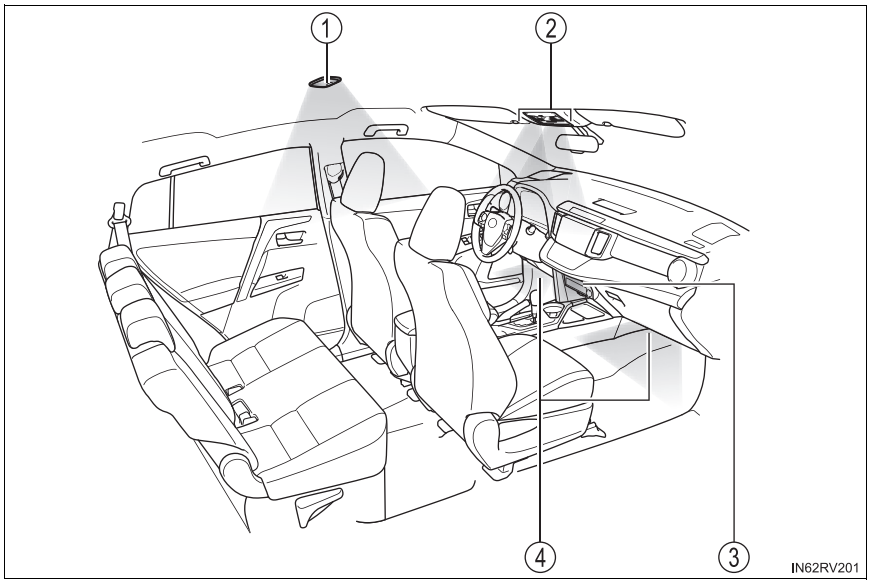

① Interior lights (→P. 456)
② Interior/personal lights (→P. 456)
③ Instrument panel center illumination
④ Footwell lights

Interior lights


■ Front

① Off

② Door position

The interior lights come on when a door is opened. They turn off when the doors are closed.

③ On

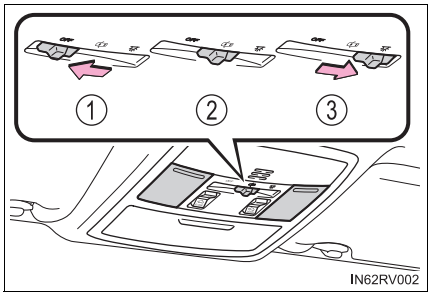


■ Rear

① Off

② Door position


The interior light comes on when a door is opened. It turns off when the doors are closed.

③ On

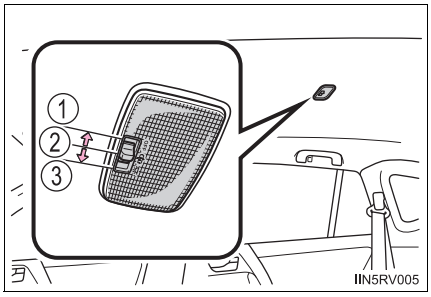


Personal lights

Turns the light on/off

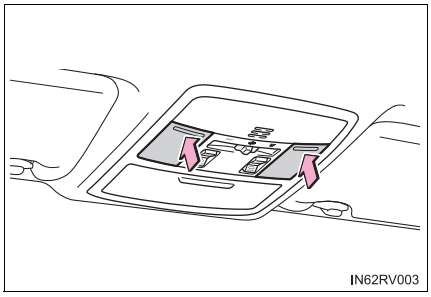

- Illuminated entry system: The lights automatically turn on/off according to power switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are opened/closed.
  Footwell lights: When shifting the shift lever to any position other than P, the brightness of the footwell lights will be reduced.
- If the interior lights remain on when the door is not fully closed and the interior light main switch is in the door position, the interior lights will go off automatically after 20 minutes.
- Setting (e.g. the time elapsed before lights turn off) can be changed.
  (Customizable features: →P. 664)

List of storage features

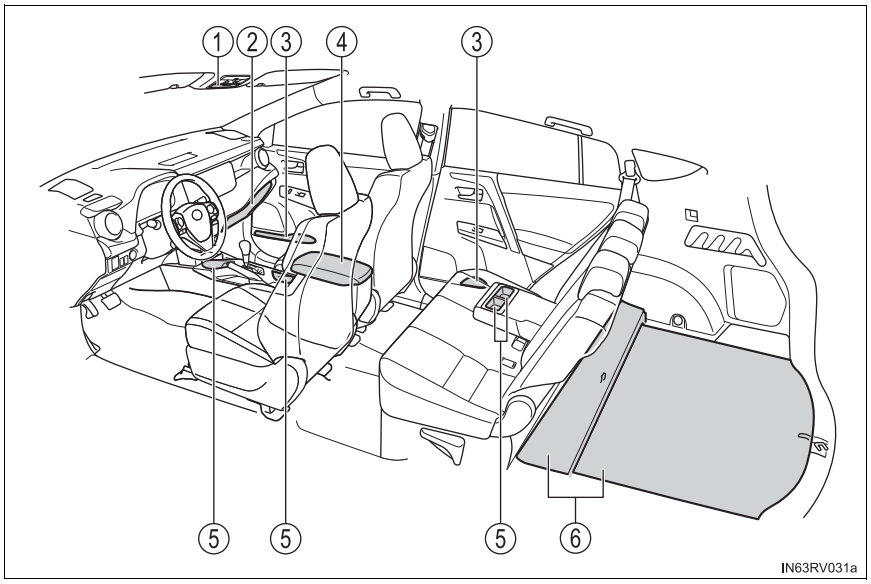

① Auxiliary box	(→P. 462)	④ Console box	(→P. 459)
② Glove box	(→P. 459)	⑤ Cup holders	(→P. 460)
③ Bottle holders	(→P. 461)	⑥ Storage boxes	(→P. 464)


⚠ WARNING

- Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:
  - Glasses may be deformed by heat or cracked if they come into contact with other stored items.
  - Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.
- When driving or when the storage compartments are not in use, keep the lids closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by an open lid or the items stored inside.

Glove box

The glove box can be opened by pulling the lever and can be locked and unlocked by using the mechanical key.


① Unlock
② Lock
③ Open

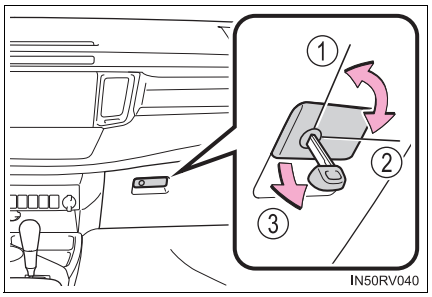


Console box

Lift the lid while pulling up the knob to release the lock.

① Lower box
② Upper box

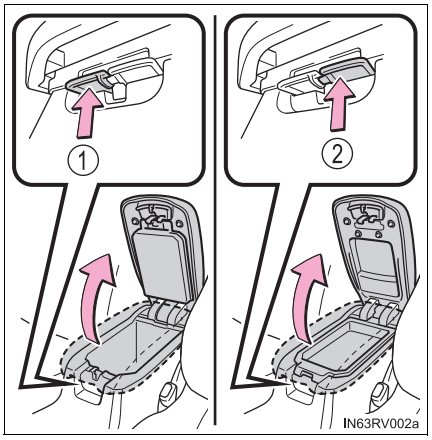

When using the console box lid as an armrest, slide the console box lid forward as needed. Pull the lid forward by holding the front of the lid.

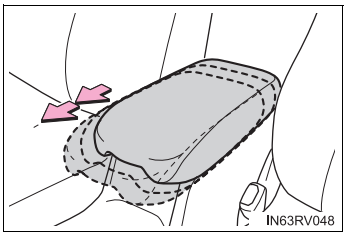


WARNING


- Do not adjust the position of the console box while the vehicle is moving. This may cause the driver to mishandle the vehicle and may lead to an accident that results in death or serious injury.
- Be careful not to get hands or feet pinched between the front console box and the center panel or rear seats.
- Be careful not to allow the front console box to hit any passengers while adjusting its position.
- After adjusting the console box, make sure it is securely locked in position.

Cup holders

▶ Front

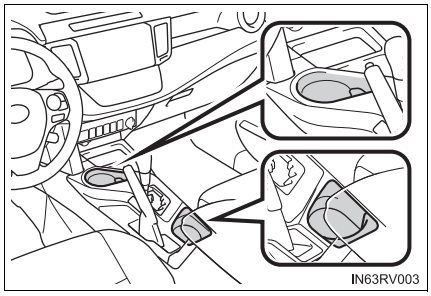

▶ Rear

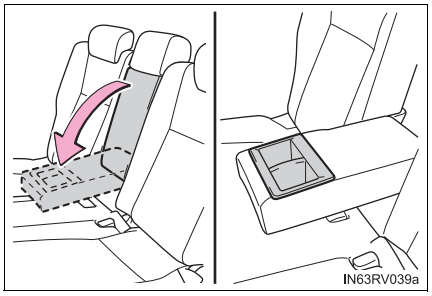


Pull the armrest down.

WARNING


Do not place anything other than cups, beverage cans or portable ashtray in the cup holders.
Other items may be thrown out of the holders in the event of an accident or sudden braking, causing injury. If possible, cover hot drinks to prevent burns.

Bottle holders

▶ Front

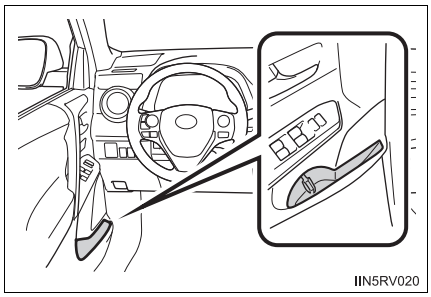

▶ Rear

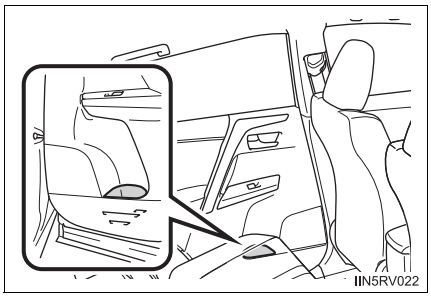

WARNING

Do not place anything other than a bottle in the bottle holders.


Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury.

NOTICE

Put the cap on before stowing a bottle. Do not place open bottles in the bottle holders, or glasses and paper cups containing liquid. The contents may spill and glasses may break.

Auxiliary box

Press in the lid.

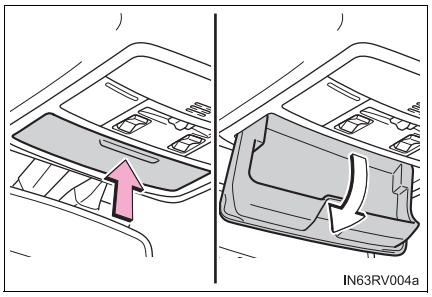

WARNING

Do not store items heavier than 200 g (0.44 lb.).


Doing so may cause the auxiliary box to open and the items inside may fall out, resulting in an accident.

Luggage compartment features

Cargo hooks

Raise the hooks to use.


The cargo hooks are provided for securing loose items.

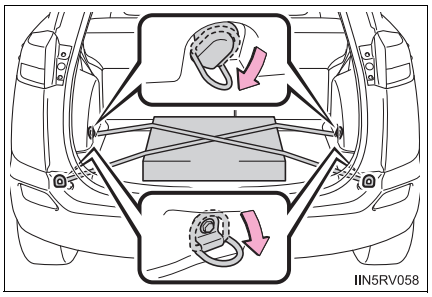

WARNING

To avoid injury, always return the cargo hooks to their stowed positions when not in use.

Grocery bag hooks

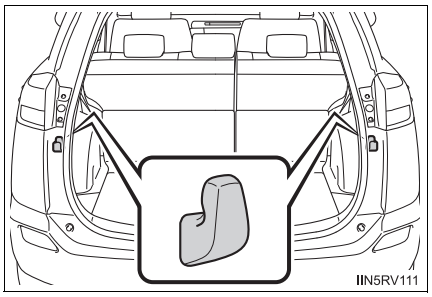


NOTICE

Do not hang any object heavier than 4 kg (8.8 lb.) on the grocery bag hooks.

Storage boxes


▶ Type A

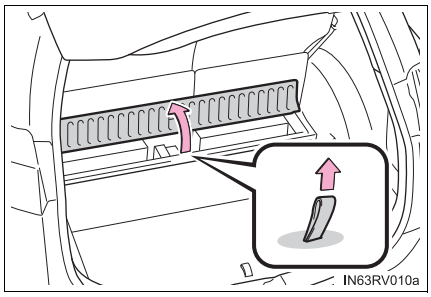

Open the deck board by pulling up the strap.

Warning reflector etc. can be stowed.

▶ Type B (vehicles without spare tire)

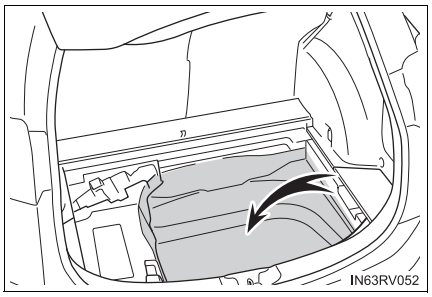


WARNING

Do not drive with any of the deck boards opened. Items may fall out and cause injury.

Luggage cover (if equipped)


■ Installing the luggage cover

1 With the “TOP” marks up, insert the right end of the luggage cover into the recess, then compress the left end of the luggage cover and insert it into the recess.

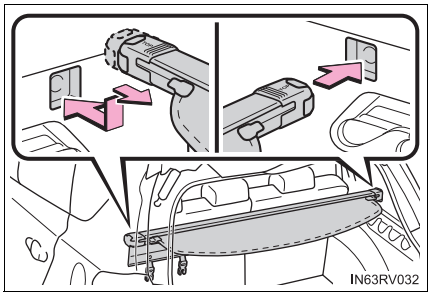


2 Attach the hooks to the rear seat head restraints.

If necessary, move the rear seats to enable the hook engagement.

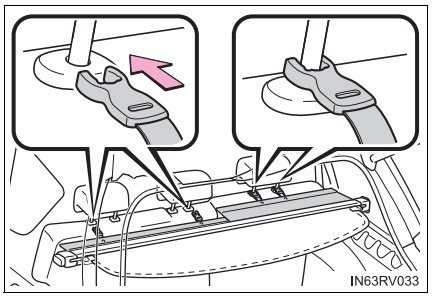


3 Pull out the luggage cover and hook it onto the anchors.

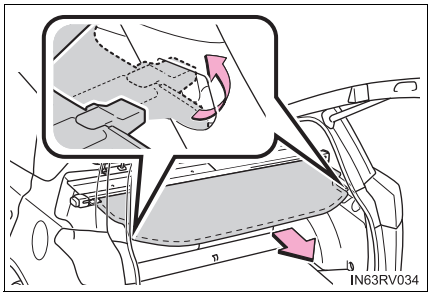


■ Removing the luggage cover

1 Release the cover from the left and right anchors and allow it to retract.

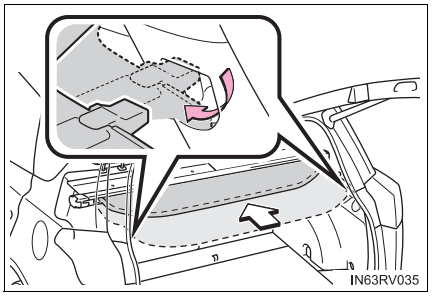


2 Compress the end of the luggage cover and lift the luggage cover up.

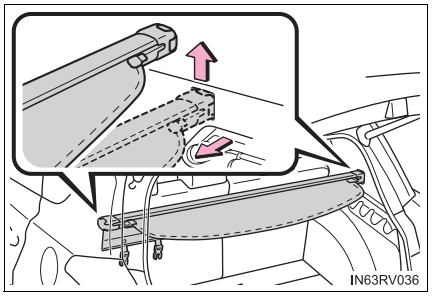


■ **Stowing the luggage cover (except for full-size spare tire)**

1 Open the rear deck board and remove the side deck covers.

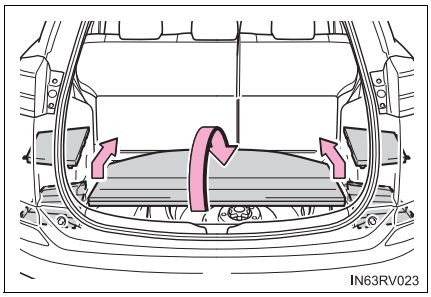

2 Insert the right end of the luggage cover into the recess, then compress the left end of the luggage cover and insert it into the recess.

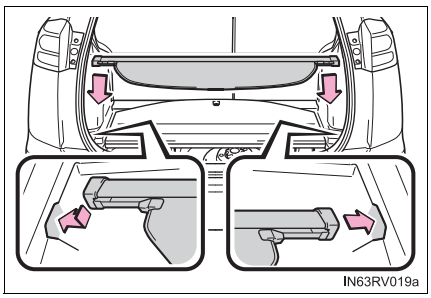


WARNING

- When installing/stowing the luggage cover, make sure that the luggage cover is securely installed/stowed. Failure to do so may result in serious injury in the event of sudden braking or a collision.
- Do not place anything on the luggage cover to avoid death or serious injury.
- Do not allow children to climb on the luggage cover. Climbing on the luggage cover could result in damage to the luggage cover, possibly causing death or serious injury to the child.


NOTICE

- Do not put heavy items on the luggage cover.
- Install the cover unit in the correct direction so that the “TOP” mark faces upward.

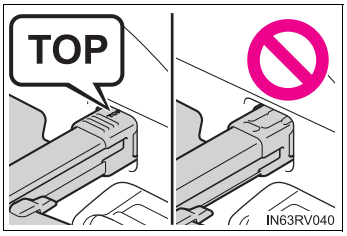

Rear cargo net (if equipped)

The fixed position of the poles can be changed to accommodate the size and type of luggage being stored. Also, the cargo net can be used to prevent luggage from spilling out by installing one of the poles at a lower level.

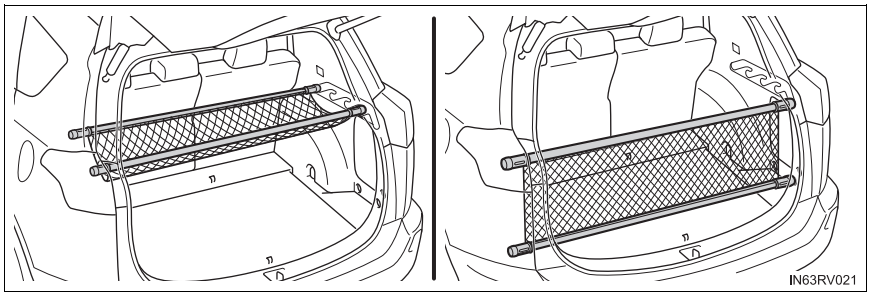

■ Installation positions


① Slide rail

② Upper level fixed positions

③ Lower level fixed positions A

④ Lower level fixed positions B*


*: Not usable on the vehicles with full-size spare tire.

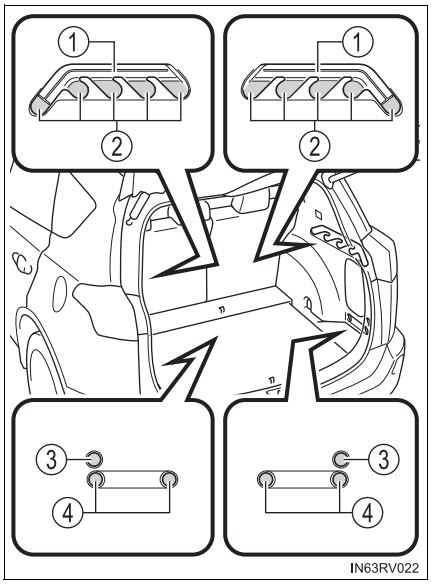


■ Installing to the upper level and changing the fixed position

● Installing the rear cargo net

1 Except for vehicles with full-size spare tire: Take out the rear cargo net.

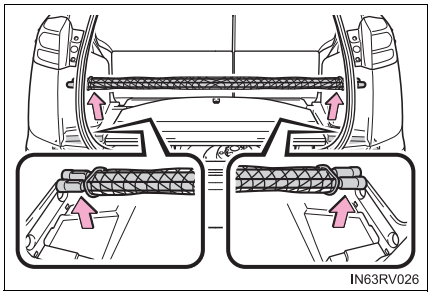


2 Push the right or left end of the pole into the slide rail.

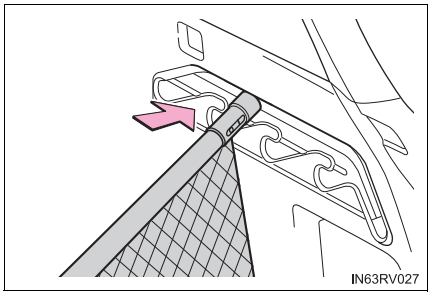


3 Push the other end of the pole into the slide rail, and then install both ends into fixed positions.

After installing, check that both ends of the pole are firmly inserted into their fixed positions.
When removing the rear cargo net, follow the installation procedures in reverse order.

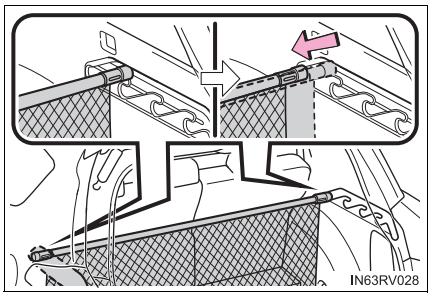


● Changing the fixed position of the pole

1 Lift the pole to move up to the slide rail.

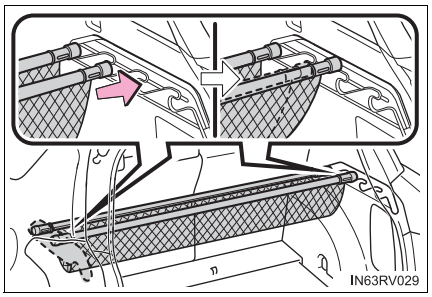

2 Slide the pole to the desired fixed position, and push down.


Move the pole so that its left and right ends line up and the pole is straight.
After changing the position, check that both ends of the pole are firmly inserted into their fixed positions.

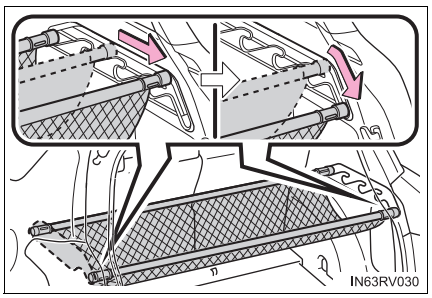


■ Installing to the lower level and changing the fixed position

● Installing the rear cargo net

1 Except for vehicles with full-size spare tire: Take out the rear cargo net.

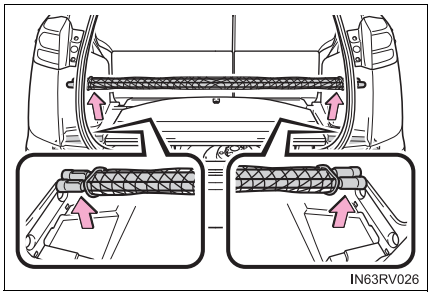


2 Push one end of the pole into a fixed position to shorten the pole.

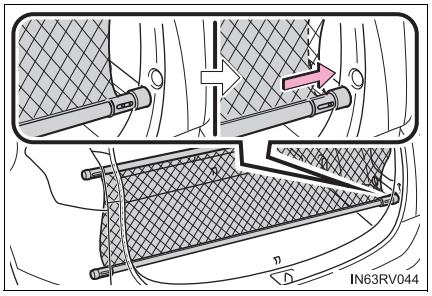

3 Align the other end of the pole with the corresponding fixed position on the other side and release the pole.


After installing, check that both ends of the pole are firmly inserted into their fixed positions.

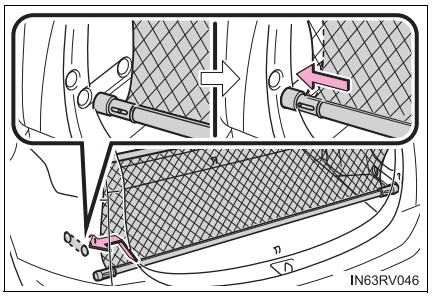

When removing the rear cargo net, follow the installation procedures in reverse order.

● Changing the fixed position of the pole


1 Push one end of the pole into its fixed position to shorten the pole, and then remove the rear cargo net.

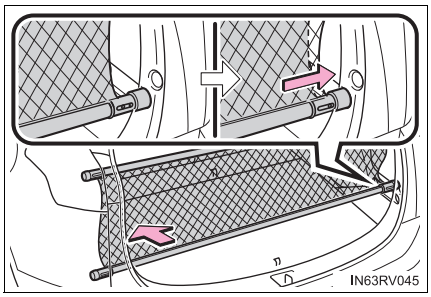


2 Perform the steps 2 and 3 in “Installing the rear cargo net”. (→P. 471)

■ **Stowing the rear cargo net (except for vehicles with full-size spare tire)**

1 Open the rear deck board and remove the side deck covers.

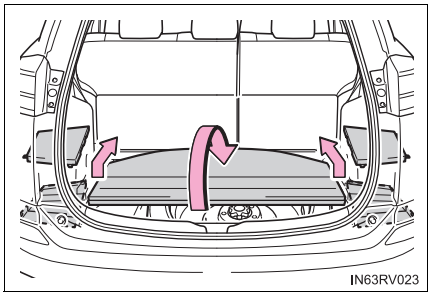

2 While pushing the ends of both poles on one side of the cargo net into the storage area to shorten the poles, fix the poles into the storage area.

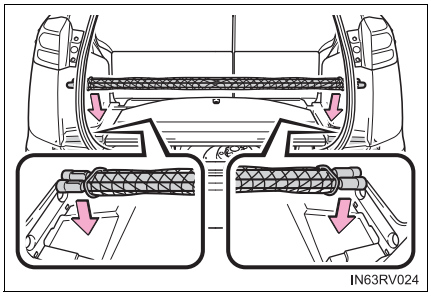

WARNING

Make sure to observe the following precautions. Failure to observe these precautions may result in death or serious injury.

- Do not allow children to climb or ride on the rear cargo net.
- Do not load any luggage into the rear cargo net that extends beyond the height of the pole.
- When installing the rear cargo net to the vehicle, check that both ends of the pole are securely inserted into their fixed positions.
- When stowing the rear cargo net, securely fix it into the storage area.

NOTICE


- Do not place luggage weighing approximately 10 kg (22.1 lb.) or more onto the rear cargo net.
- Install the pole to matching fixed positions on the left and right sides so that the pole is straight. If the pole is installed at an angle, the rear cargo net may come loose.
- Do not use the rear cargo net with only one pole installed. The pole may move while the vehicle is in motion, resulting in damage to the rear cargo net pole or other equipment in the luggage compartment.

Deck board (vehicles without full-size spare tire)


When loading long luggage, the deck board can be laid flat over the space between the deck board and separator.

1 Folding down the rear seatbacks. (→P. 266)


2 Lift the nearest side of the deck board up and pull the deck board forward.

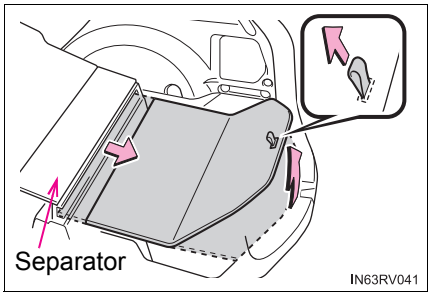

3 Lift the opposite side of the deck board up and return the nearest side to its original position.

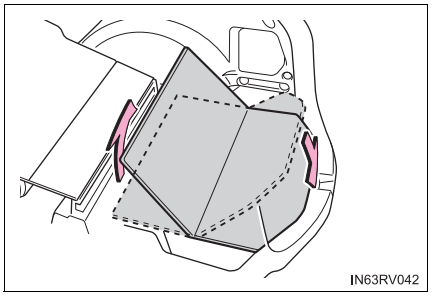

4 Lay the opposite side of the deck board over the edge of the separator.

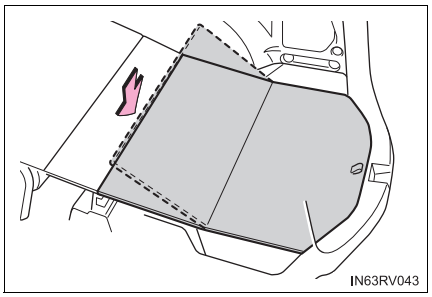

WARNING


Take extra care to prevent your fingers, etc., from being caught while performing these procedures.

Other interior features

Sun visors

① Forward position:
Flip down.


② Side position:
Flip down, unhook, and swing to the side.

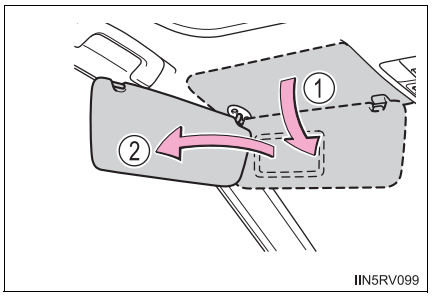

Vanity mirrors

Slide the cover to open.

The light turns on when the cover is opened.

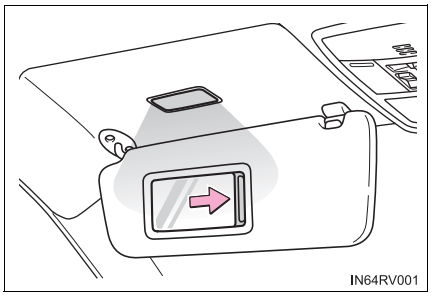


NOTICE

To prevent 12-volt battery discharge, do not leave the vanity lights on for extended periods while the hybrid system is off.

Portable ashtray (if equipped)

The ashtray can be installed in the cup holder. (→P. 460)

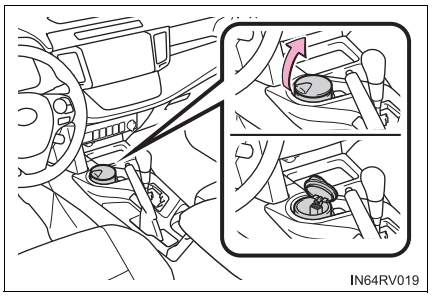

⚠ WARNING


- When not in use, keep the ashtray closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open ashtray or ash flying out.
- To prevent fire, fully extinguish matches and cigarettes before putting them in the ashtray, then make sure the ashtray is fully closed.
- To prevent fire, do not place paper or any other type of flammable object in the ashtray.

Power outlets


Please use a power supply for electronic goods that use less than 12 VDC/10 A (power consumption of 120 W).
When using electronic goods, make sure that the power consumption of all the connected power outlets is less than 120 W.

Open the lid.

▶ Front

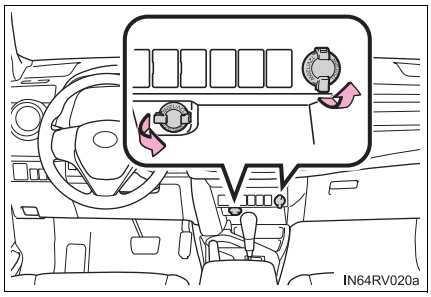

▶ Rear

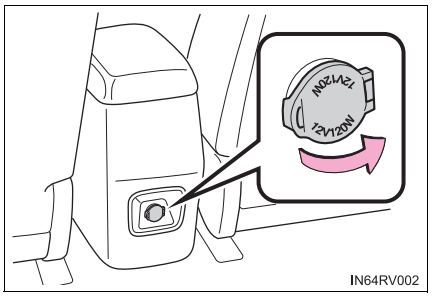


The power outlets can be used when the power switch is in ACCESSORY or ON mode.

NOTICE

- To avoid damaging the power outlets, close the power outlet lids when the power outlets are not in use.
  Foreign objects or liquids that enter the power outlets may cause a short circuit.
- To prevent 12-volt battery discharge, do not use the power outlets longer than necessary when the hybrid system is off.

Armrest

Fold down the armrest for use.

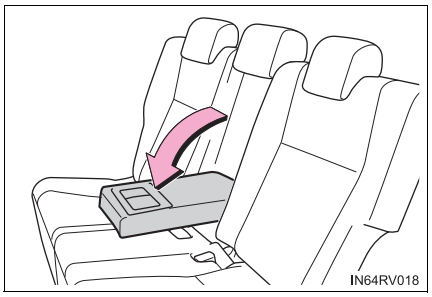


NOTICE

To prevent damage to the armrest, do not apply too much load on the armrest.

Coat hooks

The coat hooks are provided with the rear assist grips.

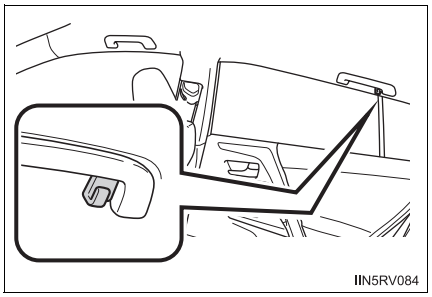


WARNING

Do not hang coat hangers or other hard or sharp objects on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles, causing death or serious injury.

Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

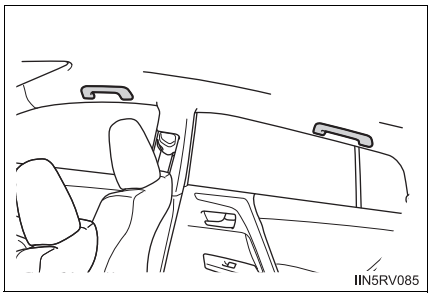

WARNING

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.
Doing so could damage the assist grip, or could cause you to injure yourself by falling over.

NOTICE

To prevent damage to the assist grip, do not hang any heavy object or put a heavy load on the assist grip.

ERA-GLONASS/EVAK*1, 2

The Emergency Call system is a device installed on a vehicle to determine its location and movement direction (using GLONASS [Global Navigation Satellite System] and GPS [Global Positioning System] signals), and ensure the generation and transmission of vehicle information (in a nonadjustable form) in case of traffic accidents or other incidents on motor roads in the Russian Federation/Kazakhstan. In addition, it ensures two-way voice communication between the vehicle and an ERA-GLONASS/EVAK system operator through cellular networks (GSM).

Automatic Emergency Calls (via Automatic Collision Notification) and manual Emergency Calls (by pressing the "SOS" button) can be made to the ERA-GLONASS/EVAK control center.

This service is mandatory according to the technical regulations of the Customs Union.


System components

① Microphone

② "SOS" button*

③ Indicator lights

*: This button is intended for communication with the ERA-GLONASS/EVAK system operator.
Other SOS buttons available in other systems of a motor vehicle do not relate to the device and are not intended for communication with the ERA-GLONASS/EVAK system operator.

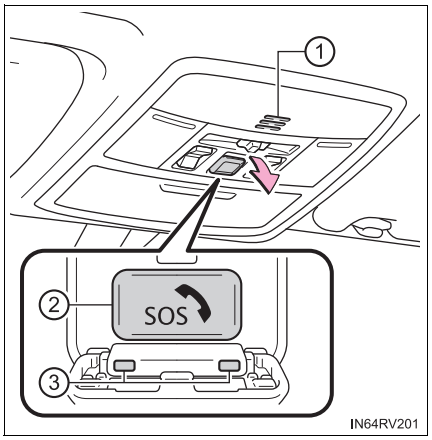

*1: If equipped

*2: Operates within the ERA-GLONASS/EVAK coverage.
The system name differs depending on the country.

Emergency Notification Services

■ Automatic Emergency Calls

If any airbag deploys, the system is designed to automatically call the ERA-GLONASS/EVAK control center.* The answering operator receives the vehicle's location, the time of the incident and the vehicle VIN, and attempts to speak with the vehicle occupants to assess the situation. If the occupants are unable to communicate, the operator automatically treats the call as an emergency and contacts the nearest emergency services provider (112 system etc.) to describe the situation and request that assistance be sent to the location.

*: In some cases, the call cannot be made. (→P. 483)

■ Manual Emergency Calls

In the event of an emergency, press the "SOS" button to call the ERA-GLONASS/EVAK control center.* The answering operator will determine your vehicle's location, assess the situation, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the operator that you are not experiencing an emergency.

*: In some cases, the call cannot be made. (→P. 483)

Indicator lights

When the power switch is turned to ON mode, the red indicator light will illuminate for 10 seconds and then the green indicator light will illuminate, indicating that the system is enabled. The indicator lights indicate the following:

- If the green indicator light illuminates and stays on, the system is enabled.
- If the green indicator light flashes twice per second, an automatic or manual Emergency Call is being made.
- If no indicator lights illuminate, the system is not enabled.
- If the red indicator light illuminates at any time other than immediately after the power switch is turned to ON mode, the system may be malfunctioning or the backup battery may be depleted.
- If the red indicator light blinks for approximately 30 seconds during an Emergency Call, the call has been disconnected or the cellular network signal is weak.

The service life of the backup battery does not exceed 3 years.

Device test mode

A test mode is provided for to check the performance of the Emergency Call system. To test the device, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ **When the Emergency Call may not be made**

● It may not be possible to make Emergency Calls in any of the following situations. In such cases, report to emergency services provider (112 system etc.) by other means such as nearby public phones.

- Even when the vehicle is in the cellular phone service area, it may be difficult to connect to the ERA-GLONASS/EVAK control center if the reception is poor or the line is busy. In such cases, even though the system attempts to connect to the ERA-GLONASS/EVAK control center, you may not be able to connect to the ERA-GLONASS/EVAK control center to make Emergency Calls and contact emergency services.
- When the vehicle is out of the cellular phone service area, the Emergency Calls cannot be made.
- When any related equipment (such as the “SOS” button panel, indicator lights, microphone, speaker, DCM, antenna, or any wires connecting the equipment) is malfunctioning, damaged or broken, the Emergency Call cannot be made.
- During an Emergency Call, the system makes repeated attempts to connect to the ERA-GLONASS/EVAK control center. However, if it cannot connect to the ERA-GLONASS/EVAK control center due to poor radio wave reception, the system may not be able to connect to the cellular network and the call may finish without connecting. The red indicator light will blink for approximately 30 seconds to indicate this disconnection.
- This device may not function if a shock is applied to it.

● If the 12-volt battery’s voltage decreases or there is a disconnection, the system may not be able to connect to the ERA-GLONASS/EVAK control center.

■ **When the Emergency Call system is replaced with a new one**

The Emergency Call system should be registered. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ **For your safety**

- Please drive safely.
  The function of this system is to assist you in making the Emergency Call in case of accidents such as traffic accidents or sudden medical emergencies, and it does not protect the driver or passengers in any way. Please drive safely and fasten your seatbelts at all times for your safety.
- In case of an emergency, make lives the top priority.
- If you smell anything burning or other unusual smells, leave the vehicle and evacuate to a safe area immediately.
- Since the system detects shocks, the automatic reporting may not always occur synchronized with the operation of the airbag system. (If the vehicle is struck from behind, etc.)
- For safety, do not make the Emergency Call while driving.
  Making calls during driving may cause mishandling of the steering wheel, which may lead to unexpected accidents.
  Stop the vehicle and confirm the safety of your surroundings before making the Emergency Call.
- When changing fuses, please use the specified fuses. Using other fuses may cause ignition or smoke in the circuit and lead to a fire.
- Using the system while there is smoke or an unusual smell may cause a fire. Stop using the system immediately and consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

NOTICE

■ **To prevent damage**

Do not pour any liquids onto the “SOS” button panel, etc. and do not impact it.

■ **If the “SOS” button panel, speaker or microphone malfunctions during an Emergency Call or manual maintenance check**

It may not be possible to make Emergency Calls, confirm the system status, or communicate with the ERA-GLONASS/EVAK control center operator. If any of the above equipment is damaged, please consult any authorized Toyota retailer, Toyota authorized repairer, or any reliable repairer.

Maintenance and care 6

6-1. Maintenance and care
Cleaning and protecting the vehicle exterior 486
Cleaning and protecting the vehicle interior 490
6-2. Maintenance
Maintenance requirements.....493
6-3. Do-it-yourself maintenance
Do-it-yourself service precautions 496
Hood 498
Positioning a floor jack.....500
Engine compartment.....501
12-volt battery 509
Tires.....514
Tire inflation pressure 536
Wheels.....538
Air conditioning filter 541
Electronic key battery 543
Checking and replacing fuses 546
Light bulbs 550

Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition:

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

  If water does not bead on a clean surface, apply wax when the vehicle body is cool.

■ **Automatic car washes**

- Before washing the vehicle:
  - Fold the mirrors
  - Turn off the power back door (if equipped)

  Start washing from the front of the vehicle. Make sure to extend the mirrors before driving.
- Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.
- Rear spoiler may not be washable in some automatic car washes. There may also be an increased risk of damage to vehicle.

■ **High pressure car washes**

- Do not allow the nozzles of the car wash to come within close proximity of the windows.
- Before using the car wash, check that the fuel filler door on your vehicle is closed properly.

■ **When using a car wash**

- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. Place the key in a position 2 m (6 ft.) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)
- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.

■ **Aluminum wheels**

- Remove any dirt immediately by using a neutral detergent.
- Wash detergent off with water immediately after use.
- To protect the paint from damage, make sure to observe the following precautions.
  - Do not use acidic, alkaline or abrasive detergent
  - Do not use hard brushes
  - Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather

■ **Bumpers**

Do not scrub with abrasive cleaners.


WARNING

■ **When washing the vehicle**

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components etc. to catch fire.

■ **When cleaning the windshield**

Set the wiper switch to off.
If the wiper switch is in “AUTO”, the wipers may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

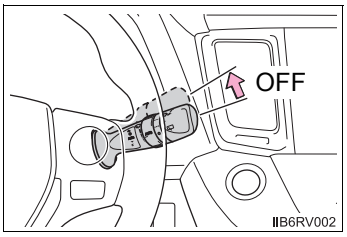

- When the upper part of the windshield where the raindrop sensor is located is touched by hand
- When a wet rag or similar is held close to the raindrop sensor
- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor

■ **Precautions regarding the exhaust pipes**

Exhaust gases cause the exhaust pipes to become quite hot.

When washing the vehicle, be careful not to touch the pipes until they have cooled sufficiently, as touching hot exhaust pipes can cause burns.

■ **Precautions regarding the Blind Spot Monitor (if equipped)**

If the paint of the rear bumper is chipped or scratched, the system may malfunction. If this occurs, consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

NOTICE

■ **To prevent paint deterioration and corrosion on the body and components (aluminum wheels etc.)**

- Wash the vehicle immediately in the following cases:
  - After driving near the sea coast
  - After driving on salted roads
  - If coal tar or tree sap is present on the paint surface
  - If dead insects, insect droppings or bird droppings are present on the paint surface
  - After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
  - If the vehicle becomes heavily soiled with dust or mud
  - If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.
- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

■ **Cleaning the exterior lights**

- Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.
- Do not apply wax to the surfaces of the lights. Wax may cause damage to the lenses.

■ **When using an automatic car wash**

Set the wiper switch to off position. If the wiper switch is in “AUTO”, the wipers may operate and the wiper blades may be damaged.

■ **When using a high-pressure car wash**

- When washing the vehicle, do not let water from the high-pressure washer directly hit the camera (if equipped) or the area around the camera. Due to the shock from high-pressure water, it is possible that the device may not operate normally.
- Do not bring the nozzle tip close to boots (rubber or resin manufactured cover), connectors or the following parts. The parts may be damaged if they come into contact with high-pressure water.
  - Traction related parts
  - Steering parts
  - Suspension parts
  - Brake parts

Cleaning and protecting the vehicle interior

The following procedures will help protect your vehicle's interior and keep it in top condition:

Protecting the vehicle interior

- Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.
- If dirt cannot be removed, wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.

  Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted detergent.

  Use a diluted water solution of approximately 5% neutral wool detergent.
- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

Cleaning the synthetic leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

■ **Caring for leather areas**

Toyota recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

■ **Shampooing the carpets**

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

■ **Seat belts**

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

⚠ WARNING

■ **Water in the vehicle**

- Do not splash or spill liquid in the vehicle, such as on the floor, in the hybrid battery (traction battery) air intake vents, and in the luggage compartment.
  Doing so may cause the hybrid battery (traction battery), electrical components, etc. to malfunction or catch fire.
- Do not get any of the SRS components or wiring in the vehicle interior wet. (→P. 42)
  An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.

■ **Cleaning the interior (especially instrument panel)**

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

NOTICE

Cleaning detergents

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
  - Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, and bleach
  - Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol
- Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

Water on the floor

Do not wash the vehicle floor with water.
Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

When cleaning the inside of the windshield (vehicles with Toyota Safety Sense)

Do not allow glass cleaner to contact the lens. Also, do not touch the lens. (→P. 348)

Cleaning the inside of the rear window

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires.
- Be careful not to scratch or damage the heater wires.

Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Toyota recommends the following maintenance:

Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For full details of your maintenance schedule, refer to the “Toyota Service Booklet” or “Toyota Warranty Booklet”.

Do-it-yourself maintenance

What about do-it-yourself maintenance?

Many maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools.

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you’re an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Any authorized Toyota retailer or repairer will keep a record of maintenance, which could be useful should you ever require Warranty Service. Should you choose to select a qualified and equipped professional other than an authorized Toyota repairer to service or maintain your vehicle, we recommend that you request that a record of maintenance be kept.

■ **Where to go for maintenance service?**

In order to maintain your vehicle in the best possible condition, Toyota recommends that maintenance service operations as well as other inspections and repairs be carried out by authorized Toyota retailers or Toyota authorized repairers, or any reliable repairers. For repairs and services covered by your warranty, please visit an authorized Toyota retailer or repairer, who will use genuine Toyota parts in repairing any difficulties you may encounter. There can also be advantages in utilizing authorized Toyota retailers or repairers for non-warranty repairs and services, as members of the Toyota network will be able to expertly assist you with any difficulties you may encounter.

Your Toyota retailer or Toyota authorized repairer, or any reliable repairer will perform all of the scheduled maintenance on your vehicle reliably and economically due to their experience with Toyota vehicles.

■ **Does your vehicle need repairs?**

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning system after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driven straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floor, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal (→P. 120)

If you notice any of these clues, take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible. Your vehicle may need adjustment or repair.

WARNING

■ **If your vehicle is not properly maintained**

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

■ **Handling of the 12-volt battery**

12-volt battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P. 509)

Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure as given in these sections.

Items	Parts and tools
12-volt battery condition (→P. 509)	• Conventional wrench (for terminal clamp bolts)
Engine/power control unit coolant level (→P. 505)	• “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology “Toyota Super Long Life Coolant” is pre-mixed with 50% coolant and 50% deionized water. • Funnel (used only for adding coolant)
Engine oil level (→P. 502)	• “Toyota Genuine Motor Oil” or equivalent • Rag or paper towel • Funnel (used only for adding engine oil)
Fuses (→P. 546)	• Fuse with same amperage rating as original
Light bulbs (→P. 550)	• Bulb with same number and wattage rating as original • Phillips-head screwdriver • Flathead screwdriver • Wrench
Radiator and condenser (→P. 506)	—
Tire inflation pressure (→P. 536)	• Tire pressure gauge • Compressed air source
Washer fluid (→P. 507)	• Water or washer fluid containing antifreeze (for winter use) • Funnel (used only for adding water or washer fluid)

WARNING

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions.

■ **When working on the engine compartment**

- Make sure that the “POWER ON” on the multi-information display and the “READY” indicator are both off.
- Keep hands, clothing and tools away from the moving fan and engine drive belt.
- Be careful not to touch the engine, power control unit, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel. Fuel fumes are flammable.
- Take care because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.
  If you still experience discomfort, consult a doctor.

■ **When working near the electric cooling fans or radiator grille**

Be sure the power switch is off. With the power switch in ON mode, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P. 506)

■ **Safety glasses**

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting in your eyes.

NOTICE

■ **If you remove the air cleaner filter**

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.

■ **If the fluid level is low or high**


It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.
If the reservoir needs frequent refilling, it may indicate a serious problem.

Hood


Release the lock from the inside of the vehicle to open the hood.

1 Pull the hood lock release lever.


The hood will pop up slightly.

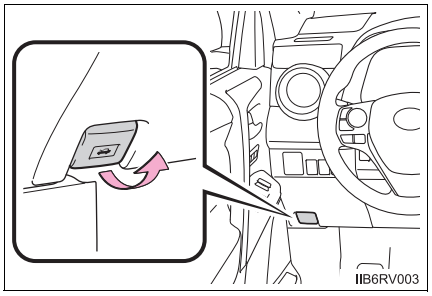

2 Push the auxiliary catch lever to the left and lift the hood.

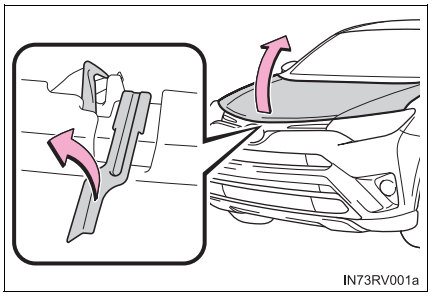

3 Hold the hood open by inserting the supporting rod into the slot.

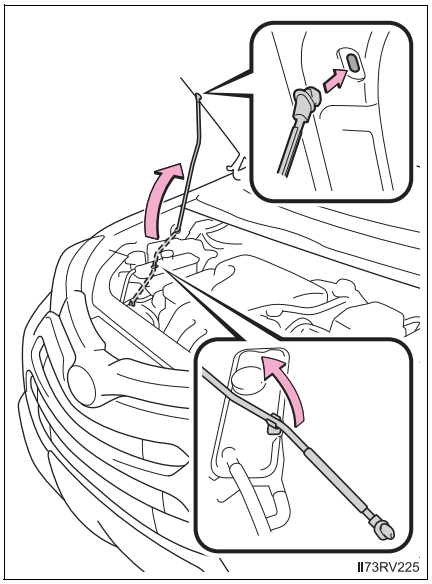

WARNING

Pre-driving check

Check that the hood is fully closed and locked.
If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

After installing the support rod into the slot

Make sure the rod supports the hood securely from falling down on to your head or body.

NOTICE

When closing the hood


Be sure to return the support rod to its clip before closing the hood. Closing the hood with the support rod up could cause the hood to bend.

Positioning a floor jack


When using a floor jack, follow the instructions in the manual provided with the jack and perform the operation safely.

When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.


◆ Front

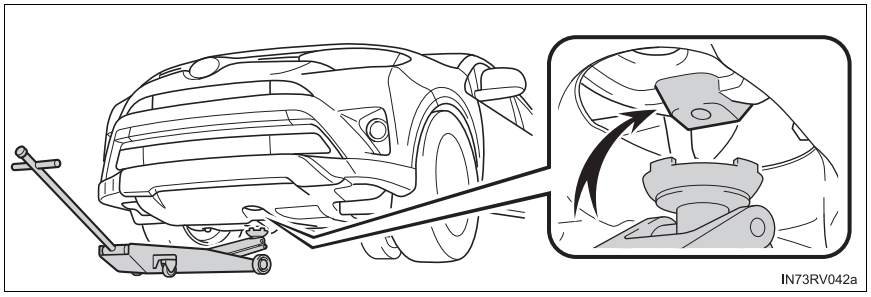

◆ Rear

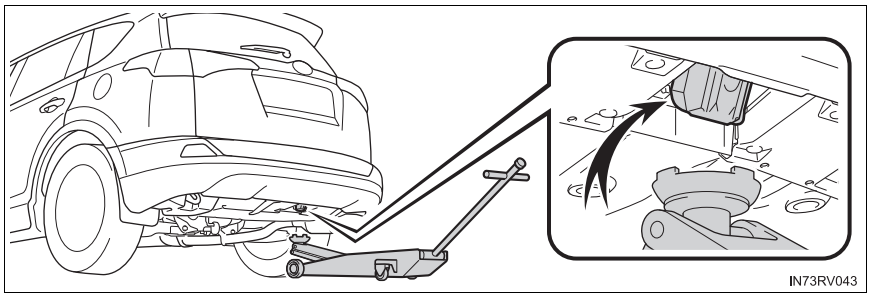

Engine compartment

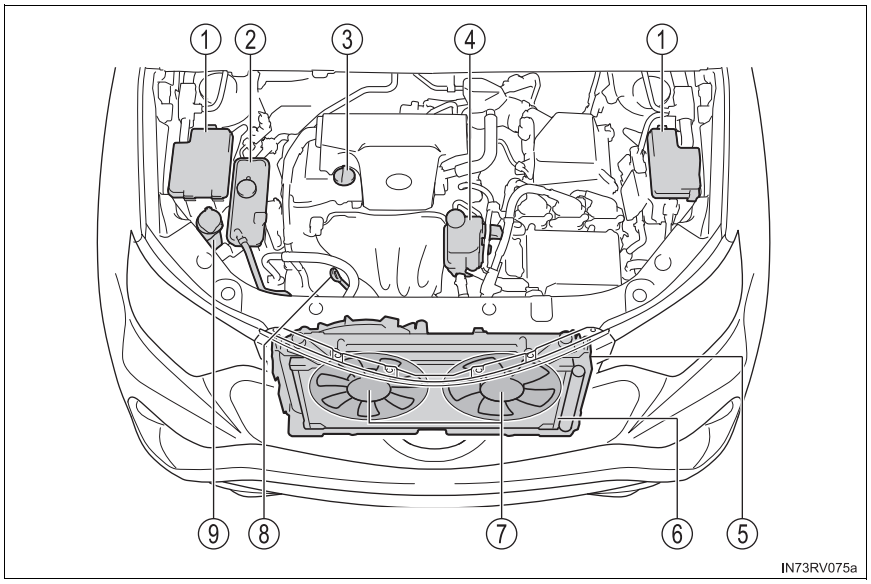

① Fuse boxes (→P. 546)
② Engine coolant reservoir (→P. 505)
③ Engine oil filler cap (→P. 503)
④ Power control unit coolant reservoir (→P. 505)
⑤ Radiator (→P. 506)
⑥ Condenser (→P. 506)
⑦ Electric cooling fans
⑧ Engine oil level dipstick (→P. 502)
⑨ Washer fluid tank (→P. 507)

■ **12-volt battery**
→P. 509


Engine oil

With the engine at operating temperature and turned off, check the oil level on the dipstick.

■ Checking the engine oil

1 Park the vehicle on level ground. After warming up the engine and turning it off, wait more than 5 minutes for the oil to drain back into the bottom of the engine.


2 Holding a rag under the end, pull the dipstick out.

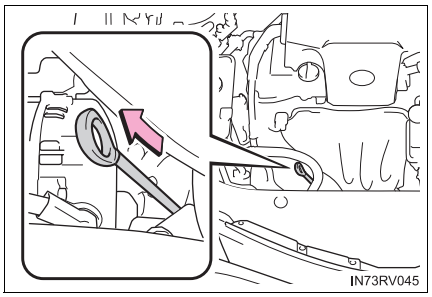

3 Wipe the dipstick clean.

4 Flat dipstick: Reinsert the dipstick fully.

Non-flat dipstick: Reinsert the non-flat dipstick fully with its protruding areas (① in the illustration) pointing towards the engine.

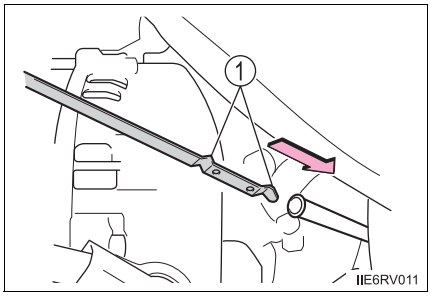


5 Holding a rag under the end, pull the dipstick out and check the oil level.

① Low


② Normal

③ Excessive

▶ Flat dipstick

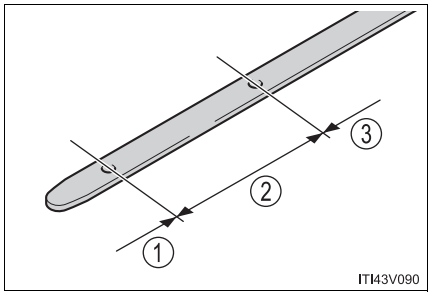

▶ Non-flat dipstick

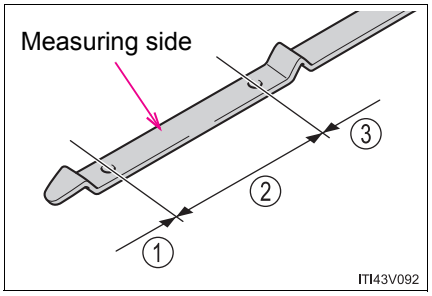


The shape of the dipstick may differ depending on the type of vehicle or engine.

6 Wipe the dipstick and reinsert it fully.

■ Adding engine oil

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

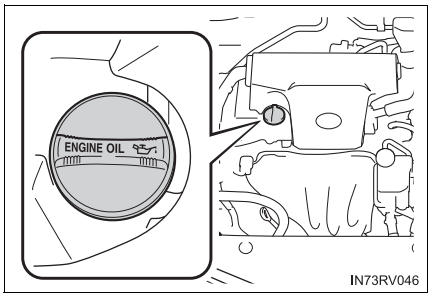

Make sure to check the oil type and prepare the items needed before adding oil.

Engine oil selection	→P. 648
Oil quantity (Low → Full)	1.5 L (1.6 qt., 1.3 Imp.qt.)
Items	Clean funnel

1 Remove the oil filler cap by turning it counterclockwise.

2 Add engine oil slowly, checking the dipstick.

3 Install the oil filler cap by turning it clockwise.

■ **Engine oil consumption**

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, when towing, or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic

WARNING

■ **Used engine oil**

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground.
  Call any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

NOTICE

■ **To prevent serious engine damage**

Check the oil level on a regular basis.

■ **When replacing the engine oil**

- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.

Coolant

The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir when the hybrid system is cold.


■ Engine coolant reservoir

① Reservoir cap

② “FULL” line

③ “LOW” line

If the level is on or below the “LOW” line, add coolant up to the “FULL” line. (→P. 635)

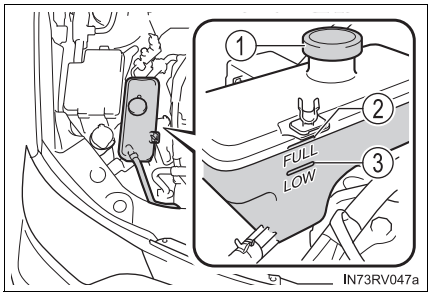


■ Power control unit coolant reservoir

① Reservoir cap

② “FULL” line

③ “LOW” line

If the level is on or below the “LOW” line, add coolant up to the “FULL” line. (→P. 635)

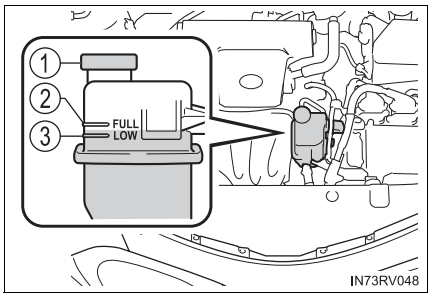

■ Coolant selection

Only use “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

“Toyota Super Long Life Coolant” is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -35°C [-31°F])

For more details about coolant, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ If the coolant level drops within a short time of replenishing

Visually check the radiator, hoses, engine/power control unit coolant reservoir cap, drain cock and water pump.
If you cannot find a leak, have any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, test the cap and check for leaks in the cooling system.

WARNING

When the hybrid system is hot

Do not remove the engine/power control unit coolant reservoir caps.
The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.

NOTICE

When adding coolant

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

If you spill coolant

Be sure to wash it off with water to prevent it from damaging parts or paint.

Radiator and condenser

Check the radiator, condenser and clear away any foreign objects.
If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

When the hybrid system is hot

Do not touch the radiator or condenser as they may be hot and cause serious injuries, such as burns.

When the electric cooling fans are operating


Do not touch the engine compartment.

With the power switch in ON mode, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high. Be sure the power switch is off when working near the electric cooling fans or radiator grille.

Washer fluid


▶ Without level gauge

If any washer does not work or the warning message appears on the multi-information display, the washer tank may be empty. Add washer fluid.

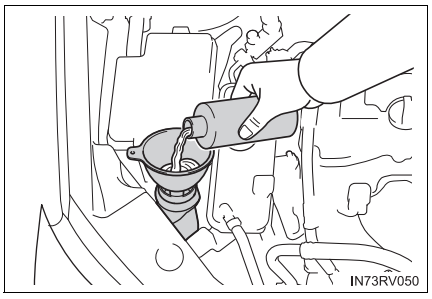


▶ With level gauge

If the washer fluid level is at “LOW”, add washer fluid.

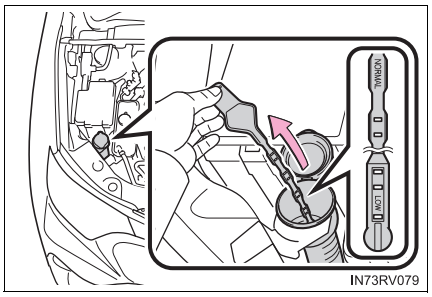

■ Using the gauge (if equipped)

The washer fluid level can be checked by observing the position of the level on the liquid-covered holes in the gauge.
If the level falls below the second hole from the bottom (the “LOW” position), refill the washer fluid.

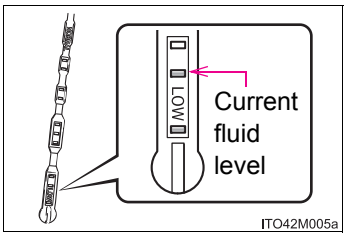

WARNING

When adding washer fluid

Do not add washer fluid when the hybrid system is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the engine etc.

NOTICE

Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid.
Doing so may cause streaking on the vehicle's painted surfaces, as well as damaging the pump leading to problems of the washer fluid not spraying.


Diluting washer fluid

Dilute washer fluid with water as necessary.
Refer to the freezing temperatures listed on the label of the washer fluid bottle.

12-volt battery


Location

The 12-volt battery is located in the left-hand side of luggage compartment.

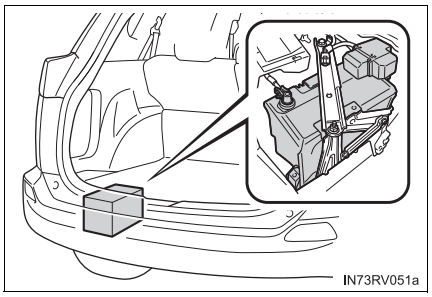


Removing the 12-volt battery cover

1 Vehicles with full-size spare tire: Turn the knob of each clip on the rear deck board to unlock.

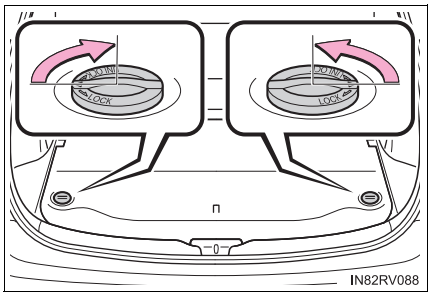


▶ When inspecting the battery terminals

2 Remove the rear deck board.

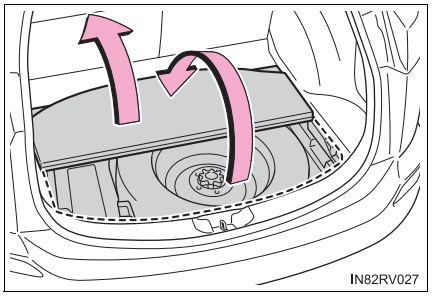


3 Remove the upper cover with a flathead screwdriver or equivalent tool.

To prevent damage to the cover, cover the tip of the screwdriver with a rag.

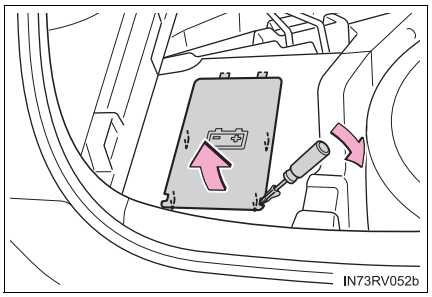


▶ When inspecting or replacing the 12-volt battery

2 Remove the rear deck board and left side deck cover.

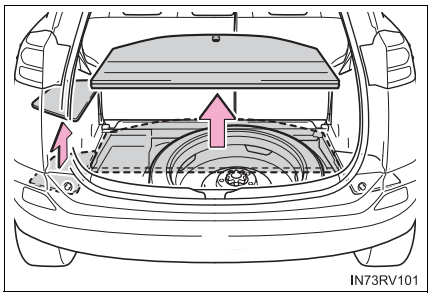

3 Remove the cover.

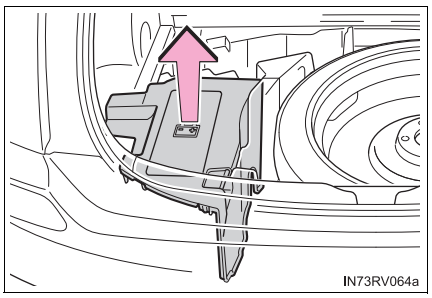


Exterior

Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

① Terminals

② Hold-down clamp

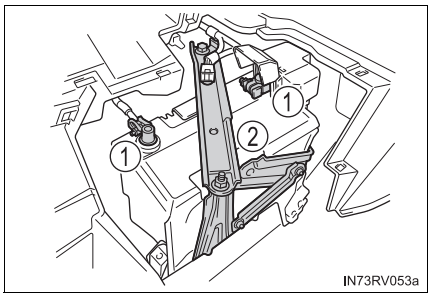

Caution symbols

The meanings of each caution symbol on the top of the 12-volt battery are as follows:

	No smoking, no naked flames, no sparks		Battery acid
	Shield eyes		Note operating instructions
	Keep away from children		Explosive gas

Before recharging

When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.

■ **After recharging/reconnecting the 12-volt battery**

The hybrid system may not start. Follow the procedure below to initialize the system.

1 Shift the shift lever to P.

2 Open and close any of the doors.

3 Restart the hybrid system.

- Unlocking the doors using the smart entry & start system may not be possible immediately after reconnecting the 12-volt battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.
- Start the hybrid system with the power switch in ACCESSORY mode. The hybrid system may not start with the power switch turned off. However, the hybrid system will operate normally from the second attempt.
- The power switch mode is recorded by the vehicle. If the 12-volt battery is reconnected, the vehicle will return the power switch mode to the status it was in before the 12-volt battery was disconnected. Make sure to turn off the power switch before disconnecting the 12-volt battery. Take extra care when connecting the 12-volt battery if the power switch mode prior to discharge is unknown.

If the hybrid system will not start even after multiple attempts, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

⚠ WARNING

■ **Chemicals in the 12-volt battery**

The 12-volt battery contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:

- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the 12-volt battery.
- Keep children away from the 12-volt battery.

■ **Where to safely charge the 12-volt battery**

Always charge the 12-volt battery in an open area. Do not charge the 12-volt battery in a garage or closed room where there is not sufficient ventilation.

■ **How to recharge the 12-volt battery**

Only perform a slow charge (5 A or less). The 12-volt battery may explode if charged at a quicker rate.

WARNING

■ **Emergency measures regarding electrolyte**


- If electrolyte gets in your eyes
  Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin
  Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes
  It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte
  Drink a large quantity of water or milk. Get emergency medical attention immediately.

■ **When replacing the 12-volt battery**

Use a 12-volt battery designed for this vehicle. Failure to do so may cause gas (hydrogen) to enter the passenger compartment, causing a fire or explosion.
For replacement of the 12-volt battery, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **When disconnecting the 12-volt battery**

Do not disconnect the negative (-) terminal on the body side. The disconnected negative (-) terminal may touch the positive (+) terminal, which may cause a short and result in death or serious injury.

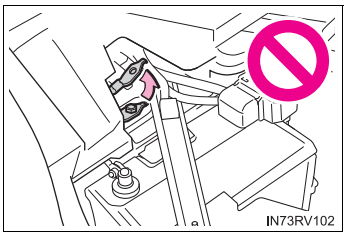

NOTICE

■ **When recharging the 12-volt battery**


Never recharge the 12-volt battery while the hybrid system is operating. Also, be sure all accessories are turned off.

Tires

Replace or rotate tires in accordance with maintenance schedules and treadwear.

Checking tires

Check if the treadwear indicators are showing on the tires. Also check the tires for uneven wear, such as excessive wear on one side of the tread. Check the spare tire condition and pressure if not rotated.

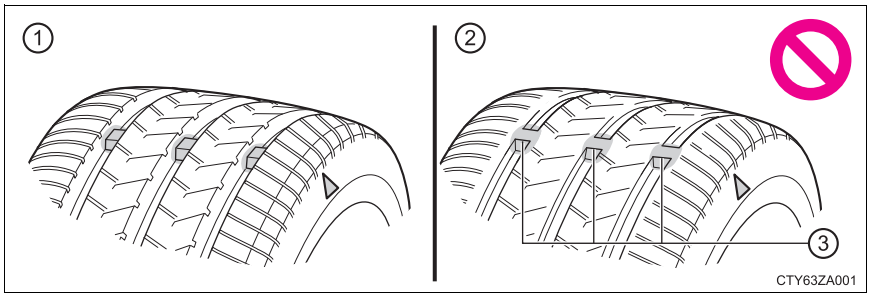

① New tread

② Worn tread

③ Treadwear indicator


The location of treadwear indicators is shown by a “TWI” or “Δ” marks, etc., molded into the sidewall of each tire.

Replace the tires if the treadwear indicators are showing on a tire.


Tire rotation

Rotate the tires in the order shown.

- Vehicles without full-size spare tire

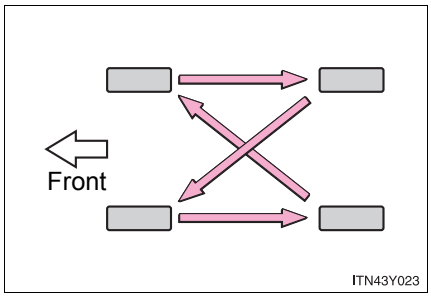

- Vehicles with full-size spare tire

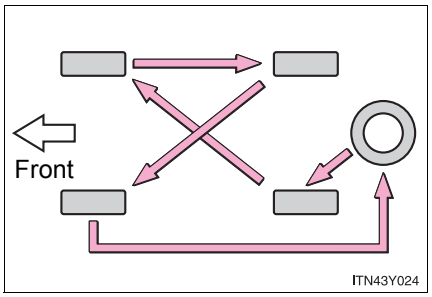

2WD models:
To equalize tire wear and help extend tire life, Toyota recommends that tire rotation is carried out approximately every 10000 km (6000 miles).
Do not fail to initialize the tire pressure warning system after tire rotation. (if equipped)

AWD models:
To equalize tire wear and help extend tire life, Toyota recommends that tire rotation is carried out approximately every 5000 km (3000 miles).
Do not fail to initialize the tire pressure warning system after tire rotation. (if equipped)

Tire pressure warning system (if equipped)

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

If the tire pressure drops below a predetermined level, the driver is warned by a warning light. (→P. 573)

◆ Installing tire pressure warning valves and transmitters

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer and the tire pressure warning system must be initialized. Have tire pressure warning valve and transmitter ID codes registered by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (→P. 517)

◆ Initializing the tire pressure warning system

When the tire size is changed, the tire pressure warning system must be initialized.

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the benchmark pressure.

■ How to initialize the tire pressure warning system

1 Park the vehicle in a safe place and turn the power switch off.


Initialization cannot be performed while the vehicle is moving.

2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P. 653)

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

3 Turn the power switch to ON mode.

4 Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

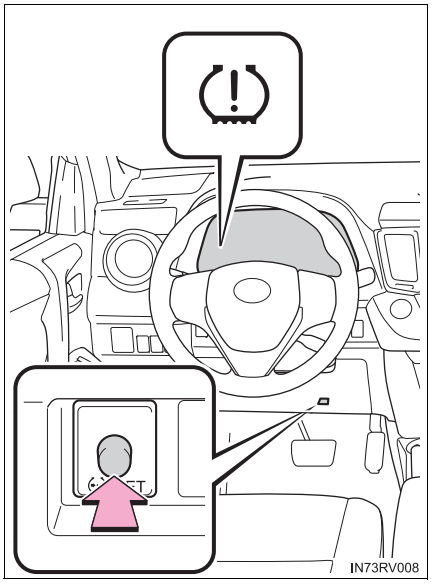

5 Wait for a few minutes with the power switch in ON mode and then turn the power switch off.

◆ Registering ID codes

The tire pressure warning valve and transmitter is equipped with a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code. Have the ID code registered by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ When to replace your vehicle's tires

Tires should be replaced if:

- The treadwear indicators are showing on a tire.
- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ Replacing tires and wheels (vehicles with the tire pressure warning system)

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 10 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.

■ Tire life

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

■ Routine tire inflation pressure checks (vehicles with the tire pressure warning system)

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

■ If the tread on snow tires wears down below 4 mm (0.16 in.)

The effectiveness of the tires as snow tires is lost.

■ **Situations in which the tire pressure warning system may not operate properly (if equipped)**

● In the following cases, the tire pressure warning system may not operate properly.

- If non-genuine Toyota wheels are used.
- A tire has been replaced with a tire that is not an OE (Original Equipment) tire.
- A tire has been replaced with a tire that is not of the specified size.
- Tire chains etc. are equipped.
- Lock nuts are equipped.
- An auxiliary-supported run-flat tire is equipped.
- If a window tint that affects the radio wave signals is installed.
- If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings.
- If the tire inflation pressure is extremely higher than the specified level.
- If the spare tire is in a location subject to poor radio wave signal reception.*
- If a large metallic object which can interfere with signal reception is put in the luggage compartment.*

*: Vehicles with full-size spare tire only

● Performance may be affected in the following situations.

- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device

● When the vehicle is parked, the time taken for the warning to start or go off could be extended.

● When tire inflation pressure declines rapidly for example when a tire has burst, the warning may not function.

■ **The initialization operation (vehicles with the tire pressure warning system)**

- Make sure to carry out initialization after adjusting the tire inflation pressure. Also, make sure the tires are cold before carrying out initialization or tire inflation pressure adjustment.
- If you have accidentally turned the power switch off during initialization, it is not necessary to press the reset switch again as initialization will restart automatically when the power switch has been turned to ON mode for the next time.
- If you accidentally press the reset switch when initialization is not necessary, adjust the tire inflation pressure to the specified level when the tires are cold, and conduct initialization again.

■ **When initialization of the tire pressure warning system has failed (if equipped)**

Initialization can be completed in a few minutes. However, in the following cases, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When operating the tire pressure warning reset switch, the tire pressure warning light does not blink 3 times.
- After driving for a certain period of time since the initialization has been completed, the warning light comes on after blinking for 1 minute.

■ **Registering ID codes (vehicles with the tire pressure warning system)**

The ID codes of the tire pressure warning valve and transmitters for two sets of wheels can be registered.
It is not necessary to register the ID codes when replacing normal tires with snow tires, if the ID codes for the wheels of both normal tires and snow tires are registered beforehand.
For information about changing ID codes, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Warning performance of the tire pressure warning system (if equipped)**

The warning of the tire pressure warning system will change in accordance with the conditions under which it was initialized. For this reason, the system may give a warning even if the tire pressure does not reach a low enough level, or if the pressure is higher than the pressure that was adjusted to when the system was initialized.

■ **Certification for tire pressure warning system**

Receiver: Model: 23AAF

Manufacturer: DENSO CORPORATION

Address: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan

Hereby, DENSO CORPORATION declares that the radio equipment type 23AAF is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.denso.co.jp/en/contactus/form/doc/index.html 01
DENSO CORPORATION vakuuttaa, että radiolaitetyyppi 23AAF on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.denso.co.jp/en/contactus/form/doc/index.html 02
Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur 23AAF conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.denso.co.jp/en/contactus/form/doc/index.html 03
Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type 23AAF est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: https://www.denso.co.jp/en/contactus/form/doc/index.html 04

Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning 23AAF överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://www.denso.co.jp/en/contactus/form/doc/index.html 05
Hermed erklærer DENSO CORPORATION, at radioudstyrstypen 23AAF er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www.denso.co.jp/en/contactus/form/doc/index.html 06
Hiermit erklärt DENSO CORPORATION, dass der Funkanlagentyp 23AAF der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.denso.co.jp/en/contactus/form/doc/index.html 07
Με την παρούσα ο/η DENSO CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός 23AAF πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: https://www.denso.co.jp/en/contactus/form/doc/index.html 08
Il fabbricante, DENSO CORPORATION, dichiara che il tipo di apparecchiatura radio 23AAF è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://www.denso.co.jp/en/contactus/form/doc/index.html 09

Por la presente, DENSO CORPORATION declara que el tipo de equipo radioeléctrico 23AAF es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.denso.co.jp/en/contactus/form/doc/index.html 10
O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio 23AAF está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: https://www.denso.co.jp/en/contactus/form/doc/index.html 11
B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju 23AAF huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: https://www.denso.co.jp/en/contactus/form/doc/index.html 12
Käesolevaga deklareerib DENSO CORPORATION, et käesolev raadioseadme tüüp 23AAF vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://www.denso.co.jp/en/contactus/form/doc/index.html 13
DENSO CORPORATION igazolja, hogy a 23AAF típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: https://www.denso.co.jp/en/contactus/form/doc/index.html 14

DENSO CORPORATION týmto vyhlasuje, že rádiové zariadenie typu 23AAF je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: https://www.denso.co.jp/en/contactus/form/doc/index.html 15
Tímto DENSO CORPORATION prohlašuje, že typ rádiového zařízení 23AAF je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: https://www.denso.co.jp/en/contactus/form/doc/index.html 16
DENSO CORPORATION potrjuje, da je tip radijske opreme 23AAF skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: https://www.denso.co.jp/en/contactus/form/doc/index.html 17
Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas 23AAF atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.denso.co.jp/en/contactus/form/doc/index.html 18
Ar šo DENSO CORPORATION deklarē, ka radioiekārta 23AAF atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.co.jp/en/contactus/form/doc/index.html 19
DENSO CORPORATION niniejszym oświadcza, że typ urządzenia radiowego 23AAF jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.co.jp/en/contactus/form/doc/index.html 20

Hér með lýsir DENSO CORPORATION yfir því að 23AAF er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.co.jp/en/contactus/form/doc/index.html 21
DENSO CORPORATION erklærer at 23AAF er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.co.jp/en/contactus/form/doc/index.html 22
С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение 23AAF е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.co.jp/en/contactus/form/doc/index.html 23
Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio 23AAF este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: https://www.denso.co.jp/en/contactus/form/doc/index.html 24
DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa 23AAF u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: https://www.denso.co.jp/en/contactus/form/doc/index.html 25

Ovim, DENSO CORPORATION, izjavljuje da ovaj 23AAF je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC. 26
Ovim, DENSO CORPORATION, deklariše da je 23AAF u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 1999/5/EC. 27
Nepermjet kesaj, DENSO CORPORATION, deklaroj qe ky 23AAF eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC. 28

CE The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:
https://www.denso.co.jp/en/contactus/form/doc/index.html

・Manufacturer's mame: PACIFIC INDUSTRIAL CO.,LTD.

・Registered trademark: PACIFIC

This trademark is registered in the following countries:
UK, Italy, Austria, Greece, Germany, France, Belgium,
the Netherlands, Luxembourg, Portugal.

・Manufacturer's address:
1300-1 Yokoi, Godo-cho, Anpachi-gun, Gifu, 503-2397 JAPAN

・Operating frequency band: 433.05 — 434.79MHz

・Maximum radio-frequency power: 100dBμV/m

Hereby, PACIFIC INDUSTRIAL CO.,LTD. declares that the radio equipment type PMV-C210 is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO.,LTD. vakuuttaa, että radiolaitetyyppi PMV-C210 on direktiivin 2014/53/EU mukainen.
EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hierbij verklaar ik, PACIFIC INDUSTRIAL CO.,LTD., dat het type radioapparatuur PMV-C210 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Le soussigné, PACIFIC INDUSTRIAL CO.,LTD., déclare que l'équipement radioélectrique du type PMV-C210 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Härmed försäkrar PACIFIC INDUSTRIAL CO.,LTD. att denna typ av radioutrustning PMV-C210 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Hermed erklærer PACIFIC INDUSTRIAL CO.,LTD., at radioudstyrstypen PMV-C210 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hiermit erklärt PACIFIC INDUSTRIAL CO.,LTD. , dass der Funkanlagentyp PMV-C210 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Με την παρούσα ο/η PACIFIC INDUSTRIAL CO.,LTD., δηλώνει ότι ο ραδιοεξοπλισμός PMV-C210 πληροί την οδηγία 2014/53/ΕΕ.Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Il fabbricante, PACIFIC INDUSTRIAL CO.,LTD. , dichiara che il tipo di apparecchiatura radio PMV-C210 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Por la presente, PACIFIC INDUSTRIAL CO.,LTD.declara que el tipo de equipo radioeléctrico PMV-C210 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

O(a) abaixo assinado(a) PACIFIC INDUSTRIAL CO.,LTD. declara que o presente tipo de equipamento de rádio PMV-C210 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponí vel no seguinte endereço de Internet: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
B'dan, PACIFIC INDUSTRIAL CO.,LTD., niddikjara li dan it-tip ta' tagħmir tar-radju PMV-C210 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Käesolevaga deklareerib PACIFIC INDUSTRIAL CO.,LTD., et käesolev raadioseadme tüüp PMV-C210 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav jä rgmisel internetiaadressil: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
PACIFIC INDUSTRIAL CO.,LTD. igazolja, hogy a PMV-C210 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a kö vetkező internetes címen: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO.,LTD. týmto vyhlasuje, že rádiové zariadenie typu PMV-C210 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Tímto PACIFIC INDUSTRIAL CO.,LTD. prohlašuje, že typ rádiového zařízení PMV-C210 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
PACIFIC INDUSTRIAL CO.,LTD. potrjuje, da je tip radijske opreme PMV-C210 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Aš, PACIFIC INDUSTRIAL CO.,LTD. , patvirtinu, kad radijo įrenginių tipas PMV-C210 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Ar šoPACIFIC INDUSTRIAL CO.,LTD. deklarē, ka radioiekārta PMV-C210 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
PACIFIC INDUSTRIAL CO.,LTD. niniejszym oświadcza, że typ urządzenia radiowego PMV-C210 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Hér með lýsir PACIFIC INDUSTRIAL CO.,LTD. yfir því að PMV-C210 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
PACIFIC INDUSTRIAL CO.,LTD. erklærer at PMV-C210 er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

С настоящото PACIFIC INDUSTRIAL CO.,LTD. декларира, че този тип радиосъоръжение PMV-C210 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Prin prezenta, PACIFIC INDUSTRIAL CO.,LTD. declară că tipul de echipamente radio PMV-C210 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Ovim, PACIFIC INDUSTRIAL CO.,LTD. , izjavljuje da ovaj PMV-C210 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC. http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Ovim, PACIFIC INDUSTRIAL CO.,LTD., deklariše da je PMV-C210 u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 1999/5/EC. http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO.,LTD. ovime izjavljuje da je radijska oprema tipa PMV-C210 u skladu s Direktivom 2014/53/EU.
Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedeć oj internetskoj adresi:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Nepermjet kesaj, PACIFIC INDUSTRIAL CO.,LTD. , deklaroj qe ky PMV-C210 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.

http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/



WARNING

■ **When inspecting or replacing tires**

Observe the following precautions to prevent accidents.
Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes, models or tread patterns.
  Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Toyota.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.
  Do not use tires if you do not know how they were used previously.
- Vehicles with compact spare tire: Do not tow if your vehicle has a compact spare tire installed.
- Vehicles with emergency tire puncture repair kit: Do not tow anything if a tire that has been repaired using the emergency tire puncture repair kit is installed. The load on the tire may cause unexpected damage to the tire.

■ **When initializing the tire pressure warning system (if equipped)**

Do not operate the tire pressure warning reset switch without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

NOTICE

■ **Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps (vehicles with the tire pressure warning system)**

- When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as the tire pressure warning valves and transmitters may be damaged if not handled correctly.
- Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves and the tire pressure warning valves could be bound.
- When replacing tire valve caps, do not use tire valve caps other than those specified. The cap may become stuck.

■ **To avoid damage to the tire pressure warning valves and transmitters (vehicles with the tire pressure warning system)**

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when repairing or replacing the tire. (→P. 515)

■ **Driving on rough roads**

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

■ **If tire inflation pressure of each tire becomes low while driving**

Do not continue driving, or your tires and/or wheels may be ruined.


Tire inflation pressure

Make sure to maintain the proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Toyota recommends that tire inflation pressure be checked once every two weeks. (→P. 653)


Tire-loading information label

Tire inflation pressure is specified on the label on the driver's side pillar as shown.

▶ Left-hand drive vehicles

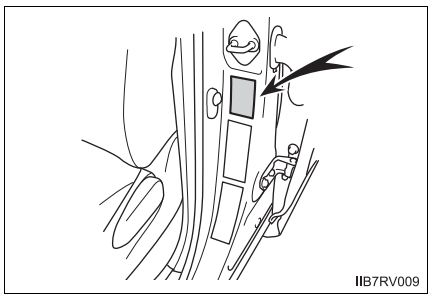

▶ Right-hand drive vehicles

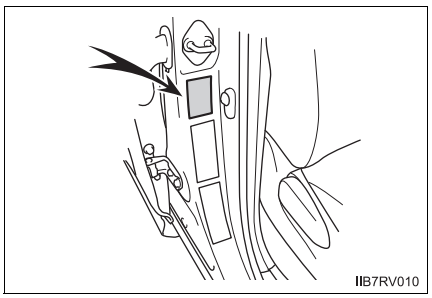

■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel economy
- Reduced driving comfort and poor handling
- Reduced tire due to wear
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Instructions for checking tire inflation pressure**

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold.
  If your vehicle has been parked for at least 3 hours or has not been driven for more than 1.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge.
  It is difficult to judge if a tire is properly inflated based only on its appearance.
- It is normal for the tire inflation pressure to be higher after driving as heat is generated in the tire. Do not reduce tire inflation pressure after driving.
- Passengers and luggage weight should be placed so that the vehicle is balanced.

WARNING

■ **Proper inflation is critical to save tire performance**

Keep your tires properly inflated.

If the tires are not properly inflated, the following conditions may occur which could lead to an accident resulting in death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Air leaking from between tire and wheel
- Wheel deformation and/or tire damage
- Greater possibility of tire damage while driving (due to road hazards, expansion joints, sharp edges in the road, etc.)

NOTICE

■ **When inspecting and adjusting tire inflation pressure**

Be sure to put the tire valve caps back on.
If a valve cap is not installed, dirt or moisture may get into the valve and cause an air leak, resulting in decreased tire inflation pressure.

Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset*.

Replacement wheels are available at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*: Conventionally referred to as “offset”.

Toyota does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

Aluminum wheel precautions

- Use only Toyota wheel nuts and wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Toyota genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

■ **When replacing wheels (vehicles with the tire pressure warning system)**

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, tire pressure warning valves and transmitters must be installed. (→P. 515)


⚠ WARNING

■ **When replacing wheels**

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

■ **When installing the wheel nuts**

- Be sure to install the wheel nuts with the tapered ends facing inward. Installing the nuts with the tapered ends facing outward can cause the wheel to break and eventually cause the wheel to come off while driving, which could lead to an accident resulting in death or serious injury.

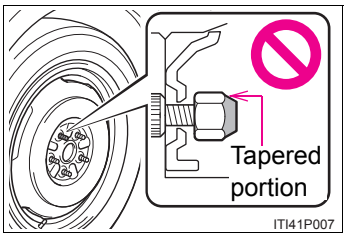

- Never use oil or grease on the wheel bolts or wheel nuts.
  Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing an accident and resulting in death or serious injury. Remove any oil or grease from the wheel bolts or wheel nuts.

■ **Use of defective wheels prohibited**

Do not use cracked or deformed wheels.
Doing so could cause the tire to leak air during driving, possibly causing an accident.

NOTICE

■ **Replacing tire pressure warning valves and transmitters (vehicles with the tire pressure warning system)**

- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Ensure that only genuine Toyota wheels are used on your vehicle.
  Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.


Air conditioning filter

The air conditioning filter must be changed regularly to maintain air conditioning efficiency.


Removal method

1 Turn the power switch off.

2 Open the glove box. Slide off the damper.

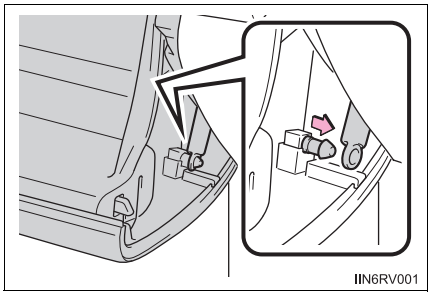


3 Push in each side of the glove box to disconnect the claws.

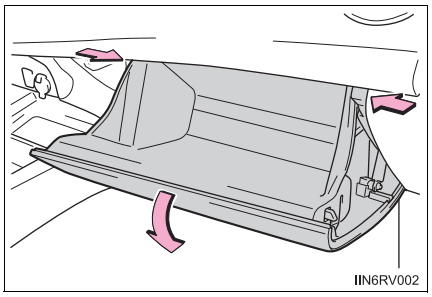


4 Remove the filter cover.

▶ Left-hand drive vehicles

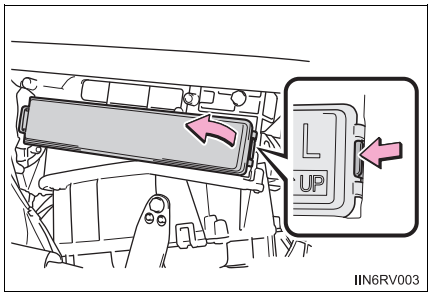


▶ Right-hand drive vehicles

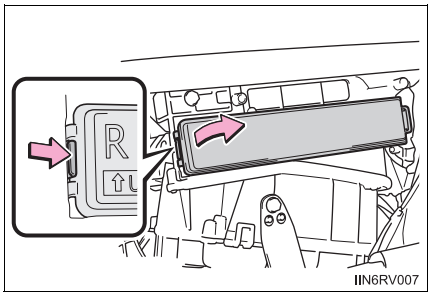

5 Remove the air conditioning filter and replace it with a new one.

The "↑UP" marks shown on the filter should be pointing up.

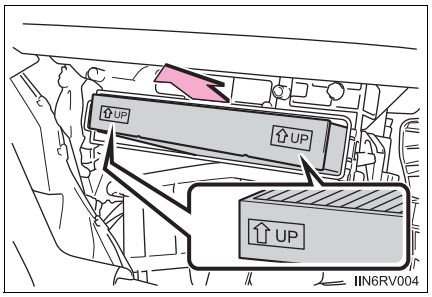

■ **Changing interval**

Inspect and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the "Toyota Service Booklet" or "Toyota Warranty Booklet".)

■ **If air flow from the vents decreases dramatically**

The filter may be clogged. Check the filter and replace if necessary.

NOTICE

■ **When using the air conditioning system**

Make sure that a filter is always installed.
Using the air conditioning system without a filter may cause damage to the system.

Electronic key battery


Replace the battery with a new one if it is depleted.

You will need the following items:

- Flathead screwdriver
- Small flathead screwdriver
- Lithium battery CR2032


Replacing the battery

1 Take out the mechanical key.

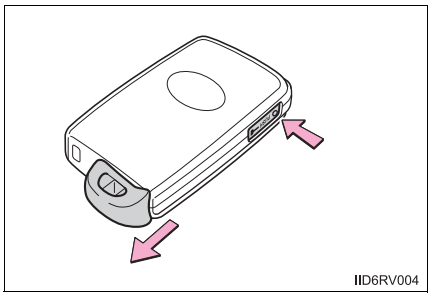


2 Remove the cover.

To prevent damage to the key, cover the tip of the screwdriver with a rag.

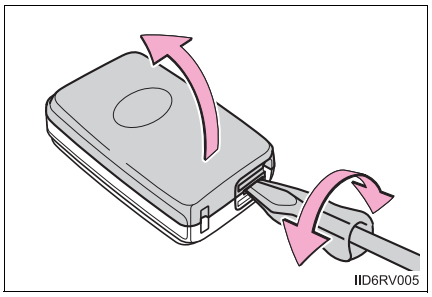


3 Remove the battery cover.

To prevent damage to the key, cover the tip of the screwdriver with a rag.

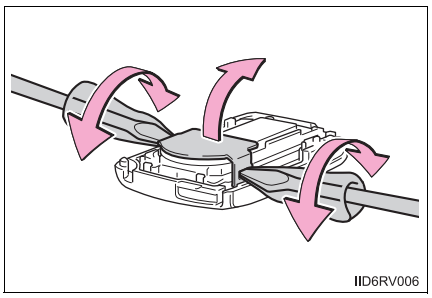

4 Remove the depleted battery.

Insert a new battery with the “+” terminal facing up.

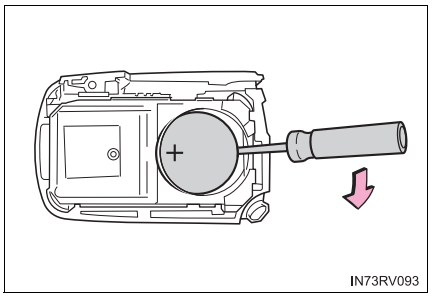

■ **Use a CR2032 lithium battery**

- Batteries can be purchased at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, local electrical appliance shops or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the local laws.

■ **If the key battery is depleted**

The following symptoms may occur:

- The smart entry & start system and wireless remote control will not function properly.
- The operational range will be reduced.

⚠ WARNING

■ **Removed battery and other parts**

These parts are small and if swallowed by a child, they can cause choking. Keep away from children. Failure to do so could result in death or serious injury.

■ **Certification for the electronic key battery**

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

NOTICE

■ For normal operation after replacing the battery

Observe the following precautions to prevent accidents:

- Always work with dry hands.
  Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.


Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.

1 Turn the power switch off.


2 Open the fuse box cover or instrument panel.

▶ Engine compartment type A

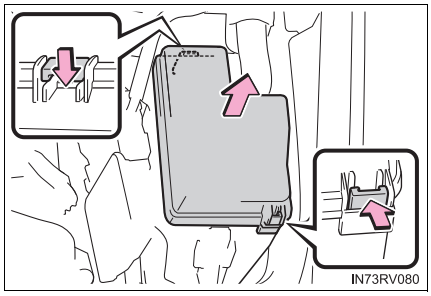

Push the tabs in and lift the cover off.


▶ Engine compartment type B

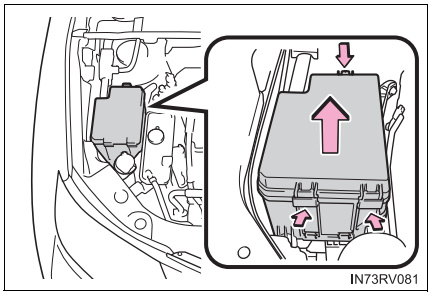

Push the tabs in and lift the cover off.


▶ Under the instrument panel (left-hand drive vehicles)

Remove the cover.

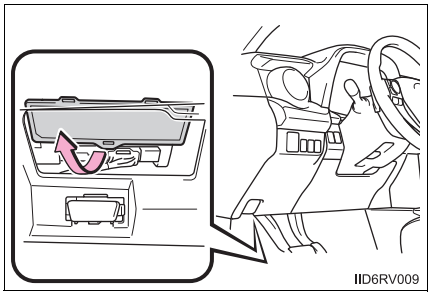


▶ Under the instrument panel (right-hand drive vehicles)

Remove the instrument panel under cover.

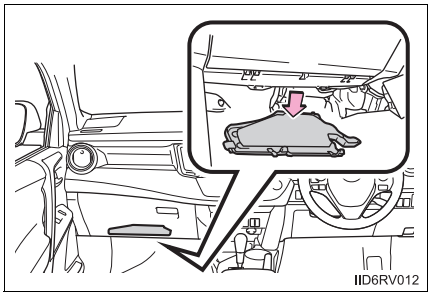


Remove the cover.

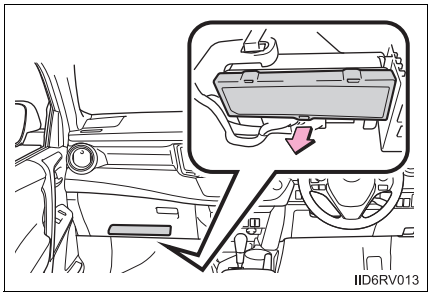


▶ Behind the instrument panel (left-hand drive vehicles)

Remove the instrument panel.

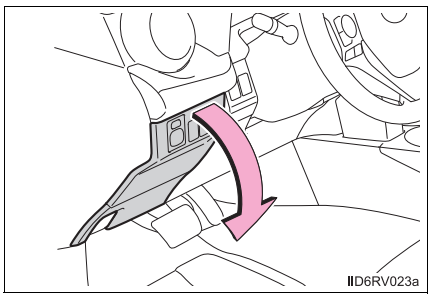


▶ Behind the instrument panel (right-hand drive vehicles)

Remove the glove box. (→P. 541)

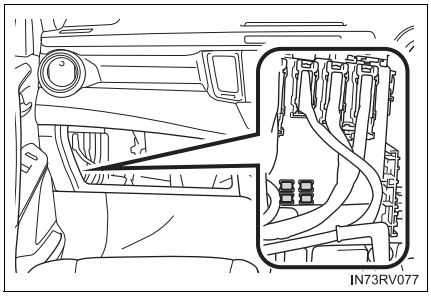

3 Remove the fuse with the pull-out tool.

Only type A fuse can be removed using the pullout tool.

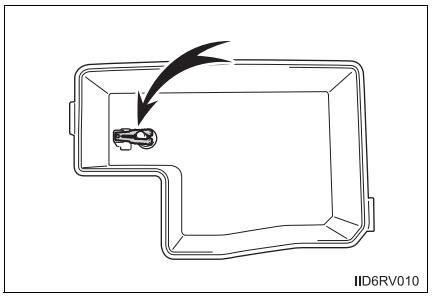

4 Check if the fuse is blown.


① Normal fuse

② Blown fuse


Type A and B:
Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

Type C and D:
Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


▶ Type A

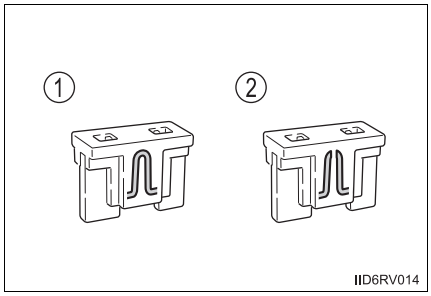


▶ Type B

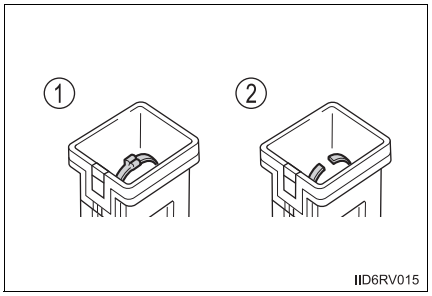

▶ Type C

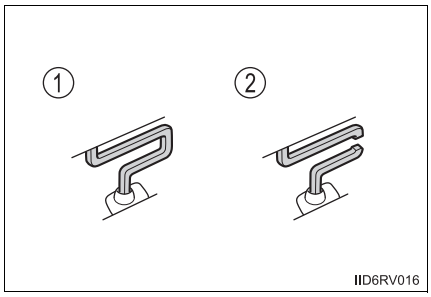

▶ Type D

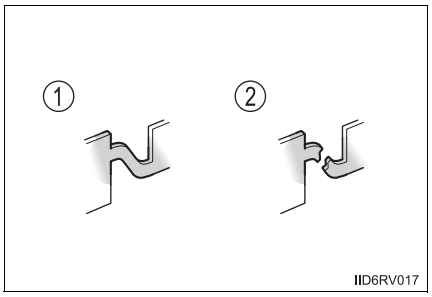

■ **After a fuse is replaced**

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 550)
- If the replaced fuse blows again, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **If there is an overload in a circuit**

The fuses are designed to blow, protecting the wiring harness from damage.

■ **When replacing light bulbs**

Toyota recommends that you use genuine Toyota products designed for this vehicle. Because certain bulbs are connected to circuits designed to prevent overload, non-genuine parts or parts not designed for this vehicle may be unusable.

WARNING

■ **To prevent system breakdowns and vehicle fire**

Observe the following precautions.
Failure to do so may cause damage to the vehicle, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- Always use a genuine Toyota fuse or equivalent.
  Never replace a fuse with a wire, even as a temporary fix.
- Do not modify the fuses or fuse boxes.

■ **Fuse box near the power control unit**

Never check or replace the fuses as there are high voltage parts and wiring near the fuse box.
Doing so may cause electric shock, resulting in death or serious injury.

NOTICE

■ **Before replacing fuses**

Have the cause of electrical overload determined and repaired by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

Light bulbs


You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. As there is a danger that components may be damaged, we recommend that replacement is carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Preparing for light bulb replacement

Check the wattage of the light bulb to be replaced. (→P. 654)


Bulb locations

■ Front

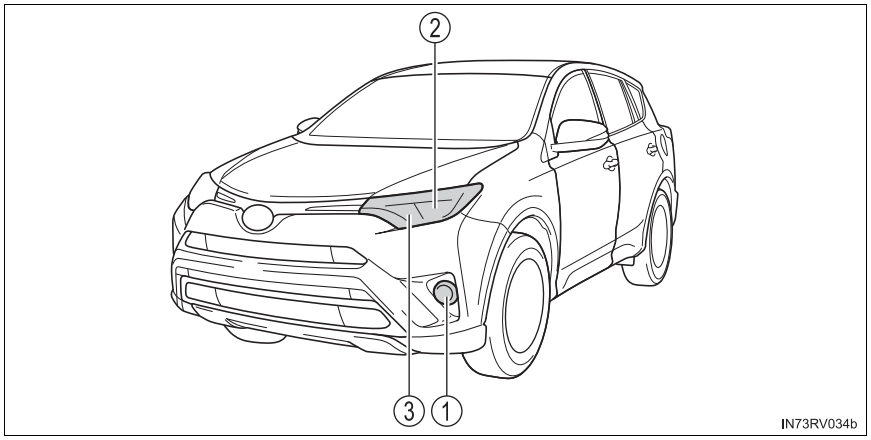

① Front fog lights (if equipped)
② Headlight (halogen headlights)
③ Front turn signal lights

■ **Rear**

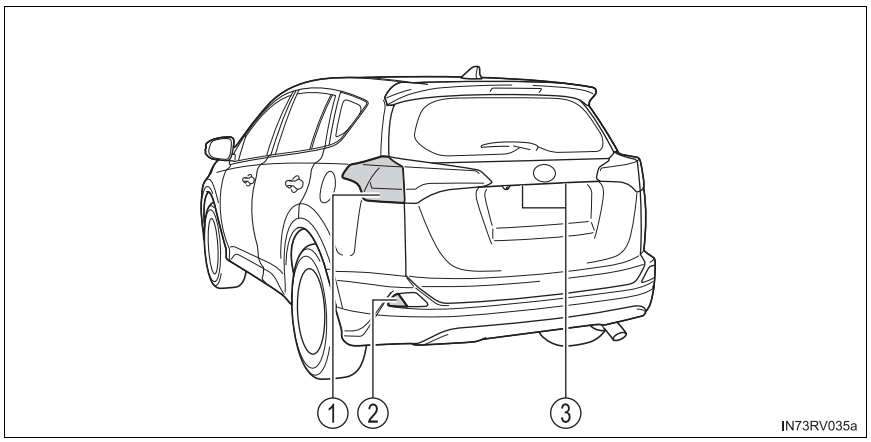


① Rear turn signal light
② Back-up light
③ License plate lights


Replacing light bulbs

■ **Headlights (halogen headlights)**

1 Turn the bulb base counter-clockwise.

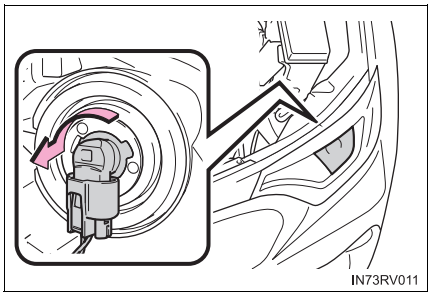


2 Unplug the connector while pressing the lock release.

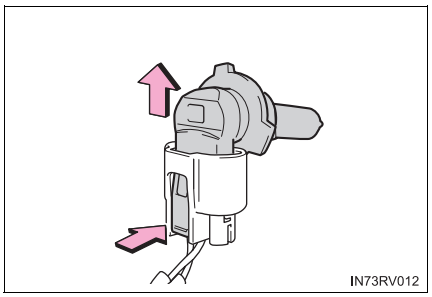


3 Replace the light bulb.

Align the 3 tabs on the light bulb with the mounting, and insert.

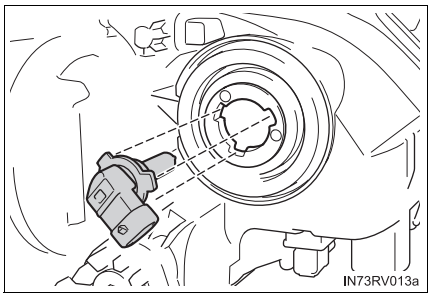


4 Turn and secure the bulb base.

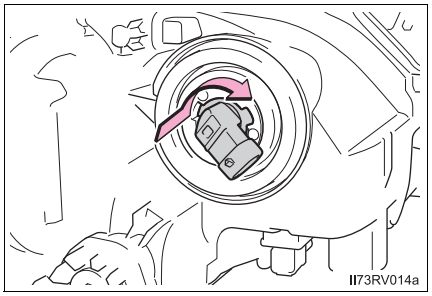


5 Install the bulb base.

Shake the bulb base gently to check that it is not loose, turn the headlights on once and visually confirm that no light is leaking through the mounting.

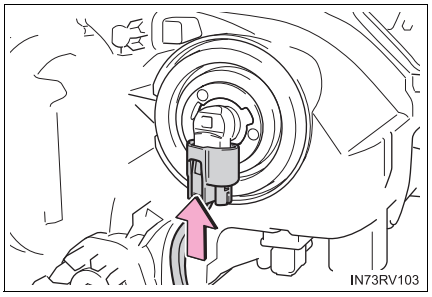


■ **Front turn signal lights**

1 Turn the bulb base counter-clockwise.

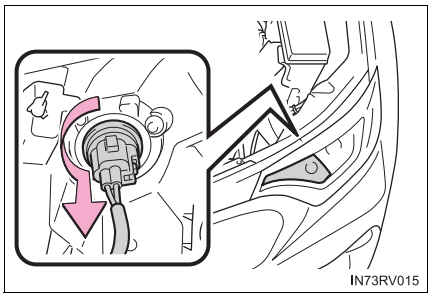


2 Remove the light bulb.

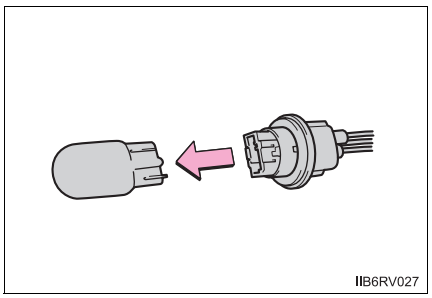


3 When installing, reverse the steps listed.

■ **Front fog lights (if equipped)**


1 To allow enough working space, turn the steering wheel to the opposite side of the bulb to be replaced.

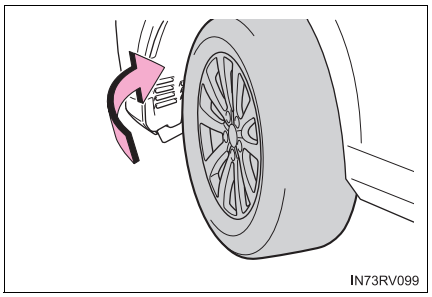


2 Remove the screws from the fender liner.

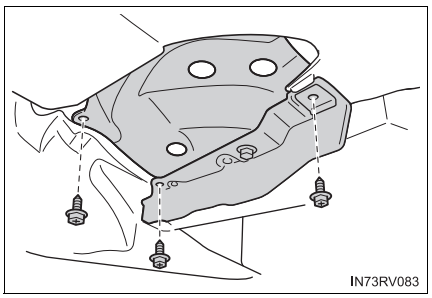


3 Remove the fender liner clip and open the fender liner.

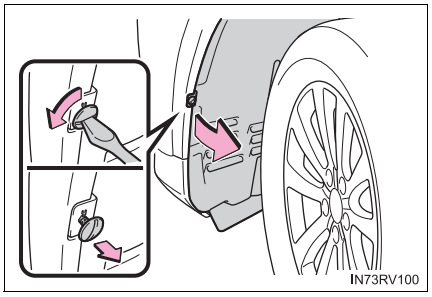

4 Unplug the connector while pressing the lock release.

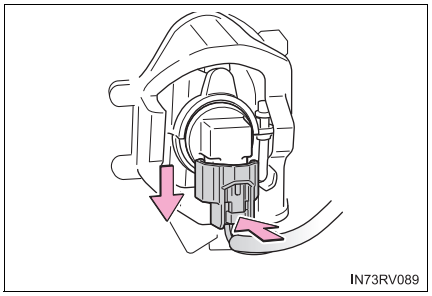


5 Turn the bulb base counter-clockwise.

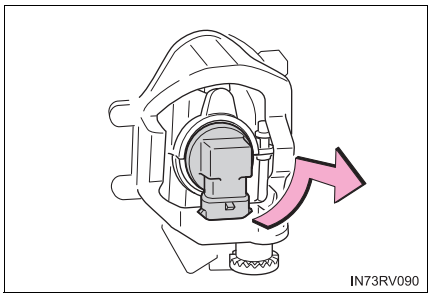


6 Set the new light bulb.

Align the 3 tabs on the light bulb with the mounting, and insert. Turn it clockwise to set.

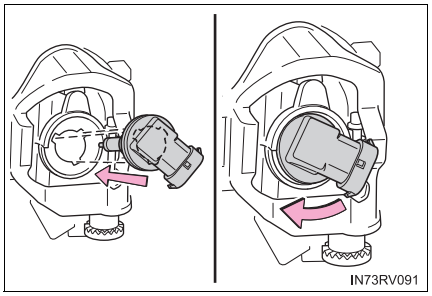


7 Set the connector.

After installing the connector, shake the bulb base gently to check that it is not loose, turn the fog lights on once and visually confirm that no light is leaking through the mounting.

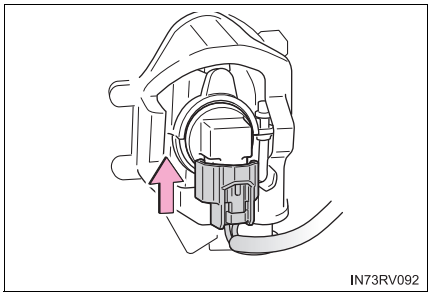


8 Reinstall the fender liner and install the clip.

Insert the clip and turn to lock.

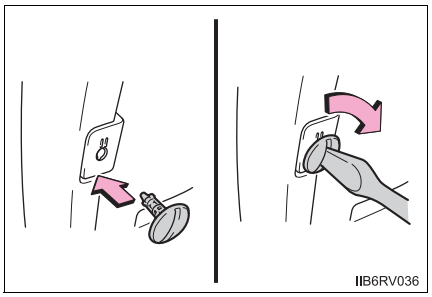


9 Reinstall the fender liner and install the screws.

Make sure that the fender liner is attached to the inside of the bumper.

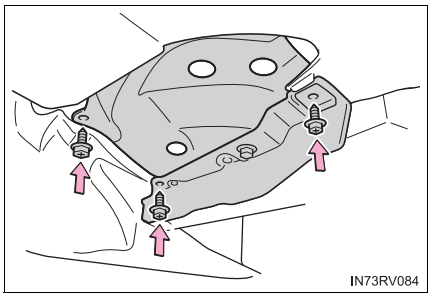


■ Rear turn signal lights


1 Open the back door and remove the bolts, and remove the lamp assembly by pulling it directly backward from the rear of the vehicle.

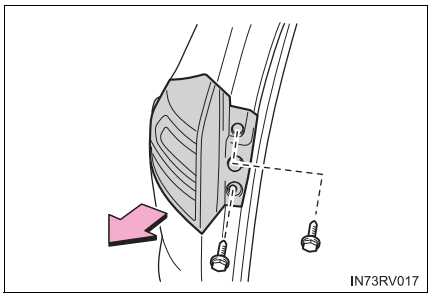

2 Turn the bulb base counter-clockwise.

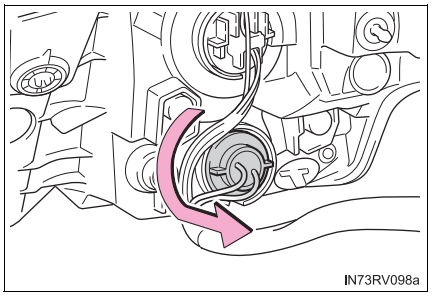


3 Remove the light bulb.

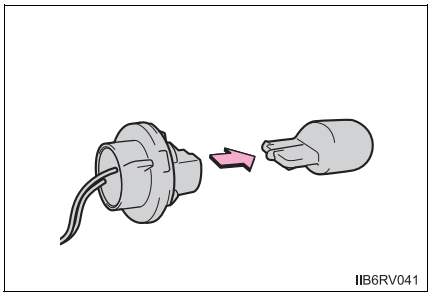


4 When installing, reverse the steps listed.

■ Back-up lights

1 Turn the bulb base counter-clockwise.

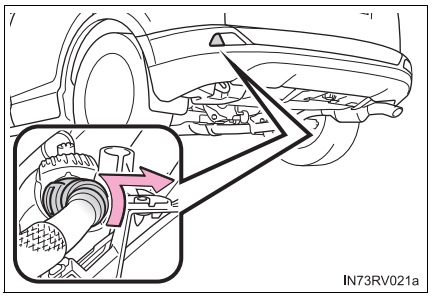


2 Remove the light bulb.

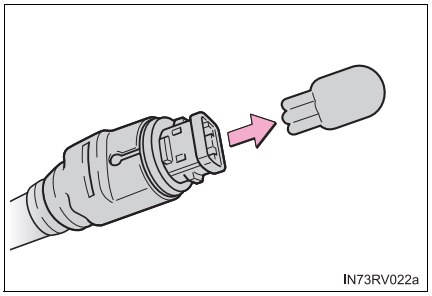

3 When installing, reverse the steps listed.


After installing the bulb base, make sure that the rubber cover is installed securely.

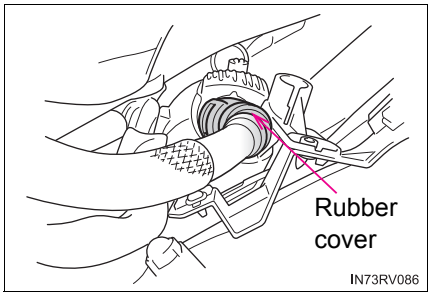

■ License plate lights


1 Open the back door and remove the cover.

To prevent damage, cover the tip of the screwdriver with rag.

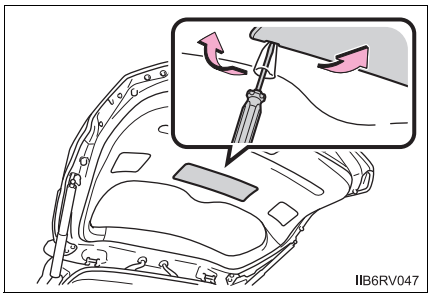


2 Turn the bulb base counterclockwise.


▶ Left side

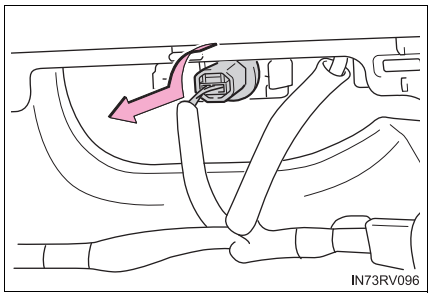

▶ Right side

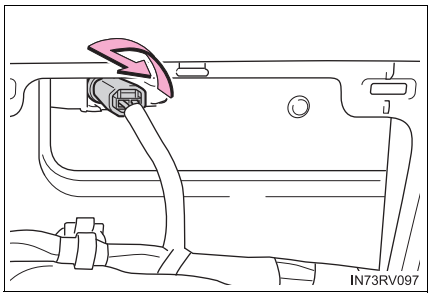

3 Remove the light bulb.

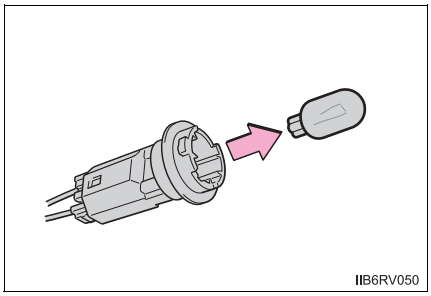

4 When installing, reverse the steps listed.

■ **Replacing the following bulbs**

If any of the lights listed below has burnt out, have it replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- Headlights (LED headlights)
- Front position lights/daytime running lights
- Side turn signal lights
- Tail lights
- Stop/tail lights
- High mounted stoplight
- Rear fog lights

■ **LED Lights**

The headlights (LED headlights), front position lights/daytime running lights, side turn signal lights, tail lights, stop/tail lights, high mounted stoplight and rear fog lights consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer to have the light replaced.

■ **Condensation build-up on the inside of the lens**

Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for more information in the following situations:

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the headlight.

WARNING

■ **Replacing light bulbs**

- Turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights.
  The bulbs become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture and oils on the bulb.
  Also, if the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulbs and any parts used to secure them. Failure to do so may result in heat damage, fire, or water entering the headlight unit. This may damage the headlights or cause condensation to build up on the lens.
- Do not attempt to repair or disassemble light bulbs, connectors, electric circuits or component parts.

  Doing so may result in death or serious injury due to electric shock.
- When replacing the back up light of the right side, be careful not to touch the exhaust pipes until they have cooled down sufficiently, as touching hot exhaust pipes can cause burns.

■ **To prevent damage or fire**

- Make sure bulbs are fully seated and locked.
- Check the wattage of the bulb before installing to prevent heat damage.

When trouble arises 7

7-1. Essential information

Emergency flashers.....562

If your vehicle has to be stopped in an emergency.....563

7-2. Steps to take in an emergency

If your vehicle needs to be towed.....564

If you think something is wrong.....570

If a warning light turns on or a warning buzzer sounds.....571

If a warning message is displayed.....578

If you have a flat tire (vehicles with spare tire).....599

If you have a flat tire (vehicles without spare tire).....611

If the hybrid system will not start.....625

If the electronic key does not operate properly.....627

If the 12-volt battery is discharged.....630

If your vehicle overheats.....635


If the vehicle becomes stuck.....640

Emergency flashers

The emergency flashers are used to warn other drivers when the vehicle has to be stopped in the road to a breakdown, etc.

Press the switch.

All the turn signals will flash.
To turn them off, press the switch once again.

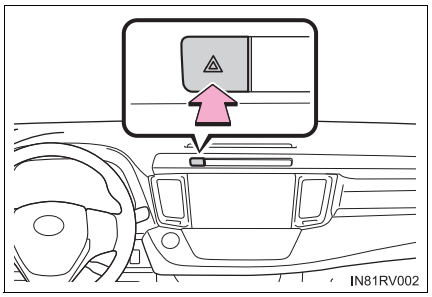

Emergency flashers

If the emergency flashers are used for a long time while the hybrid system is not operating (while the “READY” indicator is not illuminated), the 12-volt battery may discharge.

If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

1 Steadily step on the brake pedal with both feet and firmly depress it.

Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.

2 Shift the shift lever to N.

▶ If the shift lever is shifted to N


3 After slowing down, stop the vehicle in a safe place by the road.

4 Stop the hybrid system.

▶ If the shift lever cannot be shifted to N

3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

4 To stop the hybrid system, press and hold the power switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

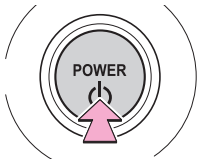

Press and hold for 2 seconds or more, or press briefly 3 times or more

IN81RV001

5 Stop the vehicle in a safe place by the road.

WARNING

■ If the hybrid system has to be turned off while driving

Power assist for the steering wheel will be lost, making the steering wheel heavier to turn. Decelerate as much as possible before turning off the hybrid system.

If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service, using a wheel-lift type truck or flatbed truck.
Use a safety chain system for all towing, and abide by all state/provincial and local laws.

2WD models: If towing your vehicle with a wheel-lift type truck from the front, the vehicle's rear wheels and axles must be in good conditions. (→P. 565, 568)
If they are damaged, use a towing dolly or flatbed truck.

AWD models: If towing your vehicle with a wheel-lift type truck, use a towing dolly. (→P. 565, 568)


Situations when it is necessary to contact dealers before towing

The following may indicate a problem with your transmission. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service before towing.

- The hybrid system warning message is displayed on the multi-information display and the vehicle does not move.
- The vehicle makes an abnormal sound.


Towing with a sling-type truck

Do not tow with a sling-type truck to prevent body damage.

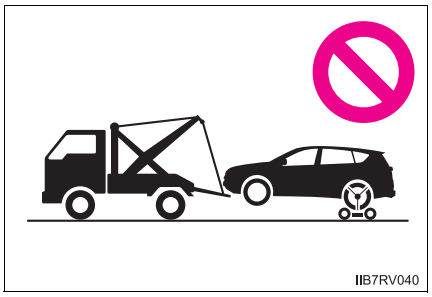


Towing with a wheel-lift type truck

▶ From the front (2WD models)

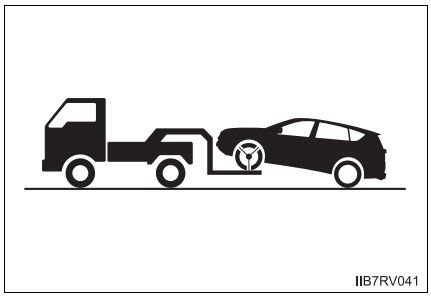


Release the parking brake.

▶ From the front (AWD models)

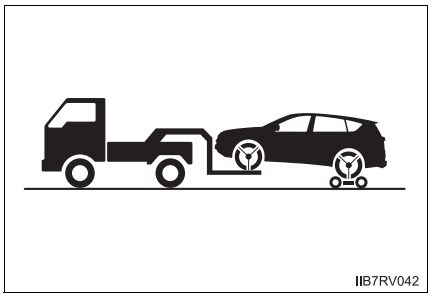

Use a towing dolly under the rear wheels.

▶ From the rear

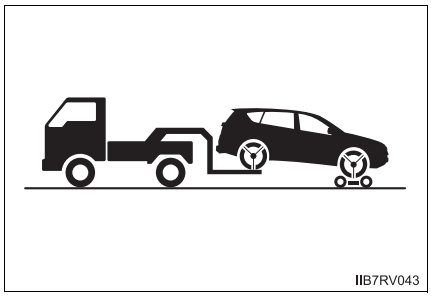


Use a towing dolly under the front wheels.

Using a flatbed truck

If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tie downs or the vehicle may be damaged.

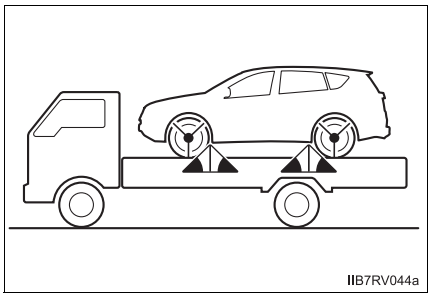

Emergency towing


If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing eyelets. This should only be attempted on hard surfaced roads for at most short distance at under 30 km/h (18 mph).
A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

Emergency towing procedure


1 Take out the towing eyelet.

2 Remove the eyelet cover using a flathead screwdriver.


To protect the bodywork, place a rag between the screwdriver and the vehicle body as shown in the illustration.

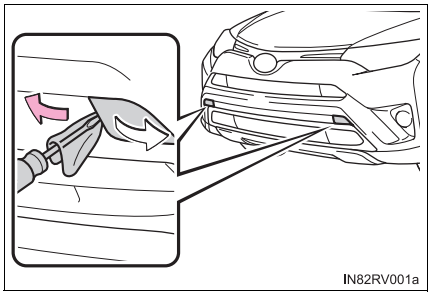

3 Insert the towing eyelet into the hole and tighten partially by hand.

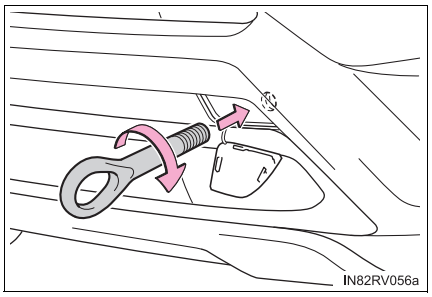

4 Tighten down the towing eyelet securely using a wheel nut wrench or hard metal bar.

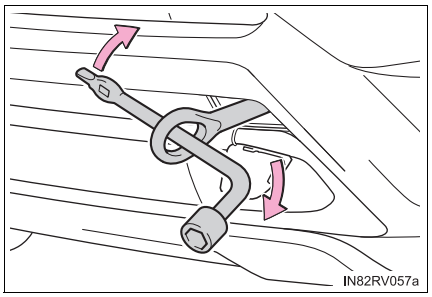

5 Securely attach cables and chains to the towing eyelet.

Take care not to damage the vehicle body.

6 Enter the vehicle being towed and start the hybrid system.

If the hybrid system does not start, turn the power switch to ON mode.

7 Shift the shift lever to N and release the parking brake.

When the shift lever cannot be shifted: →P. 323

While towing

If the hybrid system is off, the power assist for the brakes and steering will not function, making steering and braking more difficult.

Wheel nut wrench (if equipped)


Wheel nut wrench is installed in the tool bag. (→P. 600)

WARNING


Observe the following precautions.
Failure to do so may result in death or serious injury.

When towing the vehicle

2WD models:
Be sure to transport the vehicle with the front wheels raised or with all four wheels raised off the ground. If the vehicle is towed with the front wheels contacting the ground, the drivetrain and related parts may be damaged or electricity generated by the operation of the motor may cause a fire to occur depending on the nature of the damage or malfunction.

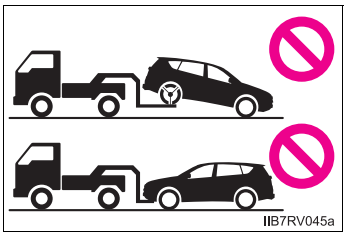
IIB7RV045a

AWD models:
Be sure to transport the vehicle with all four wheels raised off the ground. If the vehicle is towed with the tires contacting the ground, the drivetrain or related parts may be damaged, the vehicle may fly off the truck, or electricity generated by the operation of the motor may cause a fire to occur depending on the nature of the damage or malfunction.

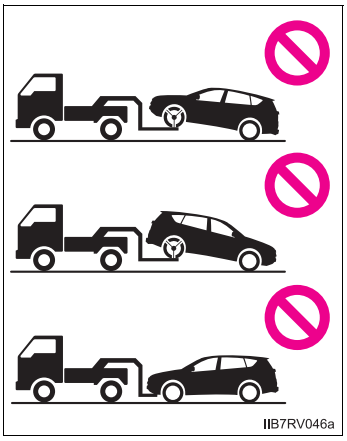
IIB7RV046a

While towing

- When towing using cables or chains, avoid sudden starts, etc. which place excessive stress on the towing eyelets, cables or chains. The towing eyelets, cables or chains may become damaged, broken debris may hit people, and cause serious damage.
- Do not turn the power switch off. There is a possibility that the steering wheel is locked and cannot be operated.

Installing towing eyelets to the vehicle

Make sure that towing eyelets are installed securely.
If not securely installed, towing eyelets may come loose during towing.

NOTICE

■ **To prevent damage to the vehicle when towing using a wheel-lift type truck**

- Do not tow the vehicle from the rear when the power switch is off. The steering lock mechanism is not strong enough to hold the front wheels straight.
- When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

■ **To prevent damage to the vehicle when towing with a sling-type truck**

Do not tow with a sling-type truck, either from the front or rear.

■ **To prevent damage to the vehicle during emergency towing**

Do not secure cables or chains to the suspension components.

If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

Visible symptoms

- Fluid leaks under the vehicle
  (Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge needle continually points higher than normal

Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the hybrid system

Operational symptoms

- Engine missing, stumbling or running roughly
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

If a warning light turns on or a warning buzzer sounds

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Warning light and warning buzzer list

Warning light	Warning light/Details/Actions
 (Red)	**Brake system warning light (warning buzzer)*1** Indicates that: • Low brake fluid • Malfunction in the brake system This light also comes on when the parking brake is not released. If the light turns off after the parking brake is fully released the system is operating normally. → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.**
 (Yellow)	**Brake system warning light** Indicates a malfunction in: • The regenerative braking system; or • The electronically controlled brake system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
	**Malfunction indicator lamp** Indicates a malfunction in: • The hybrid system; • The electronic throttle control system; • The emission control system (if equipped); or • The electronic hybrid transmission control system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**

Warning light	Warning light/Details/Actions
	**SRS warning light** Indicates a malfunction in: • The SRS airbag system; or • The seat belt pretensioner system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
	**ABS warning light** Indicates a malfunction in: • The ABS; or • The brake assist system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
	**Electric power steering system warning light (warning buzzer)** Indicates a malfunction in the EPS (Electric Power Steering) system → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
 (Flashes or illuminates)	**PCS warning light (if equipped)** Indicates a malfunction in the PCS (Pre-Crash Safety system) or that the system is temporarily unavailable due to the vehicle being extremely hot/cold, or dirt around a front sensor, etc. (→P. 373, 578) → **Follow the instructions displayed on the multi-information display. (→P. 373, 578).** If the PCS (Pre-Crash Safety system) or VSC (Vehicle Stability Control) system is disabled, the PCS warning light will illuminate. → **P. 428**
	**Slip indicator** Indicates a malfunction in: • The VSC system; • Trailer sway control system; • The TRC system; or • The hill-start assist control system The light will flash when the TRC, VSC, ABS or Trailer Sway Control system is operating. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**

Warning light	Warning light/Details/Actions
	**Low fuel level warning light** Indicates remaining fuel is approximately 8.4 L (2.2 gal., 1.8 Imp. gal.) or less → **Refuel the vehicle.**
	**Seat belt reminder light (warning buzzer)*2** Warns the driver and/or front passenger to fasten their seat belts → **Fasten the seat belt.** **If the front passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) off.**
 (On the center panel)	**Rear passengers' seat belt reminder lights (warning buzzer)*2** Warn the rear passengers to fasten their seat belts → **Fasten the seat belt.**
	**Master warning light** A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction. → **P. 578**
	**Tire pressure warning light (if equipped)** When the light comes on: Low tire inflation pressure such as • Natural causes (→P. 575) • Flat tire (→P. 599, 611) → **Adjust the tire inflation pressure to the specified level.** **The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.** When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system → **Have the system checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
 (Amber)	**LDA warning light (if equipped)** The warning light comes on and a warning message is displayed to indicate that the LDA (Lane Departure Alert with steering control) system is not available temporarily or has detected a malfunction. → **P. 579**

*1: Parking brake engaged warning buzzer:

A buzzer will sound if the vehicle is driven at a speed of approximately 5 km/h (3 mph) or more.

*2: Driver's and passenger's seat belt buzzer:

The seat belt warning buzzer sounds to alert the driver, front passenger and rear passengers that his or her seat belt is not fastened. The buzzer sounds intermittently for 30 seconds after the vehicle reaches a speed of 20 km/h (12 mph). Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 90 more seconds.

■ **Front passenger detection sensor, seat belt reminder and warning buzzer**

If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.

■ **If the malfunction indicator lamp comes on while driving**

The malfunction indicator lamp will come on if the fuel tank becomes completely empty. If the fuel tank is empty, refuel the vehicle immediately. The malfunction indicator lamp will go off after several trips.

If the malfunction indicator lamp does not go off, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

■ **Electric power steering system warning light (warning buzzer)**

When the 12-volt battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on and the warning buzzer may sound.

■ **When the tire pressure warning light comes on (vehicles with the tire pressure warning system)**

Inspect the appearance of the tire to check that the tire is not punctured.

If the tire is punctured: →P. 599, 611

If the tire is not punctured:
Carry out the following procedure after the tire temperature has lowered sufficiently.

- Check the tire inflation pressure and adjust to the appropriate level.
- If the warning light does not go out even after several minutes, check that the tire inflation pressure is at the specified level and carry out initialization. (→P. 516)

The warning light may come on again if the above operations are conducted without first allowing the tire temperature to lower sufficiently.

■ **The tire pressure warning light may come on due to natural causes (vehicles with the tire pressure warning system)**

The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

■ **When a tire is replaced with a compact spare tire (vehicles with compact spare tire and the tire pressure warning system)**

The compact spare tire is not equipped with a tire pressure warning valve and transmitter. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire. Replace the spare tire with the standard tire and adjust the tire inflation pressure. The tire pressure warning light will go off after a few minutes.

■ **If the tire pressure warning system is not functioning (vehicles with the tire pressure warning system)**

The tire pressure warning system will be disabled in the following conditions:

(When the condition becomes normal, the system will work properly.)

- If tires not equipped with tire pressure warning valves and transmitters are used
- If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer
- If the tire inflation pressure is 480 kPa (4.9 kgf/cm^2 or bar, 70 psi) or higher

The tire pressure warning system may be disabled in the following conditions:

(When the condition becomes normal, the system will work properly.)

- If electronic devices or facilities using similar radio wave frequencies are nearby
- If a radio set at a similar frequency is in use in the vehicle
- If a window tint that affects the radio wave signals is installed
- If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings
- If non-genuine Toyota wheels are used (Even if you use Toyota wheels, the tire pressure warning system may not work properly with some types of tires.)
- If tire chains are used
- If the spare tire is in a location subject to poor radio wave signal reception.*
- If a large metallic object which can interfere with signal reception is put in the luggage compartment.*

*: Vehicles with full-size spare tire only

■ **If the tire pressure warning light frequently comes on after blinking for 1 minute (vehicles with the tire pressure warning system)**

If the tire pressure warning light frequently comes on after blinking for 1 minute when the power switch is turned to ON mode, have it checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Warning buzzer**

In some cases, the buzzer may not be heard because of noisy place or an audio sound.

⚠ WARNING

■ **If both the ABS and the brake system warning lights remain on**

Stop your vehicle in a safe place immediately and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

■ **When the electric power steering system warning light comes on**

The steering wheel may become extremely heavy.
If the steering wheel becomes heavier than usual when operating, hold firmly and operate using more force than usual.

■ **If the tire pressure warning light comes on (vehicles with the tire pressure warning system)**

Be sure to observe the following precautions. Failure to do so could cause a loss of vehicle control and result in death or serious injury.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
- If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, change it with the spare tire and have the flat tire repaired by the nearest any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

■ **If a blowout or sudden air leakage should occur (vehicles with the tire pressure warning system)**

The tire pressure warning system may not activate immediately.

NOTICE

■ **To ensure the tire pressure warning system operates properly (vehicles with the tire pressure warning system)**

Do not install tires with different specifications or makers, as the tire pressure warning system may not operate properly.


If a warning message is displayed

If a warning message is shown on the multi-information display, stay calm and perform the following actions:

① Master warning light



The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the multi-information display.



② Multi-information display

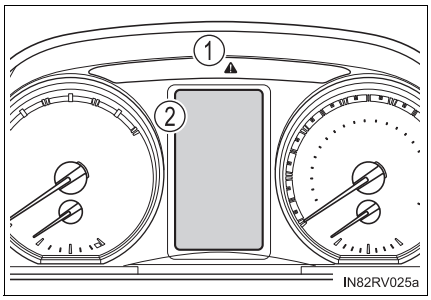

If any of the warning messages are shown again after the following actions have been performed, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Warning message and warning buzzer list

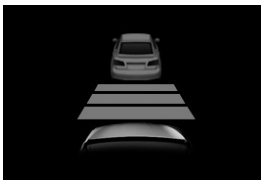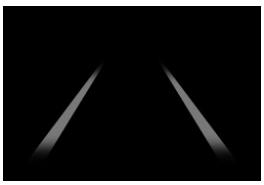Warning message	Details/Actions
 (If equipped)	Indicates that: • There is a high possibility of a frontal collision; or • The pre-crash braking function is operating A buzzer also sounds. → **Slow the vehicle by applying the brakes.**
 (If equipped)	Indicates that your vehicle is nearing the vehicle ahead (in vehicle-to-vehicle distance control mode) A buzzer also sounds. → **Slow the vehicle by applying the brakes.**
  (Amber) (Flashes) (If equipped)	Indicates that the vehicle has deviated from the lane (while the LDA [Lane Departure Alert with steering control] system is operating) The lane line on the side the vehicle has deviated from flashes in amber. A buzzer also sounds. → **Check around the vehicle and back to inside of the lane lines.**
  (Red)	Indicates a malfunction in the brake system A buzzer also sounds. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.** **Continuing to drive the vehicle may be dangerous.**

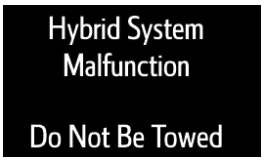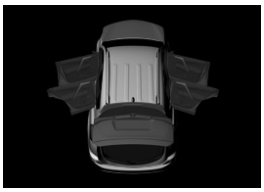Warning message	Details/Actions
  (Flashes)	Indicates that the driver's door was opened with the shift position in any position other than P A buzzer also sounds. → **Shift the shift position to P.**
 	Indicates a malfunction in the hybrid system A buzzer also sounds. → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
	Indicates that one or more of the doors or the back door is not fully closed The system also indicates which doors are not fully closed. If the vehicle reaches a speed of 5 km/h (3 mph),  flashes and a buzzer sounds to indicate that the door(s) are not yet fully closed. → **Make sure that all the doors are closed.**
  (If equipped)	Indicates a malfunction in the Toyota parking assist-sensor All the sensor lights flash. A buzzer also sounds. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**

Warning message	Details/Actions
 (If equipped)	Indicates that an Toyota parking assist-sensor is dirty or covered with ice All the sensor lights flash. A buzzer also sounds. → **Clean the sensor.**
 (Flashes)	Indicates that the accelerator pedal is depressed while the shift position is in N A buzzer also sounds. → **Release the accelerator pedal and shift the shift position to D, S or R.**
 (Flashes)	Indicates that the accelerator pedal is depressed while the shift lever is in N A buzzer also sounds. → **Release the accelerator pedal and shift the shift position to D, S or R.**

Warning message	Details/Actions
Traction Battery Needs to be Protected Shift into P to Restart  (Flashes)	Indicates that the hybrid battery (traction battery) power has dropped because a long period of time has elapsed after shifting the shift lever to N A buzzer also sounds. → **Restart the hybrid system when starting the vehicle.**
Hybrid System Malfunction Check Engine Hybrid Battery System Malfunction Accelerator System Malfunction 	Indicates a malfunction in the hybrid system Depending on the malfunction, troubleshooting methods may also be displayed. A buzzer also sounds. → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
Traction Battery Needs to be Protected Refrain From the Use of N Position  (Flashes)	Indicates that the hybrid battery (traction battery) is low A buzzer also sounds. → **When stopping the vehicle for a long period of time, shift the shift lever to P. The battery cannot be charged with the shift lever in N.**

Warning message	Details/Actions
  (Flashes) (Red)	Indicates that the vehicle is being driven at 5 km/h (3 mph) or more with the parking brake still engaged. A buzzer also sounds. → **Release the parking brake.**
 (If equipped)	Indicates that the LDA (Lane Departure Alert with steering control) system has determined that the driver does not have the hands on the steering wheel while the steering control function is on If the driver operates the steering wheel only a small amount, the system may be unable to detect the steering wheel operations and this warning may be displayed. → **Firmly hold the steering wheel.**
  (If equipped)	Indicates that steering control function is temporarily canceled due to the LDA (Lane Departure Alert with steering control) system determining that the driver does not have the hands on the steering wheel while the steering control function is on If the driver operates the steering wheel only a small amount, the system may be unable to detect the steering wheel operations and this warning may be displayed. → **Firmly hold the steering wheel.**
 	Indicates a malfunction in: • The SRS airbag system; or • The seat belt pretensioner system A buzzer also sounds. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**

Warning message	Details/Actions
	Indicates a malfunction in: • The ABS; or • The brake assist system A buzzer also sounds. → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.**
	Indicates that the engine coolant temperature is too high A buzzer also sounds. → **P. 635**
	Indicates a malfunction in the vehicle's charging system → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.**
 (If equipped)	Indicates that the radar sensor is dirty or covered with ice A buzzer also sounds. → **Clean the sensor.**

Warning message	Details/Actions
Radar Cruise Control Unavailable  (If equipped)	Indicates that the dynamic radar cruise control system cannot be used temporarily due to bad weather A buzzer also sounds. → **Use the radar cruise control system when it becomes available again.**
Check Entry & Start System 	Indicates a malfunction in the smart entry & start system A buzzer also sounds. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
Blind Spot Monitor Unavailable  (If equipped)	Indicates that a Blind Spot Monitor sensor or the surrounding area on the bumper is dirty or covered with ice A buzzer also sounds. → **Clean the sensor and its surrounding area on the bumper.**
Cruise Control Malfunction Visit Your Dealer 	Indicates a malfunction in the cruise control system (if equipped) or dynamic radar cruise control system (if equipped) Press the “ON-OFF” button once to deactivate the system, and then press the button again to reactivate the system. A buzzer also sounds. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
Lane Departure Alert Malfunction Visit Your Dealer  (Amber) (If equipped)	Indicates a malfunction in the LDA (Lane Departure Alert with steering control) system A buzzer also sounds. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**

Warning message	Details/Actions
Forward Camera System Unavailable  (Amber) (Flashes) (If equipped)	The operation conditions of the camera sensor (temperature, etc.) are not met. → **When the operation conditions of the camera sensor (temperature, etc.) are met, the following systems will become available.** • PCS (Pre-Crash Safety system) • LDA (Lane Departure Alert with steering control) system • Dynamic radar cruise control • RSA (Road Sign Assist) • Automatic High Beam
Forward Camera System Unavailable Clean Windshield  (Amber) (Flashes) (If equipped)	Indicates that dirt, rain, condensation, ice, snow, etc., are present on the windshield in front of the camera sensor The following systems may be suspended until the problem shown in the message is resolved. • PCS (Pre-Crash Safety system) • LDA (Lane Departure Alert with steering control) system • Dynamic radar cruise control • RSA (Road Sign Assist) • Automatic High Beam → **Turn the system off, remove any dirt, rain, condensation, ice, snow, etc., from the windshield, and then turn the system back on.**
Lane Departure Alert Unavailable  (Amber) (If equipped)	The LDA (Lane Departure Alert with steering control) system is temporarily canceled due to a malfunction in a sensor other than the camera sensor. A buzzer also sounds. → **Turn the LDA system off and follow the appropriate troubleshooting procedures for warning message. Afterward, drive the vehicle for a short time, and then turn the LDA system back on.**

Warning message	Details/Actions
Pre-Crash Safety Malfunction Visit Your Dealer  (Flashes) (If equipped)	Indicates a malfunction in the pre-crash safety system A buzzer also sounds. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
Blind Spot Monitor System Malfunction Visit Your Dealer  (If equipped)	Indicates a malfunction in the BSM (Blind Spot Monitor) system A buzzer also sounds. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
Oil Pressure Low Stop in a Safe Place See Owner's Manual 	Indicates abnormal engine oil pressure A buzzer also sounds. → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
AWD System Malfunction 2WD Mode Engaged Visit Your Dealer  (AWD models)	Indicates a malfunction in the AWD system (E-Four) The AWD system turns off and the vehicle switches to front wheel drive. A buzzer also sounds. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**

Warning message	Details/Actions
Braking Power Low Visit Your Dealer  (Yellow)	Indicates a malfunction in: • The regenerative brake system; or • The electronically controlled brake system A buzzer also sounds. → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
Lane Departure Alert Unavailable Below Approx 50km/h (If equipped)	Indicates that the LDA (Lane Departure Alert with steering control) system cannot be used as the vehicle speed is approximately 50 km/h (32 mph) or less → **Drive the vehicle at approximately 50 km/h (32 mph) or more.**
Lane Departure Alert Unavailable at Current Speed (If equipped)	Indicates that LDA (Lane Departure Alert with steering control) cannot be used due to the vehicle speed being too high → **Slow down.**
Turn Lights Off  (Flashes)	Indicates that the power switch is turned off or turned to ACCESSORY mode and the driver's door is opened while the lights are turned on A buzzer also sounds. → **Turn the lights off.**
Moon Roof Open  (Flashes) (If equipped)	Indicates that the moon roof is not fully closed (with the power switch off, and the driver's door open) A buzzer also sounds. → **Close the moon roof.**

Warning message	Details/Actions
Hybrid System Overheated Reduced Output Power 	Indicates that the hybrid system has overheated This message may be displayed when driving under severe operating conditions. (For example, when driving up a long steep hill.) A buzzer also sounds. → **Stop and check. (→P. 635)**
Headlight System Malfunction Visit Your Dealer 	Indicates a malfunction in: • The automatic headlight leveling system (if equipped); • The Automatic High Beam system (if equipped); or • The LED headlight system A buzzer also sounds. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
Check RSA System  (If equipped)	Indicates a malfunction in the RSA (Road Sign Assist) A buzzer also sounds → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
Maintenance Required for Hybrid Battery Cooling Parts at Your Dealer	Indicates that maintenance of the hybrid battery (traction battery) cooling component is required The filter may be clogged, the air intake vents may be blocked or there may be a gap in the duct. If the maintenance is not performed after the message is displayed, a buzzer will sound. → **Have maintenance performed on the hybrid battery (traction battery) cooling component at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately after the message is displayed.**

Warning message	Details/Actions
Aux Battery Low See Owner's Manual	Indicates that the insufficient 12-volt battery charge → **After a few seconds*1 the message disappears: Maintain the hybrid system operation state for approximately 15 minutes or more to recharge the 12-volt battery.** → **If the message does not disappear: Start the hybrid system by following the "If the 12-volt battery is discharged" procedure. (→P. 630)**
Windshield Washer Fluid Low (If equipped)	Indicates that the washer fluid level is low → **Add washer fluid.**
Fuel Low	Indicates that remaining fuel is approximately 8.4 L (2.2 gal., 1.8 Imp.gal.) or less → **Refuel the vehicle.**
 Roads May Be Icy Drive with Care	Indicates that the outside temperature is approximately 3°C (37°F) or lower A buzzer also sounds → **Drive carefully, as the road may be icy.**
VSC Turned Off Pre-Crash Brake System Unavailable  (If equipped)	Indicates that, since the VSC (Vehicle Stability Control) system was turned off, the pre-crash brake system operation is stopped → **Turn the VSC on. (→P. 428)**

Warning message	Details/Actions
Pre−Crash Safety Unavailable  (Flashes) (If equipped)	Indicates that the pre-crash safety system is temporarily unavailable → **Please wait until the system returns.** **If the warning message does not disappear, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
Pre−Crash Safety Unavailable Clean Sensor  (Flashes) (If equipped)	Indicates that part of the PCS (Pre-Crash Safety system) sensor is dirty, covered with ice, etc. A buzzer also sounds. → **Remove any dirt, ice, etc.**
High Power Consumption Partial Limit On AC/Heater Operation	Air conditioning, heater and other operations are temporarily limited due to high power consumption → **Turn off unnecessary electronic equipment to reduce power consumption.** **Please wait until the power supply returns to normal.** **If this item is frequently displayed, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
Out. temp over 5°C. Full deicer unavailable. Use defroster.	Indicates that the Heated Windshield Defroster can not be used because the outside temperature is over approximately 5°C (41°F) → **Use the windshield defogger or wait for the outside temperature to drop blow approximately 5°C (41°F)**

Warning message	Details/Actions
EV Mode Unavailable EV Mode Unavailable System Warming Up EV Mode Unavailable Hybrid Battery Low EV Mode Unavailable Speed Range Exceeded EV Mode Unavailable Reduce Acceleration to Activate	Indicates that the EV drive mode is not available*2 The reason the EV drive mode is not available (the vehicle is idling, battery charge is low, speed is higher than the EV drive mode operating speed range, accelerator pedal is depressed too much) may be displayed. A buzzer also sounds. → **Use the EV drive mode when it becomes available.**

Warning message	Details/Actions
EV Mode Deactivated EV Mode Deactivated Hybrid Battery Low EV mode Deactivated Speed Range Exceeded EV Mode Deactivated Accelerator Depressed Too Far EV MODE (Flashes)	Indicates that the EV drive mode has been automatically canceled*2 The reason the EV drive mode is not available (the battery charge is low, speed is higher than the EV drive mode operating speed range, accelerator pedal is depressed too much) may be displayed. A buzzer also sounds. → **Drive the vehicle for a while.**

*1: Displays for about 6 seconds

*2: For the EV drive mode operating conditions (→P. 317).

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Once	—	Key Not Detected Check Key Location  (Flashes)	The electronic key is not detected when an attempt is made to start the hybrid system. → **Start the hybrid system with the electronic key present.**
Once	3 times	Key Not Detected Check Key Location  (Flashes)	The electronic key was carried outside the vehicle and a door other than the driver's door was opened and closed while the power switch was in a mode other than off. → **Bring the electronic key back into the vehicle.**
			The driver's door was opened and closed while the electronic key was not in the vehicle, the shift lever was in P and the power switch was not turned off. → **Turn the power switch off or bring the electronic key back into the vehicle.**
Once	Continuous (5 seconds)	Key Not Detected Check Key Location Turn Off Vehicle (Displayed alternately)  (Flashes)	An attempt was made to exit the vehicle with the electronic key and lock the doors without first turning the power switch off when the shift lever was in P. → **Turn the power switch off and lock the doors again.**

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
9 times	—	Key Not Detected Check Key Location  (Flashes)	An attempt was made to drive when the regular key was not inside the vehicle. → **Confirm that the electronic key is inside the vehicle.**
Continuous	—	Shift to P Before Exiting Vehicle  (Flashes)	The driver's door was opened when the shift lever was not in P and the power switch was not turned off. → **Shift the shift lever to P.**
Continuous	Continuous	Key Not Detected Check Key Location Shift to P Before Exiting Vehicle (Displayed alternately)  (Flashes)	The driver's door was opened and closed while the electronic key was not in the vehicle, the shift lever was not in P and the power switch was not turned off. → **Shift the shift lever to P.** → **Bring the electronic key back into the vehicle.**
Once	Continuous (5 seconds)	Key Left inside Vehicle  (Flashes)	An attempt was made to lock the doors using the smart entry & start system with push-button start while the electronic key was still inside the vehicle. → **Retrieve the electronic key from the vehicle and lock the doors again.**

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Once	Continuous (5 seconds)	Key Left inside Vehicle  (Flashes)	An attempt was made to lock either front door by opening a door and putting the inside lock button into the lock position, then closing the door with the electronic key still inside the vehicle. For some models only: An attempt was made to lock the doors other than using the smart entry & start system while the electronic key was still inside the vehicle. → **Retrieve the electronic key from the vehicle and lock the doors again.**
Once	—	Depress Brake and Then Touch Key to Power Switch  (Flashes)	• When the doors were unlocked with the mechanical key and then the power switch was pressed, the electronic key could not be detected in the vehicle. • The electronic key could not be detected in the vehicle even after the power switch was pressed two consecutive times. → **Touch the electronic key to the power switch while depressing the brake pedal.**
Once	—	Shift to P position to Start  (Flashes)	An attempt was made to start the hybrid system with the shift lever in an incorrect position. → **Shift the shift lever to P and start the hybrid system.**

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
—	—	Power Turned Off to Save Battery	Power was turned off due to the automatic power off function. → **Next time when starting the hybrid system, increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the 12-volt battery.**
Once	—	Key Battery Low	The electronic key has a low battery. → **Replace the electronic key battery. (→P. 543)**
Once	—	Depress brake and power to start	The driver's door was opened and closed with the power switch turned off and then the power switch was put in ACCESSORY mode twice without the hybrid system being started. → **Press the power switch while depressing the brake pedal.**
		 (Flashes)	During an hybrid system starting procedure in the event that the electronic key was not functioning properly (→P. 628), the power switch was touched with the electronic key. → **Press the power switch within 10 seconds of the buzzer sounding.**

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Once	—	Steering Lock active  (Flashes)	The steering lock could not be released within 3 seconds of the power switch being pressed. → **Press the power switch while depressing the brake pedal and moving the steering wheel left and right.**
Once	—	Shift to P Before Exiting Vehicle  (Flashes)	The power switch has been turned off with the shift lever in a position other than P or N. → **Shift the shift lever to P.**
Once	—	Turn Off Vehicle  (Flashes)	After the power switch has been turned off with the shift lever in a position other than P, the shift lever has been shifted to P. → **Turn the power switch off.**

■ **Warning buzzer**

In some cases, the buzzer may not be heard because of noisy place or an audio sound.

If you have a flat tire (vehicles with spare tire)

Your vehicle is equipped with a spare tire. The flat tire can be replaced with the spare tire.

For details about tires: →P. 514

WARNING


■ If you have a flat tire

Do not continue driving with a flat tire.
Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

Before jacking up the vehicle

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Stop the hybrid system.
- Turn on the emergency flashers. (→P. 562)
- For vehicles with power back door: Turn off the power back door system. (→P. 194)

Location of the spare tire, jack and tools

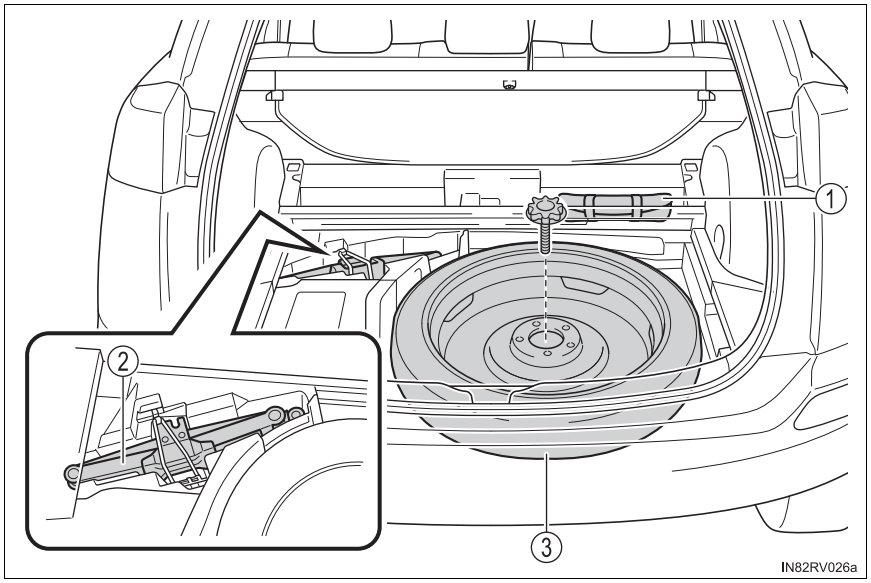

① Tool bag (if equipped)
② Jack
③ Spare tire

WARNING


■ Using the tire jack

Observe the following precautions.
Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.


- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Put the jack properly in its jack point.
- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start the hybrid system or drive the vehicle while the vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- Stop the vehicle on firm, flat and level ground, firmly set the parking brake and shift the shift lever to P. Block the wheel diagonally opposite to the one being changed if necessary.
- When lowering the vehicle, make sure that there is no-one near the vehicle. If there are people nearby, warn them vocally before lowering.

Taking out the jack

1 Vehicles with full-size spare tire: Turn the knob of each clip on the rear deck board to unlock.

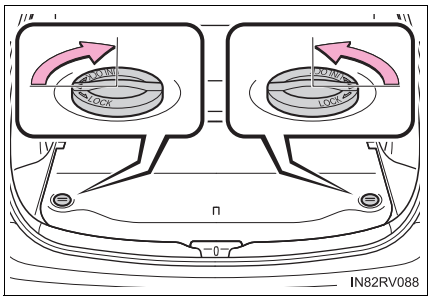


2 Remove the rear deck board.

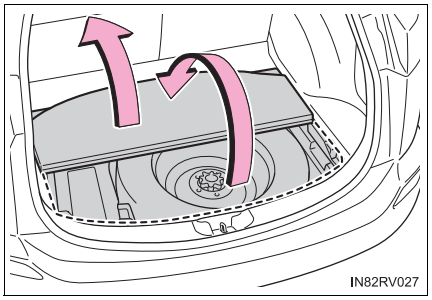


3 Take out the jack.
Unclasp the hook and remove the jack.

When stowing the jack, wind back the jack until it does not move, fix it with the rubber band and then stow it.

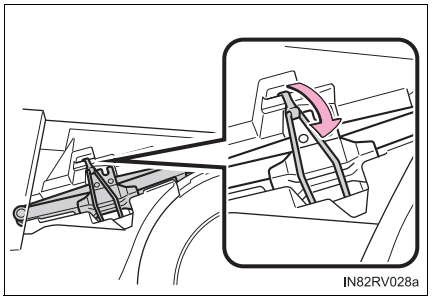

Taking out the spare tire

Loosen the center fastener that secures the spare tire.

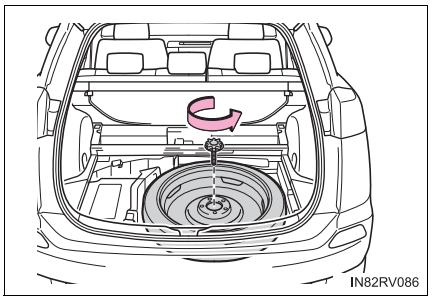


WARNING

■ When storing the spare tire

Be careful not to catch fingers or other body parts between the spare tire and the body of the vehicle.


Replacing a flat tire

1 Chock the tires.

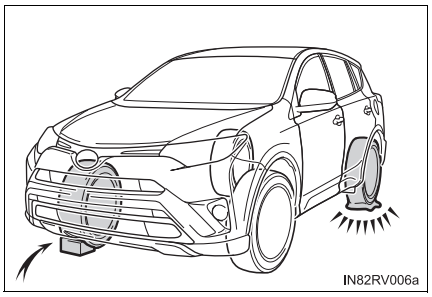


Flat tire		Wheel chock positions
Front	Left-hand side	Behind the rear right-hand side tire
	Right-hand side	Behind the rear left-hand side tire
Rear	Left-hand side	In front of the front right-hand side tire
	Right-hand side	In front of the front left-hand side tire

2 Slightly loosen the wheel nuts (one turn).

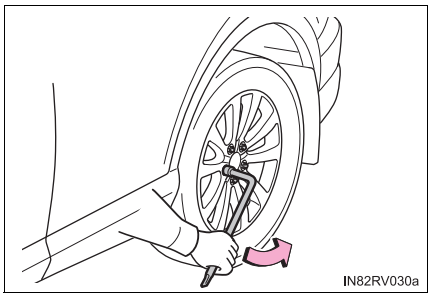


3 Turn the tire jack portion Ⓐ by hand until the notch of the jack is in contact with the jack point.


The jack point guides are located under the rocker panel. They indicate the jack point positions.

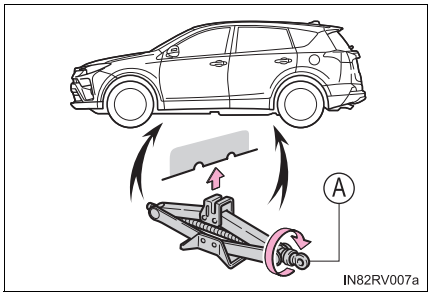

4 Assemble the jack handle and the wheel nut wrench as shown in the illustration.

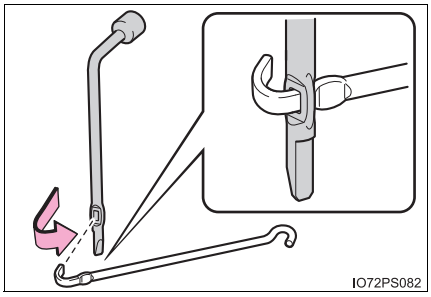


5 Raise the vehicle until the tire is slightly raised off the ground.

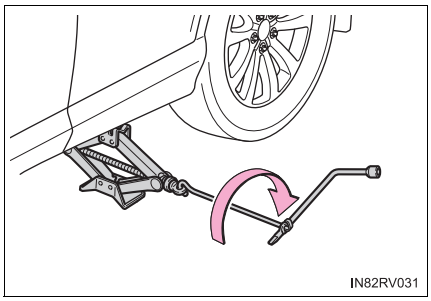

6 Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

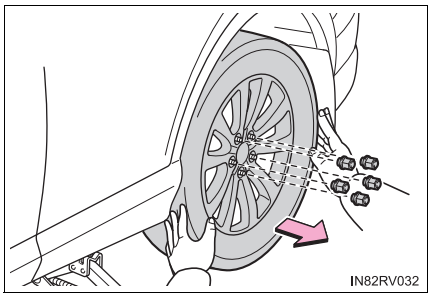

WARNING


■ Replacing a flat tire

- Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.
  After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.
- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
  - Have the wheel nuts tightened with a torque wrench to 103 N•m (10.5 kgf•m, 76 ft•lbf) as soon as possible after changing wheels.
  - When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
  - If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
  - When installing the wheel nuts, be sure to install them with the tapered ends facing inward. (→P. 539)
- For vehicles with power back door: In cases such as when replacing tires, make sure to turn off the power back door system (→P. 194). Failure to do so may cause the back door to operate unintentionally if the power back door switch is accidentally touched, resulting in hands and fingers being caught and injured.

Installing the spare tire


1 Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

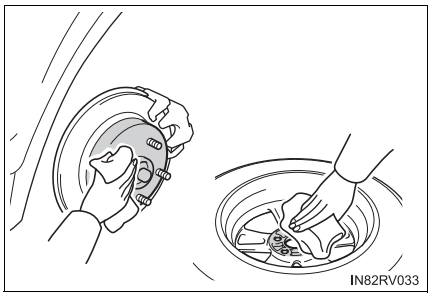


2 Install the spare tire and loosely tighten each wheel nut by hand by approximately the same amount.


When replacing an aluminum wheel with a steel wheel, tighten the wheel nuts until the tapered portion comes into loose contact with the disc wheel seat.

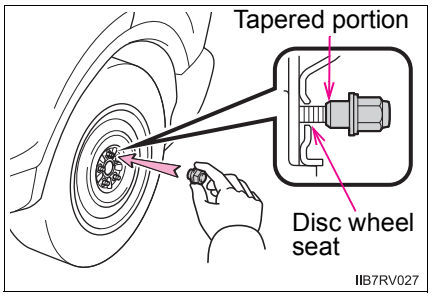

When replacing an aluminum wheel with an aluminum wheel, turn the wheel nuts until the washers come into contact with the disc wheel.

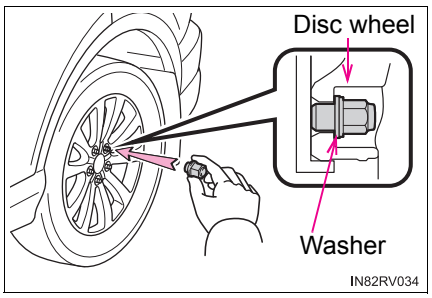


3 Lower the vehicle.

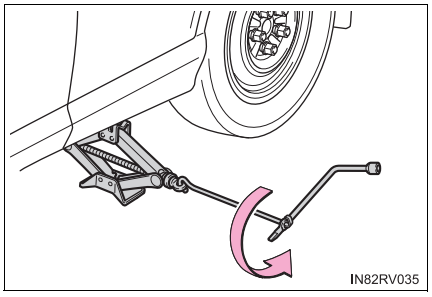

4 Firmly tighten each wheel nut two or three times in the order shown in the illustration.

Tightening torque:
103 N•m (10.5 kgf•m, 76 ft•lbf)

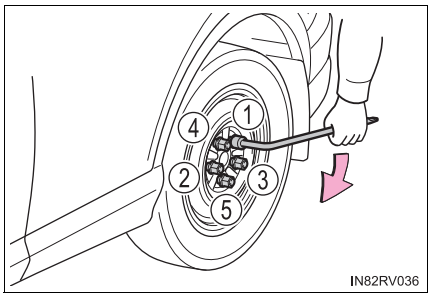

5 Stow the flat tire, tire jack and all tools.

■ **The compact spare tire (if equipped)**

- The compact spare tire is identified by the label “TEMPORARY USE ONLY” on the tire sidewall.
  Use the compact spare tire temporarily, and only in an emergency.
- Make sure to check the tire inflation pressure of the compact spare tire. (→P. 653)

■ **When using the compact spare tire (if equipped)**

As the compact spare tire is not equipped with a tire pressure warning valve and transmitter, low inflation pressure of the spare tire will not be indicated by the tire pressure warning system. Also, if you replace the compact spare tire after the tire pressure warning light comes on, the light remains on.

■ **When the compact spare tire is equipped (if equipped)**

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires.

■ **If you have a flat front tire on a road covered with snow or ice (vehicles with compact spare tire)**

Install the compact spare tire on one of the rear wheels of the vehicle. Perform the following steps and fit tire chains to the front tires:


1 Replace a rear tire with the compact spare tire.

2 Replace the flat front tire with the tire removed from the rear of the vehicle.

3 Fit tire chains to the front tires.

■ **The band used to secure the jack**

After detaching the hook on the jack securing band from lock hole ①, twist the band and attach the hook to lock hole ②.

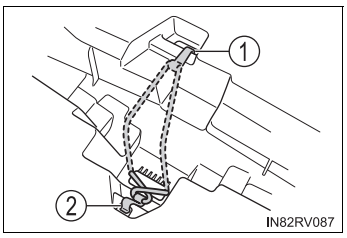

Certification for the jack

DECLARATION OF "CE" CONFORMANCE

EC Declaration of Conformity

1. The undersigned representing the manufacturer, herewith declares that the machinery described below fulfils all the relevant provisions of:

   - Directive 2006/42/EC, on Machinery

2. Description of the machinery

   a) Part Name: Jack Sub-Assy Pantograph
   b) Part Number: 09111-OE011-A (FNG P/N 0300206)
   c) Model: 1.35 tonne
   d) Function: lifting motor vehicle
   e) Serial Number: Not Applicable
   f) OEM: Toyota Motor Corporation

3. Manufacturer:

   Flex-N-Gate / Ventra, 75 Reagens Industrial Court, RR # 1 Bradford, ON, Canada L4A 2Z4

4. Person authorised to compile the technical file:

   Joan Grifoll
   Quality Engineer
   FNG - BARCELONA
   Avda de la Riera, 7-9
   Sant Just Desvern, Barcelona
   Spain 08960

5. Applicable Harmonizing Standards:

   None

6. Other Standards or Specifications:

   Toyota Test Specification: TSF 9501G, Test Method for Car Jack Strength, Class C1, Rev. 6, April 2008

7. Done at: Bradford, Canada
8. Date: 07-15-15



Tony Fabiano
Director of Engineering
Flex-N-Gate/Ventra
Bradford Product Development Centre

WARNING

When using the compact spare tire (if equipped)

- Remember that the compact spare tire provided is specifically designed for use with your vehicle. Do not use your compact spare tire on another vehicle.
- Do not use more than one compact spare tire simultaneously.
- Replace the compact spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

When the compact spare tire is attached (if equipped)

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- ABS & Brake assist
- VSC
- TRC
- Cruise control (if equipped)
- Dynamic radar cruise control (if equipped)
- EPS
- LDA (Lane Departure Alert with steering control) (if equipped)
- PCS (Pre-Crash Safety system) (if equipped)
- Toyota parking assist monitor (if equipped)
- Toyota parking assist-sensor (if equipped)
- Panoramic view monitor (if equipped)
- Navigation system (if equipped)

Also, not only can the following system not be utilized fully, it may actually negatively effect the drive-train components:

- E-Four (Electric Four wheel drive system) (AWD models)

Speed limit when using the compact spare tire (if equipped)

Do not drive at speeds in excess of 80 km/h (50 mph) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

After using the tools and jack

Before driving, make sure all the tools and jack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

NOTICE

■ **Be careful when driving over bumps with the compact spare tire installed on the vehicle. (if equipped)**

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires. Be careful when driving over uneven road surfaces.

■ **Driving with tire chains and the compact spare tire (if equipped)**

Do not fit tire chains to the compact spare tire.
Tire chains may damage the vehicle body and adversely affect driving performance.

■ **When replacing the tires (vehicles with the tire pressure warning system)**

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

If you have a flat tire (vehicles without spare tire)

Your vehicle is not equipped with a spare tire, but instead is equipped with an emergency tire puncture repair kit. A puncture caused by a nail or screw passing through the tire tread can be repaired temporarily with the emergency tire puncture repair kit.

WARNING


■ If you have a flat tire

Do not continue driving with a flat tire.
Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.
Driving with a flat tire may cause a circumferential groove on the side wall. In such a case, the tire may explode when using a repair kit.

Before repairing the vehicle

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Stop the hybrid system.
- Turn on the emergency flashers. (→P. 562)
- For vehicles with power back door: Turn off the power back door system (→P. 194)
- Check the degree of the tire damage.

A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a nail or screw passing through the tire tread.

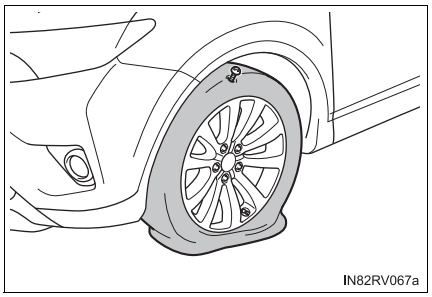


- Do not remove the nail or screw from the tire. Removing the object may widen the opening and prevent emergency repair with the repair kit.
- To avoid sealant leakage, move the vehicle until the area of the puncture, if known, is positioned at the top of the tire.

A flat tire that cannot be repaired with the emergency tire puncture repair kit

In the following cases, the tire cannot be repaired with the emergency tire puncture repair kit. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When the tire is damaged due to driving without sufficient air pressure
- When the tire lost air pressure due to a crack or damage in the tire sidewall
- When the tire is visibly separated from the wheel
- When the cut or damage to the tread is 4 mm (0.16 in.) long or more
- When the wheel is damaged
- When two or more tires have been punctured
- When there is more than one hole or cut in the damaged tire
- When the sealant has expired


Location of the emergency tire puncture repair kit and tools

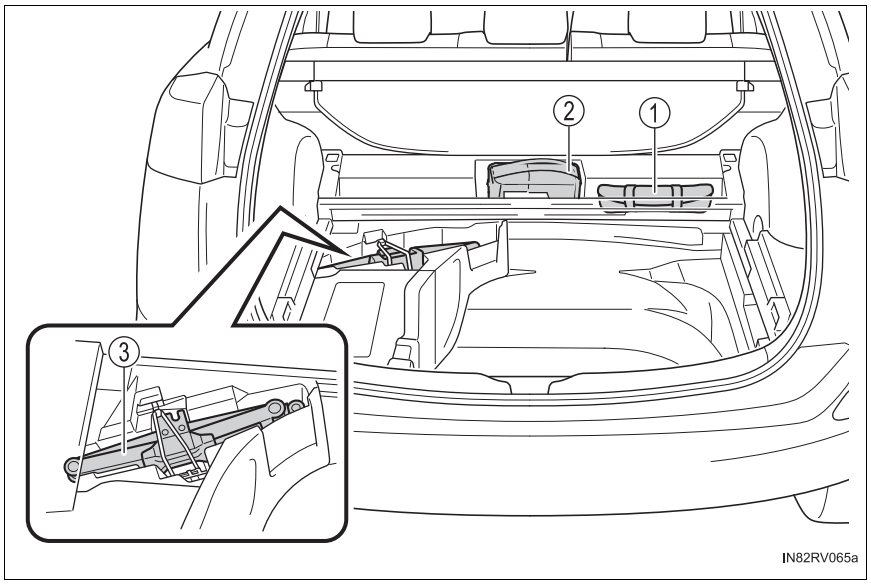

① Tool bag (if equipped)
② Emergency tire puncture repair kit
③ Jack (if equipped)*1, 2

*1: Taking out the jack (→P. 602)
*2: Use of the jack (→P. 603)

Emergency tire puncture repair kit components

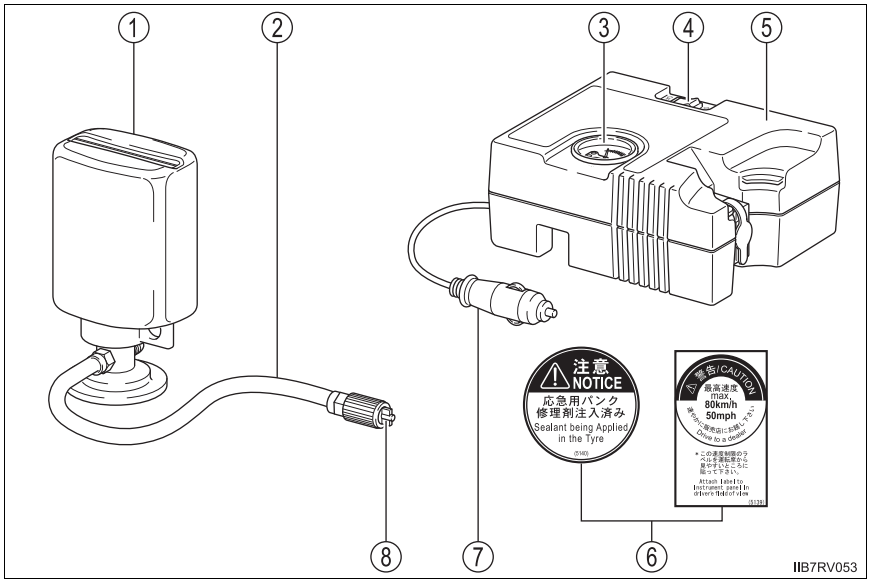


① Bottle
② Hose
③ Air pressure gauge
④ Compressor switch
⑤ Compressor
⑥ Stickers
⑦ Power plug
⑧ Air release cap

Taking out the emergency tire puncture repair kit

1 Open and fold up the rear deck board. (→P. 464)


2 Take out the emergency tire puncture repair kit.

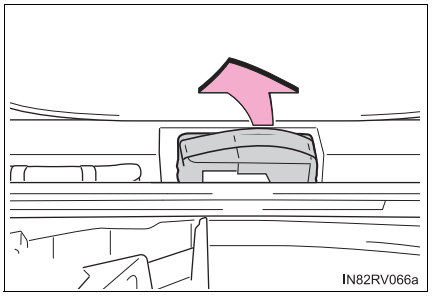

Emergency repair method


1 Take out the repair kit from the bag.

2 Remove the valve cap from the valve of the punctured tire.

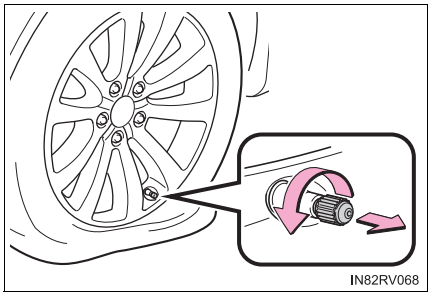


3 Remove the air release cap from the hose.

You will use the air release cap again. Therefore keep it in a safe place.

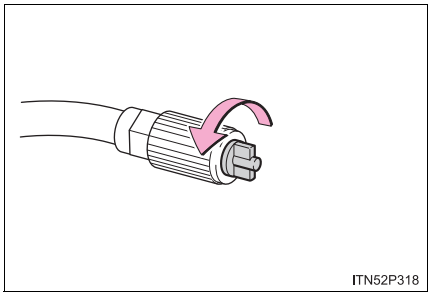


4 Connect the hose to the valve.


Screw the end of the hose clockwise as far as possible.

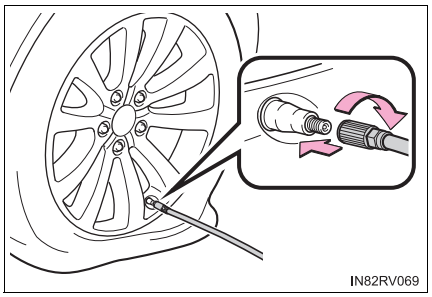

5 Make sure that the compressor switch is off.

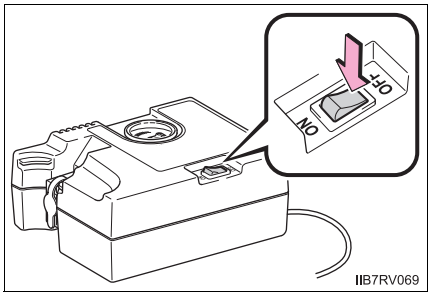


6 Remove the rubber stopper from the compressor.

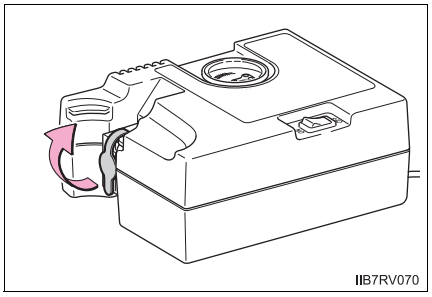


7 Connect the power plug to the power outlet socket.


▶ Left side of instrument panel

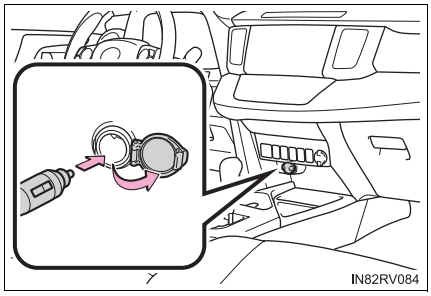

▶ Right side of instrument panel

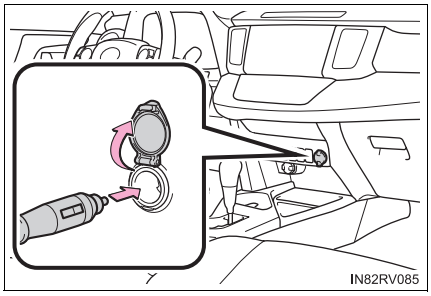


▶ Rear side of console box

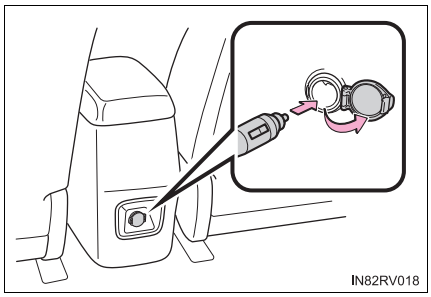

8 Connect the bottle to the compressor.


Connect by inserting the bottle straight into the compressor, and make sure that the protruding part of the bottle is properly aligned with the groove in the case.

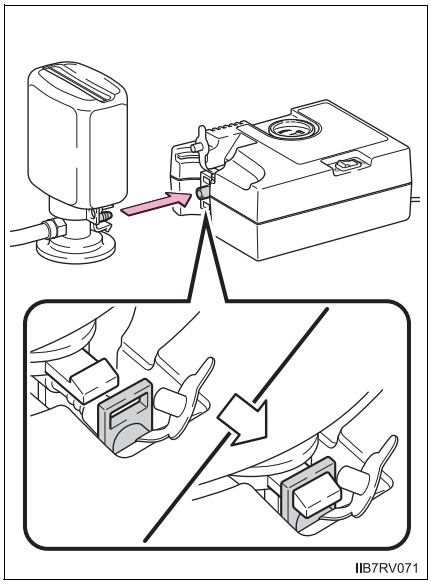

9 Attach the 2 stickers as shown.

Remove any dirt and moisture from the wheel before attaching the sticker.


If you are unable to apply the stickers, inform the nearest any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer that sealant has been applied to the puncture when having the tire repaired or replaced.

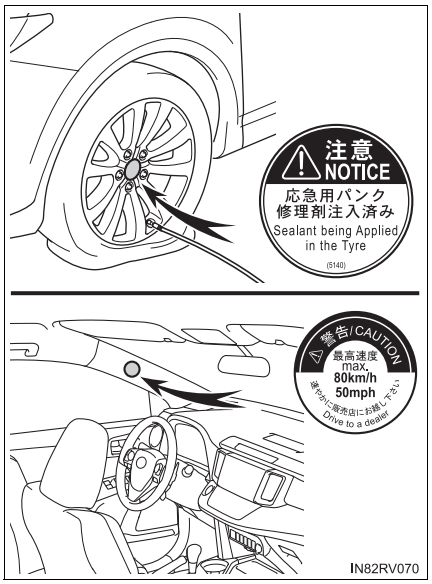


10 Check the specified tire inflation pressure.

Tire inflation pressure is specified on the label on the driver's side pillar as shown. (→P. 653)

▶ Left-hand drive vehicles

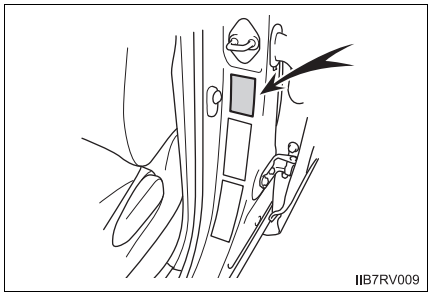


▶ Right-hand drive vehicles

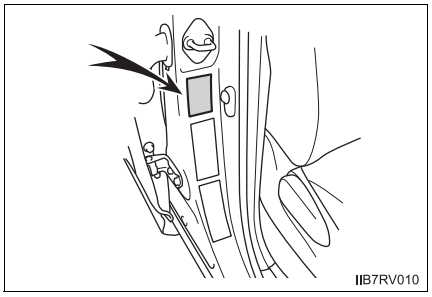


11 Start the hybrid system. (→P. 311)

12 To inject the sealant and inflate the tire, turn the compressor switch on.

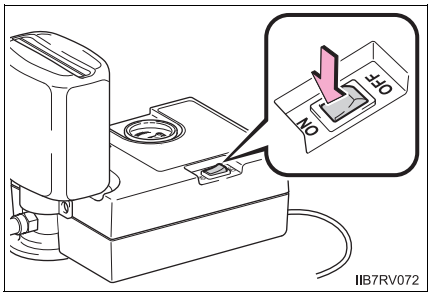

13 Inflate the tire until the specified air pressure is reached.

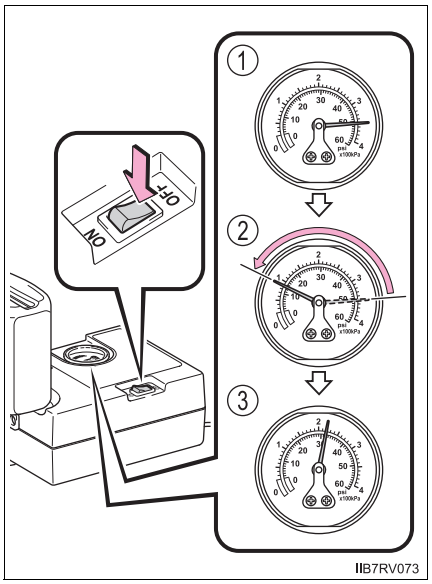

IIB7RV073

① The sealant will be injected and the pressure will spike to 300 kPa (3.1 kgf/cm^2 or bar, 44 psi) or 400 kPa (4.1 kgf/cm^2 or bar, 58 psi), and then gradually decrease.

② The air pressure gauge will display the actual tire inflation pressure about 1 minute (15 minutes at low temperature) after the switch is turned on.

③ Inject to specified air pressure.

- Turn the compressor switch off and then check the tire inflation pressure. Being careful not to over inflate, check and repeat the inflation procedure until the specified tire inflation pressure is reached.
- If the tire inflation pressure is still lower than the specified point after inflation for 10 minutes (40 minutes at low temperature) with the switch on, the tire is too damaged to be repaired. Turn the compressor switch off and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- If the tire inflation pressure exceeds the specified air pressure, let out some air to adjust the tire inflation pressure. (→P. 622, 653)


14 With the compressor switch off, disconnect the hose from the valve on the tire and then pull out the power plug from the power outlet socket.

Some sealant may leak when the hose is removed.

15 Install the valve cap onto the valve of the emergency repaired tire.

16 Attach the air release cap to the end of the hose.


If the air release cap is not attached, the sealant may leak and the vehicle may get dirty.

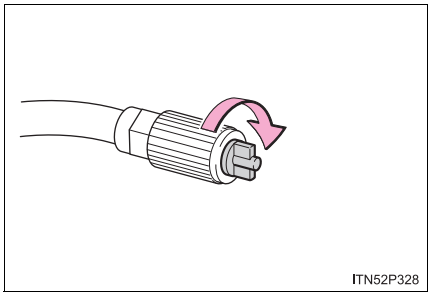
ITN52P328


17 Temporarily store the bottle in the luggage compartment while it is connected to the compressor.

18 To spread the liquid sealant evenly within the tire, immediately drive safely for about 5 km (3 miles) below 80 km/h (50 mph).

19 After driving for about 5 km (3 miles), stop your vehicle in a safe place on a hard, flat surface and remove the air release cap from the hose before reconnecting the repair kit.

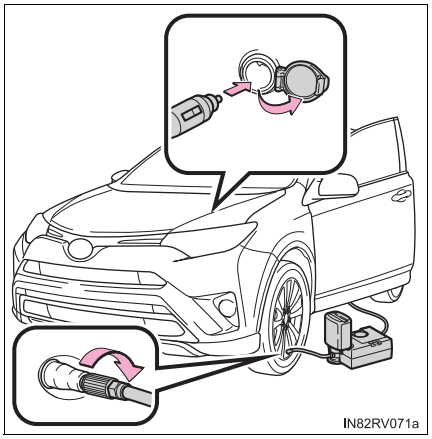

20 Turn the compressor switch on and wait for several seconds, and then turn it off. Check the tire inflation pressure.

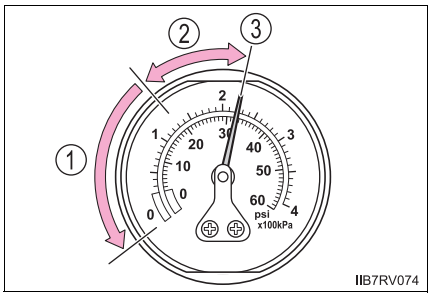

① If the tire inflation pressure is under 130 kPa (1.3 kgf/cm^2 or bar, 19 psi): The puncture cannot be repaired. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


② If the tire inflation pressure is 130 kPa (1.3 kgf/cm^2 or bar, 19 psi) or higher, but less than the specified air pressure: Proceed to step 21.

③ If the tire inflation pressure is the specified air pressure: Proceed to step 22.

21 Turn the compressor switch on to inflate the tire until the specified air pressure is reached. Drive for about 5 km (3 miles) and then perform step 19.

22 Attach the air release cap to the end of the hose.

If the air release cap is not attached, the sealant may leak and the vehicle may get dirty.

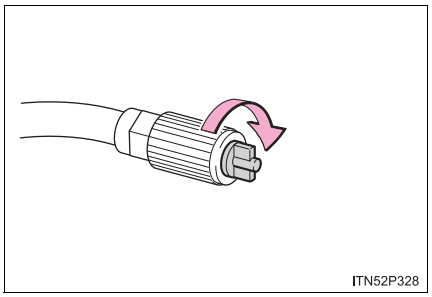

23 Store the bottle in the luggage compartment while it is connected to the compressor.

24 Taking precautions to avoid sudden braking, sudden acceleration and sharp turns, drive carefully at under 80 km/h (50 mph) to the nearest any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


■ **Emergency tire puncture repair kit**

- The sealant has a limited lifespan. The expiry date is shown on the bottle. The sealant should be replaced before the expiry date. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for replacement.
- The sealant stored in the emergency tire puncture repair kit can be used only once to temporarily repair a single tire. If the sealant has been used and need to be purchased, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- The sealant can be used when the outside temperature is from -40 °C (-40 °F) to 60 °C (140 °F).
- The repair kit is exclusively designed for size and type of tires originally installed on your vehicle. Do not use it for tires that a different size than the original ones, or for any other purposes.
- If the sealant gets on your clothes, it may stain.
- If the sealant adheres to a wheel or the surface of the vehicle body, the stain may not be removable if it is not cleaned at once. Immediately wipe away the sealant with a wet cloth.
- During operation of the repair kit, a loud operation noise is produced. This does not indicate a malfunction.
- Do not use to check or to adjust the tire pressure.

■ **If the tire is inflated to more than the specified air pressure**

1 Disconnect the hose from the valve.

2 Install the air release cap to the end of the hose and push the protrusion on the air release cap into the tire valve to let some air out.

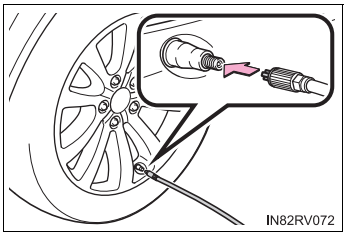

3 Disconnect the hose from the valve, remove the air release cap from the hose and then reconnect the hose.

4 Turn the compressor switch on and wait for several seconds, and then turn it off. Check that the air pressure indicator shows the specified air pressure. If the air pressure is under the designated pressure, turn the compressor switch on again and repeat the inflation procedure until the specified air pressure is reached.

■ **After a tire is repaired with the emergency tire puncture repair kit**

- The tire pressure warning valve and transmitter should be replaced.
- Even if the tire inflation pressure is at the recommended level, the tire pressure warning light may come on/flash.

■ **Note for checking the emergency tire puncture repair kit**

Check the sealant expiry date occasionally.
The expiry date is shown on the bottle.
Do not use sealant that has passed its expiry date. You may be unable to complete the repair using the emergency tire puncture repair kit.

WARNING

■ **Precautions for use of the sealant**

- Ingesting the sealant is hazardous to your health. If you ingest sealant, consume as much water as possible, and then immediately consult a doctor.
- If sealant gets in eyes or adheres to skin, immediately wash it off with water. If discomfort persists, consult a doctor.

■ **When fixing the flat tire**

- Stop your vehicle in a safe and flat area.
- Connect the valve and hose securely with the tire installed on the vehicle.
- If the hose is not properly connected to the valve, air leakage may occur or sealant may be sprayed out.
- If the hose comes off the valve while inflating the tire, there is a risk that the hose will move abruptly due to air pressure.
- After inflation of the tire has completed, the sealant may splatter when the hose is disconnected or some air is let out of the tire.
- Follow the operation procedure to repair the tire. If the procedures not followed, the sealant may spray out.
- Keep back from the tire while it is being repaired, as there is a chance of it bursting while the repair operation is being performed. If you notice any cracks or deformation of the tire, turn off the compressor switch and stop the repair operation immediately.
- The repair kit may overheat if operated for a long period of time. Do not operate the repair kit continuously for more than 60 minutes.
- Parts of the repair kit become hot during operation. Be careful handling the repair kit during and after operation. Do not touch the metal part connecting the bottle and the compressor. It will be extremely hot.
- Do not attach the vehicle speed warning sticker to an area other than the one indicated. If the sticker is attached to an area where an SRS airbag is located, such as the pad of the steering wheel, it may prevent the SRS air bag from operating properly.

WARNING

■ **Driving to spread the liquid sealant evenly**

- Drive the vehicle carefully at a low speed. Be especially careful when turning and cornering.
- If the vehicle does not drive straight or you feel a pull through the steering wheel, stop the vehicle and check the following:
  - Tire condition. The tire may have separated from the wheel.
  - Tire inflation pressure. If tire inflation pressure is 130 kPa (1.3 kgf/cm^2 or bar, 19 psi) or less, the tire may be severely damaged.

NOTICE

■ **When performing an emergency repair**

- A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a sharp object such as nail or screw passing through the tire tread.
  Do not remove the sharp object from the tire. Removing the object may widen the opening and disenable emergency repair with the repair kit.
- The repair kit is not waterproof. Make sure that the repair kit is not exposed to water, such as when it is being used in the rain.
- Do not put the repair kit directly onto dusty ground such as sand at the side of the road. If the repair kit vacuums up dust etc., a malfunction may occur.

■ **Handling the emergency tire puncture repair kit**

- The repair kit power source should be 12 V DC suitable for vehicle use. Do not connect the repair kit to any other source.
- If gasoline splatters on the repair kit, the repair kit may deteriorate. Take care not to allow gasoline to contact it.
- Store the repair kit in the luggage compartment out of reach of children.
- Do not disassemble or modify the repair kit. Do not subject parts such as the air pressure indicator to impacts. This may cause a malfunction.

■ **To avoid damage to the tire pressure warning valves and transmitters (vehicles with the tire pressure warning system)**

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop as soon as possible. After use of liquid sealant, make sure to replace the tire pressure warning valve and transmitter when repairing or replacing the tire. (→P. 515)

If the hybrid system will not start

Reasons for the hybrid system not starting vary depending on the situation. Check the following and perform the appropriate procedure:

The hybrid system will not start even though the correct starting procedure is being followed. (→P. 311)

One of the following may be the cause of the problem:

- The electronic key may not be functioning properly. (→P. 627)
- There may not be sufficient fuel in the vehicle's tank. Refuel the vehicle. (→P. 82)
- There may be a malfunction in the immobilizer system. (→P. 85)
- There may be a malfunction in the steering lock system.
- The hybrid system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse. However, depending on the type of malfunction, an interim measure is available to start the hybrid system. (→P. 626)

The interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P. 630)
- The 12-volt battery terminal connections may be loose or corroded. (→P. 509)

The interior lights and headlights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P. 630)
- One or both of the 12-volt battery terminals may be disconnected. (→P. 509)

Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer if the problem cannot be repaired, or if repair procedures are unknown.

Emergency start function

When the hybrid system does not start, the following steps can be used as an interim measure to start the hybrid system if the power switch is functioning normally.
Do not use this starting procedure except in cases of emergency.

1. Set the parking brake.
2. Shift the shift lever to P.
3. Turn the power switch to ACCESSORY mode.
4. Press and hold the power switch for about 15 seconds while depressing the brake pedal firmly.

Even if the hybrid system can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the electronic key does not operate properly


If communication between the electronic key and vehicle is interrupted (→P. 212) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors can be opened and the hybrid system can be started by following the procedure below.

Locking and unlocking the doors

Use the mechanical key (→P. 134) in order to perform the following operations:

① Locks all the doors


② Unlocks all the doors

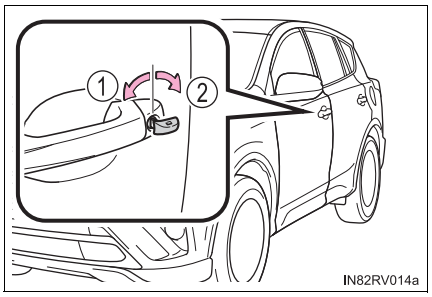

Starting the hybrid system

1 Ensure that the shift lever is in P and depress the brake pedal.

2 Touch the Toyota emblem side of the electronic key to the power switch.

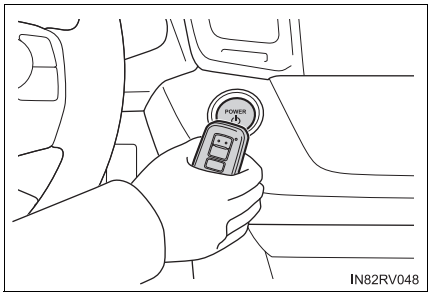

When the electronic key is detected, a buzzer sounds and the power switch will turn to ON mode.

When the smart entry & start system is deactivated in customization setting, the power switch will turn to ACCESSORY mode.

3 Firmly depress the brake pedal and check that  is displayed on the multi-information display.

4 Press the power switch.

In the event that the hybrid system still cannot be started, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Stopping the hybrid system**

Shift the shift lever to P and press the power switch as you normally do when stopping the hybrid system.

■ **Replacing the key battery**

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P. 543)

■ **Alarm (if equipped)**

Using the mechanical key to lock the doors will not set the alarm system.
If a door is unlocked using the mechanical key when the alarm system is set, the alarm may be triggered.

■ **Changing power switch modes**

Release the brake pedal and press the power switch in step 3 above.
The hybrid system does not start and modes will be changed each time the switch is pressed. (→P. 312)

■ **When the electronic key does not work properly**

- Make sure that the smart entry & start system has not been deactivated in the customization setting. If it is off, turn the function on.
  (Customizable features: →P. 662)
- Check if battery-saving mode is set. If it is set, cancel the function.
  (→P. 208)


If the 12-volt battery is discharged

The following procedures may be used to start the hybrid system if the vehicle's 12-volt battery is discharged.
You can also call any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.

1 Confirm that the electronic key is being carried.


When connecting the jumper (or booster) cables, depending on the situation, the alarm may activate and doors locked. (→P. 110)

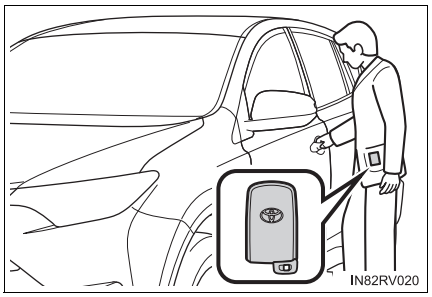


2 Open the hood (→P. 498) and fuse box cover.

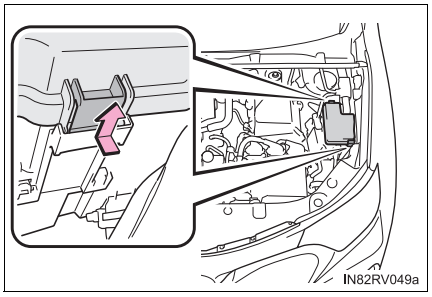

3 Open the exclusive jump starting terminal cover.

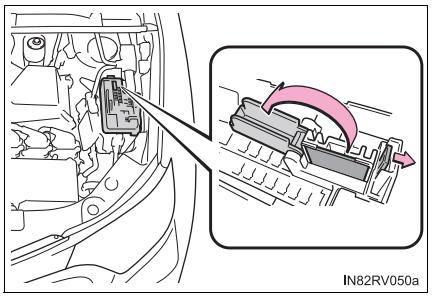

4 Connect the jumper cables according to the following procedure:

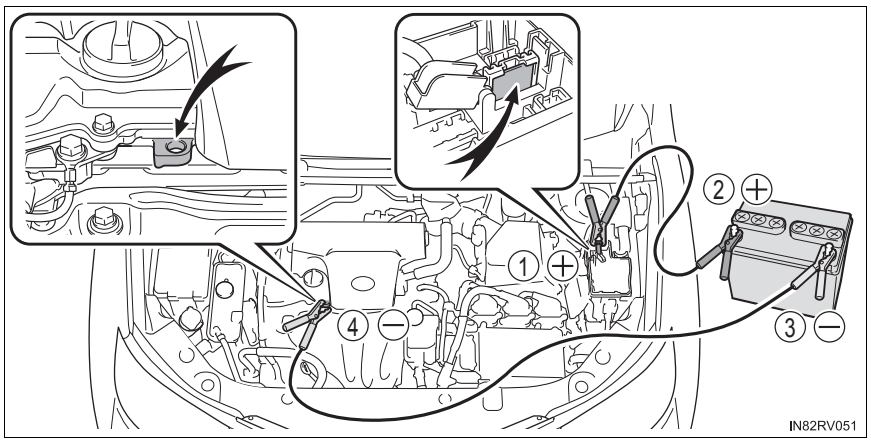

① Connect a positive jumper cable clamp to the exclusive jump starting terminal on your vehicle.

② Connect the clamp on the other end of the positive cable to the positive (+) battery terminal on the second vehicle.

③ Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle.

④ Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the exclusive jump starting terminal and any moving parts, as shown in the illustration.

5 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the 12-volt battery of your vehicle.

6 Open and close any of the doors of your vehicle with the power switch off.

7 Maintain the engine speed of the second vehicle and start the hybrid system of your vehicle by turning the power switch to ON mode.

8 Make sure the “READY” indicator comes on. If the indicator light does not come on, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

9 Once the hybrid system has started, remove the jumper cables in the exact reverse order from which they were connected.

10 Close the exclusive jump starting terminal cover, and reinstall the fuse box cover to its original position.

When installing, first hook the fuse box cover onto the two rear tabs.

Once the hybrid system starts, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

■ **Starting the hybrid system when the 12-volt battery is discharged**

The hybrid system cannot be started by push-starting.

■ **To prevent 12-volt battery discharge**

- Turn off the headlights and the audio system while the hybrid system is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

■ **Charging the 12-volt battery**

The electricity stored in the 12-volt battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the 12-volt battery may discharge, and the hybrid system may be unable to start. (The 12-volt battery recharges automatically while the hybrid system is operating.)

■ **When recharging or replacing the 12-volt battery**

- In some cases, it may not be possible to unlock the doors using the smart entry & start system when the 12-volt battery is discharged. Use the wireless remote control or the mechanical key to lock or unlock the doors.
- The hybrid system may not start on the first attempt after the 12-volt battery has recharged but will start normally after the second attempt. This is not a malfunction.
- The power switch mode is memorized by the vehicle. When the 12-volt battery is reconnected, the system will return to the mode it was in before the 12-volt battery was discharged. Before disconnecting the 12-volt battery, turn the power switch off.
  If you are unsure what mode the power switch was in before the 12-volt battery discharged, be especially careful when reconnecting the 12-volt battery.
- Some systems may require initialization. (→P. 666)

WARNING

■ **Avoiding 12-volt battery fires or explosions**

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the 12-volt battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the other end of the jumper cable connected to the "+" terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and - clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the 12-volt battery.

■ **12-volt battery precautions**

The 12-volt battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the 12-volt battery:

- When working with the 12-volt battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the 12-volt battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the 12-volt battery support, terminals, and other battery-related parts.
- Do not allow children near the 12-volt battery.

■ **After recharging the 12-volt battery**

Have the 12-volt battery inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.
If the 12-volt battery is deteriorating, continued use may cause the 12-volt battery to emit a malodorous gas, which may be detrimental to the health of passengers.

■ **When replacing the 12-volt battery**

→P. 513

NOTICE

When handling jumper cables

When connecting the jumper cables, ensure that they do not become entangled in the cooling fans, etc.

To prevent damaging the vehicle

The exclusive jump starting terminal is to be used when charging the 12-volt battery from another vehicle in an emergency. It cannot be used to jump start another vehicle.

If your vehicle overheats

The following may indicate that your vehicle is overheating.

- The needle of the engine coolant temperature gauge (→P. 120) enters the red zone, or a loss of hybrid system power is experienced. (For example, the vehicle speed does not increase.)
- “Engine Coolant Temp high” or “Hybrid System Overheated” is shown on the multi-information display. (→P. 589)
- Steam comes out from under the hood.

Correction procedures

■ If the needle of the engine coolant temperature gauge enters the red zone or “Engine Coolant Temp high” is shown on the multi-information display

1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the hybrid system.

2 If you see steam:
Carefully lift the hood after the steam subsides.


If you do not see steam:
Carefully lift the hood.

3 After the hybrid system has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.

① Radiator


② Cooling fans

If a large amount of coolant leaks, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

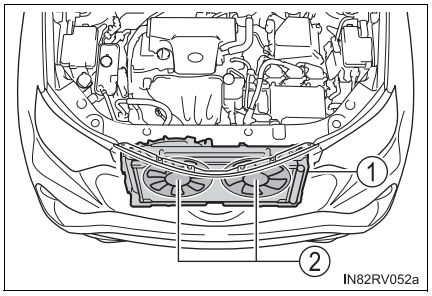


4 The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir.

① Reservoir
② “FULL” line
③ “LOW” line

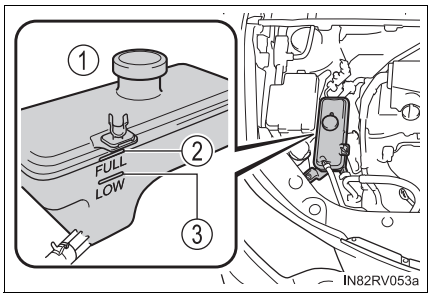

5 Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

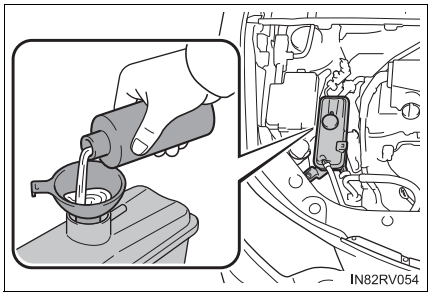

6 Start the hybrid system and turn the air conditioning system on to check that the radiator cooling fans operate and to check for coolant leaks from the radiator or hoses.

The fans operate when the air conditioning system is turned on immediately after a cold start. Confirm that the fans are operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly. (The fans may not operate in freezing temperatures.)

7 If the fans are not operating:
Stop the hybrid system immediately and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the fans are operating:
Have the vehicle inspected at the nearest any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **If “Hybrid System Overheated” is shown on the multi-information display**

1 Stop the vehicle in a safe place.


2 Stop the hybrid system and carefully lift the hood.

3 After the hybrid system has cooled down, inspect the hoses and radiator core (radiator) for any leaks.

① Radiator

② Cooling fans

If a large amount of coolant leaks, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

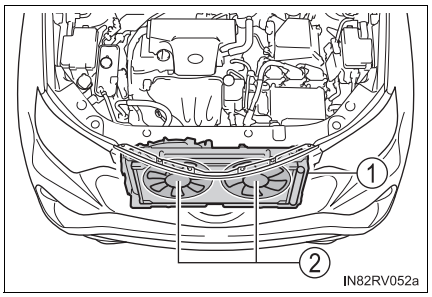


4 The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir.

① Reservoir


② “FULL” line

③ “LOW” line

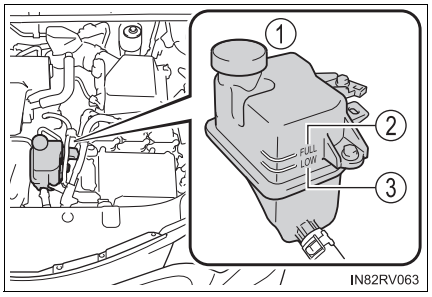

5 Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

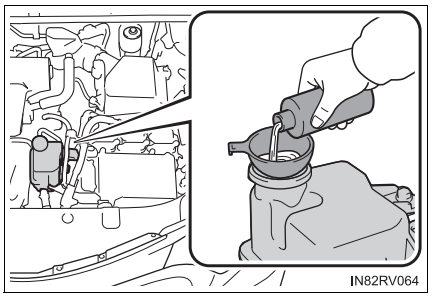

6 Start the hybrid system and check for the multi-information display.

If the message does not disappear:
Stop the hybrid system and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the message is not displayed:
Have the vehicle inspected at the nearest any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ When inspecting under the hood of your vehicle

Observe the following precautions.
Failure to do so may result in serious injury such as burns.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- After the hybrid system has been turned off, check that the “READY” indicator is off.
  When the hybrid system is operating, the gasoline engine may automatically start, or the cooling fan may suddenly operate even if the gasoline engine stops. Do not touch or approach rotating parts such as the fan, which may lead to fingers or clothing (especially a tie, a scarf or a muffler) getting caught, resulting in serious injury.
- Do not loosen the coolant reservoir cap while the hybrid system and radiator are hot.
  High temperature steam or coolant could spray out.

NOTICE

When adding engine/power control unit coolant

Add coolant slowly after the hybrid system has cooled down sufficiently. Adding cool coolant to a hot hybrid system too quickly can cause damage to the hybrid system.

To prevent damage to the cooling system

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use any coolant additive.


If the vehicle becomes stuck

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

1. Stop the hybrid system. Set the parking brake and shift the shift lever to P.
2. Remove the mud, snow or sand from around the stuck tire.
3. Place wood, stones or some other material to help provide traction under the tires.
4. Restart the hybrid system.
5. Shift the shift lever to D or R and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

When it is difficult to free the vehicle

Press to turn off TRC.

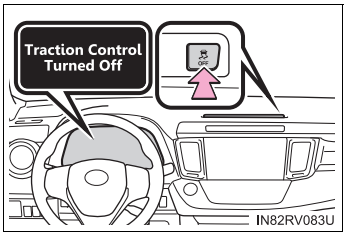

WARNING

When attempting to free a stuck vehicle

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

When shifting the shift lever

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.

NOTICE

To avoid damaging the hybrid transmission and other components

- Avoid spinning the wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

Vehicle specifications 8

8-1. Specifications
Maintenance data (fuel, oil level, etc.).....644
Fuel information 655
8-2. Customization
Customizable features 657
8-3. Initialization
Items to initialize 666

Maintenance data (fuel, oil level, etc.)

Dimensions

Overall length		4605 mm (181.3 in.)
Overall width		1845 mm (72.6 in.)
Overall height*1	Without the roof luggage carrier	1675 mm (65.9 in.)
		1685 mm (66.3 in.)*2
	With the roof luggage carrier	1705 mm (67.1 in.)
		1715 mm (67.5 in.)*2
Wheelbase		2660 mm (104.7 in.)
Front and rear tread	17-inch tires	1570 mm (61.8 in.)
	18-inch tires	1560 mm (61.4 in.)

*1: Unladen vehicle

*2: Vehicles with raised vehicle height

Weights

Gross vehicle mass	2WD models		2205 kg (4861 lb.)
	AWD models		2270 kg (5004 lb.)
Maximum permissible axle capacity	Front		1220 kg (2690 lb.)
	Rear		
Drawbar load*			70 kg (154 lb.)
Towing capacity*	Without brake		750 kg (1653 lb.)
	With brake	2WD models	800 kg (1764 lb.)
		AWD models	1650 kg (3638 lb.)


*: Vehicles for trailer towing. (→P. 300)

Vehicle identification


■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Toyota. It is used in registering the ownership of your vehicle.


This number is stamped under the right-hand front seat.

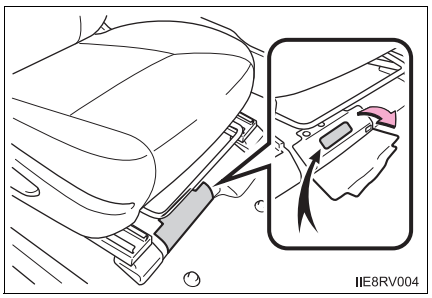

This number is stamped on the top left of the instrument panel.

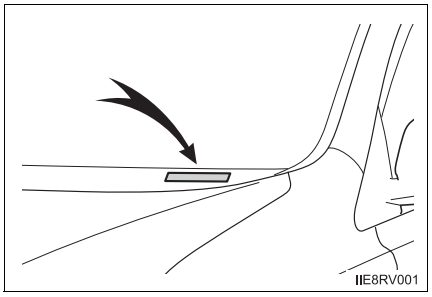


This number is also on the manufacturer's label.

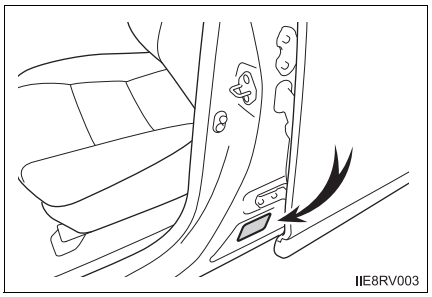

■ **Engine number**

The engine number is stamped on the engine block as shown.

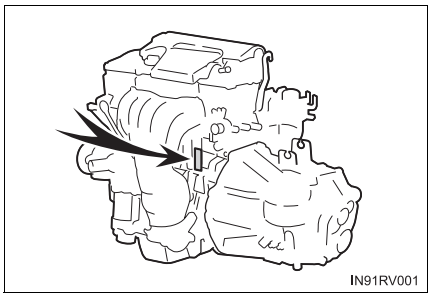

Engine

Model	2AR-FXE
Type	4-cylinder in line, 4-cycle, gasoline
Bore and stroke	90.0 × 98.0 mm (3.54 × 3.86 in.)
Displacement	2494 cm^3 (152.2 cu.in.)
Valve clearance	Automatic adjustment
Drive belt tension	

Fuel

Fuel type	When you find these types of fuel label at the gas station, use only the fuel with one of the following labels. E5 E10 EU area: Unleaded gasoline conforming to European standard EN228 only Except EU area: Unleaded gasoline only
Research octane number	91 or higher
Fuel tank capacity (Reference)	56 L (14.8 gal., 12.3 Imp.gal.)

Electric motor (traction motor)

	Front	Rear*
Type	Permanent magnet synchronous motor	
Maximum output	105 kW	50 kW
Maximum torque	270 N•m (27.5 kgf•m, 199 ft•lbf)	139 N•m (14.2 kgf•m, 103 ft•lbf)

*: AWD models only

Hybrid battery (traction battery)

Type	Nickel-Metal hydride battery
Voltage	7.2 V/module
Capacity	6.5 Ah (3HR)
Quantity	34 modules
Overall voltage	244.8 V

Lubrication system

■ Oil capacity (Drain and refill [Reference*])

With filter	4.4 L (4.6 qt., 3.9 Imp.qt.)
Without filter	4.0 L (4.2 qt., 3.5 Imp.qt.)

*: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the hybrid system, wait more than 5 minutes, and check the oil level on the dipstick.

■ Engine oil selection

"Toyota Genuine Motor Oil" is used in your Toyota vehicle. Toyota recommends the use of approved "Toyota Genuine Motor Oil". Another motor oil of matching quality can also be used.

Oil grade:

0W-20, 5W-30 and 10W-30:
API grade SL "Energy-Conserving", SM "Energy-Conserving" or SN "Resource-Conserving"; or ILSAC multigrade engine oil


15W-40:
API grade SL, SM or SN multigrade engine oil

Recommended viscosity (SAE):

SAE 0W-20 is filled into your Toyota vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather.

If SAE 0W-20 oil is not available, SAE 5W-30 oil may be used. However, it should be replaced with SAE 0W-20 at the next oil change.

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 0W-20 or 5W-30 engine oil is recommended.

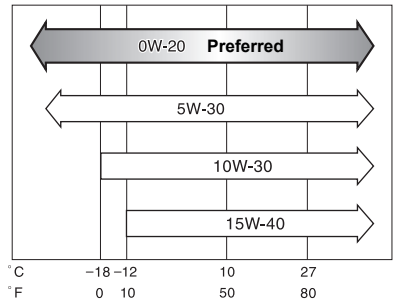

Temperature range anticipated before next oil change


ITIOIL148

Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container labels:

Either or both API registered marks are added to some oil containers to help you select the oil you should use.

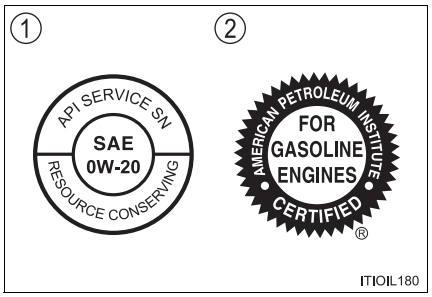

① API Service Symbol

Top portion: “API SERVICE SN” means the oil quality designation by American Petroleum Institute (API).

Center portion: “SAE 0W-20” means the SAE viscosity grade.

Lower portion: “Resource-Conserving” means that the oil has fuel-saving and environmental protection capabilities.

② ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

Cooling system

Capacity	Gasoline engine	Without EGR system: 7.2 L (7.6 qt., 6.3 Imp.qt.) With EGR system: 7.5 L (7.9 qt., 6.6 Imp.qt.)
	Power control unit	1.5 L (1.6 qt., 1.3 Imp.qt.)
Coolant type		Use either of the following: • “Toyota Super Long Life Coolant” • Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

Ignition system

Spark plug	
Make	DENSO FK16HR-A8
Gap	0.8 mm (0.03 in.)

NOTICE

Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.

Electrical system

12-volt battery Open voltage at 20°C (68°F):	12.0 V or higher (Voltage is checked 20 minutes after the hybrid system and all lights are turned off.)
Charging rates	5 A max.

Hybrid transaxle

Fluid capacity*1	Front	3.8 L (4.0 qt., 3.3 Imp.qt.)
	Rear*2	1.8 L (1.9 qt., 1.6 Imp.qt.)
Fluid type		Toyota Genuine ATF WS

*1: The fluid capacity is the quantity of reference.
If replacement is necessary, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*2: AWD models only

NOTICE

Hybrid transaxle fluid type

Using transaxle fluid other than “Toyota Genuine ATF WS” may cause deterioration in shift quality, locking up of your transaxle accompanied by vibration, and ultimately damage the transaxle of your vehicle.

Brakes

Pedal clearance*1	Left-hand drive vehicles	105 mm (4.13 in.) Min.
	Right-hand drive vehicles	100 mm (3.93 in.) Min.
Pedal free play		1 — 6 mm (0.04 — 0.24 in.)
Parking brake lever travel*2		7 — 10 clicks
Fluid type		SAE J1703 or FMVSS No. 116 DOT 3, or SAE J1704 or FMVSS No. 116 DOT 4

*1: Minimum pedal clearance when depressed with a force of 490 N (50 kgf, 110 lbf) while the hybrid system is operating.

*2: Parking brake lever travel when pulled up with a force of 200 N (20 kgf, 45 lbf).

Steering

Free play	Less than 30 mm (1.2 in.)

Tires and wheels

▶ Type A and B

Tire size	225/65R17 102H
Tire inflation pressure (Recommended cold tire inflation pressure)	Type A*: Front: 220 kPa (2.2 kgf/cm^2 or bar, 32 psi) Rear: 220 kPa (2.2 kgf/cm^2 or bar, 32 psi) Type B*: Front: 240 kPa (2.4 kgf/cm^2 or bar, 35 psi) Rear: 240 kPa (2.4 kgf/cm^2 or bar, 35 psi)
Wheel size	17 × 7 J
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

*: The tire inflation pressure varies depending on country, please check the tire-loading information label to confirm which tire inflation pressure is recommended to your vehicle.(→P. 536)

▶ Type C

Tire size	225/60R18 100H
Tire inflation pressure (Recommended cold tire inflation pressure)	Front: 210 kPa (2.1 kgf/cm^2 or bar, 30 psi) Rear: 210 kPa (2.1 kgf/cm^2 or bar, 30 psi)
Wheel size	18 × 7 1/2J
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

▶ Type D

Tire size	235/55R18 100H
Tire inflation pressure (Recommended cold tire inflation pressure)	Front: 220 kPa (2.2 kgf/cm^2 or bar, 32 psi) Rear: 220 kPa (2.2 kgf/cm^2 or bar, 32 psi)
Wheel size	18 × 7 1/2J
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

▶ Compact spare tire (if equipped)

Tire size	T165/80D17 104M
Tire inflation pressure (Recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm^2 or bar, 60 psi)
Wheel size	17 × 4T
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

■ **When towing a trailer**

Add 20.0 kPa (0.2 kgf/cm^2 or bar, 3 psi) to the recommended tire inflation pressure and drive at speeds below 100 km/h (62 mph).

Light bulbs

	Light bulbs	W	Type
Exterior	Headlights (halogen headlights)	55	A
	Front fog lights*	19	B
	Front turn signal lights	21	C
	Rear turn signal lights	21	C
	Back-up lights	16	D
	License plate lights	5	D
Interior	Vanity lights	8	D
	Interior lights (front)/personal lights	5	D
	Interior light (rear)	8	E
	Luggage compartment light	5	D

A: HIR2 halogen bulbs

B: H16 halogen bulbs

C: Wedge base bulbs (amber)

D: Wedge base bulbs (clear)

E: Double end bulbs (clear)

*: If equipped

Fuel information

When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.



EU area:
Your vehicle must use only unleaded gasoline conforming to European standard EN228.

For optimum engine performance, select unleaded gasoline with a Research Octane Number of 91 or higher.

Except EU area:
Your vehicle must use only unleaded gasoline.

For optimum engine performance, select unleaded gasoline with a Research Octane Number of 91 or higher.

Use of ethanol blended gasoline in a gasoline engine

Toyota allows the use of ethanol blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.

If your engine knocks

- Consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

NOTICE

Notice on fuel quality

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use leaded gasoline.
  Leaded gasoline will cause the three-way catalytic converter to lose its effectiveness and the emission control system to function improperly.
- Do not use the methanol blended gasoline such as M15, M85, M100.The use of gasoline containing methanol may cause engine damage or failure.
- For EU area: Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. The use of these fuels will damage the vehicle’s fuel system. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Except for EU area: Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. Your vehicle can use gasoline mixed with 10 % max ethanol. The use of fuel with more than 10 % ethanol content (E10) will damage the vehicle’s fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to your preferences. The settings of these features can be changed by using the steering wheel switches, navigation system or multimedia system, or at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Some function settings are changed simultaneously with other functions being customized. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further details.

Customizing vehicle features

When customizing vehicle features, ensure that the vehicle is parked in a safe place with the shift lever in P and the parking brake set.

Various setting can be changed. Refer to the list of settings that can be changed for details.

■ Changing using the navigation system or multimedia system

1 Press the “SETUP” button on the navigation system or multimedia system.

2 Select “Vehicle” on the screen.

■ Changing using the multi-information display

1 Press 〈 or 〉 of the meter control switch and select ⚙ on the multi-information display.

2 Press ∧ or ∨ of the meter control switch and then press ⊙.

Customizable features

① Vehicles with navigation system or multimedia system: Settings that can be changed using the navigation system or multimedia system

② Settings that can be changed using the multi-information display

③ Settings that can be changed by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer

Definition of symbols: O = Available, — = Not available

■ **Instrument cluster (→P. 116, 124)**

Function	Default setting	Customized setting	①	②	③
Language*1	English	French	—	O	—
		Spanish			
		German			
		Italian			
		Russian			
		Turkish			
Units*1	km (L/100 km)	km (km/L)	O	O	—
		miles (MPG)*2			
EV indicator	On	Off	—	O	—
Pop-up display	On	Off	—	O	—
Accent color	Light blue	Blue	—	O	—
		Orange			
		Yellow			

*1: The default setting varies according to countries.

*2: If equipped

■ **LDA (Lane Departure Alert with steering control) (if equipped) (→P. 374)**

Function	Default setting	Customized setting	①	②	③
Steering Assist	On	Off	—	O	—
Alert sensitivity	Standard	High	—	O	—
Vehicle sway warning	On	Off	—	O	—
Vehicle sway warning sensitivity	Standard	Low	—	O	—
		High			

■ **PCS (Pre-Crash Safety system) (if equipped) (→P. 358)**

Function	Default setting	Customized setting	①	②	③
PCS (Pre-Crash Safety system)	On	Off	—	O	—
Alert timing	 (Middle)	 (Far)	—	O	—
		 (Near)			

■ **Clock (→P. 124)**

Function	Default setting	Customized setting	①	②	③
Switching between 12-hour and 24-hour	24H	12H	—	O	—

■ **Power back door*1 (→P. 191)**

Function	Default setting	Customized setting	①	②	③
Touchless Sensor*1, 2	On	Off	—	O	O
Opening angle	5	1 to 4	—	O	—
		User setting*3			
Operation buzzer volume	3	1	—	O	—
		2			
Operation buzzer*1	When the back door begins to operate: On While the back door is operating: Off	All on	—	—	O
		All off			
		When the back door begins to operate: Off While the back door is operating: On			

*1: If equipped

*2: When the towing hitch is installed, the Touchless Sensor does not work

*3: The open position is set by the power back door switch (→P. 195)

■ **RSA (Road Sign Assist) (if equipped) (→P. 383)**

Function	Default setting	Customized setting	①	②	③
Excess speed notification method	Only visual	No Notification	—	O	—
		Visual and audible*1			
Excess speed notification level	2 km/h (1 mph)	5 km/h (3 mph)	—	O	—
		10 km/h (5 mph)			
Other notifications method*2	Only visual	No Notification	—	O	—
		Visual and audible*1			

*1: If a speed limit with supplemental mark is exceeded, the warning buzzer does not operate.

*2: No-overtaking notification only

■ **Door lock (→P. 186, 627)**

Function	Default setting	Customized setting	①	②	③
Speed linked door locking function	On	Off	O	—	O
Shift position linked door locking function	Off	On	O	—	O
Shift position linked door unlocking function	Off	On	O	—	O
Driver's door linked door unlocking function	On	Off	O	—	O

■ **Smart entry & start system (→P. 134) and wireless remote control (→P. 186, 191, 207)**

Function	Default setting	Customized setting	①	②	③
Operation signal (emergency flashers)	On	Off	O	—	O
Time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked	30 seconds	60 seconds	—	—	O
		120 seconds			
Open door reminder buzzer (When locking the vehicle)	On	Off	—	—	O

■ **Smart entry & start system (→P. 186, 191, 207)**

Function	Default setting	Customized setting	①	②	③
Smart entry & start system	On	Off	O	—	O
Number of consecutive door lock operations*	2 times	As many as desired	—	—	O

*: Except for right-hand drive vehicles

■ **Wireless remote control (→P. 134, 186, 191)**

Function	Default setting	Customized setting	①	②	③
Wireless remote control	On	Off	—	—	O
Opening operation of power back door*	Off	Press and hold	—	—	O
		One short press			
		Press twice			

*: If equipped

■ **Moon roof (if equipped) (→P. 283)**

Function	Default setting	Customized setting	①	②	③
Automatic operation	On	Off	—	—	O

■ **Turn signal lever (→P. 325)**

Function	Default setting	Customized setting	①	②	③
Time of flashing of the lane change signal flashers	3	Off	—	—	O
		4			
		5			
		6			
		7			

■ **Automatic light control system (→P. 327, 332)**

Function	Default setting	Customized setting	①	②	③
Light sensor sensitivity	0	-2 to 2	O	—	O
Automatic High Beam	On	Off	—	—	O
Follow me home (Time elapsed before headlights and tail lights automatically turn off)	30 seconds	60 seconds	—	—	O
		90 seconds			
		120 seconds			

■ **Toyota parking assist-sensor (if equipped) (→P. 404)**

Function	Default setting	Customized setting	①	②	③
Detection distance of the front center sensor	Far	Near	O	—	O
Detection distance of the rear center sensor	Far	Near	O	—	O
Buzzer volume	3	1 to 5	O	—	O
Display setting (when Toyota parking assist-sensor is operating)	All sensors displayed	Display off	O	—	O

■ **Automatic air conditioning system (→P. 444)**

Function	Default setting	Customized setting	①	②	③
Switching between outside air and recirculated air mode linked to “AUTO” switch operation	On	Off	O	—	O
A/C Auto switch operation	On	Off	—	—	O

■ **Illumination (→P. 455)**

Function	Default setting	Customized setting	①	②	③
Interior lights illumination control	On	Off	—	—	O
Time elapsed before the interior lights turn off	15 seconds	Off	O*	—	O
		7.5 seconds			
		30 seconds			
Operation after the power switch is turned off	On	Off	—	—	O
Operation when the doors are unlocked	On	Off	—	—	O
Operation when you approach the vehicle with the electronic key on your person	On	Off	—	—	O
Footwell lights control	On	Off	—	—	O

*: If equipped

■ **Alarm (if equipped) (→P. 108)**

Function	Default setting	Customized setting	①	②	③
Sensitivity adjustment of the intrusion sensor when the window is open	Standard	Low	—	—	O
Deactivates the alarm when the doors are unlocked using the mechanical key	Off	On	—	—	O

■ **Vehicle customization**

- When the speed linked door locking function and shift position linked door locking function are both on, the door lock operates as follows.
  - If the vehicle is started with all the doors locked, the Speed linked door locking function would not operate.
  - If the vehicle is started with any door unlocked, the Speed linked door locking function will operate.
  - When shifting the shift lever to any position other than P, all the doors will be locked.
- When the smart entry & start system is off, the selecting door to unlock cannot be customized.
- When the doors remain closed after unlocking the doors and the automatic door lock function is activated, the signals will be generated in accordance with the operation signal (emergency flashers) settings.

WARNING

■ **During customization**

As the hybrid system needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

NOTICE

■ **During customization**

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.

Items to initialize

The following items must be initialized for normal system operation after such cases as the 12-volt battery being reconnected, or maintenance being performed on the vehicle:

Item	When to initialize	Reference
Power back door (if equipped)	• After reconnecting or changing the 12-volt battery • After changing a fuse	P. 198
Moon roof (if equipped)	• After reconnecting or changing the 12-volt battery • After changing a fuse	P. 284
Tire pressure warning system (if equipped)	• When changing the tire size	P. 516
Toyota parking assist monitor (if equipped)	• After reconnecting or changing the 12-volt battery • After changing a fuse	Refer to “Navigation and multimedia system Owner’s manual”
Panoramic view monitor (if equipped)		

Index

What to do if...
(Troubleshooting) 668
Alphabetical index 672

For vehicles with navigation system or multimedia system, refer to the “Navigation and multimedia system Owner’s manual” for information regarding the equipment listed below.

- Navigation system
- Audio system
- Toyota parking assist monitor
- Panoramic view monitor

What to do if... (Troubleshooting)

If you have a problem, check the following before contacting any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

The doors cannot be locked, unlocked, opened or closed



You lose your keys

- If you lose your mechanical keys, new mechanical keys can be made by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (→P. 135)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately. (→P. 185)



The doors cannot be locked or unlocked

- Is the electronic key battery weak or depleted? (→P. 543)
- Is the power switch in ON mode?
  When locking the doors, turn the power switch off. (→P. 312)
- Is the electronic key left inside the vehicle?
  When locking the doors, make sure that you have the electronic key on your person.
- The function may not operate properly due to the condition of the radio wave. (→P. 209)



The rear door cannot be opened

- Is the child-protector lock set?
  The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P. 189)

If you think something is wrong

The hybrid system does not start

- Did you press the power switch while firmly depressing the brake pedal? (→P. 311)
- Is the shift lever in P? (→P. 311)
- Is the electronic key anywhere detectable inside the vehicle? (→P. 207)
- Is the steering wheel unlocked? (→P. 314)
- Is the electronic key battery weak or depleted?
  In this case, the hybrid system can be started in a temporary way. (→P. 628)
- Is the 12-volt battery discharged? (→P. 630)

The shift lever cannot be shifted from P even if you depress the brake pedal

- Is the power switch in ON mode?
  If you cannot release the shift lever by depressing the brake pedal with the power switch in ON mode: →P. 323

The steering wheel cannot be turned after the hybrid system is stopped

- It is locked automatically to prevent theft of the vehicle. (→P. 314)

The windows do not open or close by operating the power window switches

- Is the window lock switch pressed?
  The power window except for the one at the driver's seat cannot be operated if the window lock switch is pressed. (→P. 280)

The power switch is turned off automatically

- The auto power off function will be operated if the vehicle is left in ACCESSORY or ON mode (the hybrid system is not operating) for a period of time. (→P. 313)

A warning buzzer sounds during driving

- The seat belt reminder light is flashing
  Are the driver and the front passenger wearing the seat belts? (→P. 573)
- The brake system warning light is on
  Is the parking brake released? (→P. 326)

Depending on the situation, other types of warning buzzer may also sound. (→P. 571, 578)

An alarm is activated and the horn sounds (if equipped)

- Did anyone inside the vehicle open a door during setting the alarm?
  The sensor detects it and the alarm sounds. (→P. 108)

To stop the alarm, start the hybrid system.

A warning buzzer sounds when leaving the vehicle

- Is the message displayed on the multi-information display?
  Check the message on the multi-information display. (→P. 578)

A warning light turns on or a warning message is displayed

- When a warning light turns on or a warning message is displayed, refer to P. 571, 578.

When a problem has occurred



If you have a flat tire

- Vehicles with spare tire
  Stop the vehicle in a safe place and replace the flat tire with the spare tire. (→P. 599)
- Vehicles without spare tire
  Stop the vehicle in a safe place and repair the flat tire temporarily with the emergency tire puncture repair kit. (→P. 611)



The vehicle becomes stuck

- Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow. (→P. 640)

Alphabetical index

A

A/C 444
Air conditioning filter 541
Automatic air conditioning system 444
ABS (Anti-lock Brake System) 425
Function 425
Warning light 572
Air conditioning filter 541
Air conditioning system 444
Air conditioning filter 541
Automatic air conditioning system 444
Airbags 41
Airbag manual on-off system 51
Airbag operating conditions 47
Airbag precautions for your child 43
Airbag warning light 572
Correct driving posture 32
Curtain shield airbag operating conditions 47
Curtain shield airbag precautions 45
General airbag precautions 43
Locations of airbags 41
Modification and disposal of airbags 46
Side airbag operating conditions 47
Side airbag precautions 45
Side and curtain shield airbags operating conditions 47
Side and curtain shield airbags precautions 45
SRS airbags 41
Airbag manual on-off system 51
Alarm 108
Alarm 108
Warning buzzer 571
All-wheel drive system 426
Warning messages 587
Anchor brackets 70
Antennas (smart entry & start system) 207
Anti-lock brake system (ABS) 425
Function 425
Warning light 572
Approach warning
Dynamic radar cruise control 395
Armrest 478
Ashtray 476
Assist grips 479
Audio input*
Audio system*
Automatic air conditioning system 444
Air conditioning filter 541
Automatic air conditioning system 444
Automatic headlight leveling system 331
Automatic High Beam 332
Warning message 589
Automatic light control system 330
AUX port*
Auxiliary box 462

B

Back door
Back door ... 191
Jam protection function ... 198
Power back door ... 194
Touchless power back door ... 197
Wireless remote control ... 134
Back-up lights
Replacing light bulbs ... 557
Wattage ... 654
Battery (12-volt battery)
Battery checking ... 509
If the 12-volt battery is discharged ... 630
Preparing and checking before winter ... 435
Warning message ... 590
Battery (traction battery) ... 80
Blind Spot Monitor (BSM) ... 412
**Bluetooth®* **
Bottle holders ... 461
Brake
Emergency brake signal ... 426
Parking brake ... 326
Warning light/ message ... 571, 579
Brake assist ... 425
Break-in tips ... 289
Brightness control
Instrument cluster light control ... 121
BSM (Blind Spot Monitor) ... 412
Blind Spot Monitor function ... 419
Rear Crossing Traffic Alert function ... 422

C

Care ... 486, 490
Aluminum wheels ... 487
Exterior ... 486
Interior ... 490
Radar sensor ... 418
Seat belts ... 491
Cargo hooks ... 463
Catch protection function ... 281
CD player*
Chains ... 435
Child restraint system ... 54
Baby seats, definition ... 55
Baby seats, installation ... 66
Child seats, definition ... 55
Child seats, installation ... 66, 67
Installing CRS with ISOFIX rigid anchors ... 70
Installing CRS with seat belts ... 66
Installing CRS with top strap ... 71
Junior seats, definition ... 55
Junior seats, installation ... 68
Child safety ... 53
12-volt battery precautions ... 512, 633
Airbag precautions ... 43
Back door precautions ... 200
Child restraint system ... 54
How your child should wear the seat belt ... 38
Installing child restraints ... 65
Moon roof precautions ... 285
Power window lock switch ... 280
Power window precautions ... 282
Rear door child-protectors ... 189
Removed key battery precautions ... 544
Seat belt precautions ... 38
Seat heater precautions ... 452

*: Refer to “Navigation and multimedia system Owner’s manual”.

Child-protectors **189**
Cleaning **486, 490**
Aluminum wheels 487
Exterior 486
Interior 490
Radar sensor 418, 590
Seat belts 491
Clock **126**
Coat hooks **478**
Condenser **506**
Console box **459**
Coolant **505**
Capacity 650
Checking 505
Preparing and checking before winter 435
Cooling system
Hybrid system overheating ... 635
Cruise control
Cruise control 400
Dynamic radar cruise control 388
Warning message 585
Cup holders **460**
Curtain shield airbags **41**
Customizable features **657**

D

Daytime running light system **330**
Deck board **474**
Defogger
Outside rear view mirrors 446
Rear window 446
Windshield 446
Dimension **644**
Display
Dynamic radar cruise control 388
Energy monitor/consumption screen 128
LDA (Lane Departure Alert with steering control) 379
Multi-information display 124
Toyota parking assist monitor*
Toyota parking assist-sensor 405
Warning messages 578
Do-it-yourself maintenance **496**
Doors
Back door 191
Door glasses 280
Door lock 186, 191
Open door warning buzzer ... 208
Open door warning message 580
Outside rear view mirrors 277
Rear door child-protectors 189
Side doors 186

Double locking system.....107
Driver's seat belt reminder light.....573
Driver's seat position memory 268
Driving 288
Break-in tips 289
Correct posture 32
Driving in the rain 289
Driving mode select switch.....320
Hybrid vehicle driving tips 432
Procedures.....288
Winter drive tips 435
Driving position memory 268
Dynamic radar cruise control 388
Function 388
Warning message.....585

E

ECB (Electronically Controlled Brake System) 425
Eco drive mode.....320
E-Four 426
Electric Power Steering (EPS).....425
Function 425
Warning light.....572
Electronically Controlled Brake System (ECB).....425
Electronic key 134
Battery-saving function 208
If the electronic key does not operate properly 627
Replacing the battery.....543
Emergency, in case of
If a warning buzzer sounds.....571
If a warning light turns on 571
If a warning message is displayed 578
If the 12-volt battery is discharged.....630
If the electronic key does not operate properly 627
If the hybrid system will not start 625
If you have a flat tire 599, 611
If you lose your keys 135
If you think something is wrong.....570
If your vehicle becomes stuck 640
If your vehicle has to be stopped in an emergency.....563
If your vehicle needs to be towed.....564
If your vehicle overheats.....635
Emergency brake signal 426
Emergency flashers 562
Energy monitor/consumption screen.....128

*: Refer to "Navigation and multimedia system Owner's manual".

Engine
Accessory mode 312
Compartment 501
Engine switch (power switch) 311
Hood 498
How to start the hybrid system 311
Identification number 646
If the hybrid system will not start 625
Ignition switch (power switch) 311
Overheating 635
Power switch 311
Engine coolant 505
Capacity 650
Checking 505
Preparing and checking before winter 435
Engine coolant temperature warning message 584
Engine oil 502
Capacity 648
Checking 502
Oil pressure warning message 587
Preparing and checking before winter 435
Engine switch (power switch) 311
EPS (Electric Power Steering) 425
Function 425
Warning light 572
ERA-GLONASS/EVAK 480
EV drive mode 317
Exhaust gas precautions 75

F

Flat tire 599, 611
Floor mats 30
Fluid
Brake 652
Hybrid transmission 651
Washer 507
Fog lights 336
Replacing light bulbs 554, 557
Switch 336
Wattage 654
Follow me home system 330
Footwell lights 455
Front position lights 327
Light switch 327
Replacing light bulbs 559
Front seats 263
Adjustment 263
Cleaning 490
Correct driving posture 32
Driving position memory 268
Head restraints 270
Seat heaters 453
Front turn signal lights 325
Replacing light bulbs 553
Turn signal lever 325
Wattage 654
Fuel 646
Capacity 646
Fuel gauge 120
Information 655
Refueling 343
Type 646
Warning light 573
Fuel consumption information 128
Fuel filler door 343
Refueling 343
Fuses 546

G

Gauges **120**
Glove box **459**
Grocery bag hooks **463**

H

Hands-free system (for cellular phone)*
Head restraints **270**
Headlights **327**
Follow me home system 330
Light switch 327
Replacing light bulbs 559
Heated steering wheel **453**
Heated Windshield Defroster **447**
Heaters
Automatic air conditioning system 444
Heated steering wheel 453
Heated Windshield Defroster 447
Outside rear view mirrors 446
Seat heaters 453
High mounted stoplight
Replacing 559
Hill-start assist control **425**
Hood **498**
Hooks
Cargo hooks 463
Coat hooks 478
Grocery bag hooks 463
Retaining hooks (floor mat) 30
Horn **273**
Hybrid battery (traction battery)
Location 80
Specification 647
Hybrid battery (traction battery) air vents **81**
Hybrid system **76**
Emergency shut off system 81
Energy monitor/ consumption screen 128
EV drive mode 317
High voltage components 80
Hybrid System Indicator 122
Hybrid system precautions 80
Hybrid vehicle driving tips 432
If the hybrid system will not start 625
Overheating 635
Power (ignition) switch 311
Regenerative braking 78
Starting the hybrid system 311
Hybrid System Indicator **122**
Hybrid transmission **319**
If the shift lever cannot be shifted from P 323

*: Refer to “Navigation and multimedia system Owner’s manual”.

I

Identification 645
Engine 646
Vehicle 645
Ignition switch (power switch) 311
Illuminated entry system 457
Immobilizer system 85
Indicators 116
Initialization
Items to initialize 666
Moon roof 284
Power windows 281
Tire pressure warning system 516
Inside rear view mirror 275
Instrument cluster light control 121
Interior lights 455
Switch 456
Wattage 654

J

Jack
Positioning a floor jack 500
Vehicle-equipped jack 600, 613
Jack handle 600, 604, 613
Jam protection function
Moon roof 284
Power back door opener and closer 198
Power windows 281

K

Keyless entry 134, 207
Smart entry & start system 207
Wireless remote control 134
Keys 134
Battery-saving function 208
Electronic key 134
If the electronic key does not operate properly 627
If you lose your keys 135
Key number plate 134
Keyless entry 134, 207
Keys 134
Power switch 311
Replacing the battery 543
Warning buzzer 208
Wireless remote control key 134

L

Language (multi-information display) 126
LDA (Lane Departure Alert with steering control) 374
Warning messages 583, 585, 588
Lever
Auxiliary catch lever 498
Hood lock release lever 498
Shift lever 319
Turn signal lever 325
Wiper lever 338
License plate lights 327
Light switch 327
Replacing light bulbs 558
Wattage 654

Light
Automatic High Beam system 332
Fog light switch 336
Headlight switch 327
Illuminated entry system 457
Interior lights 456
Interior light list 455
Luggage compartment light 196
Personal lights 456
Replacing light bulbs 550
Turn signal lever 325
Vanity lights 475
Wattage 654
Light bulbs
Replacing 550
Wattage 654
Lock steering column 314

M

Maintenance
Do-it-yourself maintenance 496
Maintenance data 644
Maintenance requirements 493
Malfunction indicator lamp 571
Manual headlight leveling dial 329
Meter 120
Indicators 116
Instrument cluster light control 121
Meters 120
Multi-information display 124
Warning lights 571
Warning messages 578
Mirrors
Inside rear view mirror 275
Outside rear view mirror defoggers 446
Outside rear view mirrors 277
Vanity mirrors 475
Moon roof 283
Jam protection function 284
Operation 283
Warning messages 588
MP3 disc*
Multi-information display 124
Dynamic radar cruise control 388
Energy monitor/consumption screen 128
Language 126
LDA (Lane Departure Alert with steering control) 379
Switching the display 125
Toyota parking assist-sensor 405
Warning messages 578
Multimedia system*

*: Refer to “Navigation and multimedia system Owner’s manual”.

N

Navigation system*

O

Odometer **120**
Oil
Engine oil 648
Opener
Back door 191
Fuel filler door 345
Hood 498
Outside rear view mirrors **277**
Adjusting and folding 277
Blind Spot Monitor 412
Outside rear view mirror defoggers 446
Outside temperature display **120**
Overheating, Engine **635**

P

Panoramic view monitor*
Parking assist sensors (Toyota parking assist-sensor) **404**
Parking brake **326**
Operation 326
Parking brake engaged warning buzzer 571
Parking brake engaged warning message 583
PCS (Pre-Crash Safety system)
Enabling/disabling the system 363
Function 358
Warning light 572
Warning message 587
Personal lights **455**
Switch 456
Wattage 654
Portable ashtray **476**
Power back door opener and closer **191**
Power control unit coolant **505**
Capacity 650
Checking 505
Preparing and checking before winter 435
Power outlet **477**
Power steering (Electric Power Steering system) **425**
Warning light 572
Power switch **311**
Power windows **280**
Catch protection function 281
Jam protection function 281
Operation 280
Window lock switch 280
Pre-Crash Safety system (PCS)
Enabling/disabling the system 363
Function 358
Warning light 572
Warning message 587

R

Radar cruise control (dynamic radar cruise control) **388**
Radiator **506**
Radio*
Radio data system*
RDS*
Rear fog lights **336**
Replacing light bulbs 557
Switch 336

Rear passengers' seat belt reminder light 573
Rear seat..... 265
Adjustment..... 265
Folding down the rear seatbacks 266
Rear turn signal lights..... 325
Replacing light bulbs..... 556
Turn signal lever 325
Wattage..... 654
Rear view mirror
Inside rear view mirror 275
Outside rear view mirrors..... 277
Rear window defogger 446
Rear window wiper 341
Refueling 343
Capacity..... 646
Fuel types 646
Opening the fuel tank cap..... 345
Regenerative braking 78
Replacing
Electronic key battery..... 543
Fuses 546
Light bulbs..... 550
Tires 599, 611
Wireless remote control battery..... 543
Road accident cautions 83
Roof luggage carrier..... 298

S

Seat belt reminder light..... 573
Seat belts..... 34
Adjusting the seat belt 37
Child restraint system installation 65
Cleaning and maintaining the seat belt..... 491
Emergency locking retractor..... 38
How to wear your seat belt 34
How your child should wear the seat belt..... 38
Pregnant women, proper seat belt use..... 39
Reminder light and buzzer.... 573
Seat belt pretensioners..... 37
SRS warning light 572
Seat heaters 452
Seats 263, 265
Adjustment..... 263
Adjustment precautions..... 264
Child seats/child restraint system installation..... 65
Cleaning..... 490
Driving position memory 268
Folding down the rear seatbacks 266
Head restraint 270
Properly sitting in the seat 32
Seat heaters 452

*: Refer to "Navigation and multimedia system Owner's manual".

Sensor
Automatic headlight system 330
Inside rear view mirror 276
LDA (Lane Departure Alert with steering control) 374
Radar sensor 348
Rain-sensing windshield wipers 339
Toyota parking assist-sensor 404
Touchless sensor 197
Service reminder indicators ... 116
Shift lever
Hybrid transmission 319
If the shift lever cannot be shifted from P 323
Shift lock system 322
Shopping bag hooks 463
Side airbags 41
Side mirrors 277
Adjusting and folding 277
Blind Spot Monitor 412
Heaters 446
Side turn signal lights 325
Replacing light bulbs 559
Turn signal lever 325
Smart entry & start system 207
Antenna location 207
Entry functions 186, 191
Starting the hybrid system 311
Warning message 585, 594
Snow tires 437
Spare tire 599
Inflation pressure 653
Storage location 600
Spark plug 650
Specifications 644
Speech command system*
Speedometer 120
Sport mode 320
Steering lock 314
Steering lock system warning message 598
Steering wheel 273
Adjustment 273
Audio switches*
Heated steering wheel 453
Telephone switches*
Stop/tail lights
Replacing light bulbs 559
Storage feature 458
Stuck
If the vehicle becomes stuck 640
Sun visors 475
Sunshade
Roof 284
Switch
Audio remote control switches*
Cruise control switch 400
Door lock switch 188
Driving mode select switch 320
Driving position memory 268
Dynamic radar cruise control switch 388
“ECO MODE” button 320
Emergency flashers switch 562

Engine switch (power switch) 311
EV drive mode switch 317
Fog light switch 336
Heated steering wheel switch..... 453
Heated Windshield Defroster switch..... 447
Ignition switch 311
LDA (Lane Departure Alert with steering control) 378
Light switches 327
Meter control switches 125
Moon roof switches 283
Outside rear view mirror switches..... 277
Power back door opener and closer switch..... 191
Power door lock switch 188
Power switch..... 311
Power window switch..... 280
Rear window wiper and washer switch..... 341
Rear window and outside rear view mirror defoggers switch..... 446
Seat heater switches..... 453
“SPORT” button 320
Talk switch*
Telephone switches*
Tire pressure warning reset switch..... 515
VSC OFF switch 427
Window lock switch..... 280
Windshield wipers and washer switch..... 338

T

Tail lights..... 327
Light switch 327
Replacing light bulbs..... 559
Talk switch*
Telephone switches*
Theft deterrent system
Alarm 108
Double locking system..... 107
Immobilizer system 85
Tire inflation pressure..... 536
Maintenance data 653
Warning light..... 573
Tire pressure warning system..... 515
Function..... 515
Initializing..... 516
Installing tire pressure warning valves and transmitters..... 515
Registering ID codes 517
Tire pressure warning reset switch 515
Warning light..... 573
Tires..... 514
Chains..... 435
Checking..... 514
If you have a flat tire 599, 611
Inflation pressure 653
Replacing..... 599, 611
Rotating tires..... 515
Size..... 653
Snow tires 437
Spare tire 599
Tire pressure warning system..... 515
Warning light..... 573

*: Refer to “Navigation and multimedia system Owner’s manual”.

Tools **600, 613**
Top strap **71**
Touchless power back door **197**
Towing
Emergency towing 566
Towing eyelet 566
Trailer Sway Control 426
Trailer towing 299
Toyota parking assist monitor*
Toyota parking assist-sensor **404**
Toyota Safety Sense **346**
Trailer Sway Control **426**
Trailer towing **299**
Transmission
Hybrid transmission 319
If the shift lever cannot be shifted from P 323
Selecting the driving mode 320
TRC (Traction Control) **425**
Trip meters **120**
Troubleshooting **668**
Turn signal lights **325**
Replacing light bulbs 553, 556, 559
Turn signal lever 325
Wattage 654

U

USB port*
Utility vehicle precautions **439**

V

Vanity lights **475**
Vanity lights 475
Wattage 654
Vanity mirrors **475**
Vehicle identification number **645**
Vehicle Stability Control (VSC) **425**
Voice command system*
VSC (Vehicle Stability Control) **425**

W


Warning buzzers **571**
Brake system 571
Downshifting 322
Key reminder 208, 595
Open back door 580
Open door 580
Open moon roof 284
Seat belt reminder 573
Warning lights **571**
ABS 572
Brake system 571
Charging system 584
Electric power steering 572
Low fuel level 573
Malfunction indicator lamp 571
Open door 580
PCS 358
Seat belt reminder light 573
Slip indicator 572
SRS 572
Tire pressure 573

Warning messages 578
Washer 338
Checking 507
Headlight cleaner 339
Nozzle heaters 339
Preparing and checking before winter 435
Switch 338
Washing and waxing 486
Weights 644
Wheels 538
Replacing wheels 538
Size 653
Window glasses 280
Window lock switch 280
Windows 280
Power windows 280
Rear window defogger 446
Windshield Defroster 447
Windshield wiper de-icer 447
Windshield wipers 338
Rain-sensing windshield wipers 338
Winter driving tips 435
Wireless remote control key 134
Locking/Unlocking 134
Replacing the battery 543
WMA disc*

*: Refer to “Navigation and multimedia system Owner’s manual”.

GAS STATION INFORMATION

Auxiliary catch lever		Fuel filler door
P. 498		P. 345

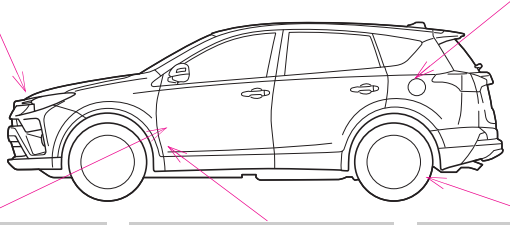

Hood lock release lever	Fuel filler door opener	Tire inflation pressure
P. 498	P. 345	P. 653

Fuel tank capacity (Reference)	56 L (14.8 gal., 12.3 Imp.gal.)
Fuel type	EU area: Unleaded gasoline conforming to European standard EN228 only Except EU area: Unleaded gasoline only P. 646
Cold tire inflation pressure	P. 653
Engine oil capacity (Drain and refill — reference)	L (qt., Imp. qt.) With filter 4.4 (4.6, 3.9) Without filter 4.0 (4.2, 3.5)
Engine oil type	P. 648