	Pictorial index	Search by illustration
1	**For safety and security**	Make sure to read through them
2	**Instrument cluster**	How to read the gauges and meters, the variety of warning lights and indicators, etc.
3	**Operation of each component**	Opening and closing the doors and windows, adjustment before driving, etc.
4	**Driving**	Operations and advices which are necessary for driving
5	**Audio system**	Operating the audio system
6	**Interior features**	Usage of the interior features, etc.
7	**Maintenance and care**	Caring for your vehicle and maintenance procedures
8	**When trouble arises**	What to do in case of malfunction or emergency
9	**Vehicle specifications**	Vehicle specifications, customizable features, etc.
	Index	Search by symptom
		Search alphabetically

For your information 8
Reading this manual.....10
How to search 11
Pictorial index.....12

1 For safety and security

1-1. For safe use
Before driving.....32
For safe driving 34
Seat belts.....36
SRS airbags.....43
Exhaust gas precautions 55

1-2. Child safety
Airbag manual on-off system 56
Riding with children.....59
Child restraint systems 60

1-3. Theft deterrent system
Engine immobilizer system 86
Double locking system.....105

2 Instrument cluster

2. Instrument cluster
Warning lights and indicators..... 108
Gauges and meters (vehicles with monochrome display)..... 115
Gauges and meters (vehicles with color display)..... 118
Multi-information display (vehicles with monochrome display)..... 122
Multi-information display (vehicles with color display)..... 127
Fuel consumption information 137

3 Operation of each component

3-1. Key information
Keys 142

3-2. Opening, closing and locking the doors
Side doors 154
Back door 161
Smart entry & start system 167

3-3. Adjusting the seats
Front seats 200
Rear seats 203
Head restraints 206

3-4. Adjusting the steering wheel and mirrors
Steering wheel 209
Inside rear view mirror 211
Outside rear view mirrors 213

3-5. Opening and closing the windows
Power windows 216

4 Driving

4-1. Before driving
Driving the vehicle 222
Cargo and luggage 233
Trailer towing 235

4-2. Driving procedures
Engine (ignition) switch (vehicles without a smart entry & start system) 245
Engine (ignition) switch (vehicles with a smart entry & start system) 248
Multidrive 257
Manual transmission 265
Turn signal lever 269
Parking brake 270

4-3. Operating the lights and wipers
Headlight switch 271
Fog light switch 276
Windshield wiper and washer 278
Rear window wiper and washer 282

4-4. Refueling
Opening the fuel tank cap 284

4-5. Toyota Safety Sense
Toyota Safety Sense 287
PCS (Pre-Crash Safety system) 295
LDA (Lane Departure Alert).....312
Automatic High Beam 319
RSA (Road Sign Assist).....324

4-6. Using the driving support systems
Cruise control.....330
Speed limiter.....334
Stop & start system.....339
Driving assist systems 350

4-7. Driving tips
Winter driving tips 357

5 **Audio system**

5-1. Basic Operations
Audio system types 362
Steering wheel audio switches 364
AUX port/USB port 365

5-2. Using the audio system
Optimal use of the audio system..... 366

5-3. Using the radio
Radio operation..... 368

5-4. Playing audio CDs and MP3/WMA discs
CD player operation 372

5-5. Using an external device
Listening to an iPod..... 381
Listening to a USB memory device..... 389
Using the AUX port 396

5-6. Using Bluetooth® devices
Bluetooth® audio/phone.....397
Using the steering wheel switches 403
Registering a Bluetooth® device 404
5-7. "SETUP" menu
Using the "SETUP" menu ("Bluetooth*" menu) 405
Using the "SETUP" menu ("Phone" menu) 410
5-8. Bluetooth® Audio
Operating a Bluetooth® enabled portable player.....414
5-9. Bluetooth® Phone
Making a phone call.....417
Receiving a phone call.....419
Speaking on the phone.....420
5-10. Bluetooth®
Bluetooth® 422

6 Interior features

6-1. Using the air conditioning system and defogger
Manual air conditioning system..... 434
Automatic air conditioning system..... 442
Seat heaters..... 452
6-2. Using the interior lights
Interior lights list 454
• Interior light 454
• Personal lights 455
6-3. Using the storage features
List of storage features..... 456
• Glove box..... 457
• Cup holders 458
• Bottle holders..... 459
• Auxiliary box 460
Luggage compartment features 461

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

6-4. Using the other interior features

Other interior features.....464
- Sun visors.....464
- Vanity mirrors 464
- Portable ashtray 466
- Cigarette lighter 467
- Power outlet 468
- Armrest.....469
- Panoramic roof shade ...469
- Assist grips 470

7 Maintenance and care

7-1. Maintenance and care

Cleaning and protecting the vehicle exterior 472

Cleaning and protecting the vehicle interior 476

7-2. Maintenance

Maintenance requirements.....479

7-3. Do-it-yourself maintenance

Do-it-yourself service precautions 482

Hood 485

Positioning a floor jack.....487

Engine compartment 489

Tires 505

Tire inflation pressure..... 525

Wheels 527

Air conditioning filter..... 531

Wireless remote control/ electronic key battery 534

Checking and replacing fuses 538

Light bulbs..... 544

8 When trouble arises

8-1. Essential information

Emergency flashers 566

If your vehicle has to be stopped in an emergency 567

8-2. Steps to take in an emergency

If your vehicle needs to be towed 569

If you think something is wrong 576

Fuel pump shut off system (gasoline engine only)..... 577

If a warning light turns on or a warning buzzer sounds 578
If a warning message is displayed (vehicles with color display) 589
If you have a flat tire (vehicles with an emergency tire puncture repair kit).....594
If you have a flat tire (vehicles with a spare tire) 612
If the engine will not start.....627
If the electronic key does not operate properly (vehicles with a smart entry & start system).....629
If the vehicle battery is discharged 632
If your vehicle overheats....638
If you run out of fuel and the engine stalls (diesel engine only) 643
If the vehicle becomes stuck 645

9 Vehicle specifications

9-1. Specifications
Maintenance data (fuel, oil level, etc.) 648
Fuel information 670
9-2. Customization
Customizable features 673
9-3. Items to initialize
Items to initialize..... 680

Index

What to do if... (Troubleshooting) 682
Alphabetical index..... 686

For vehicles with navigation system or multimedia system, refer to “Navigation and multimedia system Owner’s manual” for information regarding the equipment listed below.

- Navigation system
- Hands-free system (for cellular phone)
- Rear view monitor system
- Audio system

Toyota Motor Europe NV/SA, Avenue du Bourget 60 - 1140 Brussels, Belgium
www.toyota-europe.com

For your information

Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Toyota policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of equipment.

Accessories, spare parts and modification of your Toyota

Both genuine Toyota and a wide variety of other spare parts and accessories for Toyota vehicles are currently available in the market. Should it be determined that any of the genuine Toyota parts or accessories supplied with the vehicle need to be replaced, Toyota recommends that genuine Toyota parts or accessories, be used to replace them. Other parts or accessories of matching quality can also be used. Toyota cannot accept any liability or guarantee spare parts and accessories which are not genuine Toyota products, nor for replacement or installation involving such parts. In addition, damage or performance problems resulting from the use of non-genuine Toyota spare parts or accessories may not be covered under warranty.

Installation of an RF-transmitter system

The installation of an RF-transmitter system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Cruise control system (if equipped)
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system
- Toyota Safety Sense (if equipped)

Be sure to check with any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for precautionary measures or special instructions regarding installation of an RF-transmitter system.

Further information regarding frequency bands, power levels, antenna positions and installation provisions for the installation of RF-transmitters, is available on request at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Scrapping of your Toyota

The SRS airbag and seat belt pretensioner devices in your Toyota contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer before you scrap your vehicle.

⚠ WARNING

■ General precautions while driving

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

■ General precaution regarding children's safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the cigarette lighter, the windows, the panoramic roof shade, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Reading this manual


WARNING:
Explains something that, if not obeyed, could cause death or serious injury to people.

NOTICE:
Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.

1 2 3 ··· Indicates operating or working procedures. Follow the steps in numerical order.


Indicates the action (pushing, turning, etc.) used to operate switches and other devices.

Indicates the outcome of an operation (e.g. a lid opens).

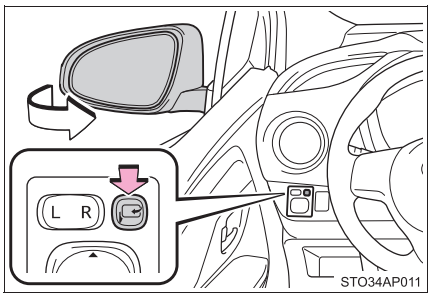

Indicates the component or position being explained.


Means “Do not”, “Do not do this”, or “Do not let this happen”.

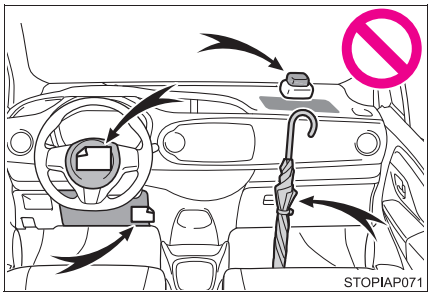

How to search


■ **Searching by name**

• Alphabetical index ..... P. 686

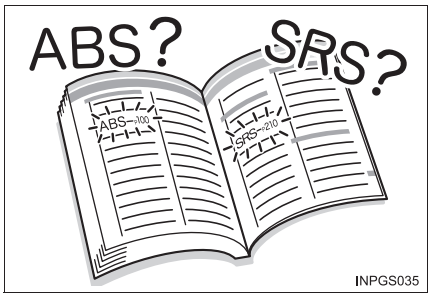

■ **Searching by installation position**

• Pictorial index ..... P. 12

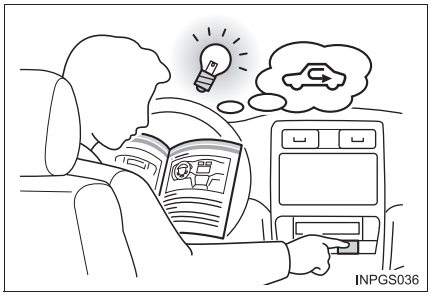


■ **Searching by symptom or sound**

• What to do if... (Troubleshooting) ..... P. 682




■ **Searching by title**

• Table of contents ..... P. 2

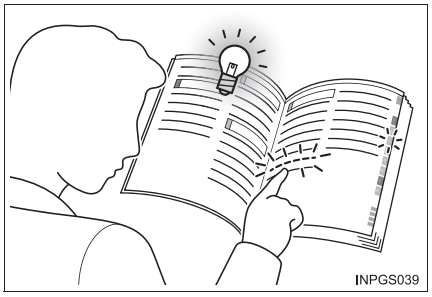

Pictorial index

Exterior

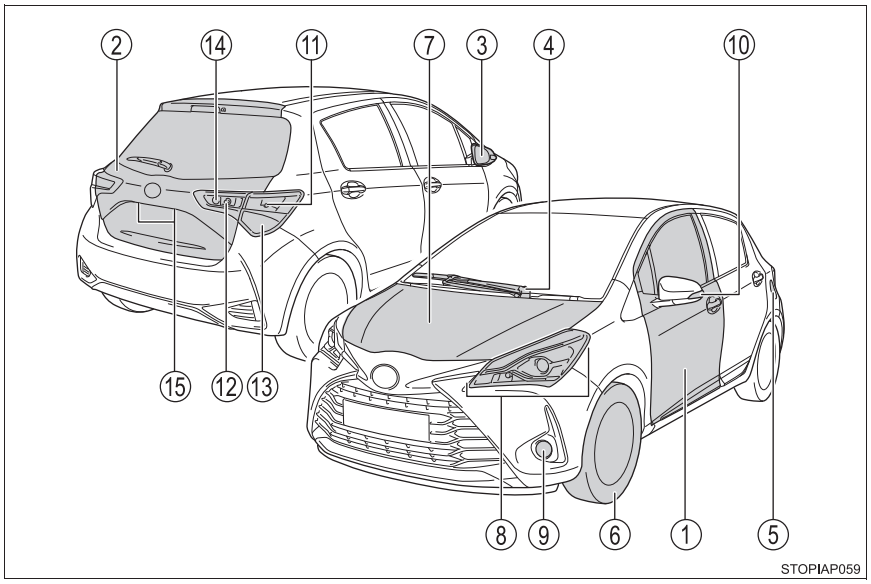

The illustration represents the 5-door models and may differ from the body shape of the 3-door models.

① **Side doors . . . . . P. 154**
Locking/unlocking . . . . . P. 154
Opening/closing the side windows . . . . . P. 216
Locking/unlocking by using the mechanical key*1 . . . . . P. 629
Warning lights*2 . . . . . P. 582

② **Back door . . . . . P. 161**
Locking/unlocking . . . . . P. 161
Warning lights*2 . . . . . P. 582

③ **Outside rear view mirrors . . . . . P. 213**
Adjusting the mirror angle . . . . . P. 213
Folding the mirrors . . . . . P. 214
Defogging the mirrors*3 . . . . . P. 436, 447


④ **Wipers . . . . . P. 278, 282**
Precautions against winter season . . . . . P. 357
Precautions against car wash . . . . . P. 473
⑤ **Fuel filler door . . . . . P. 284**
Refueling method . . . . . P. 284
Fuel type/fuel tank capacity . . . . . P. 654
⑥ **Tires . . . . . P. 505**
Tire size/inflation pressure . . . . . P. 665
Winter tires/tire chain . . . . . P. 359
Checking/rotation/tire pressure warning system*3 . . . . . P. 505
Coping with flat tires . . . . . P. 594, 612
⑦ **Hood . . . . . P. 485**
Opening . . . . . P. 485
Engine oil . . . . . P. 655
Coping with overheat . . . . . P. 638

Light bulbs of the exterior lights for driving
(Replacing method: P. 544, Watts: P. 669)

⑧ **Headlights/front position lights/ daytime running lights . . . . . P. 271**
Front turn signal lights . . . . . P. 269
⑨ **Front fog lights*3 . . . . . P. 276**
⑩ **Side turn signal lights . . . . . P. 269**
⑪ **Rear turn signal lights . . . . . P. 269**
⑫ **Back up lights/tail lights (LED type) . . . . . P. 271**
Shifting the shift lever to R . . . . . P. 257, 265
⑬ **Stop/tail lights . . . . . P. 271**
⑭ **Rear fog light . . . . . P. 276**
⑮ **License plate lights . . . . . P. 271**

*1: Vehicles with a smart entry & start system
*2: Vehicles with monochrome display
*3: If equipped

Instrument panel (Left-hand drive vehicles)

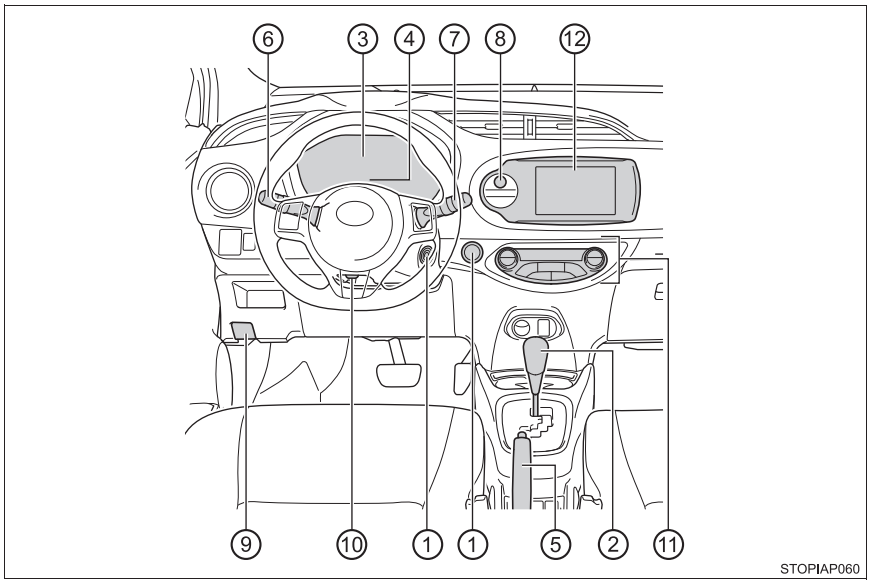

① **Engine switch . . . . . P. 245, 248**
Starting the engine . . . . . P. 245, 248
Changing engine switch positions/modes . . . . . P. 246, 250
Emergency stop of the engine . . . . . P. 567
When the engine will not start . . . . . P. 627
Warning lights*1, 2/warning messages*1, 3 . . . . . P. 587, 589


② **Shift lever . . . . . P. 257, 265**
Changing the shift position . . . . . P. 257, 265
Precautions against towing . . . . . P. 569
When the shift lever does not move*4 . . . . . P. 262

③ **Meters . . . . . P. 115, 118**
Reading the meters . . . . . P. 115, 118
Adjusting the instrument cluster light . . . . . P. 116, 120
Warning lights/indicators . . . . . P. 108
When the warning lights come on . . . . . P. 578


④ **Multi-information display . . . . . P. 122, 127**
If a warning message or indicator is displayed*3 . . . . . P. 578, 589
⑤ **Parking brake . . . . . P. 270**
Applying/releasing . . . . . P. 270
Precautions against winter season . . . . . P. 358
Warning buzzer . . . . . P. 578
⑥ **Turn signal lever . . . . . P. 269**
Headlight switch . . . . . P. 271
Headlights/front position lights/tail lights/
daytime running lights . . . . . P. 271
Front fog lights*5/rear fog light . . . . . P. 276
⑦ **Wiper and washer switch . . . . . P. 278, 282**
Usage (front) . . . . . P. 278
Usage (rear) . . . . . P. 282
Adding washer fluid . . . . . P. 503
⑧ **Emergency flasher switch . . . . . P. 566**
⑨ **Hood lock release lever . . . . . P. 485**
⑩ **Tilt and telescopic steering lock release lever . . . . . P. 209**
⑪ **Air conditioning system . . . . . P. 434, 442**
Usage (manual air conditioning system) . . . . . P. 434
Usage (automatic air conditioning system) . . . . . P. 442
Rear window defogger . . . . . P. 436, 447
⑫ **Audio system*5 . . . . . P. 362**
Navigation/Multimedia system*5, 6

*1: Vehicles with a smart entry & start system
*2: Vehicles with monochrome display
*3: Vehicles with color display
*4: Vehicles with a Multidrive
*5: If equipped
*6: Refer to “Navigation and multimedia system Owner’s manual”.

Switches (Left-hand drive vehicles)

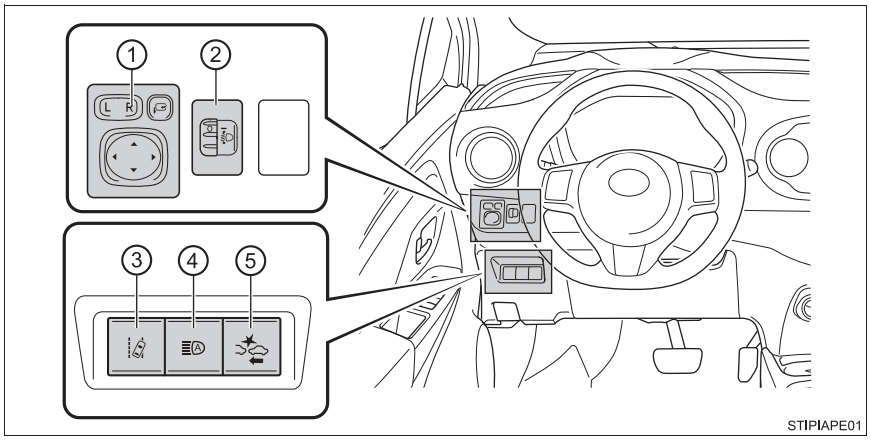


① **Outside rear view mirror switches*** . . . . . **P. 213**
② **Manual headlight leveling dial** . . . . . **P. 273**
③ **LDA (Lane Departure Alert) switch*** . . . . . **P. 313**
④ **Automatic High Beam switch*** . . . . . **P. 319**
⑤ **PCS (Pre-Crash Safety system) switch*** . . . . . **P. 299**

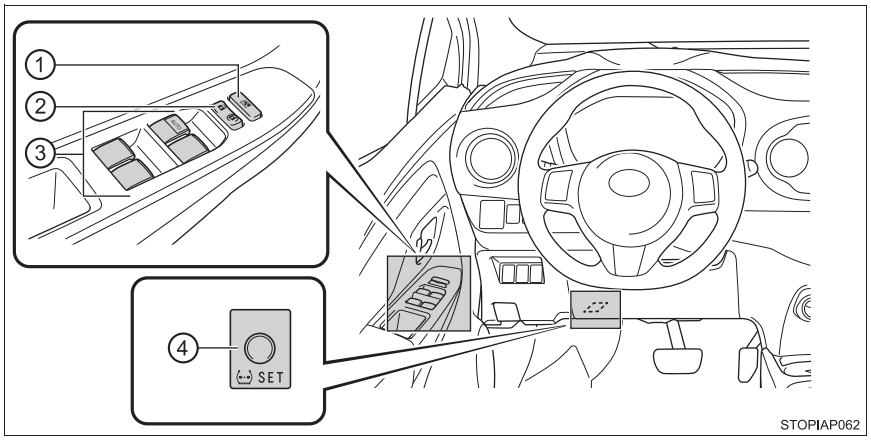


① **Window lock switch** . . . . . **P. 216**
② **Door lock switch** . . . . . **P. 158**
③ **Power window switch** . . . . . **P. 216**
④ **Tire pressure warning reset switch*** . . . . . **P. 508**

*: If equipped

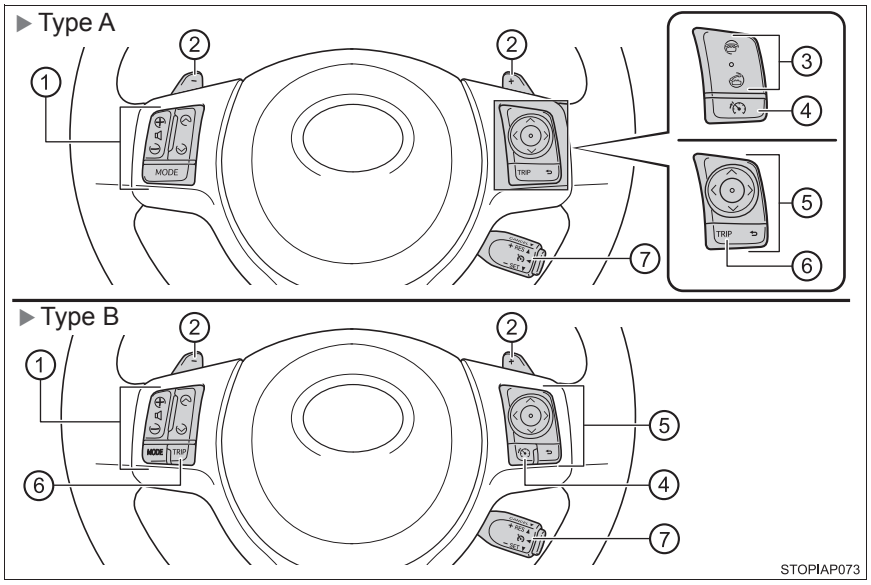


① **Audio remote control switches** . . . . . **P. 364**
② **Paddle shift switches*1** . . . . . **P. 259**
③ **Telephone switch*1, 2** . . . . . **P. 419**
④ **Speed limiter switch*1** . . . . . **P. 334**
⑤ **Meter control switches*1** . . . . . **P. 128**
⑥ **TRIP switch*1** . . . . . **P. 119**
⑦ **Cruise control switch*1** . . . . . **P. 330**

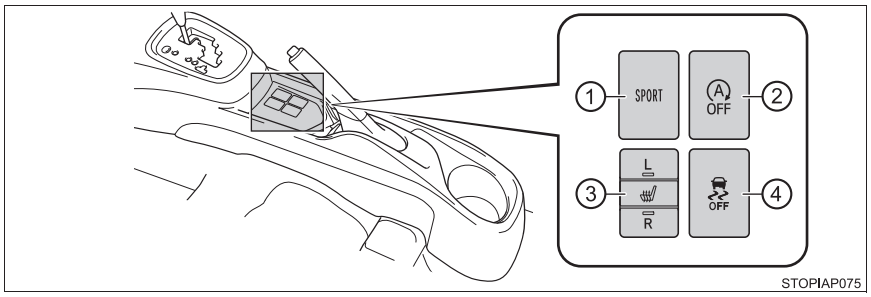


① **“SPORT” switch*1 . . . . . P. 258**
② **Stop & Start cancel switch*1 . . . . . P. 340**
③ **Seat heater switches*1 . . . . . P. 452**
④ **VSC OFF switch*1 . . . . . P. 351**

*1: If equipped
*2: For vehicles with navigation/multimedia system, refer to “Navigation and multimedia system Owner’s manual”.

Interior (Left-hand drive vehicles)

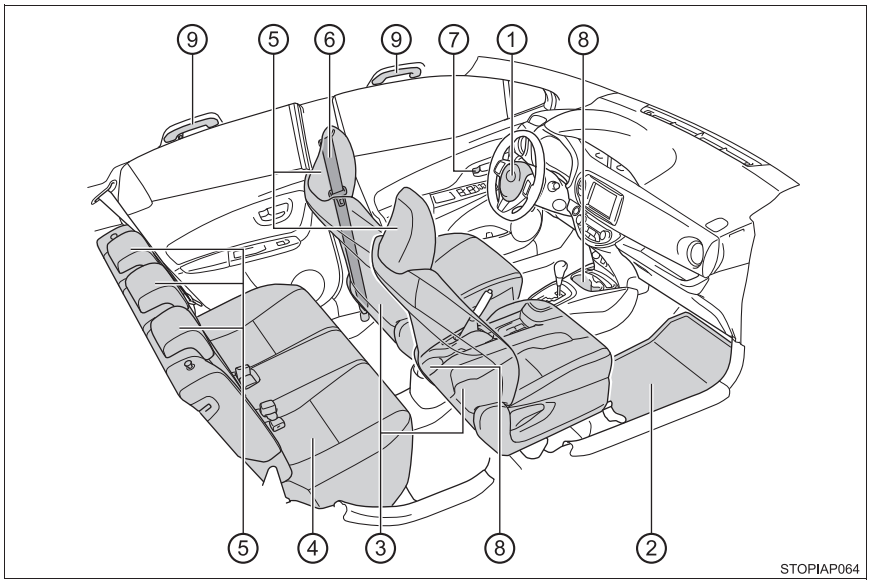

① **SRS airbags** . . . . . **P. 43**
② **Floor mats** . . . . . **P. 32**
③ **Front seats** . . . . . **P. 200**
④ **Rear seats*1** . . . . . **P. 203**
⑤ **Head restraints** . . . . . **P. 206**
⑥ **Seat belts** . . . . . **P. 36**
⑦ **Inside lock buttons** . . . . . **P. 158**
⑧ **Cup holders** . . . . . **P. 458**
⑨ **Assist grips** . . . . . **P. 470**

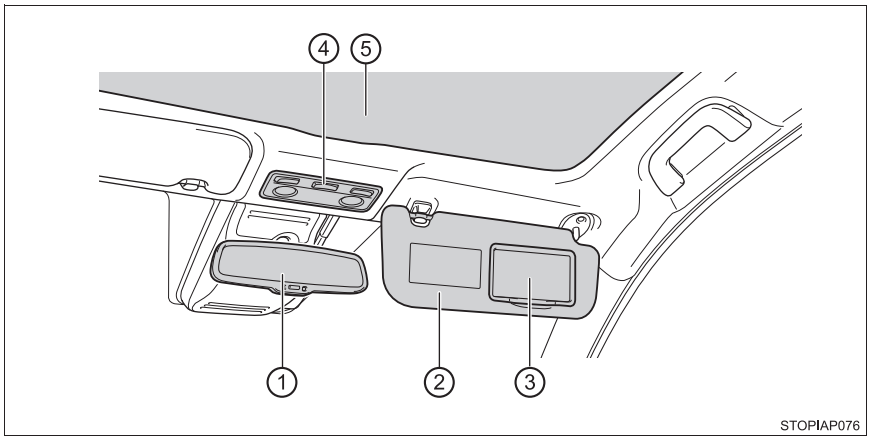


① **Inside rear view mirror** . . . . . **P. 211**
② **Sun visors*2** . . . . . **P. 464**
③ **Vanity mirrors** . . . . . **P. 464**
④ **Interior light/personal lights** . . . . . **P. 454**
⑤ **Panoramic roof shade*1** . . . . . **P. 469**

*1: If equipped

*2: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P. 67)



Instrument panel (Right-hand drive vehicles)

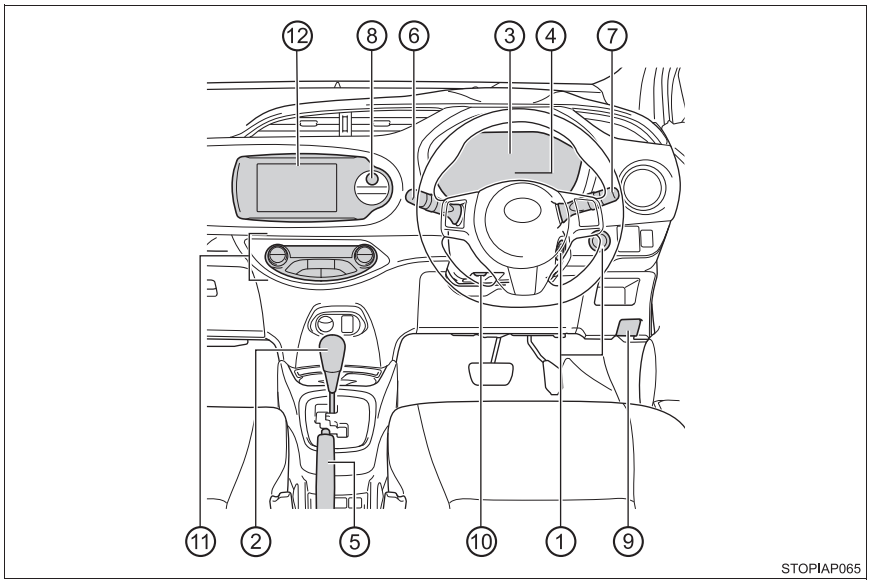

① **Engine switch . . . . . P. 245, 248**
Starting the engine . . . . . P. 245, 248
Changing engine switch positions/modes . . . . . P. 246, 250
Emergency stop of the engine . . . . . P. 567
When the engine will not start . . . . . P. 627
Warning lights*1, 2/warning messages*1, 3 . . . . . P. 587, 589


② **Shift lever . . . . . P. 257, 265**
Changing the shift position . . . . . P. 257, 265
Precautions against towing . . . . . P. 569
When the shift lever does not move*4 . . . . . P. 262

③ **Meters . . . . . P. 115, 118**
Reading the meters/
adjusting the instrument cluster light . . . . . P. 115, 118
Warning lights/indicators . . . . . P. 108
When the warning lights come on . . . . . P. 578


④ **Multi-information display . . . . . P. 122, 127**
If a warning message or indicator is displayed*3 . . . . . P. 578, 589
⑤ **Parking brake . . . . . P. 270**
Applying/releasing . . . . . P. 270
Precautions against winter season . . . . . P. 358
Warning buzzer . . . . . P. 578
⑥ **Turn signal lever . . . . . P. 269**
Headlight switch . . . . . P. 271
Headlights/front position lights/tail lights/
daytime running lights . . . . . P. 271
Front fog lights*5/rear fog light . . . . . P. 276
⑦ **Wiper and washer switch . . . . . P. 278, 282**
Usage (front) . . . . . P. 278
Usage (rear) . . . . . P. 282
Adding washer fluid . . . . . P. 503
⑧ **Emergency flasher switch . . . . . P. 566**
⑨ **Hood lock release lever . . . . . P. 485**
⑩ **Tilt and telescopic steering lock release lever . . . . . P. 209**
⑪ **Air conditioning system . . . . . P. 434, 442**
Usage (manual air conditioning system) . . . . . P. 434
Usage (automatic air conditioning system) . . . . . P. 442
Rear window defogger . . . . . P. 436, 447
⑫ **Audio system*5 . . . . . P. 362**
Navigation/Multimedia system*5, 6

*1: Vehicles with a smart entry & start system
*2: Vehicles with monochrome display
*3: Vehicles with color display
*4: Vehicles with a Multidrive
*5: If equipped
*6: Refer to “Navigation and multimedia system Owner’s manual”.

Switches (Right-hand drive vehicles)

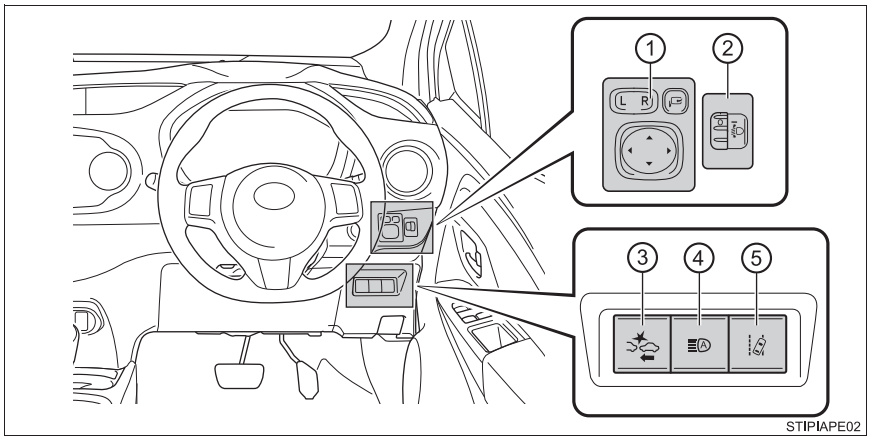


① **Outside rear view mirror switches*** . . . . . **P. 213**
② **Manual headlight leveling dial** . . . . . **P. 273**
③ **PCS (Pre-Crash Safety system) switch*** . . . . . **P. 299**
④ **Automatic High Beam switch*** . . . . . **P. 319**
⑤ **LDA (Lane Departure Alert) switch*** . . . . . **P. 313**

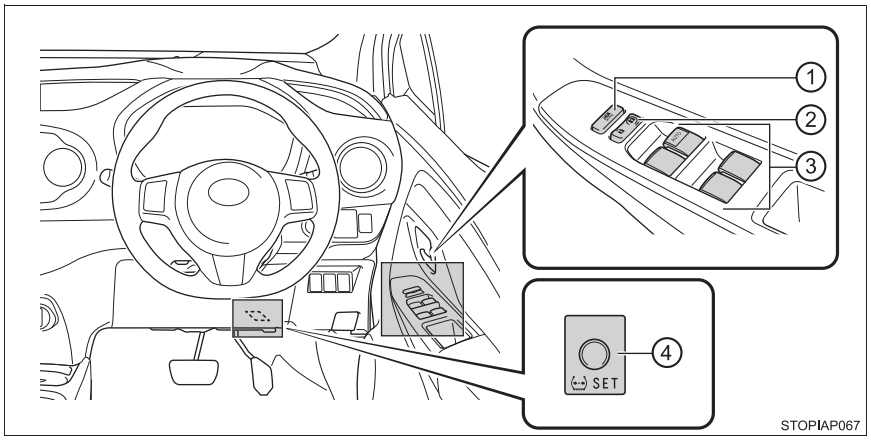


① **Window lock switch** . . . . . **P. 216**
② **Door lock switch** . . . . . **P. 158**
③ **Power window switches** . . . . . **P. 216**
④ **Tire pressure warning reset switch*** . . . . . **P. 508**

*: If equipped

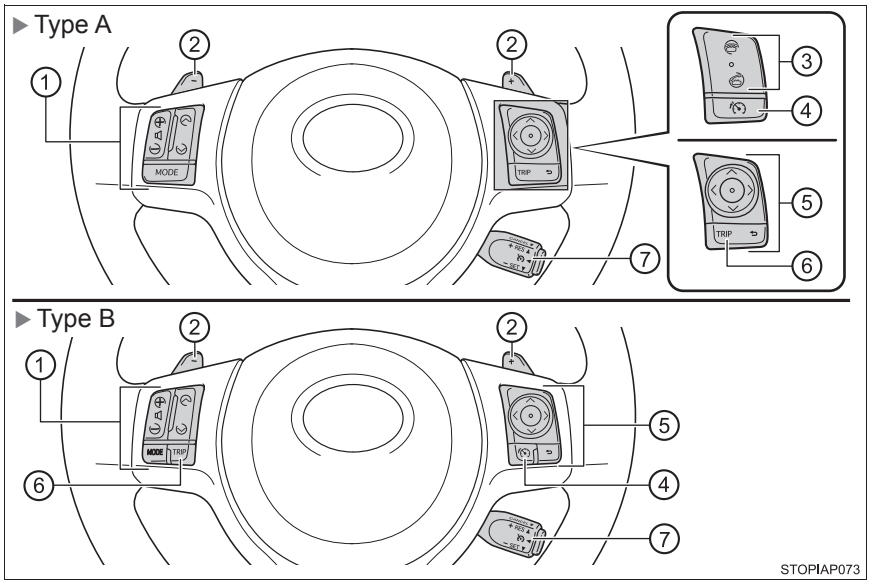


① **Audio remote control switches** . . . . . **P. 364**
② **Paddle shift switches*1** . . . . . **P. 259**
③ **Telephone switch*1, 2** . . . . . **P. 403**
④ **Speed limiter switch*1** . . . . . **P. 334**
⑤ **Meter control switches*1** . . . . . **P. 128**
⑥ **TRIP switch*1** . . . . . **P. 119**
⑦ **Cruise control switch*1** . . . . . **P. 330**

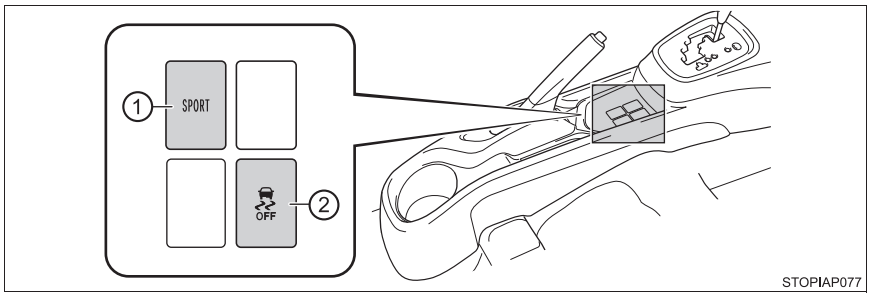


① **“SPORT” switch*1 . . . . . P. 258**
② **VSC OFF switch*1 . . . . . P. 351**

*1: If equipped
*2: For vehicles with navigation/multimedia system, refer to “Navigation and multimedia system Owner’s manual”.

Interior (Right-hand drive vehicles)

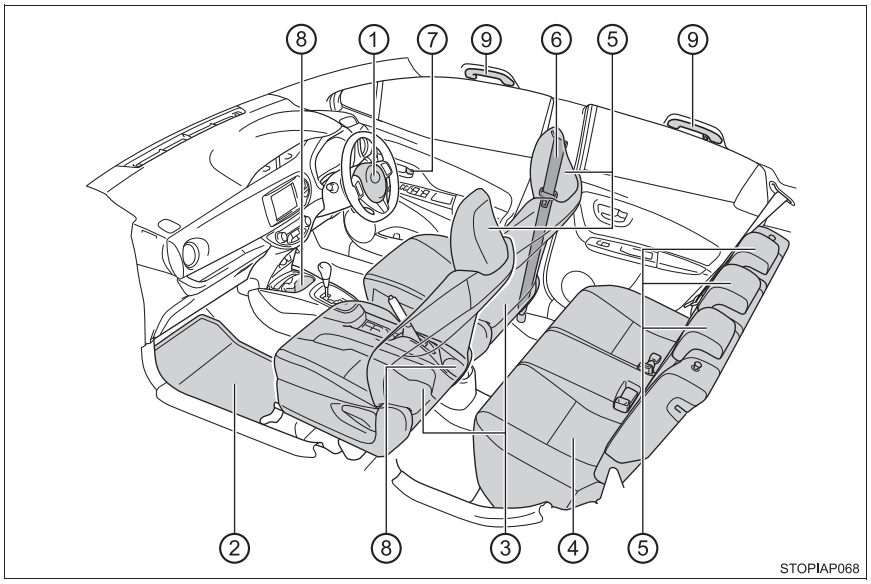

① **SRS airbags** . . . . . **P. 43**
② **Floor mats** . . . . . **P. 32**
③ **Front seats** . . . . . **P. 200**
④ **Rear seats**[*1] . . . . . **P. 203**
⑤ **Head restraints** . . . . . **P. 206**
⑥ **Seat belts** . . . . . **P. 36**
⑦ **Inside lock buttons** . . . . . **P. 158**
⑧ **Cup holders** . . . . . **P. 458**
⑨ **Assist grips** . . . . . **P. 470**

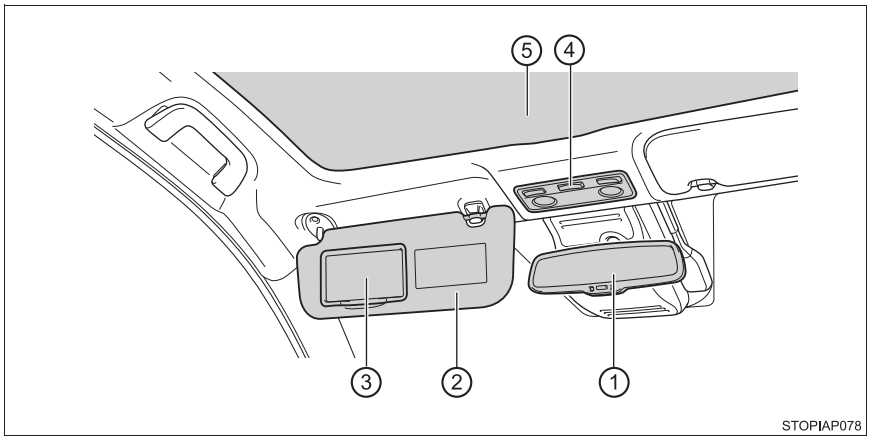

① **Inside rear view mirror** . . . . . **P. 211**
② **Sun visors*2** . . . . . **P. 464**
③ **Vanity mirrors** . . . . . **P. 464**
④ **Interior light/personal lights** . . . . . **P. 454**
⑤ **Panoramic roof shade*1** . . . . . **P. 469**

*1: If equipped

*2: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P. 67)



For safety and security 1

1-1. For safe use
Before driving.....32
For safe driving.....34
Seat belts.....36
SRS airbags.....43
Exhaust gas precautions 55

1-2. Child safety
Airbag manual on-off system 56
Riding with children.....59
Child restraint systems 60


1-3. Theft deterrent system
Engine immobilizer system 86
Double locking system.....105

Before driving

Floor mat


Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

1 Insert the retaining hooks (clips) into the floor mat eyelets.

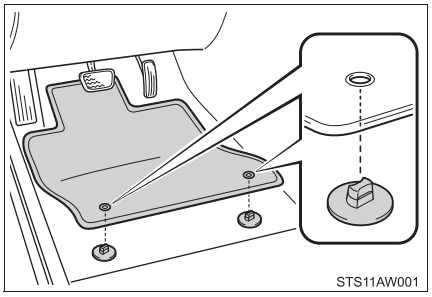

2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the △ marks.

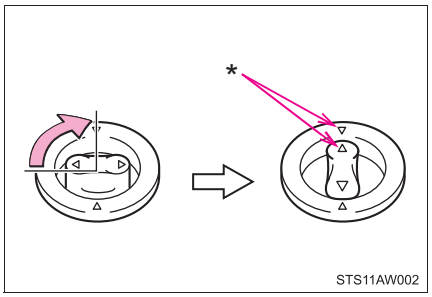

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

WARNING


Observe the following precautions.
Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle. This could lead to an accident, resulting in death or serious injury.

■ When installing the driver's floor mat

- Do not use floor mats designed for other models or different model year vehicles, even if they are Toyota Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

■ Before driving


- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.
- With the engine stopped and the shift lever in P (Multidrive) or N (manual transmission), fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

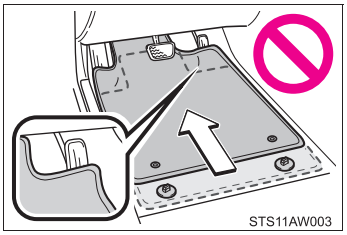
STS11AW003

For safe driving

For safe driving, adjust the seat and mirror to an appropriate position before driving.

Correct driving posture

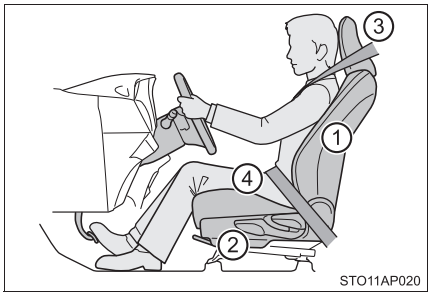

① Adjust the angle of the seatback so that you are sitting straight up and so that you do not have to lean forward to steer. (→P. 200)

② Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P. 200, 209)

③ Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P. 206)

④ Wear the seat belt correctly. (→P. 36)

Correct use of the seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle. (→P. 36)

Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 60)

Adjusting the mirrors

Make sure that you can see the rear of the vehicle clearly, by adjusting the inside and outside rear view mirrors properly. (→P. 211, 213)

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.


- Do not adjust the position of the driver's seat while driving.
  Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback.
  A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.
- Do not place anything under the front seats.
  Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- Always observe the legal speed limit when driving on public roads.
- When driving over long distances, take regular breaks before you start to feel tired.
  Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

Seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle.

Correct use of the seat belts


- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seat-back. Sit up straight and well back in the seat.
- Do not twist the seat belt.

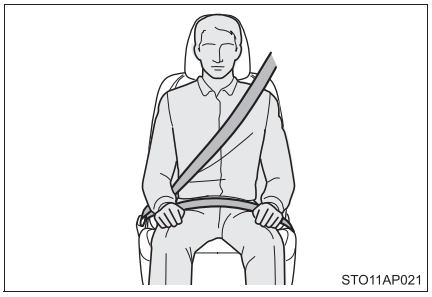

Fastening and releasing the seat belt


① To fasten the seat belt, push the plate into the buckle until a click sound is heard.

② To release the seat belt, press the release button.

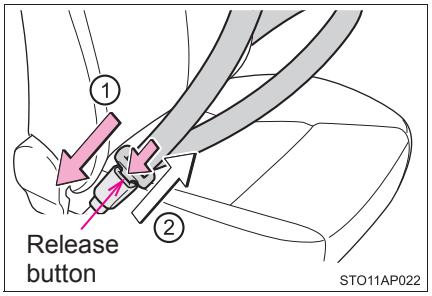

Fastening the rear center seat belt


1 Take out the plates, and then pull the seat belt.

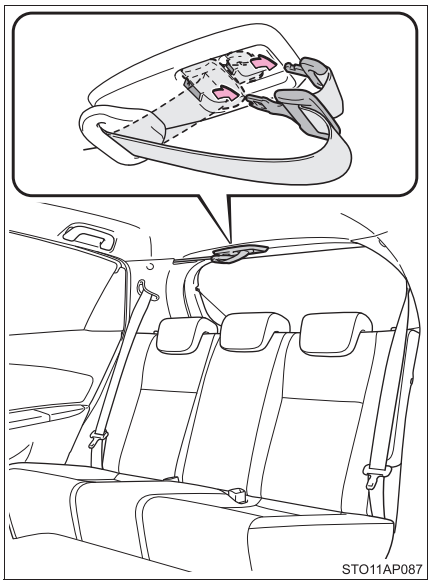

2 Push the plate into the buckle in the order of plate “A” and plate “B” until a clicking sound is heard.


① Plate “A”, buckle “A”

② Plate “B”, buckle “B”

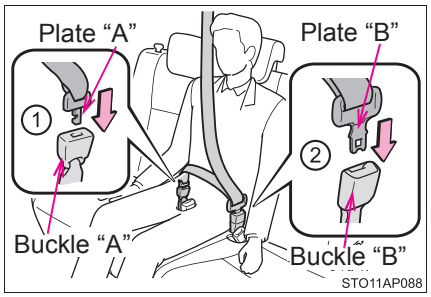


Releasing and stowing the rear center seat belt

1 To release the hooked plate “B”, push the buckle release button.

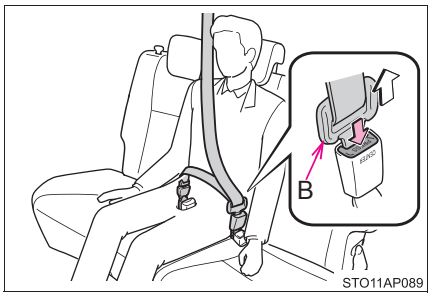


2 To release the hooked plate “A”, insert the plate “B” or the key or the mechanical key (→P. 144) into the hole on the buckle.


When releasing the seat belt, retract it slowly.

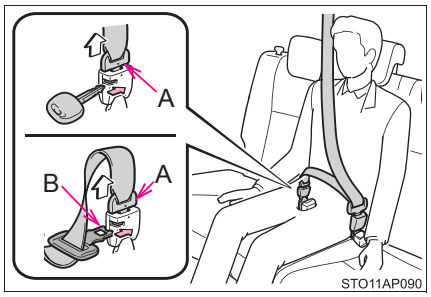

3 Stow the plates as shown in the illustration.

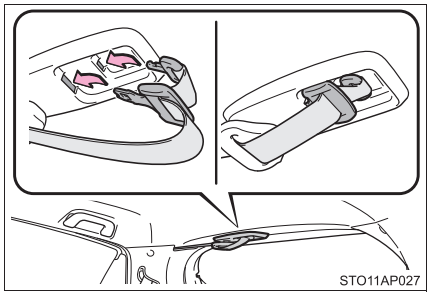


4 Stow the rear seat belt buckle in the pocket.

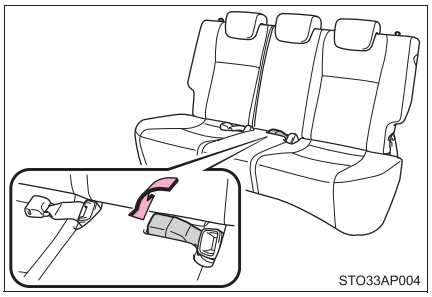


Seat belt pretensioners

▶ Vehicles without rear seats

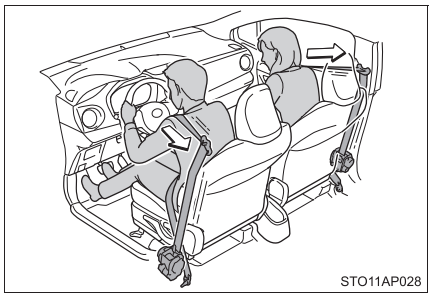

▶ Vehicles with rear seats

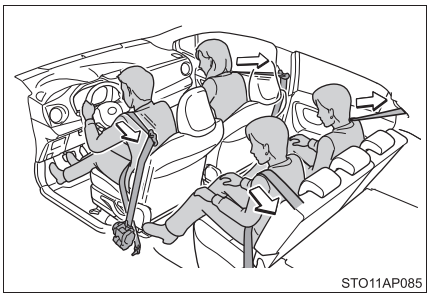

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal or side collision.

The pretensioners do not activate in the event of a minor frontal impact, a minor side impact, a rear impact or a vehicle rollover.

■ Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

■ Child seat belt usage

The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 60)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions regarding seat belt usage. (→P. 36)

■ Having the belt replaced after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

■ Seat belt regulations

If seat belt regulations exist in the country where you reside, please contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for seat belt replacement or installation.

WARNING

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.
Failure to do so may cause death or serious injury.

■ Wearing a seat belt


- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Toyota recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

■ Pregnant women

Obtain medical advice and wear the seat belt in the proper way. (→P. 36)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

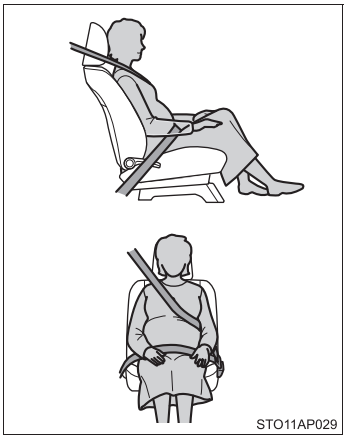
STO11AP029

WARNING

■ **People suffering illness**

Obtain medical advice and wear the seat belt in the proper way. (→P. 36)

■ **When children are in the vehicle**

→P. 76

■ **Seat belt pretensioners**

If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Seat belt damage and wear**


- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Inappropriate handling may lead to incorrect operation.

WARNING

■ **When using the rear center seat belt**

● Do not use the rear center seat belt with either buckle released.


Fastening only one of the buckles may result in death or serious injury in case of sudden braking or a collision.

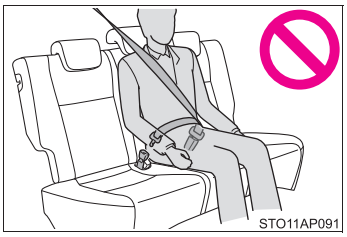

● Do not allow anyone sit on the rear center seat if the rear right seat is folded down, as the seat belt buckle for the rear center seat belt is then concealed under the folded seat and cannot be used.

SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

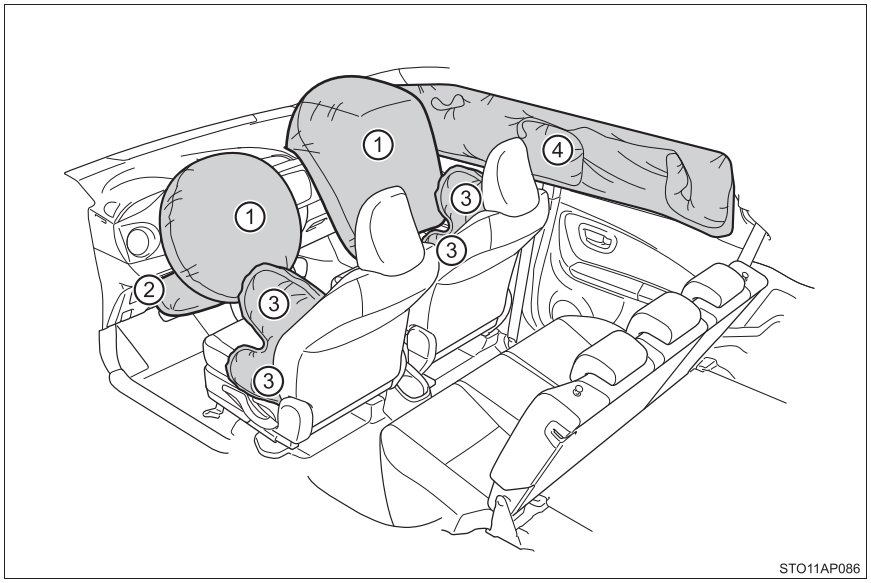

◆ SRS front airbags

① SRS driver airbag/front passenger airbag
Can help protect the head and chest of the driver and front passenger from impact with interior components


② SRS driver knee airbag (if equipped)
Can help provide driver protection

◆ SRS side and curtain shield airbags

③ SRS side airbags
Can help protect the torso of the front seat occupants

④ SRS curtain shield airbags (if equipped)
Can help protect primarily the head of occupants in the outer seats

SRS airbag system components

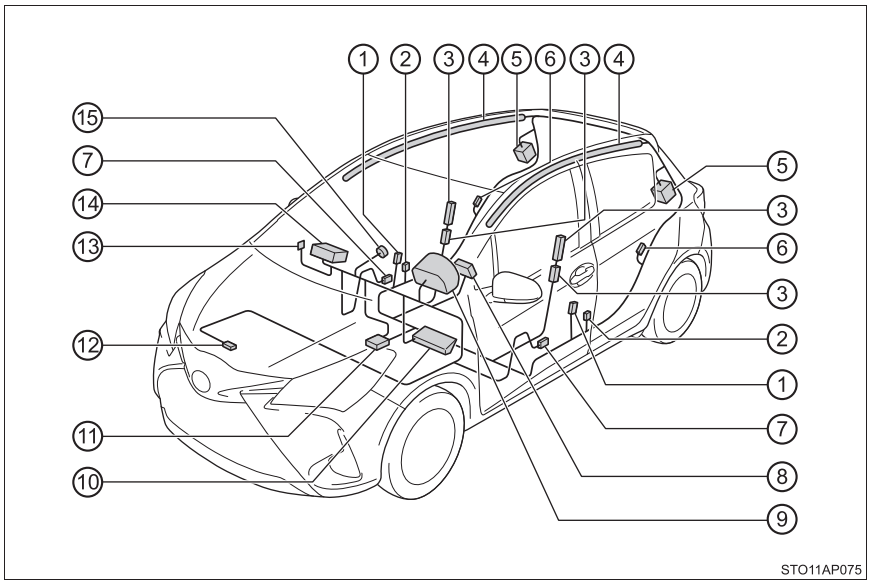

① Seat belt pretensioners and force limiters (front seats)
② Side impact sensors (front)
③ Side airbags
④ Curtain shield airbags*
⑤ Seat belt pretensioners and force limiters (rear outboard seats)*
⑥ Side impact sensors (rear)*
⑦ Side impact sensors (front door)*
⑧ Driver airbag
⑨ SRS warning light
⑩ Driver knee airbag*
⑪ Airbag sensor assembly
⑫ Front impact sensor
⑬ Airbag manual on-off switch
⑭ Front passenger airbag
⑮ “PASSENGER AIR BAG” indicator

*: If equipped

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

⚠ WARNING

■ SRS airbag precautions

Observe the following precautions regarding the SRS airbags.
Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly.
  The SRS airbags are supplemental devices to be used with the seat belts.
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag.

  Since the risk zone for the driver's airbag is the first 50 - 75 mm (2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:


  • Move your seat to the rear as far as you can while still reaching the pedals comfortably.
  • Slightly recline the back of the seat. Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
  • If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

  The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.


WARNING

■ **SRS airbag precautions**

- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Toyota strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P. 60)
- Do not sit on the edge of the seat or lean against the dashboard.

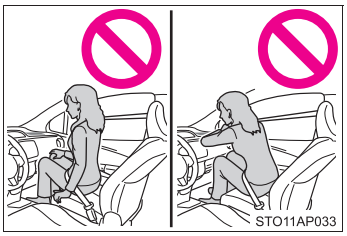

- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not allow the front seat occupants to hold items on their knees.

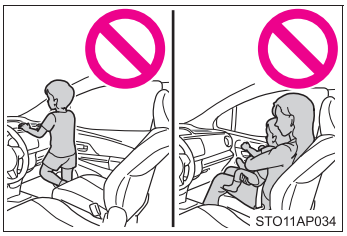


WARNING

■ SRS airbag precautions


- Vehicles without SRS curtain shield airbags: Do not lean against the front door.
- Vehicles with SRS curtain shield airbags: Do not lean against the door, the roof side rail or the front, side and rear pillars.



- Do not allow anyone to kneel on the passenger seat toward the door or put their head or hands outside the vehicle.

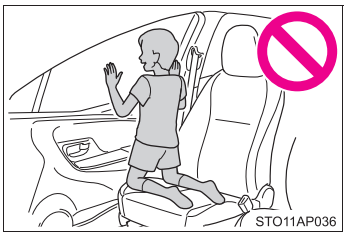


- Vehicles without an SRS driver knee airbag: Do not attach anything to or lean anything against areas such as the dashboard or steering wheel pad.
  These items can become projectiles when the SRS driver and front passenger airbags deploy.
- Vehicles with an SRS driver knee airbag: Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the instrument panel.
  These items can become projectiles when the SRS driver, front passenger and driver knee airbags deploy.

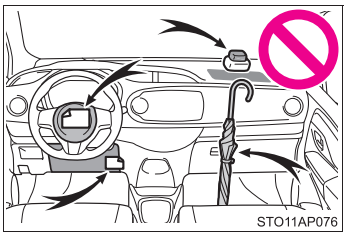


WARNING

■ **SRS airbag precautions**

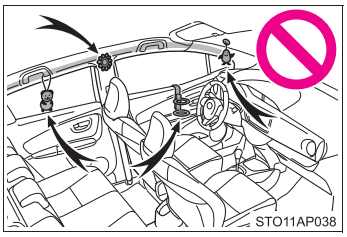

- Vehicles without SRS curtain shield airbags: Do not attach anything to areas such as a door, windshield and side window.
- Vehicles with SRS curtain shield airbags: Do not attach anything to areas such as a door, windshield, side window, front or rear pillar, roof side rail and assist grip. (Except for the speed limit label →P. 600)

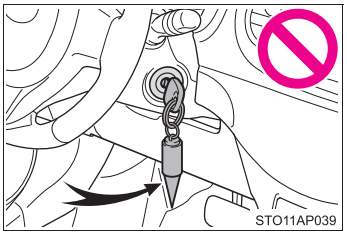

- Vehicles without a smart entry & start system and with SRS driver's knee airbag: Do not attach any heavy, sharp or hard objects such as keys and accessories to the key. The objects may restrict the SRS driver knee airbag inflation or be thrust into the driver's seat area by the force of the deploying airbag, thus causing a danger.
- Vehicles with SRS curtain shield airbags: Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- Vehicles with an SRS driver knee airbag: If a vinyl cover is put on the area where the SRS driver knee airbag will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the airbags. Such accessories may prevent the side airbags from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.

WARNING

■ **SRS airbag precautions**

- Do not strike or apply significant levels of force to the area of the SRS airbag components.
  Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- Vehicles without SRS curtain shield airbags: If the areas where the SRS airbags are stored, such as the steering wheel pad, are damaged or cracked, have them replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Vehicles with SRS curtain shield airbags: If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Modification and disposal of SRS airbag system components**

Do not dispose of your vehicle or perform any of the following modifications without consulting any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars or roof side rails
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows, winches
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as mobile two-way radios (RF-transmitter) and CD players

■ **If the SRS airbags deploy (inflate)**

- Slight abrasions, burns, bruising, etc., may be sustained from SRS airbags, due to the extremely high speed deployment (inflation) by hot gases.
- A loud noise and white powder will be emitted.
- Vehicles without SRS curtain shield airbags: Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats may be hot for several minutes. The airbag itself may also be hot.
- Vehicles with SRS curtain shield airbags: Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats, parts of the front and rear pillars, and roof side rails, may be hot for several minutes. The airbag itself may also be hot.
- The windshield may crack.

■ **SRS airbag deployment conditions (SRS front airbags)**

- The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 20 - 30 km/h [12 - 18 mph] frontal collision with a fixed wall that does not move or deform).

  However, this threshold velocity will be considerably higher in the following situations:

  • If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
  • If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle “underrides”, or goes under, the bed of a truck
- Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.


■ **SRS airbag deployment conditions (SRS side airbags and SRS curtain shield airbags [if equipped])**

- The SRS side airbags and SRS curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 20 - 30 km/h [12 - 18 mph]).
- The SRS curtain shield airbags may also deploy in the event of a severe frontal collision.

■ **Conditions under which the SRS airbags may deploy (inflate), other than a collision**

The SRS front airbags and SRS curtain shield airbags (if equipped) may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.


- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

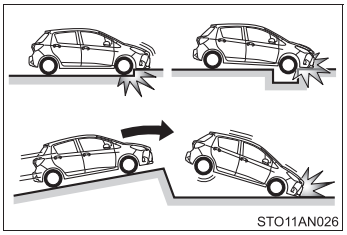
STO11AN026

■ **Types of collisions that may not deploy the SRS airbags (SRS front airbags)**

The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.


- Collision from the side
- Collision from the rear
- Vehicle rollover

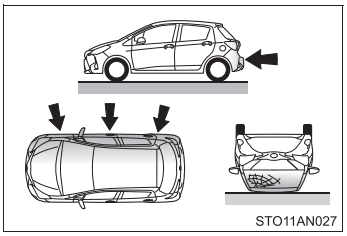
STO11AN027

■ **Types of collisions that may not deploy the SRS airbags (SRS side airbags and SRS curtain shield airbags [if equipped])**


The SRS side airbags and SRS curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

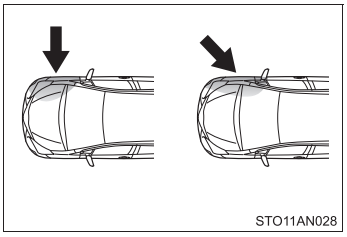
STO11AN028


The SRS side airbags do not generally inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

- Collision from the front
- Collision from the rear
- Vehicle rollover

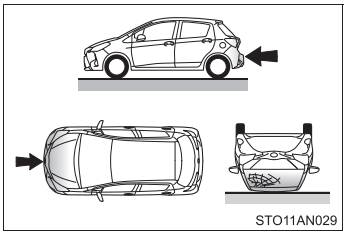
STO11AN029

The SRS curtain shield airbags do not generally inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed side or low-speed frontal collision.


- Collision from the rear
- Vehicle rollover

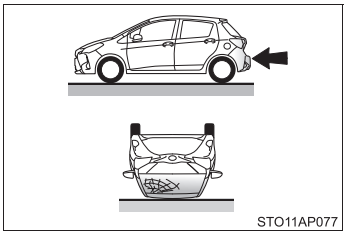
STO11AP077


■ **When to contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer**

In the following cases, the vehicle will require inspection and/or repair. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.


- Any of the SRS airbags have been inflated.
- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.

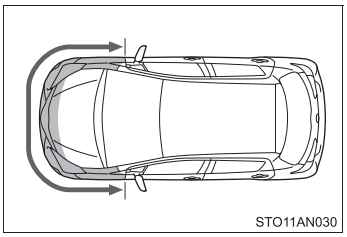
STO11AN030


- A portion of a door or its surrounding area is damaged or deformed, or the vehicle was involved in an accident that was not severe enough to cause the SRS side airbags and SRS curtain shield airbags (if equipped) to inflate.

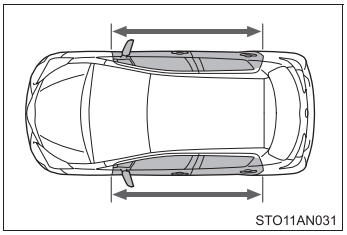
STO11AN031


- Vehicles without an SRS driver knee airbag: The pad section of the steering wheel or dashboard near the front passenger airbag is scratched, cracked, or otherwise damaged.
- Vehicles with an SRS driver knee airbag: The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.

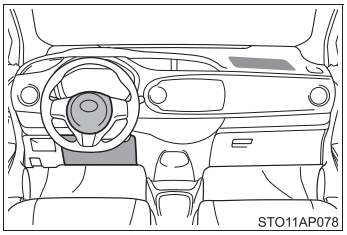
STO11AP078

- The surface of the seats with the side airbag is scratched, cracked, or otherwise damaged.

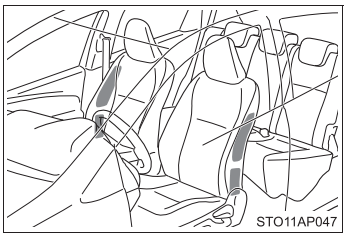

- Vehicles with SRS curtain shield airbags: The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the curtain shield airbags inside is scratched, cracked, or otherwise damaged.

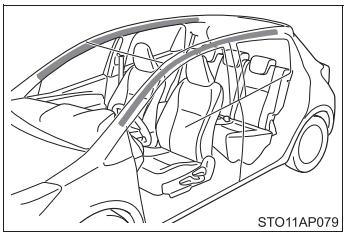

Exhaust gas precautions

Harmful substance to the human body is included in exhaust gases if inhale.

WARNING

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.
Failure to do so may cause exhaust gases enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard.

■ **Important points while driving**

- Keep the back door closed.
- If you smell exhaust gases in the vehicle even when the back door is closed, open the windows and have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

■ **When parking**

- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the engine.
- Do not leave the vehicle with the engine running for a long time.
  If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.
- Do not leave the engine running in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the vehicle.

■ **Exhaust pipe**

The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Airbag manual on-off system

This system deactivates the front passenger airbag.
Only deactivate the airbags when using a child restraint system on the front passenger seat.

① “PASSENGER AIR BAG” indicator


- Vehicles without a smart entry & start system

  The “ON” indicator light turns on when the airbag system is on (only when the engine switch is in the “ON” position).


- Vehicles with a smart entry & start system

  The “ON” indicator light turns on when the airbag system is on (only when the engine switch is in IGNITION ON mode).

② Airbag manual on-off switch

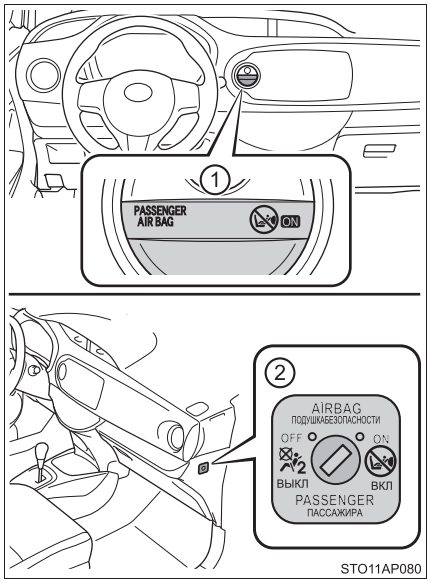

Deactivating the airbags for the front passenger

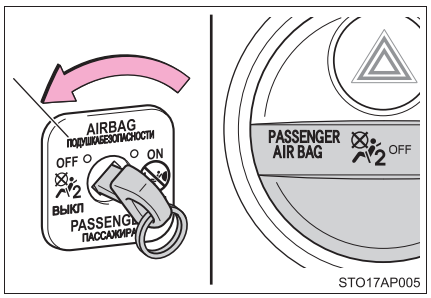

- Vehicles without a smart entry & start system

  Insert the key into the cylinder and turn to the “OFF” position.

  The “OFF” indicator light turns on (only when the engine switch is in the “ON” position).

- Vehicles with a smart entry & start system

  Insert the mechanical key into the cylinder and rotate to the “OFF” position.

  The “OFF” indicator light turns on (only when the engine switch is in IGNITION ON mode).

“PASSENGER AIR BAG” indicator information

If any of the following problems occur, it is possible that there is a malfunction in the system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- Neither “ON” nor “OFF” comes on.
- The indicator light does not change when the airbag manual on-off switch is switched to “ON” or “OFF”.

WARNING

■ **When installing a child restraint system**

For safety reasons, always install a child restraint system in a rear seat. In the event that the rear seat cannot be used, the front seat can be used as long as the airbag manual on-off system is set to “OFF”.
If the airbag manual on-off system is left on, the strong impact of the airbag deployment (inflation) may cause serious injury or even death.

■ **When a child restraint system is not installed on the front passenger seat**

Ensure that the airbag manual on-off system is set to “ON”.
If it is left off, the airbag may not deploy in the event of an accident, which may result in serious injury or even death.

Riding with children

Observe the following precautions when children are in the vehicle.
Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch etc.
- Use the rear door child-protector lock or the window lock switch to avoid children opening the door while driving or operating the power window accidentally. (→P. 159, 216)
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, back door, seats etc.

⚠ WARNING

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Child restraint systems

Before installing a child restraint system in the vehicle, there are precautions that need to be observed, different types of child restraint systems, as well as installation methods, etc., written in this manual.

- Use a child restraint system when riding with a small child that cannot properly use a seat belt. For the child's safety, install the child restraint system to a rear seat. Be sure to follow the installation method that is in the operation manual enclosed with the restraint system.
- The use of a Toyota genuine child restraint system is recommended, as it is safer to use in this vehicle. Toyota genuine child restraint systems are made specifically for Toyota vehicles. They can be purchased at a Toyota dealer.

Table of contents

Points to remember ..... P. 61
Child restraint system ..... P. 63
When using a child restraint system ..... P. 66
Child restraint system installation method
- Fixed with a seat belt ..... P. 70
- Fixed with an ISOFIX rigid anchor ..... P. 77
- Using an anchor bracket (for top strap) ..... P. 83

Points to remember

- Prioritize and observe the warnings, as well as the laws and regulations for child restraint systems.
- Use a child restraint system until the child becomes large enough to properly wear the vehicle's seat belt.
- Choose a child restraint system appropriate to the age and size of the child.
- Note that not all child restraint systems can fit in all vehicles.
  Before using or purchasing a child restraint system, check the compatibility of the child restraint system with seat positions.
  (→P. 70, 78)

⚠ WARNING

■ When a child is riding

Observe the following precautions.
Failure to do so may result in death or serious injury.

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system which is correctly installed. For installation details, refer to the operation manual enclosed with the child restraint system. General installation instruction is provided in this manual.
- Toyota strongly urges the use of a proper child restraint system that conforms to the weight and size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Holding a child in your or someone else's arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield or between the holder and the interior of the vehicle.

WARNING

■ Handling the child restraint system

If the child restraint system is not properly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving, or an accident.

- If the vehicle were to receive a strong impact from an accident, etc., it is possible that the child restraint system has damage that is not readily visible. In such cases, do not reuse the restraint system.
- Depending on the child restraint system, installation may be difficult or impossible. In those cases, check whether the child restraint system is suitable for installment in the vehicle. (→P. 70, 77) Be sure to install and observe the usage rules after carefully reading the child restraint system fixing method in this manual, as well as the operation manual enclosed with the child restraint system.
- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment.

Child restraint system

Install the available child restraint system in vehicle upon confirming the following items.


■ Standards for child restraint systems

Use a child restraint system that conforms to ECE R44*1 or ECE R129*1, 2.

The following approval mark is displayed on child restraint systems which are conformed.

Check for an approval mark attached to the child restraint system.

Example of the displayed regulation number

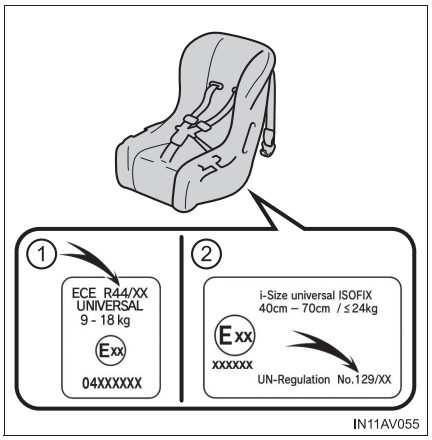

① ECE R44 approval mark*3
The weight range of the child who is applicable for an ECE R44 approval mark is indicated.

② ECE R129 approval mark*3
The height range of the child who is applicable as well as available weights for an ECE R129 approval mark is indicated.

*1: ECE R44 and ECE R129 are U.N. regulations for child restraint systems.

*2: The child restraint systems mentioned in the table may not be available outside of the EU area.

*3: The displayed mark may differ depending on the product.

Mass group (ECE R44 only)

This Mass group table is required when confirming the child restraint system compatibility. Confirm in accordance with the child restraint system compatibility table. (→P. 70, 78).




The child restraint system which conforms to the standard of ECE R44 is categorized into 5 groups according to the weight of the child.

Mass group	Child weight	Reference age*
Group 0	until 10 kg (22 lb.)	about 9 months
Group 0+	until 13 kg (28 lb.)	about 1.5 years
Group I	9 - 18 kg (20 - 39 lb.)	from 9 months - about 4 years
Group II	15 - 25 kg (34 - 55 lb.)	from 3 years - about 7 years
Group III	22 - 36 kg (49 - 79 lb.)	from 6 years - about 12 years

*: The age range is a standard approximation. Choose according to the weight of the child.

■ Types of child restraint system installation methods

Confirm with the operation manual enclosed with the child restraint system about the installation of the child restraint system.

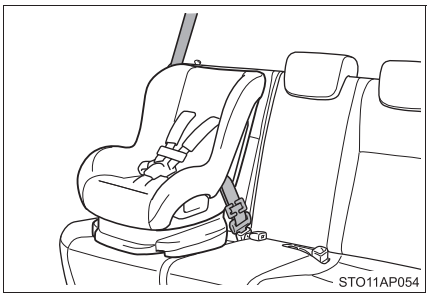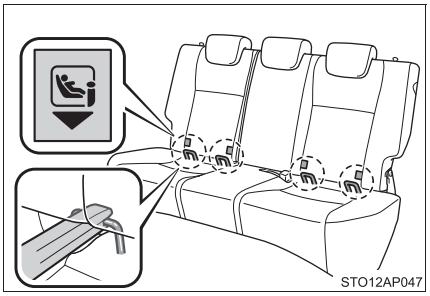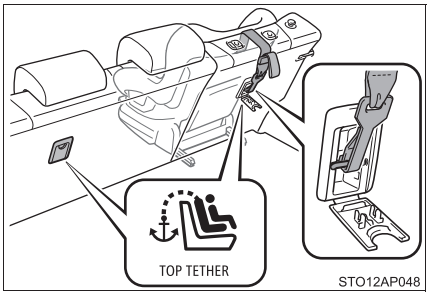
Installation method		Page
Seat belt attachment	 STO11AP054	P. 70
ISOFIX rigid anchor attachment	 STO12AP047	P. 77
Anchor brackets (for top strap) attachment	 STO12AP048	P. 83

When using a child restraint system

■ When installing a child restraint system to a front passenger seat

For the safety of a child, install a child restraint system to a rear seat. When installing a child restraint system to a front passenger seat is unavoidable, adjust the seat as follows and install the child restraint system.

- Raise the seatback as much as possible.
- Move the seat to the rearmost position.
- If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint.

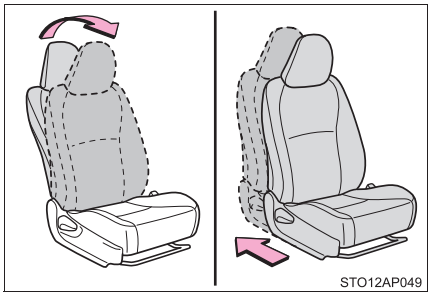


WARNING

■ When using a child restraint system


Observe the following precautions.
Failure to do so may result in death or serious injury.


- Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on. (→P. 56)
  The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

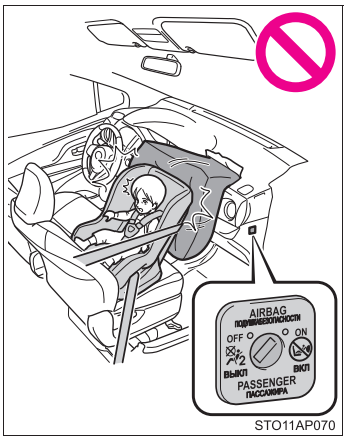

STO11AP070

- There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat.
  Details of the label(s) are shown in the illustration below.

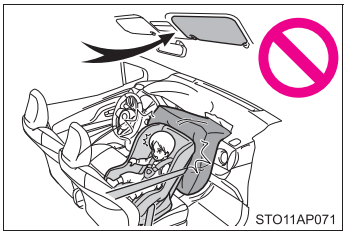
STO11AP071

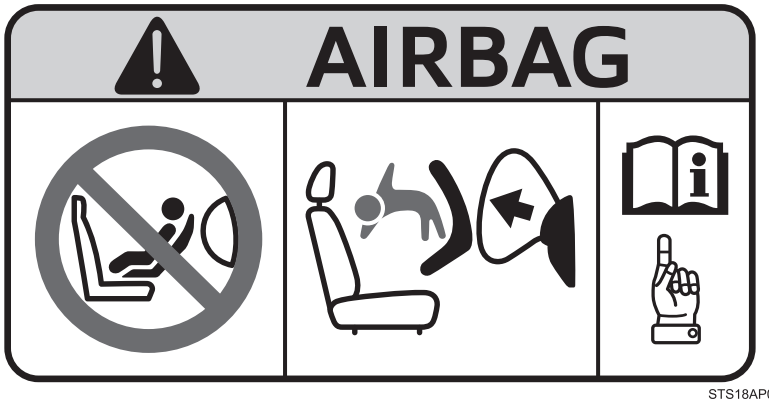


STS18AP001


WARNING

■ When using a child restraint system

- Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint on the front passenger seat, move the seat as far back as possible. Failing to do so may result in death or serious injury if the airbags deploy (inflate).

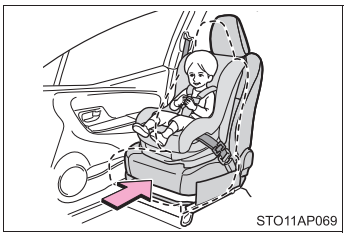


- Vehicles with SRS side airbags and SRS curtain shield airbags: Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillars, or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.

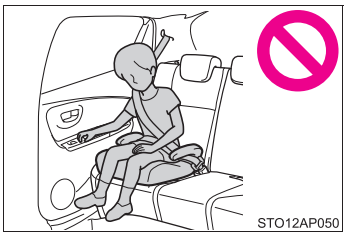

WARNING

■ **When using a child restraint system**

- When a junior seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Use child restraint system suitable to the age and size of the child and install it to the rear seat.
- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat (left-hand drive vehicles) or the left-hand rear seat (right-hand drive vehicles). (→P. 70, 78)

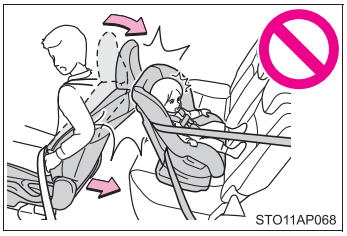

Child restraint system fixed with a seat belt

◆ Confirming the possible installation seating positions and the Mass Group for the seat belt installation type child restraint systems.

1 Confirm the corresponding [Mass group] from the weight of the child (→P. 64)

(Ex. 1) When the weight is 12 kg, [Mass group 0+]

(Ex. 2) When the weight is 15 kg, [Mass group I]

2 Confirm and select the appropriate possible seating position for the child restraint system and the corresponding type of system from the [Child restraint systems fastened with SEAT BELT - Compatibility and Recommended child restraint systems table]. (→P. 70)

◆ Child restraint systems fastened with SEAT BELT - Compatibility and Recommended child restraint systems table

If your child restraint system is of “universal” category, you can install it on the positions mentioned by U or UF in the table below (UF is for forward-facing child restraint systems only). Child restraint systems category and mass group can be found in the child restraint system manual.
If your child restraint system is not of the “universal” category (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.

Mass groups	Seating position				Recommended Child Restraint Systems
	Front passenger seat		Rear seat		
	Airbag manual on-off switch		Outboard	Center	
	ON	OFF			
0 Up to 10 kg (22 lb.)	X	U*1	U L	X	“TOYOTA G 0+, BABY SAFE PLUS” “TOYOTA MINI” “TOYOTA G 0+, BABY SAFE PLUS with SEAT BELT FIXATION, BASE PLATFORM”
0+ Up to 13 kg (28 lb.)	X	U*1	U L	X	
I 9 to 18 kg (20 to 39 lb.)	Rear-ward-facing — X	U*1, 2	U*2	X	“TOYOTA DUO+”
	Forward-facing — UF*1, 2				
II, III 15 to 36 kg (34 to 79 lb.)	UF*1, 2	U*1, 2	U*2	X	“TOYOTA KIDFIX XP SICT” (Can be fitted to the ISOFIX mountings.)

Key of letters inserted in the above table:

X: Not suitable seat position for children in this mass group.

U: Suitable for “universal” category child restraint systems approved for use in this mass group.

UF: Suitable for forward-facing “universal” category child restraint systems approved for use in this mass group.

L: Suitable for “specific vehicles”, “restricted”, or “semi-universal”, category child restraint systems approved for use in this mass group.

*1: Adjust the seatback angle to the most upright position. Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.


*2: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.
Otherwise, put the head restraint in the upper most position.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.


The child restraint systems mentioned in the table may not be available outside the EU area.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference.

- When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

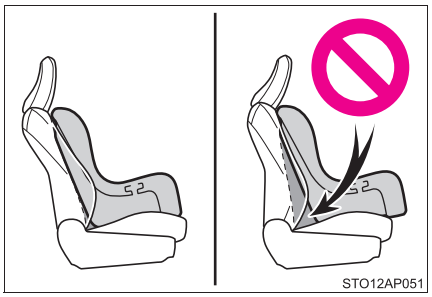

- If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

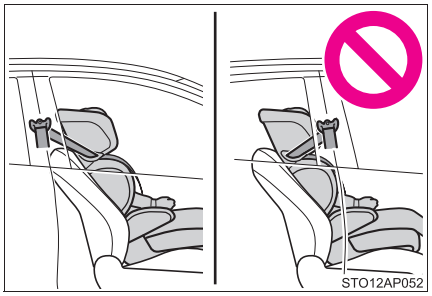

- When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.
- When installing a junior seat of booster cushion type, do not remove the head restraint.


◆ Installing child restraint system using a seat belt

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.


1 If installing the child restraint system to the front passenger seat is unavoidable, refer to P. 66 for front passenger seat adjustment.

2 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position. (→P. 206)

3 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted. Securely fix the seat belt to the child restraint system in accordance to the directions enclosed with the child restraint system.

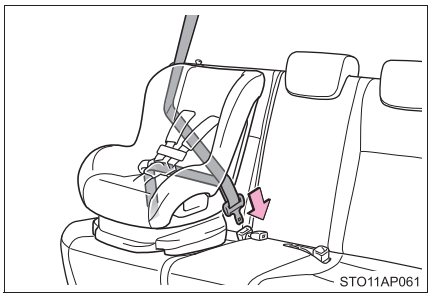
STO11AP061

4 If your child restraint system is not equipped with a lock-off (a seat belt locking feature), secure the child restraint system using a locking clip.

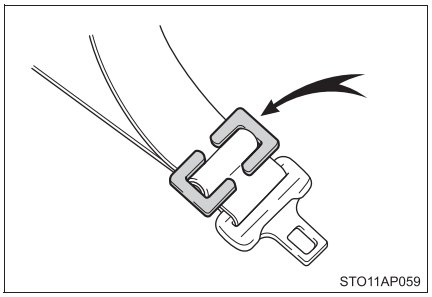
STO11AP059

5 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P. 76)

◆ Removing a child restraint system installed with a seat belt

Press the buckle release button and fully retract the seat belt.

When releasing the buckle, the child restraint system may spring up due to the rebound of the seat cushion. Release the buckle while holding down the child restraint system.

Since the seat belt automatically reels itself, slowly return it to the stowing position.

■ When installing a child restraint system

You may need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer: Locking clip for child restraint system
(Part No. 73119-22010)

WARNING

■ When installing a child restraint system


Observe the following precautions.
Failure to do so may result in death or serious injury.

- Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.
- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- When a junior seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Follow all installation instructions provided by the child restraint system manufacturer.

Child restraint system fixed with an ISOFIX rigid anchor (vehicles with rear seats)

■ ISOFIX rigid anchors (ISOFIX child restraint system)

Lower anchors are provided for the rear outboard seats. (Tags displaying the location of the anchors are attached to the seats.)

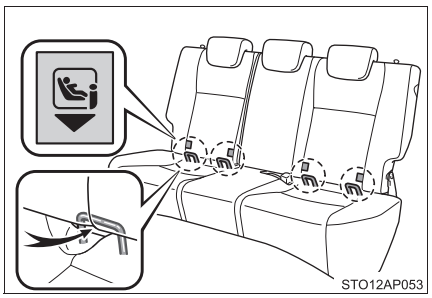

■ Confirming the Mass group and Size class for ECE R44 ISOFIX corresponding child restraint systems

1 Confirm the corresponding [Mass group] from the weight of the child (→P. 64)

(Ex. 1) When the weight is 12 kg, [Mass group 0+]

(Ex. 2) When the weight is 15 kg, [Mass group I]

2 Confirming Size class

Select the Size class corresponding to [Mass group] confirmed in step 1 from the [Child restraint systems fastened with ISOFIX (ECE R44) - Compatibility and Recommended child restraint systems table] (→P. 78)*.

(Ex. 1) When [Mass group 0+], the corresponding size class is [C], [D], [E].

(Ex. 2) When [Mass group I], the corresponding size class is [A], [B], [B1], [C], [D].

*: However, listings that are marked with [X] cannot be selected, despite having the corresponding size class in the suitability table of the [Seating position]. Also, select the product designated by [Recommended Child Restraint Systems] (→P. 79), if the listing is marked with [IL].

■ Child restraint systems fastened with ISOFIX (ECE R44) - Compatibility and Recommended child restraint systems table

ISOFIX child restraint systems are divided in different “size class”. According to this “size class”, you will be allowed to use it in the vehicle seating position mentioned in the table below. To know your child restraint system “size class” and “mass group”, please refer to the child restraint system manual.

If your child restraint system has no “size class” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.

Size class	Description
A	Full-height, forward-facing child restraint systems
B	Reduced-height forward-facing child restraint systems
B1	Reduced-height forward-facing child restraint systems
C	Full-size rearward-facing child restraint systems
D	Reduced-size rearward-facing child restraint systems
E	Rearward-facing infant seat
F	Left lateral-facing (carrycot) infant seat
G	Right lateral-facing (carrycot) infant seat

Mass groups	Size class	Seating position			Recommended Child Restraint Systems
		Front seat	Rear seat		
		Passen-ger seat	Outboard	Center	
Carrycot	F	X	X	X	—
	G	X	X	X	
0 Up to 10 kg (22 lb.)	E	X	IL	X	“TOYOTA MINI” “TOYOTA MIDI”
0+ Up to 13 kg (28 lb.)	E	X	IL	X	
	D	X	IL	X	“TOYOTA MINI” “TOYOTA MIDI”
	C	X	IL	X	
I 9 to 18 kg (20 to 39 lb.)	D	X	IL	X	—
	C	X	IL	X	
	B	X	IUF* IL*	X	“TOYOTA MIDI”
	B1	X	IUF* IL*	X	“TOYOTA DUO+” “TOYOTA MIDI”
	A	X	IUF* IL*	X	“TOYOTA MIDI”

Key of letters inserted in the above table:

X: Not suitable seat position for ISOFIX child restraint systems in this mass group and/or size class.

IUF: Suitable for ISOFIX forward-facing child restraint systems of “universal” category approved for use in this mass group.

IL: Suitable for ISOFIX child restraint systems of the categories for “specific vehicles”, “restricted”, or “semi-universal” approved for use in this mass group.

*: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.
Otherwise, put the head restraint in the upper most position.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

The child restraint systems mentioned in the table may not be available outside the EU area.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.

■ i-Size child restraint systems fastened with ISOFIX (ECE R129) - Compatibility table

If your child restraint system is of “i-Size” category, you can install it on the positions mentioned by i-U in the table below.
Child restraint system category can be found in the child restraint system manual.

	Seating position		
	Front seat	Rear seat	
	Passenger seat	Outboard	Center
i-Size child restraint systems	X	i-U*	X

Key of letters inserted in the above table:

X: Not suitable for use with i-Size child restraint systems.

i-U: Suitable for i-Size “universal” child restraint systems forward and rearward facing.

*: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.
Otherwise, put the head restraint in the upper most position.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.


■ **Installation with ISOFIX rigid anchor (ISOFIX child restraint system) (vehicles with rear seats)**

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

1 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position. (→P. 206)

2 Latch the buckles onto the exclusive fixing bars.

If the child restraint has a top strap, the top strap should be latched onto the anchor bracket. (→P. 83)

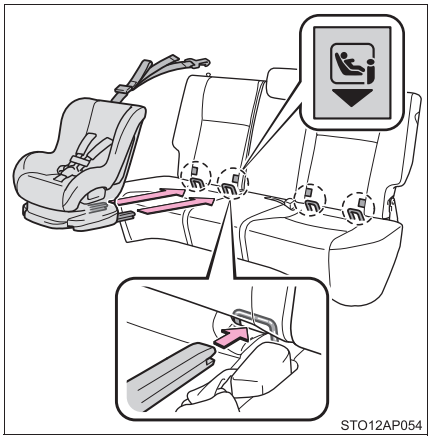

3 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P. 76)

WARNING

■ **When installing a child restraint system**

Observe the following precautions.
Failure to do so may result in death or serious injury.


- After securing a child restraint system, never adjust the seat.
- When using the lower anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint system.
- Follow all installation instructions provided by the child restraint system manufacturer.

Using an anchor bracket (for top strap) (vehicles with rear seats)

■ Anchor brackets (for top strap)

Anchor brackets are provided for the outboard rear seat.

Use anchor brackets when fixing the top strap.

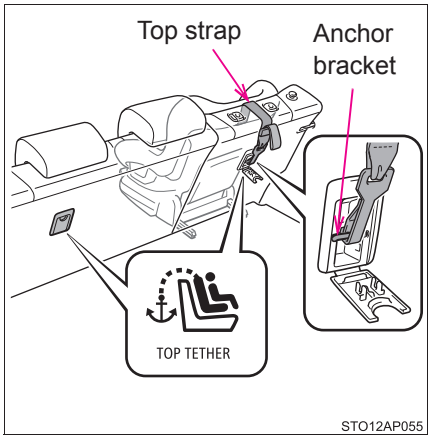


■ Fixing the top strap to the anchor bracket

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

1 Vehicles with a luggage cover: Remove the luggage cover. (→P. 461)

2 Adjust the head restraint to the upmost position.


If the head restraint interferes with the child restraint system or top strap installation and the head restraint can be removed, remove the head restraint. (→P. 206)

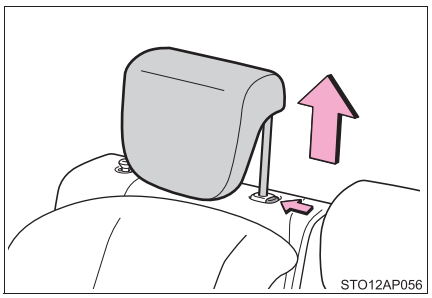

3 Secure the child restraint system using the seat belt or ISOFIX rigid anchors.

4 Open the anchor bracket cover, latch the hook onto the anchor bracket and tighten the top strap.
Make sure the top strap is securely latched. (→P. 76)

When installing the child restraint system with the head restraint being raised, be sure to have the top strap pass underneath the head restraint.

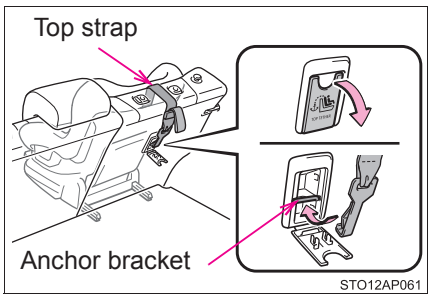

5 Vehicles with a luggage cover: Reinstall the luggage cover.

WARNING

■ **When installing a child restraint system**

Observe the following precautions.
Failure to do so may result in death or serious injury.

- Firmly attach the top strap and make sure that the belt is not twisted.
- Do not attach the top strap to anything other than the anchor bracket.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When installing the child restraint system with the head restraint being raised, after the head restraint has been raised and then the anchor bracket has been fixed, do not lower the head restraint.

NOTICE

■ **Anchor brackets (for top strap)**

When not in use, make certain to close the lid. If it remains open, the lid may be damaged.

Engine immobilizer system

The vehicle's keys have built-in transponder chips that prevent the engine from starting if a key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

This system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.

▶ Vehicles without a smart entry & start system

The system begins operating after the key has been removed from the engine switch. The system is canceled after the registered key has been inserted into the engine switch.

▶ Vehicles with a smart entry & start system

The system begins operating after the engine switch has been turned off. The system is canceled after the engine switch has been turned to ACCESSORY or IGNITION ON mode.

■ **System maintenance**

The vehicle has a maintenance-free type engine immobilizer system.

■ **Conditions that may cause the system to malfunction**

- If the grip portion of the key is in contact with a metallic object
- If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

Certifications for the engine immobilizer system (vehicles with a smart entry & start system)

TOYOTA

TOYOTA MOTOR CORPORATION

1, TOYOTA-CHO, TOYOTA, AICHI, 471-8571, JAPAN TEL: +81-565-28-2121

EU Declaration of Conformity

CE

1. Radio equipment (Product / Type):

   Immobilizer / TMIMB-3

2. Name and address of the manufacturer:

   TOYOTA MOTOR CORPORATION
   1, Toyota -cho, Toyota, Aichi, 471-8572, Japan

3. This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Object of the declaration:

   TMIMB-3

5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

   Directive 2014/53/EU

6. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

(Health & safety requirements)	EN 60950-1:2006 / A11:2009
(EMC requirements)	EN 301 489-1 V1.8.1 & EN 301 489-3 V1.4.1
(Effective uses of radio spectrum)	EN 300 330 V2.1.1

7. The notified body:

   Not Applicable

8. Accessories and components, including software, which allow the radio equipment to operate as intended and covered by the EU declaration of conformity:

   Not Applicable

9. Additional information:

   None

Place and date of issue: Japan, April 5, 2017

Signature: Tomoo Kakegawa

Tomoo Kakegawa
General Manager

Function

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type TMIMB-3 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://my.toyota.eu Frequency band: 119 - 135 kHz Maximum radio-frequency power: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi TMIMB-3 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://my.toyota.eu Radiotaajuus: 119 - 135 kHz suurin mahdollinen lähetysteho: 55dBμA/m @10m
Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur TMIMB-3 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://my.toyota.eu Frequentieband: 119 - 135 kHz Maximaal radiofrequentievermogen: 55dBμA/m @10m
Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type TMIMB-3 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://my.toyota.eu Bande de fréquences: 119 - 135 kHz Puissance de radiofréquence maximale: 55dBμA/m @10m

Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning TMIMB-3 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://my.toyota.eu Frekvensband: 119 - 135 kHz Maximal radiofrekvenseffekt: 55dBμA/m @10m
Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen TMIMB-3 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m
Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp TMIMB-3 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://my.toyota.eu Frequenzband: 119 - 135 kHz Abgestrahlte maximale Sendeleistung: 55dBμA/m @10m
Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός TMIMB-3 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://my.toyota.eu Ζώνη συχνοτήτων: 119 - 135 kHz Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m @10m

Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio TMIMB-3 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://my.toyota.eu Banda di frequenza: 119 - 135 kHz Potenza massima radiofrequenza: 55dBµA/m @10m
Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico TMIMB-3 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://my.toyota.eu Banda de frecuencia: 119 - 135 kHz Potencia máxima de radiofrecuencia: 55dBµA/m @10m
O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio TMIMB-3 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://my.toyota.eu Banda de frequência: 119 - 135 kHz Potência máxima de radiofrequências: 55dBµA/m @10m
B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju TMIMB-3 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBµA/m @10m

Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp TMIMB-3 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://my.toyota.eu Sagedusriba: 119 - 135 kHz Maksimaalne saatevõimsus: 55dBµA/m @10m
TOYOTA MOTOR CORPORATION igazolja, hogy a TMIMB-3 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://my.toyota.eu Frekvenciasáv: 119 - 135 kHz Maximális jelerősség: 55dBµA/m @10m
TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu TMIMB-3 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://my.toyota.eu Frekvenčné pásmo: 119 - 135 kHz Maximálny rádiofrekvenčný výkon: 55dBµA/m @10m
Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení TMIMB-3 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://my.toyota.eu Kmitočtové pásmo: 119 - 135 kHz Maximální radiofrekvenční výkon: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme TMIMB-3 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://my.toyota.eu Frekvenčni pas: 119 - 135 kHz Največja moč radijske frekvence: 55dBμA/m @10m
Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas TMIMB-3 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://my.toyota.eu Dažnių juosta: 119 - 135 kHz Didžiausia radijo dažnių galia: 55dBμA/m @10m
Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta TMIMB-3 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://my.toyota.eu Frekvenču josla: 119 - 135 kHz Maksimālā radiofrekvenču jauda: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego TMIMB-3 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://my.toyota.eu Zakres częstotliwości: 119 - 135 kHz Maksymalna moc częstotliwości radiowej: 55dBμA/m @10m

TOYOTA MOTOR CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð TMIMB-3 er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION erklærer herved at radioutstyrtypen TMIMB-3 er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m
С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение TMIMB-3 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://my.toyota.eu Радиочестотна лента: 119 - 135 kHz Максимална радиочестотна мощност: 55dBμA/m @10m
Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio TMIMB-3 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://my.toyota.eu Banda de frecvență: 119 - 135 kHz Puterea maximă de radiofrecvență: 55dBμA/m @10m

Ovime TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMIMB-3 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://my.toyota.eu Frekvencijski opseg: 119 - 135 kHz Maksimalna radio-frekvencijska snaga: 55dBμA/m @10m
Me anë të këtij dokumenti, TOYOTA MOTOR CORPORATION deklaron se tipi i radiopajisjes TMIMB-3 është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://my.toyota.eu Brezi i frekuencës: 119 - 135 kHz Fuqia maksimale e radiofrekuencës: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa TMIMB-3 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://my.toyota.eu Frekvencijski pojas: 119 - 135 kHz Maksimalna RF snaga: 55dBμA/m @10m
Ovim TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMIMB-3 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://my.toyota.eu Frekventni opseg: 119 - 135 kHz Maksimalna radio-frekventna snaga: 55dBμA/m @10m

TOYOTA MOTOR CORPORATION, işbu belgeyle telsiz cihazı türünün TMIMB-3 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:
http://my.toyota.eu

Frekans bandı: 119 - 135 kHz
Maksimum radyo frekans gücü: 55dBμA/m @10m

■ **Certifications for the engine immobilizer system (vehicles without a smart entry & start system)**

CE

Address: Prumyslova 1165, 41002, Lovosice, Czech Republic

Hereby, TRCZ s.r.o. declares that the radio equipment type RI-43BTY is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.tokai-rika.co.jp/pc Frequency band: 119 - 135 kHz Maximum radio-frequency power: 55dBμA/m@10m
TRCZ s.r.o. vakuuttaa, että radiolaitetyyppi RI-43BTY on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.tokai-rika.co.jp/pc Radiotaajuus: 119 - 135 kHz suurin mahdollinen lähetysteho: 55dBμA/m@10m
Hierbij verklaar ik, TRCZ s.r.o., dat het type radioapparatuur RI-43BTY conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tokai-rika.co.jp/pc Frequentieband: 119 - 135 kHz Maximaal radiofrequentievermogen: 55dBμA/m@10m

Le soussigné, TRCZ s.r.o., déclare que l'équipement radioélectrique du type RI-43BTY est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tokai-rika.co.jp/pc Bande de fréquences: 119 - 135 kHz Puissance de radiofréquence maximale: 55dBμA/m@10m
Härmed försäkrar TRCZ s.r.o. att denna typ av radioutrustning RI-43BTY överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc Frekvensband: 119 - 135 kHz Maximal radiofrekvenseffekt: 55dBμA/m@10m
Hermed erklærer TRCZ s.r.o., at radioudstyrstypen RI-43BTY er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m@10m
Hiermit erklärt TRCZ s.r.o., dass der Funkanlagentyp RI-43BTY der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.tokai-rika.co.jp/pc Frequenzband: 119 - 135 kHz Abgestrahlte maximale Sendeleistung: 55dBμA/m@10m

Με την παρούσα ο/η TRCZ s.r.o., δηλώνει ότι ο ραδιοεξοπλισμός RI-43BTY πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.tokai-rika.co.jp/pc Ζώνη συχνοτήτων: 119 - 135 kHz Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m@10m
Il fabbricante, TRCZ s.r.o., dichiara che il tipo di apparecchiatura radio RI-43BTY è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.tokai-rika.co.jp/pc Banda di frequenza: 119 - 135 kHz Potenza massima radiofrequenza: 55dBμA/m@10m
Por la presente, TRCZ s.r.o. declara que el tipo de equipo radioeléctrico RI-43BTY es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.tokai-rika.co.jp/pc Banda de frecuencia: 119 - 135 kHz Potencia máxima de radiofrecuencia: 55dBμA/m@10m
O(a) abaixo assinado(a) TRCZ s.r.o. declara que o presente tipo de equipamento de rádio RI-43BTY está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc Banda de frequência: 119 - 135 kHz Potência máxima de radiofrequências: 55dBμA/m@10m

B'dan, TRCZ s.r.o., niddikjara li dan it-tip ta' tagħmir tar-radju RI-43BTY huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBµA/m@10m
Käesolevaga deklareerib TRCZ s.r.o., et käesolev raadioseadme tüüp RI-43BTY vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://www.tokai-rika.co.jp/pc Sagedusriba: 119 - 135 kHz Maksimaalne saatevõimsus: 55dBµA/m@10m
TRCZ s.r.o. igazolja, hogy a RI-43BTY típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.tokai-rika.co.jp/pc Frekvenciasáv: 119 - 135 kHz Maximális jelerősség: 55dBµA/m@10m
TRCZ s.r.o. týmto vyhlasuje, že rádiové zariadenie typu RI-43BTY je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.tokai-rika.co.jp/pc Frekvenčné pásmo: 119 - 135 kHz Maximálny rádiofrekvenčný výkon: 55dBµA/m@10m

Tímto TRCZ s.r.o. prohlašuje, že typ rádiového zařízení RI-43BTY je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.tokai-rika.co.jp/pc Kmitočtové pásmo: 119 - 135 kHz Maximální radiofrekvenční výkon: 55dBμA/m@10m
TRCZ s.r.o. potrjuje, da je tip radijske opreme RI-43BTY skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.tokai-rika.co.jp/pc Frekvenčni pas: 119 - 135 kHz Največja moč radijske frekvence: 55dBμA/m@10m
Aš, TRCZ s.r.o., patvirtinu, kad radijo įrenginių tipas RI-43BTY atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.tokai-rika.co.jp/pc Dažnių juosta: 119 - 135 kHz Didžiausia radijo dažnių galia: 55dBμA/m@10m
Ar šo TRCZ s.r.o. deklarē, ka radioiekārta RI-43BTY atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.tokai-rika.co.jp/pc Frekvenču josla: 119 - 135 kHz Maksimālā radiofrekvenču jauda: 55dBμA/m@10m

TRCZ s.r.o. niniejszym oświadcza, że typ urządzenia radiowego RI-43BTY jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tokai-rika.co.jp/pc Zakres częstotliwości: 119 - 135 kHz Maksymalna moc częstotliwości radiowej: 55dBμA/m@10m
TRCZ s.r.o. lýsir því hér með yfir að fjarskiptatækið af gerð RI-43BTY er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBμA/m@10m
TRCZ s.r.o. erklærer herved at radioutstyrtypen RI-43BTY er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://www.tokai-rika.co.jp/pc Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m@10m
С настоящото TRCZ s.r.o. декларира, че този тип радиосъоръжение RI-43BTY е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.tokai-rika.co.jp/pc Радиочестотна лента: 119 - 135 kHz Максимална радиочестотна мощност: 55dBμA/m@10m

Prin prezenta, TRCZ s.r.o. declară că tipul de echipamente radio RI-43BTY este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.tokai-rika.co.jp/pc Banda de frecvență: 119 - 135 kHz Puterea maximă de radiofrecvență: 55dBμA/m@10m
Ovime TRCZ s.r.o. potvrđuje da je radio-oprema tipa RI-43BTY u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://www.tokai-rika.co.jp/pc Frekvencijski opseg: 119 - 135 kHz Maksimalna radio-frekvencijska snaga: 55dBμA/m@10m
Me anë të këtij dokumenti, TRCZ s.r.o. deklaron se tipi i radiopajisjes RI-43BTY është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc Brezi i frekuencës: 119 - 135 kHz Fuqia maksimale e radiofrekuencës: 55dBμA/m@10m
TRCZ s.r.o. ovime izjavljuje da je radijska oprema tipa RI-43BTY u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.tokai-rika.co.jp/pc Frekvencijski pojas: 119 - 135 kHz Maksimalna RF snaga: 55dBμA/m@10m

Ovim TRCZ s.r.o. potvrđuje da je radio-oprema tipa RI-43BTY u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://www.tokai-rika.co.jp/pc Frekventni opseg: 119 - 135 kHz Maksimalna radio-frekventna snaga: 55dBμA/m@10m
TRCZ s.r.o., işbu belgeyle telsiz cihazı türünün RI-43BTY 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://www.tokai-rika.co.jp/pc Frekans bandı: 119 - 135 kHz Maksimum radyo frekans gücü: 55dBμA/m@10m

NOTICE


■ **To ensure the system operates correctly**

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Double locking system*

Unauthorized access to the vehicle is prevented by disabling the door unlocking function from both the interior and exterior of the vehicle.

Vehicles employing this system have labels on the window glass of both front doors.

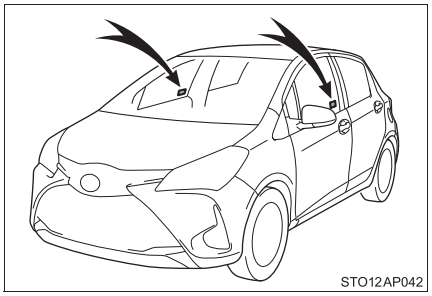

Setting the double locking system

Turn the engine switch to the “LOCK” position (vehicles without a smart entry & start system) or off (vehicles with a smart entry & start system), have all the passengers exit the vehicle and ensure that all the doors are closed.

Using the entry function (vehicles with a smart entry & start system):
Touch the sensor area on the outside door handle twice within 5 seconds.

Using the wireless remote control:
Press twice within 5 seconds.

*: If equipped

Canceling the double locking system

Using the entry function (vehicles with a smart entry & start system):
Hold either front outside door handle or push up the back door opener switch.

Using the wireless remote control:
Press .

WARNING

■ Double locking system precaution

Never activate the double locking system when there are people in the vehicle because all the doors cannot be opened from inside the vehicle.

Instrument cluster 2

2. Instrument cluster


Warning lights and indicators 108
Gauges and meters (vehicles with monochrome display) 115
Gauges and meters (vehicles with color display) 118
Multi-information display (vehicles with monochrome display) 122
Multi-information display (vehicles with color display) 127
Fuel consumption information 137

Warning lights and indicators


The warning lights and indicators on the instrument cluster and center panel inform the driver of the status of the vehicle's various systems.

For the purpose of explanation, the following illustration displays all warning lights and indicators illuminated.

▶ Vehicles with monochrome display type A

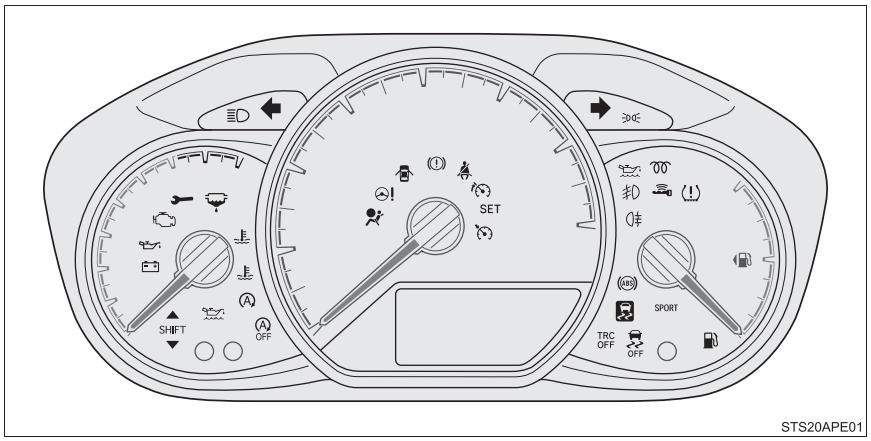


▶ Vehicles with monochrome display type B

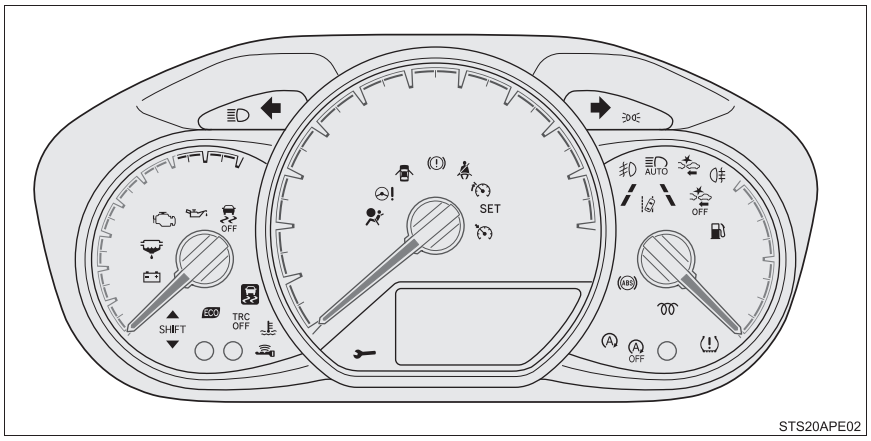

This illustration represents a meter with a tachometer and may differ from the look of the meter without a tachometer.

▶ Vehicles with color display

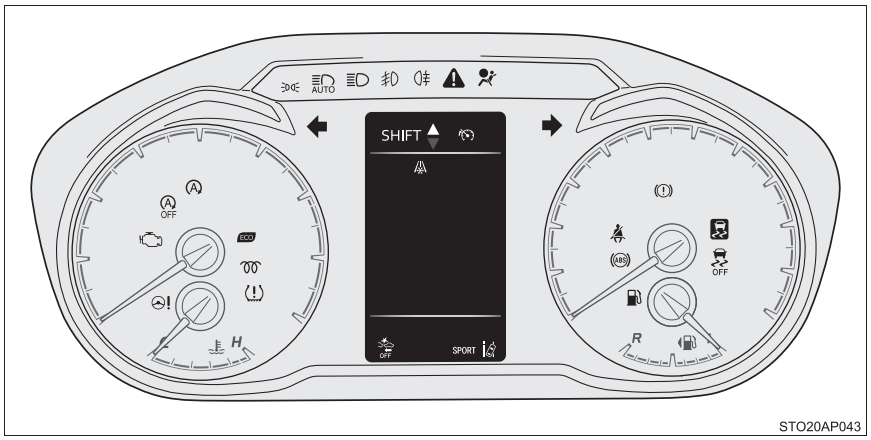

STO20AP043

Warning lights

Warning lights inform the driver of malfunctions in the indicated vehicle's systems.

*1, 4  Brake system warning light (→P. 578)

*1, 9  Charging system warning light (→P. 578)

*10, 11  Charging system warning light (→P. 578)

*1, 9  Low engine oil pressure warning light (→P. 578)

*10, 11  Low engine oil pressure warning light (→P. 578)

*1, 9  (Red) High engine coolant temperature warning light (→P. 579)

*10, 11  High engine coolant temperature warning light (→P. 579)

*1  Malfunction indicator lamp (→P. 579)

*1  SRS warning light (→P. 579)


*1, 4  ABS warning light (→P. 579)

*1  Electric power steering system warning light (→P. 579)


*1, 2, 5  PCS warning light (→P. 580)

*1, 2, 4  Slip indicator (→P. 580)

*2, 9  (Yellow) Automatic High Beam indicator (→P. 581)

*2, 9  (Yellow) Cruise control indicator (→P. 581)

*2, 9  (Yellow) LDA indicator (→P. 581)

*2, 8, 9  (Yellow) Lane marker indicators (→P. 581)

*9  (Yellow) Speed limiter indicator (→P. 581)

*1, 2, 5  Stop & Start cancel indicator (→P. 581)

*1, 6, 9  Fuel filter warning light (→P. 581)

*2, 3, 9 
(Yellow)
Smart entry & start system indicator (→P. 581)

*1, 2 
Tire pressure warning light (→P. 582)

*9 
Open door warning light (→P. 582)

*1, 10 
Master warning light (→P. 583)


Low fuel level warning light (→P. 582)

*1, 6, 9 
Low engine oil level warning light (→P. 583)


Driver's and front passenger's seat belt reminder light (→P. 582)

*1, 6, 9 
Engine oil change reminder light (→P. 583)

*2, 7 
Rear passenger's seat belt reminder lights (→P. 582)

*1: These lights turn on when the engine switch is turned to the "ON" position (vehicles without a smart entry & start system) or IGNITION ON mode (vehicles with a smart entry & start system) to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*2: If equipped

*3: The light flashes in yellow to indicate a malfunction. The light flashes quickly in green to indicate that the steering lock has not been released.

*4: The light turns on to indicate a malfunction.

*5: The light flashes to indicate a malfunction.

*6: Diesel engine

*7: The light illuminate on the center panel.

*8: The lights turn on with LDA indicator to indicate a malfunction.

*9: Vehicles with monochrome display.

*10: Vehicles with color display.

*11: The light illuminates on the multi-information display.

Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.


Turn signal indicator (→P. 269)


Headlight high beam indicator (→P. 272)

*2


(Green)
Automatic High Beam indicator (→P. 319)


Tail light indicator (→P. 271)


*2

Front fog light indicator (→P. 276)


Rear fog light indicator (→P. 276)

*2, 13

(Green)
Smart entry & start system indicator (→P. 248)

*3, 13

(Blue)
Low engine coolant temperature indicator (→P. 576)

*4

Engine preheating indicator (→P. 245, 248)

*1, 2

Stop & Start indicator (→P. 339)

*1, 5, 6


Eco Driving Indicator Light (→P. 114)

*5


"SPORT" indicator (→P. 258)

*1, 7, 13


Gear Shift Indicator (→P. 267)

*1, 7, 14

Gear Shift Indicator (→P. 267)

*2


(Green)
Cruise control indicator (→P. 330)

*2


"SET" indicator (→P. 330)

*2

(Green)
LDA indicator (→P. 313)

*2, 12, 13

(Green)
Lane marker indicators (→P. 314)

*2


(Green)
Speed limiter indicator (→P. 334)

*2, 8, 11, 13

PCS activation indicator (→P. 295)

*1, 2 

Stop & Start cancel indicator (→P. 340)

*1, 2, 10 

PCS warning light (→P. 299)

*1, 2, 8 
Slip indicator (→P. 351)

*14, 15 
Ice warning indicator (→P. 118)

*1, 2 , 13 

“TRC OFF” indicator (→P. 351)

*9 

*1, 2 

VSC OFF indicator (→P. 352)

“PASSENGER AIR BAG” indicator (→P. 56)

*1: Vehicles without a smart entry & start system:
These lights turn on when the engine switch is turned to the “ON” position to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Vehicles with a smart entry & start system:
These lights turn on when the engine switch is turned to IGNITION ON mode to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*2: If equipped

*3: This indicator turns on in blue when the engine coolant temperature is low.

*4: Diesel engine

*5: Vehicles with a Multidrive

*6: The light does not turn on when the system is disable.

*7: Vehicles with a manual transmission

*8: The light flashes to indicate that the system is operating.

*9: This light illuminates on the center panel.

*10: The light comes on when the system is turned off.

*11: The light comes on when system settings are changed.

*12: The light flashes in yellow to indicate that the vehicle is deviating from the lane.

*13: Vehicles with monochrome display.


*14: Vehicles with color display.

*15: When the outside temperature is approximately 3°C (37°F) or lower, the indicator will flash for approximately 10 seconds, then stay on.

Eco Driving Indicator Light (vehicles with a Multidrive)

During Eco-Friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on. When the acceleration exceeds Zone of Eco driving, or when the vehicle is stopped, the light turns off.

Eco Driving Indicator Light availability can be customized. The default setting is on. (→P. 125, 131)

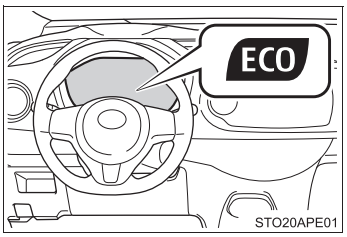

Eco Driving Indicator Light will not operate in the following conditions:


- The shift lever is in anything other than D.
- The vehicle is being driven in “SPORT” mode (→P. 258)
- The paddle shift switch is operated while the shift lever in D.
- The vehicle speed is approximately 130 km/h (80 mph) or higher.

WARNING

If a safety system warning light does not come on

Should a safety system light such as the ABS and SRS warning light not come on when you start the engine, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately if this occurs.

Gauges and meters (vehicles with monochrome display)

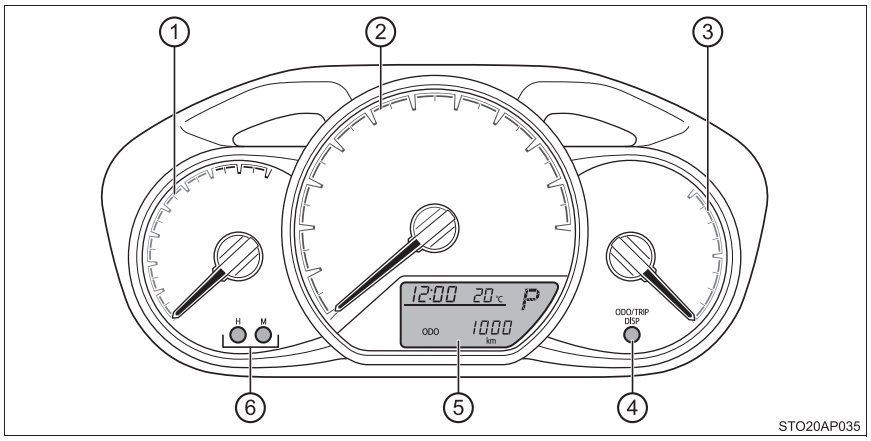

① Tachometer (if equipped)

Displays the engine speed in revolutions per minute.

② Speedometer

Displays the vehicle speed.

③ Fuel gauge (if equipped)

Displays the quantity of fuel remaining in the tank.

④ Display change button

→P. 123

⑤ Multi-information display

Presents the driver with a variety of driving-related data. (→P. 122)


⑥ Clock adjusting buttons

→P. 125

Instrument cluster light control

The brightness of the instrument cluster lights (when the headlight switch is on and the surrounding area is dark) can be adjusted.

Display the instrument cluster light control by pressing the display change button. (→P. 115)
Then, press and hold the button. Adjust the brightness to the desired level by pressing the button.

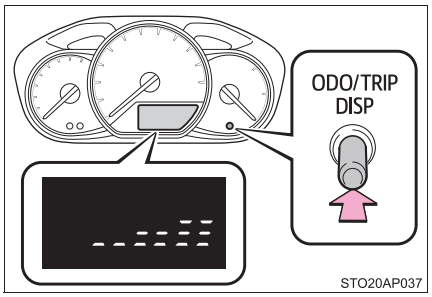

The meters and display illuminate when

▶ Vehicles without a smart entry & start system

The engine switch is in the “ON” position.

▶ Vehicles with a smart entry & start system

The engine switch is in IGNITION ON mode.

Outside temperature display


- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.
  - When stopped, or driving at low speeds (less than 25 km/h [16 mph])
  - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When “--” or “E” is displayed, the system may be malfunctioning.
  Take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- The temperature range that can be displayed is from -40°C (-40°F) to 50°C (122°F).

NOTICE

■ **To prevent damage to the engine and its components**

- Vehicles with a tachometer: Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the high engine coolant temperature warning light flashes or comes on. In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 638)

Gauges and meters (vehicles with color display)

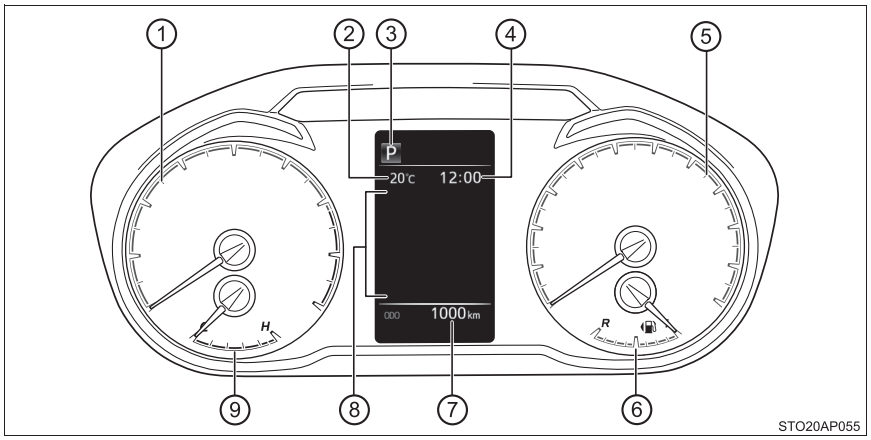

① Tachometer

Displays the engine speed in revolutions per minute.

② Outside temperature display

Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F). Low outside temperature indicator comes on when the ambient temperature is 3°C (37°F) or lower.

③ Shift position and shift range display (if equipped)

Displays the selected shift position or selected shift range. (→P. 257)

④ Clock

Displays the current time. (→P. 125)

⑤ Speedometer

Displays the vehicle speed.

⑥ Fuel gauge

Displays the quantity of fuel remaining in the tank.

ⓖ Odometer and trip meter display:
Displays the following items.

Odometer:
Displays the total distance the vehicle has been driven.

Trip meter:
Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

ⓗ Multi-information display

Presents the driver with a variety of driving-related data. (→P. 127)

Displays warning messages in case of a malfunction. (→P. 589)


ⓘ Engine coolant temperature gauge

Displays the engine coolant temperature.

Changing the display

Switches the items of the odometer and trip meter display by pressing the “TRIP” switch.

When the trip meter is displayed, pressing and holding the “TRIP” switch will reset the trip meter.

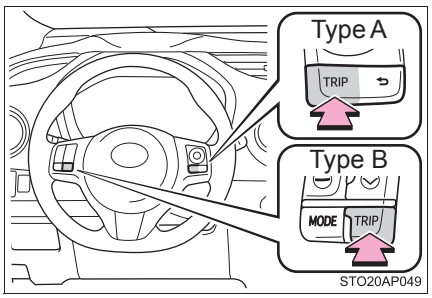


Instrument cluster light control

The brightness of the instrument cluster lights can be adjusted.

Display the instrument cluster light control by pressing the “TRIP” switch.

Then, press and hold the switch. Adjust the brightness to the desired level by pressing the switch.

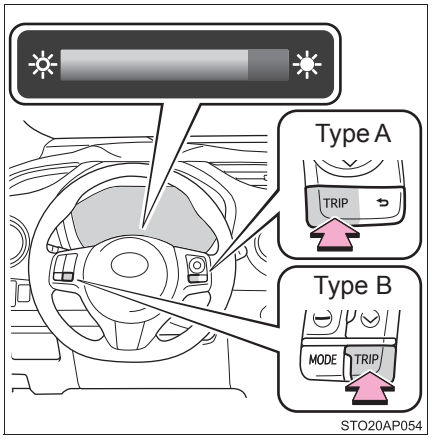

The meters and display illuminate when

▶ Vehicles without a smart entry & start system

The engine switch is in the “ON” position.

▶ Vehicles with a smart entry & start system

The engine switch is in IGNITION ON mode.

Instrument cluster brightness adjustment

The brightness level of the meters when the surroundings are day mode and night mode can be adjusted individually.

- Day mode: When the headlight switch is off or when the headlight switch is on but the surrounding area is bright.
- Night mode: When the headlight switch is on and the surrounding area is dark.

■ **Outside temperature display**

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.
  - When stopped, or driving at low speeds (less than 25 km/h [16 mph])
  - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- The temperature range that can be displayed is from -40°C (-40°F) to 50°C (122°F).

⚠ NOTICE

■ **To prevent damage to the engine and its components**


- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone ("H"). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 638)

Multi-information display (vehicles with monochrome display)


The multi-information display presents the driver with a variety of driving-related data including the clock.

Display contents


▶ Type A

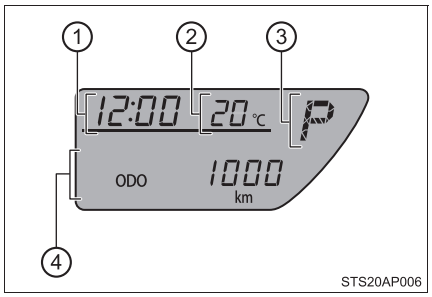

▶ Type B

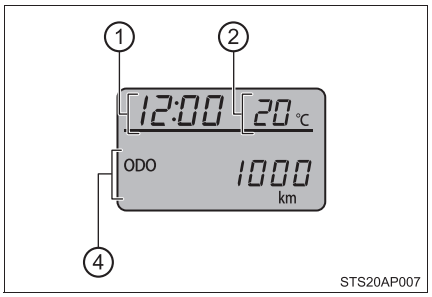


▶ Type C

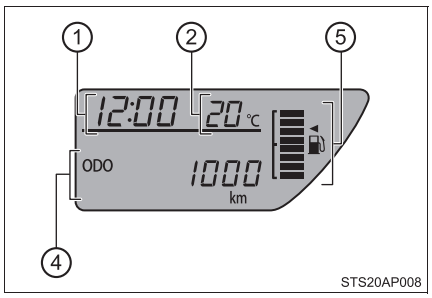

① Clock (→P. 125)
② Outside temperature display (→P. 116)
③ Shift position and gear step position indicator (→P. 257)
④ Drive information (→P. 123)
⑤ Fuel gauge

Changing the display

Items displayed can be switched by pressing the display change button.

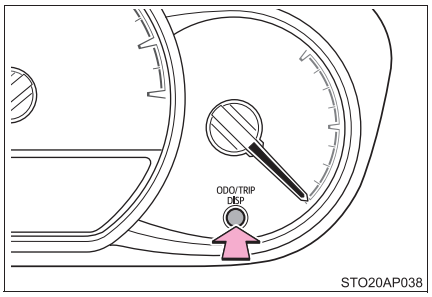

Drive information

■ Odometer

Displays the total distance the vehicle has been driven.

■ Trip meter

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

Press and hold the button for longer than 1 second to reset. Pressing and holding the button while the trip meter is displayed will reset the trip meter to “0”.

■ Stop & Start system operation time (if equipped)

Displays the amount of time the engine was stopped due to operation of the Stop & Start system during the current trip.

Vehicles without a smart entry & start system:

From the engine switch in the “ON” position to the engine switch in the “LOCK” position.

Vehicles with a smart entry & start system:

From the engine switch in IGNITION ON mode to the engine switch off.

■ Stop & Start system total operation time (if equipped)

Displays the total amount of time that the engine has been stopped due to operation of the Stop & Start system since the system was last reset.

Press and hold the button to reset.

Instantaneous fuel consumption

Displays the instantaneous of fuel consumption.

Use the displayed instantaneous fuel consumption as a reference.

Average fuel consumption

Displays the average rate of fuel consumption.

- The function can be reset by pressing the button for longer than 1 second when the average fuel consumption is displayed.
- Use the displayed average fuel consumption as a reference.

Driving range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated.

When refueling, turn the engine switch to the “LOCK” position (vehicles without a smart entry & start system) or off (vehicles with a smart entry & start system). If the vehicle is refueled without turning the engine switch to the “LOCK” position or off, the display may not be updated.

Average vehicle speed

Displays the average vehicle speed since the engine was last started.

Eco Driving Indicator Light customization (vehicles with a Multi-drive)

Eco Driving Indicator Light can be activated or deactivated by pressing the display change button when the Eco Driving Indicator Light customization display is displayed.

To change the Eco Driving Indicator Light customization display, display the odometer and press and hold the display change button until the display changes.


After customization, press the display change button for more than 2 seconds to return to the odometer.

Clock

The clock can be adjusted by pressing the buttons.

① Adjust the hours

② Adjust the minutes

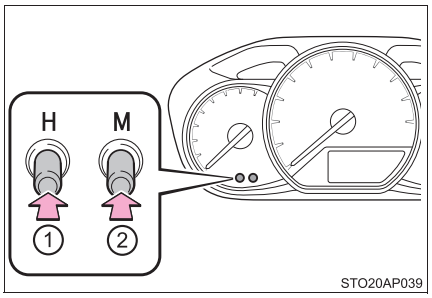

■ **When disconnecting and reconnecting battery terminals**

The following information data will be reset:

- Stop & Start system total operation time (if equipped)
- Average fuel consumption
- Driving range
- Average vehicle speed
- Clock data

■ **Liquid crystal display**

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal display, and there is no problem continuing to use the display.

■ **Changing the pre-crash warning timing**

→ P. 299

⚠ WARNING

■ **The information display at low temperatures**

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to down-shift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

■ **Cautions during setting up the display**

As the engine needs to be running during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.


Multi-information display (vehicles with color display)

Display contents

The multi-information display presents the driver with a variety of vehicle data.

● Menu icons

Displays the following information when an icon is selected. (→P. 128)
Some of the information may be displayed automatically depending on the situation.

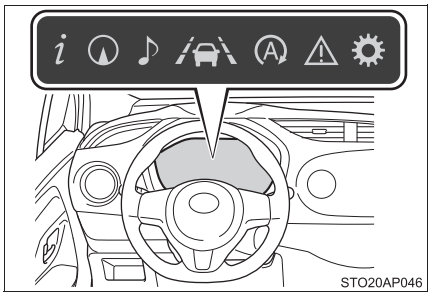

Drive information

Select to display various drive data. (→P. 129)

Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information.
- Route guidance
- Compass display (north-up display/heading-up display)

Audio system-linked display (if equipped)

Select to enable selection of an audio source or track on the meter using the meter control switches.

Driving assist system information (if equipped)

Select to display the operational status of the following systems:
- LDA (Lane Departure Alert) (→P. 312)
- RSA (Road Sign Assist) (→P. 324)

Stop & Start System Information (if equipped)

Select to display the operational status of the Stop & Start system. (→P. 130)

Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected. (→P. 589)

Settings display

Select to change the meter display settings and the operation settings of some vehicle functions. (→P. 131)


Operating the meter control switches

The multi-information display is operated using the meter control switches.

① Select an item/change pages

② Enter/set

③ Return to the previous screen

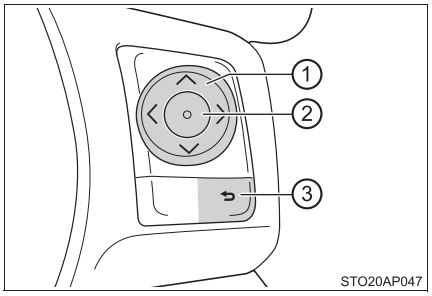

Drive information

Items displayed can be switched by pressing “<” or “>” of the meter control switches to select *i* and pressing “∧” or “∨”.

● Average fuel consumption (after reset*/after start/after refuel)

Displays the average fuel consumption since the function was reset, the engine was started, and the vehicle was refueled, respectively

Use the displayed average fuel consumption as a reference.

● Average vehicle speed (after reset*/after start)

Displays the average vehicle speed since the function was reset and the engine was started, respectively

● Elapsed time (after reset*/after start)

Displays the elapsed time since the function was reset and the engine was started, respectively

● Distance (driving range/after refuel)

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated.
  When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the display may not be updated.

● Eco Driving Indicator Zone Display (vehicles with a Multidrive)

→P. 134

● Speedometer

Displays the vehicle speed.

● Display off

A blank screen is displayed

*: The function can be reset by pressing and holding the ⊙ of the meter control switches when the reset item is displayed.

Stop & Start system information (if equipped)

■ **Current idling stop time**

Displays the current idling stop time (engine stop time due to the Stop & Start system)

■ **Total idling stop time (after reset*/after start)**

Displays the total idling stop time (engine stop time via the Stop & Start system) after resetting and engine startup.

■ **Idling stop time fuel savings (after reset*/after start)**

Displays the fuel savings (reference) during idling stop time after resetting and engine startup.

■ **Reason of Stop & Start system operation cancel**

Displays the reason for the Stop & Start system being canceled in the meter display.

*: The function can be reset by pressing and holding the ⊙ of the meter control switches when the reset item is displayed.

Settings display

The settings of the following items can be changed, refer to P. 673.

For functions that can be enabled or disabled, the function switches between on and off each time ⊙ is pressed.

●  LDA (Lane Departure Alert) (→P. 312)*1

Select to set up the alert sensitivity.

●  RSA (Road Sign Assist) (→P. 324)*1

Select to set up the following items.

- Notification method (excess speed/other warnings)
  Select to change the notification method of the following warnings to no notification/display only/display and buzzer.
  Excess speed warning:
  Warns the driver if the vehicle exceeds the speed displayed on the speed limit sign on the multi-information display.
  Other warnings:
  Warns the driver if the system determines that the vehicle is overtaking when a no overtaking sign is displayed on the multi-information display.
- Excess speed notification level
  Select to set the speed threshold over which the excess speed warning starts to operate when a speed limit sign is displayed on the multi-information display.

● Clock

Adjusts the hour and minute, and switches between 12-hour and 24-hour display of the clock. (→P. 133)

● Settings

Select the menu to set up the following items.

- Language

  Select to change the language on the display.
- Units

  Select to change the unit of measure for the multi-information display.
- 

(Eco Driving Indicator Light) setup*1

  Select to activate/deactivate the Eco Driving Indicator Light
- Drive information

  Select to select up to 2 items that will be displayed on a Drive information screen.
- Pop-up display

  Select to set the pop-up displays*2, which may appear in some situations, on/off.
- Default settings

  Registered or changed meter settings will be deleted or returned to their default setting.


*1: If equipped

*2: Stop & Start system operation time display (if equipped), Stop & Start system status display (if equipped) and incoming call display of the hands-free phone system (if equipped).

Clock

The time can be adjusted through the for the multi-information display.

① Adjust the clock mode (12 or 24 hour)
② Adjust the hours
③ Adjust the minutes

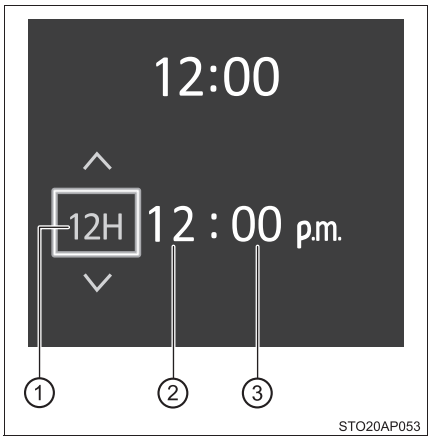

■ Time adjustment

1 Press "∧" or "∨" of the meter control switches (→P. 128), select "Clock" and press ⊙.

2 Press "<" or ">" on the meter control switches, select hours*, minutes*, 12/24-hour clock, "∧" or "∨" of the meter control switches to adjust.

*: Press and hold the "∧" or "∨" button to scroll up or down.

3 When the adjustments are finished, press ⮌ and check the time.

- When the ⮌ button is pressed, the current displayed time is set.
- The clock display and adjustment is possible when the engine switch is turned to "ON" position (vehicles without a smart entry & start system) or IGNITION ON mode (vehicles with a smart entry & start system).
- Adjustments may be suspended when a pop-up display, etc., appears during the adjustments.
  The currently displayed time may be set.

■ **Pop-up display**

In some situations, such as when a switch operation is performed, a pop-up display will be temporarily displayed on the multi-information display.
The pop-up display function can be set on/off.

■ **Setting display automatic cancelation**

“Settings” item in settings display is not selectable during driving and cannot be operated. Also, the settings screen is temporarily canceled in the following situations.

- A warning message is displayed.
- The vehicle starts off.

■ **Liquid crystal display**

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

■ **When disconnecting and reconnecting battery terminals**

The drive information and clock data will be reset.


■ **Eco Driving Indicator Zone Display (vehicles with a Multidrive)**

Suggests Zone of Eco driving and Eco driving ratio based on acceleration.

① Zone of Eco driving

② Eco driving ratio based on acceleration

If the acceleration exceeds the Zone of Eco driving, the right side of the Eco Driving Indicator Zone Display illuminates. (→P. 125)

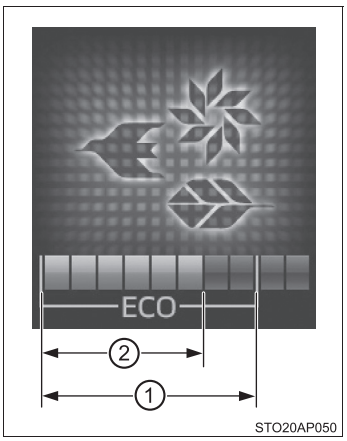

Eco Driving Indicator Light will not operate in the following conditions:

- The shift lever is in anything other than D.
- The vehicle is being driven in “SPORT” mode. (→P. 258)
- The paddle shift switch is operated while the shift lever in D.
- The vehicle speed is approximately 130 km/h (80 mph) or higher.

■ **Stop & Start system information pop-up display (if equipped)**

In some situations the following Stop & Start system information will be temporarily displayed on the multi-information display:

- Current Stop & Start system operation time
- Stop & Start operational status messages (→P. 345)


■ **Arrow guide navigation (vehicles with a navigation system)**

The arrow guide navigation appears only while route guidance of the navigation system is being performed. When a turn approaches, the distance to the turn and the turn direction are displayed.

① Turn direction

The image shown may differ from the actual intersection.

② Distance to the next turn

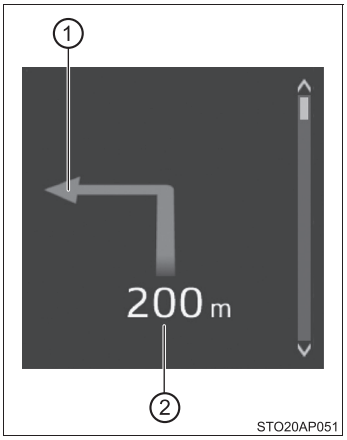

WARNING

■ **Caution for use while driving**

- When operating the multi-information display while driving, pay extra attention to the safety of the area around the vehicle.
- Do not look continuously at the multi-information display while driving as you may fail to see pedestrians, objects on the road, etc., ahead of the vehicle.

■ **The information display at low temperatures**

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the display monitor may respond slowly, and display changes may be delayed.
For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to down-shift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

■ **Cautions during setting up the display**

As the engine needs to be running during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

NOTICE


■ **While setting up the display**

To prevent battery discharge, ensure that the engine is running while setting up the display features.

Fuel consumption information*


Fuel consumption information can be displayed on the navigation/multimedia system.

Navigation/multimedia system

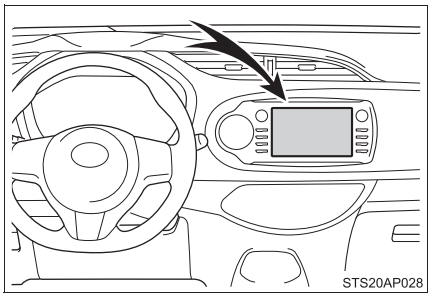


Trip information

1 Press the button on the navigation/multimedia system.

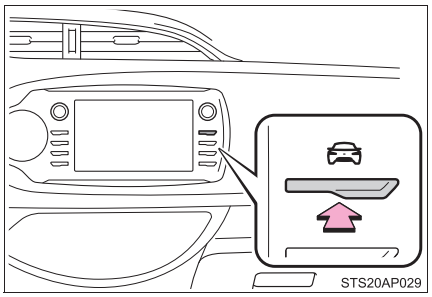

*: If equipped

2 Select “Trip information”.

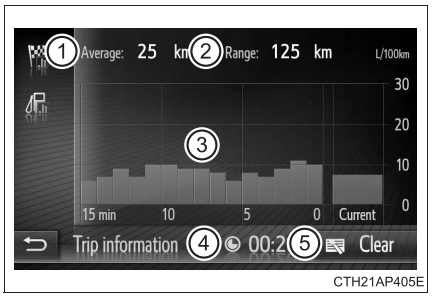

CTH21AP405E

① Average vehicle speed since the engine was started.

② Cruising range (→P. 140)

③ Fuel consumption in the past 15 minutes

④ Elapsed time since the engine was started.

⑤ Resetting the consumption data


Vehicles without a smart entry & start system:
Average fuel consumption for the past 15 minutes is divided by color into past averages and averages attained since the engine switch was last turned to the “ON” position. Use the displayed average fuel consumption as a reference.

Vehicles with a smart entry & start system:
Average fuel consumption for the past 15 minutes is divided by color into past averages and averages attained since the engine switch was last turned to IGNITION ON mode. Use the displayed average fuel consumption as a reference.

This image is an example only.

Past record

1 Press the button on the navigation/multimedia system.

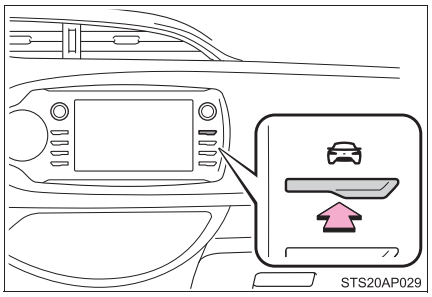

2 Select “Past record”.

① Best recorded fuel consumption
② Previous fuel consumption record
③ Average fuel consumption
④ Updating the average fuel consumption data
⑤ Resetting the past record data



The average fuel consumption history is divided by color into past averages and the average fuel consumption since the last updated. Use the displayed average fuel consumption as a reference.

This image is an example only.

■ **Updating the past record data**

Update the average fuel consumption by selecting “Update” to measure the current fuel consumption again.

■ **Resetting the data**

The fuel consumption data can be deleted by selecting “Clear”.

■ **Cruising range**

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

This distance is computed based on your average fuel consumption.
As a result, the actual distance that can be driven may differ from that displayed.

Operation of each component 3

3-1. Key information
Keys.....142
3-2. Opening, closing and locking the doors
Side doors.....154
Back door.....161
Smart entry & start system 167
3-3. Adjusting the seats
Front seats.....200
Rear seats 203
Head restraints 206
3-4. Adjusting the steering wheel and mirrors
Steering wheel.....209
Inside rear view mirror 211
Outside rear view mirrors...213
3-5. Opening and closing the windows
Power windows.....216

Keys


The keys

The following keys are provided with the vehicle.

▶ Vehicles without a smart entry & start system (type A)

① Keys

② Key number plate

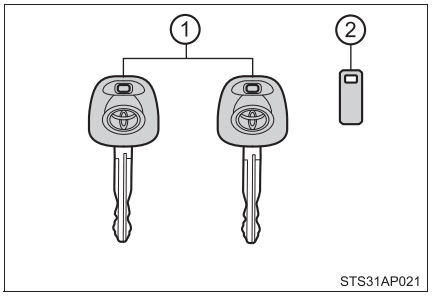


▶ Vehicles without a smart entry & start system (type B)

① Key (with a wireless remote control function)

Operating the wireless remote control function

② Key (without a wireless remote control function)

③ Key number plate

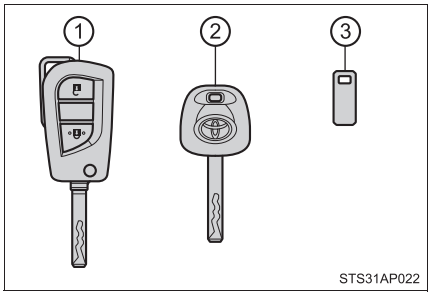


▶ Vehicles without a smart entry & start system (type C)

① Keys

Operating the wireless remote control function

② Key number plate

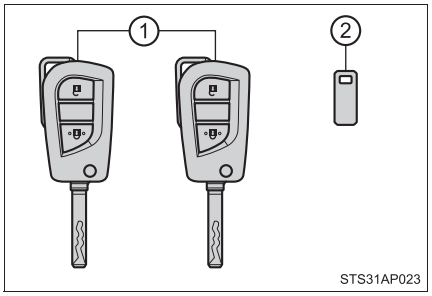


▶ Vehicles with a smart entry & start system

① Electronic keys
- Operating the smart entry & start system (→P. 167)
- Operating the wireless remote control function

② Mechanical keys

③ Key number plate

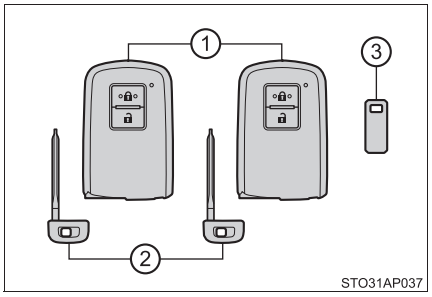


Wireless remote control

▶ Vehicles without a smart entry & start system

① Locks all the doors (→P. 155)

Check that the door is securely locked.

② Unlocks all the doors (→P. 155)

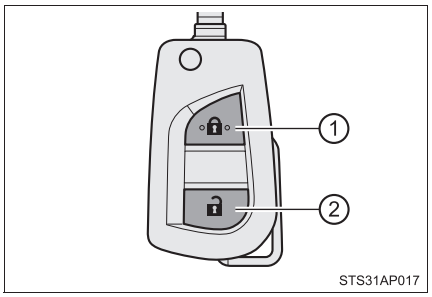


▶ Vehicles with a smart entry & start system

① Locks all the doors (→P. 155)

Check that the door is securely locked.


② Unlocks all the doors (→P. 155)

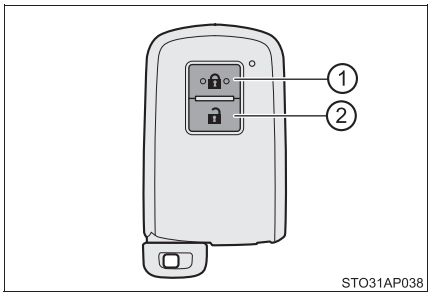

Using the key (vehicles without a smart entry & start system)

Press the button to open the key.

To stow, press the button then fold the key.

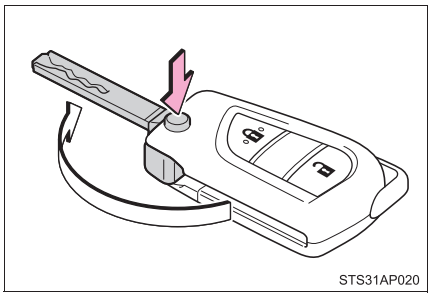

STS31AP020

Using the mechanical key (vehicles with a smart entry & start system)

To take out the mechanical key, push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and reattempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. (→P. 629)

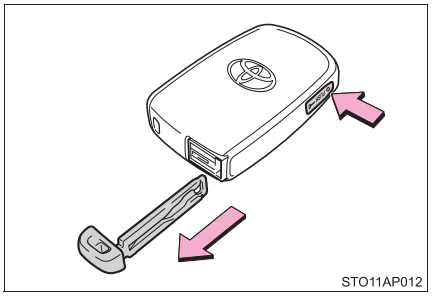
STO11AP012

■ **If you lose your keys**

New genuine keys can be made by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer using the other key and the key number stamped on your key number plate. Keep the plate in a safe place such as your wallet, not in the vehicle.

■ **When riding in an aircraft**

When bringing a key with wireless remote control function onto an aircraft, make sure you do not press any buttons on the key while inside the aircraft cabin. If you are carrying a key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the key to emit radio waves that could interfere with the operation of the aircraft.

■ **Conditions affecting operation of the smart entry & start system or wireless remote control**

▶ Vehicles without a smart entry & start system

The wireless remote control function may not operate normally in the following situations:

- When the wireless key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone or other wireless communication devices
- When the wireless key is in contact with, or is covered by a metallic object
- When other wireless keys (that emit radio waves) are being used nearby
- If window tint with a metallic content or metallic objects are attached to the rear window

▶ Vehicles with a smart entry & start system

→P. 170

■ **Key battery depletion**

▶ Vehicles without a smart entry & start system

If the wireless remote control function does not operate, the battery may be depleted. Replace the battery when necessary. (→P. 534)

▶ Vehicles with a smart entry & start system

- The standard battery life is 1 to 2 years.
- If the battery becomes low, an alarm will sound in the cabin when the engine stops. (→P. 588)
- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary. (→P. 534)
  - The smart entry & start system or the wireless remote control does not operate.
  - The detection area becomes smaller.
  - The LED indicator on the key surface does not turn on.
- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
  - TVs
  - Personal computers
  - Cellular phones, cordless phones and battery chargers
  - Recharging cellular phones or cordless phones
  - Induction cookers
  - Table lamps

■ **Replacing the battery**

→P. 534

■ **Confirmation of the registered key number (vehicles with a smart entry & start system)**

The number of keys already registered to the vehicle can be confirmed. Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.

■ **If a wrong key is used**

On some models, the key cylinder rotates freely to isolate inside mechanism.

■ **Customization**

Settings (e.g. wireless remote control system) can be changed.
(Customizable features: →P. 676)

Certification for the wireless remote control (vehicles without a smart entry & start system)

Valeo Comfort and Driving Assistance Systems

Declaration of Conformity

in accordance with the Radio Equipment Directive 2014/53/EU (RED)

1. Radio equipment: A03RAA
2. Name and address of the manufacturer or his authorised representative:

   Valeo Comfort and Driving Assistance
   76, rue Auguste Perret
   F-94046 Créteil - CEDEX
   France
3. This Declaration of Conformity is issued under the sole responsibility of the manufacturer.
4. Object of the declaration:

   Radio equipment: RF Receiver
   Model/type: **A03RAA**
5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

   2014/53/EC Radio Equipment Directive (RED)
6. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

   EN 60950-1: 2006, A11:2009, A1:2010 Protection of health and safety (art. 3.1. (a))

   EN 301 489-1 V2.2.0 (Draft)
   EN 301 489-3 V2.1.1 (Final draft) Level of Electromagnetic Compatibility (art. 3.1. (b))

   EN 300 220-1 V3.1.1
   EN 300 220-2 V3.1.1 Efficient use of the Radio Frequency Spectrum (art. 3.2)
7. Signed for and on behalf of: Valeo Comfort and Driving Assistance
   Place of issue: Créteil
   Date of issue: 02/06/2017
   Name: Jean-Claude GOUMY
   Position: Connected Car Business Group R&D Director
   Signature:



VALEO COMFORT AND DRIVING ASSISTANCE - 76 Rue Auguste Perret - ZI Europarc - 94046 Créteil Cedex - France
Tel. +33 (0)1 48 84 54 00 - Fax +33 (0)1 48 84 54 53
S.A.S. au capital de 682.500 Euros – 017 251 067 RCS Créteil

Radio equipment: RF Receiver
Model/type: **A03RAA**
Operating frequency: **433,92 MHz**

Manufacturer: Valeo Comfort and Driving Assistance
Address: 76, rue Auguste Perret
F-94046 Créteil - Cedex
France

Lietuvių [Lithuanian]	Aš, Valeo Comfort and Driving Assistance, patvirtinu, kad radijo įrenginių tipas A03RAA atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://my.toyota.eu
Nederlands [Dutch]	Hierbij verklaar ik, Valeo Comfort and Driving Assistance, dat het type radioapparatuur A03RAA conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://my.toyota.eu
Malti [Maltese]	B'dan, Valeo Comfort and Driving Assistance, niddikjara li dan it-tip ta' tagħmir tar-radju A03RAA huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://my.toyota.eu
Magyar [Hungarian]	Valeo Comfort and Driving Assistance igazolja, hogy a A03RAA típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://my.toyota.eu
Polski [Polish]	Valeo Comfort and Driving Assistance niniejszym oświadcza, że typ urządzenia radiowego A03RAA jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://my.toyota.eu
Português [Portuguese]	O(a) abaixo assinado(a) Valeo Comfort and Driving Assistance declara que o presente tipo de equipamento de rádio A03RAA está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://my.toyota.eu
Română [Romanian]	Prin prezenta, Valeo Comfort and Driving Assistance declară că tipul de echipamente radio A03RAA este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă Internet: http://my.toyota.eu
Slovensko [Slovenian]	Valeo Comfort and Driving Assistance potrjuje, da je tip radijske opreme A03RAA skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://my.toyota.eu
Slovensky [Slovak]	Valeo Comfort and Driving Assistance týmto vyhlasuje, že rádiové zariadenie typu A03RAA je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://my.toyota.eu
Suomi [Finnish]	Valeo Comfort and Driving Assistance vakuuttaa, että radiolaitetyyppi A03RAA on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://my.toyota.eu
Svenska [Swedish]	Härmed försäkrar Valeo Comfort and Driving Assistance att denna typ av radioutrustning A03RAA överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://my.toyota.eu

български [Bulgarian]	С настоящото Valeo Comfort and Driving Assistance декларира, че този тип радиосъоръжение A03RAA е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://my.toyota.eu
Česky [Czech]	Tímto Valeo Comfort and Driving Assistance prohlašuje, že typ rádiového zařízení A03RAA je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://my.toyota.eu
Dansk [Danish]	Hermed erklærer Valeo Comfort and Driving Assistance, at radioudstyrstypen A03RAA er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://my.toyota.eu
Deutsch [German]	Hiermit erklärt Valeo Comfort and Driving Assistance, dass der Funkanlagentyp A03RAA der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://my.toyota.eu
Eesti [Estonian]	Käesolevaga deklareerib Valeo Comfort and Driving Assistance, et käesolev raadioseadme tüüp A03RAA vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://my.toyota.eu
English	Hereby, Valeo Comfort and Driving Assistance declares that the radio equipment type A03RAA is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://my.toyota.eu
Español [Spanish]	Por la presente, Valeo Comfort and Driving Assistance declara que el tipo de equipo radioeléctrico A03RAA es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:http://my.toyota.eu
Ελληνική [Greek]	Με την παρούσα ο/η Valeo Comfort and Driving Assistance, δηλώνει ότι ο ραδιοεξοπλισμός A03RAA πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://my.toyota.eu
Français [French]	Le soussigné, Valeo Comfort and Driving Assistance, déclare que l'équipement radioélectrique du type A03RAA est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://my.toyota.eu
Hrvatski [Croatian]	Valeo Comfort and Driving Assistance ovime izjavljuje da je radijska oprema tipa A03RAA u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://my.toyota.eu
Italiano [Italian]	Il fabbricante, Valeo Comfort and Driving Assistance, dichiara che il tipo di apparecchiatura radio A03RAA è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://my.toyota.eu
Latviski [Latvian]	Ar šo Valeo Comfort and Driving Assistance deklarē, ka radioiekārta A03RAA atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://my.toyota.eu

Valeo Comfort and Driving Assistance Systems

Declaration of Conformity

in accordance with the Radio Equipment Directive 2014/53/EU (RED)

1. Radio equipment: A03TAA
2. Name and address of the manufacturer or his authorised representative:

   Valeo Comfort and Driving Assistance
   76, rue Auguste Perret
   F-94046 Créteil - CEDEX
   France
3. This Declaration of Conformity is issued under the sole responsibility of the manufacturer.
4. Object of the declaration:

   Radio equipment: RF Transmitter, "Jack Knife" Key assy
   Model/type: **A03TAA**
5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

   2014/53/EC Radio Equipment Directive (RED)
6. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

   EN 60950-1: 2006, A11:2009, A1:2010 Protection of health and safety (art. 3.1. (a))

   EN 301 489-1 V2.2.0 (Draft)
   EN 301 489-3 V2.1.1 (Final draft) Level of Electromagnetic Compatibility (art. 3.1. (b))

   EN 300 220-1 V3.1.1
   EN 300 220-2 V3.1.1 Efficient use of the Radio Frequency Spectrum (art. 3.2)
7. Signed for and on behalf of: Valeo Comfort and Driving Assistance
   Place of issue: Créteil
   Date of issue: 02/06/2017
   Name: Jean-Claude GOUMY
   Position: Connected Car Business Group R&D Director
   Signature:



VALEO COMFORT AND DRIVING ASSISTANCE - 76 Rue Auguste Perret - ZI Europarc - 94046 Créteil Cedex - France
Tel. +33 (0)1 48 84 54 00 - Fax +33 (0)1 48 84 54 53
S.A.S. au capital de 682.500 Euros – 017 251 067 RCS Créteil

Radio equipment:	RF Transmitter, "Jack Knife" Key assy
Model/type:	**A03TAA**
Operating frequency:	**433,92 MHz**
Maximum output power:	**< 1 mW erp**
Manufacturer:	Valeo Comfort and Driving Assistance
Address:	76, rue Auguste Perret F-94046 Créteil - Cedex France

Lietuvių [Lithuanian]	Aš, Valeo Comfort and Driving Assistance, patvirtinu, kad radijo įrenginių tipas A03TAA atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://my.toyota.eu
Nederlands [Dutch]	Hierbij verklaar ik, Valeo Comfort and Driving Assistance, dat het type radioapparatuur A03TAA conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://my.toyota.eu
Malti [Maltese]	B'dan, Valeo Comfort and Driving Assistance, niddikjara li dan it-tip ta' tagħmir tar-radju A03TAA huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-internet li ġej: http://my.toyota.eu
Magyar [Hungarian]	Valeo Comfort and Driving Assistance igazolja, hogy a A03TAA típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://my.toyota.eu
Polski [Polish]	Valeo Comfort and Driving Assistance niniejszym oświadcza, że typ urządzenia radiowego A03TAA jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://my.toyota.eu
Português [Portuguese]	O(a) abaixo assinado(a) Valeo Comfort and Driving Assistance declara que o presente tipo de equipamento de rádio A03TAA está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://my.toyota.eu
Română [Romanian]	Prin prezenta, Valeo Comfort and Driving Assistance declară că tipul de echipamente radio A03TAA este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://my.toyota.eu
Slovensko [Slovenian]	Valeo Comfort and Driving Assistance potrjuje, da je tip radijske opreme A03TAA skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://my.toyota.eu
Slovensky [Slovak]	Valeo Comfort and Driving Assistance týmto vyhlasuje, že rádiové zariadenie typu A03TAA je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://my.toyota.eu
Suomi [Finnish]	Valeo Comfort and Driving Assistance vakuuttaa, että radiolaitetyyppi A03TAA on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://my.toyota.eu
Svenska [Swedish]	Härmed försäkrar Valeo Comfort and Driving Assistance att denna typ av radioutrustning A03TAA överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://my.toyota.eu

български [Bulgarian]	С настоящото Valeo Comfort and Driving Assistance декларира, че този тип радиосъоръжение A03TAA е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://my.toyota.eu
Česky [Czech]	Tímto Valeo Comfort and Driving Assistance prohlašuje, že typ rádiového zařízení A03TAA je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://my.toyota.eu
Dansk [Danish]	Hermed erklærer Valeo Comfort and Driving Assistance, at radioudstyrstypen A03TAA er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://my.toyota.eu
Deutsch [German]	Hiermit erklärt Valeo Comfort and Driving Assistance, dass der Funkanlagentyp A03TAA der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://my.toyota.eu
Eesti [Estonian]	Käesolevaga deklareerib Valeo Comfort and Driving Assistance, et käesolev raadioseadme tüüp A03TAA vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://my.toyota.eu
English	Hereby, Valeo Comfort and Driving Assistance declares that the radio equipment type A03TAA is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://my.toyota.eu
Español [Spanish]	Por la presente, Valeo Comfort and Driving Assistance declara que el tipo de equipo radioeléctrico A03TAA es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:http://my.toyota.eu
Ελληνική [Greek]	Με την παρούσα ο/η Valeo Comfort and Driving Assistance, δηλώνει ότι ο ραδιοεξοπλισμός A03TAA πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://my.toyota.eu
Français [French]	Le soussigné, Valeo Comfort and Driving Assistance, déclare que l'équipement radioélectrique du type A03TAA est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://my.toyota.eu
Hrvatski [Croatian]	Valeo Comfort and Driving Assistance ovime izjavljuje da je radijska oprema tipa A03TAA u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://my.toyota.eu
Italiano [Italian]	Il fabbricante, Valeo Comfort and Driving Assistance, dichiara che il tipo di apparecchiatura radio A03TAA è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://my.toyota.eu
Latviski [Latvian]	Ar šo Valeo Comfort and Driving Assistance deklarē, ka radioiekārta A03TAA atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://my.toyota.eu

NOTICE

■ **To prevent key damage**

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for a long periods of time.
- Do not get the keys wet or wash them in an ultrasonic washer, etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the key.
- Vehicles with a smart entry & start system: Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems, induction cookers, or medical electrical equipment, such as low-frequency therapy equipment.

■ **Carrying the electronic key on your person (vehicles with a smart entry & start system)**

Carry the electronic key 10 cm (3.9 in.) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 10 cm (3.9 in.) of the electronic key may interfere with the key, causing the key to not function properly.

■ **In case of a smart entry & start system malfunction or other key-related problems (vehicles with a smart entry & start system)**

Take your vehicle with all the electronic keys provided with your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **When an electronic key is lost (vehicles with a smart entry & start system)**

If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately with all remaining electronic keys that were provided with your vehicle.

Side doors

The vehicle can be locked and unlocked using the entry function, wireless remote control, key or door lock switch.


Unlocking and locking the doors from the outside

◆ Entry function (vehicles with a smart entry & start system)

Carry the electronic key to enable this function.


① Grip the front door handle to unlock all the doors.

Make sure to touch the sensor on the back of the handle.
The doors cannot be unlocked for 3 seconds after the doors are locked.

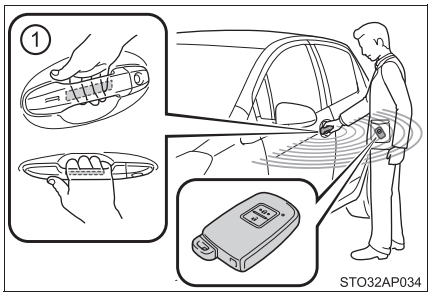

② Touch the lock sensor (the indentation on the side of the front door handle) to lock all the doors.

Check that the door is securely locked.

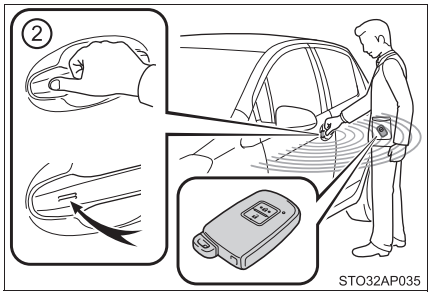


◆ Wireless remote control (if equipped)

▶ Vehicles without a smart entry & start system

① Locks all the doors

Check that the door is securely locked.

② Unlocks all the doors

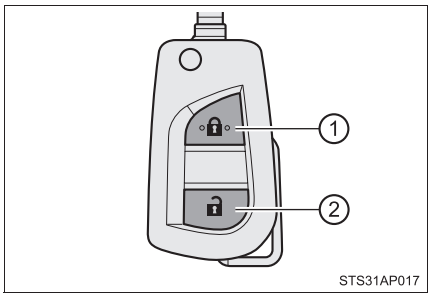


▶ Vehicles with a smart entry & start system

① Locks all the doors

Check that the door is securely locked.

② Unlocks all the doors

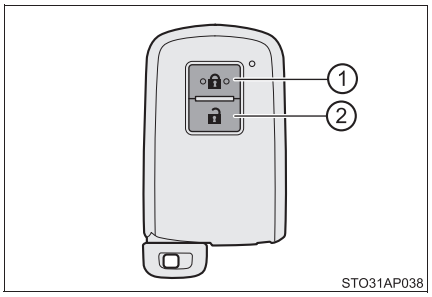

◆ Keys


Turning the key operates the doors as follows:

▶ Vehicles without a smart entry & start system

■ Driver's door

① Locks all the doors


② Unlocks all the doors

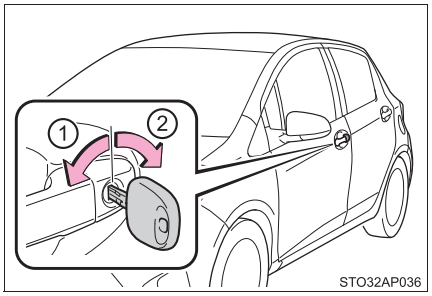

■ Front passenger's door (vehicles with a key cylinder)

① Locks the door

② Unlocks the door

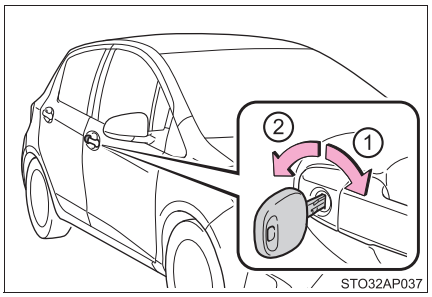

▶ Vehicles with a smart entry & start system

The doors can also be locked and unlocked with the mechanical key. (→P. 629)

■ **Operation signals (vehicles with an entry function or wireless remote control)**

The emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)

■ **Security feature (wireless remote control)**

▶ Vehicles without a smart entry & start system


If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

▶ Vehicles with a smart entry & start system

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again. (However, depending on the location of the electronic key, the key may be detected as being in the vehicle. In this case, vehicle may be unlocked.)

■ **When the door cannot be locked by the lock sensor (vehicles with a smart entry & start system)**

Use your thumb to push lock sensor.

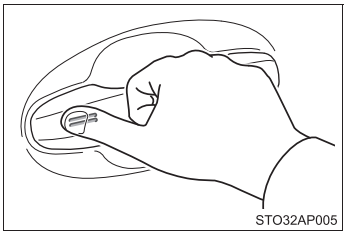

■ **Door lock buzzer (vehicles with a smart entry & start system)**

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously. Fully close the door to stop the buzzer, and lock the vehicle once more.


■ **If the entry function (vehicles with a smart entry & start system) or the wireless remote control (if equipped) does not operate properly**

- Vehicles without a smart entry & start system: Use the key to lock and unlock the doors. (→P. 156)
- Vehicles with a smart entry & start system: Use the mechanical key to lock and unlock the doors. (→P. 629)
- Replace the key battery with a new one if it is depleted. (→P. 534)

Unlocking and locking the doors from the inside

◆ Door lock switch


① Unlocks all the doors
② Locks all the doors

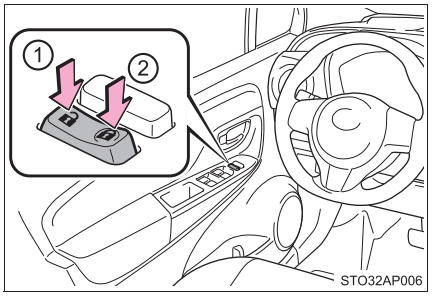

◆ Inside door lock buttons

① Locks the doors
② Unlocks the doors

The front doors can be opened by pulling the inside handle even if the inside door lock button is in the lock position.

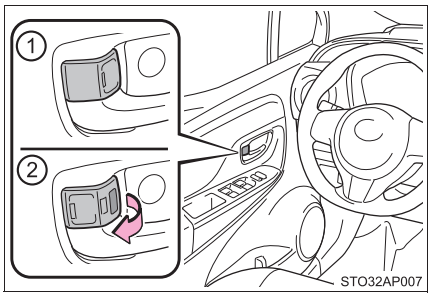

Locking the front doors from the outside without a key

1 Move the inside door lock button to the lock position.

2 Close the door while pulling the door handle.

▶ Vehicles without a smart entry & start system

The door cannot be locked if the key is in the engine switch.

▶ Vehicles with a smart entry & start system

The door cannot be locked if the engine switch is in ACCESSORY or IGNITION ON mode, or the electronic key is left inside the vehicle. However, the key may not be detected correctly and the door may be locked.


Rear door child-protector lock (5-door models only)

The door cannot be opened from inside the vehicle when the lock is set.

① Unlock

② Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

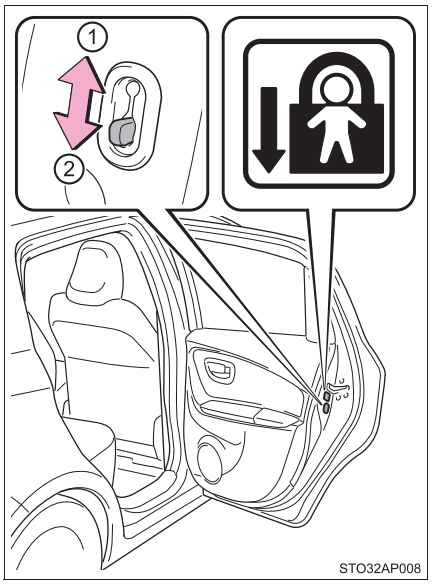

■ **Open door warning buzzer**

If a door or the back door is not fully closed, a buzzer will sound when the vehicle speed reaches 5 km/h (3 mph).
Vehicles with color display only: The open door(s) or back door is indicated on the multi-information display.

■ **Conditions affecting the operation**

▶ Vehicles without a smart entry & start system
→P. 145

▶ Vehicles with a smart entry & start system
→P. 170

■ **If the smart entry & start system has been deactivated in a customized setting (vehicles with a smart entry & start system)**

Use the wireless remote control or mechanical key. (→P. 155, 629)

⚠ WARNING

■ **To prevent an accident**

Observe the following precautions while driving the vehicle.
Failure to do so may result in a door opening and an occupant falling out, resulting in death or serious injury.

- Always use a seat belt.
- Ensure that all the doors are properly closed.
- Do not pull the inside handle of the doors while driving.
  The doors may be opened and the passengers are thrown out of the vehicle and it may result in serious injury or death.

  Be especially careful for the front doors, as the doors may be opened even if the inside lock buttons are in locked position.
- Set the rear door child-protector locks when children are seated in the rear seats.

Back door

The back door can be locked/unlocked and opened by the following procedures.


Unlocking and locking the back door

◆ Entry function (vehicles with a smart entry & start system)

Carry the electronic key to enable this function.


① Press the button to unlock the back door.

The door cannot be unlocked for 3 seconds after the door is locked.

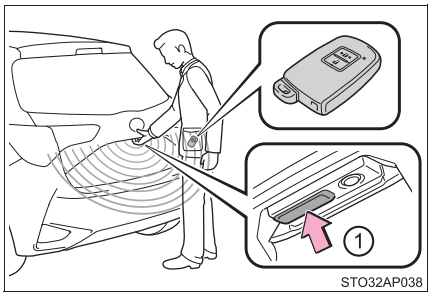

② Press the button to lock the back door.

Check that the door is securely locked.

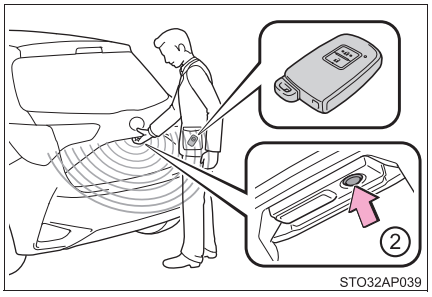

◆ Wireless remote control (if equipped)

→P. 155

◆ Door lock switch


→P. 158

◆ Keys

From the back door (vehicles with a back door key cylinder):

① Unlocks all the doors

② Locks all the doors

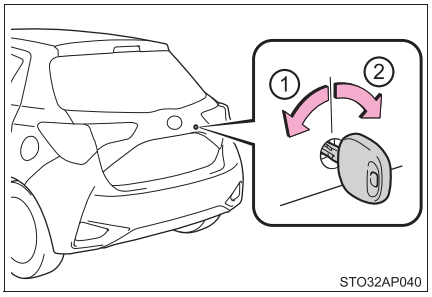


From the driver's door: →P. 156

Opening the back door from the outside the vehicle


Raise the back door while pushing up the back door opener switch.

The back door cannot be closed immediately after the back door opener switch is pushed.

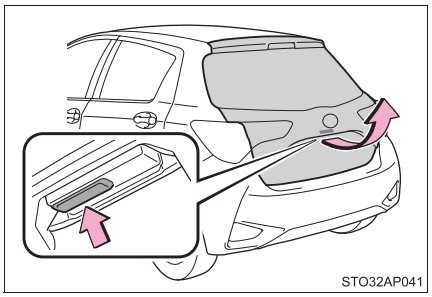

When closing the back door

Lower the back door using the back door handle, and make sure to push the back door down from the outside to close it.

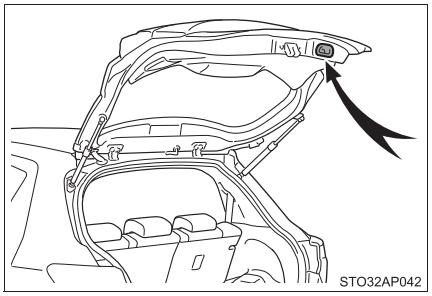

■ **Operation signals (vehicles with an entry function or wireless remote control)**

The emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)

■ **Open door warning buzzer**

If a door or the back door is not fully closed, a buzzer will sound when the vehicle speed reaches 5 km/h (3 mph).
Vehicles with color display only: The open door(s) or back door is indicated on the multi-information display.

■ **Luggage compartment light**

The luggage compartment lights turn on when the back door is opened.

WARNING

■ **Caution while driving**

- Keep the back door closed while driving.
  If the back door is left open, it may hit near-by objects while driving or luggage may be unexpectedly thrown out, causing an accident.
  In addition, exhaust gases may enter the vehicle, causing death or a serious health hazard. Make sure to close the back door before driving.
- Before driving the vehicle, make sure that the back door is fully closed. If the back door is not fully closed, it may open unexpectedly while driving, causing an accident.
- Never let anyone sit in the luggage compartment. In the event of sudden braking or a collision, they are susceptible to death or serious injury.

■ **When children are in the vehicle**

Observe the following precautions.
Failure to do so may result in death or serious injury.


- Do not allow children to play in the luggage compartment.
  If a child is accidentally locked in the luggage compartment, they could have heat exhaustion or other injuries.
- Do not allow a child to open or close the back door.
  Doing so may cause the back door to move unexpectedly, or cause the child's hands, head, or neck to be caught by the closing back door.

WARNING


■ **Operating the back door**

Observe the following precautions.
Failure to do so may cause parts of the body to be caught, resulting in death or serious injury.

- Remove any heavy loads, such as snow and ice, from the back door before opening it. Failure to do so may cause the back door to suddenly shut again after it is opened.
- When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind.
- The back door may suddenly shut if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. Make sure that the back door is fully open and secure before using the luggage compartment.

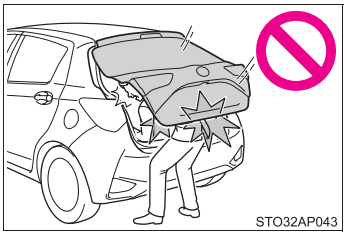
STO32AP043

- When closing the back door, take extra care to prevent your fingers, etc., from being caught.
- When closing the back door, make sure to press it lightly on its outer surface. If the back door handle is used to fully close the back door, it may result in hands or arms being caught.

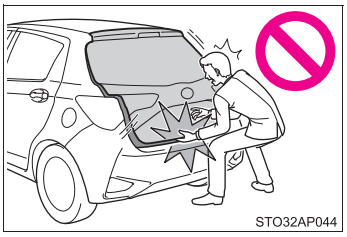
STO32AP044

- Do not pull on the back door damper stay to close the back door, and do not hang on the back door damper stay.
  Doing so may cause hands to be caught or the back door damper stay to break, causing an accident.
- If a bicycle carrier or similar heavy object is attached to the back door, it may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Toyota part is recommended.


NOTICE

Back door damper stays

The back door is equipped with damper stays that hold the back door in place.

Observe the following precautions.
Failure to do so may cause damage to the back door damper stay, resulting in malfunction.

- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.
- Do not touch the damper stay rod with gloves or other fabric items.
- Do not attach any accessories other than genuine Toyota parts to the back door.
- Do not place your hand on the damper stay or apply lateral forces to it.

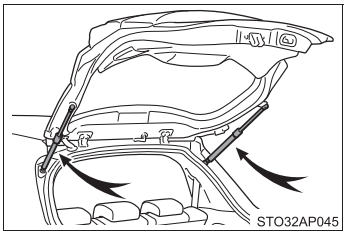


Smart entry & start system*

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. (The driver should always carry the electronic key.)

- Locks and unlocks the doors (→P. 154)
- Locks and unlocks the back door (→P. 161)
- Starts the engine (→P. 248)


Antenna location

① Antennas outside the cabin
② Antennas inside the cabin
③ Antenna outside the luggage compartment

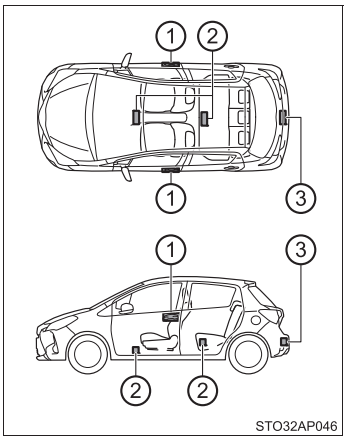

*: If equipped

■ **Effective range (areas within which the electronic key is detected)**

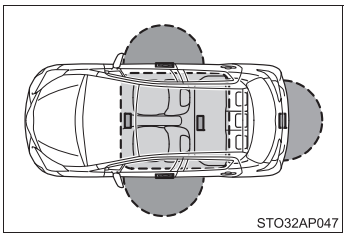

When locking or unlocking the doors

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) either of the outside front door handles and back door. (Only the doors detecting the key can be operated.)

When starting the engine or changing engine switch modes

The system can be operated when the electronic key is inside the vehicle.

■ **Alarms and warning indicators**

Vehicles with monochrome display: A combination of exterior and interior alarms as well as warning lights are used to prevent theft of the vehicle and unforeseeable accidents resulting from erroneous operation. Take appropriate measures for the warning light that comes on. (→P. 587)

Vehicles with color display: A combination of exterior and interior buzzers as well as warning messages shown on the multi-information display are used to prevent theft of the vehicle and accidents resulting from erroneous operation. Take appropriate measures based on the displayed message. (→P. 589)

The following table describes circumstances and correction procedures when only alarms are sounded.

Alarm	Situation/Actions
Exterior alarm sounds once for 5 seconds	• An attempt was made to lock the doors using the smart entry & start system while the electronic key was still inside the vehicle. → **Retrieve the electronic key from the vehicle and lock the doors again.** • An attempt was made to lock the vehicle while a door was open. → **Close all of the doors and lock the doors again.**
Interior alarm pings once and exterior alarm sounds once for 5 seconds	An attempt was made to lock either front door by opening a door and putting the inside lock button into the lock position, then closing the door by pulling on the outside door handle with the electronic key still inside the vehicle. → **Retrieve the electronic key from the vehicle and lock the doors again.**

Alarm	Situation/Actions
Interior alarm pings once and exterior alarm sounds once for 5 seconds (on some models)	An attempt was made to lock the doors other than using the smart entry & start system while the electronic key was still inside the vehicle. → **Retrieve the electronic key from the vehicle and lock the doors again.**
Interior alarm sounds continuously	The engine switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the engine switch was in ACCESSORY mode). → **Turn the engine switch off and close the driver's door.**
Interior alarm sounds continuously*	The driver's door was opened while any shift position other than P was selected without turning off the engine switch. → **Shift the shift lever to P.**

*: Vehicles with a Multidrive and monochrome display only

■ **When the smart entry & start system indicator flashes in yellow (vehicles with monochrome display) or "Check entry & start system." is displayed on the multi-information display (vehicles with color display)**

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ **Battery-saving function**

The battery-saving function will be activated in order to prevent the electronic key battery and the vehicle battery from being discharged while the vehicle is not in operation for a long time.


- In the following situations, the smart entry & start system may take some time to unlock the doors.
  - The electronic key has been left in an area of approximately 2 m (6 ft.) of the outside of the vehicle for 10 minutes or longer.
  - The smart entry & start system has not been used for 5 days or longer.
- If the smart entry & start system has not been used for 14 days or longer, the doors cannot be unlocked at any doors except the driver's door.
  In this case, take hold of the driver's door handle, or use the wireless remote control or the mechanical key, to unlock the doors.

Electronic key battery-saving function

When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

Press twice while pressing and holding . Confirm that the electronic key indicator flashes 4 times.

While the battery-saving mode is set, the smart entry & start system cannot be used. To cancel the function, press any of the electronic key buttons.

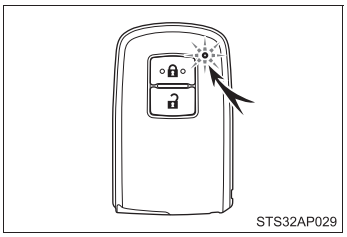

Conditions affecting operation

The smart entry & start system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system, wireless remote control and engine immobilizer system from operating properly.
(Ways of coping: →P. 629)

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device
- When the electronic key is in contact with, or is covered by the following metallic objects
  - Cards to which aluminum foil is attached
  - Cigarette boxes that have aluminum foil inside
  - Metallic wallets or bags
  - Coins
  - Hand warmers made of metal
  - Media such as CDs and DVDs
- When other wireless keys (that emit radio waves) are being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
  - Portable radio, cellular phone, cordless phone or other wireless communication device
  - Another vehicle's electronic key or a wireless key that emits radio waves
  - Personal computers or personal digital assistants (PDAs)
  - Digital audio players
  - Portable game systems

- If window tint with a metallic content or metallic objects are attached to the rear window
- When the electronic key is placed near a battery charger or electronic devices

Notes for the entry function

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
  - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
  - The electronic key is near the ground or in a high place, or too close to the rear bumper center when the back door is opened.
  - The electronic key is on the instrument panel, luggage cover (if equipped) or floor, or in the door pockets, glove box, accessory box of the instrument panel, or in/near the front cup holder when the engine is started or engine switch modes are changed.
- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone.
- Even if the electronic key is not inside the vehicle, it may be possible to start the engine if the electronic key is near the window.
- The doors may unlock if a large amount of water splashes on the door handle, such as in the rain or in a car wash when the electronic key is within the effective range. (The door will automatically be locked after approximately 30 seconds if the doors are not opened and closed.)
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
- Touching the door lock or unlock sensor while wearing gloves may prevent lock or unlock operation.
- When the lock operation is performed using the lock sensor, recognition signals will be shown up to two consecutive times. After this, no recognition signals will be given.
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:
  - Place the electronic key in a location 2 m (6 ft.) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
  - Set the electronic key to battery-saving mode to disable the smart entry & start system. (→P. 170)

- Vehicles with monochrome display: If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- Vehicles with color display: If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again.
- A sudden handle operation or a handle operation immediately after entering the effective range may prevent the doors from being unlocked. Touch the door unlock sensor and check that the doors are unlocked before pulling the door handle again.
- If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.

When the vehicle is not driven for extended periods

- To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
- The smart entry & start system can be deactivated in advance. (→P. 673)

■ **To operate the system properly**

Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.
Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention function may not operate.)

■ **If the smart entry & start system does not operate properly**

- Locking and unlocking the doors: Use the mechanical key. (→P. 629)
- Starting the engine: →P. 629

■ **Customization**

Settings (e. g. smart entry & start system) can be changed.
(Customizable features: →P. 673)

■ **If the smart entry & start system has been deactivated in a customized setting**

- Locking and unlocking the doors:
  Use the wireless remote control or mechanical key. (→P. 155, 629)
- Starting the engine and changing engine switch modes: →P. 629
- Stopping the engine: →P. 250

Certification for the smart entry & start system

TRCZ s.r.o.
Průmyslová 1165
410 02 Lovosice
Czech republic
společnost je registrována v OR vedeném Krajským soudem
v Ústí nad Labem, oddíl C., vložka 20465

tel: +420 416 421 111
fax: +420 416 421 555
email: info@trcz.cz

EU Declaration of Conformity

CE

1. Radio equipment (Product / Type):

   Electronic Key / BA7EQ

2. Name and address of the manufacturer:

   TRCZ s.r.o.
   Prumyslova 1165, 41002, Lovosice, Czech Republic

3. This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Object of the declaration:

   BA7EQ

5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

   Directive 2014/53/EU

6. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

(Health & safety requirements)	EN 60950-1:2006 + /A11:2009 + /A1:2010
(EMC requirements)	EN 301 489-1 V1.8.1 & EN 301 489-3 V1.4.1
(Effective uses of radio spectrum)	EN 300 330 V2.1.1 & EN 300 220-2 V3.1.1

7. The notified body:

   Not Applicable

8. Accessories and components, including software, which allow the radio equipment to operate as intended and covered by the EU declaration of conformity:

   Not Applicable

9. Additional information:

   None

Place and date of issue: Czech Republic, 10. 5. 2017

Signature:

Teruaki Kada
Function: President

CE

Address: Prumyslova 1165, 41002, Lovosice, Czech Republic

Hereby, TRCZ s.r.o. declares that the radio equipment type BA7EQ is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
http://www.tokai-rika.co.jp/pc

Frequency band: 433.050 - 434.790 MHz
Maximum radio-frequency power: 10mW(ERP)

TRCZ s.r.o. vakuuttaa, että radiolaitetyyppi BA7EQ on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
http://www.tokai-rika.co.jp/pc

Radiotaajuus: 433.050 - 434.790 MHz
suurin mahdollinen lähetysteho: 10mW(ERP)

Hierbij verklaar ik, TRCZ s.r.o., dat het type radioapparatuur BA7EQ conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tokai-rika.co.jp/pc Frequentieband: 433.050 - 434.790 MHz Maximaal radiofrequentievermogen: 10mW(ERP)
Le soussigné, TRCZ s.r.o., déclare que l'équipement radioélectrique du type BA7EQ est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tokai-rika.co.jp/pc Bande de fréquences: 433.050 - 434.790 MHz Puissance de radiofréquence maximale: 10mW(ERP)
Härmed försäkrar TRCZ s.r.o. att denna typ av radioutrustning BA7EQ överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc Frekvensband: 433.050 - 434.790 MHz Maximal radiofrekvenseffekt: 10mW(ERP)
Hermed erklærer TRCZ s.r.o., at radioudstyrstypen BA7EQ er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)

Hiermit erklärt TRCZ s.r.o., dass der Funkanlagentyp BA7EQ der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.tokai-rika.co.jp/pc Frequenzband: 433.050 - 434.790 MHz Abgestrahlte maximale Sendeleistung: 10mW(ERP)
Με την παρούσα ο/η TRCZ s.r.o., δηλώνει ότι ο ραδιοεξοπλισμός BA7EQ πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.tokai-rika.co.jp/pc Ζώνη συχνοτήτων: 433.050 - 434.790 MHz Μέγιστη ισχύς ραδιοσυχνότητας: 10mW(ERP)
Il fabbricante, TRCZ s.r.o., dichiara che il tipo di apparecchiatura radio BA7EQ è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.tokai-rika.co.jp/pc Banda di frequenza: 433.050 - 434.790 MHz Potenza massima radiofrequenza: 10mW(ERP)
Por la presente, TRCZ s.r.o. declara que el tipo de equipo radioeléctrico BA7EQ es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.tokai-rika.co.jp/pc Banda de frecuencia: 433.050 - 434.790 MHz Potencia máxima de radiofrecuencia: 10mW(ERP)

O(a) abaixo assinado(a) TRCZ s.r.o. declara que o presente tipo de equipamento de rádio BA7EQ está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc Banda de frequência: 433.050 - 434.790 MHz Potência máxima de radiofrequências: 10mW(ERP)
B'dan, TRCZ s.r.o., niddikjara li dan it-tip ta' tagħmir tar-radju BA7EQ huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc Tíðnisvið: 433.050 - 434.790 MHz Hámarks útvarpsbylgjutíðni: 10mW(ERP)
Käesolevaga deklareerib TRCZ s.r.o., et käesolev raadioseadme tüüp BA7EQ vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://www.tokai-rika.co.jp/pc Sagedusriba: 433.050 - 434.790 MHz Maksimaalne saatevõimsus: 10mW(ERP)
TRCZ s.r.o. igazolja, hogy a BA7EQ típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.tokai-rika.co.jp/pc Frekvenciasáv: 433.050 - 434.790 MHz Maximális jelerősség: 10mW(ERP)

TRCZ s.r.o. týmto vyhlasuje, že rádiové zariadenie typu BA7EQ je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.tokai-rika.co.jp/pc Frekvenčné pásmo: 433.050 - 434.790 MHz Maximálny rádiofrekvenčný výkon: 10mW(ERP)
Tímto TRCZ s.r.o. prohlašuje, že typ rádiového zařízení BA7EQ je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.tokai-rika.co.jp/pc Kmitočtové pásmo: 433.050 - 434.790 MHz Maximální radiofrekvenční výkon: 10mW(ERP)
TRCZ s.r.o. potrjuje, da je tip radijske opreme BA7EQ skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.tokai-rika.co.jp/pc Frekvenčni pas: 433.050 - 434.790 MHz Največja moč radijske frekvence: 10mW(ERP)
Aš, TRCZ s.r.o., patvirtinu, kad radijo įrenginių tipas BA7EQ atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.tokai-rika.co.jp/pc Dažnių juosta: 433.050 - 434.790 MHz Didžiausia radijo dažnių galia: 10mW(ERP)

Ar šo TRCZ s.r.o. deklarē, ka radioiekārta BA7EQ atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.tokai-rika.co.jp/pc Frekvenču josla: 433.050 - 434.790 MHz Maksimālā radiofrekvenču jauda: 10mW(ERP)
TRCZ s.r.o. niniejszym oświadcza, że typ urządzenia radiowego BA7EQ jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tokai-rika.co.jp/pc Zakres częstotliwości: 433.050 - 434.790 MHz Maksymalna moc częstotliwości radiowej: 10mW(ERP)
TRCZ s.r.o. lýsir því hér með yfir að fjarskiptatækið af gerð BA7EQ er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc Tíðnisvið: 433.050 - 434.790 MHz Hámarks útvarpsbylgjutíðni: 10mW(ERP)
TRCZ s.r.o. erklærer herved at radioutstyrtypen BA7EQ er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://www.tokai-rika.co.jp/pc Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)

С настоящото TRCZ s.r.o. декларира, че този тип радиосъоръжение BA7EQ е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.tokai-rika.co.jp/pc Радиочестотна лента: 433.050 - 434.790 MHz Максимална радиочестотна мощност: 10mW(ERP)
Prin prezenta, TRCZ s.r.o. declară că tipul de echipamente radio BA7EQ este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.tokai-rika.co.jp/pc Banda de frecvență: 433.050 - 434.790 MHz Puterea maximă de radiofrecvență: 10mW(ERP)
Ovime TRCZ s.r.o. potvrđuje da je radio-oprema tipa BA7EQ u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://www.tokai-rika.co.jp/pc Frekvencijski opseg: 433.050 - 434.790 MHz Maksimalna radio-frekvencijska snaga: 10mW(ERP)
Me anë të këtij dokumenti, TRCZ s.r.o. deklaron se tipi i radiopajisjes BA7EQ është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc Brezi i frekuencës: 433.050 - 434.790 MHz Fuqia maksimale e radiofrekuencës: 10mW(ERP)

TRCZ s.r.o. ovime izjavljuje da je radijska oprema tipa BA7EQ u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.tokai-rika.co.jp/pc Frekvencijski pojas: 433.050 - 434.790 MHz Maksimalna RF snaga: 10mW(ERP)
Ovim TRCZ s.r.o. potvrđuje da je radio-oprema tipa BA7EQ u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://www.tokai-rika.co.jp/pc Frekventni opseg: 433.050 - 434.790 MHz Maksimalna radio-frekventna snaga: 10mW(ERP)
TRCZ s.r.o., işbu belgeyle telsiz cihazı türünün BA7EQ 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://www.tokai-rika.co.jp/pc Frekans bandı: 433.050 - 434.790 MHz Maksimum radyo frekans gücü: 10mW(ERP)

TOKAI RIKA
OGUCHI-CHO, NIWA-GUN
AICHI-KEN, 480-0195 JAPAN
TEL:+81-587-95-0093
FAX:+81-587-95-5471

EU Declaration of Conformity

CE

1. Radio equipment (Product / Type):

   Tuner / BC2UM

2. Name and address of the manufacturer:

   TOKAI RIKA CO., LTD.
   3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

3. This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Object of the declaration:

   BC2UM

5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

   Directive 2014/53/EU

6. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

(Health & safety requirements)	EN 60950-1:2006 + /A11:2009 + /A1:2010 + /A12:2011
(EMC requirements)	EN 301 489-1 V1.9.2 & EN 301 489-3 V1.4.1
(Effective uses of radio spectrum)	EN 300 220-2 V3.1.1

7. The notified body:

   Not Applicable

8. Accessories and components, including software, which allow the radio equipment to operate as intended and covered by the EU declaration of conformity:

   Not Applicable

9. Additional information:

   None

Place and date of issue: Japan, April 27, 2017

Signature: Kenji Mabuchi

Function: Kenji Mabuchi
General Manager

CE

Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category (EN300 220): 3

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BC2UM is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BC2UM on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
http://www.tokai-rika.co.jp/pc

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BC2UM conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
http://www.tokai-rika.co.jp/pc

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BC2UM est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
http://www.tokai-rika.co.jp/pc

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BC2UM överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc
Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BC2UM er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc
Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BC2UM der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.tokai-rika.co.jp/pc
Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BC2UM πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.tokai-rika.co.jp/pc
Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BC2UM è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.tokai-rika.co.jp/pc

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BC2UM es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.tokai-rika.co.jp/pc
O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BC2UM está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc
B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BC2UM huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc
Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BC2UM vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. igazolja, hogy a BC2UM típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BC2UM je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.tokai-rika.co.jp/pc
Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BC2UM je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BC2UM skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.tokai-rika.co.jp/pc
Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BC2UM atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.tokai-rika.co.jp/pc
Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BC2UM atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BC2UM jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BC2UM er í samræmi við tilskipun 2014/53/EU. Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BC2UM er i samsvar med direktivet 2014/53/EU. Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet: http://www.tokai-rika.co.jp/pc
С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BC2UM е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.tokai-rika.co.jp/pc
Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BC2UM este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.tokai-rika.co.jp/pc

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BC2UM u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://www.tokai-rika.co.jp/pc
Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BC2UM është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BC2UM u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.tokai-rika.co.jp/pc
Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BC2UM u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://www.tokai-rika.co.jp/pc
TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BC2UM 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz: http://www.tokai-rika.co.jp/pc

TOYOTA

TOYOTA MOTOR CORPORATION

1, TOYOTA-CHO, TOYOTA, AICHI, 471-8571, JAPAN TEL: +81-565-28-2121

EU Declaration of Conformity

CE

1. Radio equipment (Product / Type):

   Smart LF Oscillator / TMLF10-51

2. Name and address of the manufacturer:

   TOYOTA MOTOR CORPORATION
   1, Toyota -cho, Toyota, Aichi, 471-8572, Japan

3. This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Object of the declaration:

   TMLF10-51

5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

   Directive 2014/53/EU

6. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

(Health & safety requirements)	EN 60950-1:2006 + Amd.11:2009 + Amd.1:2010 + Amd.12:2011
(EMC requirements)	EN 301 489-1 V1.9.2 & EN 301 489-3 V1.4.1
(Effective uses of radio spectrum)	EN 300 330 V2.1.1

7. The notified body:

   Not Applicable

8. Accessories and components, including software, which allow the radio equipment to operate as intended and covered by the EU declaration of conformity:

   Not Applicable

9. Additional information:

   None

Place and date of issue: Japan, April 10, 2017

Signature: Tomoo Kakegawa

Function: Tomoo Kakegawa, General Manager

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type TMLF10-51 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://my.toyota.eu Frequency band: 119 - 135 kHz Maximum radio-frequency power: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi TMLF10-51 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://my.toyota.eu Radiotaajuus: 119 - 135 kHz suurin mahdollinen lähetysteho: 55dBμA/m @10m
Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur TMLF10-51 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://my.toyota.eu Frequentieband: 119 - 135 kHz Maximaal radiofrequentievermogen: 55dBμA/m @10m
Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type TMLF10-51 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://my.toyota.eu Bande de fréquences: 119 - 135 kHz Puissance de radiofréquence maximale: 55dBμA/m @10m

Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning TMLF10-51 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på fö ljande webbadress: http://my.toyota.eu Frekvensband: 119 - 135 kHz Maximal radiofrekvenseffekt: 55dBμA/m @10m
Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen TMLF10-51 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://my.toyota.eu Frekvensbånd: 119 - 135 kHz Maksimal radiofrekvenseffekt: 55dBμA/m @10m
Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp TMLF10-51 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://my.toyota.eu Frequenzband: 119 - 135 kHz Abgestrahlte maximale Sendeleistung: 55dBμA/m @10m
Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοε ξοπλισμός TMLF10-51 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ισ τοσελίδα στο διαδίκτυο: http://my.toyota.eu Ζώνη συχνοτήτων: 119 - 135 kHz Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m @10m

Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio TMLF10-51 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://my.toyota.eu Banda di frequenza: 119 - 135 kHz Potenza massima radiofrequenza: 55dBµA/m @10m
Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico TMLF10-51 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://my.toyota.eu Banda de frecuencia: 119 - 135 kHz Potencia máxima de radiofrecuencia: 55dBµA/m @10m
O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio TMLF10-51 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://my.toyota.eu Banda de frequência: 119 - 135 kHz Potência máxima de radiofrequências: 55dBµA/m @10m
B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju TMLF10-51 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://my.toyota.eu Tíðnisvið: 119 - 135 kHz Hámarks útvarpsbylgjutíðni: 55dBµA/m @10m

Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp TMLF10-51 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
http://my.toyota.eu

Sagedusriba: 119 - 135 kHz
Maksimaalne saatevõimsus: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION igazolja, hogy a TMLF10-51 típusú rádió berendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
http://my.toyota.eu

Frekvenciasáv: 119 - 135 kHz
Maximális jelerősség: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu TMLF10-51 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
http://my.toyota.eu

Frekvenčné pásmo: 119 - 135 kHz
Maximálny rádiofrekvenčný výkon: 55dBµA/m @10m

Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení TMLF10-51 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
http://my.toyota.eu

Kmitočtové pásmo: 119 - 135 kHz
Maximální radiofrekvenční výkon: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme TMLF10-51 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://my.toyota.eu Frekvenčni pas: 119 - 135 kHz Največja moč radijske frekvence: 55dBμA/m @10m
Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas TMLF10-51 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://my.toyota.eu Dažnių juosta: 119 - 135 kHz Didžiausia radijo dažnių galia: 55dBμA/m @10m
Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta TMLF10-51 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://my.toyota.eu Frekvenču josla: 119 - 135 kHz Maksimālā radiofrekvenču jauda: 55dBμA/m @10m
TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego TMLF10-51 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://my.toyota.eu Zakres częstotliwości: 119 - 135 kHz Maksymalna moc częstotliwości radiowej: 55dBμA/m @10m

TOYOTA MOTOR CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð TMLF10-51 er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð:
http://my.toyota.eu

Tíðnisvið: 119 - 135 kHz
Hámarks útvarpsbylgjutíðni: 55dBμA/m @10m

TOYOTA MOTOR CORPORATION erklærer herved at radioutstyrtypen TMLF10-51 er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:
http://my.toyota.eu

Frekvensbånd: 119 - 135 kHz
Maksimal radiofrekvenseffekt: 55dBμA/m @10m

С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение TMLF10-51 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
http://my.toyota.eu

Радиочестотна лента: 119 - 135 kHz
Максимална радиочестотна мощност: 55dBμA/m @10m

Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio TMLF10-51 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
http://my.toyota.eu

Banda de frecvență: 119 - 135 kHz
Puterea maximă de radiofrecvență: 55dBμA/m @10m

Ovime TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF10-51 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi: http://my.toyota.eu Frekvencijski opseg: 119 - 135 kHz Maksimalna radio-frekvencijska snaga: 55dBµA/m @10m
Me anë të këtij dokumenti, TOYOTA MOTOR CORPORATION deklaron se tipi i radiopajisjes TMLF10-51 është në përputhje me Direktivën 2014/53/EU. Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://my.toyota.eu Brezi i frekuencës: 119 - 135 kHz Fuqia maksimale e radiofrekuencës: 55dBµA/m @10m
TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa TMLF10-51 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://my.toyota.eu Frekvencijski pojas: 119 - 135 kHz Maksimalna RF snaga: 55dBµA/m @10m
Ovim TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF10-51 u skladu sa Direktivom 2014/53/EU. Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi: http://my.toyota.eu Frekventni opseg: 119 - 135 kHz Maksimalna radio-frekventna snaga: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION, işbu belgeyle telsiz cihazı türünün TMLF10-51 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaş abilirsiniz:
http://my.toyota.eu

Frekans bandı: 119 - 135 kHz
Maksimum radyo frekans gücü: 55dBμA/m @10m

WARNING

■ **Caution regarding interference with electronic devices**


- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the smart entry & start system antennas. (→P. 167)
  The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.
- Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.
  Radio waves could have unexpected effects on the operation of such medical devices.

Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details on disabling the entry function.

Front seats

Adjustment procedure

① Seat position adjustment lever
② Seatback angle adjustment lever
③ Vertical height adjustment lever (if equipped)
④ Seatback lock release lever (3-door models only)

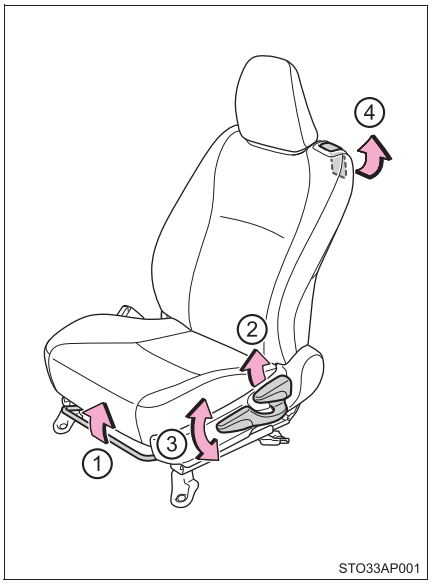


Moving front passenger's seat for rear seat entry (3-door models only)

■ Getting in the vehicle


For easy access to the rear seat, use the seatback lock release lever. When the seatback lock release lever is used, the seat's original slide position is memorized, so the seat may be returned to that original position. However, if the seatback angle adjustment lever is used, the seat will not return to its original position.

Lift the seatback lock release lever.
The seatback will fold forward, and the seat's slide lock will be released.
Move the seat all the way forward.

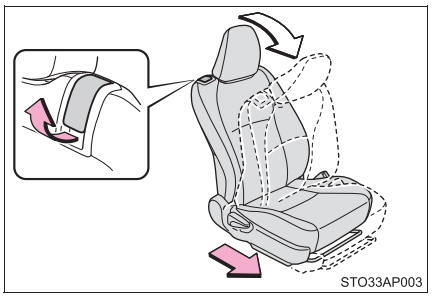

■ Getting out of the vehicle

Lift the seatback lock release lever or seatback angle adjustment lever.
The seatback will fold forward, and the seat's slide lock will be released.
Move the seat all the way forward.

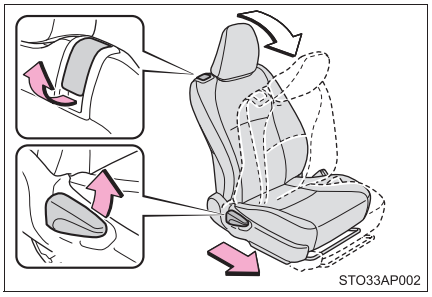

■ **After passengers have entered the vehicle (3-door models only)**

Slide the seat backward and then lift the seatback. The seat will be set and locked to its previous position automatically. If the seat cannot be slid back to the previous position due to the rear passenger or luggage, the seat will be locked in that position, disabling the seat position memory system.

To recall the previous position, lift the seatback lock release lever after removing the luggage, or after having the passenger get out or sit properly so that the seat can be slid back to the previous position. However, if you slide the seat further backwards than previous position using the seat position adjustment lever, the memory of previous position will be overwritten.

⚠ WARNING

■ **When adjusting the seat position**

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury.
  Fingers or hands may become jammed in the seat mechanism.

■ **Seat adjustment**

- Be careful that the seat does not hit passengers or luggage.
- To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.
  If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.
  Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.
- After adjusting the seat, make sure that the seat is locked in position.
- Never allow anyone to touch seatback lock release levers while the vehicle is moving.
- If anyone is in the vicinity, make sure they are clear of the seat back path and let them know that the seat is about to move.

■ **After returning the seatback to the upright position**


Make sure the seatback is securely locked by pushing it forward and rearward. Failure to do so may result in death or serious injury.

Rear seats*

The seatbacks of the rear seats can be folded down.

Folding down the rear seatbacks


1 Stow the rear seat belt buckles as shown.

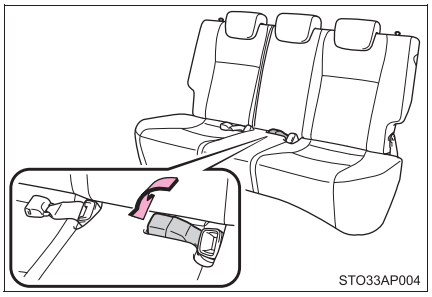


2 Stow the seat belts.

Center: →P. 38

Outside: Use the seat belt hangers to prevent the belts from being tangled.

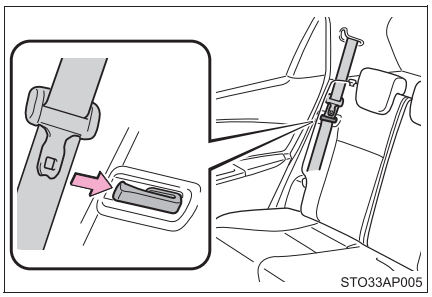


3 Lower the head restraints to the lowest position.

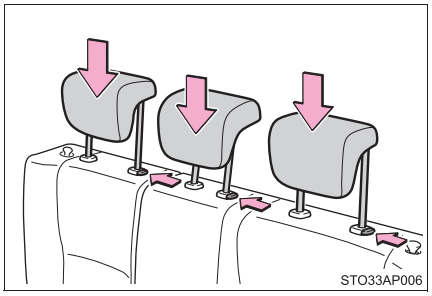

*: If equipped


4 Pull the seatback lock release knob and fold the seatback down.

Each seatback may be folded separately.

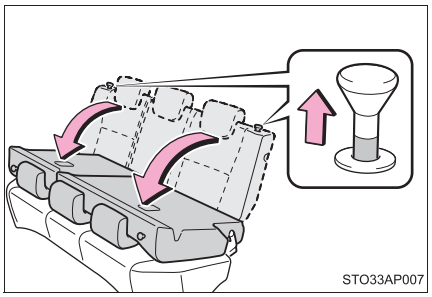


Returning the rear seatbacks

1 Lift up the seatback until it locks.

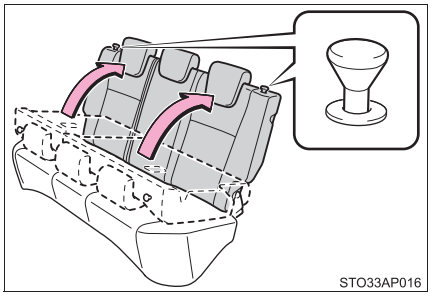

2 Return the seat belt to the original position.
Center: →P. 38
Outside: Remove the outside seat belt from the seat belt hanger.

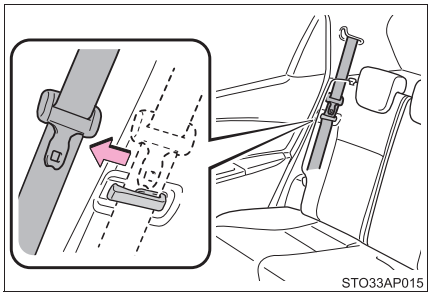

WARNING

When folding the rear seatbacks down


Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not fold the seatbacks down while driving.
- Stop the vehicle on level ground, set the parking brake and shift the shift lever to P (Multidrive) or N (manual transmission).
- Do not allow anyone to sit on a folded seatback or in the luggage compartment while driving.
- Do not allow children to enter the luggage compartment.
- Do not allow anyone to sit on the rear center seat if the rear right seat is folded down, as the seat belt buckle for the rear center seat belt is then concealed under the folded seat and cannot be used.
- Be careful not to catch your hand when folding the rear seatbacks.
- Depending on the position of the front seat, it may interfere when trying to fold down the rear seatbacks. If this happens, adjust the position of the front seat.

After returning the rear seatback to the upright position

Observe the following precautions. Failure to do so may result in death or serious injury.

- Make sure that the seatback is securely locked in position by lightly pushing it back and forth.
  If the seatback is not securely locked, the red marking will be visible on the seatback lock release knob. Make sure that the red marking is not visible.

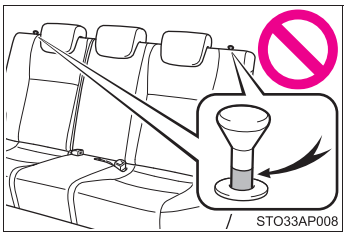

- Check that the seat belts are not twisted or caught in the seatback.

NOTICE

Stowing the seat belts

The seat belts and the buckles must be stowed before you fold down the rear seatbacks.

Head restraints

Head restraints are provided for all seats.


Adjusting the head restraints

① Up

Pull the head restraints up.

② Down


Push the head restraint down while pressing the lock release button.

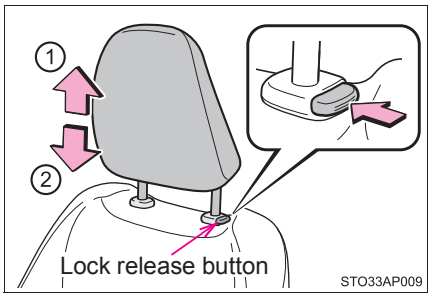

■ Removing the head restraints


▶ Front seats and rear center seat

Pull the head restraint up while pressing the lock release button.

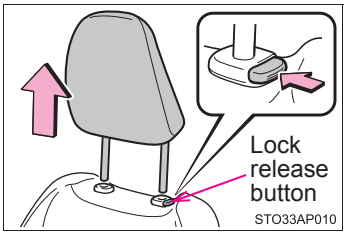


▶ Rear outer seats

1 Pull the lock release knob and fold down the seatback until it reaches the position where the head restraints can be removed.

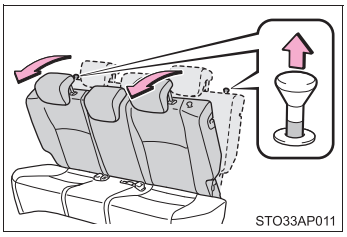


2 Pull the head restraint up while pushing the lock release button.

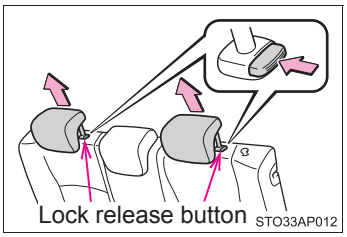


Installing the front seat head restraints

Align the head restraint with the installation holes and push it down to the lock position.
Press and hold the lock release button when lowering the head restraint.

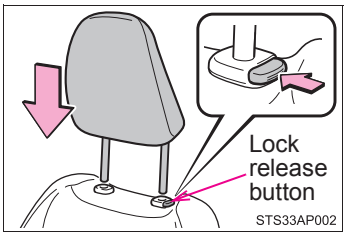


Installing the rear seat head restraints

1 Rear outer seats: Pull the lock release knob and fold down the seatback until it reaches the position where the head restraints can be installed.

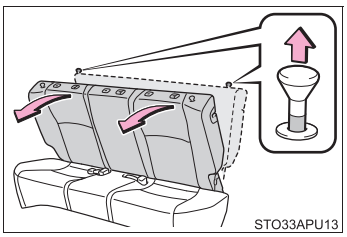


2 Align the head restraint with the installation holes and push it down to the lock position.
Press and hold the lock release button when inserting the head restraint.

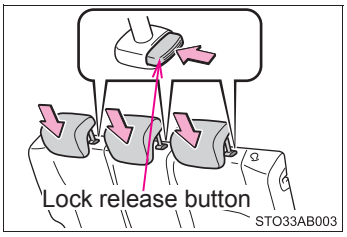

Adjusting the height of the head restraints

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

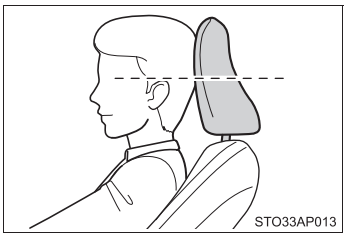

Adjusting the rear seat head restraints

Always raise the head restraint one level from the stowed position when in use.

WARNING

Head restraint precautions


Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

Steering wheel


Adjustment procedure

1 Hold the steering wheel and push the lever down.

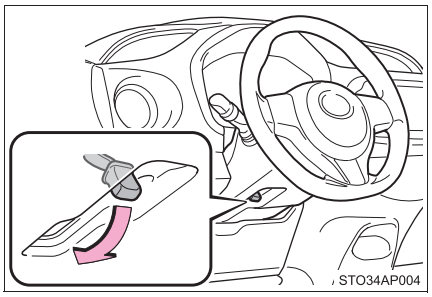


2 Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

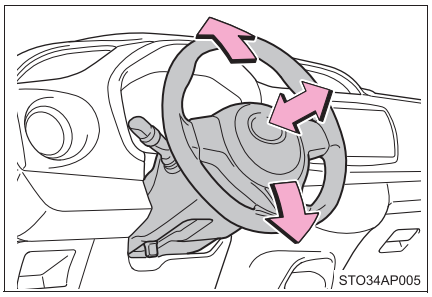

Horn

To sound the horn, press on or close to the mark.

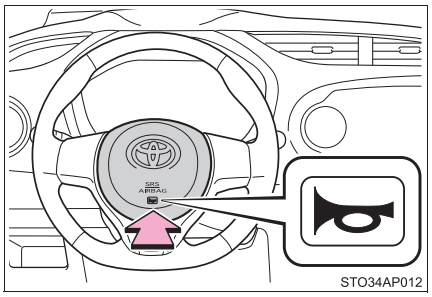

After adjusting the steering wheel

Make sure that the steering wheel is securely locked.
The horn may not sound if the steering wheel is not securely locked.

WARNING

Caution while driving

Do not adjust the steering wheel while driving.
Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

After adjusting the steering wheel

Make sure that the steering wheel is securely locked.
Otherwise, the steering wheel may move suddenly, possibly causing an accident and resulting in death or serious injury.


Inside rear view mirror

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

Adjusting the height of rear view mirror (if equipped)

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

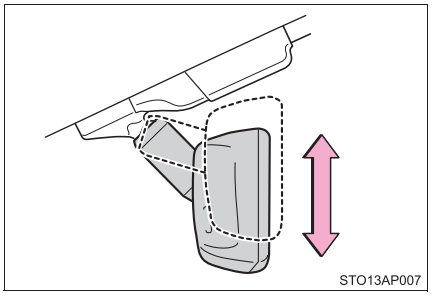


Anti-glare function

▶ Vehicles with a manual anti-glare inside rear view mirror

Reflected light from the headlights of vehicles behind can be reduced by operating the lever.

① Normal position
② Anti-glare position

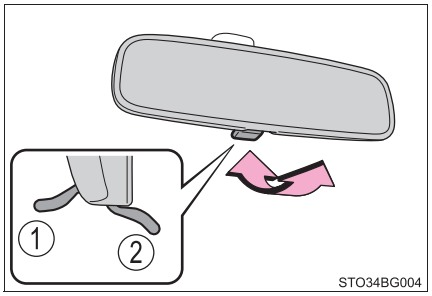


▶ Vehicles with an auto anti-glare inside rear view mirror

Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.

Changing automatic anti-glare function mode

ON/OFF

When the automatic anti-glare function is in ON mode, the indicator illuminates.

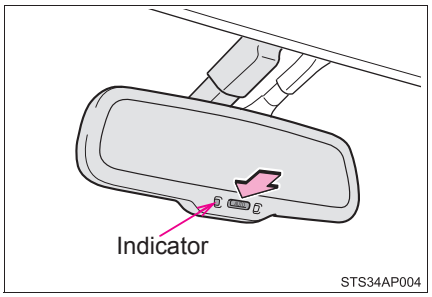


Vehicles without a smart entry & start system:
The function will set to ON mode each time the engine switch is turned to the “ON” position. Pressing the button turns the function to OFF mode. (The indicator also turns off.)

Vehicles with a smart entry & start system:
The function will set to ON mode each time the engine switch is turned to IGNITION ON mode. Pressing the button turns the function to OFF mode. (The indicator also turns off.)

■ To prevent sensor error (vehicles with an auto anti-glare inside rear view mirror)

To ensure that the sensors operate properly, do not touch or cover them.

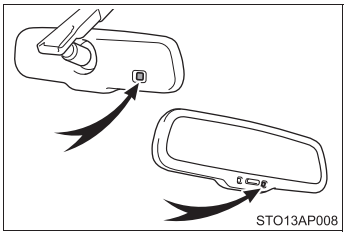

⚠ WARNING


Do not adjust the position of the mirror while driving.
Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

Outside rear view mirrors

Adjustment procedure

▶ Manually-adjustable type

Adjust the mirror up, down, in or out by pushing the mirror surface.

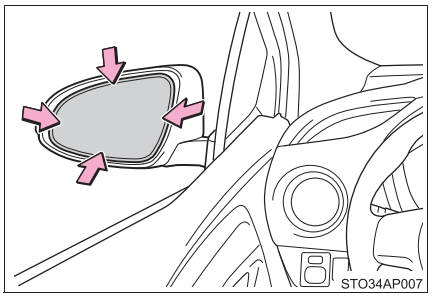


▶ Power-adjustable type

1 To select a mirror to adjust, press the switch.

① Left

② Right

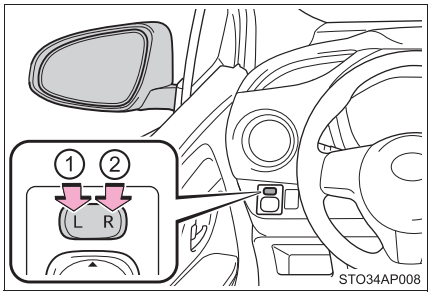


2 To adjust the mirror, press the switch.

① Up

② Right

③ Down


④ Left

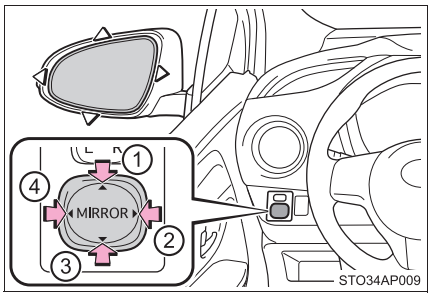

Folding the mirrors

▶ Manual type

Push the mirror back in the direction of the vehicle's rear.

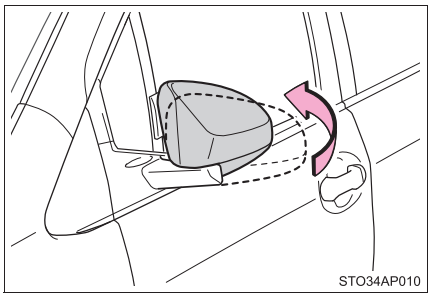


▶ Power type

Press the button to fold back the mirrors

Push once more to return to the original position.

The outside rear view mirrors will be folded or extended automatically, linked with the door locking or unlocking operations.

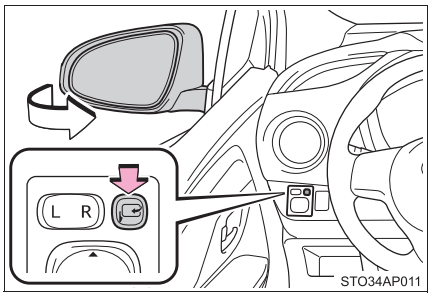

■ **Mirror angle can be adjusted when (power-adjustable type)**

▶ Vehicles without a smart entry & start system

The engine switch is in the "ACC" or "ON" position.

▶ Vehicles with a smart entry & start system

The engine switch is in ACCESSORY or IGNITION ON mode.

■ **When the mirrors are fogged up (vehicles with outside rear view mirror defoggers)**

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. (→P. 436, 447)

WARNING

■ **Important points while driving**

Observe the following precautions while driving.
Failure to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

■ **When a mirror is moving (power-adjustable type)**

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

■ **When the mirror defoggers are operating (vehicles with outside rear view mirror defoggers)**

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

Power windows

Opening and closing procedures

The power windows can be opened and closed using the switches. Operating the switch moves the windows as follows:


① Closing

② One-touch closing (driver's window only)*

③ Opening

④ One-touch opening (driver's window only)*


*: To stop the window partway, operate the switch in the opposite direction.

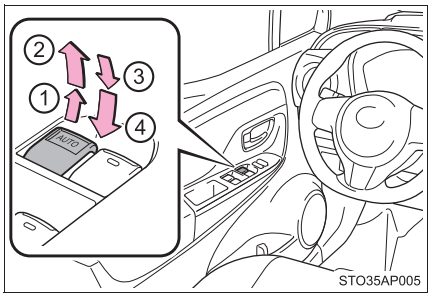

Window lock switch

Press the switch down to lock the passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

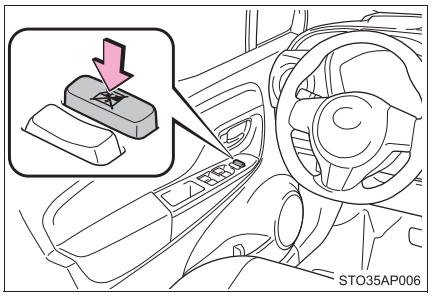

■ **The power windows can be operated when**

▶ Vehicles without a smart entry & start system

The engine switch is in the “ON” position.

▶ Vehicles with a smart entry & start system

The engine switch is in IGNITION ON mode.

■ **Operating the power windows after turning the engine off**

▶ Vehicles without a smart entry & start system

The power windows can be operated for approximately 45 seconds even after the engine switch is turned to the “ACC” or “LOCK” position. They cannot, however, be operated once either front door is opened.

▶ Vehicles with a smart entry & start system

The power windows can be operated for approximately 45 seconds even after the engine switch is turned to ACCESSORY mode or turned off. They cannot, however, be operated once either front door is opened.

■ **Jam protection function (driver’s window only)**

If an object becomes caught between the window and the window frame, window travel is stopped and the window is opened slightly.

■ **When the power window does not close normally**

If the jam protection function is operating abnormally and a window cannot be closed, perform the following operations using the power window switch on the driver's door.

- After stopping the vehicle, the window can be closed by holding the power window switch in the one-touch closing position while the engine switch is turned to the "ON" position (vehicles without a smart entry & start system) or IGNITION ON mode (vehicles with a smart entry & start system).
- If the window still cannot be closed even by carrying out the operation as explained above, initialize the function by performing the following procedure.

1. Hold the power window switch in the one-touch closing position. Continue holding the switch for a further 6 seconds after the window has closed.
2. Hold the power window switch in the one-touch opening position. Continue holding the switch for a further 2 seconds after the window has opened completely.
3. Hold the power window switch in the one-touch closing position once again. Continue holding the switch for a further 2 seconds after the window has closed.

If you release the switch while the window is moving, start again from the beginning.
If the window continues to close but then re-open slightly even after performing the above procedure correctly, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ Closing the windows

- The driver is responsible for all the power window operations, including the operation for the passengers. In order to prevent accidental operation, especially by a child, do not let a child operate the power windows. It is possible for children and other passengers to have body parts caught in the power window. Also, when riding with a child, it is recommended to use the window lock switch. (→P. 216)
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- When exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

■ Jam protection function (driver's window only)

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the window fully closes.

Driving 4

4-1. Before driving

Driving the vehicle 222
Cargo and luggage 233
Trailer towing 235

4-2. Driving procedures

Engine (ignition) switch (vehicles without a smart entry & start system).....245
Engine (ignition) switch (vehicles with a smart entry & start system).....248
Multidrive 257
Manual transmission.....265
Turn signal lever 269
Parking brake 270

4-3. Operating the lights and wipers

Headlight switch 271
Fog light switch.....276
Windshield wiper and washer.....278
Rear window wiper and washer.....282

4-4. Refueling

Opening the fuel tank cap.....284

4-5. Toyota Safety Sense

Toyota Safety Sense 287
PCS (Pre-Crash Safety system).....295
LDA (Lane Departure Alert).....312
Automatic High Beam.....319
RSA (Road Sign Assist).....324

4-6. Using the driving support systems

Cruise control.....330
Speed limiter.....334
Stop & start system.....339
Driving assist systems 350

4-7. Driving tips

Winter driving tips 357

Driving the vehicle

The following procedures should be observed to ensure safe driving:

Starting the engine

→P. 245, 248

Driving

▶ Vehicles with a Multidrive

1 With the brake pedal depressed, shift the shift lever to D. (→P. 257)

2 Release the parking brake. (→P. 270)

3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

▶ Vehicles with a manual transmission

1 While depressing the clutch pedal, shift the shift lever to 1. (→P. 265)

2 Release the parking brake. (→P. 270)

3 Gradually release the clutch pedal. At the same time, gently depress the accelerator pedal to accelerate the vehicle.

Stopping

▶ Vehicles with a Multidrive

1 With the shift lever in D, depress the brake pedal.

Vehicles with a Stop & Start system: If the Stop & Start system is enabled, depressing the brake pedal will stop the engine. (→P. 339)

2 If necessary, set the parking brake.

If the vehicle is to be stopped for an extended period of time, shift the shift lever to P. (→P. 257)

▶ Vehicles with a manual transmission

1 While depressing the clutch pedal, depress the brake pedal.

2 If necessary, set the parking brake.

If the vehicle is to be stopped for an extended period of time, shift the shift lever to N. (→P. 265)

Vehicles with a Stop & Start system: If the Stop & Start system is enabled, shifting the shift lever to N and releasing the clutch pedal will stop the engine. (→P. 339)

Parking the vehicle

▶ Vehicles with a Multidrive

1 With the shift lever in D, depress the brake pedal.

2 Set the parking brake (→P. 270), and shift the shift lever to P (→P. 257).

If parking on a hill, block the wheels as needed.

3 Vehicles without a smart entry & start system: Turn the engine switch to the “LOCK” position to stop the engine.

Vehicles with a smart entry & start system: Press the engine switch to stop the engine.

4 Lock the door, making sure that you have the electronic key on your person.

▶ Vehicles with a manual transmission

1 While depressing the clutch pedal, depress the brake pedal.

2 Set the parking brake. (→P. 270)

3 Shift the shift lever to N. (→P. 265)

If parking on a hill, shift the shift lever to 1 or R and block the wheels as needed.

4 Vehicles without a smart entry & start system: Turn the engine switch to the “LOCK” position to stop the engine.

Vehicles with a smart entry & start system: Press the engine switch to stop the engine.

5 Lock the door, making sure that you have the key on your person.

Starting off on a steep uphill

▶ Vehicles with a Multidrive

1 Firmly set the parking brake with the brake pedal depressed, and then shift the shift lever to D.

2 Release the brake pedal and gently depress the accelerator pedal.

3 Release the parking brake.

▶ Vehicles with a manual transmission

1 With the parking brake firmly set and the clutch pedal fully depressed, shift the shift lever to 1.

2 Lightly depress the accelerator pedal at the same time as gradually releasing the clutch pedal.

3 Release the parking brake.

■ **When starting off on an uphill**

The hill-start assist control will activate. (→P. 353)

■ **Driving in the rain**

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

■ **Engine speed while driving (vehicles with a Multidrive)**

In the following conditions, the engine speed may become high while driving. This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- The vehicle is judged to be driving uphill or downhill
- When the accelerator pedal is released
- When the brake pedal is depressed while sport mode is selected

■ **Breaking in your new Toyota**

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 300 km (200 miles):
  Avoid sudden stops.
- For the first 800 km (500 miles):
  Do not tow a trailer.
- For the first 1000 km (600 miles):
  - Do not drive at extremely high speeds.
  - Avoid sudden acceleration.
  - Do not drive continuously in low gears.
  - Do not drive at a constant speed for extended periods.

■ **Idling time before stopping the engine stop (diesel engine only)**

To prevent damage to the turbocharger, allow the engine to idle immediately after high-speed driving or driving up a hill.

Driving condition		Idling time
Normal city driving		Not necessary
High-speed driving	Constant speed of approximately 80 km/h (50 mph)	Approximately 20 seconds
	Constant speed of approximately 100 km/h (63 mph)	Approximately 1 minute
Steep hill driving or continuous driving at 100 km/h (63 mph) or more (race track driving etc.)		Approximately 2 minutes

■ **Operating your vehicle in a foreign country**

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P. 670)

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ **When starting the vehicle (vehicles with a Multidrive)**

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

■ **When driving the vehicle**

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
  - Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
  - When backing up, you may twist your body around, leading to difficulty in operating the pedals. Make sure to operate the pedals properly.
  - Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
  - Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- Do not drive the vehicle over or stop the vehicle near flammable materials. The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.
- During normal driving, do not turn off the engine. Turning the engine off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so.
  However, in the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way: →P. 567
- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill.
  Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P. 257, 265)
- Do not adjust the positions of the steering wheel, the seat, or the inside or outside rear view mirrors while driving.
  Doing so may result in a loss of vehicle control.
- Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle.

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

When driving on slippery road surfaces

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle.
- Sudden acceleration, engine braking due to shifting, or changes in engine speed could cause the vehicle to skid.
- After driving through a puddle, depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

When shifting the shift lever

- On vehicles with a Multidrive, do not let the vehicle roll backward while the shift lever is in a driving position, or roll forward while the shift lever is in R. Doing so may cause the engine to stall or lead to poor brake and steering performance, resulting in an accident or damage to the vehicle.
- On vehicles with a Multidrive, do not shift the shift lever to P while the vehicle is moving. Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to R while the vehicle is moving forward. Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to a driving position while the vehicle is moving backward. Doing so can damage the transmission and may result in a loss of vehicle control.
- Shifting the shift lever to N while the vehicle is moving will disengage the engine from the transmission. Engine braking is not available when N is selected.
- On vehicles with a Multidrive, be careful not to shift the shift lever with the accelerator pedal depressed. Shifting the shift lever to a gear other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

WARNING

■ **If you hear a squealing or scraping noise (brake pad wear indicators)**

Have the brake pads checked and replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.
Rotor damage may result if the pads are not replaced when needed.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

■ **When the vehicle is stopped**

- Do not race the engine.
  If the vehicle is in any gear other than P (Multidrive) or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.
- On vehicles with a Multidrive, in order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while the engine is running, and apply the parking brake as necessary.
- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.
- Avoid revving or racing the engine.
  Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

■ **When the vehicle is parked**

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.
  Doing so may result in the following:
  - Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
  - The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
  - Soft drink cans may rupture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.

WARNING

- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- On vehicles with a Multidrive, always apply the parking brake, shift the shift lever to P, stop the engine and lock the vehicle.
  Do not leave the vehicle unattended while the engine is running.
  If the vehicle is parked with the shift lever in P but the parking brake is not set, the vehicle may start to move, possibly leading to an accident.
- Do not touch the exhaust pipes while the engine is running or immediately after turning the engine off.
  Doing so may cause burns.

When taking a nap in the vehicle

Always turn the engine off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to engine overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

When braking

- When the brakes are wet, drive more cautiously.
  Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.
- If the brake booster device does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking.
  In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.
- Do not pump the brake pedal if the engine stalls.
  Each push on the brake pedal uses up the reserve for the power-assisted brakes.
- The brake system consists of 2 individual hydraulic systems; if one of the systems fails, the other will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. Have your brakes fixed immediately.

NOTICE

■ **When driving the vehicle**

▶ Vehicles with a Multidrive

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain the engine output.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

▶ Vehicles with a manual transmission

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain the engine output.
- Do not shift gears unless the clutch pedal is fully depressed. After shifting, do not release the clutch pedal abruptly. Doing so may damage the clutch, transmission and gears.
- Observe the following to prevent the clutch from being damaged.
  - Do not rest your foot on the clutch pedal while driving.
    Doing so may cause clutch trouble.
  - Do not use any gear other than the 1st gear when starting off and moving forward.
    Doing so may damage the clutch.
  - Do not use the clutch to hold the vehicle when stopping on an uphill grade.
    Doing so may damage the clutch.
- Do not shift the shift lever to R when the vehicle is still moving. Doing so may damage the clutch, transmission and gears.

■ **When parking the vehicle (vehicles with a Multidrive)**

Always set the parking brake, and shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

NOTICE

■ **Avoiding damage to vehicle parts**

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.
  Doing so may damage the power steering motor.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.
- Diesel engine only: Make sure to idle the engine immediately after high-speed driving or hill climbing. Stop the engine only after the turbocharger has cooled down.
  Failure to do so may cause damage to the turbocharger.

■ **If you get a flat tire while driving**

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds or vibrations.
- The vehicle will lean abnormally.

Information on what to do in case of a flat tire (→P. 594, 612)

■ **When encountering flooded roads**

Do not drive on a road that has flooded after heavy rain, etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer check the following:

- Brake function
- Changes in quantity and quality of engine oil and transaxle fluid, etc.
- Lubricant condition for the bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load:

WARNING

■ Things that must not be carried in the luggage compartment

The following things may cause a fire if loaded in the luggage compartment:

- Receptacles containing gasoline
- Aerosol cans

■ Storage precautions

Observe the following precautions.
Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- Stow cargo and luggage in the luggage compartment whenever possible.
- Do not stack anything in the luggage compartment higher than the seatbacks.
- Do not place cargo or luggage in or on the following locations:
  - At the feet of the driver
  - On the front passenger or rear seats (when stacking items)
  - On the luggage cover
  - On the instrument panel
  - On the dashboard
- Secure all items in the occupant compartment.
- Vehicles with rear seats: When you fold down the rear seats, long items should not be place directly behind the front seats.
- Never allow anyone to ride in the luggage compartment. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened. Otherwise, they are much more likely to suffer death or serious bodily injury, in the event of sudden braking, sudden swerving or an accident.

WARNING

■ **Load and distribution**

- Do not overload your vehicle.
- Do not apply loads unevenly.
  Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

Trailer towing

Your vehicle is designed primarily as a passenger carrying vehicle. Towing a trailer will have an adverse effect on handling, performance, braking, durability, and fuel consumption. Your safety and satisfaction depend on the proper use of correct equipment and cautions driving habits. For your safety and the safety of others, do not overload the vehicle or trailer.

To tow a trailer safely, use extreme care and drive the vehicle in accordance with the trailer's characteristics and operating conditions.

Toyota warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes.

Ask your local authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further details before towing, as there are additional legal requirements in some countries.

◆ Weight limits


Check the allowable towing capacity, GVM (Gross Vehicle Mass), MPAC (Maximum Permissible Axle Capacity), and permissible drawbar load before towing. (→P. 648)

◆ Towing hitch/bracket

Toyota recommends the use of the Toyota hitch/bracket for your vehicle. Other products of a suitable nature and comparable quality may also be used.

Important points regarding trailer loads

■ Total trailer weight and permissible drawbar load

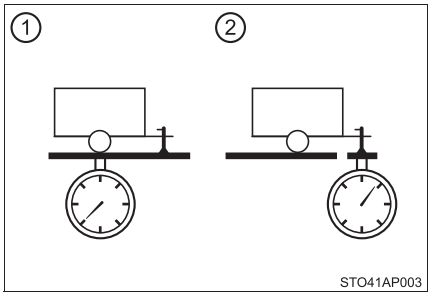

① Total trailer weight

Weight of the trailer itself plus the trailer load should be within the maximum towing capacity. Exceeding this weight is dangerous. (→P. 648)

When towing a trailer, use a friction coupler or friction stabilizer (sway control device).

② Permissible drawbar load


Allocate the trailer load so that the drawbar load is greater than 25 kg (55.1 lb.) or 4% of the towing capacity. Do not let the drawbar load exceed the indicated weight. (→P. 648)

■ Information tag (manufacturer's label)

▶ Type A

① Gross vehicle mass

② Maximum permissible rear axle capacity

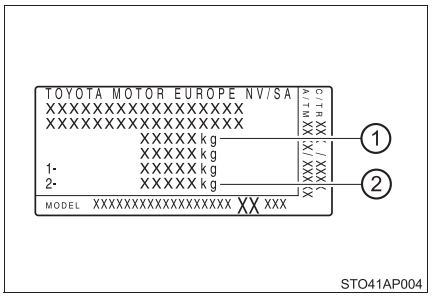


STO41AP004

▶ Type B

① Gross vehicle mass

② Maximum permissible rear axle capacity

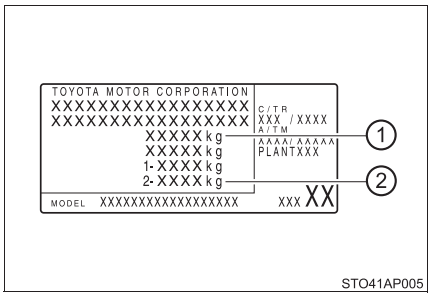

STO41AP005

■ Gross vehicle mass

▶ Vehicle category M1 models*

The combined weight of the driver, passengers, luggage, towing hitch, total curb mass and drawbar load should not exceed the gross vehicle mass by more than 100 kg (220.5 lb.). Exceeding this weight is dangerous.

▶ Vehicle category N1 models*

The combined weight of the driver, passengers, cargo, towing hitch, total curb mass and drawbar load must not exceed the gross vehicle mass. Exceeding this weight is dangerous.

■ **Maximum permissible rear axle capacity**

▶ Vehicle category M1 models*

The weight borne by the rear axle should not exceed the maximum permissible rear axle capacity by 15% or more. Exceeding this weight is dangerous.

▶ Vehicle category N1 models*

The weight borne by the rear axle should not exceed the maximum permissible rear axle capacity. Exceeding this weight is dangerous.

The values for towing capacity were derived from testing conducted at sea level. Take note that engine output and towing capacity will be reduced at high altitudes.

⚠ WARNING

■ **When the gross vehicle mass or maximum permissible axle capacity is exceeded (vehicle category M1 models*)**


Failing to observe this precaution may lead to an accident causing death or serious injury.

- Add an additional 20.0 kPa (0.2 kgf/cm^2 or bar, 3 psi) to the recommended tire inflation pressure value. (→P. 665)
- Do not exceed the established speed limit for towing a trailer in built-up areas or 100 km/h (62 mph), whichever is lower.


*: To distinguish the vehicle category, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Installation positions*1 for the towing hitch/bracket and hitch ball

① 434 mm (17.1 in.)
② 434 mm (17.1 in.)

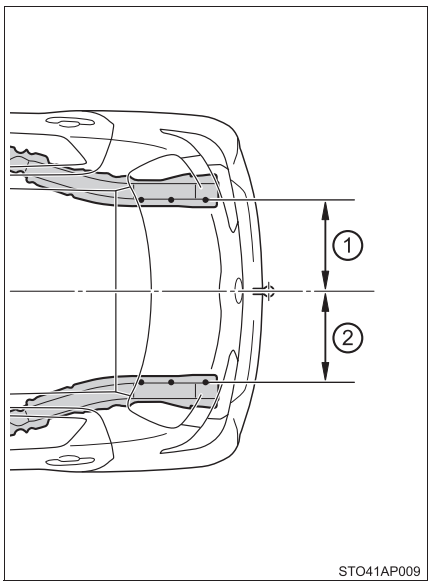

③ 694 mm (27.3 in.)
④ 641 mm (25.2 in.)
⑤ 508 mm (20.0 in.)
⑥ 352 mm (13.9 in.)
⑦ 392 mm (15.4 in.)*2
404 mm (15.9 in.)*3
415 mm (16.3 in.)*4
393 mm (15.5 in.)*5
⑧ 22 mm (0.9 in.)

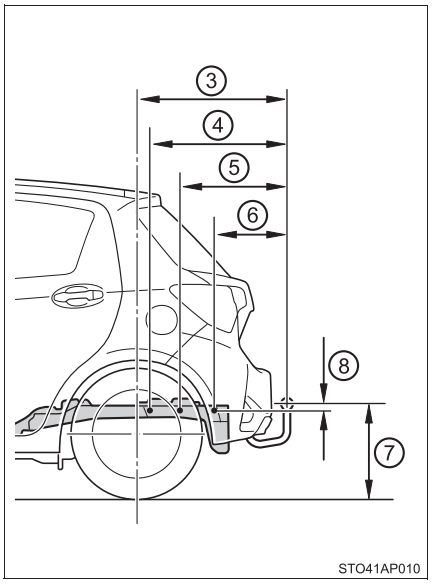

*1: Gross vehicle mass and standard tire size
To distinguish the vehicle category, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*2, *3, *4, *5:

	Engine	Tire size	Suspension spec.
*2	1KR	175/65R14	Normal
		175/70R14	
		185/60R15	
*3	1KR	175/65R14	Rough road (Height up spec.)
*4	1KR	185/60R15	Rough road (Height up spec.)
	2NR		
	1ND		
*5	Except *2, *3, and *4		

■ **Tire information**

- Increase the tire inflation pressure to 20.0 kPa (0.2 kgf/cm^2 or bar, 3 psi) greater than the recommended value when towing. (→P. 665)
- Increase the air pressure of the trailer tires in accordance with the total trailer weight and according to the values recommended by the manufacturer of your trailer.

■ **Trailer lights**

Check that the turn signal lights and stoplights are operating correctly every time you hitch up the trailer. Directly wiring up to your vehicle may damage the electrical system and stop the lights from functioning correctly.

■ **Break-in schedule**

Toyota recommends that vehicles fitted with new power train components should not be used for towing trailers for the first 800 km (500 miles).

■ **Safety checks before towing**

- Check that the maximum load limit for the towing hitch/bracket and hitch ball is not exceeded. Bear in mind that the coupling weight of the trailer will add to the load exerted on the vehicle. Also make sure that the total load exerted on the vehicle is within the range of the weight limits. (→P. 236)
- Ensure that the trailer load is secure.
- Supplementary outside rear view mirrors should be added to the vehicle if the traffic behind cannot be clearly seen with standard mirrors. Adjust the extending arms of these mirrors on both sides of the vehicle so that they always provide maximum visibility of the road behind.

■ **Maintenance**

- Maintenance must be performed more frequently when using the vehicle for towing due to the greater weight burden placed on the vehicle compared to normal driving.
- Retighten all bolts securing the hitching ball and bracket after towing for approximately 1000 km (600 miles).

⚠ NOTICE

■ **When the rear bumper strengthening material is aluminum**

Ensure the steel bracket part does not come directly in contact with that area.
When steel and aluminum come into contact, there is a reaction similar to corrosion, which will weaken the section concerned and may result in damage. Apply a rust inhibitor to parts that will come in contact when attaching a steel bracket.

Guidance

Your vehicle will handle differently when towing a trailer. In order to avoid accident, death or serious injury, keep the following in mind when towing:

Checking connections between trailer and lights

Stop the vehicle and check the operation of the connection between the trailer and lights after driving for a brief period as well as before starting off.

Practicing driving with a coupled trailer

- Get the feel for turning, stopping and reversing with the trailer coupled by practicing in an area with no or light traffic.
- When reversing with a coupled trailer, hold the section of the steering wheel nearest to you and rotate clockwise to turn the trailer left or counterclockwise to turn it right. Always rotate a little at a time to prevent steering error. Have someone guide you when reversing to lessen the risk of an accident.

Increasing vehicle-to-vehicle distance

At a speed of 10 km/h (6 mph), the distance to the vehicle running ahead of you should be equivalent to or greater than the combined length of your vehicle and trailer. Avoid sudden braking that may cause skidding. Otherwise, the vehicle may spin out of control. This is especially true when driving on wet or slippery road surfaces.

Sudden acceleration/steering input/cornering

Executing sharp turns when towing may result in the trailer colliding with your vehicle. Decelerate well in advance when approaching turns and take them slowly and carefully to avoid sudden braking.

Important points regarding turning

The wheels of the trailer will travel closer to the inside of the curve than the wheels of the vehicle. To make allowance for this, take the turns wider than you would normally do.

■ **Important points regarding stability**

Vehicle movement resulting from uneven road surfaces and strong crosswinds will affect handling. The vehicle may also be rocked by passing buses or large trucks. Frequently check behind when moving alongside such vehicles. As soon as such vehicle movement occurs, immediately start to decelerate smoothly by slowly applying the brakes. Always steer the vehicle straight ahead while braking.

■ **Passing other vehicles**

Consider the total combined length of your vehicle and trailer and ensure that the vehicle-to-vehicle distance is sufficient before executing lane changes.

■ **Transmission information**

▶ Vehicles with a Multidrive

To maintain engine braking efficiency, when using engine braking, do not use the transmission in D. Transmission shift gear position must be in 4 in the M mode. (→P. 257)

▶ Vehicles with a manual transmission

To maintain engine braking efficiency, when using engine braking, do not use the transmission in 5 and 6 (vehicles with a 6-speed manual transmission) gear. (→P. 265)

■ **If the engine overheats**

Towing a loaded trailer up a long, steep incline in temperatures exceeding 30°C (85°F) may result in the engine overheating. If the high engine coolant temperature warning light flashes or comes on, turn the air conditioning off immediately, leave the road and stop the vehicle in a safe place. (→P. 638)

■ **When parking the vehicle**

Always place wheel chocks under the wheels of both the vehicle and trailer. Firmly set the parking brake and shift the shift lever to P (Multidrive) or 1 or R (manual transmission).

WARNING

Follow all the instructions described in this section. Failure to do so could cause an accident resulting in death or serious injury.

■ **Trailer towing precautions**

When towing, make sure that none of the weight limits are exceeded. (→P. 236)

■ **Vehicle speed in towing**

Observe the legal maximum speeds for trailer towing.

■ **Before descending hills or long declines**

Reduce speed and downshift. However, never downshift suddenly while descending steep or long downhill grades.

■ **Operation of the brake pedal**

Do not hold the brake pedal depressed often or for long periods of time. Doing so may result in the brake overheating or reduce braking effects.

■ **To avoid accident or injury**

- Vehicles with a cruise control: Do not use cruise control when you are towing.
- Vehicles with a compact spare tire: Do not tow a trailer when the compact spare tire is installed on your vehicle.
- Vehicles with an emergency tire puncture repair kit: Do not tow a trailer when the tire installed is repaired with the emergency tire puncture repair kit.

NOTICE

■ **Do not directly splice trailer lights**

Directly splicing trailer lights may damage your vehicle's electrical system and cause a malfunction.

Engine (ignition) switch (vehicles without a smart entry & start system)

Starting the engine

▶ Gasoline engine

1 Check that the parking brake is set.

2 Check that the shift lever is set in P (Multidrive) or N (manual transmission).

3 Firmly depress the brake pedal (Multidrive) or clutch pedal (manual transmission).

4 Turn the engine switch to the “START” position to start the engine.

▶ Diesel engine

1 Check that the parking brake is set.

2 Check that the shift lever is set in N.

3 Firmly depress the clutch pedal.

4 Turn the engine switch to the “ON” position.

The  indicator turns on.

5 After the  indicator goes out, turn the engine switch to the “START” position to start the engine.

Changing engine switch positions

① “LOCK”

The steering wheel is locked and the key can be removed. (Vehicles with a Multidrive: The key can be removed only when the shift lever is in P.)

② “ACC”


Some electrical components such as the audio system can be used.

③ “ON”

All electrical components can be used.

④ “START”

For starting the engine.

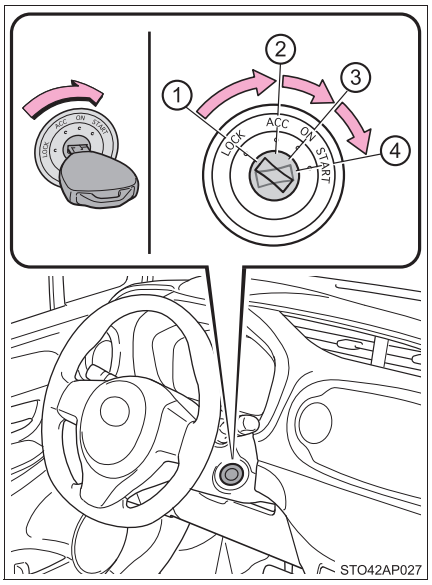


If the engine does not start

The engine immobilizer system may not have been deactivated. (→P. 86) Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

When the steering lock cannot be released

When starting the engine, the engine switch may seem stuck in the “LOCK” position. To free it, turn the key while turning the steering wheel slightly left and right.

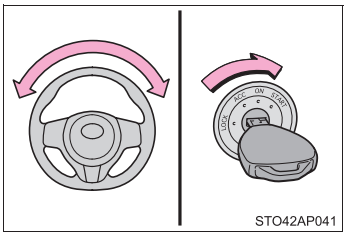

Key reminder function

A buzzer sounds if the driver’s door is opened while the engine switch is in the “LOCK” or “ACC” position to remind you to remove the key.

WARNING

■ **When starting the engine**

Always start the engine while sitting in the driver's seat. Do not depress the accelerator pedal while starting the engine under any circumstances. Doing so may cause an accident resulting in death or serious injury.

■ **Caution when driving**

Do not turn the engine switch to the "LOCK" position while driving. If, in an emergency, you must turn the engine off while the vehicle is moving, turn the engine switch only to the "ACC" position to stop the engine. An accident may result if the engine is stopped while driving. (→P. 567)

NOTICE

■ **To prevent battery discharge**

Do not leave the engine switch in the "ACC" or "ON" position for long periods of time without the engine running.

■ **When starting the engine**

- Do not crank the engine for more than 30 seconds at a time. This may overheat the starter and wiring system.
- Do not race a cold engine.
- If the engine becomes difficult to start or stalls frequently, have your vehicle checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

Engine (ignition) switch (vehicles with a smart entry & start system)

Performing the following operations when carrying the electronic key on your person starts the engine or changes engine switch mode.

Starting the engine

1 Check that the parking brake is set.

2 Check that the shift lever is set in P (Multidrive) or N (manual transmission).

▶ Vehicles with monochrome display

3 Firmly depress the brake pedal (Multidrive) or clutch pedal (manual transmission).

The smart entry & start system indicator (green) will turn on.
If the indicator light does not turn on, the engine cannot be started.

4 Press the engine switch shortly and firmly.

When operating the engine switch, one short, firm press is enough.


It is not necessary to press and hold the switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal (Multidrive) or clutch pedal (manual transmission) until the engine is completely started.

Diesel engine only: The indicator turns on. The engine will start after the indicator light goes out.

The engine can be started from any engine switch mode.

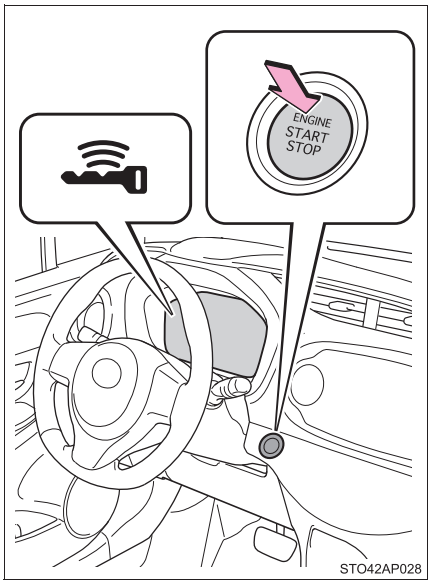

▶ Vehicles with color display

3 Firmly depress the brake pedal (Multidrive) or clutch pedal (manual transmission).

 and message will be displayed on the multi-information display.
If it is not displayed, the engine cannot be started.

4 Press the engine switch shortly and firmly.


When operating the engine switch, one short, firm press is enough. It is not necessary to press and hold the switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal (Multidrive) or clutch pedal (manual transmission) until the engine is completely started.

Diesel engine only: The  indicator turns on. The engine will start after the indicator light goes out.

The engine can be started from any engine switch mode.

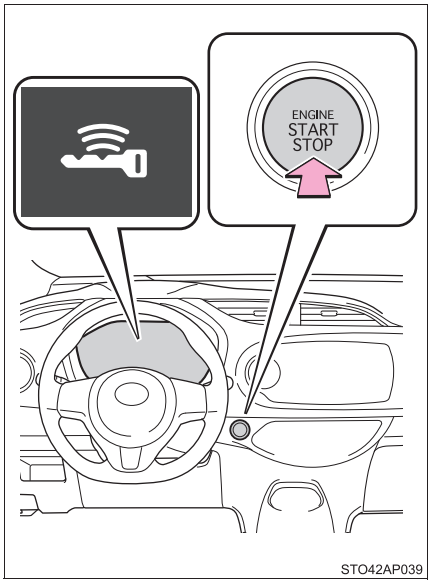

STO42AP039

Stopping the engine

1 Stop the vehicle.

2 Set the parking brake (→P. 270) and shift the shift lever to P (Multidrive) or N (manual transmission).

3 Press the engine switch.

4 Vehicles with monochrome display: Release the brake pedal (Multidrive) or clutch pedal (manual transmission) and check that the smart entry & start system indicator (green) is off.
Vehicles with color display: Release the brake pedal (Multidrive) or clutch pedal (manual transmission) and check that “Power on” on the multi-information display is off.

Changing engine switch modes

Modes can be changed by pressing the engine switch with brake pedal (Multidrive) or clutch pedal (manual transmission) released. (The mode changes each time the switch is pressed.)

▶ Vehicles with monochrome display

Off*

The emergency flashers can be used.

The smart entry & start system indicator (green) is off.

ACCESSORY mode


Some electrical components such as the audio system can be used.

The smart entry & start system indicator (green) flashes slowly.

IGNITION ON mode

All electrical components can be used.

The smart entry & start system indicator (green) flashes slowly.

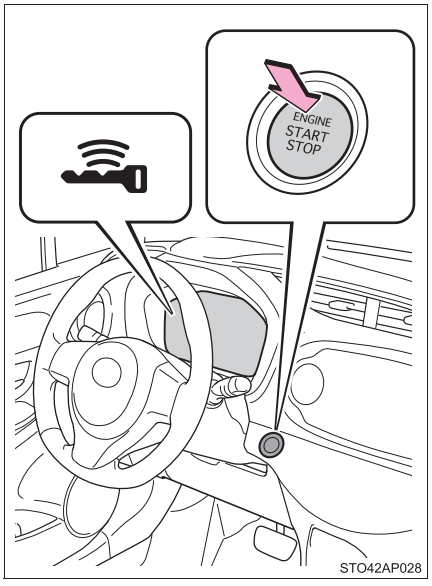

*: Vehicles with a Multidrive: If the shift lever is in a position other than P when turning off the engine, the engine switch will be turned to ACCESSORY mode, not to off.

▶ Vehicles with color display

Off*

The emergency flashers can be used.

The multi-information display will not be displayed.

ACCESSORY mode


Some electrical components such as the audio system can be used.

“Power on” will be displayed on the multi-information display.

IGNITION ON mode

All electrical components can be used.

“Power on” will be displayed on the multi-information display.

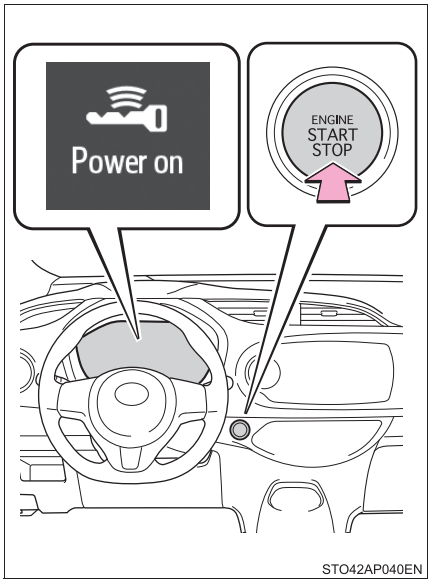

*: Vehicles with a Multidrive: If the shift lever is in a position other than P when turning off the engine, the engine switch will be turned to ACCESSORY mode, not to off.

When stopping the engine with the shift lever in a position other than P (Multidrive)

If the engine is stopped with the shift lever in a position other than P, the engine switch will not be turned off but instead be turned to ACCESSORY mode. Perform the following procedure to turn the switch off:

1 Check that the parking brake is set.

2 Shift the shift lever to P.

▶ Vehicles with monochrome display

3 Check that the smart entry & start system indicator (green) flashes slowly and then press the engine switch once.

4 Check that the smart entry & start system indicator (green) is off.

▶ Vehicles with color display

3 Check that “Power on” and “Turn power OFF.” are displayed alternately on the multi-information display and then press the engine switch once.

4 Check that “Power on” and “Turn power OFF.” on the multi-information display are off.

■ **Auto power off function**

▶ Vehicles with a Multidrive

If the vehicle is left in ACCESSORY or IGNITION ON mode (the engine is not running) for more than an hour with the shift lever in P, the engine switch will automatically turn off. However, this function cannot entirely prevent battery discharge. Do not leave the vehicle with the engine switch in ACCESSORY or IGNITION ON mode for long periods of time when the engine is not running.

▶ Vehicles with a manual transmission

If the vehicle is left in ACCESSORY or IGNITION ON mode (the engine is not running) for more than an hour, the engine switch will automatically turn off. However, this function cannot entirely prevent battery discharge. Do not leave the vehicle with the engine switch in ACCESSORY or IGNITION ON mode for long periods of time when the engine is not running.

■ **Electronic key battery depletion**

→P. 146

■ **Conditions affecting operation**

→P. 170

■ **Notes for the entry function**

→P. 171

■ **If the engine does not start**

- The engine immobilizer system may not have been deactivated. (→P. 86) Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Check that the shift lever is securely set in P. The engine may not start if the shift lever is displaced out of P.

▶ Vehicles with monochrome display

The smart entry & start system indicator light (green) will flash quickly.

▶ Vehicles with color display


“Shift to P position to start.” will be displayed on the multi-information display.

■ **Steering lock**

After turning the engine switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the engine switch again automatically cancels the steering lock.

■ **When the steering lock cannot be released**

Vehicles with monochrome display: The smart entry & start system indicator light (green) will flash quickly.
Vehicles with color display: “Steering lock active.” will be displayed on the multi-information display.

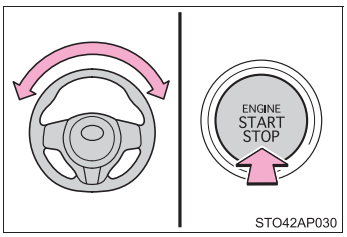

▶ Vehicles with a Multidrive

Check that the shift lever is set in P.
Press the engine switch while turning the steering wheel left and right.

▶ Vehicles with a manual transmission

Press the engine switch while turning the steering wheel left and right.

■ **Steering lock motor overheating prevention**

To prevent the steering lock motor from overheating, the motor may be suspended if the engine is turned on and off repeatedly in a short period of time. In this case, refrain from operating the engine. After about 10 seconds, the steering lock motor will resume functioning.

■ **If the system is malfunctioning**

→P. 581

■ **If the electronic key battery is depleted**

→P. 534

■ **Operation of the engine switch**

- If the switch is not pressed shortly and firmly, the engine switch mode may not change or the engine may not start.
- If attempting to restart the engine immediately after turning the engine switch off, the engine may not start in some cases. After turning the engine switch off, please wait a few seconds before restarting the engine.

■ **If the smart entry & start system has been deactivated in a customized setting**

→P. 676

WARNING

When starting the engine

Always start the engine while sitting in the driver's seat. Do not depress the accelerator pedal while starting the engine under any circumstances.
Doing so may cause an accident resulting in death or serious injury.

Caution while driving

If engine failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.

Stopping the engine in an emergency

If you want to stop the engine in an emergency while driving the vehicle, press and hold the engine switch for more than 3 seconds, or press it briefly 3 times or more in succession. (→P. 567)

However, do not touch the engine switch while driving except in an emergency. Turning the engine switch off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so.

NOTICE

■ **To prevent battery discharge**

- Do not leave the engine switch in ACCESSORY or IGNITION ON mode for long periods of time without the engine running.
- Vehicles with monochrome display: If the smart entry & start system indicator (green) is illuminated, the engine switch is not off. When exiting the vehicle, always check that the engine switch is off.
- Vehicles with color display: If “Power on” is displayed on the multi-information display, the engine switch is not off. When exiting the vehicle, always check that the engine switch is off.
- On vehicles with a Multidrive, do not stop the engine when the shift lever is in a position other than P. If the engine is stopped in another shift lever position, the engine switch will not be turned off but instead be turned to ACCESSORY mode. If the vehicle is left in ACCESSORY mode, battery discharge may occur.

■ **When starting the engine**


- Do not race a cold engine.
- If the engine becomes difficult to start or stalls frequently, have your vehicle checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ **Symptoms indicating a malfunction with the engine switch**

If the engine switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction.
Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

Multidrive*

Shifting the shift lever

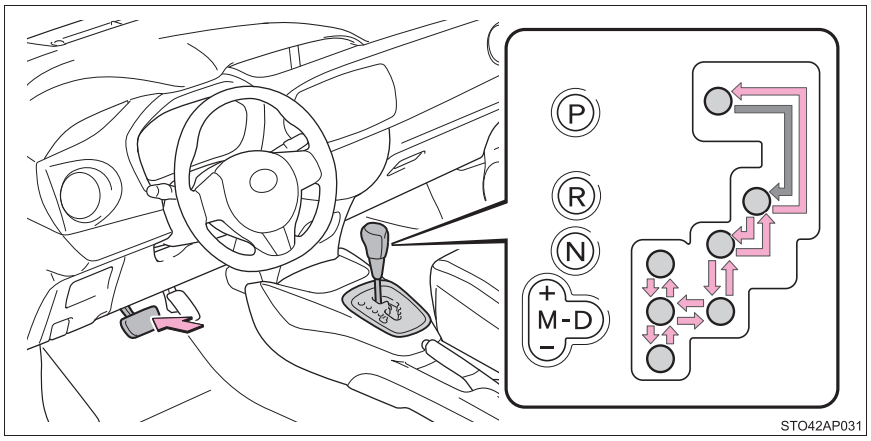

▶ Vehicles without a smart entry & start system

← While the engine switch is in the “ON” position, move the shift lever with the brake pedal depressed.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

▶ Vehicles with a smart entry & start system

← While the engine switch is in IGNITION ON mode, move the shift lever with the brake pedal depressed.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

*: If equipped

Shift position purpose

Shift position	Function
P	Parking the vehicle or starting the engine
R	Reversing
N	Neutral
D	Normal driving*1 or temporary gear step selection driving*2
M	7-speed sport sequential shiftmatic mode driving (→P. 259)

*1: To improve fuel consumption and reduce noises, set the shift lever in the D position for normal driving.

*2: By selecting gear step using paddle shift switches, you can control engine braking forces.


Selecting a driving mode

Press the switch.

For powerful acceleration and driving in mountainous regions.

The “SPORT” indicator will come on.

Press the switch once more to return the normal mode.

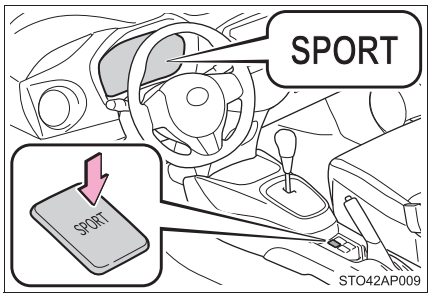

Changing gear steps in 7-speed sport sequential shiftmatic mode

Shift the shift lever to the M position and operate the shift lever or paddle shift switch.

① Upshifting


② Downshifting

The gear step changes once every time the shift lever or paddle shift switch is operated.

The selected gear step, from 1 to 7, will be displayed in the multi-information display.

*1: Vehicles with color display.

*2: Vehicles with monochrome display.

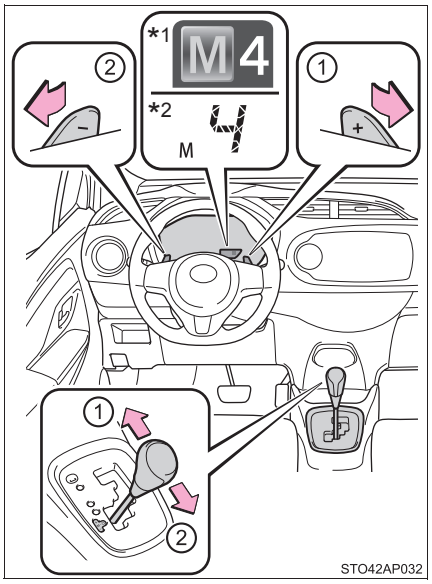

However, even when in the M position, the gear steps will be automatically changed if the engine speed is too high, or too low.

■ **Gear step functions**

- You can choose from 7 levels of engine braking force.
- A lower gear step will provide greater engine braking force than a higher gear step, and the engine speed will also increase.

Temporally gear steps selection mode in the D position


To drive in temporary gear steps selection mode, operate the “-” and “+” paddle shift switch. The gear steps can then be selected by operating the “-” and “+” paddle shift switches. By selecting gear step using paddle shift switches, you can control engine braking forces.

① Upshifting

② Downshifting

The gear step changes once every time the paddle shift switch is operated.

The selected gear step, from 1 to 7, will be displayed in the multi-information display

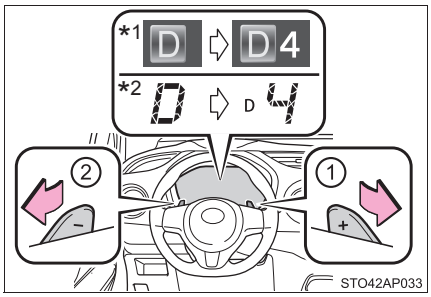

*1: Vehicles with color display.

*2: Vehicles with monochrome display.

However, even when in the D position, the gear steps will be automatically changed if the engine speed is too high, or too low.

■ **Gear step functions**

→P. 259

■ **Deactivation of the temporally gear steps selection mode in the D position**

In the following situations, temporally gear steps selection mode in the D position will be deactivated:

- When the vehicle comes to a stop
- If the accelerator pedal is depressed for more than a certain period of time in one gear step
- When the “+” paddle shift switch is held down for a period of time

■ **When driving with the cruise control activated (if equipped)**

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate because cruise control will not be canceled.

- While driving in D or 7-speed sport sequential shiftmatic mode, downshifting to 6, 5, or 4. (→P. 259)
- When switching the driving mode to sport mode while driving in D position. (→P. 258)

■ **When the vehicle comes to a stop with the shift lever in the M position**

- The transmission will automatically downshift to M1 once the vehicle is stopped.
- After a stop, the vehicle will start off in M1.
- When the vehicle is stopped, the transmission is set at M1.

■ **Shift lock system**

The shift lock system is a system to prevent accidental operation of the shift lever in starting.

The shift lever can be shifted from P only when the engine switch is in the “ON” position and the brake pedal is being depressed.

■ **If the shift lever cannot be shifted from P**

First, check whether the brake pedal is being depressed.
If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system (a system to prevent accidental operation of the shift lever). Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.
The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.

Releasing the shift lock:


1 Set the parking brake.

2 Turn the engine switch to the “LOCK” position (vehicles without a smart entry & start system) or ACCESSORY mode (vehicles with a smart entry & start system).

3 Depress the brake pedal.


4 Pry the cover up with a flathead screwdriver or equivalent tool.

To prevent damage to the cover, wrap the tip of the screwdriver with a rag.

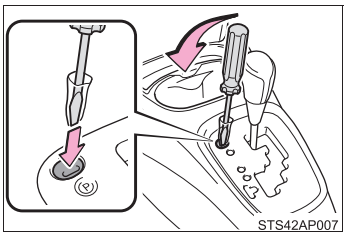
STS42AP007

5 Press the shift lock override button.

The shift lever can be shifted while the button is pressed.

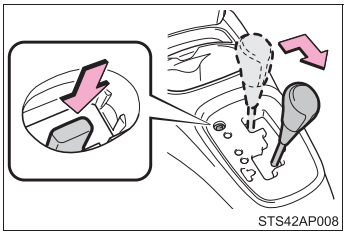
STS42AP008

■ **If the “M” indicator flashes or a buzzer beeps after shifting the shift lever to M**

This may indicate a malfunction in the Multidrive system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.
(In this situation, the transmission will operate in the same manner as when the shift lever is in D.)

■ **Downshift restriction warning buzzer (vehicles with a 7-speed sport sequential shiftmatic mode)**

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever or paddle shift switches are operated. (A buzzer will sound twice.)

■ **G AI-SHIFT**

G AI-SHIFT automatically selects a suitable gear for sporty driving according to driver’s input and driving conditions. G AI-SHIFT operates automatically when the shift lever is in D and sport mode is selected for the driving mode. (Selecting normal mode or shifting the shift lever to the M position cancels this function.)

■ **Engine speed while driving**

In the following conditions, the engine speed may become high while driving. This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- The vehicle is judged to be driving uphill or downhill
- When the accelerator pedal is released
- With the “SPORT” switch activated, when the brake pedal is depressed

WARNING

■ **When driving on slippery road surfaces**

Do not accelerate or shift gears suddenly.
Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.


■ **To prevent an accident when releasing the shift lock**

Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal.
If the accelerator pedal is accidentally depressed instead of the brake pedal when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start, possibly leading to an accident resulting in death or serious injury.

Manual transmission*

Shifting the shift lever

▶ 5-speed transmission

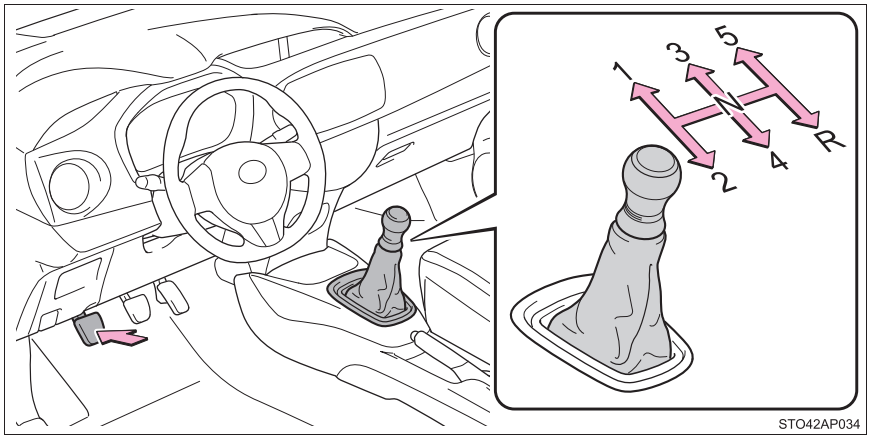


Fully depress the clutch pedal before operating the shift lever, and then release it slowly.

If it is difficult to shift in reverse, shift the shift lever to N, release the clutch pedal momentarily, and then try again.

*: If equipped


▶ 6-speed transmission

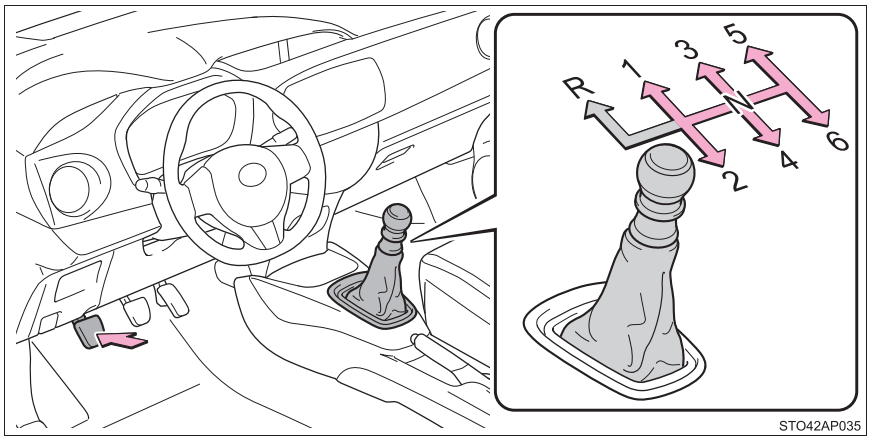

Fully depress the clutch pedal before operating the shift lever, and then release it slowly.

Shifting the shift lever to R (6-speed transmission)

Shift the shift lever to R while lifting up the ring section.

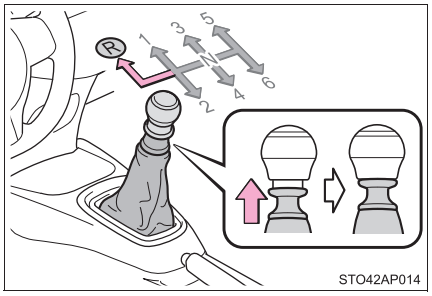

Gear Shift Indicator


The Gear Shift Indicator is a guide to help the driver achieve improved fuel economy and reduced exhaust emissions within limits of engine performance.

① Upshifting

② Downshifting

*1: Vehicles with color display.

*2: Vehicles with monochrome display.

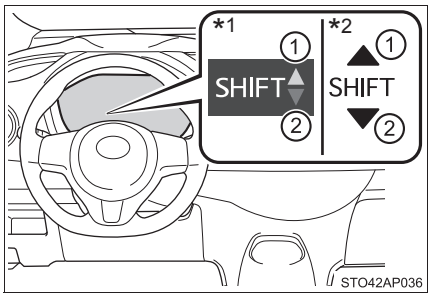

Gear Shift Indicator display

The Gear Shift Indicator may not be displayed when your foot is placed on the clutch pedal.

Maximum downshifting speeds

Observe the downshifting speeds in the following table to prevent over-revving the engine.

km/h (mph)

Shift position		1	2	3	4
Maximum speed	1KR-FE engine	45 (28)	84 (52)	123 (76)	157 (98)
	2NR-FKE engine*1	47 (29)	87 (54)	120 (74)	163 (101)
	2NR-FKE engine*2	46 (28)	86 (53)	119 (73)	161 (100)
	2NR-FKE engine*3	47 (29)	87 (54)	120 (74)	162 (100)
	1ND-TV engine	43 (27)	80 (50)	124 (77)	167 (103)

*1: Vehicles with 175/65R15 tires

*2: Vehicles with 185/60R15 tires

*3: Vehicles with 195/50R16 tires

WARNING


■ Gear Shift Indicator display

For safety, the driver should not look only at the display. Refer to the display when it is safe to do so while considering actual traffic and road conditions. Failure to do so may lead to an accident.

NOTICE

■ To prevent damage to the 6-speed transmission

- Do not shift the shift lever to R without depressing the clutch pedal.

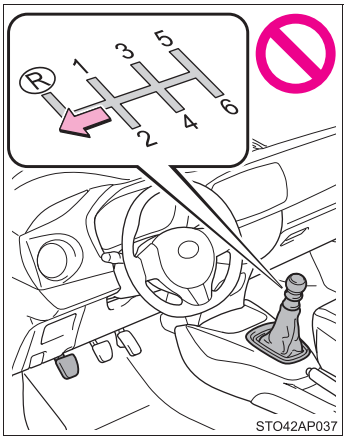

- Do not lift up the ring section except when shifting the lever to R.
- Shift the shift lever to R only when the vehicle is stationary.

Turn signal lever

Operation instructions

① Right turn


② Lane change to the right (push and hold the lever partway)

The right hand signals will flash until you release the lever.

③ Lane change to the left (push and hold the lever partway)

The left hand signals will flash until you release the lever.

④ Left turn

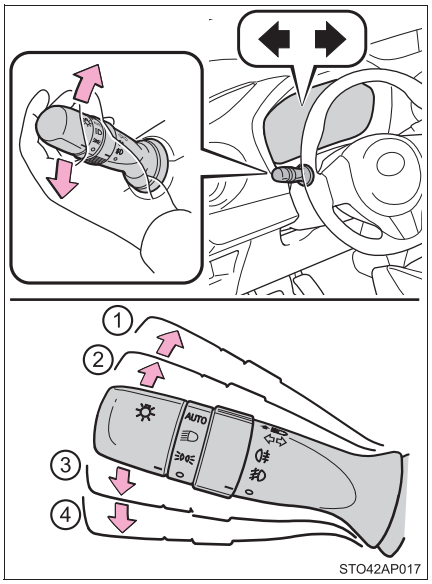

■ **Turn signals can be operated when**

▶ Vehicles without a smart entry & start system

The engine switch is in the “ON” position.

▶ Vehicles with a smart entry & start system

The engine switch is in IGNITION ON mode.

■ **If the indicator flashes faster than usual**


Check that a light bulb in the front or rear turn signal lights has not burned out.

Parking brake

Operation instructions

① To set the parking brake, fully pull the parking brake lever while depressing the brake pedal.

② To release the parking brake, slightly raise the lever and lower it completely while pressing the button.

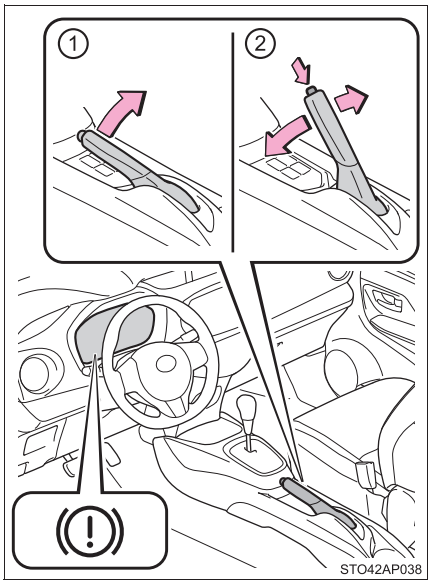

■ **Parking the vehicle**
→P. 223

■ **Parking brake engaged warning buzzer**
→P. 578

■ **Usage in winter time**
→P. 358

⚠ NOTICE

■ **Before driving**


Fully release the parking brake.
Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear.

Headlight switch

The headlights can be operated manually or automatically.

Operation instructions

Turning the end of the lever turns on the lights as follows:

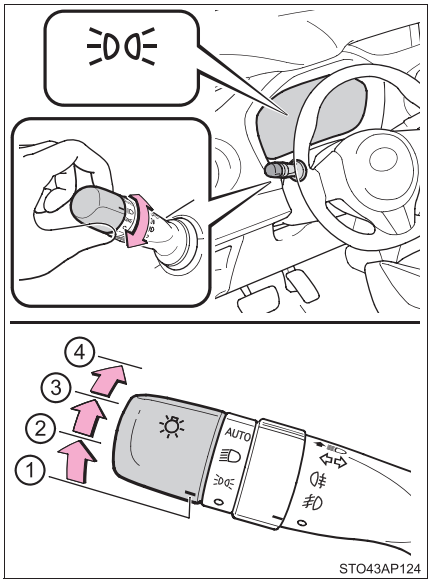

① ○ Off


② The front position, tail, license plate and instrument panel lights turn on.

③ The headlights and all the lights listed above turn on.

④ AUTO Vehicles without a smart entry & start system: The headlights, front position lights and so on turn on and off automatically (when the engine switch is in the “ON” position.)

Vehicles with a smart entry & start system: The headlights, front position lights and so on turn on and off automatically (when the engine switch is in IGNITION ON mode.)

Turning on the high beam headlights

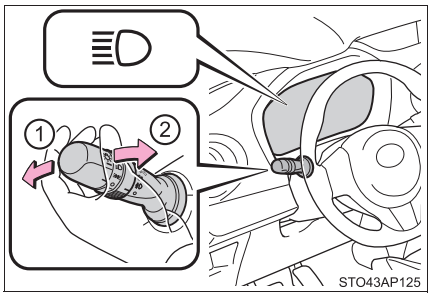

① With the headlights on, push the lever away from you to turn on the high beams.


Pull the lever toward you to the center position to turn the high beams off.

② Pull the lever toward you and release it to flash the high beams once.

You can flash the high beams with the headlights on or off.

Follow me home system (if equipped)

This system allows the low beam headlights to be turned on for 30 seconds when the engine switch is turned off.

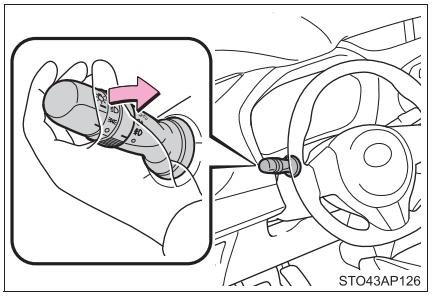


Pull the lever toward you and release it with the light switch is in AUTO or ○ after turning the engine switch off.

Pull the lever toward you and release it again to turn off the lights.


Manual headlight leveling dial

The level of the headlights can be adjusted according to the number of passengers and the loading condition of the vehicle.

▶ Left-hand drive vehicles

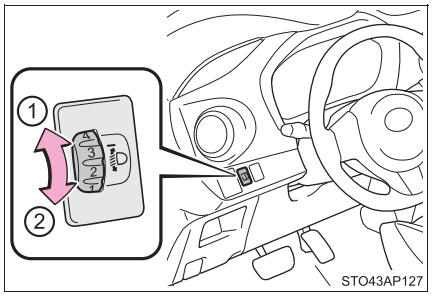

▶ Right-hand drive vehicles

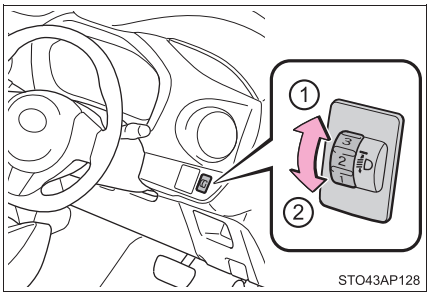

① Raises the level of the headlights

② Lowers the level of the headlights

■ Guide to dial settings


Loading condition	Control switch position
Driver only	0
Driver + one passenger in the front seat	0
Driver + one passenger in the front seat + rear seat	1
All passengers	1
All passengers + full luggage loading to the luggage compartment	2
Driver + full luggage loading to the luggage room	3

■ **Daytime running light system**

To make your vehicle more visible to other drivers during daytime driving, the daytime running lights turn on automatically whenever the engine is started and the parking brake is released with the headlight switch off or in the “AUTO” position. (Illuminate brighter than the front position lights.) Daytime running lights are not designed for use at night.

■ **Headlight control sensor**

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.
Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

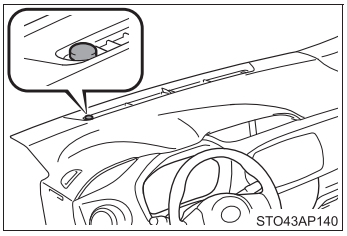

■ **Automatic light off system (if equipped)**

▶ Vehicles without a smart entry & start system

- When the light switch is in or : The headlights and front fog lights turn off automatically when the engine switch is turned to the “LOCK” position.
- When the light switch is in AUTO : The headlights and all the lights turn off automatically when the engine switch is turned to the “LOCK” position.

To turn the lights on again, turn the engine switch to the “ON” position, or turn the light switch to O once and then back to or .

▶ Vehicles with a smart entry & start system

- When the light switch is in or : The headlights and front fog lights turn off automatically when the engine switch is turned off.
- When the light switch is in AUTO : The headlights and all the lights turn off automatically when the engine switch is turned off.

To turn the lights on again, turn the engine switch to IGNITION ON mode, or turn the light switch to O once and then back to or .

■ **Automatic High Beam (if equipped)**

→P. 319

■ **Light reminder buzzer**

▶ Vehicles without a smart entry & start system

A buzzer sounds when the key is removed from the engine switch and the driver's door is opened while the lights are turned on.

▶ Vehicles with a smart entry & start system

A buzzer sounds when the engine switch is turned off and the driver's door is opened while the lights are turned on.

■ **Battery-saving function**

In all conditions following below, the headlights and the other remaining lights will go off automatically after 20 minutes in order to prevent the vehicle battery from being discharged:

- The headlights and/or tail lights are on.
- The light switch is in or AUTO.
- Vehicles without a smart entry & start system: The engine switch is turned to the "LOCK" position.
- Vehicles with a smart entry & start system: The engine switch is turned off.

This function will be canceled in any of the following situations:

- Vehicles without a smart entry & start system: When the engine switch is turned to the "ON" position.
- Vehicles with a smart entry & start system: When the engine switch is turned to IGNITION ON mode.
- When the light switch is operated.
- When the door is opened or closed.

■ **Customization**

Settings (e.g. light sensor sensitivity) can be changed.
(Customizable features: →P. 673)

⚠ NOTICE

■ **To prevent battery discharge**

Do not leave the lights on longer than necessary when the engine is not running.

Fog light switch

The fog lights secure excellent visibility in difficult driving conditions, such as in rain and fog.


Operation instructions

▶ Rear fog light switch

① ○ Turns the rear fog light off

② Turns the rear fog light on

Releasing the switch ring returns it to ○.
Operating the switch ring again turns the lights off.

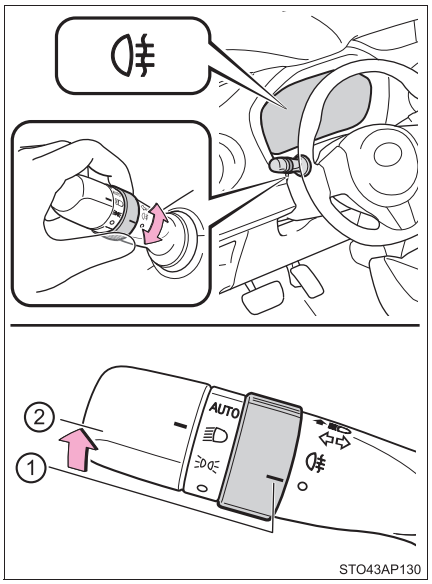

▶ Front and rear fog light switch (if equipped)


① Turns the front and rear fog lights off

② Turns the front fog lights on

③ Turns both front and rear fog lights on

Releasing the switch ring returns it to .

Operating the switch ring again turns only the rear fog light off.

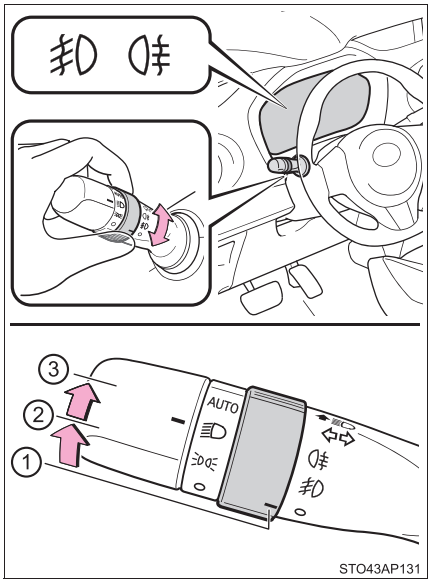

■ **Fog lights can be used when**

▶ Vehicles with a rear fog light switch

The headlights are turned on.

▶ Vehicles with a front and rear fog light switch

Front fog lights: The headlights or the front position lights are turned on.

Rear fog light: The front fog lights are turned on.

Windshield wiper and washer

Operating the wiper lever

Operate the lever as follows to operate the wiper.

▶ Intermittent windshield wiper


① ○ Off

② Intermittent windshield wiper operation

③ Low speed windshield wiper operation


④ High speed windshield wiper operation

⑤ Temporary operation

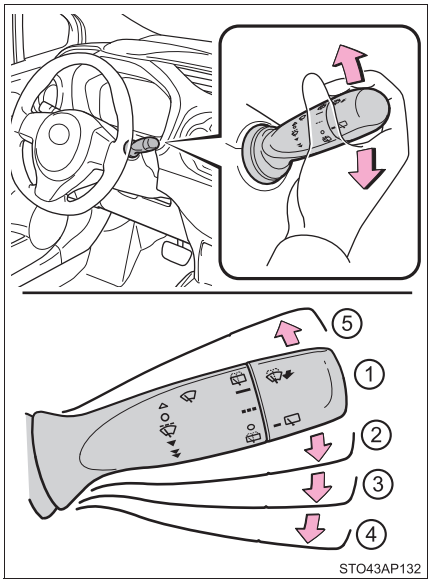

⑥ Washer/wiper dual operation

The wiper will automatically operate a couple of times after the washer squirts.

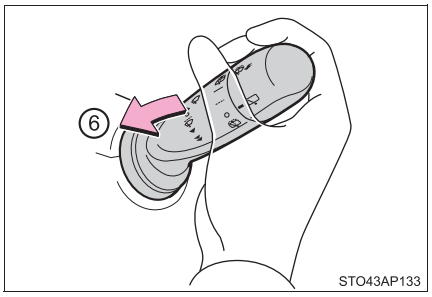

▶ Rain-sensing windshield wiper

When **AUTO** is selected, the wiper will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

When **AUTO** is selected, the sensor sensitivity can be adjusted as follows by turning the switch ring:


① ○ Off

② AUTO Rain-sensing windshield wiper operation

③ ▼ Low speed windshield wiper operation


④ ▼▼ High speed windshield wiper operation

⑤ △ Temporary operation

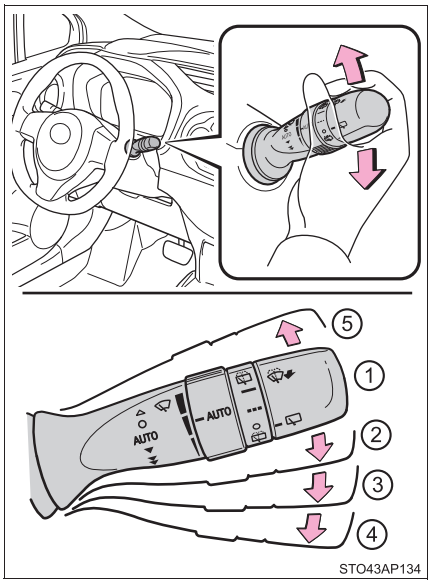

⑥ Increases the sensitivity


⑦ Decreases the sensitivity

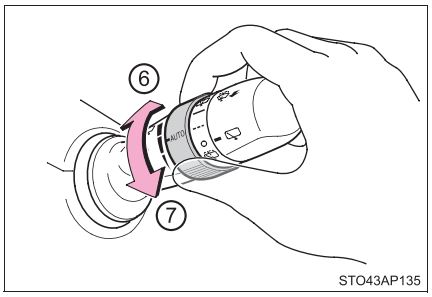

⑧ Washer/wiper dual operation

The wiper will automatically operate a couple of times after the washer squirts.

(After operating several times, the wiper operate one more time after a short delay to prevent dripping.)

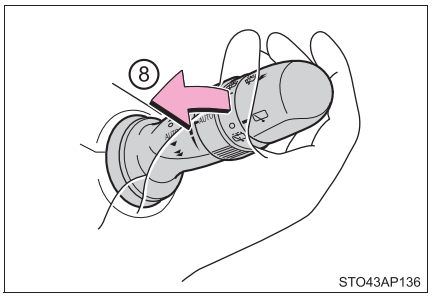

■ **The windshield wiper and washer can be operated when**

▶ Vehicles without a smart entry & start system

The engine switch is in the “ON” position.


▶ Vehicles with a smart entry & start system

The engine switch is in IGNITION ON mode.

■ **Raindrop sensor (vehicles with a rain-sensing windshield wiper)**

● The raindrop sensor judges the amount of raindrops.

An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.

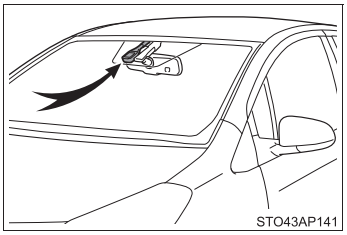

● Vehicles without a smart entry & start system: If the wiper switch is turned to AUTO while the engine switch is in the “ON” position, the wiper will operate once to show that “AUTO” mode is activated.

● Vehicles with a smart entry & start system: If the wiper switch is turned to AUTO while the engine switch is in IGNITION ON mode, the wiper will operate once to show that “AUTO” mode is activated.

● When the sensor sensitivity ring is turned toward high while in “AUTO” mode, the wiper will operate once to indicate that the sensor sensitivity is enhanced.

● If the temperature of the raindrop sensor is 90°C (194°F) or higher, or -15°C (5°F) or lower, automatic operation may not occur. In this case, operate the wiper in any mode other than “AUTO” mode.

If no windshield washer fluid sprays

Check that the washer nozzle is not blocked, if there is washer fluid in the windshield washer fluid reservoir.

WARNING

Caution regarding the use of windshield wiper in "AUTO" mode (vehicles with a rain-sensing windshield wiper)

The windshield wiper may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in "AUTO" mode. Take care that your fingers, etc., do not become caught in the windshield wiper.

Caution regarding the use of washer fluid

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

NOTICE

When the windshield is dry

Do not use the wiper, as they may damage the windshield.

When there is no washer fluid spray from the nozzle

Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.

When a nozzle becomes blocked

In this case, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
Do not try to clear it with a pin or other object. The nozzle will be damaged.

Rear window wiper and washer

Operation instructions

Turning the end of the lever turns on the rear window wiper and washer.

① o Off


② --- Intermittent window wiper operation

③ — Normal window wiper operation

④ Washer/wiper dual operation

⑤ Washer/wiper dual operation

The wiper will automatically operate a couple of times after the washer squirts.

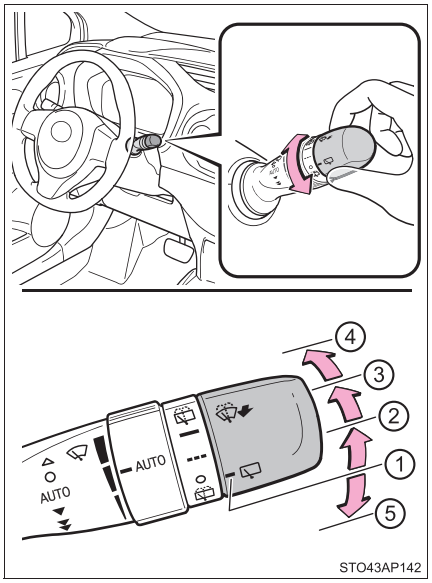

■ **The rear window wiper and washer can be operated when**

▶ Vehicles without a smart entry & start system

The engine switch is in the “ON” position.

▶ Vehicles with a smart entry & start system

The engine switch is in IGNITION ON mode.

■ **If no washer fluid sprays**

Check that the washer nozzle is not blocked, if there is washer fluid in the washer fluid reservoir.

NOTICE

When the rear window is dry

Do not use the wiper, as it may damage the rear window.

When the washer fluid tank is empty

Do not operate the switch continually as the washer fluid pump may overheat.

When a nozzle becomes blocked

In this case, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
Do not try to clear it with a pin or other object. The nozzle will be damaged.

Opening the fuel tank cap

Perform the following steps to open the fuel tank cap:

Before refueling the vehicle

- Vehicles without a smart entry & start system
  Turn the engine switch to the “LOCK” position and ensure that all the doors and windows are closed.
- Vehicles with a smart entry & start system
  Turn the engine switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

Fuel types

→P. 670

Fuel tank opening for unleaded gasoline (gasoline engine)

To help prevent incorrect fueling, your vehicle has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

WARNING

■ When refueling the vehicle

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel.
  Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle.
  Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.
  This may cause static electricity to build up, resulting in a possible ignition hazard.

■ When refueling

Observe the following precautions to prevent fuel overflowing from the fuel tank:

- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.


NOTICE

■ Refueling


Do not spill fuel during refueling.
Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

Opening the fuel tank cap

1 Pull up the opener to open the fuel filler door.

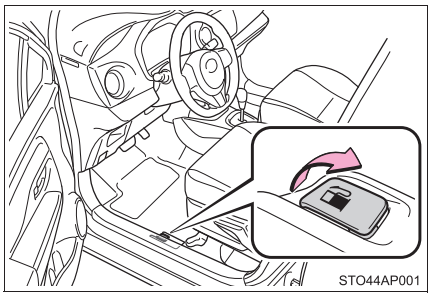


2 Turn the fuel tank cap slowly to open.

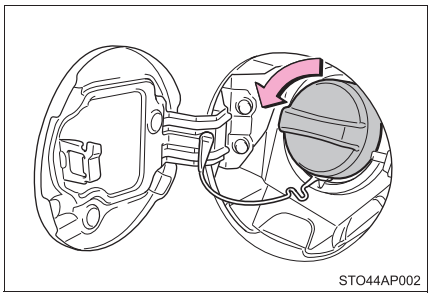

Closing the fuel tank cap

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

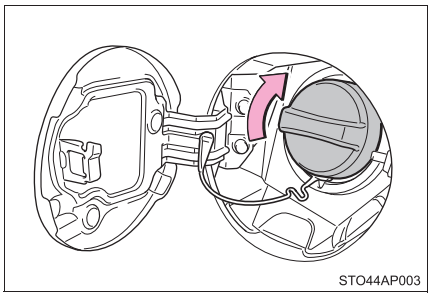

⚠ WARNING

■ When replacing the fuel tank cap

Do not use anything but a genuine Toyota fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

Toyota Safety Sense*

The Toyota Safety Sense consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

◆ PCS (Pre-Crash Safety system)

→P. 295

◆ LDA (Lane Departure Alert)

→P. 312

◆ Automatic High Beam

→P. 319

◆ Road Sign Assist

→P. 324

⚠ WARNING

■ Toyota Safety Sense

The Toyota Safety Sense is designed to operate under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants and the vehicle in the case of a collision or assist the driver in normal driving conditions.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

*: If equipped

Vehicle data recording

The pre-crash safety system is equipped with a sophisticated computer that will record certain data, such as:

- Accelerator status
- Brake status
- Vehicle speed
- Operation status of the pre-crash safety system functions
- Information (such as the distance and relative speed between your vehicle and the vehicle ahead or other objects)

● Data usage

Toyota may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

Toyota will not disclose the recorded data to a third party except:


- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Toyota in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

Front sensor

The front sensor is located on the upper side of the windshield. It consists of 2 types of sensors, each of which detects information necessary to operate the drive assist systems.

① Laser sensors

② Monocular camera sensor

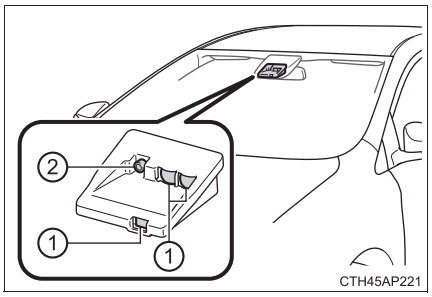

WARNING

■ Front sensor

The front sensor uses lasers to detect vehicles ahead of your vehicle. The front sensor is classified as class 1M laser product according to the IEC 60825-1 standard. Under normal usage conditions, these lasers are not harmful to the naked eye. However, it is necessary to observe the following precautions.


Failure to do so may result in the loss of eyesight or severe visual impairment.

- To avoid hazardous laser radiation exposure, never attempt to disassemble the front sensor (e.g. remove the lenses). When disassembled, the front sensor is classified as a class 3B laser product according to the IEC 60825-1 standard. Class 3B lasers are hazardous and pose a risk of eye injury under direct exposure.

WARNING


- Do not attempt to look into the front sensor with a magnifying glass, microscope or other optical instrument within a distance of less than 100 mm (3.9 in.).

Laser classification label

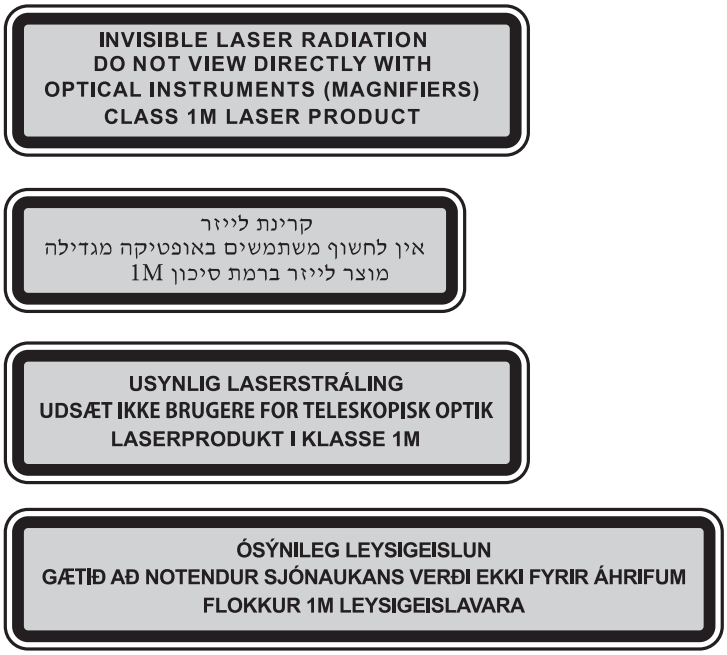

WARNING

Laser explanatory label

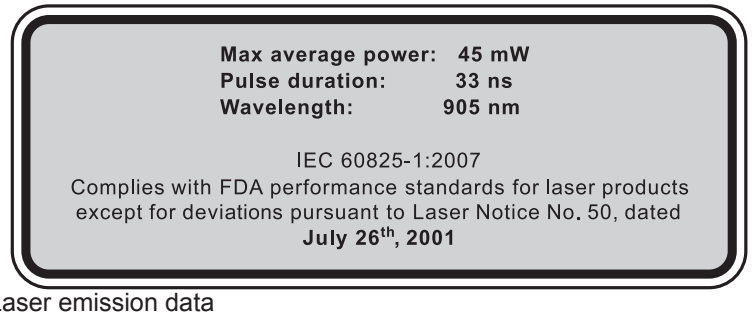

Laser emission data

Maximum average power: 45 mW
Pulse duration: 33 ns
Wave length: 905 nm
Divergence (horizontal × vertical): 28° × 12°

WARNING

■ **To avoid malfunction of the front sensor**


Observe the following precautions.

Otherwise, the front sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the windshield clean at all times. If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clear the windshield. If the inner side of the windshield in front of the front sensor is dirty, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not attach objects, such as stickers, transparent stickers, etc., and so forth, to the outer side of the windshield in front of the front sensor (shaded area in the illustration).

  A: From the top of the windshield to approximately 10 cm (4.0 in.) below the bottom of the front sensor


  B: Approximately 20 cm (7.9 in.) (Approximately 10 cm [4.0 in.] to the right and left from the center of the front sensor)

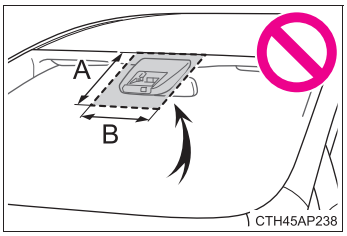

- Do not install or attach anything to the inner side of the windshield under the front sensor (shaded area in the illustration).

  A: Approximately 10 cm (4.0 in.) (Starting from the bottom of the front sensor)

  B: Approximately 20 cm (7.9 in.) (Approximately 10 cm [4.0 in.] to the right and left from the center of the front sensor)

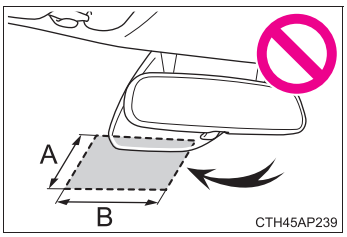

WARNING

- If there is a large difference in temperature between the inside and outside of the vehicle, such as in winter, the windshield is likely to fog up easily. If the part of the windshield in front of the front sensor is fogged up or covered with condensation or ice, the PCS warning light may illuminate and the system may be temporarily disabled. In this case, use the windshield defogger to remove the fog, etc. (→P. 436, 446)
- If the area of the windshield in front of the front sensor is covered with water droplets, use the windshield wipers to remove them.
  If the water droplets are not sufficiently removed, the performance of the front sensor may be reduced.
- If water droplets cannot be properly removed from the area of the windshield in front of the front sensor by the windshield wipers, replace the wiper insert or wiper blade.
  If the wiper inserts or wiper blades need to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not attach window tinting to the windshield.
- Replace the windshield if it is damaged or cracked.
  If the windshield needs to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not install an antenna in front of the sensor.
- Do not get the front sensor wet.
- Do not allow bright lights to shine into the front sensor.
- Do not dirty or damage the front sensor.
  When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens. Also, do not touch the lens.
  If the lens is dirty or damaged, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

- Do not subject the front sensor to a strong impact.
- Do not change the installation position or direction of the front sensor or remove it.
- Do not disassemble the front sensor.
- Do not install an electronic device or device that emits strong electric waves near the front sensor.
- Do not modify any components of the vehicle around the front sensor (inside rear view mirror, sun visors, etc.) or ceiling.
- Do not attach any accessories that may obstruct the front sensor to the hood, front grille or front bumper. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.
- If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the front sensor.
- Do not modify the headlights or other lights.
- Do not attach anything to or place anything on the dashboard.

■ Installation area of front sensor on windshield

When the windshield is fogging up easily, the glass around the front sensor may be hot due to the heater running. If the glass is touched, it may result in burns.


PCS (Pre-Crash Safety system)*

The pre-crash safety system uses the front sensor to detect vehicles in front of your vehicle. When the system determines that the possibility of a frontal collision with a vehicle is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with a vehicle is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

The pre-crash safety system can be disabled/enabled and the warning timing can be changed. (→P. 299)

◆ Pre-crash warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound, the PCS activation indicator will flash*1 or a warning message will be displayed in the multi-information display*2, and the system will urge the driver to take evasive action.

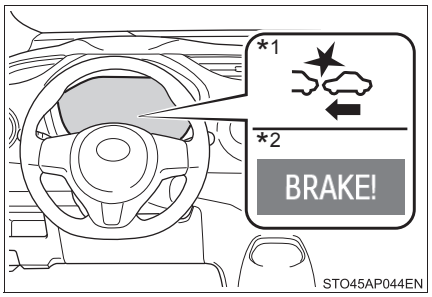

*1: Vehicles with monochrome display.

*2: Vehicles with color display.

*: If equipped

◆ Pre-crash brake assist

When the system determines that the possibility of a frontal collision with a vehicle is high, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

◆ Pre-crash braking

When the system determines that the possibility of a frontal collision with a vehicle is high, the system warns the driver. If the system determines that the possibility of a collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the collision speed.

WARNING

■ **Limitations of the pre-crash safety system**

- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.
  Do not use the pre-crash safety system instead of normal braking operations under any circumstances. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not overly rely on this system. Failure to do so may lead to an accident, resulting in death or serious injury.
- Although this system is designed to help avoid and reduce the impact of a collision, its effectiveness may change according to various conditions, therefore the system may not always be able to achieve the same level of performance.
  Read the following conditions carefully. Do not overly rely on this system and always drive carefully.
  - Conditions under which the system may operate even if there is no possibility of a collision: →P. 303
  - Conditions under which the system may not operate properly: →P. 307
- Do not attempt to test the operation of the pre-crash safety system yourself, as the system may not operate properly, possibly leading to an accident.

■ **Pre-crash braking**

- The pre-crash braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-crash braking function from operating.
- In some situations, while the pre-crash braking function is operating, operation of the function may be canceled if the accelerator pedal is depressed strongly or the steering wheel is turned and the system determines that the driver is taking evasive action.
- A large amount of braking force is applied while the pre-crash braking function is operating. Additionally, as the operation of the pre-crash braking function will be canceled after the vehicle has been stopped for approximately 2 seconds if it is stopped by the operation of the pre-crash braking function, the driver should depress the brake pedal as necessary.
- If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-crash braking function.

WARNING

■ **Pre-crash braking**

- While driving, such as when driving through a railway crossing, the system may determine that the possibility of a collision with an object, such as railway crossing barrier, is high and operate the pre-crash braking function. To move the vehicle in an emergency, such as if the system operates in a railway crossing, perform the following operations and then take the necessary measures to ensure your safety.
  - If the vehicle has been stopped, depress the accelerator pedal.
  - If the vehicle is decelerating, fully depress the accelerator pedal. (→P. 302)
  - Disable the pre-crash safety system. (→P. 299)

■ **When to disable the pre-crash safety system**


In the following situations, disable the system, as it may not operate properly, possibly leading to an accident resulting in death or serious injury:

- When the vehicle is being towed
- When your vehicle is towing another vehicle
- When transporting the vehicle via truck, boat, train or similar means of transportation
- When the vehicle is raised on a lift with the engine running and the tires are allowed to rotate freely
- When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the condition of the tires is poor and they do not perform well (→P. 505)
- When tires of a size other than specified are installed
- When tire chains are installed
- When a compact spare tire or an emergency tire puncture repair kit is used


Changing settings of the pre-crash safety system

■ Enabling/disabling the pre-crash safety system

▶ Vehicles with monochrome display

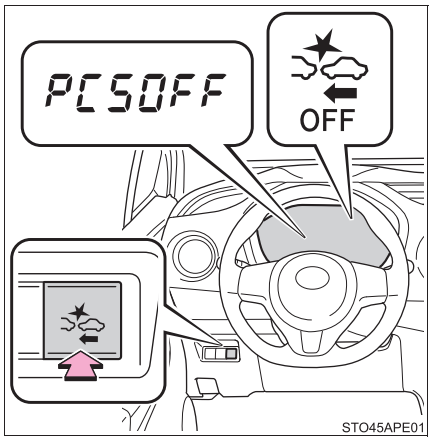

▶ Vehicles with color display

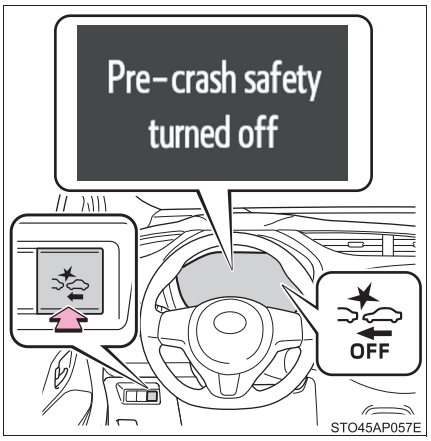

Press the PCS switch for 3 seconds or more.

The PCS warning light will turn on and a message will be displayed in the multi-information display, when the system is turned off.

To enable the system, press the PCS switch again.

The pre-crash safety system is enabled each time the engine is started.

■ **Changing the pre-crash warning timing**

▶ Vehicles with monochrome display

Press the PCS switch to turn on the PCS activation indicator and display the current warning timing in the multi-information display. Each time the PCS switch is pressed in the displayed state, the timing for the warning changes as follows:

If the operation timing setting has been changed, the setting will be retained the next time the engine is started.

① Far


The warning will begin to operate earlier than with the default timing.

② Middle

This is the default setting.

③ Near

The warning will begin to operate later than with the default timing.

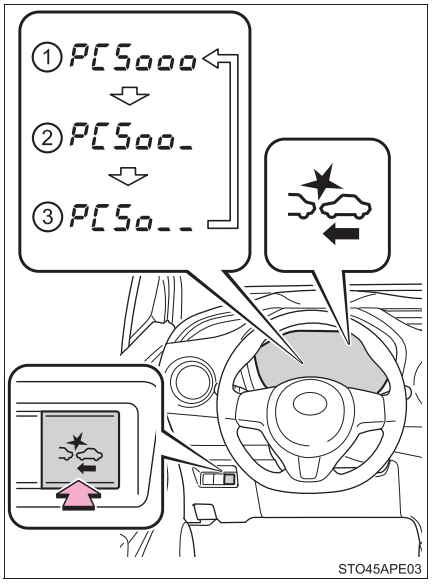

▶ Vehicles with color display

Press the PCS switch to display the current warning timing in the multi-information display.
Each time the PCS switch is pressed in the displayed state, the timing for the warning changes as follows:

If the operation timing setting has been changed, the setting will be retained the next time the engine is started.

① Far


The warning will begin to operate earlier than with the default timing.

② Middle

This is the default setting.

③ Near

The warning will begin to operate later than with the default timing.

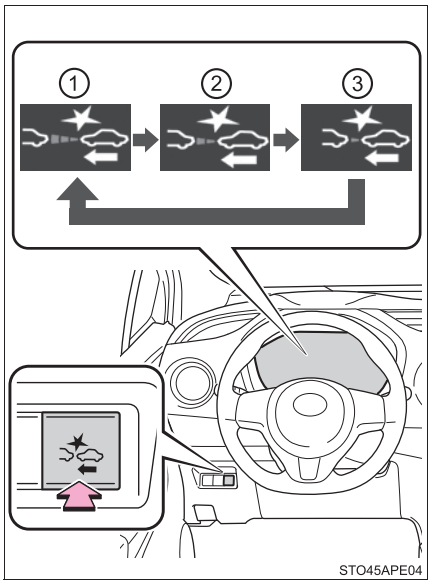

■ **Operational conditions**

The pre-crash safety system is enabled and determines that the possibility of a frontal collision with a vehicle is high.

Each function is operational at the following speeds:

- Pre-crash warning:
  - Vehicle speed is approximately 15 to 140 km/h (10 to 85 mph).
  - The relative speed between your vehicle and a preceding vehicle is approximately 15 km/h (10 mph) or more.
- Pre-crash brake assist:
  - Vehicle speed is approximately 30 to 80 km/h (20 to 50 mph).
  - The relative speed between your vehicle and a preceding vehicle is approximately 30 km/h (20 mph) or more.
- Pre-crash braking:
  - Vehicle speed is approximately 10 to 80 km/h (7 to 50 mph).
  - The relative speed between your vehicle and a preceding vehicle is approximately 10 km/h (7 mph) or more.

The system may not operate in the following situations:

- If a battery terminal has been disconnected and reconnected and then the vehicle has not been driven for a certain amount of time
- If the shift lever is in R
- If VSC is disabled (only the pre-crash warning function will be operational)


■ **Cancelation of the pre-crash braking**

- If either of the following occur while the pre-crash braking function is operating, it will be canceled:
  - The accelerator pedal is depressed strongly.
  - The steering wheel is turned sharply or abruptly.
- If the vehicle is stopped by the operation of the pre-crash braking function, the operation of the pre-crash braking function will be canceled after the vehicle has been stopped for approximately 2 seconds.


■ **Conditions under which the system may operate even if there is no possibility of a collision**

● In some situations such as the following, the system may determine that there is a possibility of a frontal collision and operate.


• When passing a vehicle in an oncoming lane that is stopped to make a right/left turn

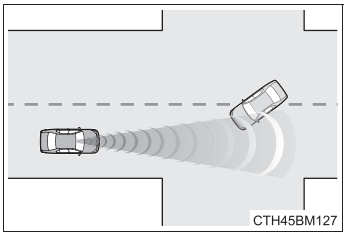


• When passing an oncoming vehicle while making a left or right turn

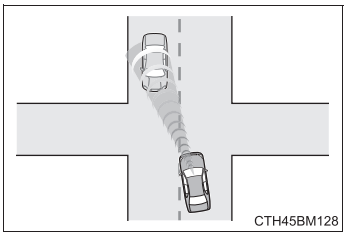

• When driving on a road where relative location to vehicle ahead in an adjacent lane may change, such as on a winding road

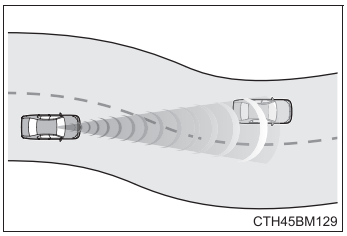


• When rapidly closing on a preceding vehicle

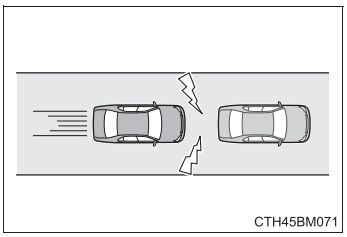


• If the front of the vehicle is raised or lowered, such as when the road surface is uneven or undulating


- When passing extremely close to a vehicle or structural object

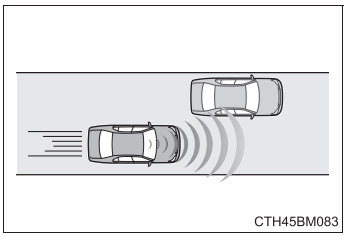


- When there is a vehicle or object by the roadside at the entrance of a curve

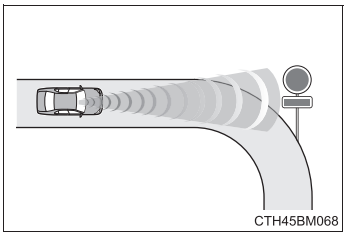


- When driving on a narrow path surrounded by a structure, such as in a tunnel or on an iron bridge
- When there is a reflective object (manhole cover, steel plate, etc.), steps, dip, or a protrusion on the road surface or roadside

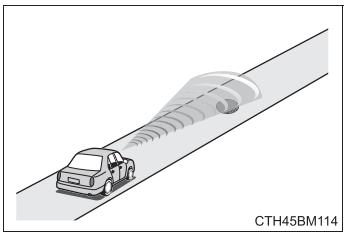


- When passing through a place with a low structure above the road (low ceiling, traffic sign, etc.)

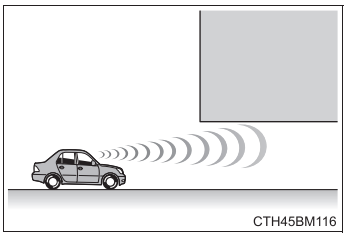


- When there is a structural object (overpass, traffic sign, billboard, street light, etc.) at the top of an uphill road

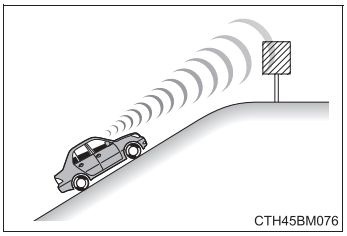


- When rapidly closing on an electric toll gate barrier, parking area barrier, or other barrier that opens and closes

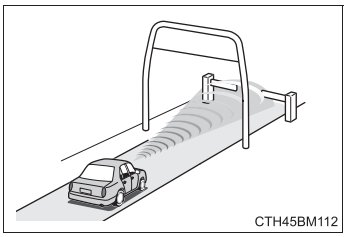
CTH45BM112


- When using an automatic car wash
- When approaching a low hanging object that may contact the vehicle, such as a banner, tree branches or thick grass

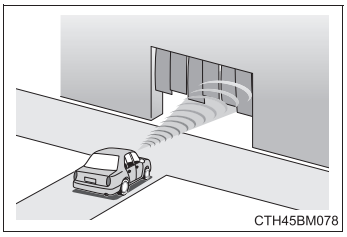
CTH45BM078


- When the vehicle is hit by water, snow, dust, etc. from a vehicle ahead

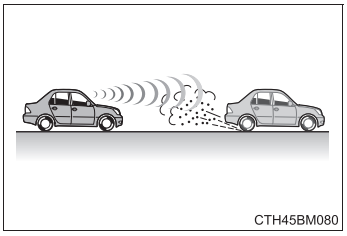
CTH45BM080


- When driving through steam or smoke

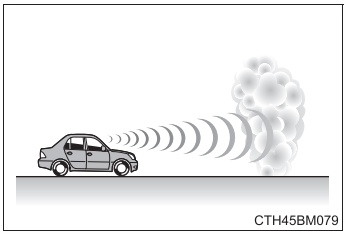
CTH45BM079


- When there are patterns or paint on the road or a wall that may be mistaken for a vehicle
- When the front part of the vehicle is raised or lowered

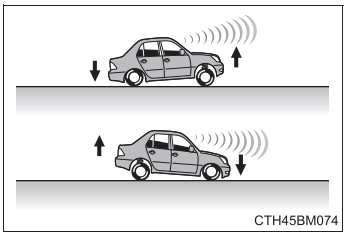
CTH45BM074


- When the sensor is misaligned due to a strong impact being applied to the sensor, etc.

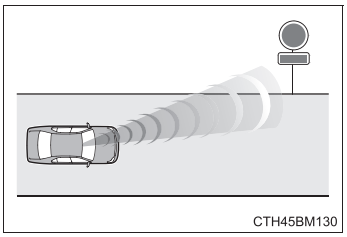
CTH45BM130

- When the vehicle is being parked in a place where there is a low hanging object at the height of the front sensor

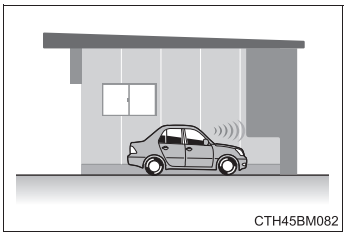
CTH45BM082


- When the windshield is covered with raindrops, etc.

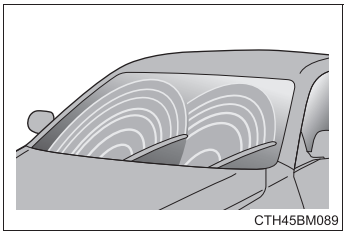
CTH45BM089


■ **Situations in which the system may not operate properly**

● In some situations such as the following, a vehicle may not be detected by the front sensor, preventing the system from operating properly:


- If an oncoming vehicle is approaching your vehicle
- When approaching the side or front of a vehicle
- If a preceding vehicle has a small rear end, such as an unloaded truck
- If a preceding vehicle has a low rear end, such as a low bed trailer

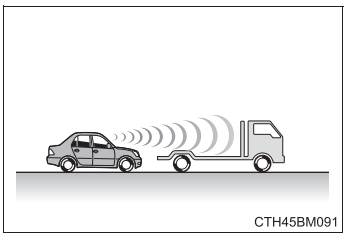
CTH45BM091

- If a vehicle ahead is carrying a load which protrudes past its rear bumper
- If a vehicle ahead has extremely high ground clearance

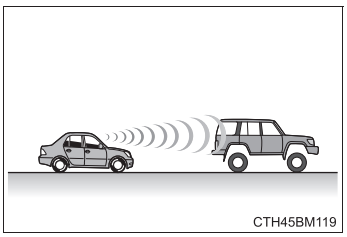

CTH45BM119

- If a vehicle ahead is irregularly shaped, such as a tractor or side car
- If the sun or other light is shining directly on a vehicle ahead
- If a vehicle cuts in front of your vehicle or emerges from beside a vehicle

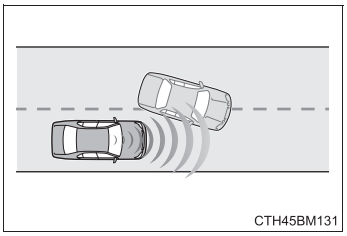

CTH45BM131

- If a vehicle ahead makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)
- When suddenly cutting behind a preceding vehicle

- When a vehicle ahead is not directly in front of your vehicle

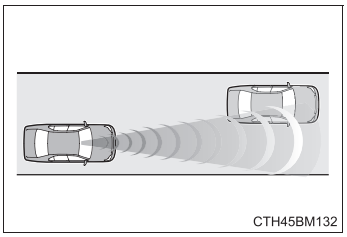

CTH45BM132

- When driving in inclement weather such as heavy rain, fog, snow or a sand storm

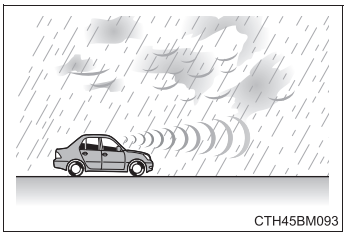

CTH45BM093

- When the vehicle is hit by water, snow, dust, etc. from a vehicle ahead
- When driving through steam or smoke that may obscure vehicles ahead
- When driving in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a tunnel

- When a very bright light, such as the sun or the headlights of oncoming traffic, shines directly into the front sensor

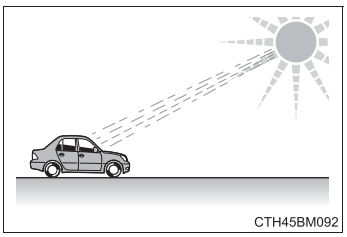

CTH45BM092

- When the surrounding area is dim, such as at dawn or dusk, or while at night or in a tunnel

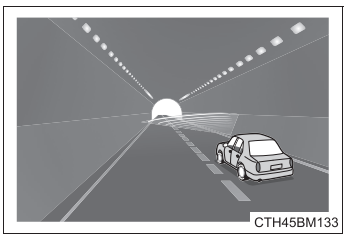

CTH45BM133

- While driving on a curve and for a certain amount of time after driving on a curve

- If your vehicle is skidding

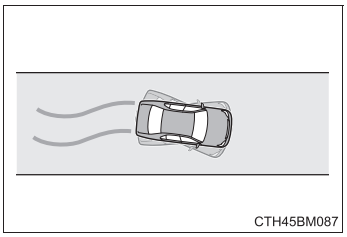

CTH45BM087

- When the front part of the vehicle is raised or lowered

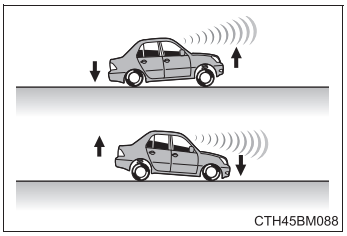
CTH45BM088

- If the wheels are misaligned
- If a wiper blade is blocking the front sensor
- The vehicle is wobbling.
- The vehicle is being driven at extremely high speeds.
- When driving on roads with sharp bends or uneven surfaces
- When a preceding vehicle is a poor reflector of laser

- When the sensor is misaligned due to a strong impact being applied to the sensor, etc.

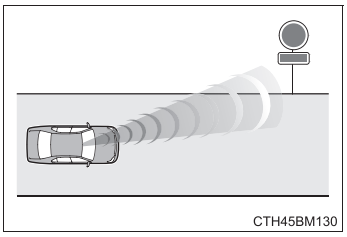
CTH45BM130

● In some situations such as the following, sufficient braking force may not be obtained, preventing the system from performing properly:

- If the braking functions cannot operate to their full extent, such as when the brake parts are extremely cold, extremely hot, or wet
- If the vehicle is not properly maintained (brakes or tires are excessively worn, improper tire inflation pressure, etc.)
- When the vehicle is being driven on a gravel road or other slippery surface

■ **If the PCS warning light flashes or illuminates (vehicles with monochrome display)**

The pre-crash safety system may be temporarily unavailable or there may be a malfunction in the system.

- In the following situations, the warning light will be cleared and the system will become operational when normal operating conditions return:
  - When the area around the front sensor is hot, such as after the vehicle has been parked in the sun
  - When the windshield is fogged up or covered with condensation or ice
  - When driving in conditions where the front sensor cannot detect an object, such as in the dark (at night on a road without street lights or other lights, etc.), when bright light is shining into the sensor, or in snow or fog.
  - When the front sensor or the area around either sensor is cold, such as in an extremely cold environment
  - If the area in front of the front sensor is obstructed, such as when the hood is open
- If the PCS warning light continues to flash or illuminate, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ **If the PCS warning light flashes or illuminates and a warning message is displayed on the multi-information display (vehicles with color display)**

The pre-crash safety system may be temporarily unavailable or there may be a malfunction in the system.

- In the following situations, the warning light will turn off, the message will disappear and the system will become operational when normal operating conditions return:
  - When the area around the front sensor is hot, such as in the sun
  - When the windshield is fogged up or covered with condensation or ice (→P. 436, 446)
  - When driving in conditions where the front sensor cannot detect an object, such as in the dark (at night on a road without street lights or other lights, etc.), when bright light is shining into the sensor, or in snow or fog.
  - When the front sensor or the area around either sensor is cold, such as in an extremely cold environment
  - If the area in front of the front sensor is obstructed, such as when the hood is open
- If the PCS warning light continues to flash or illuminate or the warning message does not disappear, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ **If VSC is disabled**

- If TRC and VSC are disabled (→P. 352), the pre-crash brake assist and pre-crash braking functions are also disabled. However, the pre-crash warning function will still operate.
- Vehicles with monochrome display: The PCS warning light illuminates.
- Vehicles with color display: The PCS warning light illuminates and “VSC turned off. Pre-crash brake system unavailable.” is displayed on the multi-information display.


LDA (Lane Departure Alert)*

Summary of function

While driving on a road that has lane markers, this system recognizes the lane markers using a camera as a sensor to alert the driver when the vehicle deviates from its lane.

If the system judges that the vehicle has deviated from its lane, it alerts the driver using a buzzer and indications on the multi-information display.

Front sensor

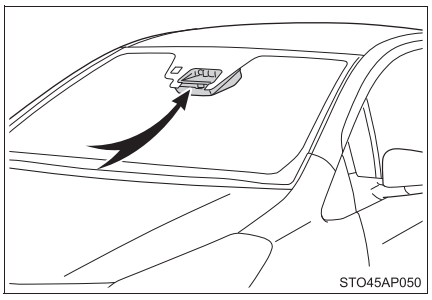

*: If equipped


Turning the LDA system on

Press the LDA switch to activate the system.

The LDA indicator will come on.

Press the switch again to turn the LDA system off.

The LDA system will remain on or off even if the engine switch is turned to “ON” position (vehicles without a smart entry & start system) or IGNITION ON mode (vehicles with a smart entry & start system).

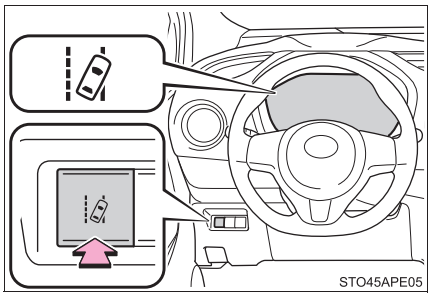

Operating conditions

- When the vehicle speed is approximately 50 km/h (32 mph) or more
- When the lane width is more than approximately 3 m (9.8 ft.)
- When driving on a straight road or through a curve with a radius of more than approximately 150 m (492 ft.)


Indication on the multi-information display

▶ Vehicles with monochrome display

When both of the lane marker indicators turn green:

Indicates that both right and left lane markers are recognized.


If the vehicle deviates from the lane, the lane marker indicators of the deviated side will flash yellow.

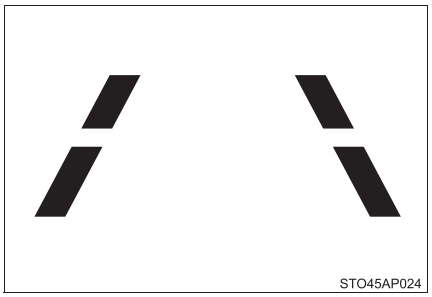
STO45AP024

When either of the lane marker indicators turns green:


Indicates that the lane marker on the green-marked side is recognized.

If the vehicle deviates from a lane on the side with the recognized lane markers, the lane marker indicators will flash in yellow.

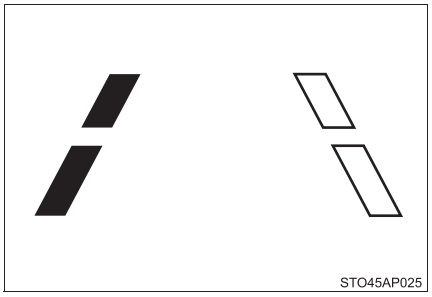
STO45AP025

When both of the lane marker indicators turn off:

Indicates that no lane markers are recognized or the LDA system is temporarily canceled.

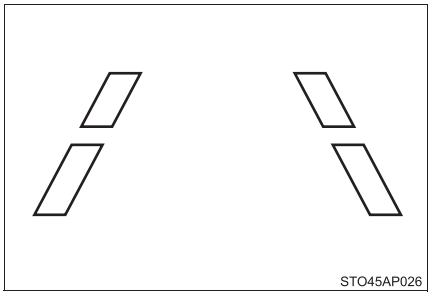
STO45AP026

▶ Vehicles with color display

When the inside of both lane lines turn white:

Indicates that both right and left lane markers are recognized.

If the vehicle deviates from the lane, the lane line on the side the vehicle has deviated from will flash yellow.


STO45AP053

When the inside of either lane line turns white:

Indicates that the lane marker on the white-marked side is recognized.

If the vehicle deviates from the side of a lane with recognized lane markers, the lane line will flash yellow.


STO45AP052

When the inside of both lane lines are black:

Indicates that no lane markers are recognized or the LDA system is temporarily canceled.


STO45AP051

■ **Temporary cancelation of the LDA system functions**

If any of the following occurs, the LDA system functions will be temporarily canceled. The functions will resume after the necessary operating conditions have returned.

- The turn signal lever is operated.
- The vehicle speed deviates from the operating range of the LDA system functions.
- When the lane lines cannot be recognized while driving.
- When the lane departure warning sounds.
  The lane departure warning function will not operate again for a several seconds after it has been activated, even if the vehicle leaves the lane again.

■ **The lane departure warning**

Depending on the audio system sound level or air conditioning fan noise while the audio system or air conditioning system is in use, it may be difficult to hear the warning sound.

■ **After the vehicle has been parked in the sun**

The LDA system may not be immediately available. When the temperature in the cabin decreases and the temperature around the front sensor (→P. 312) becomes suitable for its operation, the functions will begin to operate.

■ **If there are lane markers on only one side of the vehicle**

The lane departure warning will not operate for the side on which lane markers could not be recognized.

■ **Conditions in which the function may not operate correctly**

In the following situations, the front sensor may be unable to recognize lane markers causing the lane departure warning function to operate incorrectly. However, this does not indicate a malfunction.

- When driving through an area, such as a tollbooth, a crossing or before a ticket checkpoint
- When driving on a sharp curve
- When lane markers are extremely narrow or extremely wide
- When the vehicle leans to one side an unusual amount due to a heavy load or improper tire inflation pressure
- When the following distance between your vehicle and the vehicle ahead is extremely short

- When the lane markers are yellow (These may be more difficult for the system to recognize compared to white markers.)
- When the lane markers are broken, Botts' dots (raised pavement markers) or stones
- When the lane markers are on a curb etc.
- When lane markers are obscured or partially obscured by sand, dirt, etc.
- When there are shadows on the road running parallel with lane markers, or if a shadow covers the lane markers
- When driving on a particularly bright road surface, such as concrete
- When driving on a road surface that is bright due to reflected light
- When driving in a location where the light level changes rapidly, such as the entrance to or exit from a tunnel
- When sunlight or the headlights of oncoming vehicles are shining directly into the camera lens
- When driving on roads that are branching or merging
- When driving on a road surface that is wet due to rain, previous rainfall, standing water, etc.
- When the vehicle experiences strong up-and-down motion such as when driving on an extremely rough road or on a seam in the pavement
- When headlight brightness at nighttime is reduced due to dirt on the lenses, or when the headlights are misaligned
- When driving on winding roads or roads that are uneven
- When driving on rough or unpaved roads
- When the windshield is dirty, or if raindrops, condensation or ice are adhering to the windshield
- When the heater is blowing to the feet, the upper part of the windshield may get fogged up and have a negative effect
- When cleaning the inside of the windshield, touching the lens or getting glass cleaner on the lens may have a negative effect

■ **When changing the tires**

Depending on the tires used, sufficient performance may not be maintainable.

■ **If the LDA indicator comes on in yellow (vehicles with monochrome display)**

It may indicate a malfunction in the system. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Warning messages for the LDA system (vehicles with color display)**

Warning messages are used to indicate a system malfunction or to inform the driver of the need for caution while driving.

■ **Customization**

→P. 678

⚠ WARNING

■ **Before using the LDA system**

Do not rely solely on the LDA system. The LDA system does not drive the vehicle automatically, nor does it reduce the amount of care you need to take. As such, the driver must always assume full responsibility for understanding his/her surroundings, for operating the steering wheel to correct the driving line, and for driving safely.

Inappropriate or negligent driving could lead to an accident.

■ **To avoid operating the LDA by mistake**

Switch the LDA system off using the LDA switch when not in use.

⚠ NOTICE

■ **To prevent damage to or incorrect operation of the LDA system**


- Do not modify the headlights or attach stickers to the surface of the lights.
- Do not modify the suspension. If your suspension needs repairs, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not install or place anything on the hood or the grille. Also, do not install a grille guard (bull bars, kangaroo bar, etc.).
- If your windshield needs repairs, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Automatic High Beam*

The Automatic High Beam uses an in-vehicle front sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.


Activating the Automatic High Beam system

1 Push the lever away from you with the headlight switch in AUTO or position.

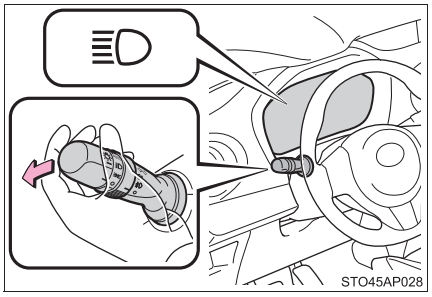

2 Press the Automatic High Beam switch.

The Automatic High Beam indicator will come on green when the headlights are turned on automatically to indicate that the system is active.

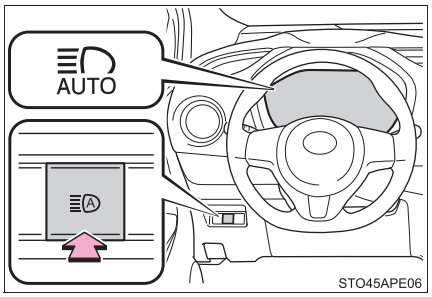

*: If equipped

High beam automatic turning on or off conditions

When all of the following conditions are fulfilled, high beam will be automatically turned on:

- Vehicle speed is above approximately 40 km/h (25 mph).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.
- There are few streetlights on the road ahead.

If any of the following conditions are fulfilled, high beam will be automatically turned off:

- Vehicle speed drops below approximately 30 km/h (19 mph).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.


Turning the high beam on/off manually

Switching to low beam

Pull the lever to original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

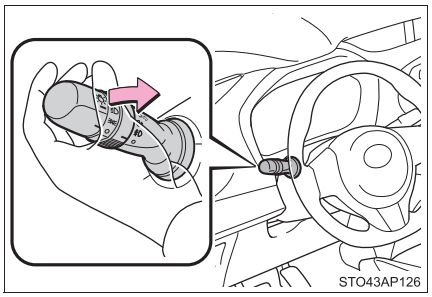


■ Switching to high beam

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the headlight high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

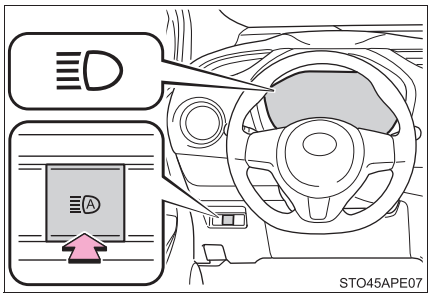

■ The Automatic High Beam can be operated when

▶ Vehicles without a smart entry & start system

The engine switch is in the “ON” position.

▶ Vehicles with a smart entry & start system

The engine switch is in IGNITION ON mode.

■ Front sensor detection information

- High beam may not be automatically turned off in the following situations:
  - When oncoming vehicles suddenly appear from a curve
  - When the vehicle is cut in front of by another
  - When oncoming or preceding vehicles are hidden from sight due to repeated curves, road dividers or roadside trees
- High beam may be turned off if an oncoming vehicle that is using fog lights without using the headlights is detected.
- House lights, street lights, red traffic signals, and illuminated billboards or signs may cause the high beam to turn off.
- The following factors may affect the amount of time taken to turn high beam on or off:
  - The brightness of headlights, fog lights, and tail lights of oncoming and preceding vehicles
  - The movement and direction of oncoming and preceding vehicles
  - When a oncoming or preceding vehicle only has operational lights on one side
  - When a oncoming or preceding vehicle is a two-wheeled vehicle
  - The condition of the road (gradient, curve, condition of the road surface, etc.)
  - The number of passengers and amount of luggage

- High beam may be turned on or off when unexpected by the driver.
- In the situations below, the system may not be able to correctly detect the surrounding brightness levels, and may flash or expose nearby pedestrians to the high beam. Therefore, you should consider turning the high beams on or off manually rather than relying on the Automatic High Beam system.
  - In bad weather (rain, snow, fog, sandstorms, etc.)
  - The windshield is obscured by fog, mist, ice, dirt, etc.
  - The windshield is cracked or damaged.
  - The front sensor is deformed or dirty.
  - The front sensor temperature is extremely high.
  - Surrounding brightness levels are equal to those of headlights, tail lights or fog lights.
  - Vehicles ahead have headlights or tail lights that are either switched off, dirty, are changing color, or are not aimed properly.
  - When driving through an area of intermittently changing brightness and darkness.
  - When frequently and repeatedly driving ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel tracks, etc.).
  - When frequently and repeatedly taking curves or driving on a winding road.
  - There is a highly reflective object ahead of the vehicle, such as a sign or a mirror.
  - The back of a vehicle ahead is highly reflective, such as a container on a truck.
  - The vehicle's headlights are damaged or dirty.
  - The vehicle is listing or titling, due to a flat tire, a trailer being towed, etc.
  - The driver believes that the high beam may be causing problems or distress to other drivers or pedestrians nearby.

If the Automatic High Beam indicator comes on in yellow (vehicles with monochrome display)

It may indicate a malfunction in the system. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If "Headlight system malfunction. Visit your dealer." is displayed on the multi-information display (vehicles with color display)

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ Limitations of the Automatic High Beam

Do not rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning high beam on or off manually if necessary.

NOTICE

■ Notes when using the Automatic High Beam system

Observe the following to ensure that the Automatic High Beam functions correctly.

- Do not overload the vehicle.
- Do not modify the vehicle.

RSA (Road Sign Assist)*


Summary of function

RSA recognizes specific road signs using the front sensor and provides information to the driver via the multi-information display.

If the system judges that the vehicle is being driven over the speed limit, performing prohibited actions, etc., in relation to the recognized road signs, it alerts the driver using a warning display and warning buzzer*.

*: This setting needs to be customized.

Front sensor

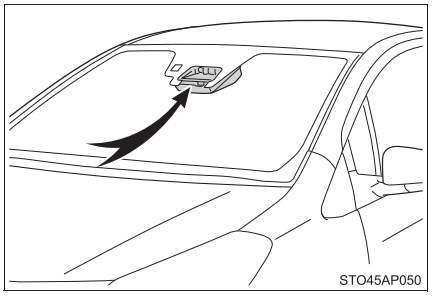


*: If equipped

Indication on the multi-information display


After the front sensor recognizes a sign, it is displayed on the multi-information display when the vehicle passes the sign.

● When the driving assist system information is selected, a maximum of 3 signs can be displayed. (→P. 118)

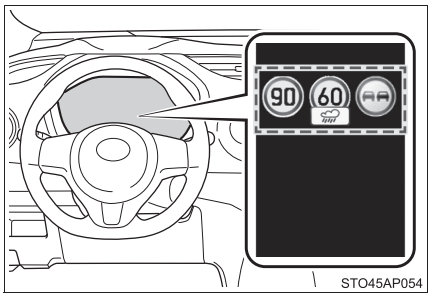

● When other than the driving assist system information is selected, a speed limit sign or an all canceled sign can be displayed. (→P. 118)


A no overtaking sign and a speed limit sign with supplemental mark are not displayed. However, if signs other than speed limit signs are recognized, they are mentioned in a stack under the current speed limit sign.

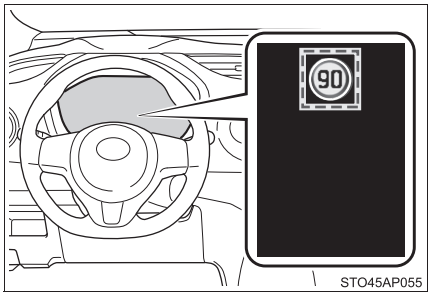

Types of recognized road signs

The following types of road signs, including electronic signs and blinking signs, are recognized.

A non-official (not meeting the Vienna Convention) or a recently introduced traffic sign may not be recognized.

Type		Multi-information display
Speed limit begins/ends*1		
Speed limit with supplemental mark (Displayed simultaneously with speed limit)  (Display example)	Rain	
	Ice	
	On/off ramp*2	
	Supplemental mark exists (Contents not recognized)	
No overtaking begins/ends		
All canceled (All restrictions canceled. Returns to default road regulation.)		

*1: A speed limit sign with a value greater than 130 may not be recognized and a wrong speed limit may be displayed.

*2: If the turn signal indicator is not operated when changing lanes, the mark does not display.

Warning display

In the following situations, the RSA system alerts the driver using a warning display.

- When the vehicle speed exceeds the speed warning threshold applied to the speed limit of the sign displayed on the multi-information display, the sign color becomes inverted.
- If it is detected that your vehicle is overtaking when a no overtaking sign is displayed on the multi-information display, the sign flashes.

Depending on the situation, traffic environment (traffic direction, speed, unit) may be detected incorrectly and a warning display may not operate properly.

Automatic turn-off of RSA sign display

One or more signs automatically turn off in the following situations.

- A new sign is not recognized for a certain distance.
- The road changes due to a left or right turn, etc.
  Depending on the situation, the driving behavior (turning, lane change, etc.) may be detected incorrectly and the automatic turn-off may not operate properly.

■ **Conditions in which the function may not operate or detect correctly**

In the following situations, RSA does not operate normally and may not recognize signs, display the incorrect sign, etc. However, this does not indicate a malfunction.

- The front sensor is misaligned due to a strong impact being applied to the sensor, etc.
- Dirt, snow, stickers, etc., are on the windshield near the front sensor.
- In inclement weather such as heavy rain, fog, snow or sand storms
- Light from an oncoming vehicle, the sun, etc., enters the front sensor.
- The sign is small, dirty, faded, tilted or bent, and if an electronic sign, the contrast is poor.
- All or part of the sign is hidden by the leaves of a tree, a pole, etc.
- The sign is only visible to the front sensor for a short amount of time.
- The driving scene (turning, lane change, etc.) is judged incorrectly.
- Even if it is a sign not appropriate for the currently traveled lane, such a sign exists directly after a freeway branches, or in an adjacent lane just before merging.
- Stickers are attached to the rear of the preceding vehicle.
- A sign resembling a system compatible sign is recognized.
- The vehicle is driven in a country with a different direction of traffic.
- Side road speed signs may be detected and displayed (if positioned in sight of the front sensor) while the vehicle is traveling on the main road.
- Roundabout exit road speed signs may be detected and displayed (if positioned in sight of the front sensor) while traveling on a roundabout.
- The speed information displayed on the meter and that displayed on the Navigation system (if equipped) may be different due to the Navigation system using map data.


■ **When driving vehicle in country with different speed unit**

Since RSA recognizes signs based on the set unit of the meter, it is necessary to change the set unit of the meter. Adjust the set unit of the meter to the speed unit of signs in the current location. (→P. 678)

■ **Turning the system on/off**

1 Select  on the settings display (→P. 118)

2 Press the enter/set switch on the meter control switches.

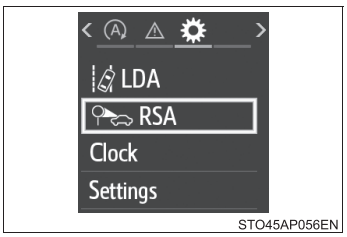

■ **Speed limit sign display**

If the engine switch was last turned off while a speed limit sign was displayed on the multi-information display, the same sign displays again when the engine switch is turned to “ON” position (vehicles without smart entry & start system) or IGNITION ON mode (vehicles with smart entry & start system).

■ **When “Check RSA system.” is displayed on the multi-information display**

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

■ **Customization**

The settings for warning display, warning buzzer*, speeding warning threshold, etc., can be changed. (Customizable feature: →P. 678)

*: If a speed limit with supplemental mark is exceeded, the warning buzzer does not operate.

⚠ WARNING

■ **Before using the RSA**

Do not rely solely upon the RSA system. RSA is a system which supports the driver by providing information, but it is not a replacement for a driver’s own vision and awareness. Drive safely by always paying careful attention to the traffic rules.

Inappropriate or negligent driving could lead to an unexpected accident.


Cruise control*

Summary of functions

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

① Indicators

② Cruise control switch

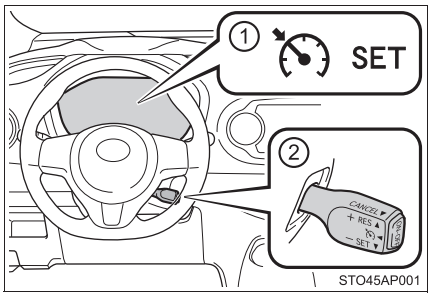


Setting the vehicle speed

1 Press the “ON-OFF” button to activate the cruise control.

Cruise control indicator will come on.


Press the button again to deactivate the cruise control.

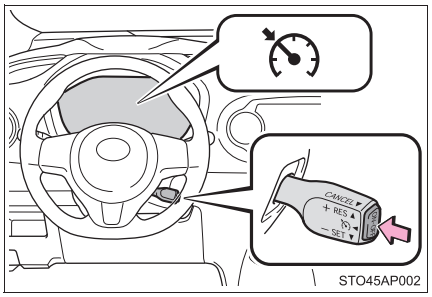

2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

“SET” indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

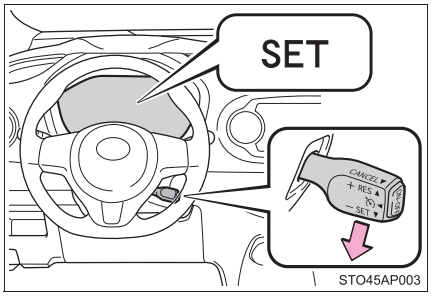

*: If equipped

Adjusting the set speed


To change the set speed, operate the lever until the desired set speed is obtained.

① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

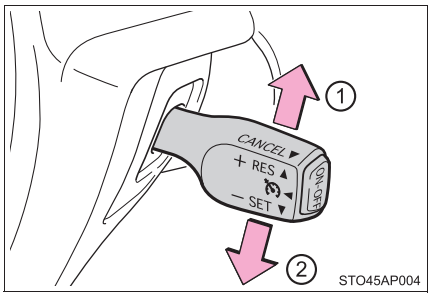

The set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1.6 km/h (1 mph) each time the lever is operated.


Large adjustment: The set speed can be increased or decreased continually until the lever is released.

Canceling and resuming the constant speed control

① Pulling the lever toward you cancels the constant speed control.

The speed setting is also canceled when the brakes are applied or the clutch pedal (manual transmission only) is depressed.

② Pushing the lever up resumes the constant speed control.

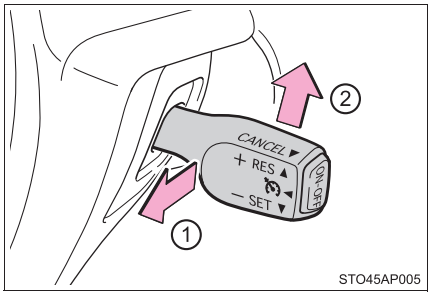

Resuming is available when the vehicle speed is more than approximately 40 km/h (25 mph).

4

Driving

■ **Cruise control can be set when**

▶ Vehicles with a Multidrive

- The shift lever is in the D or range 4 or higher of M has been selected.
- Range 4 or higher has been selected by using the paddle shift.
- Vehicle speed is above approximately 40 km/h (25 mph).

▶ Vehicles with a manual transmission

- Vehicle speed is above approximately 40 km/h (25 mph).

■ **Accelerating after setting the vehicle speed**

- The vehicle can be accelerated normally. After acceleration, the set speed resumes.
- Even without canceling the cruise control, the set speed can be increased by first accelerating the vehicle to the desired speed and then pushing the lever down to set the new speed.

■ **Automatic cruise control cancelation**

Cruise control will stop maintaining the vehicle speed in any of the following situations.

- Actual vehicle speed falls more than approximately 16 km/h (10 mph) below the preset vehicle speed.
  At this time, the memorized set speed is not retained.
- Actual vehicle speed is below approximately 40 km/h (25 mph).
- VSC is activated (if equipped).
- Speed limiter is activated (if equipped).

If the cruise control indicator comes in yellow (vehicles with monochrome display) or "Check cruise control system." is displayed on the multi-information display (vehicles with color display)

Press the "ON-OFF" button once to deactivate the system, and then press the button again to reactivate the system.
If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

⚠ WARNING

To avoid operating the cruise control by mistake

Switch the cruise control off using the "ON-OFF" button when not in use.

Situations unsuitable for cruise control

Do not use cruise control in any of the following situations.
Doing so may result in loss of control and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep hills
  Vehicle speed may exceed the set speed when driving down a steep hill.
- When your vehicle is towing a trailer or during emergency towing

Speed limiter*

Summary of function

The desired maximum speed can be set using the cruise control switch. The speed limiter prevents vehicle speed from exceeding the set speed.


① Set speed

② Indicator

③ Speed limiter switch

*1: Vehicles with color display.

*2: Vehicles with monochrome display.

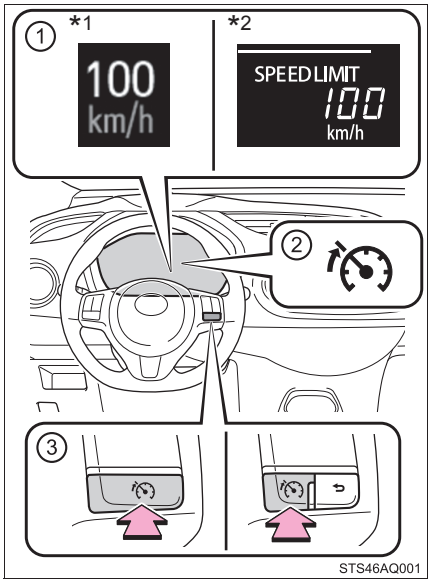


*: If equipped

Setting the vehicle speed

1 Press the speed limiter switch to activate the speed limiter.

Press the switch again to deactivate the speed limiter.

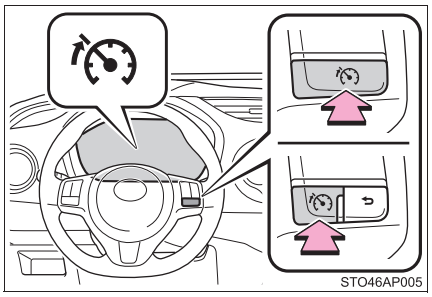


2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

The vehicle speed at the moment the lever is released becomes the set speed.

*1: Vehicles with color display.

*2: Vehicles with monochrome display.

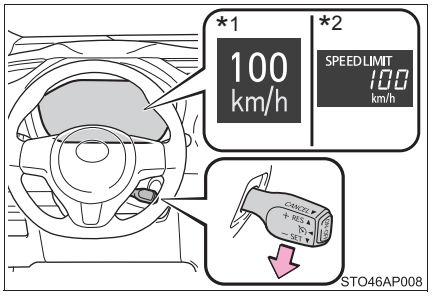

■ **Speed limiter can be set when**

The speed limiter can be set at any vehicle speed. However, if the speed limiter is set while the vehicle speed is below 30 km/h (18 mph), the speed limiter will be set to 30 km/h (18 mph).

Adjusting the set speed


To change the set speed, operate the lever until the desired set speed is obtained.

① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

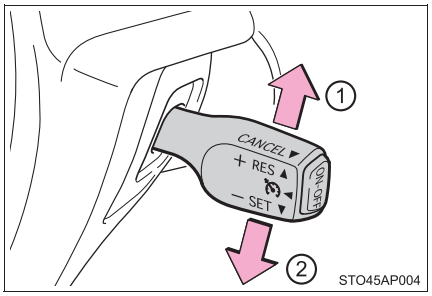

▶ When the set speed is shown in “MPH”

Fine adjustment: By approximately 1.6 km/h (1 mph) each time the lever is operated.

Large adjustment: By approximately 8 km/h (5 mph) for each 0.75 seconds the lever is held.

▶ When the set speed is shown in “km/h”


Fine adjustment: By approximately 1 km/h (0.6 mph) each time the lever is operated.

Large adjustment: By approximately 5 km/h (3.1 mph) for each 0.75 seconds the lever is held.

Canceling and resuming the speed limiter

① Pulling the lever toward you cancels the speed limiter.

② Pushing the lever up resumes the speed limiter.

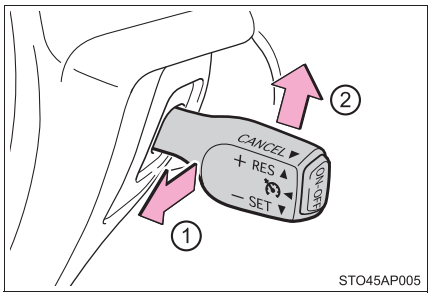


■ Exceeding the set speed

In the following situation, the vehicle speed exceeds the set speed and multi-information display characters will be highlighted*1 or flash*2:

- When fully depressing the accelerator pedal
- When driving down a slope

*1: Vehicles with color display.

*2: Vehicles with monochrome display.

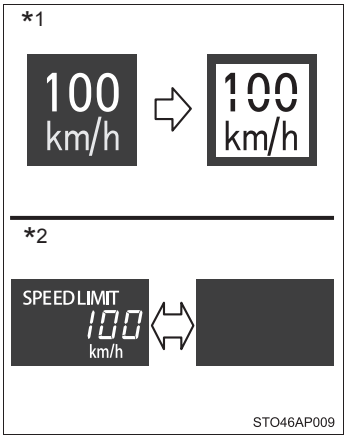

■ Automatic speed limiter cancelation

The set speed is automatically canceled when the cruise control is activated.

■ **If the speed limiter indicator comes on in yellow (vehicles with monochrome display) or "Check speed limiter system." is displayed on the multi-information display (vehicles with color display)**

Stop the engine and then restart the engine. After restarting the engine, set the speed limiter. If the speed limiter cannot be set, there may be a malfunction in the speed limiter. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

⚠ WARNING

■ **To avoid operating the speed limiter by mistake**

Switch the speed limiter off using the speed limiter switch when not in use.

■ **Situations unsuitable for the speed limiter**

Do not use the speed limiter in either of the following situations.
Doing so may result in loss of control and could cause a serious or fatal accident.

- On slippery roads, such as those covered with rain, ice and snow
- On steep hills
- When your vehicle is towing a trailer or during emergency towing

Stop & start system*

The stop & start system stops and restarts the engine according to the brake pedal and shift lever operation (Multidrive) or clutch pedal operation (manual transmission) for stopping and starting the vehicle.


Stopping the engine

▶ Vehicles with a Multidrive

1 While driving in D or M, depress the brake pedal fully, and stop the vehicle.

2 The engine will stop and the Stop & Start indicator will come on.

When the shift lever is in N or P, the engine will remain stopped without depressing the brake pedal.

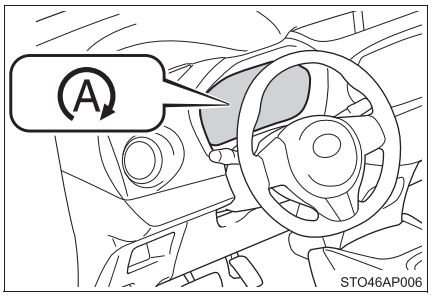


▶ Vehicles with a manual transmission

1 With the clutch pedal fully depressed, stop the vehicle. Then shift the shift lever to N.

2 Release the clutch pedal.

The engine will stop and the Stop & Start indicator will come on.

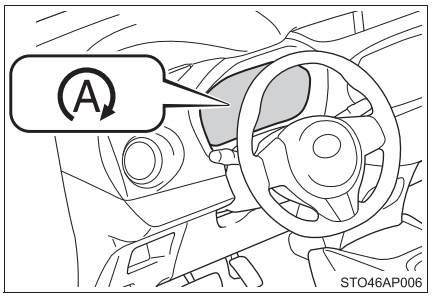

*: If equipped

Restarting the engine

▶ Vehicles with a Multidrive

Release the brake pedal. When the shift lever is in N or P, depress brake pedal and shift the shift lever to D or M.

The engine will restart. The Stop & Start indicator will go off.

▶ Vehicles with a manual transmission

Check that the shift lever is in N and depress the clutch pedal.

The engine will restart. The Stop & Start indicator will go off. (In this situation, releasing the clutch pedal will not stop the engine again.)


Disabling the Stop & start system

Press the Stop & Start cancel switch to disable the Stop & Start system.

The stop & start cancel indicator will come on.

The engine will not stop at each stop when the brake pedal (Multidrive) or clutch pedal (manual transmission) is depressed to stop the engine (→P. 339).

Pressing the switch again to re-enable the Stop & Start system.

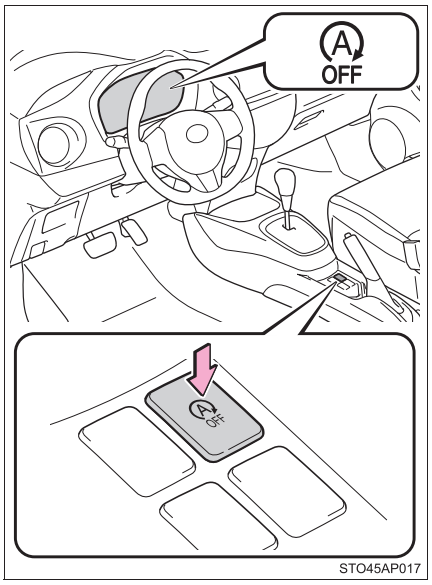

■ **If the Stop & Start cancel switch is pressed while the vehicle is stopped**

- When the engine is stopped by the Stop & Start system, pressing the Stop & Start cancel switch will restart the engine.
  From the next time the vehicle is stopped (after Stop & Start system has been turned off), the engine will not be stopped.
- With the Stop & Start system disabled, pressing the Stop & Start cancel switch will re-enable the system but not stop the engine.
  From the next time the vehicle is stopped (after Stop & Start system has been turned on), the engine will be stopped.

Hill-start assist control (vehicles with a Multidrive)

After the engine is stopped by the Stop & Start system when the vehicle is on an incline, brake force is temporarily maintained to prevent rolling backwards until the engine is restarted and drive force is generated.

When drive force is generated, the maintained brake force is automatically canceled.

- This function operates on flat surfaces as well as steep inclines.
- Sound may be generated from the brakes, but this is not a malfunction.
- Brake pedal response may change and vibration may occur, but these are not malfunctions.

■ **Operating conditions**

● The Stop & Start system is operational when all of the following conditions are met:

- The engine is adequately warmed up.
- The battery is sufficiently charged.
- The driver's door is closed.
- The driver's seat belt is fastened.
- The hood is closed.
- The outside temperature is -5°C (23°F) or higher.
- The accelerator pedal is not being depressed.
- Vehicles with a Multidrive: The brake pedal is firmly depressed.
- Vehicles with a Multidrive: The shift lever is not in R.
- Vehicles with a manual transmission: The clutch pedal is not being depressed.
- Vehicles with a manual transmission: The shift lever is in N.

● In the following circumstances the engine may not be stopped by the Stop & Start system. This is not a malfunction of the Stop & Start system.

- Engine coolant temperature or transmission fluid temperature is too low or too high.
- The outside temperature is extremely low.
- The air conditioning system is being used when the outside temperature is high or low.
- The air conditioning system is being used when the vehicle interior temperature is extremely high such as after the vehicle was parked under the hot sun.
- Vehicles with an automatic air conditioning system: The windshield defogger is being used.
- The battery is undergoing a periodic recharge.
- The battery is not sufficiently charged, such as if the vehicle has been parked for a long time and the battery charge has decreased, the electric load is large, the battery fluid temperature is excessively low or the battery has deteriorated.
- The battery fluid temperature is extremely low or high.
- Due to traffic or other circumstances the vehicle is stopped repeatedly, resulting in the amount of time the engine is stopped by the Stop & Start system to become excessively high.
- The driver's seat belt is unfastened.
- The driver's door is opened.
- The hood is opened.
- The vehicle is stopped on a steep hill.
- The brake booster vacuum is low.
- A large amount of electricity is being used.
- At high altitude.

When the above conditions improve, the Stop & Start system will stop and restart the engine from the next time the vehicle is stopped.

● In the following situations, the engine may start even without the brake pedal being released (Multidrive) or clutch pedal being depressed (manual transmission).

- The brake pedal is pumped or strongly depressed.
- The air conditioning system is being used or turned on.
- Vehicles with an automatic air conditioning system: The windshield defogger is turned on.
- The battery is not sufficiently charged.
- The vehicle starts to roll on an incline.
- Vehicles with a Multidrive: The hood is opened when the shift lever is in N or P.
- Vehicles with a Multidrive: The shift lever is shifted into a position other than N or P.
- The accelerator pedal is depressed.
- A large amount of electricity is being used.
- The driver's door is opened.
- The driver's seat belt is unfastened.

● In the following situations, it may take longer than normal for the Stop & Start system to activate.

- The battery is discharged.
- After the battery terminals have been disconnected and reconnected after a battery replacement, etc.
- The engine coolant temperature is low.

■ **Automatic reactivation of the Stop & Start system**

▶ Vehicles without a smart entry & start system

Even if the Stop & Start system is disabled by the Stop & Start cancel switch, it will be automatically re-enabled once the engine switch is turned to the "LOCK" position then to the "START" position.

▶ Vehicles with a smart entry & start system

Even if the Stop & Start system is disabled by the Stop & Start cancel switch, it will be automatically re-enabled once the engine switch is turned off then the engine is started.

■ **The Stop & Start system protection feature**

▶ Vehicles without a smart entry & start system

When an excessively loud sound is being projected by the audio system, the audio system may be automatically cut off in order to maintain power for the Stop & Start system function.
If this occurs, turning the engine switch to the “LOCK” position then to the “ACC” or “ON” position re-enables the audio system.

▶ Vehicles with a smart entry & start system

When an excessively loud sound is being projected by the audio system, the audio system may be automatically cut off in order to maintain power for the Stop & Start system function.
If this occurs, turning the engine switch off then to ACCESSORY mode or IGNITION ON mode re-enables the audio system.

■ **Hood**

Even if the hood is closed after the engine is started with the hood open, the Stop & Start system will not operate. Close the hood, turn the engine switch off, wait 30 seconds or more, and then start the engine. (→P. 245, 248)

Vehicles with a Multidrive: If the hood is opened while the engine is stopped by the Stop & Start system and the shift lever is in N or P, the engine will restart.

■ **When to use the Stop & Start system**

When the system does not operate, is canceled, or is malfunctioning, warning messages (vehicles with color display only) and a warning buzzer are used to inform the driver. (→P. 345)

■ **Stop & Start system warning buzzer**

If the engine is stopped by the Stop & Start system and either of the following actions is performed, a buzzer will sound and the Stop & Start indicator will flash (Multidrive), or a buzzer will sound (manual transmission). This indicates that the engine is only stopped by the Stop & Start system, not that the engine has been turned off completely.

▶ Vehicles with a Multidrive

The driver’s door is opened when the shift lever is in D or M.

▶ Vehicles with a manual transmission

The shift lever is shifted into a position other than N with the clutch pedal released.

■ **Multi-information display messages (vehicles with color display)**

If the following situations,  and a message may be displayed on the multi-information display.

●When the engine cannot be stopped by the Stop & Start system

Message	Details
 "For climate control."	• **The air conditioning system is being used when the ambient temperature is high or low.** If the difference between the set temperature and cabin temperature is small, the system will be enabled. • **The windshield defogger is turned on.**
 "Battery charging."	• **The battery charge amount may be low.** Engine stop is temporarily prohibited to prioritize charging of the battery, but if the engine is operated for a short while, engine stop is allowed. • **A refresh charge may be occurring such as when the battery is undergoing a periodic recharge, for a while after the battery terminals have been disconnected and reconnected, for a while after the battery has been replaced, etc.** After a refresh charge of approximately 5 to 60 minutes completes, the system can be operated. • **The engine may have been started with the hood opened.** Close the hood, turn the engine switch off, wait 30 seconds or more, and then start the engine. ●If the message is displayed continuously (60 minutes or more), the battery may have deteriorated. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
 "For brake system."	• **The vehicle is being driven in a high altitude area.** • **The brake booster vacuum is low.** When the brake booster vacuum reaches a predetermined level, the system will be enabled.

Message	Details
“Bonnet open.”	**The engine has been started with the hood opened.** To enable the system, close the hood, turn the engine switch off, wait for a short while, and then start the engine.
“Driver seat belt unbuckled.”	**The driver seat belt is not fastened.**

● When the engine automatically restarts while stopped by the Stop & Start system

Message	Details
“For climate control.”	• **The air conditioning system has been turned on or is being used.** • **The windshield defogger is turned on.**
“For brake system.”	**The brake pedal has been depressed further or pumped.** The system will be enabled after the engine runs and the brake booster vacuum reaches a predetermined level.
“Battery charging.”	**The battery charge amount may be low.** The engine is restarted to prioritize battery charging. Operating the engine for a short while allows the system to recover.
“Bonnet open.”	**The hood has been opened.**
“Driver seat belt unbuckled.”	**The driver seat belt has been unfastened.**

● Vehicles with a manual transmission: When the engine cannot be restarted by the Stop & Start system

Message	Details
 "Stop & Start system active. Shift to N and depress clutch to restart."	**The shift lever has been shifted from N to another position with the clutch pedal released.** To restart the engine, shift the shift lever to N and then depress the clutch pedal.

■ **If the Stop & Start cancel indicator continues to flash**

The Stop & Start system may be malfunctioning. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **If the windshield is fogged up while the engine is stopped by the Stop & Start system**

▶ Vehicles with an automatic air conditioning system

Turn the windshield defogger on. (The engine will start due to the automatic engine start function.) (→P. 446)

▶ Vehicles with a manual air conditioning system

Vehicles with a Multidrive:
Restart the engine by releasing the brake pedal (when the shift lever is in D or M) or depress the brake pedal and shift the shift lever to D or M (when the shift lever is in N or P) (→P. 340), or by pressing the Stop & Start cancel switch, and then set the air outlet selector dial to  . (→P. 436)

Vehicles with a manual transmission:
Restart the engine by depressing the clutch pedal (→P. 340), or by pressing the Stop & Start cancel switch, and then set the air outlet selector dial to  . (→P. 436)

If the windshield fogs up frequently, press the Stop & Start cancel switch to deactivate the system.

■ **Air conditioning system operation while the engine is stopped by the Stop & Start system**

- If the air conditioning system is being used in automatic mode, the fan speed may be reduced or the fan may be stopped while the engine is stopped by the Stop & Start system in order to reduce changes in the cabin temperature.
- To ensure air conditioning system performance when the vehicle is stopped, disable the Stop & Start system by pressing the Stop & Start cancel switch.

■ **The Stop & Start system operation time and Stop & Start system total operation time display**

→P. 123

■ **When replacing the battery**

→P. 636

⚠ WARNING

■ **When the Stop & Start system is operating**

- Keep the shift lever in N (manual transmission) and apply the brake pedal or parking brake for safety while the engine is stopped due to the Stop & Start system (while the Stop & Start indicator is on).
  Unexpected accidents may occur due to the automatic engine start function.
- Do not leave the vehicle while the engine is stopped due to the Stop & Start system (while the Stop & Start indicator is on).
  Unexpected accidents may occur due to the automatic engine start function.
- Ensure that the engine is not stopped by the Stop & Start system while the vehicle is in a poorly ventilated area. The engine may restart due to the automatic engine start function, causing exhaust gases to collect and enter the vehicle and resulting in death or a serious health hazard.

NOTICE

■ To ensure the system operates correctly

If any one of the following situations occurs, the Stop & Start system may not operate correctly, thus, please have your vehicle checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- While the driver's seat belt is fastened, the driver's and front passenger's seat belt reminder light flashes.
- Even when the driver's seat belt is not fastened, the driver's and front passenger's seat belt reminder light remains off.
- Vehicles with monochrome display: Even though the driver' door is closed, the open door warning light is illuminated or the interior light is illuminated when the interior light switch is in the door position.
- Vehicles with color display: Even though the driver' door is closed, the open door warning is displayed on the multi-information display or the interior light is illuminated when the interior light switch is in the door position.
- Vehicles with monochrome display: Even though the driver' door is open, the open door warning light does not illuminate or the interior light does not illuminate when the interior light switch is in the door position.
- Vehicles with color display: Even though the driver' door is open, the open door warning is not displayed on the multi-information display or the interior light does not illuminate when the interior light switch is in the door position.

Driving assist systems

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

◆ ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

◆ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

◆ VSC (Vehicle Stability Control) (if equipped)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces

◆ TRC (Traction Control) (if equipped)

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

◆ Hill-start assist control (if equipped)

Helps to reduce the backward movement of the vehicle when starting on an uphill

◆ EPS (Electric Power Steering)


Employs an electric motor to reduce the amount of effort needed to turn the steering wheel

◆ Emergency brake signal

When the brakes are applied suddenly, the emergency flashers automatically flash to alert the vehicle behind.

When the TRC/VSC systems are operating

The slip indicator light will flash while the TRC/VSC systems are operating.

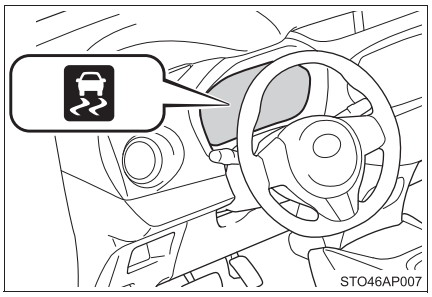


Disabling the TRC system

If the vehicle gets stuck in mud, dirt or snow, the TRC system may reduce power from the engine to the wheels. Pressing  to turn the system off may make it easier for you to rock the vehicle in order to free it.

To turn the TRC system off, quickly press and release  .

Vehicles with monochrome display: The “TRC OFF” indicator light will come on.
Vehicles with color display: The “TRC off” will be shown on the multi-information display.

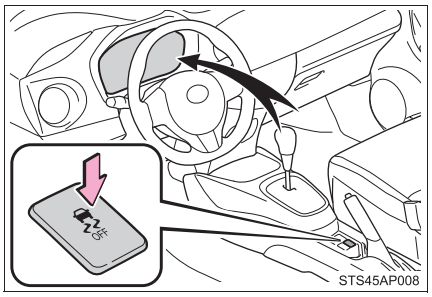

Press  again to turn the system back on.

■ **Turning off both TRC and VSC systems**

▶ Vehicles with monochrome display

To turn the TRC and VSC systems off, press and hold  for more than 3 seconds while the vehicle is stopped.
The “TRC OFF” indicator light and the VSC OFF indicator light will come on.

Press  again to turn the systems back on.

▶ Vehicles with color display

To turn TRC and VSC systems off, press and hold  for more than 3 seconds while the vehicle is stopped.
The VSC OFF indicator light will come on and the “TRC off” will be shown on the multi-information display.*

Press  again to turn the systems back on.

*: On vehicles with pre-crash safety system, pre-crash brake assist and pre-crash braking will also be disabled. The PCS warning light will come on. (→P. 311)

■ **When the “TRC OFF” indicator light comes on even if  has not been pressed (vehicles with monochrome display)**

TRC is temporary deactivated. If the indicator light continues to remain on, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **When the message is displayed on the multi-information display showing that TRC has been disabled even if  has not been pressed (vehicles with color display)**

TRC is temporary deactivated. If the information continues to show, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Operating conditions of hill-start assist control**

When the following four conditions are met, the hill-start assist control will operate:

- Vehicles with Multidrive: The shift lever is in a position other than P or N (when starting off forward/backward on an upward incline).
- Vehicles with manual transmission: The shift lever is in a position other than R when starting off forward on an upward incline, or the shift lever is in R when starting off backward on an upward incline.
- The vehicle is stopped.
- The accelerator pedal is not depressed.
- The parking brake is not engaged.

■ **Automatic system cancelation of hill-start assist control**

The hill-start assist control will turn off in any of the following situations:

- Vehicles with Multidrive: The shift lever is shifted to P or N.
- Vehicles with manual transmission: The shift lever is shifted to R when starting off forward on an upward incline, or the shift lever is shifted to other than R when starting off backward on an upward incline.
- The accelerator pedal is depressed.
- Approximately 2 seconds elapse.
- 2 seconds at maximum elapsed after the brake pedal is released.

■ **Sounds and vibrations caused by the ABS, brake assist, VSC, TRC, and hill-start assist control systems**

- A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
  - Vibrations may be felt through the vehicle body and steering.
  - A motor sound may be heard also after the vehicle comes to a stop.
  - The brake pedal may pulsate slightly after the ABS is activated.
  - The brake pedal may move down slightly after the ABS is activated.

■ **EPS operation sound**

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ **Automatic reactivation of TRC and VSC systems**

After turning the TRC and VSC systems off, the systems will be automatically re-enabled in the following situations:

- When the engine switch is turned to the “LOCK” position
- If only the TRC system is turned off, the TRC will turn on when vehicle speed increases
  If both the TRC and VSC systems are turned off, automatic re-enabling will not occur when vehicle speed increases.

■ **Reduced effectiveness of the EPS system**

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result.
Should this occur, refrain from excessive steering input or stop the vehicle and turn the engine off. The EPS system should return to normal within 10 minutes.

■ **Operating conditions of emergency brake signal**

When the following three conditions are met, the emergency brake signal will operate:

- The emergency flashers are off
- Actual vehicle speed is over 55 km/h (35 mph)
- The brake pedal is depressed in a manner that cause the system to judge from the vehicle deceleration that this is a sudden braking operation

■ **Automatic system cancelation of emergency brake signal**

The emergency brake signal will turn off in any of the following situations:

- The emergency flashers are turned on
- The brake pedal is released
- The system judges from the vehicle deceleration that is not a sudden braking operation

WARNING

■ **The ABS does not operate effectively when**

- The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on wet or slick roads.

■ **Stopping distance when the ABS is operating may exceed that of normal conditions**

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or uneven surfaces

■ **TRC/VSC may not operate effectively when**

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRC/VSC system is operating.
Drive the vehicle carefully in conditions where stability and power may be lost.

■ **Hill-start assist control does not operate effectively when**

- Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on steep inclines and roads covered with ice.
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline, as doing so may lead to an accident.

WARNING

When the VSC is activated

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

When the TRC/VSC systems are turned off

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to help ensure vehicle stability and driving force, do not turn the TRC/VSC systems off unless necessary.

Replacing tires

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS, TRC and VSC systems will not function correctly if different tires are installed on the vehicle.

Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further information when replacing tires or wheels.

Handling of tires and the suspension

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

Preparation for winter

- Use fluids that are appropriate to the prevailing outside temperatures.
  - Engine oil
  - Engine coolant
  - Washer fluid
- Have a service technician inspect the condition of the battery.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the front tires.

  Ensure that all tires are the specified size and brand, and that chains match the size of the tires.

Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

When driving the vehicle

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

When parking the vehicle

- Park the vehicle and move the shift lever to P (Multidrive) 1 or R (manual transmission) without setting the parking brake. The parking brake may freeze up, preventing it from being released. If the vehicle is parked without setting the parking brake, make sure to block the wheels.
  Failure to do so may be dangerous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.
- On vehicles with a Multidrive, if the vehicle is parked without setting the parking brake, confirm that the shift lever cannot be moved out of P*.


*: The shift lever will be locked if it is attempted to be shifted from P to any other position without depressing the brake pedal. If the shift lever can be shifted from P, there may be a problem with the shift lock system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorizes repairer, or any reliable repairer.

Selecting tire chains

Use the correct tire chain size when mounting the tire chains.
Chain size is regulated for each tire size.

① Side chain
Except 175/65R14 tires:
3 mm (0.12 in.) in diameter
175/65R14 tires:
4 mm (0.16 in.) in diameter

② Cross chain
Except 175/65R14 tires:
4 mm (0.16 in.) in diameter
175/65R14 tires:
5 mm (0.20 in.) in diameter

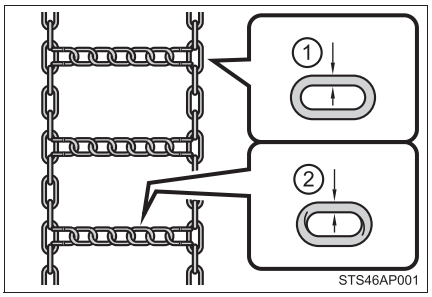

Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the front tires only. Do not install tire chains on the rear tires.
- Install tire chains on front tires as tightly as possible. Retighten chains after driving 0.5 — 1.0 km (1/4 — 1/2 mile).
- Install tire chains following the instructions provided with the tire chains.
- If wheel ornaments are used, they will be scratched by the chain band, so remove the ornaments before putting on the chains. (→P. 617)

WARNING

■ **Driving with snow tires**

Observe the following precautions to reduce the risk of accidents.
Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the specified size.
- Maintain the recommended level of air pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being used.
- Use snow tires on all, not just some wheels.
- Do not use tires of noticeably different wear level.

■ **Driving with tire chains**

Observe the following precautions to reduce the risk of accidents.
Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LDA (Lane Departure Alert) (if equipped).

NOTICE

■ **Repairing or replacing snow tires (vehicles with a tire pressure warning system)**

Request repairs or replacement of snow tires from any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or legitimate tire retailers.

This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

■ **Fitting tire chains (vehicles with a tire pressure warning system)**

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

Audio system 5

5-1. Basic Operations
Audio system types 362
Steering wheel audio switches.....364
AUX port/USB port 365

5-2. Using the audio system
Optimal use of the audio system 366

5-3. Using the radio
Radio operation 368

5-4. Playing audio CDs and MP3/WMA discs
CD player operation.....372

5-5. Using an external device
Listening to an iPod 381
Listening to a USB memory device 389
Using the AUX port.....396

5-6. Using Bluetooth® devices
Bluetooth® audio/phone.....397
Using the steering wheel switches 403
Registering a Bluetooth® device 404

5-7. "SETUP" menu
Using the "SETUP" menu ("Bluetooth*" menu).....405
Using the "SETUP" menu ("Phone" menu) 410

5-8. Bluetooth® Audio
Operating a Bluetooth® enabled portable player.....414

5-9. Bluetooth® Phone
Making a phone call.....417
Receiving a phone call.....419
Speaking on the phone.....420


5-10. Bluetooth®
Bluetooth® 422

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Audio system types*

▶ Vehicles with a Navigation/Multimedia system


Owners of models equipped with a Navigation/Multimedia system should refer to the “Navigation and multimedia system Owner’s manual”.

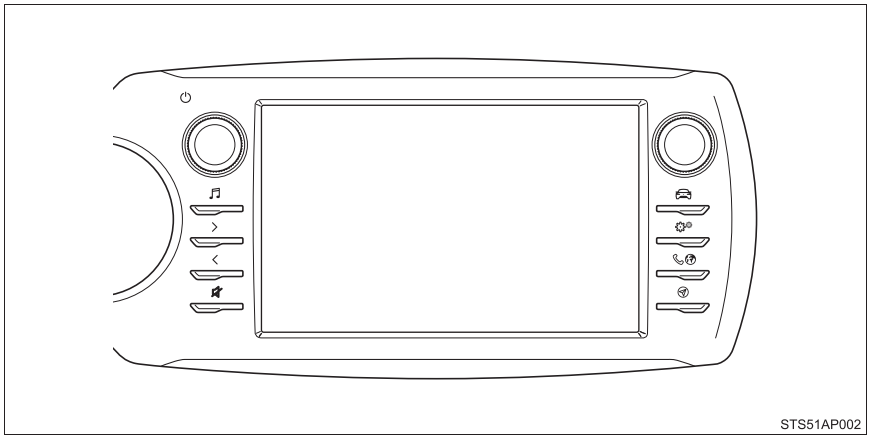

*: If equipped

▶ Vehicles without a Navigation/Multimedia system

CD player and AM/FM radio

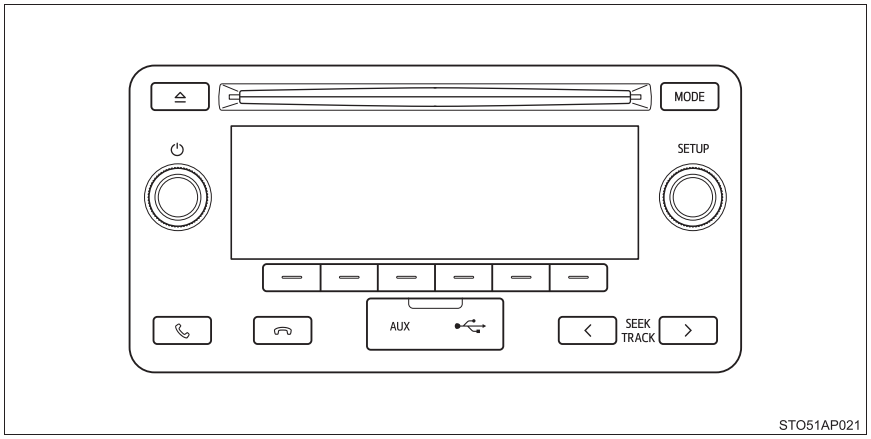

Using cellular phones

Interference may be heard through the audio system's speakers if a cellular phone is being used inside or close to the vehicle while the audio system is operating.

About Bluetooth®

The Bluetooth wordmark and logo are owned by Bluetooth SIG. and permission has been granted to use the trademark of the licensee Panasonic Corporation. Other trademarks and trade names are owned by various different owners.

NOTICE

To prevent battery discharge

Do not leave the audio system on longer than necessary when the engine is stopped.


To avoid damaging the audio system

Take care not to spill drinks or other fluids over the audio system.

Steering wheel audio switches

Some audio features can be controlled using the switches on the steering wheel.
Operation may differ depending on the type of audio system or navigation system. For details, refer to the manual provided with the audio system or navigation system.

Operating the audio system using the steering wheel switches

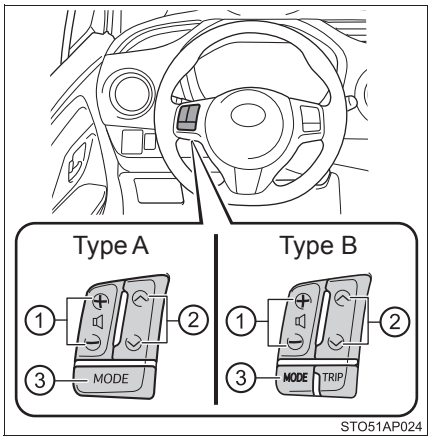

① Volume switch
- Press: Increases/decreases volume
- Press and hold: Continuously increases/decreases volume

② Radio mode:
- Press: Selects a radio station
- Press and hold: Seek up/down

CD, MP3/WMA disc, Bluetooth®, iPod or USB mode:
- Press: Selects a track/file/song
- Press and hold: Select a folder or album (MP3/WMA disc, Bluetooth®, iPod or USB)

③ "MODE" switch
- Turns the power on, selects audio source
- Press and hold this switch to mute or pause the current operation. To cancel the mute or pause, press and hold the switch again.

WARNING


■ To reduce the risk of an accident
Exercise care when operating the audio switches on the steering wheel.

AUX port/USB port*


Connect an iPod, USB memory device or portable audio player to the AUX port/USB port as indicated below. Press the “MODE” button to select “iPod”, “USB” or “AUX”.

Connecting using the AUX port/USB port

▶ Type A

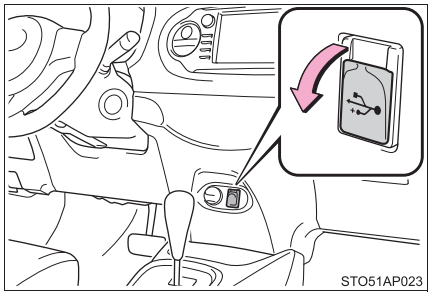

▶ Type B

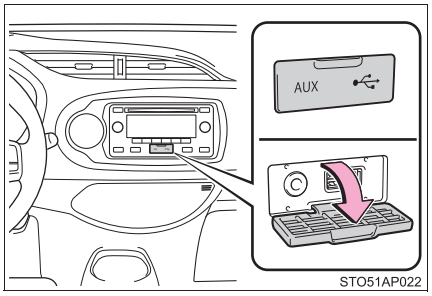

● iPod

Open the cover and connect an iPod using an iPod cable.

Turn on the power of the iPod if it is not turned on.

● USB memory

Open the cover and connect the USB memory device.

Turn on the power of the USB memory device if it is not turned on.

● Portable audio player

Open the cover and connect the portable audio player.

Turn on the power of the portable audio player if it is not turned on.

■ AUX port

The AUX port only supports audio input.

⚠ WARNING


■ While driving

Do not connect a device or operate the device controls.

*: If equipped

Optimal use of the audio system*

Sound quality (treble/bass) and volume balance can be adjusted.

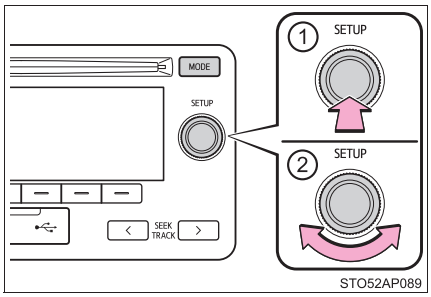

① Displays the “SETUP” menu/ Selecting the mode

② Changes the following settings

- Sound quality and volume balance
  →P. 367

  The sound quality and balance setting can be changed to produce the best sound.
- Automatic Sound Levelizer on/off
  →P. 367

*: If equipped

Using the audio control function

■ Changing sound quality modes

1 Press the tune/scroll knob.

2 Turn the knob to select “Sound settings”.

3 Press the knob.

4 Turn the knob as corresponds to the desired mode.

“Bass”, “Treble”, “Fader”, “Balance”, or “ASL” can be selected.

5 Press the knob.

■ Adjusting sound quality

Turning the tune/scroll knob adjusts the level.

Sound quality mode	Mode displayed	Level	Turn to the left	Turn to the right
Bass*	“Bass”	-5 to 5	Low	High
Treble*	“Treble”	-5 to 5		
Front/rear volume balance	“Fader”	R7 to F7	Shifts to rear	Shifts to front
Left/right volume balance	“Balance”	L7 to R7	Shifts to left	Shifts to right

*: The sound quality level is adjusted individually in each audio mode.

■ Adjusting the Automatic Sound Levelizer (ASL)

When ASL is selected, turn the tune/scroll knob to change the amount of ASL.


“Low”, “Mid”, “High”, or “Off” can be selected.

ASL automatically adjusts the volume and tone quality according to vehicle speed.

Press the knob or — (“Back”) to return to the sound settings menu.

Radio operation*

Press the “MODE” button until “AM” or “FM” is displayed.

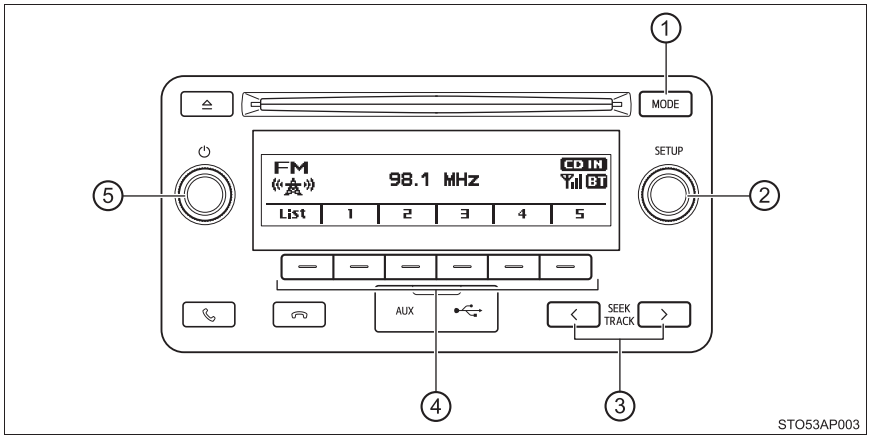

① AM/FM mode button

② Tune/scroll knob
Adjusting the frequency

③ Seeking the frequency

④ Station selectors

⑤ Power/volume knob
Press: Turning the audio system on or off
Turn: Adjusting the volume

Setting station presets

1 Search for desired stations by turning the tune/scroll knob or pressing the “<” or “>” button of “SEEK TRACK”.

2 Press and hold a desired station selector button until you hear a beep.

*: If equipped

Using the station list

■ Updating the station list

1 Press [—] (“List”).

The station list will be displayed.

2 Press [—] (“Update”) to update the list.

“Updating” is displayed while the searching is in process, and then available stations will be listed on the display.

To cancel the updating process, press [—] (“Back”).

■ Selecting a station from the station list

1 Press [—] (“List”).

The station list will be displayed.

2 Turn the tune/scroll knob to select a station.

3 Press the knob to tune in the station.

To return to the previous display, press [—] (“Back”).

RDS (Radio Data System)

This feature allows your radio to receive station.

■ Listening to stations of the same network

1. Press the tune/scroll knob.
2. Turn the knob to “Radio” and press the knob.
3. Turn the knob as corresponds to the desired mode: “FM AF” or “Region code”.
4. Press the knob to select “On” or “Off”.

   FM AF ON mode:
   The station among those of the same network with strong reception is selected.

   Region code ON mode:
   The station among those of the same network with strong reception and broadcasting the same program is selected.

■ Traffic information

1. Press the tune/scroll knob.
2. Turn the knob to “Radio” and press the knob.
3. Turn the knob to “FM TA” mode.
4. Press the knob to select “On” or “Off”.

   FM TA On mode:
   The system automatically switches to traffic information when a broadcast with a traffic information signal is received.

   The station returns to the previous one when the traffic information ends.

■ **EON (Enhanced Other Network) system (for traffic announcement function)**

If the RDS station (with EON data) you are listening to is not broadcasting a traffic information program and the audio system is in the TA (traffic announcement) mode, the radio will be switched automatically to a station broadcasting a traffic information program in the EON AF list when traffic information begins.

■ **When the battery is disconnected**

Station presets are erased.

■ **Reception sensitivity**

- Maintaining perfect radio reception at all times is difficult due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains, transmitters, etc.
- The radio antenna is mounted on the rear roof. The antenna can be removed from the base by turning it.


⚠ NOTICE

■ **To prevent damage, remove the antenna in the following cases**

- The antenna will touch the ceiling of a garage.
- A cover will be put on the roof.

CD player operation*

Insert a disc, press the “MODE” button to begin listening to a CD.

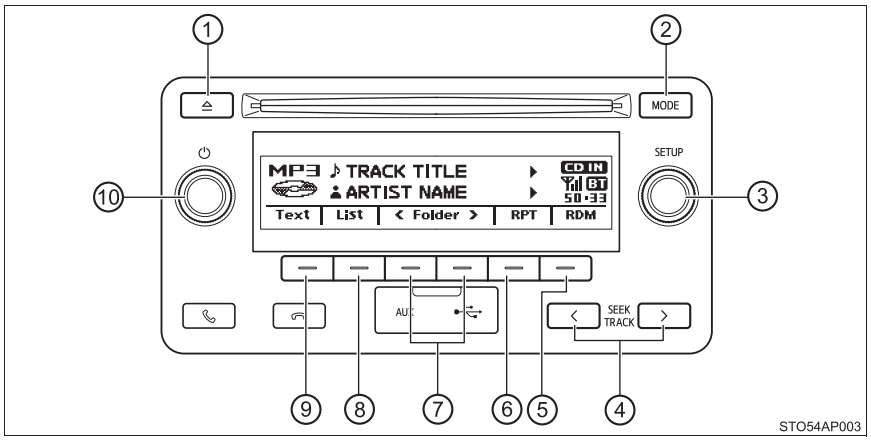

① Disc eject

② Changing the audio source/ playback

③ Tune/scroll knob
Selecting a track/file

④ Selecting a track/file, fast-forwarding or rewinding

⑤ Random play or back button

⑥ Repeat play

⑦ Selecting a folder (MP3/WMA discs only)

⑧ Displaying track/folder list

⑨ Displaying text message

⑩ Power/volume knob
Press: Turning the audio system on or off
Turn: Adjusting the volume

*: If equipped

Loading CDs or MP3 and WMA discs

Insert a disc.

Ejecting CDs or MP3 and WMA discs

Press the disc eject button and remove the disc.

Using the CD player

Selecting a track

Turn the tune/scroll knob or press the “<” or “>” button of “SEEK TRACK” to move up or down until the desired track number is displayed.

Selecting a track from a track list

1 Press [—] (“List”).

The track list will be displayed.

2 Turn and press the tune/scroll knob to select a track.

To return to the previous display, press [—] (“Back”).

Fast-forwarding and reversing tracks

Press and hold the “<” or “>” button of “SEEK TRACK”.

Random play

Press [—] (“RDM”).

The current track is played repeatedly until [—] (“RDM”) is pressed again.

Repeat play

Press [—] (“RPT”).

The current track is played repeatedly until [—] (“RPT”) is pressed again.

Switching the display

Press [—] (“Text”) to display or hide the album title.

If there are continuing texts, ▶ is displayed.
Press and hold the button to display the remaining texts.

Playing back MP3 and WMA discs

■ Selecting a folders one at a time

Press [—] (“<Folder”) or [—] (“Folder>”) to select the desired folder.

■ Selecting a folder and file from folder list

1 Press [—] (“List”).

The folder list will be displayed.

2 Turn and press the tune/scroll knob to select a folder and a file.

To return to the previous display, press [—] (“Back”).

To exit, press [—] (“Back”).

■ Returning to the first folder

Press and hold [—] (“<Folder”) until you hear a beep.

■ Selecting files

Turn the tune/scroll knob or press the “<” or “>” button of “SEEK TRACK” to select the desired file.

■ Fast-forwarding and rewinding files

To fast-forward or rewind, press and hold the “<” or “>” button of “SEEK TRACK”.

■ Random playback

Pressing [—] (“RDM”) changes modes in the following order:


Folder random→Disc random→Off



■ Repeat play

Pressing [—] (“RPT”) changes modes in the following order:

File repeat→Folder repeat*→Off



*: Available except when RDM (random playback) is selected

■ Switching the display

Press [—] (“Text”) to display or hide the album title.

If there are continuing texts, ▶ is displayed.
Press and hold the button to display the remaining texts.

■ Display

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

■ Error messages

If an error message is displayed, refer to the following table and take the appropriate measures. If the problem is not rectified, take the vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Message	Cause	Correction procedures
“CD check”	• The disc is dirty or damaged. • The disc is inserted upside down.	• Clean the disc. • Insert the disc correctly.
“Error”	There is a malfunction within the system.	Eject the disc.
“Wait”	Operation has stopped due to a high temperature inside the player.	Wait for a while and then press the “MODE” button. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer if the CD still cannot be played.
“No support”	MP3/WMA files are not included on the CD.	Eject the disc.

■ **Discs that can be used**

Discs with the marks shown below can be used.
Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



CDs with copy-protect features may not play correctly.

■ **CD player protection feature**

To protect the internal components, playback is automatically stopped when a problem is detected while the CD player is being used.

■ **If a CD is left inside the CD player or in the ejected position for extended periods**

The CD may be damaged and may not play properly.

■ **Lens cleaners**

Do not use lens cleaners. Doing so may damage the CD player.

■ **MP3 and WMA files**

MP3 (MPEG Audio LAYER3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards and to the media/formats recorded by them that can be used.

● MP3 file compatibility

- Compatible standards
  MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
- Compatible sampling frequencies
  MPEG1 LAYER3: 32, 44.1, 48 (kHz)
  MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR)
  MPEG1 LAYER3: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)

  MPEG2 LSF LAYER3: 8, 16, 24, 32, 40, 48, 56, 64, 80, 96, 112, 128, 144, 160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

● WMA file compatibility

- Compatible standards
  WMA Ver. 7, 8, 9
- Compatible sampling frequencies
  32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)
  Ver. 7, 8: CBR 48—192 (kbps)
  Ver. 9: CBR 32, 48, 64, 80, 96, 128, 160, 192, 256, 320 (kbps)

● Compatible media

Media that can be used for MP3 and WMA playback are CD-Rs and CD-RWs.

Playback in some instances may not be possible, depending on the status of the CD-R or CD-RW. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

● Compatible disc formats

The following disc formats can be used.

- Disc formats: CD-ROM Mode 1 and Mode 2
  CD-ROM XA Mode 2, Form 1 and Form 2
- File formats: ISO9660 Level 1, Level 2, (Romeo, Joliet)
  MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows.

- Maximum directory hierarchy: 8 levels
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

● File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

● Multi-sessions

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files. However, only the first session can be played.

● ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

● MP3 and WMA playback

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

If the discs contain a mixture of music data and MP3 or WMA format data, only music data can be played.

● Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.

● Playback

- To play MP3 file with steady sound quality, we recommend a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S. and other countries.

WARNING


Certification for the CD player

CAUTION:
THIS PRODUCT IS A CLASS 1 LASER PRODUCT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR BY YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

NOTICE

Discs and adapters that cannot be used

Do not use the following types of discs.
Also, do not use 8 cm (3 in.) disc adapters, Dual Discs or printable discs.
Doing so may damage the player and/or the disc insert/eject function.

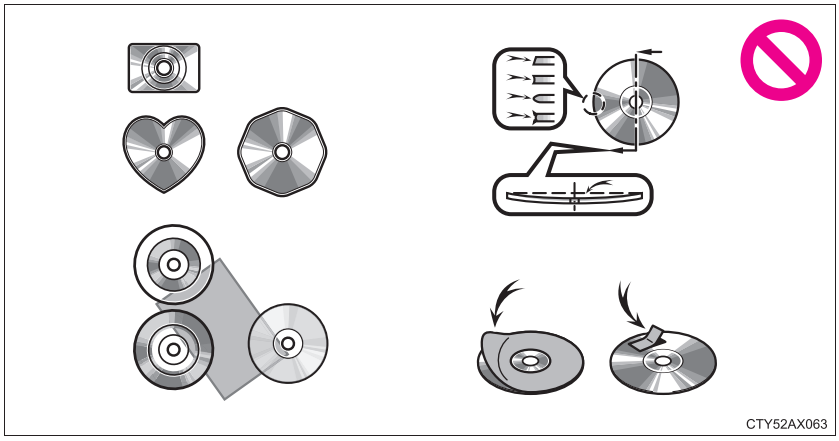

- Discs that have a diameter that is not 12 cm (4.7 in.).
- Low-quality or deformed discs.
- Discs with a transparent or translucent recording area.
- Discs that have tape, stickers or CD-R labels attached to them, or that have had the label peeled off.

Player precautions

Failure to follow the precautions below may result in serious damage to the discs or the player itself.

- Do not insert anything other than discs into the disc slot.
- Do not apply oil to the player.
- Store discs away from direct sunlight.
- Never try to disassemble any part of the player.


Listening to an iPod*

Connecting an iPod enables you to enjoy music from the vehicle speakers. Press the “MODE” button until “iPod” is displayed.

Connecting an iPod

→P. 365

Control panel

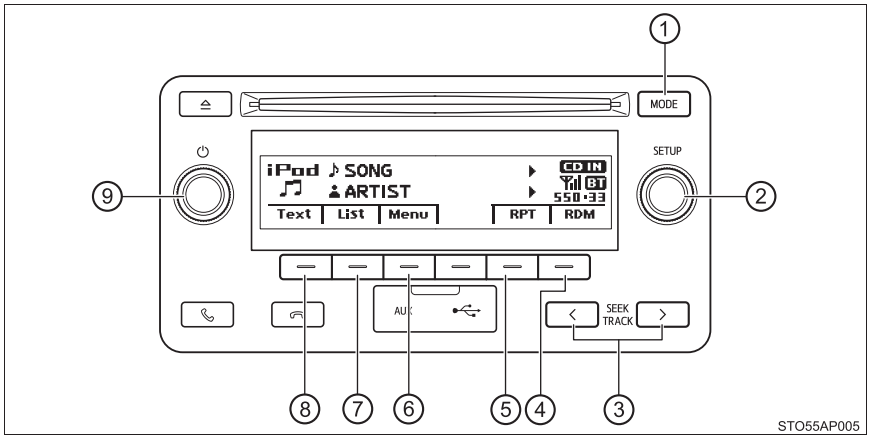

① Changing the audio source/ playback

② Tune/scroll knob
Selecting an iPod menu/song

③ Selecting a song, fast-forwarding or rewinding

④ Random play or back button

⑤ Repeat play

⑥ iPod menu mode, playback

⑦ Displaying song list

⑧ Displaying text message

⑨ Power/volume knob
Press: Turning the audio system on or off
Turn: Adjusting the volume

*: If equipped

Selecting a play mode

1 Press [—] (“Menu”) to select iPod menu mode.

2 Turning the tune/scroll knob clockwise changes the play mode in the following order:

“Playlists”→“Artists”→“Albums”→“Songs”→“Podcasts”→“Genres”→“Composers”→“Audiobooks”

3 Press the knob to select the desired play mode.

Play mode list

Play mode	First selection	Second selection	Third selection	Fourth selection
“Playlists”	Playlists select	Songs select	-	-
“Artists”	Artists select	Albums select	Songs select	-
“Albums”	Albums select	Songs select	-	-
“Songs”	Songs select	-	-	-
“Podcasts”	Podcasts select	Episodes select	-	-
“Genres”	Genre select	Artists select	Albums select	Songs select
“Composers”	Composers select	Albums select	Songs select	-
“Audiobooks”	Chapter select	-	-	-

■ **Selecting a list**

1 Turn the tune/scroll knob to display the first selection list.

2 Press the knob to select the desired item and display the second selection list.

3 Repeat the same procedure to select the desired item.

To return to the previous selection list, press [—] (“Back”).
Press [—] (“Play”) to play the desired selection.

Selecting songs

Turn the tune/scroll knob or press the “<” or “>” button of “SEEK TRACK” to select the desired song.

Selecting a song from the song list

1 Press the [—] (“List”).

The song list will be displayed.

2 Turn the tune/scroll knob to select a song.

3 Press the knob to play the song.

To return to the previous display, press [—] (“Back”).

Fast-forwarding and rewinding songs

Press and hold the “<” or “>” button of “SEEK TRACK”.

Repeat play


Press [—] (“RPT”).

To cancel, press the button again.

Shuffle playback

Pressing [—] (“RDM”) changes modes in the following order:

Track shuffle → Album shuffle → Off.



Switching the display

Press [—] (“Text”) display or hide the album title.

If there are continuing texts, ▶ is displayed.
Press and hold the button to display the remaining texts.

Adjusting sound quality and volume balance

1 Press the tune/scroll knob to enter iPod menu mode.

2 Turning the knob changes sound modes. (→P. 367)

About iPod



- “Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

■ **iPod functions**

- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume play from the same point in which it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available. If a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- While connected to the system, the iPod cannot be operated with its own controls. It is necessary to use the controls of the vehicle's audio system instead.
- When the battery level of an iPod is very low, the iPod may not operate. If so, charge the iPod before use.
- Supported models (→P. 387)

■ **iPod problems**

To resolve most problems encountered when using your iPod, disconnect your iPod from the vehicle iPod connection and reset it.
For instructions on how to reset your iPod, refer to your iPod Owner's Manual.

■ **Display**

→P. 375

■ **Error messages**

If an error message is displayed, refer to the following table and take the appropriate measures. If the problem is not rectified, take the vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Message	Cause/Correction procedures
“iPod error”	This indicates that the data in the iPod cannot be read.
“Error 3”	This indicates that the iPod may be malfunctioning.
“Error 4”	This indicates that an over current error has occurred.
“Error 5”	This indicates that an iPod communication error has occurred.
“Error 6”	This indicates that an authentication error has occurred.
“No songs”	This indicates that there is no music data in the iPod.
“No playlists”	This indicates that some available songs are not found in a selected playlist.
“Update your iPod”	This indicates that the version of the iPod is not compatible. Upgrade your iPod software to the latest version.

■ **Compatible models**

The following iPod®, iPod nano®, iPod classic®, iPod touch® and iPhone® devices can be used with this system.

● Made for

- iPod (5th generation)
- iPod touch (5th generation)
- iPod touch (4th generation)
- iPod touch (Late 2009)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic (Late 2009)
- iPod classic (2nd generation)
- iPod classic
- iPod nano (7th generation)
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPhone 5s
- iPhone 5c
- iPhone 5
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

This system only supports audio playback.

Depending on differences between models or software versions, etc., some models might be incompatible with this system.

Items related to standards and limitations are as follows:

● Maximum number of lists in device: 9999

● Maximum number of songs in device: 65535

● Maximum number of songs per list: 65535

WARNING

■ Caution while driving

Do not connect iPod or operate the controls.
Doing so may cause an accident, resulting in death or serious injury.

NOTICE

■ To prevent damage to iPod or its terminal

- Do not leave iPod in the vehicle. The temperature inside the vehicle may become high.
- Do not push down on or apply unnecessary pressure to the iPod while it is connected.
- Do not insert foreign objects into the port.


Listening to a USB memory device*

Connecting a USB memory enables you to enjoy music from the vehicle speakers. Press the “MODE” button until “USB” is displayed.

Connecting a USB memory

→P. 365

Control panel

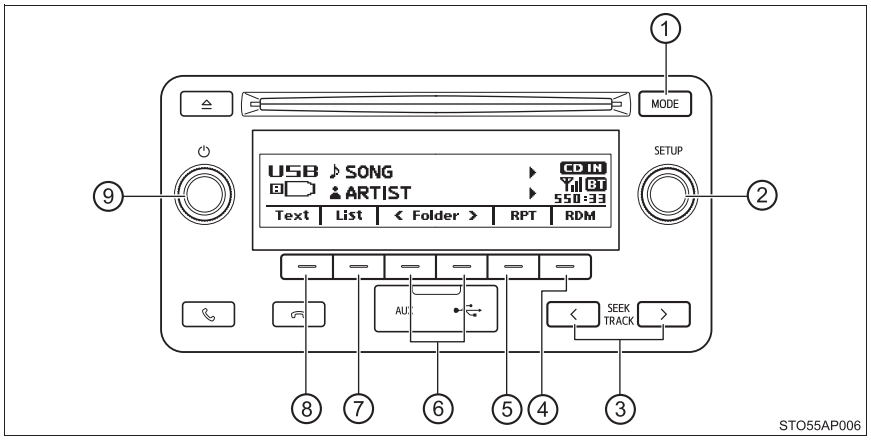

① Changing the audio source/ playback
② Tune/scroll knob
Selecting a file
③ Selecting a file, fast-forwarding or rewinding
④ Random play or back button
⑤ Repeat play
⑥ Selecting a folder
⑦ Displaying folder list
⑧ Displaying text message
⑨ Power/volume knob
Press: Turning the audio system on or off
Turn: Adjusting the volume

*: If equipped

Selecting a folder

■ Selecting a folders one at a time

Press [—] (“<Folder”) or [—] (“Folder>”) to select the desired folder.

■ Selecting a folder and file from folder list

1 Press the [—] (“List”).

The folder list will be displayed.

2 Turn and press the tune/scroll knob to select a folder and file.

To return to the previous display, press the [—] (“Back”).

■ Returning to the first folder

Press and hold [—] (“<Folder”) until you hear a beep.

Selecting files

Turn the tune/scroll knob or press the “<” or “>” button of “SEEK TREACK” to select the desired file.

Fast-forwarding and rewinding files

To fast-forward or rewind, press and hold the “<” or “>” button of “SEEK TREACK”.

Random play

Pressing [—] (“RDM”) changes modes in the following order:

Folder random→Disc random→Off

Repeat play

Pressing [—] (“RPT”) changes modes in the following order:

File repeat → Folder repeat* → Off.

*: Available except when RDM (random playback) is selected

Switching the display

Press [—] (“Text”) display or hide the album title.

If there are continuing texts, ▶ is displayed.
Press and hold the button to display the remaining texts.

■ USB memory functions

- Depending on the USB memory that is connected to the system, the device itself may not be operable and certain functions may not be available.
  If the device is inoperable or a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- If the USB memory still does not begin operation after being disconnected and reconnected, format the memory.

■ Display

→P. 375

■ Error messages

If an error message is displayed, refer to the following table and take the appropriate measures. If the problem is not rectified, take the vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Message	Cause/Correction procedures
“USB error”	This indicates that the data in the USB memory cannot be read.
“Error 3”	This indicates that the USB memory may be malfunctioning.
“Error 4”	This indicates that an over current error has occurred.
“Error 5”	This indicates that the USB memory communication error has occurred.
“No music”	This indicates that no MP3/WMA files are included on the USB memory device.

■ **USB memory**

● Compatible devices

USB memory that can be used for MP3 and WMA playback

● Compatible device formats

The following device formats can be used:

- USB communication formats: USB2.0 FS (12 Mbps)
- File formats: FAT12/16/32 (Windows)
- Correspondence class: Mass storage class

MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels
- Maximum number of folders in a device: 999 (including the root)
- Maximum number of files in a device: 9999
- Maximum number of files per folder: 255

● MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards and to the media/formats recorded by them that can be used.

● MP3 file compatibility

- Compatible standards
  MP3 (MPEG1 AUDIO LAYERII, III, MPEG2 AUDIO LAYERII, III, MPEG2.5)
- Compatible sampling frequencies
  MPEG1 AUDIO LAYERII, III: 32, 44.1, 48 (kHz)
  MPEG2 AUDIO LAYERII, III: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR)
  MPEG1 AUDIO LAYERII, III: 32-320 (kbps)
  MPEG2 AUDIO LAYERII, III: 8-160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

● WMA file compatibility

- Compatible standards
  WMA Ver. 7, 8, 9
- Compatible sampling frequencies
  32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)
  Ver. 7, 8: CBR 48, 64, 80, 96, 128, 160, 192 (kbps)
  Ver. 9: CBR 32, 48, 64, 80, 96, 128, 160, 192, 256, 320 (kbps)

● File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

● ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.
The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3, 2.4 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)
WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

● MP3 and WMA playback

- When a device containing MP3 or WMA files is connected, all files in the USB memory are checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend that you do not include any files other than MP3 or WMA files or create any unnecessary folders.
- When the USB memory is connected and the audio source is changed to USB memory mode, the USB memory will start playing the first file in the first folder.
  If the same device is removed and reinserted (and the contents have not been changed), the USB memory will resume play from the same point in which it was last used.

● Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be skipped (not played).

● Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result.
  In some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

WARNING

■ **Caution while driving**

Do not connect USB memory or operate the controls.
Doing so may cause an accident, resulting in death or serious injury.

NOTICE

■ **To prevent damage to USB memory or its terminal**

- Do not leave USB memory in the vehicle. The temperature inside the vehicle may become high.
- Do not push down on or apply unnecessary pressure to the USB memory while it is connected.
- Do not insert foreign objects into the port.

Using the AUX port*

This port can be used to connect a portable audio device and listen to it using the vehicle's speakers. Press the "MODE" button until "AUX" is displayed.

Connecting a portable player

→P. 365

■ **Operating portable audio devices connected to the audio system**

The volume can be adjusted using the vehicle's audio controls. All other adjustments must be made on the portable audio device itself.

■ **When using a portable audio device connected to the power outlet**

Noise may occur during playback. Use the power source of the portable audio device.

*: If equipped

Bluetooth® audio/phone*

The following can be performed using Bluetooth® wireless communication:

◆ Bluetooth® audio

The Bluetooth® audio system enables you to enjoy music played on a portable digital audio player (portable player) from the vehicle speakers via wireless communication.


This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.

◆ Bluetooth® phone (hands-free phone system)


This system supports Bluetooth®, which allows you to make or receive calls without using cables to connect a cellular phone and the system, and without operating the cellular phone.

*: If equipped

Device registration/connection flow

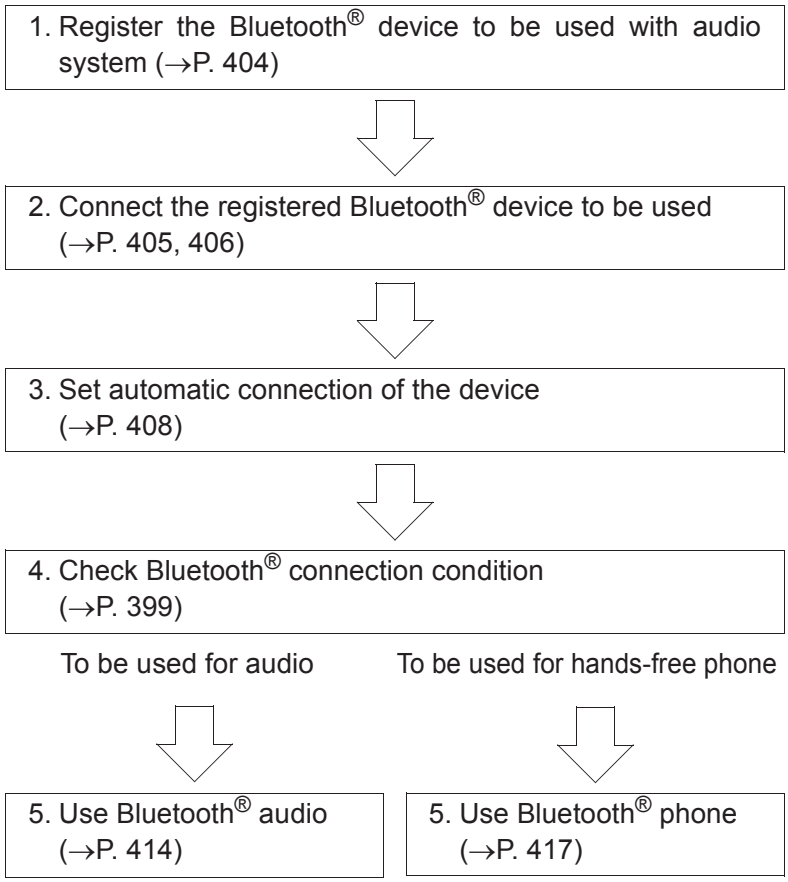

Audio unit

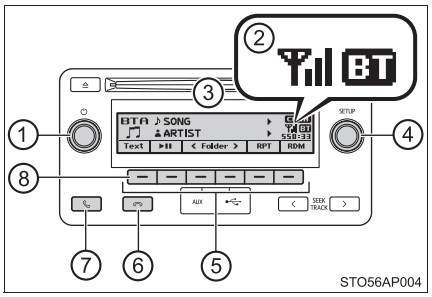

① Power/volume knob
Press: Turning the audio system on or off
Turn: Adjusting the volume

② Bluetooth® connection condition

If “BT” is not displayed, the Bluetooth® audio/phone cannot be used.

③ Display
A message, name, number, etc., is displayed.

Lower-case characters and special characters may not be displayed.

④ Tune/scroll knob
Displays set up menu or selects items such as menu and number

Turn: Selects an item
Press: Displays set up menu or inputs the selected item

⑤ Selects speed dials (Bluetooth® phone operation)

⑥ On-hook switch


Turns the hands-free system off/ends a call/refuses a call

⑦ Off-hook switch

Turns the hands-free system on/starts a call

⑧ Press and hold: Displays information that is too long to be displayed at one time on the display (Bluetooth® audio operation)

Microphone

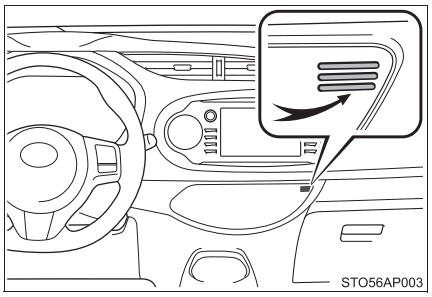

Menu list of the Bluetooth® audio/phone

To enter a menu, press the tune/scroll knob and navigate menus by using the knob.

First menu	Second menu	Third menu	Operation details
“Bluetooth*”	“Pairing”	-	Registering a Bluetooth® device
	“List phone”	-	Listing the registered cellular phones
	“List audio”	-	Listing the registered portable players
	“Passkey”	-	Changing the passkey
	“BT power”	-	Setting automatic connection of the device on or off
	“Bluetooth* info”	“Device name” “Device address”	Displaying the device status
	“Display setting”	-	Setting the automatic connection confirmation display to on or off
	“Reset”	-	Initializing the settings

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

First menu	Second menu	Third menu	Operation details
“Phone”	“Phonebook”	“Add contacts”	Adding a new number
		“Add SD”	Registering a speed dial
		“Delete call history”	Deleting a number stored in the call history
		“Delete contacts”	Deleting a number stored in the phonebook
		“Delete other PB”	Deleting a phonebook’s data
	“Auto transfer On or Off”	-	Transferring the phone book
	“HF sound setting”	“Call volume”	Setting call volume
		“Ring tone volume”	Setting ring tone volume
		“Ring tone”	Setting the ring tone
	“Transfer history”	-	Transferring the call histories

■ **Bluetooth® audio/phone system functions**

Depending on the Bluetooth® device, certain functions may not be available.

Using the steering wheel switches*


The steering wheel switches can be used to operate a connected cellular phone, or portable digital audio player (portable player).

Operating Bluetooth® phone using the steering wheel switches

① Volume

② On-hook switch
Turns the hands-free system off/ends a call/refuse a call

③ Off-hook switch
Turns the hands-free system on/start a call

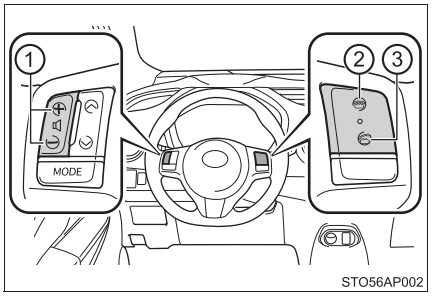

*: If equipped

Registering a Bluetooth® device*

Before using the Bluetooth® audio/phone, it is necessary to register a Bluetooth® device in the system. You can register up to 5 Bluetooth® devices.

How to register a Bluetooth® device

1 Press the tune/scroll knob and select “Bluetooth*” using the knob.

2 Press the knob and select “Pairing” using the knob.
A passkey will be displayed.

3 SSP (Secure Simple Pairing) incompatible Bluetooth® devices: Input the passkey into the device.
SSP (Secure Simple Pairing) compatible Bluetooth® devices: Select “Yes” to register the device. Depending on the type of device, it may register automatically.

If a Bluetooth® device has both music player and cellular phone functions, both functions will be registered at the same time. When deleting the device, both functions will be deleted at the same time.

If the off-hook switch is pressed and the “Phone” mode is entered when no phones have been registered, the registration screen will be automatically displayed.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

*: If equipped

Using the “SETUP” menu (“Bluetooth*” menu)*

Registering a Bluetooth® device in the system allows the system to function. The following functions can be used for registered devices:

Registering a portable player

Select “Pairing” using the tune/scroll knob (→P. 401), and perform the procedure for registering a portable player. (→P. 404)

Listing the registered cellular phones

Select “List phone” using the tune/scroll knob. (→P. 401) The list of registered cellular phones will be displayed.

● Connecting the registered cellular phone to the audio system

1 Select the name of the cellular phone to be connected using the tune/scroll knob.

2 Select “Select” using the knob.

● Deleting a registered cellular phone

1 Select the name of the cellular phone to be deleted using the tune/scroll knob.

2 Select “Delete” using the knob.

3 Press — (“Yes”).

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

*: If equipped

● Disconnecting the registered cellular phone from the audio system

1 Select the name of the cellular phone to be disconnected using the tune/scroll knob.

2 Select “Disconnect” using the knob.

3 Press — (“Yes”).

Listing the registered portable players

Select “List audio” using the tune/scroll knob. (→P. 401) The list of registered portable players will be displayed.

● Connecting the registered portable player to the audio system

1 Select the name of the portable player to be connected using the tune/scroll knob.

2 Select “Select” using the knob.

● Deleting the registered portable player

1 Select the name of the portable player to be deleted using the tune/scroll knob.

2 Select “Delete” using the knob.

3 Press — (“Yes”).

● Disconnecting the registered portable player from the audio system

1 Select the name of the portable player to be disconnected using the tune/scroll knob.

2 Select “Disconnect” using the knob.

3 Press [—] (“Yes”).

● Selecting the connection method

1 Select the name of the desired portable player using the tune/scroll knob.

2 Select “Connection method” using the knob.

3 Select “From vehicle” or “From audio” using the knob.

Changing the passkey

1 Select “Passkey” using the tune/scroll knob. (→P. 401)

2 Select a 4 to 8-digit passkey using the knob.

Input the number 1 digit at a time.

3 When the entire number to be registered as a passkey has been input, press the knob again, or press [—] (“Enter”).

If the passkey to be registered has 8 digits, pressing the knob again, or pressing [—] (“Enter”) is not necessary.

Setting automatic connection of the device on or off

If “BT power” is set to on, the registered device will be connected automatically when the engine switch is turned to the “ACC” position (vehicles without a smart entry & start system) or ACCESSORY mode (vehicles with a smart entry & start system).

1 Select “BT power” using the tune/scroll knob. (→P. 401)

2 Select “On” or “Off” using the knob.

Displaying the device status

Select “Bluetooth* info” using the tune/scroll knob. (→P. 401)

- Displaying the device name

  Select “Device name” using the tune/scroll knob.
- Displaying the device address

  Select “Device address” using the tune/scroll knob.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Setting the automatic connection confirmation display to on or off

If the “Display setting” is set to on, the Bluetooth phone/portable player connection status will be displayed when the engine switch is turned to the “ACC” or “ON” position (vehicles without a smart entry & start system), or ACCESSORY or IGNITION ON mode (vehicles with a smart entry & start system).

1 Select “Display setting” using the tune/scroll knob. (→P. 401)

2 Select “On” or “Off” using the knob.

Initialization

Select “Reset” using the tune/scroll knob. (→P. 401)

- Initializing the sound settings

  Select “Sound settings” using the tune/scroll knob and press [—] (“Yes”).

  For details about sound settings: →P. 366

- Initializing the device information

  Select “Car Device Info” using the tune/scroll knob and press [—] (“Yes”).

  Automatic connection of a portable device, automatic connection confirmation display and the passkey will be initialized.

- Initializing the all settings

  Select “Reset all” using the tune/scroll knob and press [—] (“Yes”).

Using the “SETUP” menu (“Phone” menu)*

Adding a new phone number

Select “Add contacts” using the tune/scroll knob. (→P. 401)

- Transferring all contacts from the cellular phone

  Select “Overwrite all” using the knob and press [—] (“Yes”).
- Transferring one contact from the cellular phone

  Select “Add contact” using the knob and press [—] (“Yes”).

Setting speed dials

1. Select “Add SD” using the tune/scroll knob. (→P. 401)
2. Select the desired data using the knob.
3. Press the desired preset button (from [—] [1] to [—] [5]).

For details about setting speed dials from the call history: →P. 418

For details about deleting speed dials: →P. 417

*: If equipped

Deleting call histories

Select “Delete call history” using the tune/scroll knob. (→P. 401)

● Deleting outgoing call history

1 Select “Outgoing Calls” using the tune/scroll knob.

2 Select the desired phone number using the knob and press — (“Yes”).

To delete all outgoing call history data, press — (“All”) and then press — (“Yes”).

● Deleting incoming call history

1 Select “Incoming Calls” using the tune/scroll knob.

2 Select the desired phone number using the knob and press — (“Yes”).

To delete all incoming call history data, press — (“All”) and then press — (“Yes”).

● Deleting missed call history

1 Select “Missed Calls” using the tune/scroll knob.

2 Select the desired phone number using the knob and press — (“Yes”).

To delete all missed call history data, press — (“All”) and then press — (“Yes”).

● Deleting a number from all call histories (Outgoing calls, Incoming calls and Missed calls)

1 Select “All Calls” using the tune/scroll knob.

2 Select the desired phone number using the knob and press — (“Yes”).

To delete all of the call histories data, press — (“All”) and then press — (“Yes”).

Deleting a registered phone number

1 Select “Delete contacts” using the tune/scroll knob. (→P. 401)

2 Select the desired phone number using the knob and press [—] (“Yes”).

To delete all the registered phone numbers, select “All delete” using the knob and press [—] (“Yes”).

Press [—] (“A-Z”) to display the registered names in alphabetical order of the initial.

Deleting another cellular phone’s phonebook

1 Select “Delete other PB” using the tune/scroll knob. (→P. 401)

2 Select the desired phonebook using the knob and press [—] (“Yes”).

Setting call volume

1 Select “Call volume” using the tune/scroll knob. (→P. 401)

2 Change the call volume.

To decrease the volume: Turn the knob counterclockwise.

To increase the volume: Turn the knob clockwise.

To set the volume, press [—] (“Back”).

Setting ring tone volume

1 Select “Ring tone volume” using the tune/scroll knob. (→P. 401)

2 Change the ring tone volume.

To decrease the volume: Turn the knob counterclockwise.

To increase the volume: Turn the knob clockwise.

To set the volume, press [—] (“Back”).

Setting ring tone

1 Select “Ring tone” using the tune/scroll knob. (→P. 401)

2 Using the knob, select a ring tone [1 - 3]. To set the selected ring tone, press [—] (“Back”).

Transferring call histories

Select “Transfer history” using the tune/scroll knob (→P. 401) and press [—] (“Yes”).

■ Phone number

Up to 1000 names can be stored.


■ Call history

Up to 10 numbers can be stored in each of the outgoing, incoming and missed call history memories.

■ Limitation of number of digits

A phone number that exceeds 24 digits cannot be registered.

Operating a Bluetooth® enabled portable player*

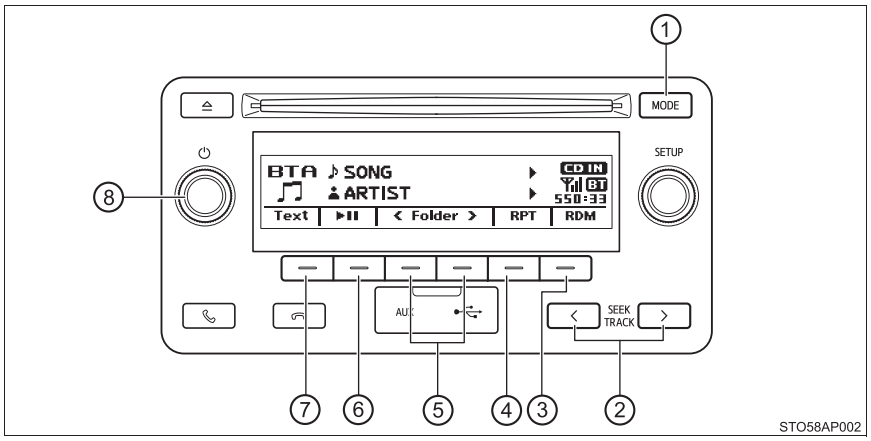

① Changing the audio source/ playback
② Selecting a track, fast-forwarding or rewinding
③ Random play or back button
④ Repeat play
⑤ Selecting an album
⑥ Playback/pause
⑦ Displaying text message
⑧ Power/volume knob
Press: Turning the audio system on or off
Turn: Adjusting the volume

*: If equipped

Selecting an album

Press [—] (“<Folder”) or [—] (“Folder>”) to select the desired album.

Selecting a tracks

Press the “<” or “>” button of “SEEK TRACK” to select the desired track.

Fast-forwarding and rewinding tracks

Press and hold the “<” or “>” button of “SEEK TRACK”.

Random play

Pressing [—] (“RDM”) changes modes in the following order:
Album random→All track random→Off.

Repeat play

Pressing [—] (“RPT”) changes modes in the following order:
Track repeat→Album repeat→Off.

Playing and pausing tracks

Press [—] (▶II).

Switching the display

Press [—] (“Text”) to display or hide the album title.

If there are continuing texts, ▶ is displayed.

Press and hold the button to display the remaining texts.

■ Bluetooth® audio system functions

Depending on the portable player that is connected to the system, certain functions may not be available.

■ Display

→P. 375

Making a phone call*

To enter the “Phone” or “TEL” mode, press the off-hook switch.

Dialing by selecting a name

1 Select “Phonebook” using the tune/scroll knob.

2 Select the desired name using the knob and press the off-hook switch.

By pressing — (“Add S. Dial”) and one of the speed dial buttons (from — [1] to — [5]) while the desired name is selected, it can be registered as a speed dial.

Press — (“A-Z”) to display the registered names in alphabetical order of the initial.

Speed dialing

1 Select “Speed Dials” using the tune/scroll knob.

2 Press the desired preset button (from — [1] to — [5]) and press the off-hook switch.

To delete a registered speed dial, after selecting the desired preset button (from — [1] to — [5]) press — (“Delete”) and then press — (“Yes”).

*: If equipped

Dialing by entering the number

1 Select “Speed Dials” or “Dial by number” using the tune/scroll knob.

2 Enter the phone number and press the off-hook switch.

Dialing from call histories

1 Select “All calls”, “Missed calls”, “Incoming calls” or “Outgoing calls” using the tune/scroll knob.

2 Select a desired number using the knob and press the off-hook switch.

The following operations can be performed:

- Registering a number as a speed dial

  Press [—] (“Add S. Dial”) and then press the desired preset button (from [—] [1] to [—] [5]).

- Deleting the selected number

  Press [—] (“Delete”) and press [—] (“Yes”).

Receiving a phone call*

Answering the phone

Press the off-hook switch.

Refusing the call

Press the on-hook switch.

Receiving a call when on another call

Press the off-hook switch.

Pressing the off-hook switch again returns you to the previous call.

Adjusting the ring tone volume when receiving a call

To decrease the volume: Turn the power/volume knob counterclockwise.

To increase the volume: Turn the power/volume knob clockwise.

*: If equipped

Speaking on the phone*

Transferring a call

A call can be transferred between the cellular phone and system while dialing, receiving a call, or during a call. Use one of the following methods:

a. Operate the cellular phone.

Refer to the manual that comes with the cellular phone for the operation of the phone.

b. Press the [—] * (“Phone”).

*: This operation can be performed only when transferring a call from the cellular phone to the system during a call.

Muting your voice

Press [—] (“Mute”).

Inputting digits

Press [—] [0-9] and using the tune/scroll knob input the desired digits.

Setting call volume

To decrease the volume: Turn the power/volume knob counterclockwise.

To increase the volume: Turn the power/volume knob clockwise.

*: If equipped

■ **When talking on the phone**

- Do not talk simultaneously with the other party.
- Keep the volume of the received voice down. Otherwise, voice echo will increase.

■ **Automatic volume adjustment**

When vehicle speed is 80 km/h (50 mph) or more, the volume automatically increases. The volume returns to the previous volume setting when vehicle speed drops to 70 km/h (43 mph) or less.

■ **Phone call system functions**

Depending on the cellular phone, certain functions may not be available.

■ **Situations where the other party may not recognize your voice**

- When driving on a rough road
- When driving at high speeds
- When air is blowing out of the vents onto the microphone
- When the air conditioning fan emits a loud noise

Bluetooth®*

■ **When using the Bluetooth® audio/phone**

● In the following situations, the system may not function.

- The portable player does not support Bluetooth®
- The cellular phone is located outside the service area
- The Bluetooth® device is switched off
- The Bluetooth® device has a low battery
- The Bluetooth® device is not connected to the system
- The Bluetooth® device is behind the seat or in the glove box or console box, or metal material covers or touches the device

● There may be a delay if a cellular phone connection is made during Bluetooth® audio play.

● Depending on the type of portable audio player that is connected to the system, operation may differ slightly and certain functions may not be available.

■ **When transferring ownership of the vehicle**

Be sure to initialize the system to prevent personal data from being improperly accessed. (→P. 409)

*: If equipped

About Bluetooth®

Bluetooth is a registered trademark of Bluetooth SIG, Inc.



Compatible models

- Bluetooth® specifications:
  Ver. 1.1, or higher (Recommended: Ver. 2.1 + EDR or higher)
- Following Profiles:
  - A2DP (Advanced Audio Distribution Profile) Ver. 1.0 or higher (recommended: Ver. 1.2 or higher)
  - AVRCP (Audio/Video Remote Control Profile) Ver. 1.0 or higher (recommended: Ver. 1.3 or higher)

Portable players must correspond to the above specifications in order to be connected to the Bluetooth® audio/phone. However, please note that some functions may be limited depending on the type of portable player.

- Cellular phone
  - HFP (Hands Free Profile) Ver. 1.0 or higher (Recommended: Ver. 1.5)
  - OPP (Object Push Profile) Ver. 1.1
  - PBAP (Phone Book Access Profile) Ver. 1.0

Certification

Panasonic

EU Declaration of Conformity
Document Number: PAS-17D008-01

Manufacturer

Name	:	Panasonic Corporation
Address	:	4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Object of Declaration <A>

Product Name	:	Car Radio
Trade Name	:	Panasonic
Model Number	:	CQ-JS76F0AE; CQ-JS76F1AE; CQ-CS16S0UT; CQ-CSM7S2TT; CQ-CSM7S4TT CQ-CSM7S7TT; CQ-CS16E0AE; CQ-JS76F0AEA; CQ-JS76F1AEA; CQ-CS16S0UTA

CE Requirements

This declaration of conformity is issued under the sole responsibility of manufacturer. The object of the declaration described above is in conformity with the requirements of the following EU legislation and harmonized standards:

Council Directive(s) : 2014/53/EU RED <B>

Harmonized Standard(s) : <C>
EN 300 328 V2.1.1; EN 62479:2010; EN 301 489-1 V2.1.1; EN 301 489-3 V2.1.1 (Final Draft)
EN 301 489-17 V3.1.1; EN 303 345 V1.1.7 (Final Draft); EN 60065:2014

Notified Body :
UL Japan, Inc. NB1731
4383-326 Asama-cho, Ise-shi, Mie, 516-0021, Japan
Certificate: ULAR1705066

Additional Information <D>

June 12th, 2017 Hiroshi Goto
Date of Issue / Signature

Hiroshi Goto / Manager
Printed Name / Title

12. Juni 2017
Date of Issue / Signature

Niels Erdmann
Authorised Representative
Panasonic Testing Centre
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, Germany

Panasonic

Translation Data of the DoC's statement for Enlarged EU

CEQAD

(English)
The object of the declaration described above <A> is in conformity with the requirements of the following EU legislations <B> and harmonized standards <C> and other provided information if any<D> .
(German)
Das oben beschriebene Objekt <A> entspricht den Anforderungen der nachfolgend aufgeführten EU-Richtlinien/ Verordnungen <B>, harmonisierten Standards <C> und, wenn aufgeführt, weiteren Angaben <D>.
(French)
L'objet de la déclaration décrite ci-dessus <A> est conforme aux conditions stipulées dans les législations de l'Union européenne énoncées ci-après <B> et aux normes harmonisées <C>, et autres informations fournies le cas échéant <D>.
(Spanish)
El objeto de la declaración mencionada anteriormente <A> es conforme a los requerimientos de las siguientes regulaciones CE <B> y estándares armonizados <C> y a otra información provista, si aplica <D>.
(Italian)
L'oggetto <A> della dichiarazione sopra descritto è conforme ai requisiti delle seguenti legislazioni europee <B> e norme armonizzate <C>e alle informazioni fornite se presenti<D>.
(Swedish)
Föremålet för den deklaration som beskrivs ovan <A> är i överensstämmelse med kraven i nedan nämnda EU-lagstiftning <B> och harmoniserade standarder <C> samt eventuell övrig information <D>.
(Dutch)
De inhoud van de verklaring hierboven (A) is conform de vereisten van de volgende EU wetgeving (B) en de geharmoniseerde standaarden (C) en desgevallend met andere geleverde informatie<D>.
(Norwegian)
Gjenstand for erklæringen som beskrives ovenfor <A> er i overensstemmelse med kravene ifølge EU-lovene <B> og de harmoniserte normer <C> og eventuell annen informasjon om denne foreligger <D>.
(Finnish)
Yllä mainitussa vaatimustenmukaisuusvakuutuksessa mainittu laite <A> täyttää EU-lainsäädäntöön sisältyvien seuraavien asetuksien <B> sekä harmonisoitujen standardien <C> vaatimukset. Ja muiden annettujen tietojen, jos yhtään on annettu <D>.
(Danish)
Genstanden for ovennævnte erklæring <A> er i overensstemmelse med kravene i følgende EU-lovgivning <B> og harmoniserede standarder <C> Samt andet givet information hvis tilgængeligt <D>.
(Portugiese)
O objecto da declaração supra descrita <A> encontra-se em conformidade com os requisitos das legislações seguintes da UE <B> e das normas standard <C> e outras informações providenciadas se existentes<D>.
(Greek)
Το αντικείμενο της παρούσας Δήλωσης, το οποίο περιγράφεται στο εδάφιο <A>, ανταποκρίνεται στις απαιτήσεις των ακόλουθων, στο εδάφιο<B> αναφερόμενων Οδηγιών της Ευρωπαϊκής Ένωσης και των εναρμονισμένων πρότυπων κανονισμών του εδαφίου <C>. παρέχονται και άλλες πληροφορίες εφόσον υπάρχουν <D>..
(Hungarian)
A nyilatkozat fent említett tárgya <A> a következő EU rendeletek <B> és harmonizált szabványok <C> követelményeivel összhangban van. És egyéb tájékoztató jellegű információ, ha felmerül<D>.

Panasonic

(Czech)
Cíl výše uvedeného prohlášení <A> je v souladu s požadavky následujících legislativních ustanovení EU <B> a harmonizovanými normami <C> a další poskytnuté informace v případě <D>.
(Polish)
Przedmiot deklaracji opisany wyżej <A> jest zgodny z wymogami następujących przepisów prawnych UE <B> i zharmonizowanych norm <C>potrzebne informacje zostały przekazane <D>.
(Slovene)
Predmeti, opisani v deklaraciji zgoraj <A> ustrezajo zahtevam zakonodaje EU <B> in so v skladu s pristojnimi standardi <C>. in druge splošne informacije, v kolikor jih je<D>.
(Slovak)
Cieľ vyššie uvedeného prehlásenia <A> je v súlade s požiadavkami nasledujúcich legislatívnych ustanovení EÚ <B> a harmonizovanými normami <C> a ďalšie poskytnuté informácie keď dostupné<D>.
(Estonian)
Ülalkirjeldatud deklareeritav toode <A> vastab Euroopa Ühenduse määruste <B> ja ühtsete standardite <C> nõuetele. ja muu (sellega) seotud informatsioon <D>.
(Latvian)
Augstākminētās deklarācijas objekts <A> atbilst šādu ES likumdošanas aktu prasībām <B> un vienotajiem standartiem <C> un citu sniegto informāciju, ja kāda ir <D>.
(Lithuanian)
Aukščiau aprašytos deklaracijos objektas <A> atitinka šių Europos Sąjungos įstatymų reikalavimus <B> ir suderintus standartus <C> ir kita pateikta informacija jei yra <D>.
(Bulgarian)
Целта на горепосочената декларация <A> съответства на изискванията на следните законодателни актове на ЕС <B> и хармонизираните стандарти <C> и друга предоставена информация, при наличие на такава <D>.
(Romanian)
Obiectul declaraţiei descris mai sus <A> este în conformitate cu cerinţele următoarelor legislaţii UE <B> şi standardele armonizate <C> şi alte informaţii furnizate în cazul în care sunt <D>.
(Turkey)
Beyana tabi yukarıda yazılı <A> ürünler aşağıda belirtilen Avrupa Birliği <B> mevzuatlarına, standartlarına <C> ve diğer ek bilgilere <D> uygundur.
(Croatian)
Predmet gore navedene izjave <A> je sukladan sa zahtjevima pravnih propisa EU u nastavku <B> i harmoniziranih normi <C> i druge pružene informacije, ukoliko ih ima <D>.

Manufacturer
・Name: Panasonic Corporation
Automotive & Industrial Systems company
・Address: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Specifications of Bluetooth
Frequency band: 2402-2480MHz
Maximum radio-frequency power: 2.5mW Max

Model No.[＊]
CQ-JS73FCAJ, CQ-JS73FDAJ, CV-VS05F4AJ, CV-VS05F5AJ, CQ-JS65F0AE, CV-VS65F0AE, CV-VS65F1AE, CV-VS65F2AE, CV-VS65F3AE, CV-VS75FCAE, CV-VS75FAAE, CV-VS75FDAE, CV-VS75FBAE, CV-VS04F1AJA, CV-VS04F0AJA, CV-VS04F4AJA, CV-VS04F3AJA, CV-VS05F3AJ, CV-VS05F2AJ, CQ-JS05F0AE, CV-VS75F0AE,CV-VS75F2AE, CQ-JT35F0AJ, CQ-JT35F1AJ, CV-VT35F0AJ,
CV-VT35F2AJ, CV-VT35F3AJ, CV-VT35F4AJ, CV-VT35F5AJ, CV-VT43F84D, CV-VT43F44D, CV-VT43F54D,CQ-CSN6E0AE, CQ-JS76F0AE, CQ-JS76F1AE, CV-CS16E0AE, CQ-CS16E0AE, CQ-SS94F1AE, CQ-SS94F0AE, CV-CT67E6AJ, CV-CT67E7AJ, CV-CT67E8AJ

Hereby, Panasonic Corporation declares that the radio equipment type [*] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.ptc.panasonic.eu/
С настоящото Panasonic Corporation декларира, че този тип радиосъоръжен ие [*] е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери н а следния интернет адрес: http://www.ptc.panasonic.eu/
Tímto Panasonic Corporation prohlašuje, že typ rádiového zařízení [*] je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.ptc.panasonic.eu/
Hermed erklærer Panasonic Corporation, at radioudstyrstypen [*] er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.ptc.panasonic.eu/
Hiermit erklärt Panasonic Corporation, dass der Funkanlagentyp [*] der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:http://www.ptc.panasonic.eu/
Käesolevaga deklareerib Panasonic Corporation, et käesolev raadioseadme tüüp [*] vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:http://www.ptc.panasonic.eu/
Με την παρούσα ο/η Panasonic Corporation, δηλώνει ότι ο ραδιοεξοπλισμός [*] πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστο σελίδα στο διαδίκτυο: http://www.ptc.panasonic.eu/
Por la presente, Panasonic Corporation declara que el tipo de equipo radioelé ctrico [*] es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.ptc.panasonic.eu/
Le soussigné, Panasonic Corporation, déclare que l'équipement radioélectrique du type [*] est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.ptc.panasonic.eu/

Il fabbricante, Panasonic Corporation, dichiara che il tipo di apparecchiatura radio [*] è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.ptc.panasonic.eu/
Ar šo Panasonic Corporation deklarē, ka radioiekārta [*] atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.ptc.panasonic.eu/
Aš, Panasonic Corporation, patvirtinu, kad radijo įrenginių tipas [*] atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.ptc.panasonic.eu/
Panasonic Corporation ovime izjavljuje da je radijska oprema tipa [*] u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.ptc.panasonic.eu/
Panasonic Corporation igazolja, hogy a [*] típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.ptc.panasonic.eu/
B'dan, Panasonic Corporation, niddikjara li dan it-tip ta' tagħmir tar-radju [*] huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.ptc.panasonic.eu/
Hierbij verklaar ik, Panasonic Corporation, dat het type radioapparatuur [*] conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.ptc.panasonic.eu/
Panasonic Corporation niniejszym oświadcza, że typ urządzenia radiowego [*] jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.ptc.panasonic.eu/

O(a) abaixo assinado(a) Panasonic Corporation declara que o presente tipo de equipamento de rádio [*] está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.ptc.panasonic.eu/
Prin prezenta, Panasonic Corporation declară că tipul de echipamente radio [*] este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.ptc.panasonic.eu/
Panasonic Corporation týmto vyhlasuje, že rádiové zariadenie typu [*] je v sú lade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.ptc.panasonic.eu/
Panasonic Corporation potrjuje, da je tip radijske opreme [*] skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.ptc.panasonic.eu/
Panasonic Corporation vakuuttaa, että radiolaitetyyppi [*] on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.ptc.panasonic.eu/
Härmed försäkrar Panasonic Corporation att denna typ av radioutrustning [*] ö verensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.ptc.panasonic.eu/

WARNING

■ **Caution while driving**

Observe the following precautions to avoid an accident that could result in death or serious injuries.

- Do not use a cellular phone.
- Do not connect Bluetooth® device or operate the controls.

■ **Caution regarding interference with electronic devices**

- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas.
  The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

NOTICE

■ **To prevent damage to Bluetooth® device**

Do not leave Bluetooth® device in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the device.

Interior features 6

6-1. Using the air conditioning system and defogger

Manual air conditioning system 434

Automatic air conditioning system 442

Seat heaters 452

6-2. Using the interior lights

Interior lights list.....454

• Interior light.....454

• Personal lights.....455

6-3. Using the storage features

List of storage features 456

• Glove box 457

• Cup holders 458

• Bottle holders 459

• Auxiliary box 460

Luggage compartment features.....461

6-4. Using the other interior features

Other interior features.....464

• Sun visors.....464

• Vanity mirrors 464

• Portable ashtray 466

• Cigarette lighter 467

• Power outlet 468


• Armrest.....469

• Panoramic roof shade ...469

• Assist grips 470

Manual air conditioning system*

Air conditioning controls

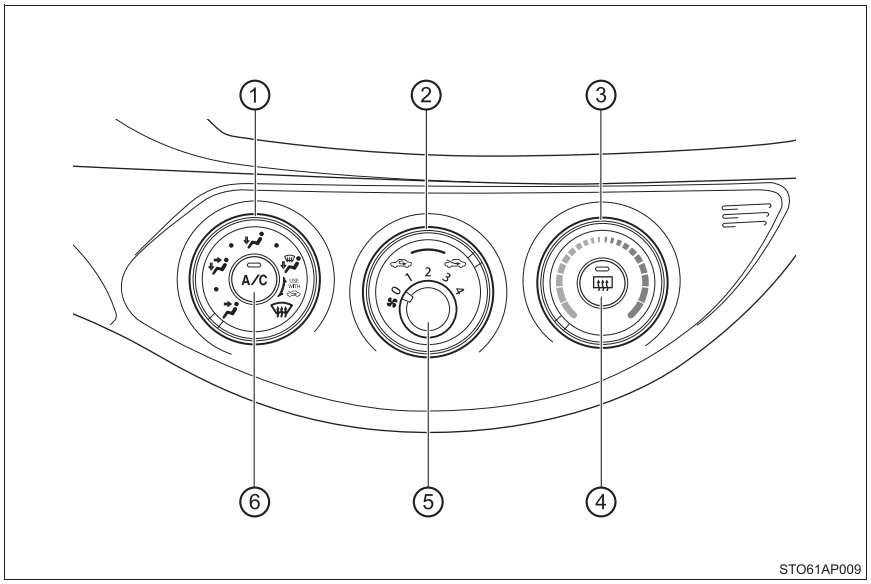

① Air outlet selector dial
② Outside/recirculated air mode dial
③ Temperature control dial
④ Rear window defogger switch/ rear window defogger and outside rear view mirror defoggers switch (if equipped)
⑤ Fan speed control dial
⑥ Cooling and dehumidification function on/off button (if equipped)

*: If equipped

■ **Adjusting the temperature setting**

▶ Vehicles without the A/C button

Turn the temperature control dial clockwise to increase the temperature.

▶ Vehicles with the A/C button

To adjust the temperature setting, turn the temperature control dial clockwise (warm) or counterclockwise (cool).

If A/C is not pressed, the system will blow ambient temperature air or heated air.


■ **Fan speed setting**

To adjust the fan speed, turn the fan speed control dial clockwise (increase) or counterclockwise (decrease).

Turning the dial to “0” turns off the fan.

■ **Change the airflow mode**

To select the air outlets, set the air outlet selector dial to the desired position.

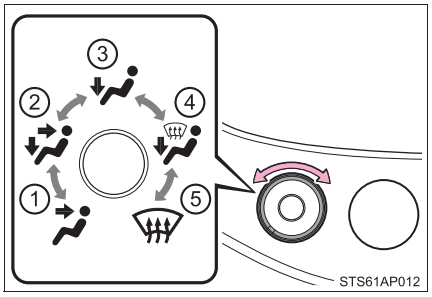

The positions between the air outlet selections can also be selected for more delicate adjustment.

① Air flows to the upper body

② Air flows to the upper body and feet

③ Air flows to the feet

④ Air flows to the feet and the windshield defogger operates

⑤ The windshield defogger operates

Other functions

■ Switching between outside air and recirculated air modes

Turn the outside/recirculated air mode dial.

Select  to change to recirculated air mode.

Select  to change to outside air mode.

■ Defogging the windshield

Defoggers are used to defog the windshield and front side windows.

Set the air outlet selector dial to  position.

Set the outside/recirculated air mode dial to outside mode if recirculated air mode is used.

Perform the following operations accordingly:

- To adjust the fan speed, turn the fan speed control dial.
- To adjust the temperature setting, turn the temperature control dial.
- Vehicles with the  button: If the dehumidification function is not operating, press to operate the dehumidification function.

To defog the windshield and the side windows early, turn the air flow and temperature up.

■ Defogging the rear window and outside rear view mirrors

▶ Vehicles with a rear window defogger

Defogger is are used to defog the rear window.

Press  .

The defoggers will automatically turn off after a period of time.

▶ Vehicles with rear window and outside rear view mirror defoggers

Defoggers are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

Press  .


The defoggers will automatically turn off after a period of time.

Air outlets

■ Location of air outlets

The air outlets and air volume changes according to the selected airflow mode.

⇦ : Some models

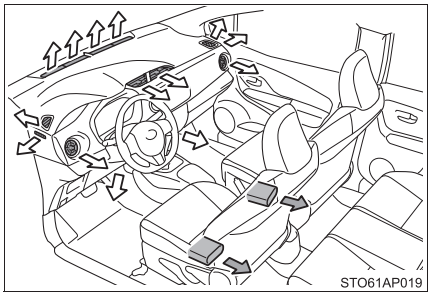


■ Adjusting the position, opening and closing the air outlets

▶ Front center outlets


① Direct air flow to the left or right, up or down.

② Turn the knob to open or close the vent.

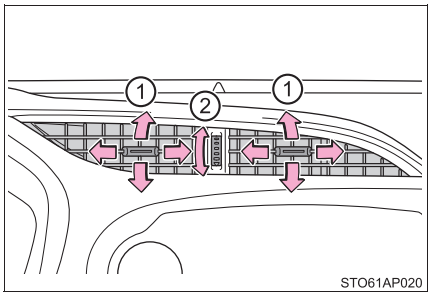


▶ Front side outlets

Direct air flow to the left or right, up or down.

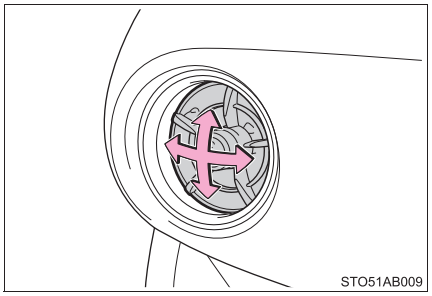

① Open the vent.
② Close the vent.

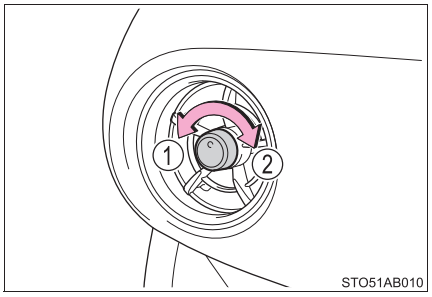

■ **Fogging up of the windows**

- Vehicles with the A/C button: The windows will easily fog up when the humidity in the vehicle is high. Turning A/C on will dehumidify the air from the outlets and defog the windshield effectively.
- Vehicles with the A/C button: If you turn A/C off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

■ **Outside/recirculated air mode**

When driving on dusty roads such as tunnels or in heavy traffic, set the outside/recirculated air mode dial to the recirculated air mode. This is effective in preventing outside air from entering the vehicle interior. During cooling operation, setting the recirculated air mode will also cool the vehicle interior effectively.

■ **When the indicator light on A/C goes off by itself (vehicles with the A/C button)**

Press A/C to turn off the dehumidification function and turn it on again. There may be a problem in the air conditioning system if the indicator light goes off again. Turn the air conditioning system off and have it inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **When the outside temperature falls to nearly 0°C (32°F) (vehicles with the A/C button)**

The dehumidification function may not operate even when A/C is pressed.

■ **Ventilation and air conditioning odors**

- To let fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
  It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.

■ **An odor comes from the air conditioning system due to the Stop & Start system operation (vehicles with a Stop & Start system)**

When the engine is stopped due to the Stop & Start system, an odor caused by moisture may be detected. This does not indicate a malfunction.

■ **Air conditioning filter**

→P. 531

WARNING

■ **To prevent the windshield from fogging up**

Do not set the air outlet selector dial to during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

■ **To prevent burns (vehicles with outside rear view mirror defoggers)**

Do not touch the outside surface of the rear view mirrors, as they can become very hot and burn you.

NOTICE


■ **To prevent battery discharge**

Do not leave the air conditioning system on longer than necessary when the engine is stopped.

Automatic air conditioning system*

Air outlets and fan speed are automatically adjusted according to the temperature setting.

Air conditioning controls

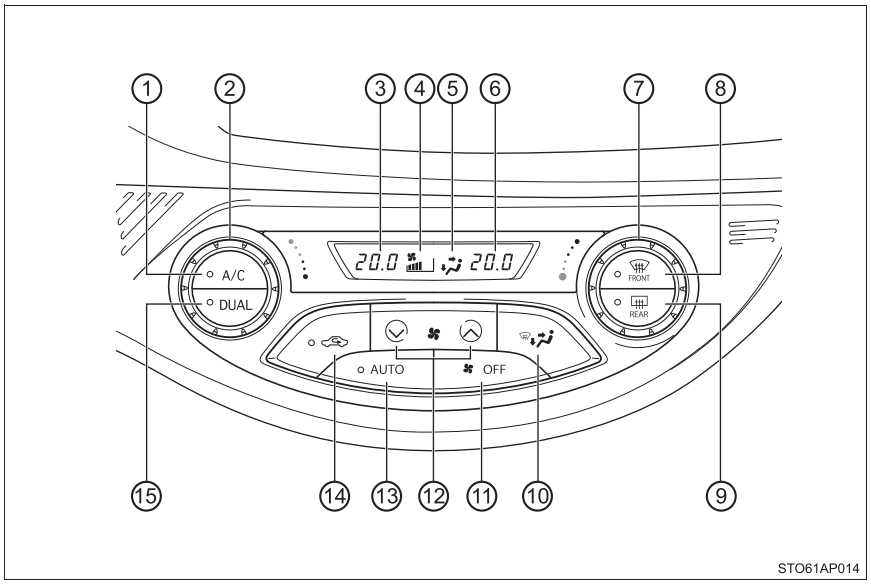


*: If equipped

① Cooling and dehumidification function on/off button
② Left-hand side temperature control dial
③ Left-hand side temperature display
④ Fan speed display
⑤ Air outlet display
⑥ Right-hand side temperature display
⑦ Right-hand side temperature control dial
⑧ Windshield defogger button
⑨ Rear window defogger switch/ rear window defogger and outside rear view mirror defoggers switch (if equipped)
⑩ Air outlet selector button
⑪ “OFF” button
⑫ Fan speed control button
⑬ Automatic mode button
⑭ Outside/recirculated air mode button
⑮ Dual mode button

■ Adjusting the temperature setting

To adjust the temperature setting, turn the temperature control dial clockwise or counterclockwise.

If A/C is not pressed, the system will blow ambient temperature air or heated air.

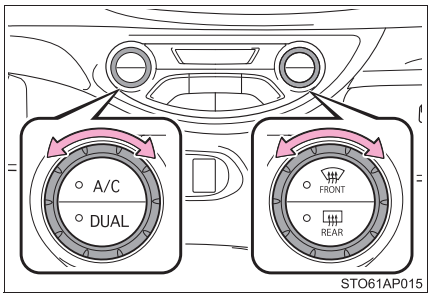

■ Fan speed setting


Press “∧” on  to increase the fan speed.

Press “∨” on  to decrease the fan speed.

Press  to turn the fan off.

■ Change the airflow mode

To change the air outlets, press  .

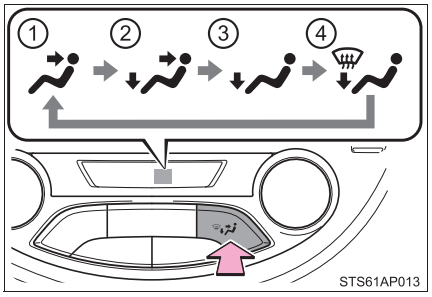

The air outlets used are switched each time the button is pressed.

① Air flows to the upper body

② Air flows to the upper body and feet

③ Air flows to the feet

④ Air flows to the feet and the windshield defogger operates

Using automatic mode

1 Press 

.

Air outlets and fan speed are automatically adjusted according to the temperature setting.

2 Adjust the temperature setting.

3 To stop the operation, press 

.

■ **Automatic mode indicator**

If the fan speed setting or air flow modes are operated, the automatic mode indicator goes off. However, automatic mode for functions other than that operated is maintained.

■ **Adjusting the temperature for driver and passenger seats separately (“DUAL” mode)**

To turn on the “DUAL” mode, perform any of the following procedure:

● Press 

.

● Adjust the passenger’s side temperature setting.

The indicator comes on when the “DUAL” mode is on.

To turn off the “DUAL” mode, press the switch again.

Other functions

■ Switching between outside air and recirculated air modes

Press  .

The mode switches each time the button is pressed.

The indicator comes on when the recirculated air mode is on.

■ Defogging the windshield

Defoggers are used to defog the windshield and front side windows.

Press  .

The dehumidification function operates and fan speed increases.
Set the outside/recirculated air mode button to outside mode if recirculated air mode is used. (It may switch automatically.)
To defog the windshield and the side windows early, turn the air flow and temperature up.

To return to the previous mode, press  again when the windshield is defogged.

■ Defogging the rear window and outside rear view mirrors

▶ Vehicles with a rear window defogger

Defogger is used to defog the rear window.

Press  .

The defogger will automatically turn off after a period of time.

▶ Vehicles with rear window and outside rear view mirror defoggers

Defoggers are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

Press  .


The defoggers will automatically turn off after a period of time.

Air outlets

■ Location of air outlets

The air outlets and air volume changes according to the selected airflow mode.

⇦ : Some models

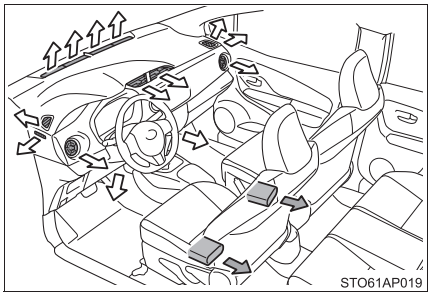


■ Adjusting the position, opening and closing the air outlets

▶ Front center outlets


① Direct air flow to the left or right, up or down.

② Turn the knob to open or close the vent.

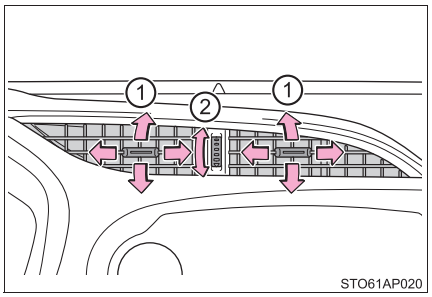


▶ Front side outlets

Direct air flow to the left or right, up or down.

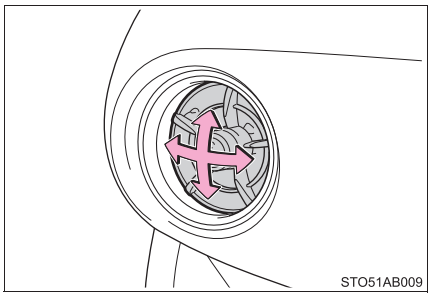

① Open the vent.

② Close the vent.

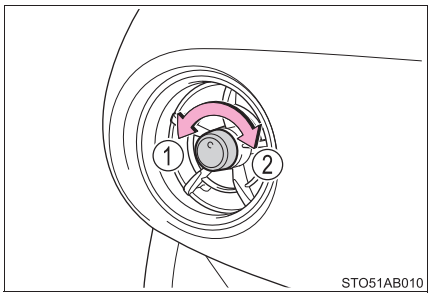

■ **Using automatic mode**

Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.
Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after AUTO is pressed.

■ **Fogging up of the windows**

- The windows will easily fog up when the humidity in the vehicle is high. Turning A/C on will dehumidify the air from the outlets and defog the windshield effectively.
- If you turn A/C off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

■ **Outside/recirculated air mode**

- When driving on dusty roads such as tunnels or in heavy traffic, set the outside/recirculated air mode button to the recirculated air mode. This is effective in preventing outside air from entering the vehicle interior. During cooling operation, setting the recirculated air mode will also cool the vehicle interior effectively.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

■ **When the outside temperature falls to nearly 0°C (32°F)**

The dehumidification function may not operate even when A/C is pressed.

■ **When the indicator light on A/C goes off by itself**

Press A/C to turn off the dehumidification function and turn it on again. There may be a problem in the air conditioning system if the indicator light goes off again. Turn the air conditioning system off and have it inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Ventilation and air conditioning odors**

- To let fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
  - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
  - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in AUTO mode.

■ **Air conditioning system operations when the engine is stopped due to the Stop & Start system (vehicles with a Stop & Start system)**

When the engine is stopped due to Stop & Start system operations, the automatic air conditioning cooling, heating and dehumidification functions turn off and the fan speed is decreased according to the outside temperature etc. or air blowing stops. To stop the air conditioning system from turning off, press the Stop & Start cancel switch and refrain from using the Stop & Start system.

■ **An odor comes from the air conditioning system due to the Stop & Start system operation (vehicles with a Stop & Start system)**

When the engine is stopped due to the Stop & Start system, an odor caused by moisture may be detected. This does not indicate a malfunction.

■ **Air conditioning filter**

→P. 531


WARNING

■ **To prevent the windshield from fogging up**

- Do not use  during cool air operation in extremely humid weather.

  The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

- Do not place anything on the instrument panel which may cover the air outlets. Otherwise, air flow may be obstructed, preventing the windshield defoggers from defogging.

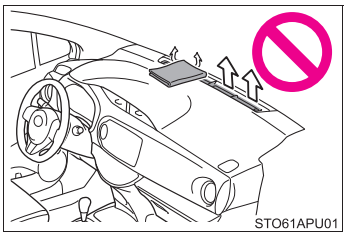

■ **To prevent burns (vehicles with outside rear view mirror defoggers)**

Do not touch the outside surface of the rear view mirrors, as they can become very hot and burn you.

NOTICE

■ **To prevent battery discharge**

Do not leave the air conditioning system on longer than necessary when the engine is stopped.

Seat heaters*

WARNING

■ Burns

- Use caution when seating the following persons in a seat with the seat heater on to avoid the possibility of burns:
  - Babies, small children, the elderly, the sick and the physically challenged
  - Persons with sensitive skin
  - Persons who are fatigued
  - Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)
- Do not cover the seat with anything when using the seat heater.
  Using the seat heater with a blanket or cushion increases the temperature of the seat and may lead to overheating.
- Do not use the seat heater more than necessary. Doing so may cause minor burns or overheating.

NOTICE

■ To prevent seat heater damage

Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.

■ To prevent battery discharge

Turn the seat heaters off when the engine is not running.


*: If equipped

Operating instructions

① Turns on the front left seat heater

② Turns on the front right seat heater

The indicator light comes on.

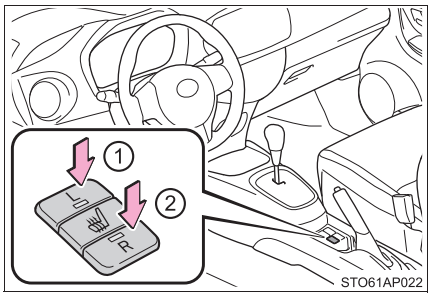

The seat heaters can be used when


Vehicles without a smart entry & start system:
The engine switch is in the “ON” position.

Vehicles with a smart entry & start system:
The engine switch is in IGNITION ON mode.

When not in use

Turn the seat heater off.


Interior lights list

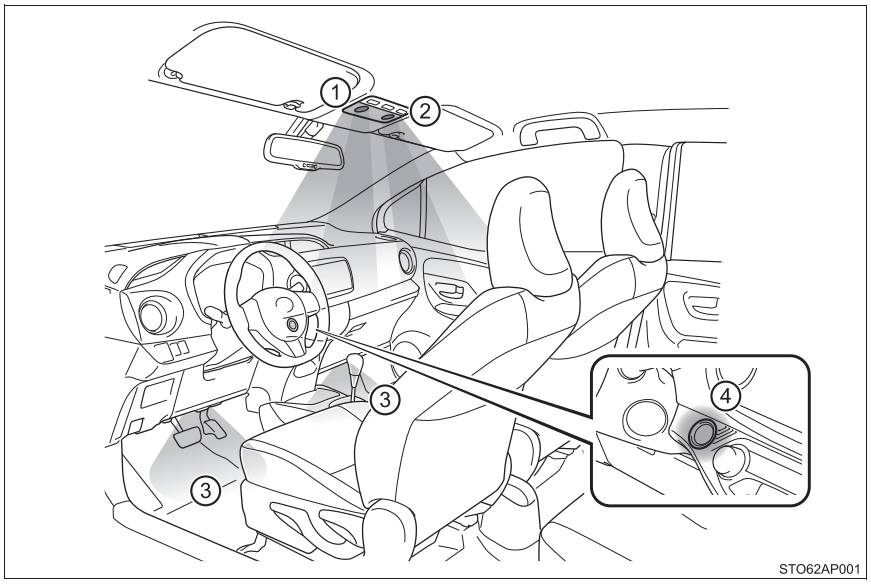

① Interior light (→P. 454)
② Personal lights (→P. 455)
③ Footwell lights (if equipped)
④ Engine switch light (vehicles with a smart entry & start system)


Interior light

① Off
② Door position
③ On

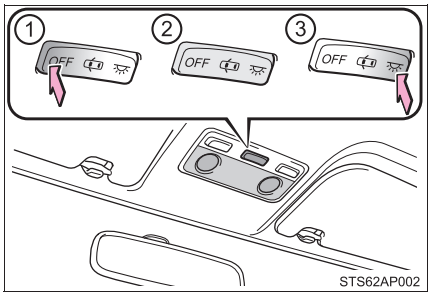

Personal lights

① On
② Off

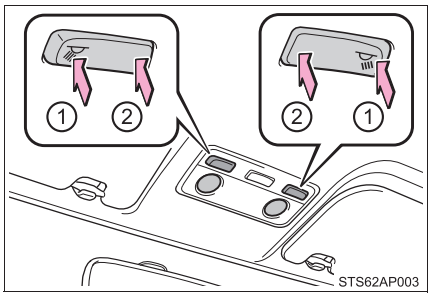

Illuminated entry system

▶ Vehicles without a smart entry & start system

The lights automatically turn on/off according to the engine switch position, whether the doors are locked/unlocked, and whether the doors are opened/closed.

▶ Vehicles with a smart entry & start system

The lights automatically turn on/off according to engine switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are opened/closed.

To prevent battery from being discharged


If the following lights remain on when the door is not fully closed, the lights will go off automatically after 20 minutes:

- Interior/personal lights (when the switch is in the door position)
- Luggage compartment light
- Engine switch light (vehicles with a smart entry & start system)
- Footwell lights (if equipped)

Customization

Settings (e.g. the time elapsed before lights turn off) can be changed. (Customizable features →P. 673)

List of storage features

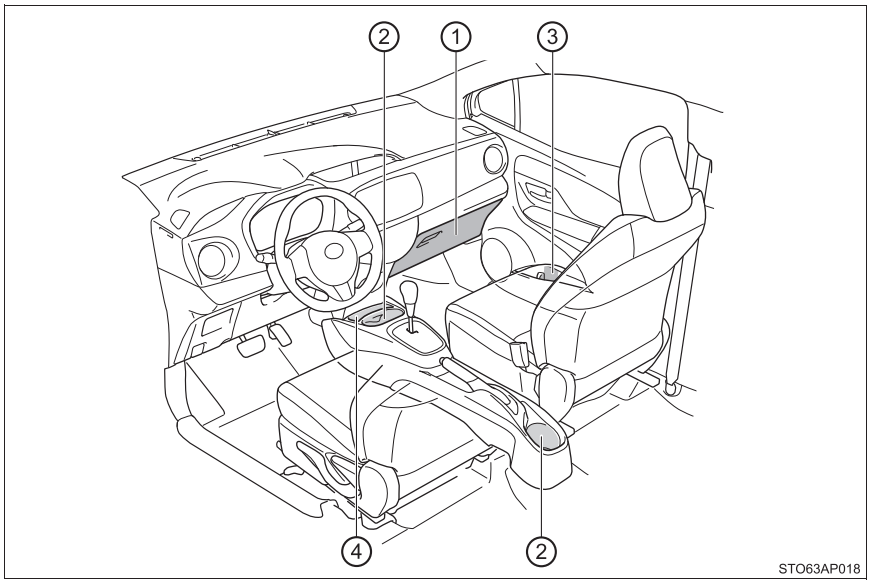

① Glove box	(→P. 457)	③ Bottle holders	(→P. 459)
② Cup holders	(→P. 458)	④ Auxiliary box	(→P. 460)

WARNING


■ Items that should not be left in the storage spaces

Do not leave glasses, lighters or spray cans in the storage spaces, as this may result in the following when cabin temperature becomes high:

- Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.

Glove box

Pull up the lever to open the glove box.

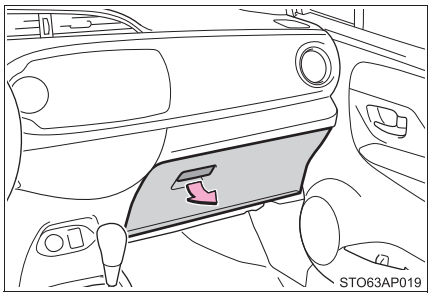

Using the glove box vent (if equipped)


Air from the air conditioning system can be distributed into the glove box by opening and closing the vent.

① Open

② Close

The air is conditioned the same as the air for the passenger side vent.

Perishable items should not be put in the box.

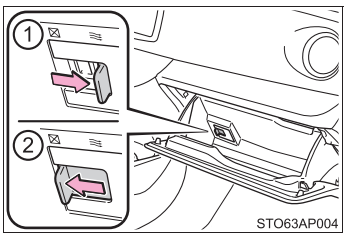


WARNING

Caution while driving


Keep the glove box closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open glove box or the items stored inside.

Cup holders

Front

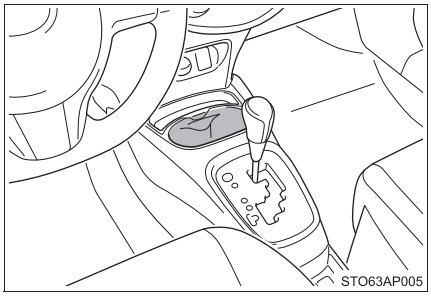

Rear

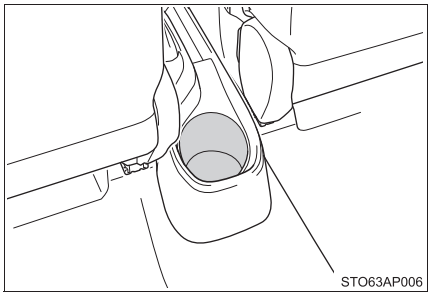


WARNING

Items unsuitable for the cup holders

- Do not place anything other than cups or aluminum cans in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking, causing injury.
- To prevent burns, cover hot drinks when placed in the cup holders.

Bottle holders

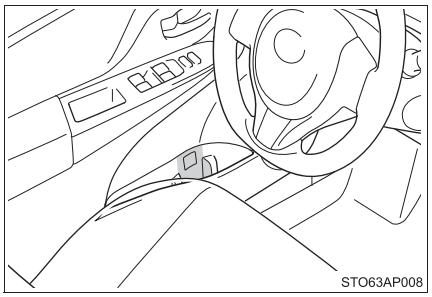

When using the bottle holders

- When storing a bottle, close the cap.
- The bottle may not be stored depending on its size or shape.

WARNING

Items unsuitable for the bottle holders

Do not place anything other than a bottle in the bottle holders.
Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury.


NOTICE

Items that should not be stowed in the bottle holders


Put the cap on before stowing a bottle. Do not place open bottles in the bottle holders, or glasses and paper cups containing liquid. The contents may spill and glasses may break.

Auxiliary box

▶ Type A

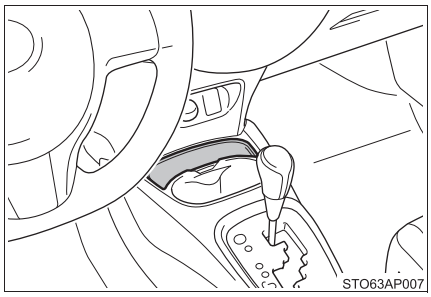


▶ Type B

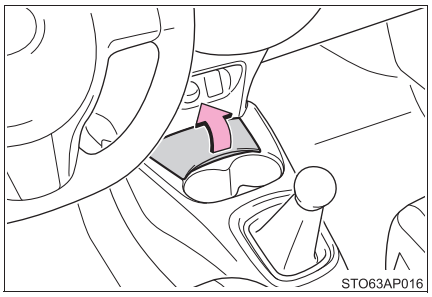

Open the cover.

▶ Type C

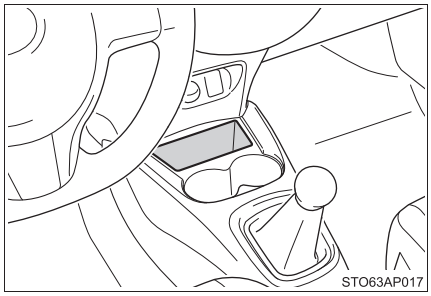

WARNING

■ Caution while driving (Type B)


Keep the auxiliary boxes closed. In the event of sudden braking, an accident may occur due to an occupant being struck by an open auxiliary box or the items stored inside.

Luggage compartment features


Luggage cover

The luggage cover can be removed by the following procedure:

1 Unhook the cords and return the luggage cover to horizontal position.

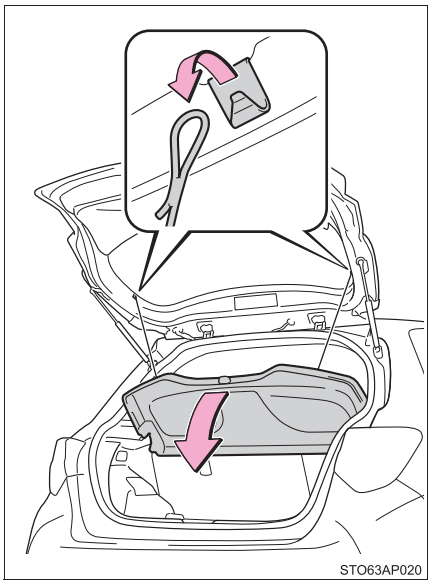

2 Lift the luggage cover and pull it toward you to remove it.

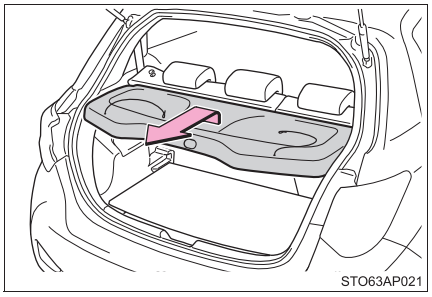


Deck board (if equipped)

■ Deck board height adjustment

① Upper position


② Lower position

The lower position can be used when the deck board is placed on the luggage floor cover.

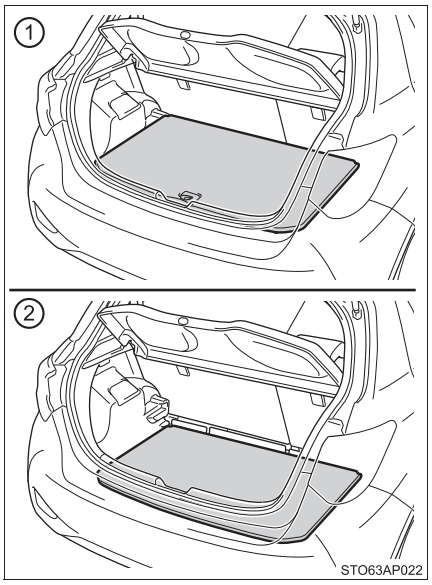

■ Removing the deck board

Lift the deck board and pull it toward you to remove it.

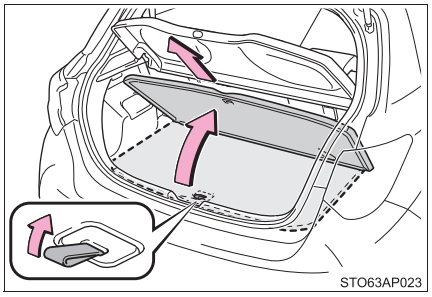


⚠ WARNING

■ When operating the deck board

Do not place anything on the deck board when operating the board. Otherwise, your fingers may be caught or an accident may result causing injuries.

Auxiliary box (if equipped)

Lift the deck board and the luggage floor cover.

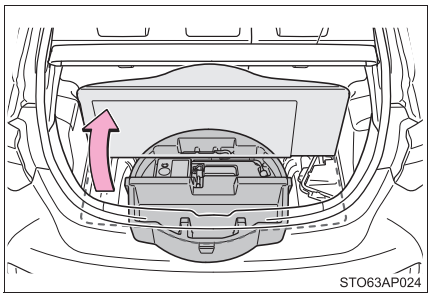


Other interior features

Sun visors


① To set the visor in the forward position, flip it down.

② To set the visor in the side position, flip down, unhook, and swing it to the side.

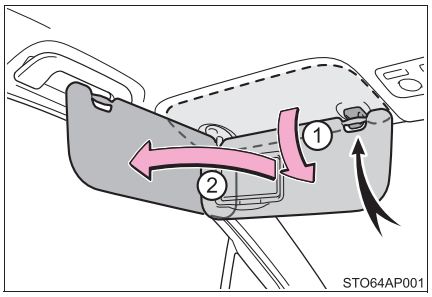

Vanity mirrors


Open the cover.

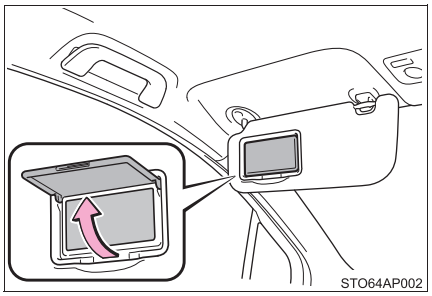

■ **Vanity lights (if equipped)**

① Turns the lights on

② Turns the lights off

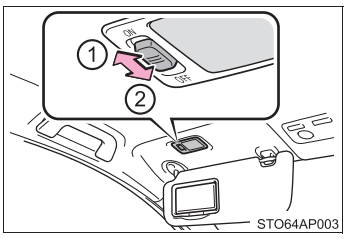

■ **Vanity lights can be used when**

▶ Vehicles without a smart entry & start system

The engine switch is in the “ACC” or “ON” position.

▶ Vehicles with a smart entry & start system

The engine switch is ACCESSORY or IGNITION ON mode.


⚠ NOTICE

■ **To prevent battery discharge (vehicles with vanity lights)**

Do not leave the vanity lights on for extended periods while the engine is not running.

Portable ashtray (if equipped)

The ashtray can be installed in a cup holder. (→P. 458)

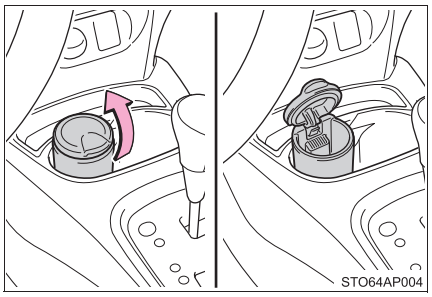

⚠ WARNING

■ When not in use

Keep the ashtray closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open ashtray or ash flying out.


■ To prevent fire

- Fully extinguish matches and cigarettes before putting them in the ashtray, then make sure the ashtray is fully closed.
- Do not place paper or any other type of flammable object in the ashtray.

Cigarette lighter (if equipped)

Push the cigarette lighter.

The cigarette lighter will pop up when it is ready for use.

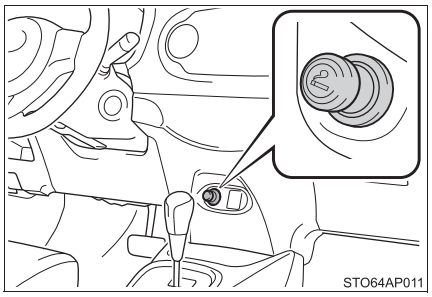

The cigarette lighter can be used when

▶ Vehicles without a smart entry & start system

The engine switch is in the “ACC” or “ON” position.

▶ Vehicles with a smart entry & start system

The engine switch is in ACCESSORY or IGNITION ON mode.

WARNING


To avoid burns or fires

- Do not touch the metal parts of the cigarette lighter.
- Do not hold the cigarette lighter down. It could overheat and cause a fire.
- Do not insert anything other than the cigarette lighter provided into the cigarette lighter outlet. Doing so may deform the outlet and make the cigarette lighter pop out of the outlet or become difficult to take out.

Power outlet (if equipped)

Please use as a power supply for electronic goods that use less than 12 VDC/10 A (power consumption of 120 W).

Open the lid.

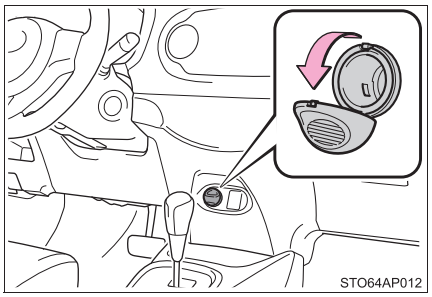

The power outlets can be used when

▶ Vehicles without a smart entry & start system

The engine switch is in the “ACC” or “ON” position.

▶ Vehicles with a smart entry & start system

The engine switch is in ACCESSORY or IGNITION ON mode.

NOTICE

To avoid damaging the power outlet


Close the power outlet lid when the power outlet is not in use.
Foreign objects or liquids that enter the power outlet may cause a short circuit.

To prevent battery discharge

Do not use the power outlet longer than necessary when the engine is not running.

Armrest (if equipped)

Fold down the armrest for use.

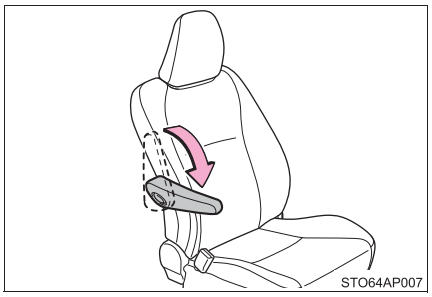

NOTICE

To prevent damage to the armrest


Do not apply too much load on the armrest.

Panoramic roof shade (if equipped)

The panoramic roof shade can be opened and closed manually.


Opening the panoramic roof shade

Pushing the tabs will release the lock, and the shade can be opened.

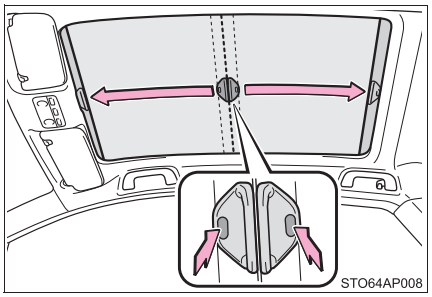


Closing the panoramic roof shade

Pull the tabs to the lock position to close the shade.

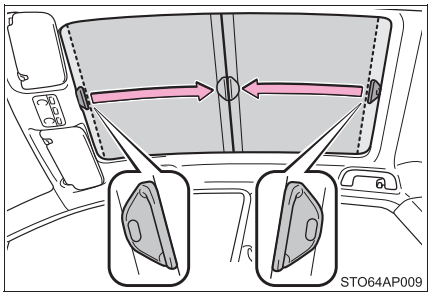

Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

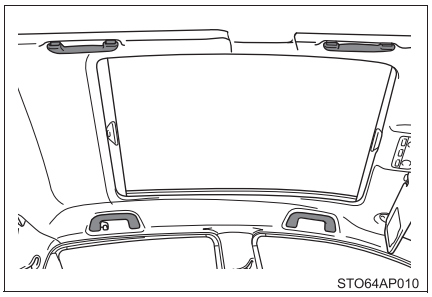

WARNING

■ Assist grip

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.
Doing so could damage the assist grip, or could cause you to injure yourself by falling over.

NOTICE

■ To prevent damage to the assist grip

Do not hang any heavy object or put a heavy load on the assist grip.

Maintenance and care 7

7-1. Maintenance and care
Cleaning and protecting the vehicle exterior 472
Cleaning and protecting the vehicle interior 476
7-2. Maintenance
Maintenance requirements.....479
7-3. Do-it-yourself maintenance
Do-it-yourself service precautions 482
Hood 485
Positioning a floor jack.....487
Engine compartment.....489
Tires.....505
Tire inflation pressure 525
Wheels.....527
Air conditioning filter 531
Wireless remote control/ electronic key battery.....534
Checking and replacing fuses 538
Light bulbs 544

Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition:

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

  If water does not bead on a clean surface, apply wax when the vehicle body is cool.

■ Automatic car washes

- Fold the mirrors and remove the antenna (pole type) before washing the vehicle. Start washing from the front of the vehicle. Make sure to re-install the antenna (pole type) and extend the mirrors before driving.
- Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.
- Rear spoiler (if equipped) may not be washable in some automatic car washes. There may also be an increased risk of damage to vehicle.

■ High pressure car washes

- Do not allow the nozzles of the car wash to come within close proximity of the windows and door borders, and high mounted stoplight.
- Before using the car wash, check that the fuel filler door on your vehicle is closed properly.

■ When using a car wash (vehicles with a smart entry & start system)

If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. Place the key in a position 2 m (6 ft.) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)

■ **Aluminum wheels (if equipped)**

- Remove any dirt immediately by using a neutral detergent.
- Wash detergent off with water immediately after use.
- To protect the paint from damage, make sure to observe the following precautions.
  - Do not use acidic, alkaline or abrasive detergent
  - Do not use hard brushes
  - Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather


■ **Bumpers**

Do not scrub with abrasive cleaners.

⚠ WARNING

■ **When cleaning the windshield**

- Vehicles with a rain-sensing windshield wiper: Set the wiper switch to off.
  If the wiper switch is in “AUTO”, the wiper may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

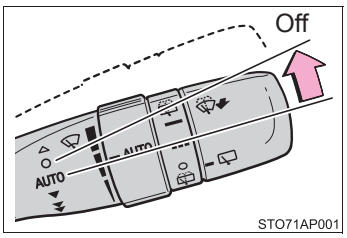

  - When the upper part of the windshield where the raindrop sensor is located is touched by hand
  - When a wet rag or similar is held close to the raindrop sensor
  - If something bumps against the windshield
  - If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor
- Installation area of front sensor on windshield:→P. 294

■ **When washing the vehicle**

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components, etc., to catch fire.

■ **Precautions regarding the exhaust pipes**

Exhaust gases cause the exhaust pipes to become quite hot.

When washing the vehicle, be careful not to touch the pipes until they have cooled sufficiently, as touching hot exhaust pipes can cause burns.

NOTICE

■ **To prevent paint deterioration and corrosion on the body and components (aluminum wheels, etc.)**

- Wash the vehicle immediately in the following cases:
  - After driving near the sea coast
  - After driving on salted roads
  - If coal tar or tree sap is present on the paint surface
  - If dead insects, insect droppings or bird droppings are present on the paint surface
  - After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
  - If the vehicle becomes heavily soiled with dust or mud
  - If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.
- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

■ **Cleaning the exterior lights**

- Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.
- Do not apply wax to the surfaces of the lights. Wax may cause damage to the lenses.

■ **Antenna installation and removal precautions (pole type)**

- Before driving, ensure that the antenna is installed.
- When the antenna is removed, such as before entering an automatic car wash, make sure to store it in a suitable place so as not to lose it. Also, before driving, make sure to reinstall the antenna in its original position.

NOTICE

When using an automatic car wash (vehicles with a rain-sensing windshield wiper)

Set the wiper switch to the off position.
If the wiper switch is in “AUTO”, the wiper may operate and the wiper blade may be damaged.

To prevent damage to the antenna (pole type)

Remove the antenna in the following situations:

- When the antenna will touch the ceiling of a garage or other such places
- When a car cover is to be used to cover the vehicle

When using a high pressure car wash

Do not bring the nozzle tip close to boots (rubber or resin manufactured cover), connectors or the following parts. The parts may be damaged if they come into contact with high-pressure water.

- Traction related parts
- Steering parts
- Suspension parts
- Brake parts

Cleaning and protecting the vehicle interior

The following procedures will help protect your vehicle's interior and keep it in top condition:

Protecting the vehicle interior

- Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.
- If dirt cannot be removed, wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
  Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted detergent.
  Use a diluted water solution of approximately 5% neutral wool detergent.
- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

Cleaning the synthetic leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

Caring for leather areas

Toyota recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

Seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

WARNING

Water in the vehicle

- Do not splash or spill liquid in the vehicle.
  Doing so may cause electrical components, etc., to malfunction or catch fire.
- Do not get any of the SRS components or wiring in the vehicle interior wet. (→P. 44)
  An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.

Cleaning the interior (especially instrument panel)

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

NOTICE

■ **Cleaning detergents**

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
  - Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, and bleach
  - Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol
- Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

■ **Preventing damage to leather surfaces**

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

■ **Water on the floor**

Do not wash the vehicle floor with water.
Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

■ **When cleaning the inside of the windshield (vehicles with Toyota Safety Sense system)**

Be careful not to touch the front sensor (→P. 289).
If the camera is accidentally scratched or hit, Toyota Safety Sense system may not operate properly or may cause a malfunction.

■ **Cleaning the inside of the rear window**

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires.
- Be careful not to scratch or damage the heater wires.

Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Toyota recommends the following maintenance:

Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For full details of your maintenance schedule, refer to the “Toyota Service Booklet” or “Toyota Warranty Booklet”.

Do-it-yourself maintenance

What about do-it-yourself maintenance?

Many of the maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools.

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you are an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Any authorized Toyota retailer or repairer will keep a record of maintenance, which could be useful should you ever require Warranty Service. Should you choose to select a qualified and equipped professional other than an authorized Toyota repairer to service or maintain your vehicle, we recommend that you request that a record of maintenance be kept.

■ **Where to go for the maintenance service?**

In order to maintain your vehicle in the best possible condition, Toyota recommends that all repairs and service operations be carried out by authorized Toyota retailers or Toyota authorized repairers, or any reliable repairers. For repairs and services covered by your warranty, please visit an authorized Toyota retailer or repairer, who will use genuine Toyota parts in repairing any difficulties you may encounter. There can also be advantages in utilizing authorized Toyota retailers or repairers for non-warranty repairs and services, as members of the Toyota network will be able to expertly assist you with any difficulties you may encounter.

Your Toyota retailer or Toyota authorized repairer, or any reliable repairer will perform all of the scheduled maintenance on your vehicle reliably and economically due to their experience with Toyota vehicles.

■ **Does your vehicle need repairs?**

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine misfire, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning system after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driven straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal or clutch pedal (vehicles with a manual transmission), pedal almost touches the floor, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal

If you notice any of these clues, take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible. Your vehicle may need adjustment or repair.

WARNING

■ **If your vehicle is not properly maintained**

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

■ **Handling of the battery**

Battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P. 500)

Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure as given in these sections.

Items	Parts and tools
Battery condition (→P. 500)	• Warm water • Baking soda • Grease • Conventional wrench (for terminal clamp bolts) • Distilled water
Engine coolant level (→P. 497)	• “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology “Toyota Super Long Life Coolant” is pre-mixed with 50% coolant and 50% deionized water. • Funnel (used only for adding coolant)
Engine oil level (→P. 492)	• “Toyota Genuine Motor Oil” or equivalent • Rag or paper towel • Funnel (used only for adding engine oil)
Fuses (→P. 538)	• Fuse with same amperage rating as original
Light bulbs (→P. 544)	• Bulb with same number and wattage rating as original • Phillips-head screwdriver • Flathead screwdriver • Wrench
Radiator, condenser and intercooler (→P. 499)	—
Tire inflation pressure (→P. 525)	• Tire pressure gauge • Compressed air source
Washer fluid (→P. 503)	• Water or washer fluid containing antifreeze (for winter use) • Funnel (used only for adding water or washer fluid)

WARNING

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions.

■ **When working on the engine compartment**

- Keep hands, clothing and tools away from the moving fan and engine drive belt.
- Be careful not to touch the engine, radiator, exhaust manifold, etc., right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel on the battery. Fuel and battery fumes are flammable.
- Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.
- Take care because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.
  If you still experience discomfort, consult a doctor.

■ **When working near the electric cooling fan or radiator grille**

▶ Vehicles without a smart entry & start system

Be sure the engine switch is in the “LOCK” position.
With the engine switch in the “ON” position, the electric cooling fan may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P. 499)

▶ Vehicles with a smart entry & start system

Be sure the engine switch is off.
With the engine switch in IGNITION ON mode, the electric cooling fan may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P. 499)

■ **Safety glasses**

Wear safety glasses to prevent flying or falling material, fluid spray, etc., from getting in your eyes.

NOTICE

■ **If you remove the air cleaner filter**

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.

■ **If the fluid level is low or high**


It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.
If the reservoir needs frequent refilling, it may indicate a serious problem.

Hood


Release the lock from the inside of the vehicle to open the hood.

1 Pull the hood lock release lever.


The hood will pop up slightly.

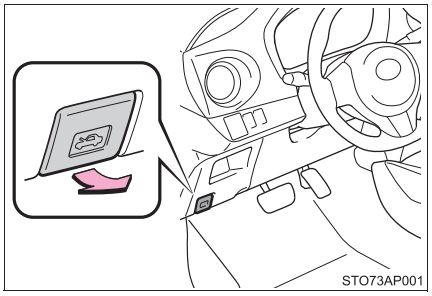

2 Pull up the auxiliary catch lever and lift the hood.

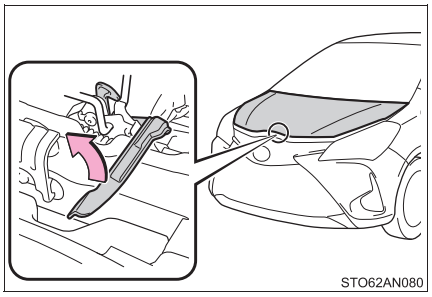

3 Hold the hood open by inserting the supporting rod into the slot.

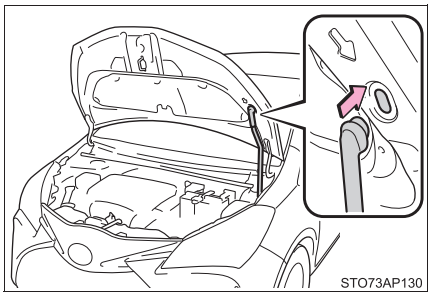

WARNING

Pre-driving check

Check that the hood is fully closed and locked.
If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

When opening the hood

Make sure to use the support rod to support the hood when opening it, ensuring that the rod is fixed correctly. The hood may stay open without support on slope, however, it is dangerous because the hood may suddenly close.

NOTICE

When closing the hood


Be sure to return the support rod to its clip before closing the hood. Closing the hood with the support rod not clipped could cause the hood to bend.

Positioning a floor jack


When using a floor jack, follow the instructions in the manual provided with the jack and perform the operation safely.

When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

◆ Front

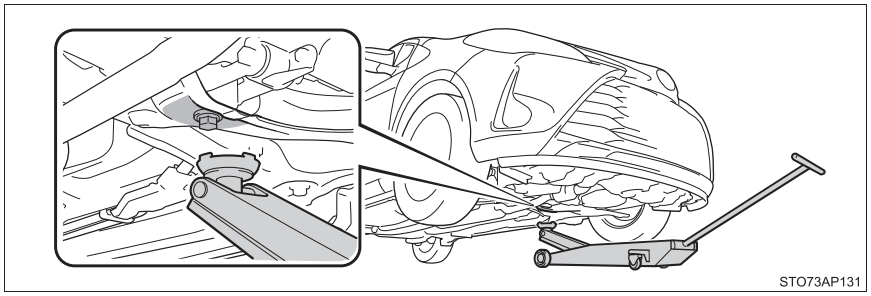


◆ Rear

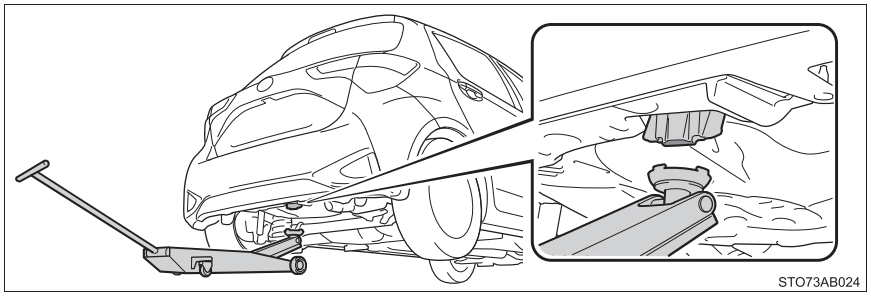

NOTICE


When raising your vehicle

Do not jack the vehicle at the suspension. The suspension may be damaged.

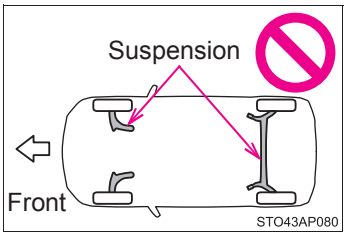


Engine compartment

■ 1KR-FE engine

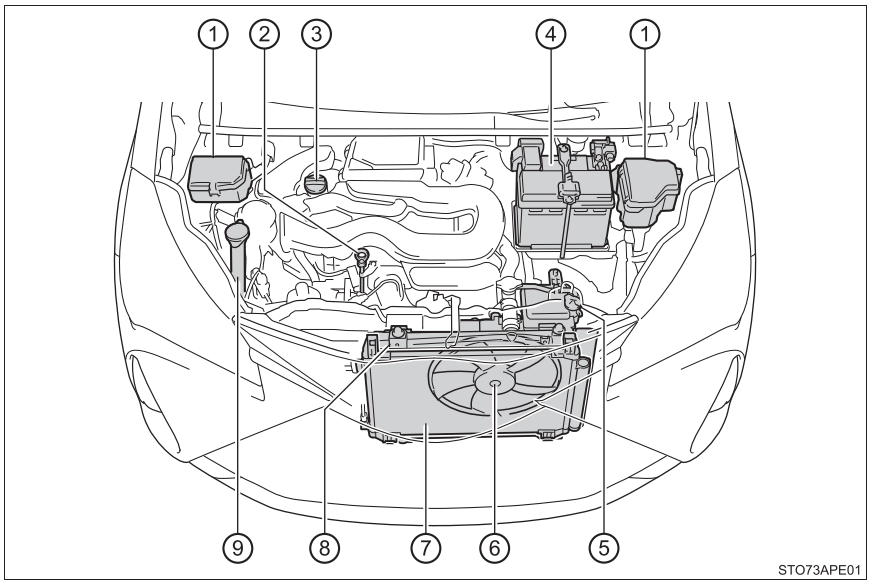


① Fuse boxes (→P. 538)
② Engine oil level dipstick (→P. 492)
③ Engine oil filler cap (→P. 494)
④ Battery (→P. 500)
⑤ Engine coolant reservoir (→P. 497)
⑥ Electric cooling fan
⑦ Condenser (→P. 499)
⑧ Radiator (→P. 499)
⑨ Washer fluid tank (→P. 503)

■ **2NR-FKE engine**

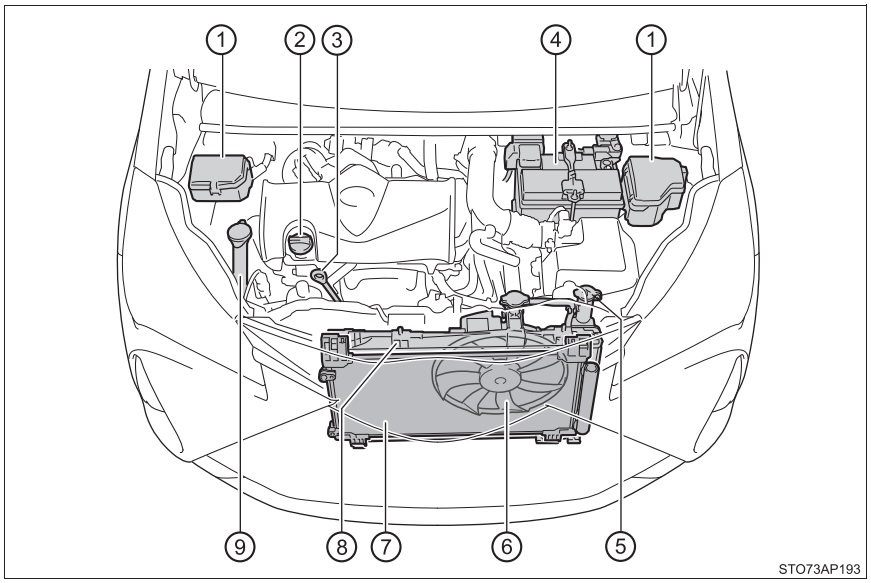

① Fuse boxes (→P. 538)
② Engine oil filler cap (→P. 494)
③ Engine oil level dipstick (→P. 492)
④ Battery (→P. 500)
⑤ Engine coolant reservoir (→P. 497)
⑥ Electric cooling fan
⑦ Condenser (→P. 499)
⑧ Radiator (→P. 499)
⑨ Washer fluid tank (→P. 503)

■ **1ND-TV engine**

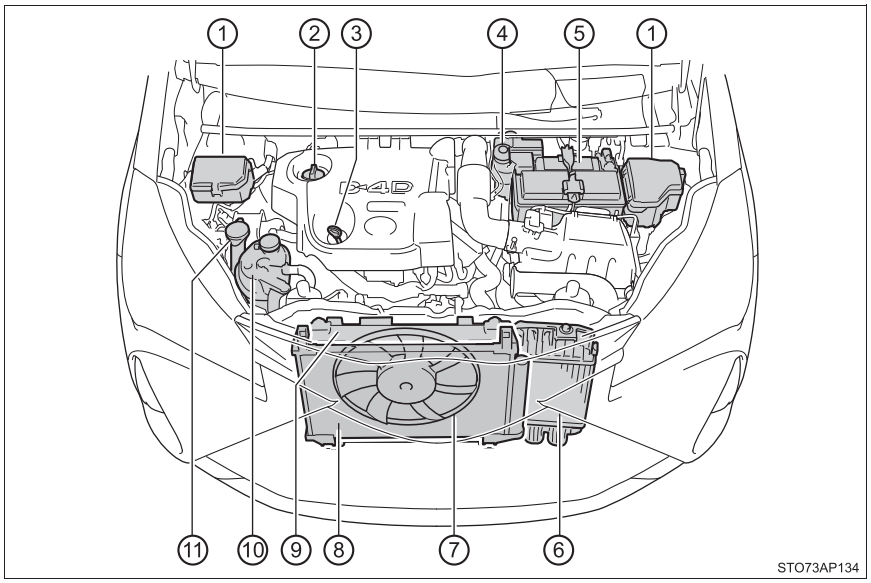

① Fuse boxes (→P. 538)
② Engine oil filler cap (→P. 494)
③ Engine oil level dipstick (→P. 492)
④ Fuel filter (→P. 504)
⑤ Battery (→P. 500)
⑥ Intercooler (→P. 499)
⑦ Electric cooling fan
⑧ Condenser (→P. 499)
⑨ Radiator (→P. 499)
⑩ Engine coolant reservoir (→P. 497)
⑪ Washer fluid tank (→P. 503)

Engine oil


With the engine at operating temperature and turned off, check the oil level on the dipstick.

■ Checking the engine oil


1 Park the vehicle on level ground. After warming up the engine and turning it off, wait more than 5 minutes for the oil to drain back into the bottom of the engine.

2 Holding a rag under the end, pull the dipstick out.


▶ 1KR-FE engine

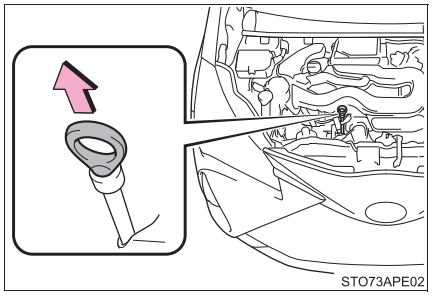

▶ 2NR-FKE engine

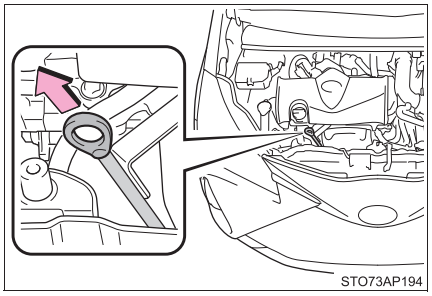

▶ 1ND-TV engine

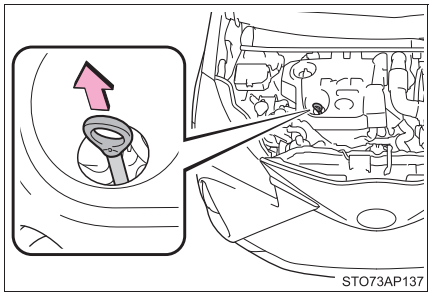

3 Wipe the dipstick clean.

4 Reinsert the dipstick fully.


5 Holding a rag under the end, pull the dipstick out and check the oil level.

① Low


② Normal

③ Excessive

▶ Flat dipstick

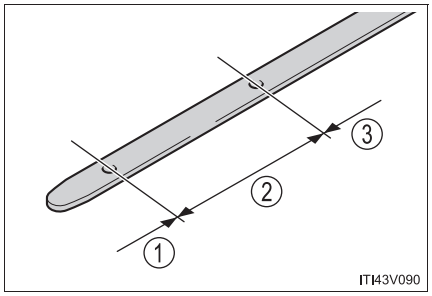

▶ Non-flat dipstick

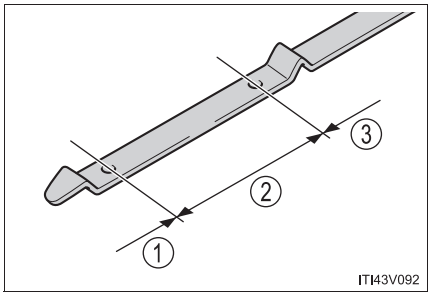


The shape of the dipstick may differ depending on the type of vehicle or engine.

6 Wipe the dipstick and reinsert it fully.


■ **Adding engine oil**

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.


▶ 1KR-FE engine

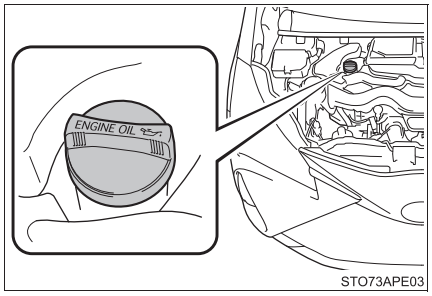

▶ 2NR-FKE engine

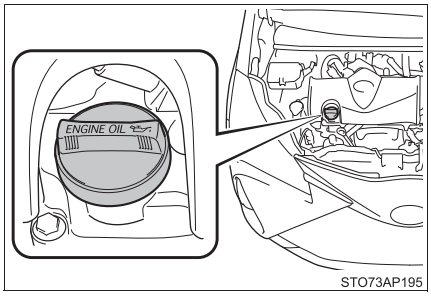

▶ 1ND-TV engine

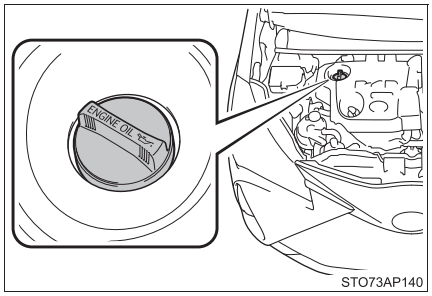

Make sure to check the oil type and prepare the items needed before adding oil.

Engine oil selection	→P. 655
Oil quantity (Low → Full)	▶ 1KR-FE, 2NR-FKE engines 1.3 L (1.4 qt., 1.1 lmp.qt.) ▶ 1ND-TV engine 1.5 L (1.6 qt., 1.3 lmp.qt.)
Items	Clean funnel

1 Remove the oil filler cap by turning it counterclockwise.

2 Add engine oil slowly, checking the dipstick.

3 Install the oil filler cap by turning it clockwise.

■ **Engine oil consumption**

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, when towing (except for South Africa), or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic

■ **After changing the engine oil (diesel engine only)**

The engine oil maintenance data should be reset. Perform the following procedures:

1. Switch the display to the trip meter “A” when the engine is running. (→P. 123)
2. Turn the engine switch to the “LOCK” position (vehicles without a smart entry & start system) or off (vehicles with a smart entry & start system).
3. Vehicles without a smart entry & start system:

   While pressing the display change button (→P. 119, 123), turn the engine switch to the “ON” position (do not start the engine because reset mode will be canceled). Continue to press and hold the button until the trip meter displays “000000”.

   Vehicles with a smart entry & start system:

   While pressing the display change button (→P. 119, 123), turn the engine switch to the IGNITION ON mode (do not start the engine because otherwise the reset mode will be canceled). Continue to press and hold the button until the trip meter displays “000000”.

WARNING

■ **Used engine oil**

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground.
  Call any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

NOTICE

■ **To prevent serious engine damage**

Check the oil level on a regular basis.


■ **When replacing the engine oil**

- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.


Engine coolant

The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir when the engine is cold.


▶ 1KR-FE engine

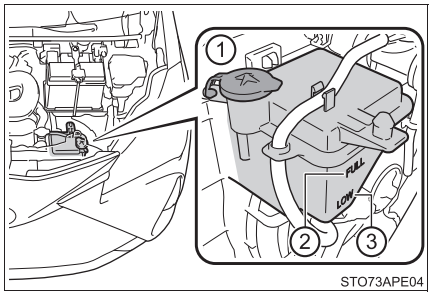

▶ 2NR-FKE engine

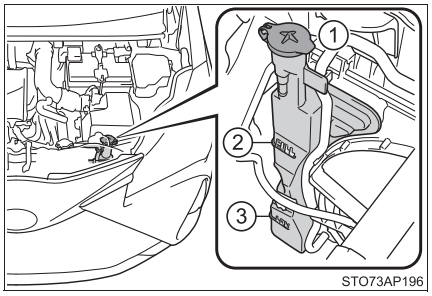

▶ 1ND-TV engine

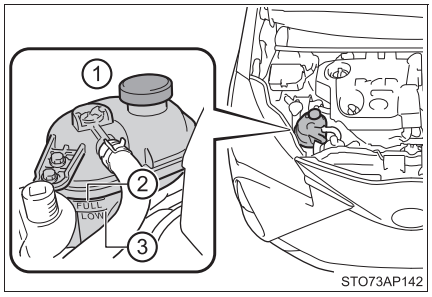

① Reservoir cap

② “FULL” line

③ “LOW” line

If the level is on or below the “LOW” line, add coolant up to the “FULL” line. (→P. 638)

■ **Coolant selection**

Only use “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

“Toyota Super Long Life Coolant” is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -35°C [-31°F])

For more details about coolant, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **If the coolant level drops within a short time of replenishing**

Visually check the radiator, hoses, engine coolant reservoir caps, drain cock and water pump.
If you cannot find a leak, have any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer test the cap and check for leaks in the cooling system.

⚠ WARNING

■ **When the engine is hot**

Do not remove the radiator cap (gasoline engine), or the engine coolant reservoir cap (diesel engine).
The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.

⚠ NOTICE

■ **When adding coolant**

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

■ **If you spill coolant**

Be sure to wash it off with water to prevent it from damaging parts or paint.

Radiator, condenser and intercooler

Check the radiator, condenser and intercooler and clear away any foreign objects.

If any of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

⚠ WARNING

■ When the engine is hot

Do not touch the radiator, condenser or intercooler as they may be hot and cause serious injuries, such as burns.


Battery

Check the battery as follows.

■ Battery exterior

Make sure that the battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

① Terminals
② Hold-down clamp

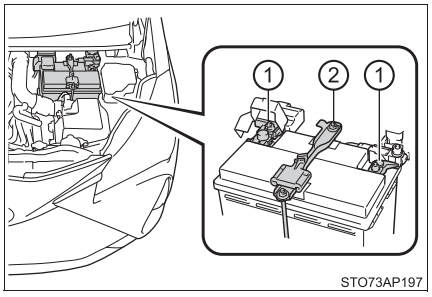

■ **Before recharging**

When recharging, the battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following before recharging:

- If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the battery.

■ **After recharging/reconnecting the battery (vehicles with a smart entry & start system)**

- Unlocking the doors using the smart entry & start system may not be possible immediately after reconnecting the battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.
- Start the engine with the engine switch in ACCESSORY mode. The engine may not start with the engine switch turned off. However, the engine will operate normally from the second attempt.
- The engine switch mode is recorded by the vehicle. If the battery is reconnected, the vehicle will return the engine switch mode to the status it was in before the battery was disconnected. Make sure to turn off the engine before disconnect the battery. Take extra care when connecting the battery if the engine switch mode prior to discharge is unknown.

If the engine will not start even after multiple attempts, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

⚠ WARNING

■ **Chemicals in the battery**

Batteries contain poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the battery:

- Do not cause sparks by touching the battery terminals with tools.
- Do not smoke or light a match near the battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the battery.
- Keep children away from the battery.

WARNING

■ **Where to safely charge the battery**

Always charge the battery in an open area. Do not charge the battery in a garage or closed room where there is insufficient ventilation.

■ **How to recharge the battery**

Only perform a slow charge (5 A or less). The battery may explode if charged at a quicker rate.

■ **Emergency measures regarding electrolyte**

- If electrolyte gets in your eyes
  Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin
  Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes
  It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte
  Drink a large quantity of water or milk. Get emergency medical attention immediately.


NOTICE

■ **When recharging the battery**

Never recharge the battery while the engine is running. Also, be sure all accessories are turned off.

Washer fluid

If the washer fluid level is less than “FULL” line, add washer fluid to “FULL” line.

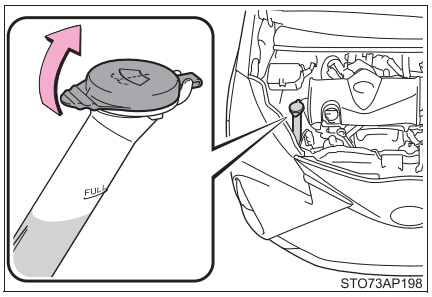

WARNING

When adding washer fluid

Do not add washer fluid when the engine is hot or running as washer fluid contains alcohol and may catch fire if spilled on the engine, etc.

NOTICE

Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid.
Doing so may cause streaking on the vehicle’s painted surfaces, as well as damaging the pump leading to problems of the washer fluid not spraying.

Diluting washer fluid

Dilute washer fluid with water as necessary.
Refer to the freezing temperatures listed on the label of the washer fluid bottle.

Fuel filter (diesel engine)

You may drain the fuel filter yourself. However, as the operation is difficult, we recommend having it drained by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Even if you decide to drain it yourself, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


Vehicles with monochrome display: The water in the fuel filter needs to be drained if the fuel filter warning light comes on. (→P. 581)

Vehicles with color display: The water in the fuel filter needs to be drained if the fuel filter warning message is shown on the multi-information display. (→P. 589)


1 Turn the engine switch to the “LOCK” position (vehicles without a smart entry & start system) or off (vehicles with a smart entry & start system).

2 Place a small tray under the drain plug to catch the water and any fuel that comes out.

3 Turn the drain plug counterclockwise about 2 to 2 1/2 turns.

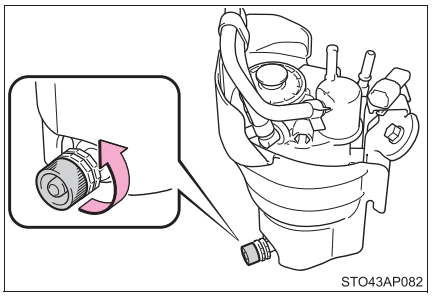
STO43AP082

4 Operate the priming pump until fuel begins to run out.

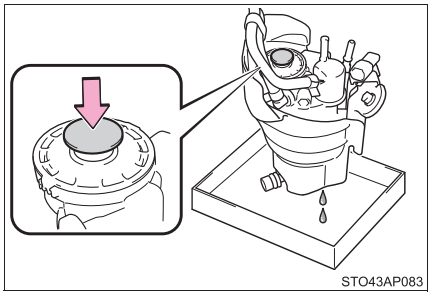
STO43AP083

5 After draining, tighten the drain plug by hand.


Tires

Replace or rotate tires in accordance with maintenance schedules and treadwear.

Checking tires

Check if the treadwear indicators are showing on the tires. Also check the tires for uneven wear, such as excessive wear on one side of the tread.

Check the spare tire condition and pressure if not rotated.

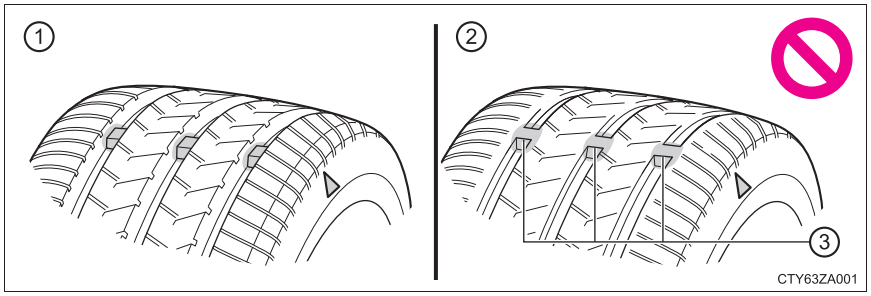

① New tread

② Worn tread

③ Treadwear indicator

The location of treadwear indicators is shown by a “TWI” or “Δ” mark, etc., molded into the sidewall of each tire.


Replace the tires if the treadwear indicators are showing on a tire.

Tire rotation (vehicles with a tire pressure warning system)

Rotate the tires in the order shown.

To equalize tire wear and help extend tire life, Toyota recommends that tire rotation is carried out approximately every 10000 km (6000 miles).


When rotating front and rear tires which have different tire inflation pressures, do not fail to initialize the tire pressure warning system after tire rotation.

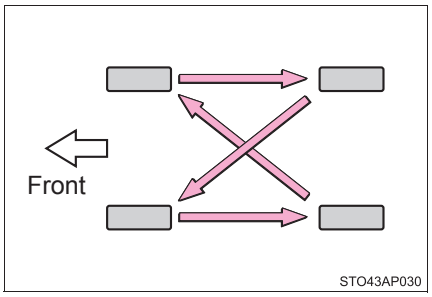


Tire rotation (vehicles without a tire pressure warning system)

Rotate the tires in the order shown.

- Vehicles with a compact spare tire or an emergency tire puncture repair kit

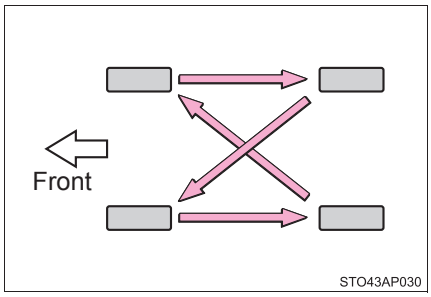

- Vehicles with a spare tire of the same wheel type as the installed tires

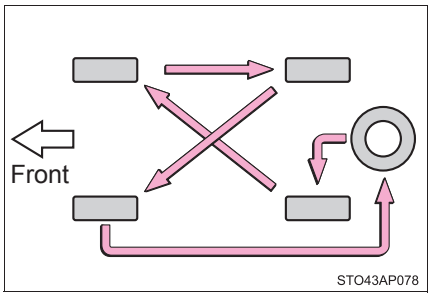

To equalize tire wear and help extend tire life, Toyota recommends that tire rotation is carried out approximately every 10000 km (6000 miles).

Tire pressure warning system (if equipped)

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

If the tire pressure drops below a predetermined level, the driver is warned by a warning light. (→P. 582)

Installing tire pressure warning valves and transmitters (vehicles with a tire pressure warning system)

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer and the tire pressure warning system must be initialized. Have tire pressure warning valve and transmitter ID codes registered by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (→P. 509)

Initializing the tire pressure warning system (vehicles with a tire pressure warning system)

■ **The tire pressure warning system must be initialized in the following circumstances:**

- When rotating front and rear tires which have different tire inflation pressures
- When the tire inflation pressure is changed such as when changing traveling speed
- When changing the tire size

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the benchmark pressure.

■ **How to initialize the tire pressure warning system**

1 Park the vehicle in a safe place and turn the engine switch to the “LOCK” position (vehicles without a smart entry & start system) or off (vehicles with a smart entry & start system).


Initialization cannot be performed while the vehicle is moving.

2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P. 665)

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

3 Turn the engine switch to the “ON” position (vehicles without a smart entry & start system) or IGNITION ON mode (vehicles with a smart entry & start system).

4 Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

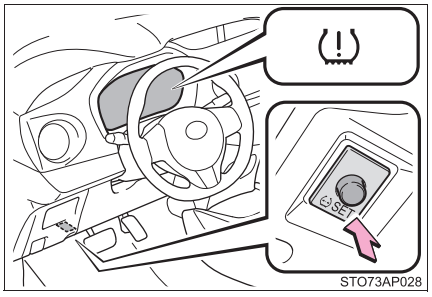

5 Vehicles without a smart entry & start system: Wait for a few minutes with the engine switch in the “ON” position and then turn the engine switch to the “ACC” or “LOCK” position.

Vehicles with a smart entry & start system: Wait for a few minutes with the engine switch in IGNITION ON mode and then turn the engine switch off.

Registering ID codes (vehicles with a tire pressure warning system)

The tire pressure warning valve and transmitter is equipped with a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code. Have the ID code registered by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

When to replace your vehicle's tires

Tires should be replaced if:

- The treadwear indicators are showing on a tire.
- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Replacing tire and wheels (vehicles with a tire pressure warning system)

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 10 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.

Tire life

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

Low profile tires (vehicles with 195/50R16 tires)

Generally, low profile tires will wear more rapidly and tire grip performance will be reduced on snowy and/or icy roads when compared to standard tires. Be sure to use snow tires or tire chains on snowy and/or icy roads and drive carefully at a speed appropriate for road and weather conditions.

Routine tire inflation pressure checks (vehicles with a tire pressure warning system)

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

■ **Initializing the tire pressure warning system (vehicles with a tire pressure warning system)**

Initialize the system with the tire inflation pressure adjusted to the specified level.

■ **If the tread on snow tires wears down below 4 mm (0.16 in.)**

The effectiveness of the tires as snow tires is lost.

■ **Situations in which the tire pressure warning system may not operate properly (vehicles with a tire pressure warning system)**

● In the following cases, the tire pressure warning system may not operate properly.

- If non-genuine Toyota wheels are used.
- A tire has been replaced with a tire that is not an OE (Original Equipment) tire.
- A tire has been replaced with a tire that is not of the specified size.
- Tire chains etc. are equipped.
- If a window tint that affects the radio wave signals is installed.
- If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings.
- If the tire inflation pressure is extremely higher than the specified level.
- If wheels without the tire pressure warning valves and transmitters are used.
- If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer.

● Performance may be affected in the following situations.

- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device

● When the vehicle is parked, the time taken for the warning to start or go off could be extended.

● When tire inflation pressure declines rapidly for example when a tire has burst, the warning may not function.

■ **When initialization of the tire pressure warning system has failed (vehicles with a tire pressure warning system)**

Initialization can be completed in a few minutes. However, in the following cases, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When operating the tire pressure warning reset switch, the tire pressure warning light does not blink 3 times.
- After driving for a certain period of time since the initialization has been completed, the warning light comes on after blinking for 1 minute.

■ **Registering ID codes**

The ID codes of the tire pressure warning valve and transmitters for two sets of wheels can be registered.

It is not necessary to register the ID codes when replacing normal tires with snow tires, if the ID codes for the wheels of both normal tires and snow tires are registered beforehand.

For information about changing ID codes, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

■ **Certification for the tire pressure warning system**

CE The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:
https://www.denso.co.jp/en/contactus/form/doc/index.html

Receiver: Model: 23AAM

Manufacturer: DENSO CORPORATION
Address: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan

Hereby, DENSO CORPORATION declares that the radio equipment type 23AAM is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
https://www.denso.co.jp/en/contactus/form/doc/index.html

DENSO CORPORATION vakuuttaa, että radiolaitetyyppi 23AAM on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.denso.co.jp/en/contactus/form/doc/index.html
Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur 23AAM conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.denso.co.jp/en/contactus/form/doc/index.html
Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type 23AAM est conformé à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: https://www.denso.co.jp/en/contactus/form/doc/index.html
Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning 23AAM överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://www.denso.co.jp/en/contactus/form/doc/index.html
Hermed erklærer DENSO CORPORATION, at radioudstyrstypen 23AAM er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www.denso.co.jp/en/contactus/form/doc/index.html
Hiermit erklärt DENSO CORPORATION, dass der Funkanlagentyp 23AAM der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.denso.co.jp/en/contactus/form/doc/index.html

Με την παρούσα ο/η DENSO CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός 23AAM πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: https://www.denso.co.jp/en/contactus/form/doc/index.html
Il fabbricante, DENSO CORPORATION, dichiara che il tipo di apparecchiatura radio 23AAM è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://www.denso.co.jp/en/contactus/form/doc/index.html
Por la presente, DENSO CORPORATION declara que el tipo de equipo radioeléctrico 23AAM es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.denso.co.jp/en/contactus/form/doc/index.html
O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio 23AAM está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: https://www.denso.co.jp/en/contactus/form/doc/index.html
B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju 23AAM huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: https://www.denso.co.jp/en/contactus/form/doc/index.html
Käesolevaga deklareerib DENSO CORPORATION, et käesolev raadioseadme tüüp 23AAM vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://www.denso.co.jp/en/contactus/form/doc/index.html

DENSO CORPORATION igazolja, hogy a 23AAM típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: https://www.denso.co.jp/en/contactus/form/doc/index.html
DENSO CORPORATION týmto vyhlasuje, že rádiové zariadenie typu 23AAM je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: https://www.denso.co.jp/en/contactus/form/doc/index.html
Tímto DENSO CORPORATION prohlašuje, že typ rádiového zařízení 23AAM je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: https://www.denso.co.jp/en/contactus/form/doc/index.html
DENSO CORPORATION potrjuje, da je tip radijske opreme 23AAM skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: https://www.denso.co.jp/en/contactus/form/doc/index.html
Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas 23AAM atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.denso.co.jp/en/contactus/form/doc/index.html
Ar šo DENSO CORPORATION deklarē, ka radioiekārta 23AAM atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.co.jp/en/contactus/form/doc/index.html
DENSO CORPORATION niniejszym oświadcza, że typ urządzenia radiowego 23AAM jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.co.jp/en/contactus/form/doc/index.html

Hér með lýsir DENSO CORPORATION yfir því að 23AAM er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.co.jp/en/contactus/form/doc/index.html
DENSO CORPORATION erklærer at 23AAM er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.co.jp/en/contactus/form/doc/index.html
С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение 23AAM е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.co.jp/en/contactus/form/doc/index.html
Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio 23AAM este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: https://www.denso.co.jp/en/contactus/form/doc/index.html
DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa 23AAM u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: https://www.denso.co.jp/en/contactus/form/doc/index.html
Ovim, DENSO CORPORATION, izjavljuje da ovaj 23AAM je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.
Ovim, DENSO CORPORATION, deklariše da je 23AAM u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 1999/5/EC.
Nepermjet kesaj, DENSO CORPORATION, deklaroj qe ky 23AAM eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.

・Manufacturer's name: PACIFIC INDUSTRIAL CO.,LTD.

・Registered trademark: PACIFIC

This trademark is registered in the following countries:
UK, Italy, Austria, Greece, Germany, France, Belgium, the Netherlands, Luxembourg, Portugal.

・Manufacturer's address:
1300-1 Yokoi, Godo-cho, Anpachi-gun, Gifu, 503-2397 JAPAN

・Operating frequency band: 433.05 — 434.79MHz

・Maximum radio-frequency power: 100dBμV/m@3m(Radiated)

Hereby, PACIFIC INDUSTRIAL CO.,LTD. declares that the radio equipment type PMV-C210 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
PACIFIC INDUSTRIAL CO.,LTD. vakuuttaa, että radiolaitetyyppi PMV-C210 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Hierbij verklaar ik, PACIFIC INDUSTRIAL CO.,LTD., dat het type radioapparatuur PMV-C210 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Le soussigné, PACIFIC INDUSTRIAL CO.,LTD., déclare que l'équipement radioélectrique du type PMV-C210 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Härmed försäkrar PACIFIC INDUSTRIAL CO.,LTD. att denna typ av radioutrustning PMV-C210 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Hermed erklærer PACIFIC INDUSTRIAL CO.,LTD., at radioudstyrstypen PMV-C210 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Hiermit erklärt PACIFIC INDUSTRIAL CO.,LTD. , dass der Funkanlagentyp PMV-C210 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Με την παρούσα ο/η PACIFIC INDUSTRIAL CO.,LTD., δηλώνει ότι ο ραδιοεξοπλισμός PMV-C210 πληροί την οδηγία 2014/53/ΕΕ.Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Il fabbricante, PACIFIC INDUSTRIAL CO.,LTD. , dichiara che il tipo di apparecchiatura radio PMV-C210 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Por la presente, PACIFIC INDUSTRIAL CO.,LTD.declara que el tipo de equipo radioeléctrico PMV-C210 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
O(a) abaixo assinado(a) PACIFIC INDUSTRIAL CO.,LTD. declara que o presente tipo de equipamento de rádio PMV-C210 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponí vel no seguinte endereço de Internet: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
B'dan, PACIFIC INDUSTRIAL CO.,LTD., niddikjara li dan it-tip ta' tagħmir tar-radju PMV-C210 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Käesolevaga deklareerib PACIFIC INDUSTRIAL CO.,LTD., et käesolev raadioseadme tüüp PMV-C210 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav jä rgmisel internetiaadressil: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
PACIFIC INDUSTRIAL CO.,LTD. igazolja, hogy a PMV-C210 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a kö vetkező internetes címen: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO.,LTD. týmto vyhlasuje, že rádiové zariadenie typu PMV-C210 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Tímto PACIFIC INDUSTRIAL CO.,LTD. prohlašuje, že typ rá diového zařízení PMV-C210 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
PACIFIC INDUSTRIAL CO.,LTD. potrjuje, da je tip radijske opreme PMV-C210 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Aš, PACIFIC INDUSTRIAL CO.,LTD. , patvirtinu, kad radijo į renginių tipas PMV-C210 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Ar šoPACIFIC INDUSTRIAL CO.,LTD. deklarē, ka radioiekārta PMV-C210 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
PACIFIC INDUSTRIAL CO.,LTD. niniejszym oświadcza, że typ urządzenia radiowego PMV-C210 jest zgodny z dyrektyw ą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod nastę pującym adresem internetowym: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hér með lýsir PACIFIC INDUSTRIAL CO.,LTD. yfir því að PMV-C210 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
PACIFIC INDUSTRIAL CO.,LTD. erklærer at PMV-C210 er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
С настоящото PACIFIC INDUSTRIAL CO.,LTD. декларира, че този тип радиосъоръжение PMV-C210 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Prin prezenta, PACIFIC INDUSTRIAL CO.,LTD. declară că tipul de echipamente radio PMV-C210 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Ovim, PACIFIC INDUSTRIAL CO.,LTD. , izjavljuje da ovaj PMV-C210 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC. http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/
Ovim, PACIFIC INDUSTRIAL CO.,LTD., deklariše da je PMV-C210 u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 1999/5/EC. http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO.,LTD. ovime izjavljuje da je radijska oprema tipa PMV-C210 u skladu s Direktivom 2014/53/EU.
Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedeć oj internetskoj adresi:
http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Nepermjet kesaj, PACIFIC INDUSTRIAL CO.,LTD. , deklaroj qe ky PMV-C210 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.

http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

▶ Vehicles sold in Serbia



WARNING

■ **When inspecting or replacing tires**

Observe the following precautions to prevent accidents.
Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes, models or tread patterns.
  Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Toyota.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.
  Do not use tires if you do not know how they were used previously.
- Vehicles with a compact spare tire: Do not tow if your vehicle has a compact spare tire installed.

■ **When initializing the tire pressure warning system (vehicles with a tire pressure warning system)**

Do not operate the tire pressure warning reset switch without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

NOTICE

■ **Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps (vehicles with a tire pressure warning system)**

- When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as the tire pressure warning valves and transmitters may be damaged if not handled correctly.
- Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves and the tire pressure warning valves could be bound.
- When replacing tire valve caps, do not use tire valve caps other than those specified. The cap may become stuck.

■ **To avoid damage to the tire pressure warning valves and transmitters (vehicles with a tire pressure warning system)**

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop as soon as possible. After use of liquid sealant, make sure to replace the tire pressure warning valve and transmitter when repairing or replacing the tire. (→P. 507)

■ **Driving on rough roads**

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

■ **Low profile tires (vehicles with 195/50R16 tires)**

Low profile tires may cause greater damage than usual to the tire wheel when sustaining impact from the road surface. Therefore, pay attention to the following:

- Be sure to use proper tire inflation pressure. If tires are under-inflated, they may be damaged more severely.
- Avoid potholes, uneven pavement, curbs and other road hazards. Failure to do so may lead to severe tire and wheel damage.

■ **If tire inflation pressure of each tire becomes low while driving**

Do not continue driving, or your tires and/or wheels may be ruined.

Tire inflation pressure

Make sure to maintain proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Toyota recommends that tire inflation pressure be checked once every two weeks. (→P. 665)

Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel economy
- Reduced driving comfort and poor handling
- Reduced tire life due to wear
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold.
  If your vehicle has been parked for at least 3 hours or has not been driven for more than 1.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge.
  It is difficult to judge if a tire is properly inflated based only on its appearance.
- It is normal for the tire inflation pressure to be higher after driving as heat is generated in the tire. Do not reduce tire inflation pressure after driving.

WARNING

■ Proper inflation is critical to save tire performance

Keep your tires properly inflated.
If the tires are not properly inflated, the following conditions may occur which could lead to an accident resulting in death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Air leaking from between tire and wheel
- Wheel deformation and/or tire damage
- Greater possibility of tire damage while driving (due to road hazards, expansion joints, sharp edges in the road, etc.)

NOTICE

■ When inspecting and adjusting tire inflation pressure

Be sure to put the tire valve caps back on.
If a valve cap is not installed, dirt or moisture may get into the valve and cause an air leak, resulting in decreased tire inflation pressure.

Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset*.

Replacement wheels are available at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*: Conventionally referred to as “offset”.

Toyota does not recommend using the following:


- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

Aluminum wheel precautions (if equipped)

- Use only Toyota wheel nuts and wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Toyota genuine balance weights or equivalent and use a plastic or rubber hammer when balancing your wheels.

■ **When removing the wheel ornament (vehicles with steel wheels and emergency tire puncture repair kit)**

Remove the wheel ornament using the wheel cap clip.

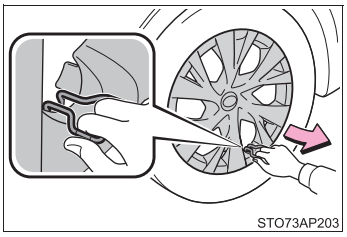

■ **When replacing wheels (vehicles with a tire pressure warning system)**

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters (except for spare tire [include compact spare tire]) that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, tire pressure warning valves and transmitters must be installed. (→P. 507)


WARNING

■ **When replacing wheels**

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

■ **When installing the wheel nuts**

- Be sure to install the wheel nuts with the tapered ends facing inward. Installing the nuts with the tapered ends facing outward can cause the wheel to break and eventually cause the wheel to come off while driving, which could lead to an accident resulting in death or serious injury.

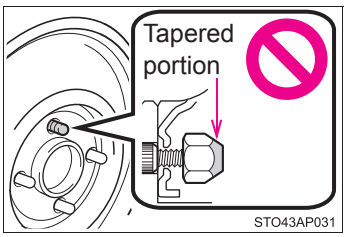

- Never use oil or grease on the wheel bolts or wheel nuts.
  Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing an accident and resulting in death or serious injury. Remove any oil or grease from the wheel bolts or wheel nuts.

■ **Use of defective wheels prohibited**

Do not use cracked or deformed wheels.
Doing so could cause the tire to leak air during driving, possibly causing an accident.

NOTICE

■ Replacing tire pressure warning valves and transmitters (vehicles with a tire pressure warning system)

- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Ensure that only genuine Toyota wheels are used on your vehicle.
  Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.


Air conditioning filter

The air conditioning filter must be changed regularly to maintain air conditioning efficiency.


Removal method

1 Turn the engine switch to the “LOCK” position (vehicles without a smart entry & start system) or off (vehicles with a smart entry & start system).


2 Open the glove box and slide off the damper.

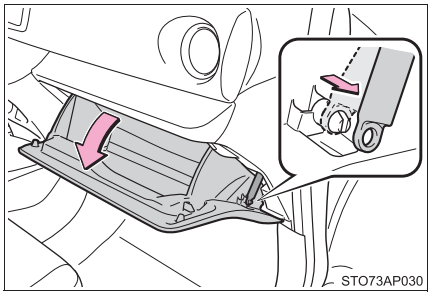

3 Push in each side of the glove box to disconnect the upper claws.

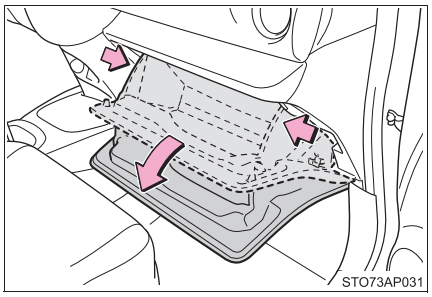


4 Pull out the glove box and disconnect the lower claws.

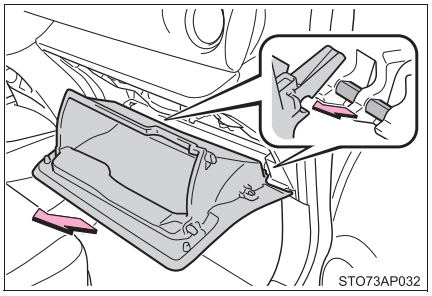

5 Remove the filter cover.


① Unlock the filter cover.

② Move the filter cover in the direction of the arrow, and then pull it out of the claws.

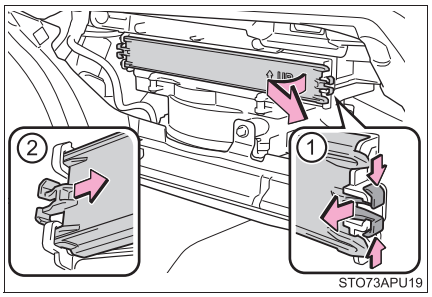

6 Remove the air conditioning filter and replace it with a new one.

The "↑UP" marks shown on the filter should be pointing up.

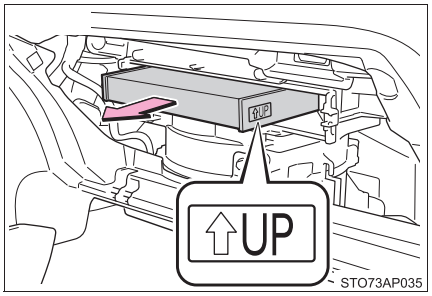

■ **Checking interval**

Inspect and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the "Toyota Service Booklet" or "Toyota Warranty Booklet".)

■ **If air flow from the vents decreases dramatically**

The filter may be clogged. Check the filter and replace if necessary.

NOTICE

When using the air conditioning system


Make sure that a filter is always installed.
Using the air conditioning system without a filter may cause damage to the system.

When removing the glove box

Always follow the specified procedure to remove the glove box (→P. 531). If the glove box is removed without following the specified procedure, the hinge of the glove box may become damaged.

To prevent damage to the filter cover

When moving the filter cover in the direction of arrow to release the fitting, pay attention not to apply excessive force to the claws. Otherwise, the claws may be damaged.

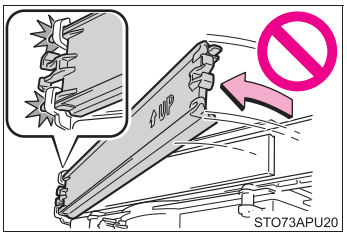

Wireless remote control/electronic key battery*

Replace the battery with a new one if it is depleted.

You will need the following items:

- Flathead screwdriver
- Lithium battery CR2016 (vehicles without a smart entry & start system), or CR2032 (vehicles with a smart entry & start system)


Replacing the battery

▶ Vehicles without a smart entry & start system

1 Lift the cover.


Insert the screw driver in the slot and push down.

To prevent damage to the key, cover the tip of the screwdriver with a tape.

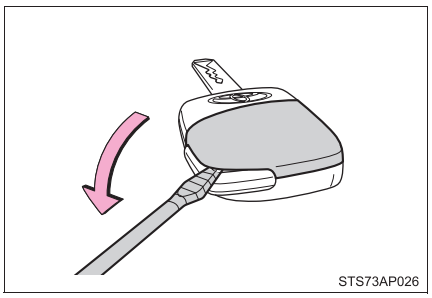
STS73AP026

2 Remove the cover.


Insert the screw driver in the bottom of the key and push down.

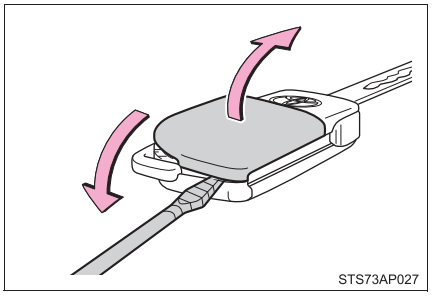
STS73AP027

*: If equipped


3 Remove the depleted battery.

Insert a new battery with the “+” terminal facing up.

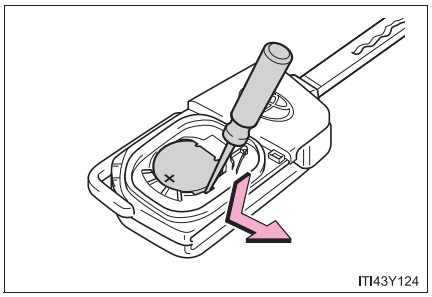


▶ Vehicles with a smart entry & start system

1 Take out the mechanical key.

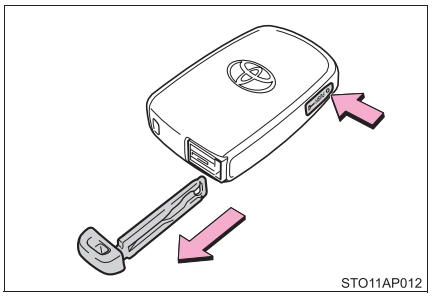


2 Remove the cover.

To prevent damage to the key, cover the tip of the screwdriver with a tape.

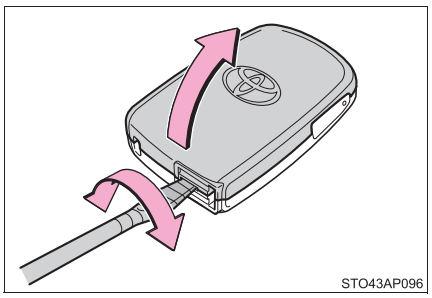


3 Remove the battery cover.

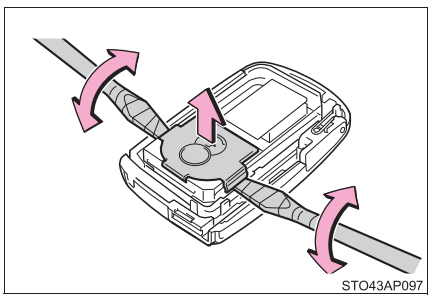

4 Remove the depleted battery.

Insert a new battery with the “+” terminal facing up.

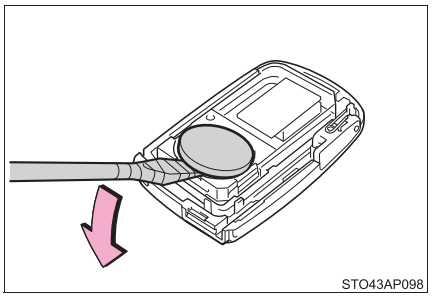

■ **Use a CR2016 (vehicles without a smart entry & start system) or CR2032 (vehicles with a smart entry & start system) lithium battery**

- Batteries can be purchased at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer local electrical appliance shops or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to local laws.

■ **If the key battery is depleted**

The following symptoms may occur:

- The smart entry & start system (if equipped) and wireless remote control will not function properly.
- The operational range will be reduced.

⚠ WARNING

■ **Removed battery and other parts**

These parts are small and if swallowed by a child, they can cause choking. Keep away from children. Failure to do so could result in death or serious injury.

■ **Certification for the lithium battery**

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

NOTICE

■ **For normal operation after replacing the battery**

Observe the following precautions to prevent accidents:

- Always work with dry hands.
  Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.


Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.

1 Turn the engine switch to the “LOCK” position (vehicles without a smart entry & start system) or off (vehicles with a smart entry & start system).

2 Open the fuse box cover.

▶ Engine compartment: type A and B fuse boxes

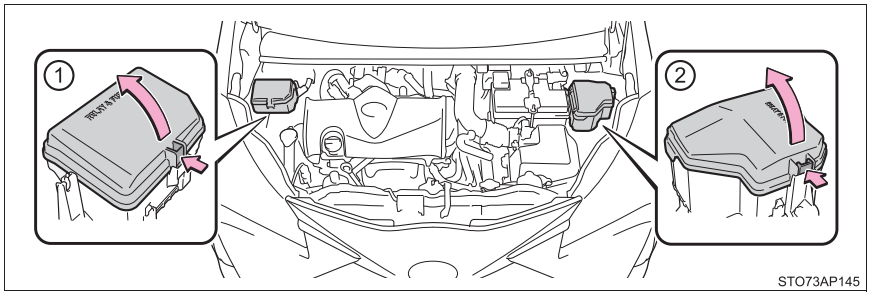

① Type A fuse box


Push the tab in and lift the lid off.

② Type B fuse box


Push the tab in and lift the lid off.

▶ Engine compartment: type C fuse box (left-hand drive vehicles)

① Pull the rubber strip on the edge to unhook it from the cover, and then push the tabs in and lift the cover off.

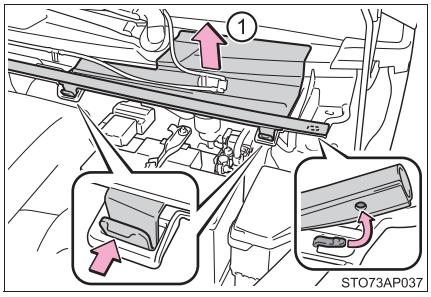


② Remove the battery terminal cover and then the fuse box cover.

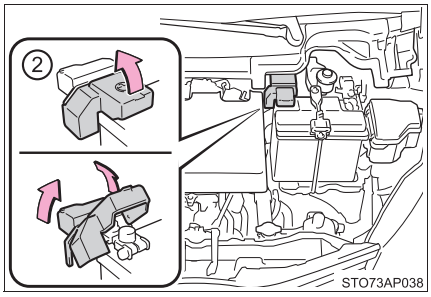


▶ Engine compartment: type C fuse box (right-hand drive vehicles)

① Pull the rubber strip on the edge to unhook it from the cover, and then push the tabs in and lift the cover off.

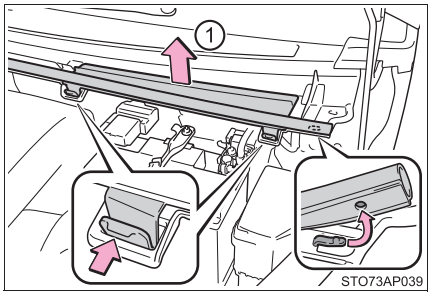


② Remove the battery terminal cover and then the fuse box cover.

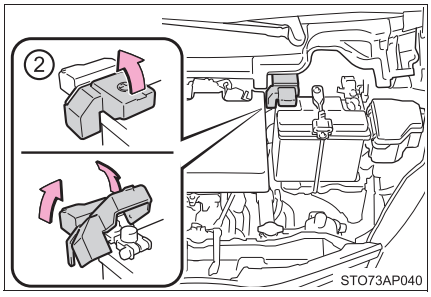

▶ Instrument panel (left-hand drive vehicles)


Remove the lid.

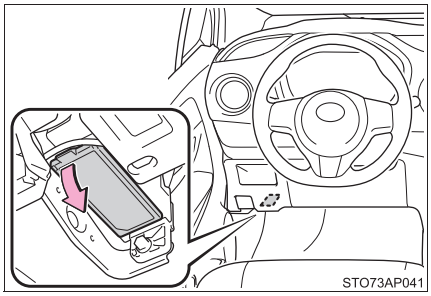


▶ Instrument panel (right-hand drive vehicles)

① Remove the cover.

Do not pull off the cover using excessive force as it is attached to the footwell light.

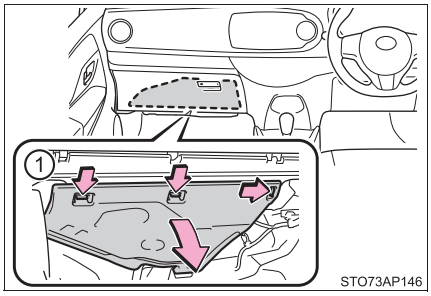


② Remove the lid.

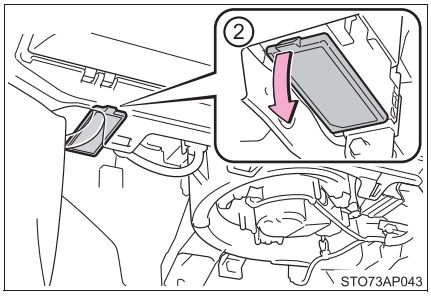

3 Remove the fuse with the pull-out tool.

Only type A fuse can be removed using the pullout tool.

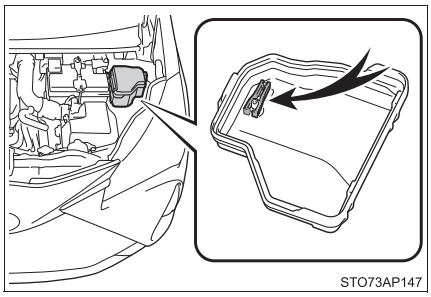

4 Check if the fuse is blown.


① Normal fuse

② Blown fuse


From Type A to F:
Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

Type G:
Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


▶ Type A

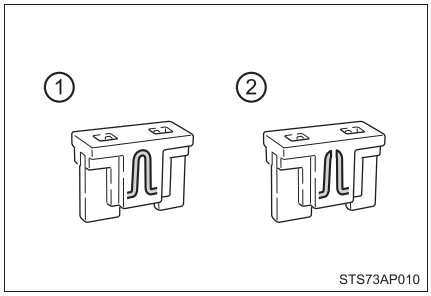


▶ Type B

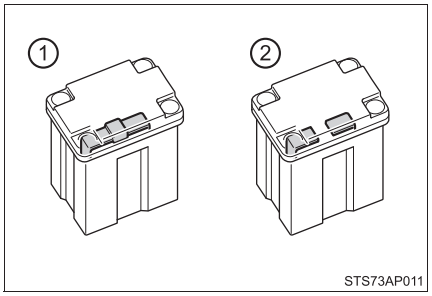


▶ Type C

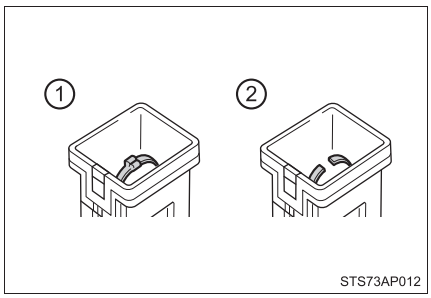


▶ Type D

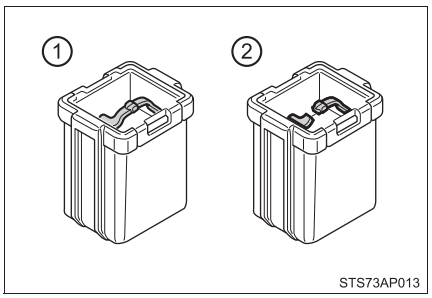


▶ Type E

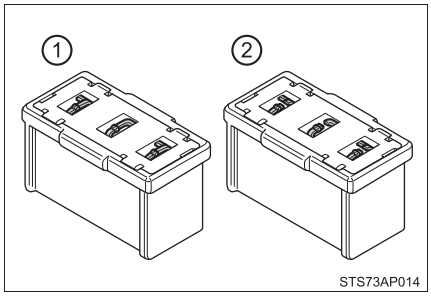

▶ Type F

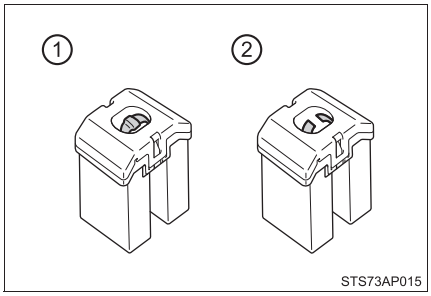

▶ Type G

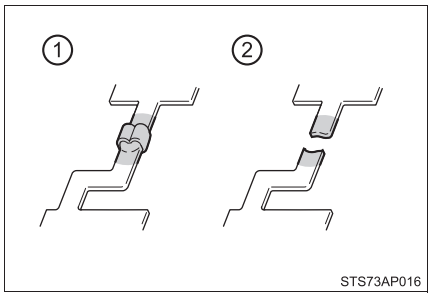

■ **After a fuse is replaced**

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 544)
- If the replaced fuse blows again, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **If there is an overload in a circuit**

The fuses are designed to blow, protecting the wiring harness from damage.


■ **When replacing light bulbs**

Toyota recommends that you use genuine Toyota products designed for this vehicle. Because certain bulbs are connected to circuits designed to prevent overload, non-genuine parts or parts not designed for this vehicle may be unusable.

■ **When reinstalling the cover (type C fuse box)**


▶ Left-hand drive vehicles

Reinstall the cover, and then hook the rubber strip's groove onto the cover.

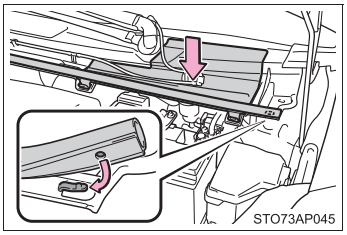

▶ Right-hand drive vehicles

Reinstall the cover, and then hook the rubber strip's groove onto the cover.

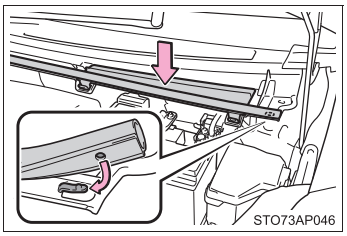

WARNING

■ **To prevent system breakdowns and vehicle fire**

Observe the following precautions.
Failure to do so may cause damage to the vehicle, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- Always use a genuine Toyota fuse or equivalent.
  Never replace a fuse with a wire, even as a temporary fix.
- Do not modify the fuses or fuse boxes.

NOTICE

■ **Before replacing fuses**

Have the cause of electrical overload determined and repaired by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

Light bulbs

You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. As there is a danger that components may be damaged, we recommend that replacement is carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


For more information about replacing other light bulbs, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Preparing for light bulb replacement

Check the wattage of the light bulb to be replaced. (→P. 669)


Bulb locations

■ Front

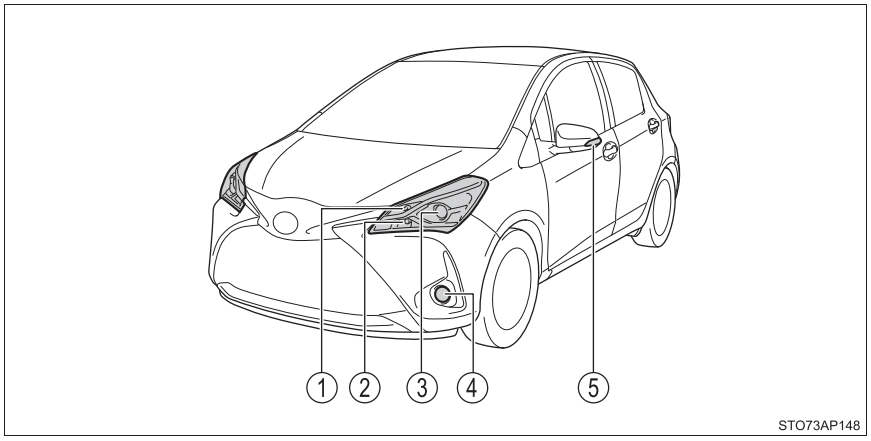

① Front position lights/daytime running lights (bulb type)
② Front turn signal lights
③ Headlights
④ Front fog lights (if equipped)
⑤ Side turn signal lights

■ **Rear**

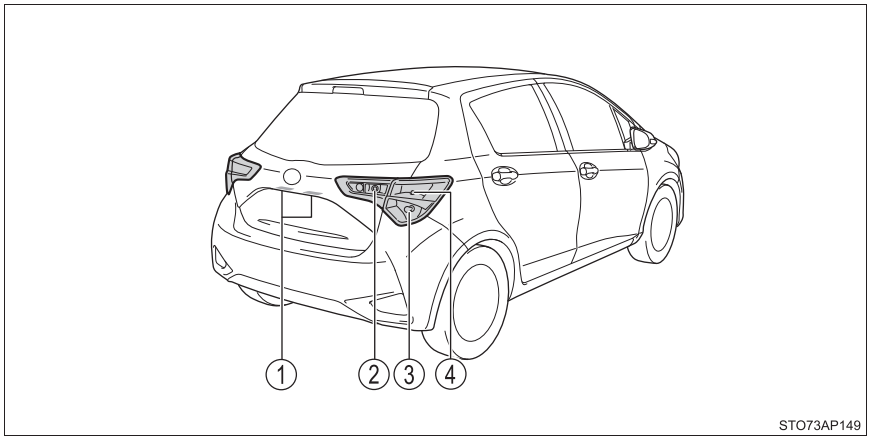


① License plate lights
② Back-up light
③ Stop/tail lights (bulb type)
④ Rear turn signal lights

Replacing light bulbs


■ Halogen headlights

▶ Reflector type

1 Unplug the connector.

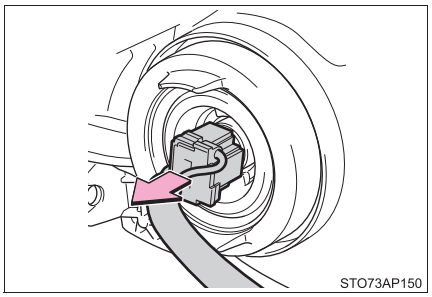


2 Remove the rubber cover.

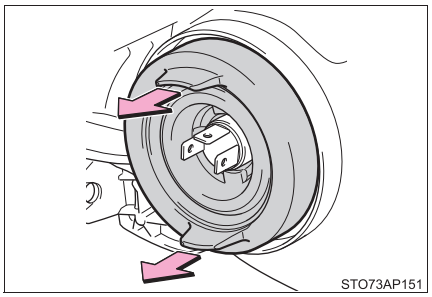

3 Release the bulb retaining spring.


① Push the bulb retaining spring and release from the hook.

② Lift the bulb retaining spring.

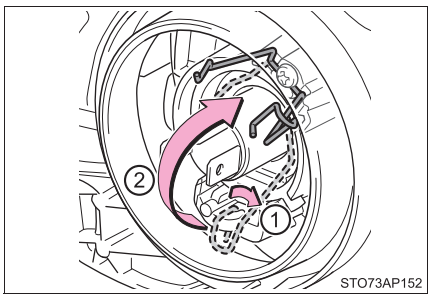


4 Remove the bulb.

To install a new bulb, align tabs of the bulb with the cutouts of the mounting hole.

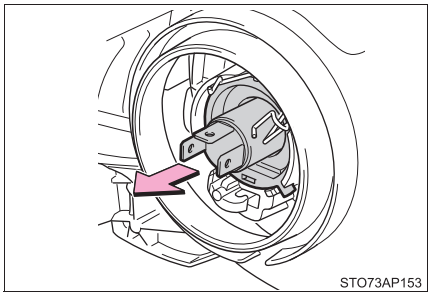

5 Set the new light bulb.


Align the 3 tabs on the light bulb with the mounting and insert.

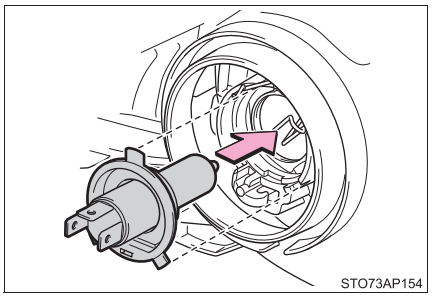

6 Install the bulb retaining spring.

① Lower the bulb retaining spring.

② Push the bulb retaining spring and then engage and fix the hook.

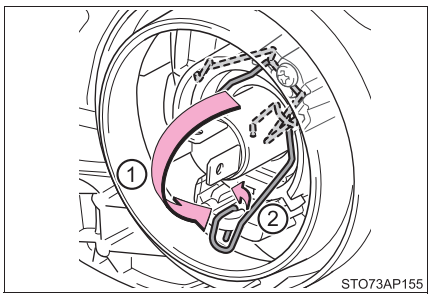


7 Install the rubber cover.


Ensure the rubber cover is securely attached.

① Fit the rubber cover outer circumference in firmly.

② Fit the rubber cover around the light bulb in until the light bulb plug can be seen.

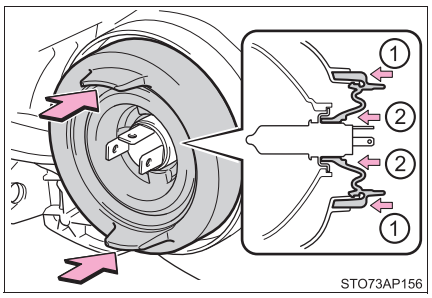


8 Install the connector.

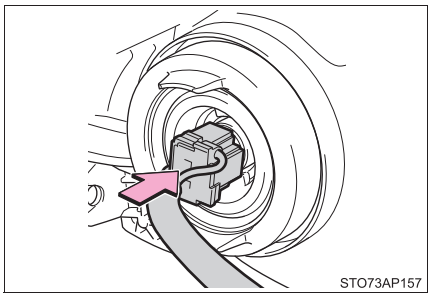


▶ Projector type

1 Turn the bulb base counterclockwise.

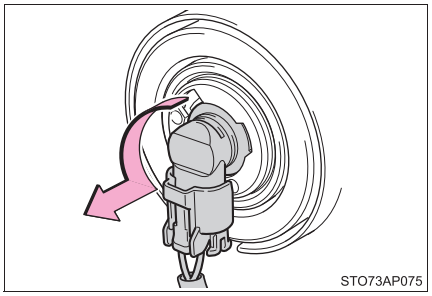


2 Pull the bulb out while pressing the lock release of the connector.

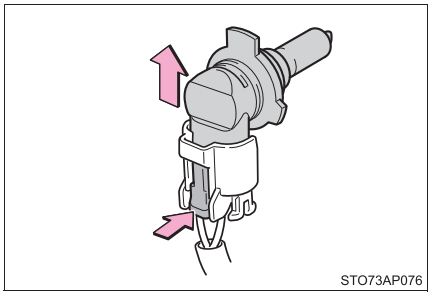


3 Replace the light bulb, plug the connector, and then install the bulb base.

Align the 3 tabs on the light bulb with the mounting and insert.

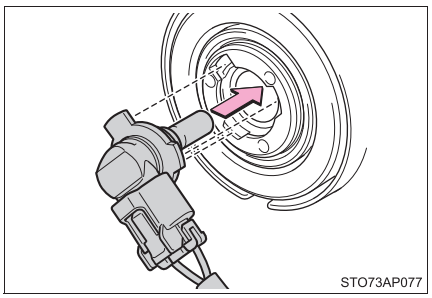

4 Turn and secure the bulb base.


Shake the bulb base gently to check that it is not loose, turn the headlights on once and visually confirm that no light is leaking through the mounting.

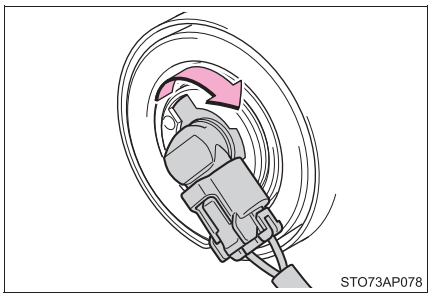


■ Front fog lights (if equipped)

1 Turn the steering wheel in the opposite direction of the light to be replaced.


Turn the steering wheel to a point that allows your hand to easily fit between the tire and fender liner.

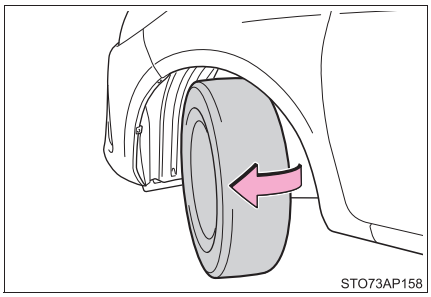


2 Remove the screw.

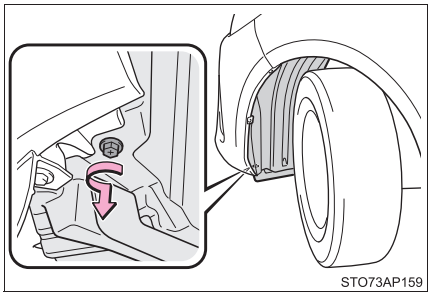


3 Remove the fender liner retainer.

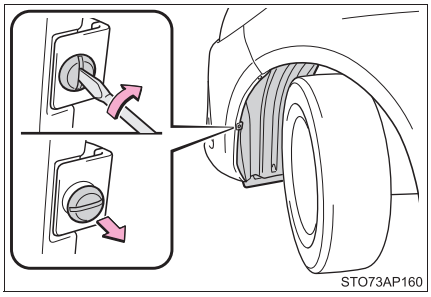


4 Partly remove the fender liner until the bulb is visible.

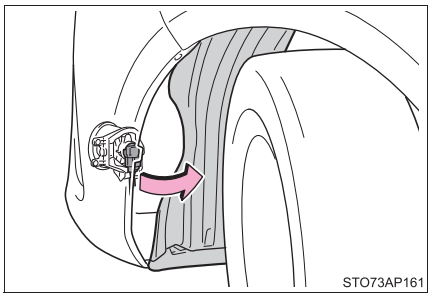

5 Unplug the connector while pressing the lock release.

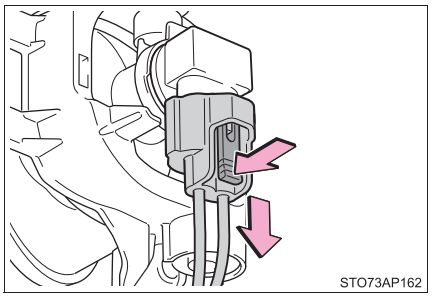


6 Turn the bulb base counter-clockwise.

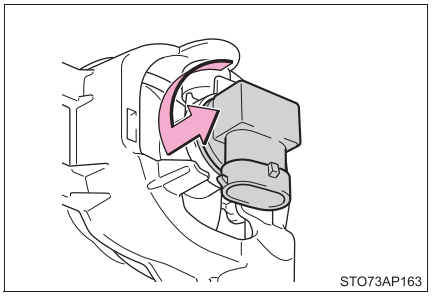


7 Set the new light bulb.

Align the 3 tabs on the light bulb with the mounting, and insert.

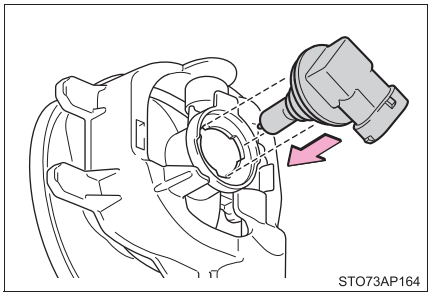


8 Turn and secure the bulb.

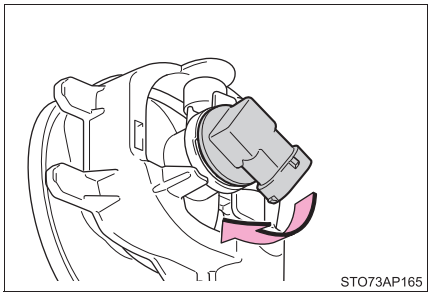


9 Install the connector.

Shake the bulb base gently to check that it is not loose, turn the front fog light, on once and visually confirm that no light is leaking through the mounting.

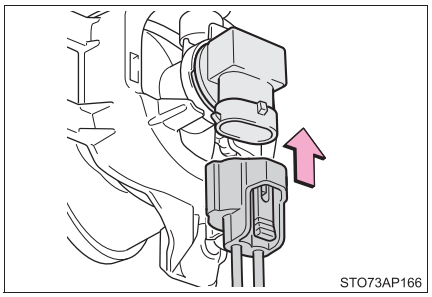


10 Reinstall the fender liner.


Attach the end of the fender liner to the inside of the front bumper.

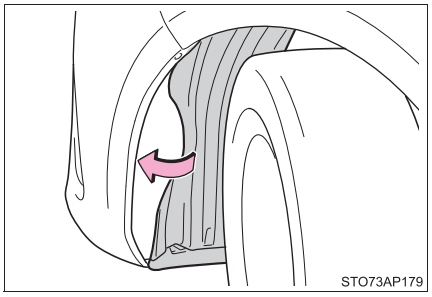

11 Attach the fender liner retainer.

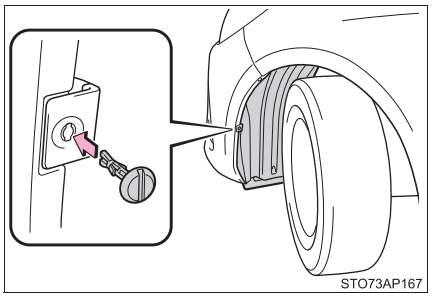


12 Install the screw.

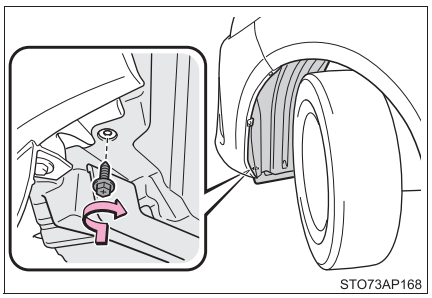


■ **Front position lights/daytime running lights (bulb type)**

1 Turn the bulb base counterclockwise.

▶ Type A

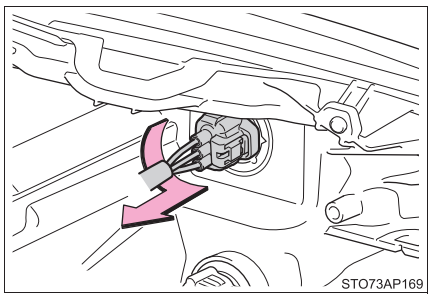


▶ Type B

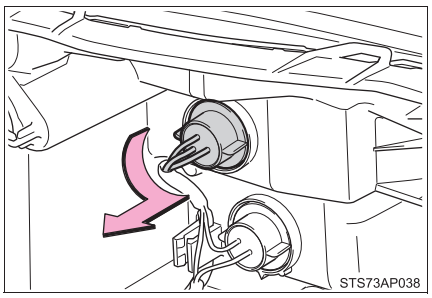


2 Remove light bulb.

▶ Type A

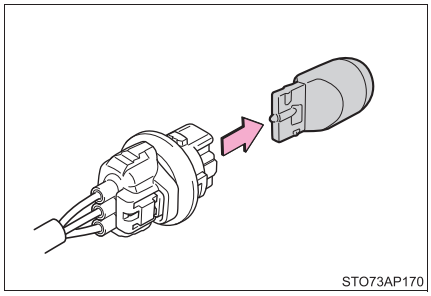

▶ Type B

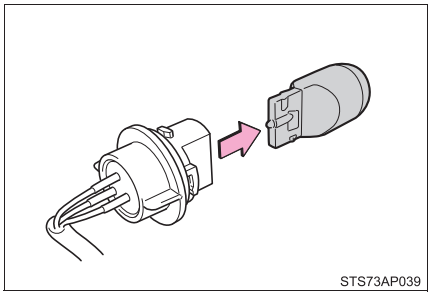


3 When installing, reverse the steps listed.


■ **Front turn signal lights**

1 Turn the bulb base counterclockwise.

▶ Type A

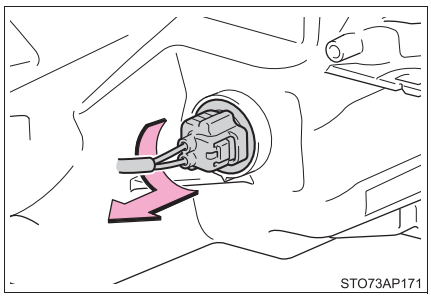


▶ Type B

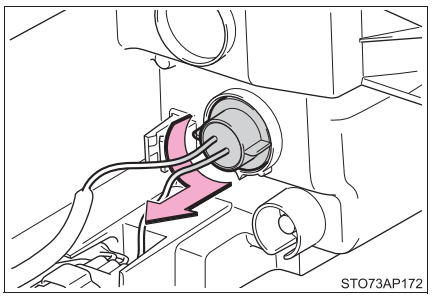


2 Remove the light bulb.

▶ Type A

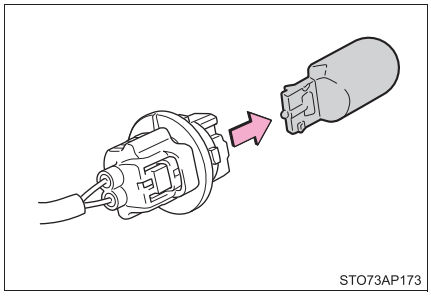


▶ Type B

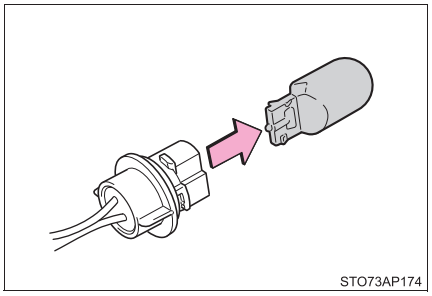

3 When installing, reverse the steps listed.


■ Side turn signal lights

1 Depress the mirror.

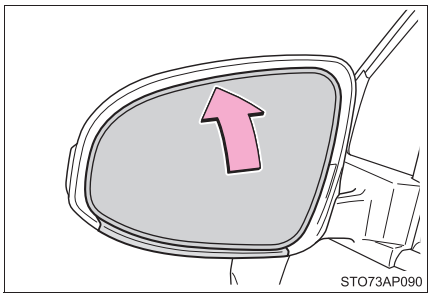


2 Remove the mirror.


To prevent damaging the vehicle, wrap the screwdriver with a tape.

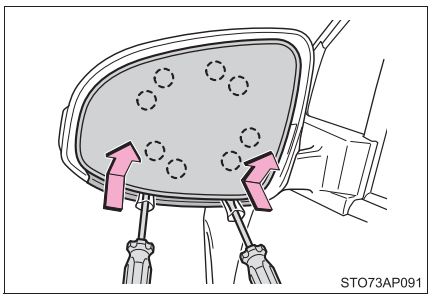


3 Remove the bulb base.

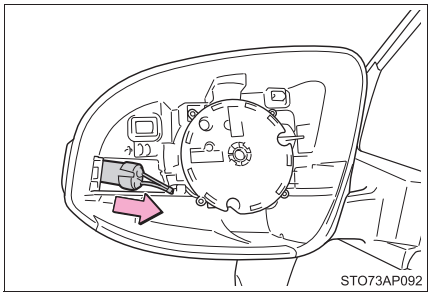

4 Remove the light bulb.

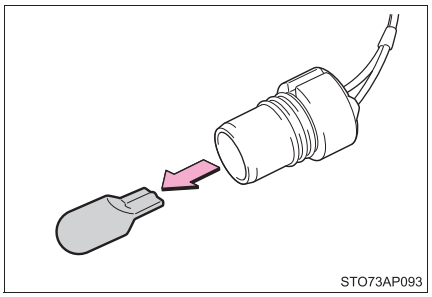


5 After installing the new bulb, secure the bulb base to the mirror body.

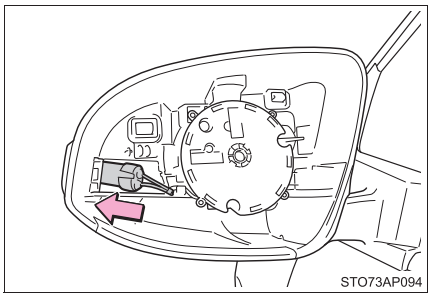

6 Align the tabs, and secure the mirror by pushing in each diagonally-opposite pair of tabs in order.

Make sure to insert the tabs in order as shown in the illustration, and push them in until a click is heard.


If you do not hear the click, do not force the tabs in. Instead, remove the mirror and check that the tabs are aligned.

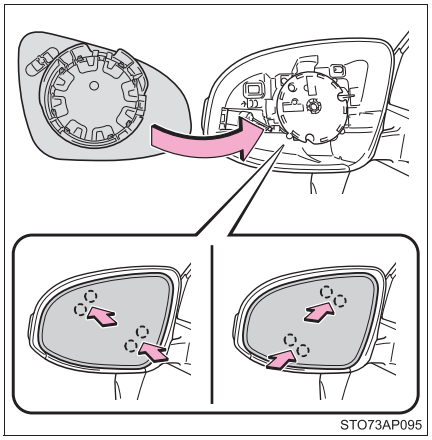

■ Stop/tail lights (bulb type), and rear turn signal lights

1 Open the back door and remove the cover.


To prevent damaging the vehicle, wrap the screwdriver with a tape.

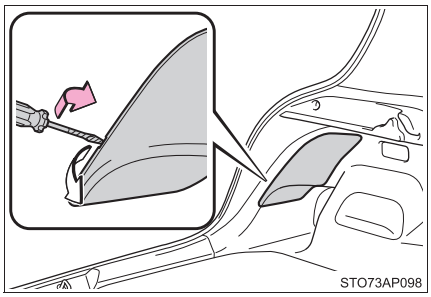

2 Turn the bulb base counterclockwise.

① Rear turn signal light


② Stop/tail light

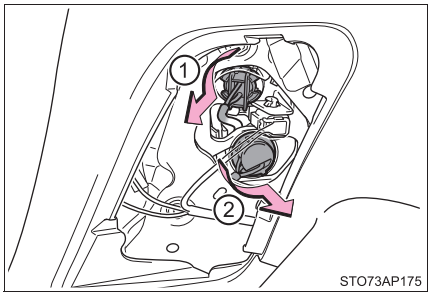

3 Remove the light bulb.

① Rear turn signal light


② Stop/tail light

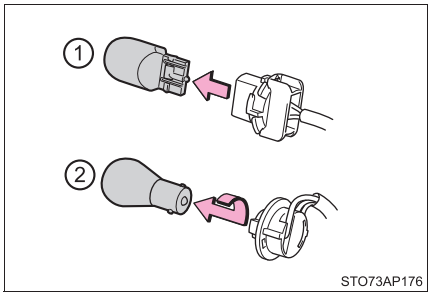

4 Install the new bulb.

① Rear turn signal light


② Stop/tail light

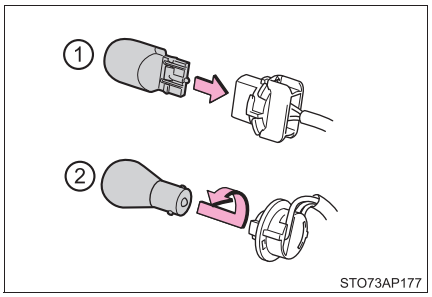

5 Turn and secure the bulb base.

① Rear turn signal light


② Stop/tail light

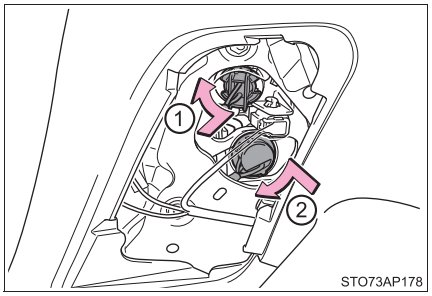

6 Install the cover.

① Align the cover claws with the notches.

② Press the cover until it is fixed.

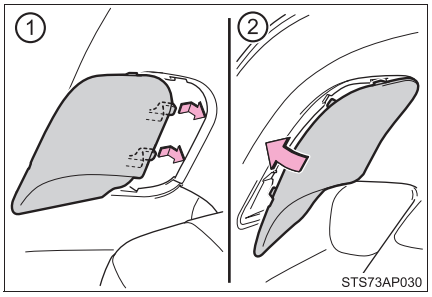


License plate light

1 Remove the lens.


① Insert a small flathead screwdriver, etc., into either the right or left hole of the lens.

② Tilt the screwdriver in the direction of the arrow shown in the illustration so as to release the fitting portion, and then remove the lens.


To prevent damage to the vehicle, wrap the tip of the screwdriver with tape.

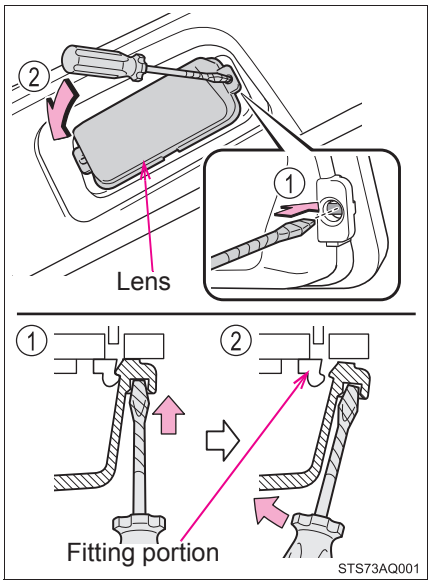

2 Remove the light bulb.

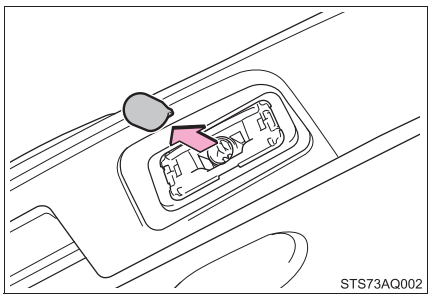

3 Install a new light bulb.

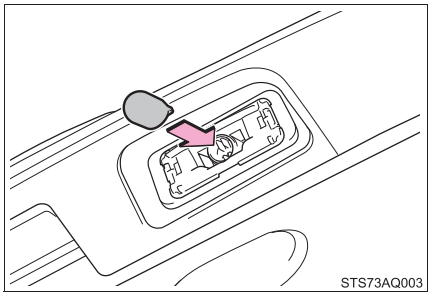


4 Install the lens.

① Fit the lens into either the right or left fitting portion.

② Push the lens into place.

After installation, confirm that the lens is properly installed by gently pulling it.

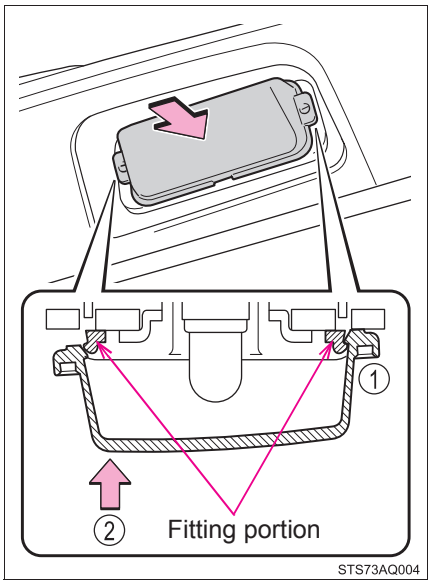


■ Back-up light

1 Open the back door and remove the cover.


Press down on the notch on the cover and remove the cover.

It is recommended for safe-guarding to wrap the tip of the screwdriver with a cloth, etc., in order to prevent scratches to the vehicle.

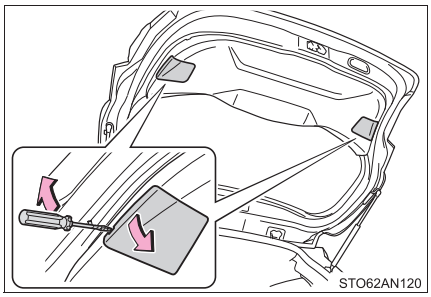

STO62AN120

2 Turn the bulb base counterclockwise.

▶ Type A

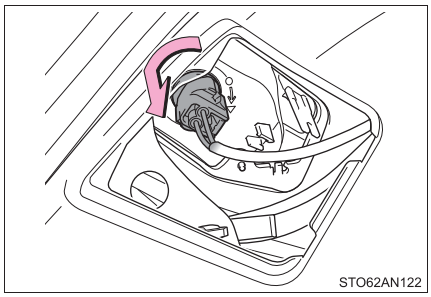

STO62AN122

▶ Type B

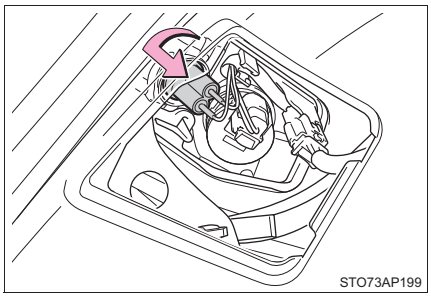

STO73AP199

3 Remove the light bulb.

▶ Type A

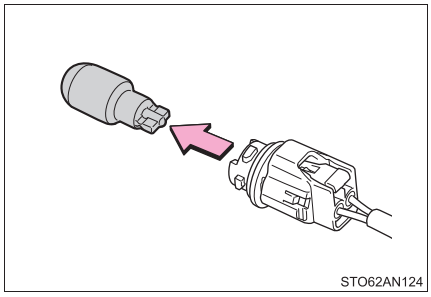

STO62AN124

▶ Type B

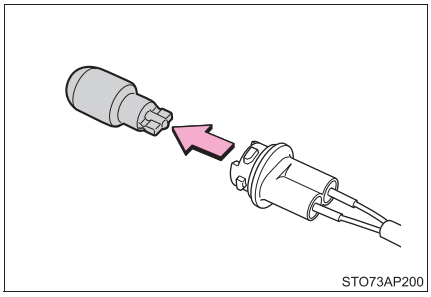

STO73AP200

4 Install a new light bulb.

▶ Type A

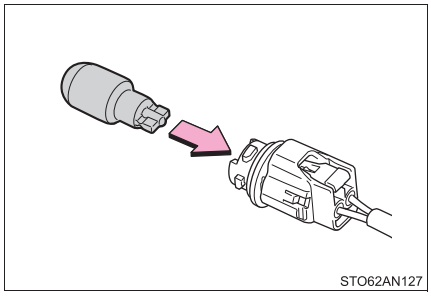


▶ Type B

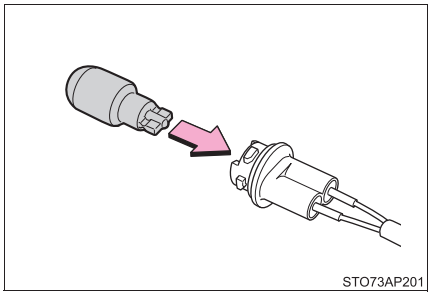


5 Install the bulb base.

▶ Type A

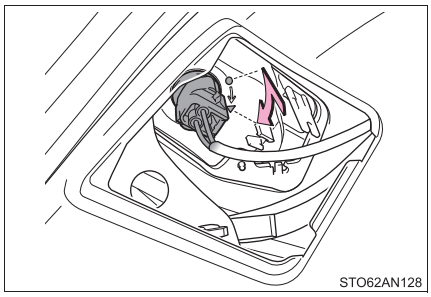


▶ Type B

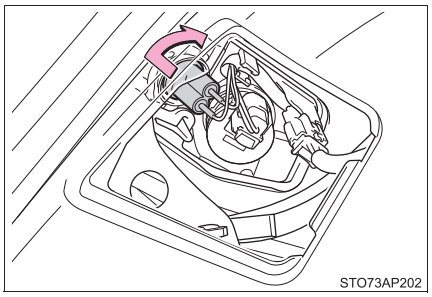

6 Install the back door cover.

Align the cover 2 tabs on the cover and install.

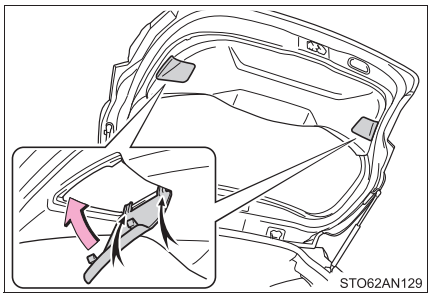

7

Maintenance and care

■ **Replacing the following bulbs**

If any of the lights listed below has burnt out, have it replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- Front position lights and daytime running lights (LED type)
- Stop lights (LED type)
- Tail lights (LED type)
- High mounted stoplight
- Rear fog light

■ **LED Lights**

The front position lights and daytime running lights (LED type), stop lights (LED type), tail lights (LED type), high mounted stoplight and rear fog light consists of a number of LEDs. If any of the LEDs burn out, take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer to have the light replaced.

If one or more LEDs in a stop light burn out, your vehicle may not conform to local laws (ECE).

■ **Condensation build-up on the inside of the lens**

Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for more information in the following situations:

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the headlight.

■ **When replacing light bulbs**

→P. 542

WARNING

■ **Replacing light bulbs**

- Turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights.
  The bulbs become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture and oils on the bulb.
  Also, if the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulbs and any parts used to secure them. Failure to do so may result in heat damage, fire, or water entering the headlight unit. This may damage the headlights or cause condensation to build up on the lens.

■ **To prevent damage or fire**

- Make sure bulbs are fully seated and locked.
- Check the wattage of the bulb before installing to prevent heat damage.

When trouble arises 8

8-1. Essential information

Emergency flashers.....566

If your vehicle has to be stopped in an emergency.....567

8-2. Steps to take in an emergency

If your vehicle needs to be towed.....569

If you think something is wrong.....576

Fuel pump shut off system (gasoline engine only).....577

If a warning light turns on or a warning buzzer sounds.....578

If a warning message is displayed (vehicles with color display).....589

If you have a flat tire (vehicles with an emergency tire puncture repair kit).....594

If you have a flat tire (vehicles with a spare tire).....612

If the engine will not start...627

If the electronic key does not operate properly (vehicles with a smart entry & start system).....629

If the vehicle battery is discharged.....632

If your vehicle overheats....638

If you run out of fuel and the engine stalls (diesel engine only).....643


If the vehicle becomes stuck.....645

Emergency flashers

The emergency flashers are used to warn other drivers when the vehicle has to be stopped in the road due to a breakdown, etc.

Press the switch.

All the turn signal lights will flash. To turn them off, press the switch once again.

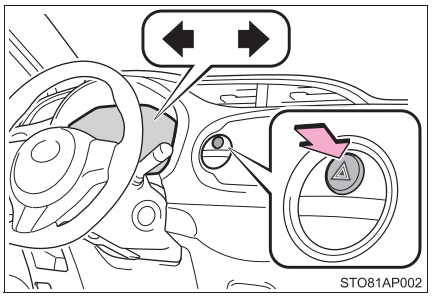

■ **Emergency flashers**

If the emergency flashers are used for a long time while the engine is not operating, the battery may discharge.

If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

1 Steadily step on the brake pedal with both feet and firmly depress it.

Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.

2 Shift the shift lever to N.

▶ If the shift lever is shifted to N


3 After slowing down, stop the vehicle in a safe place by the road.

4 Stop the engine.


▶ If the shift lever cannot be shifted to N

3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

4 Vehicles without a smart entry & start system: Stop the engine by turning the engine switch to the “ACC” position.

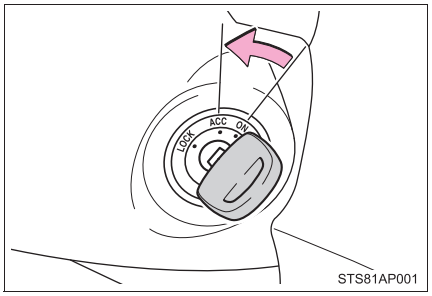

4 Vehicles with a smart entry & start system: To stop the engine, press and hold the engine switch for 3 consecutive seconds or more, or press it briefly 3 times or more in succession.

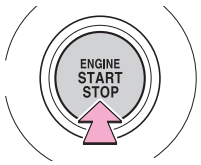

Press and hold for 3 seconds or more, or press briefly 3 times or more

CTY52AD212

5 Stop the vehicle in a safe place by the road.

WARNING

■ If the engine has to be turned off while driving

- Power assist for the brakes and steering wheel will be lost, making the brake pedal harder to depress and the steering wheel heavier to turn. Decelerate as much as possible before turning off the engine.
- Vehicles without a smart entry & start system: Never attempt to remove the key, as doing so will lock the steering wheel.

If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service, using a wheel-lift type truck or flatbed truck.
Use a safety chain system for all towing, and abide by all state/provincial and local laws.


Situations when it is necessary to contact dealers before towing

The following may indicate a problem with your transmission. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service before towing.

- The engine is running but the vehicle does not move.
- The vehicle makes an abnormal sound.


Towing with a sling-type truck

Do not tow with a sling-type truck to prevent body damage.

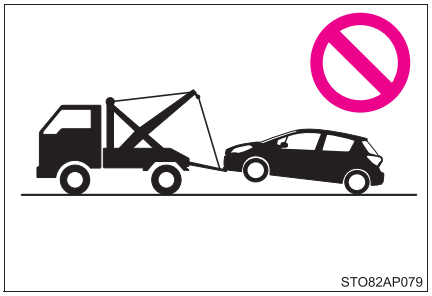
STO82AP079


Towing with a wheel-lift type truck

▶ From the front

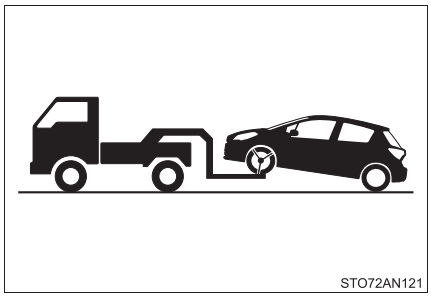

Release the parking brake.

▶ From the rear

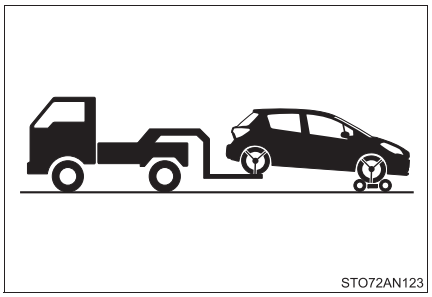


Use a towing dolly under the front wheels.

Using a flatbed truck


If your vehicle is transported by a flatbed truck, it should be tied down at the locations shown in the illustration.

After transporting, return the covers that were attached to the rear side.

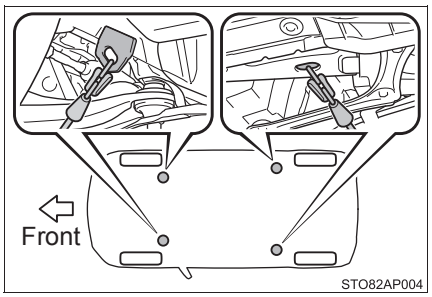

If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tie downs or the vehicle may be damaged.

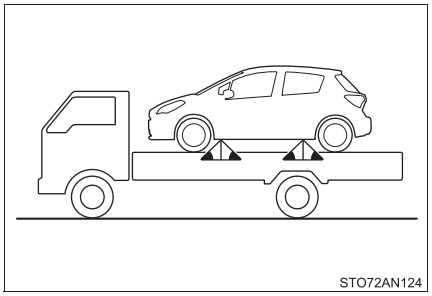

Emergency towing

If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing eyelets. This should only be attempted on hard surfaced roads for at most 80 km (50 miles) at under 30 km/h (18 mph).
A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

For vehicles with a Multidrive, only the front towing eyelets may be used.


Emergency towing procedure

1 Take out the towing eyelet. (→P. 597, 613)

2 Remove the eyelet cover.


▶ Type A

Push down the upper part of the eyelet cover remove the upper claw, and then pull on the eyelet cover to disengage it from the front grille.

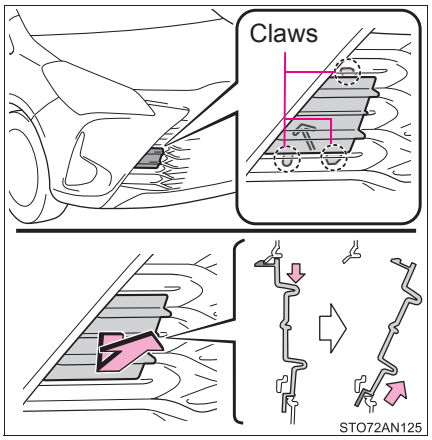


▶ Type B

Turn the eyelet cover.

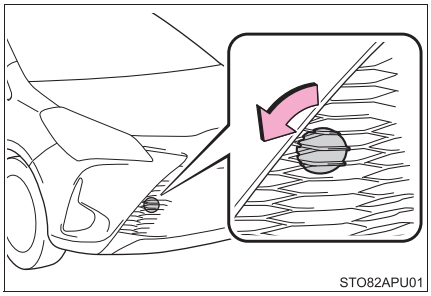

STO82APU01

3 Insert the towing eyelet into the hole and tighten partially by hand.

▶ Type A

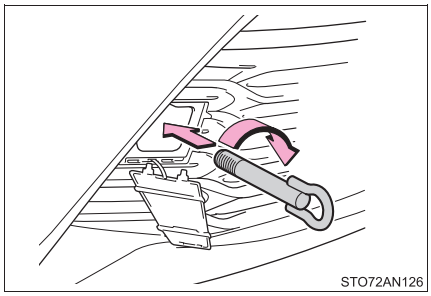
STO72AN126


▶ Type B

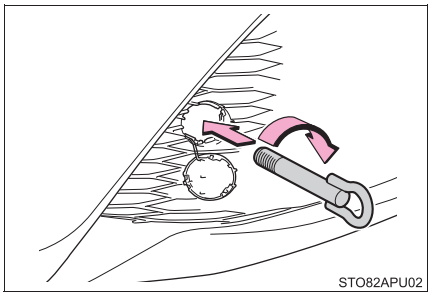
STO82APU02


4 Tighten down the towing eyelet securely using a wheel nut wrench* or hard metal bar.

*: If a wheel nut wrench is not equipped, a wheel nut wrench can be purchased at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

▶ Type A

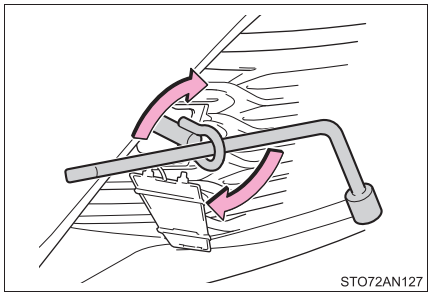
STO72AN127

▶ Type B

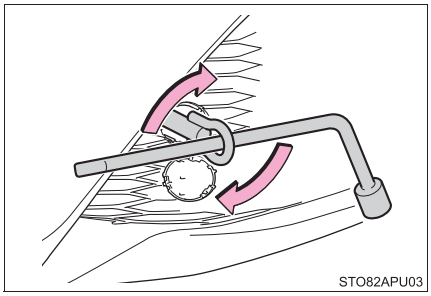
STO82APU03

5 Securely attach cables or chains to the towing eyelet.

Take care not to damage the vehicle body.

6 Vehicles without a smart entry & start system: Enter the vehicle being towed and start the engine.

If the engine does not start, turn the engine switch to the “ON” position.

Vehicles with a smart entry & start system: Enter the vehicle being towed and start the engine.

If the engine does not start, turn the engine switch to IGNITION ON mode.

7 Shift the shift lever to N and release the parking brake.

When the shift lever cannot be shifted: →P. 262

■ While towing

If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.

■ Wheel nut wrench


- Vehicles with a wheel nut wrench: Wheel nut wrench is installed in the luggage. (→P. 597, 613)
- Vehicles without a wheel nut wrench: Wheel nut wrench can be purchased at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

Observe the following precautions.
Failure to do so may result in death or serious injury.

When towing the vehicle

Be sure to transport the vehicle with the front wheels raised or with all four wheels raised off the ground. If the vehicle is towed with the front wheels contacting the ground, the drivetrain and related parts may be damaged.

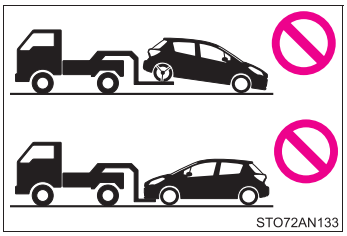
STO72AN133

While towing

- When towing using cables or chains, avoid sudden starts, etc. which place excessive stress on the towing eyelets, cables or chains. The towing eyelets, cables or chains may become damaged, broken debris may hit people, and cause serious damage.
- Vehicles without a smart entry & start system: Do not turn the engine switch to the “LOCK” position.
  There is a possibility that the steering wheel is locked and cannot be operated.
- Vehicles with a smart entry & start system: Do not turn the engine switch off.
  There is a possibility that the steering wheel is locked and cannot be operated.

Installing towing eyelets to the vehicle

Make sure that towing eyelets are installed securely.
If not securely installed, towing eyelets may come loose during towing.

NOTICE

■ **To prevent damage to the vehicle when towing using a wheel-lift type truck**

- Vehicles without a smart entry & start system: Do not tow the vehicle from the rear when the engine switch is in the “LOCK” position or the key is removed.
  The steering lock mechanism is not strong enough to hold the front wheels straight.
- Vehicles with a smart entry & start system: Do not tow the vehicle from the rear when the engine switch is off. The steering lock mechanism is not strong enough to hold the front wheels straight.
- When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

■ **To prevent damage to the vehicle when towing with a sling-type truck**

Do not tow with a sling-type truck, either from the front or rear.

■ **To prevent damage to the vehicle during emergency towing**

Do not secure cables or chains to the suspension components.

If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

Visible symptoms

- Fluid leaks under the vehicle
  (Water dripping from the air conditioning after use is normal)
- Flat-looking tires or uneven tire wear
- Vehicles with monochrome display: High engine coolant temperature warning light flashes or comes on
  Vehicles with color display: Engine coolant temperature gauge needle continually points higher than normal
- Low engine coolant temperature indicator comes on or does not come on continuously

Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the engine

Operational symptoms

- Engine misfire, stumbling or running roughly
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

Fuel pump shut off system (gasoline engine only)

To minimize the risk of fuel leakage when the engine stalls or when an airbag inflates upon collision, the fuel pump shut off system stops the supply of fuel to the engine.

Follow the procedure below to restart the engine after the system is activated.

▶ Vehicles without a smart entry & start system

1 Turn the engine switch to the “ACC” or “LOCK” position.

2 Restart the engine.

▶ Vehicles with a smart entry & start system

1 Turn the engine switch to ACCESSORY mode or turn it off.

2 Restart the engine.

⚠ NOTICE

■ **Before starting the engine**

Inspect the ground under the vehicle.
If you find that fuel has leaked onto the ground, the fuel system has been damaged and is in need of repair. Do not restart the engine.

If a warning light turns on or a warning buzzer sounds

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Warning light and warning buzzer list

Warning light	Warning light/Details/Actions
*1 	**Brake system warning light (warning buzzer)** • Low brake fluid • Malfunction in the brake system This light also comes on when the parking brake is not released. If the light turns off after the parking brake is fully released, the system is operating normally. → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.**
*4  *5 	**Charging system warning light** Indicates a malfunction in the vehicle's charging system. → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**
*4  *5 	**Low engine oil pressure warning light** Indicates that the engine oil pressure is too low. → **Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**

Warning light	Warning light/Details/Actions
*4  (Red warning light flashes or comes on) *5 	**High engine coolant temperature warning light** Indicates that the engine is overheating. As the coolant temperature rises, it changes from flashing to steady on. → **P. 638**
	**Malfunction indicator lamp** Indicates a malfunction in: • The electronic engine control system; • The electronic throttle control system; • The electronic Multidrive control system (if equipped); or • The emission control system. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
	**SRS warning light** Indicates a malfunction in: • The SRS airbag system; or • The seat belt pretensioner system. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
	**ABS warning light** Indicates a malfunction in: • The ABS; or • The brake assist system. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
	**Electric power steering system warning light (warning buzzer)** Indicates a malfunction in the EPS (Electric Power Steering) system. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**

Warning light	Warning light/Details/Actions
	**PCS warning light (if equipped)** When the warning light flashes (and a buzzer sounds): Indicates a malfunction in the PCS (Pre-Crash Safety system) → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.** When the warning light illuminates: Indicates that the PCS (Pre-Crash Safety system) is temporarily unavailable, possibly due to either of the following: • The part of the windshield around the front sensor being dirty, fogged up or covered with condensation, ice, stickers, etc. → **Clear the dirt, fog, condensation, ice, stickers, etc. (→P. 292)** • Front sensor temperature being outside of its operational range → **Wait for a while until the area around the front sensor has cooled down sufficiently.** • Either the VSC system or PCS (Pre-Crash Safety system) is disabled or both are disabled. → **To enable the PCS, enable both the VSC system and PCS. (→P. 299, 352)**
	**Slip indicator (if equipped)** Indicates a malfunction in: • The VSC system; • The TRC system; or • The hill-start assist control. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**

Warning light	Warning light/Details/Actions
*4  (Yellow)	**Automatic High Beam indicator (if equipped)** Indicates a malfunction in the Automatic High Beam system. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
*4  (Yellow)	**Cruise control indicator (if equipped)** Indicates a malfunction in the cruise control system. → **P. 333**
*4  (Yellow) *4  (Yellow)	**LDA indicator and Lane marker indicators (if equipped)** Indicates a malfunction in the LDA system. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
*4  (Yellow)	**Speed limiter indicator (if equipped)** Indicates a malfunction in the speed limiter system. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
 (Flashes)	**Stop & Start cancel indicator (if equipped)** Indicates a malfunction in the Stop & Start system. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.**
*4 	**Fuel filter warning light (diesel engine only)** Indicate that the amount of accumulated water in the fuel filter has reached the specified level. → **P. 504**
*4  (Flashes in yellow for 15 seconds.)	**Smart entry & start system indicator (if equipped)** Indicates a malfunction in the smart entry & start system. → **Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**

Warning light	Warning light/Details/Actions
*2, 4 	**Open door warning light (warning buzzer)** Indicates that one or more of the doors is not fully closed. → **Check that all the side doors and back door are closed.**
	**Low fuel level warning light** Gasoline engine: Indicates that remaining fuel is about 5.8 L (1.5 gal., 1.3 Imp.gal.) or less. Diesel engine: Indicates that remaining fuel is about 6.4 L (1.7 gal., 1.4 Imp.gal.) or less. → **Refuel the vehicle.**
*3 	**Driver's and front passenger's seat belt reminder light (warning buzzer)** Warns the driver and front passenger to fasten their seat belts. → **Fasten the seat belt.** **If the passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) turn off.**
*3  (On the center panel)	**Rear passenger's seat belt reminder lights (warning buzzer) (if equipped)** Warns the rear passenger's to fasten their seat belts. → **Fasten the seat belt.**
	**Tire pressure warning light (if equipped)** When the light comes on: Low tire inflation pressure such as • Natural causes (→P. 585) • Flat tire (→P. 594, 612) → **Adjust the tire inflation pressure to the specified level.** **The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.** When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system. (→P. 585) → **Have the system checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**

Warning light	Warning light/Details/Actions
*5 	**Master warning light** A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction. **→ P. 589**
*4 	**Low engine oil level warning light (diesel engine only)** Indicates that engine oil level is low. **→ Check the level of engine oil, and add if necessary.**
*4 	**Engine oil change reminder light (diesel engine only)** When the light flashes: Indicates that the engine oil is scheduled to be changed. Flashes approximately 14500 km (9000 miles) after the engine oil is changed. (→P. 584) (The indicator will not work properly unless the oil maintenance data has been reset). **→ Check the engine oil, and change if necessary. After changing the engine oil, the oil change system should be reset. (→P. 495)** When the light comes on: Indicates that the engine oil should be changed. Comes on approximately 15000 km (9300 miles) after the engine oil is changed (and the oil maintenance data has been reset). **→ Check and change the engine oil, and oil filter by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. After changing the engine oil, the oil change system should be reset. (→P. 495)**

*1: Parking brake engaged warning buzzer:
The buzzer sounds to indicate that the parking brake is still engaged (with the vehicle having reached a speed of 5 km/h [3 mph]).

*2: Open door warning buzzer:
A buzzer will sound if the vehicle reaches a speed of 5 km/h (3 mph) or more with any door open.

*3: Driver's and passenger's seat belt buzzer:
The driver's and passenger's seat belt buzzer sounds to alert the driver and passenger that his or her seat belt is not fastened. The buzzer sounds for 30 seconds after the vehicle reaches a speed of at least 20 km/h (12 mph). Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 90 more seconds.

*4: Vehicles with monochrome display.

*5: Vehicles with color display.

■ **Passenger detection sensor and passenger seat belt reminder**

- If luggage is placed on a passenger seat, the passenger detection sensor may cause the warning light to flash even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

■ **Warning light operations for unfastened rear passenger seat belts**

- When opening and closing the rear door, the warning light comes on for approximately 34 seconds.
- When any of the rear seat belts are unfastened, the warning light comes on. When the rear doors are opened and closed while the warning light is on, the warning light will turn off after approximately 34 seconds.

■ **If the malfunction indicator lamp comes on while driving**

For some models, the malfunction indicator lamp will come on if the fuel tank becomes completely empty. If the fuel tank is empty, refuel the vehicle immediately. The malfunction indicator lamp will go off after several trips.

If the malfunction indicator lamp does not go off, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

■ **Warning buzzer**

In some cases, the buzzer may not be heard because of noisy place or an audio sound.

■ **Electric power steering system warning light (warning buzzer)**

When the battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on and the warning buzzer may sounds.

■ **Engine oil change reminder light comes on (diesel engine only)**

Replace the engine oil and oil filter when the engine oil change reminder light does not come on even if you have driven over 40000 km (25000 miles) after the engine oil was changed.

There is a possibility that the engine oil change reminder light has been illuminated when you have driven less than 40000 km (25000 miles) based on a usage or driving condition.

■ **When the tire pressure warning light comes on (vehicles with a tire pressure warning system)**

Inspect the appearance of the tire to check that the tire is not punctured.

If the tire is punctured: →P. 594, 612

If the tire is not punctured:
Carry out the following procedure after the tire temperature has lowered sufficiently.

- Check the tire inflation pressure and adjust to the appropriate level.
- If the warning light does not go out even after several minutes, check that the tire inflation pressure is at the specified level and carry out initialization.

The warning light may come on again if the above operations are conducted without first allowing the tire temperature to lower sufficiently.

■ **The tire pressure warning light may come on due to natural causes (vehicles with a tire pressure warning system)**

The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

■ **When a tire is replaced with a spare tire (include compact spare tire) (vehicles with a tire pressure warning system)**

The spare tire (include compact spare tire) is not equipped with a tire pressure warning valve and transmitter. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire. Replace the spare tire with the repaired tire and adjust the tire inflation pressure. The tire pressure warning light will go off after a few minutes.

■ **Conditions that the tire pressure warning system may not function properly (vehicles with tire pressure warning system)**

→P. 510

■ **If the tire pressure warning light frequently comes on after blinking for 1 minute (vehicles with a tire pressure warning system)**

If the tire pressure warning light frequently comes on after blinking for 1 minute when the engine switch is turned on, have it checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ **If both the ABS and the brake system warning lights remain on**

Stop your vehicle in a safe place immediately and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

■ **When the electric power steering system warning light comes on**

The steering wheel may become extremely heavy.
If the steering wheel becomes heavier than usual when operating, hold firmly and operate using more force than usual.

■ **If the tire pressure warning light comes on (vehicles with a tire pressure warning system)**

Be sure to observe the following precautions. Failure to do so could cause a loss of vehicle control and result in death or serious injury.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
- Vehicles with spare tire: If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, change it with the spare tire and have the flat tire repaired by the nearest authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Vehicles with emergency tire puncture repair kit: If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, repair the flat tire by using emergency tire puncture repair kit. (→P. 594)
- Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

■ **If a blowout or sudden air leakage should occur (vehicles with a tire pressure warning system)**

The tire pressure warning system may not activate immediately.

NOTICE

■ **If the fuel filter warning light comes on (diesel engine only)**

Never drive the vehicle with the warning light on. Continued driving with water accumulated in the fuel filter will damage the fuel injection pump.

■ **To ensure the tire pressure warning system operates properly (vehicles with a tire pressure warning system)**

Do not install tires with different specifications or makers, as the tire pressure warning system may not operate properly.

Follow the correction procedures (vehicles with a smart entry & start system and with monochrome display).

After taking the specified steps to correct the suspected problem, check that the warning light goes off.

Interior buzzer	Exterior buzzer	Warning light	Warning light/Details/Actions
Continuous	Continuous	 (Flashes in yellow)	**Smart entry & start system indicator (Multidrive)** The electronic key was carried outside the vehicle and the driver's door was opened and closed while any shift position other than P was selected without turning off the engine switch. → **Change the shift position to P.** → **Bring the electronic key back into the vehicle.**
Once	3 times	 (Flashes in yellow)	**Smart entry & start system indicator** Vehicles with a Multidrive: The electronic key was carried outside the vehicle and the driver's door was opened and closed while the shift position P was selected without turning off the engine switch. Vehicles with a manual transmission: The electronic key was carried outside the vehicle and a door other than the driver's door was opened and closed while the engine switch was in a mode other than off. → **Turn the engine switch off or bring the electronic key back into the vehicle.**
Once	3 times	 (Flashes in yellow)	**Smart entry & start system indicator** Indicates that a door other than the driver's door has been opened and closed with the engine switch in any mode other than off and the electronic key outside of the detection area. → **Confirm the location of the electronic key.**

Interior buzzer	Exterior buzzer	Warning light	Warning light/Details/Actions
Once	Continuous (5 seconds)	 (Flashes in yellow)	**Smart entry & start system indicator** An attempt was made to exit the vehicle with the electronic key and lock the doors without first turning the engine switch off. **→ Turn the engine switch off and lock the doors again.**
Once	—	 (Flashes in yellow for 15 seconds.)	**Smart entry & start system indicator** Indicates that the electronic key is not present when attempting to start the engine. **→ Confirm the location of the electronic key.**
9 times	—	 (Flashes in yellow)	**Smart entry & start system indicator** An attempt was made to drive when the regular key was not inside the vehicle. **→ Confirm that the electronic key is inside the vehicle.**
Once	—	 (Flashes in yellow for 15 seconds.)	**Smart entry & start system indicator** Indicates that the electronic key battery is low. **→ Replace the battery. (→P. 534)**
Once	—	 (Flashes quickly in green for 15 seconds.)	**Smart entry & start system indicator** Indicates that the steering lock has not been released. **→ Release the steering lock. (→P. 254)**
Once	—	 (Flashes in yellow for 30 seconds.)	**Smart entry & start system indicator** • When the doors were unlocked with the mechanical key and then the engine switch was pressed, the electronic key could not be detected in the vehicle. • The electronic key could not be detected in the vehicle even after the engine switch was pressed two consecutive times. **→ Vehicles with a Multidrive:** **Touch the electronic key to the engine switch while depressing the brake pedal.** **→ Vehicles with a manual transmission:** **Touch the electronic key to the engine switch while depressing the clutch pedal.**


If a warning message is displayed (vehicles with color display)

The multi-information display shows warnings of system malfunctions, incorrectly performed operations, and messages that indicate a need for maintenance. When a message is shown, perform the correction procedure appropriate to the message.

① Master warning light

The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the multi-information display*.

② Multi-information display

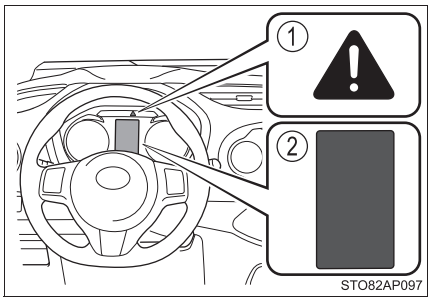

If any of the warning messages are shown again after the following actions have been performed, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

*: The master warning light may not come on or flash when a warning message is displayed.

Messages and warnings

The warning lights and warning buzzers operate as follows depending on the content of the message. If a message indicates the need for inspection by a dealer, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

	System warning light	Warning buzzer*	Warning
Comes on	—	Sounds	Indicates an important situation, such as when a system related to driving is malfunctioning or that danger may result if the correction procedure is not performed
—	Comes on or flashes	Sounds	Indicates an important situation, such as when the systems shown on the multi-information display may be malfunctioning
Flashes	—	Sounds	Indicates a situation, such as when damage to the vehicle or danger may result
Comes on	—	Does not sound	Indicates a condition, such as malfunction of electrical components, their condition, or indicates the need for maintenance
Flashes	—	Does not sound	Indicates a situation, such as when an operation has been performed incorrectly, or indicates how to perform an operation correctly

*: A buzzer sounds the first time a message is shown on the multi-information display.

■ **Warning messages**

The warning messages explained below may differ from the actual messages according to operation conditions and vehicle specifications.

■ **If “Visit your dealer” is shown**

The system or part shown on the multi-information display is malfunctioning.

Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **If a message about an operation is shown**

● If a message about an operation of the engine switch is shown

An instruction for operation of the engine switch is shown when the incorrect procedure for starting the engine is performed or the engine switch is operated incorrectly. Follow the instructions shown on the multi-information display to operate the engine switch again.

● If a message about a shift lever operation is shown

To prevent the shift lever from being operated incorrectly or the vehicle from moving unexpectedly, a message that requires shifting the shift lever may be shown on the multi-information display. In that case, follow the instruction of the message and shift the shift lever.

● If a message or image about an open/close state of a part or replenishment of a consumable is shown

Confirm the part indicated by the multi-information display or a warning light, and then perform the coping method such as closing the open door or replenishing a consumable.

■ **If “Charging system malfunction. Stop in a safe place. See owner's manual.” is shown**

Indicates a malfunction in the vehicle’s charging system. Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.

■ **If “Engine oil pressure low” is shown**

Indicates that the engine oil pressure is too low. Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **If “Drain water from fuel filter.” is displayed (diesel engine)**

Indicates that the amount of water that has accumulated in the fuel filter has reached a specified level.

→P. 504

■ **If “Engine oil low” is shown**

Indicates that the engine oil level may be low. Check the engine oil level and add oil if necessary.

■ **If “Oil maintenance required soon” is shown**

Indicates that the engine oil is scheduled to be changed. (The indicator will not work properly unless the message has been reset.)

Check the engine oil, and change if necessary. After changing the engine oil, the message should be reset. (→P. 495)

■ **If “Oil maintenance required.” is shown**

Indicates that the engine oil should be changed. (After the engine oil is changed and the message has been reset.)

Check and change the engine oil, and oil filter by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. After changing the engine oil, the message should be reset. (→P. 495)

■ **If “Front camera unavailable.” or “Front camera vision blocked. Clean and demist windshield.” is displayed.**

The following systems may be suspended until the problem shown in the message is resolved.

- PCS (Pre-Crash Safety system)*
- LDA (Lane Departure Alert)*
- Automatic High Beam*
- RSA (Road Sign Assist)*

*: If equipped

■ **Engine oil change reminder message comes on (diesel engine)**

Replace the engine oil filter when the engine oil change reminder message does not come on even if you have driven over 40000 km (25000 miles) after the engine oil was changed.

There is a possibility that the “Oil maintenance required.” message has been displayed when you have driven less than 40000 km (25000 miles) based on a usage or driving condition.

■ **Warning buzzer**

→P. 584

NOTICE

■ **If the fuel filter warning message comes on (diesel engine)**

Never drive the vehicle with the warning message is shown. Continued driving with water accumulated in the fuel filter will damage the fuel injection pump.

If you have a flat tire (vehicles with an emergency tire puncture repair kit)

Your vehicle is not equipped with a spare tire, but instead is equipped with an emergency tire puncture repair kit.

A puncture caused by a nail or screw passing through the tire tread can be repaired temporarily using the emergency tire puncture repair kit. (The kit contains a bottle of sealant. The sealant can be used only once to temporarily repair one tire without removing the nail or screw from the tire.) Depending on the damage, this kit cannot be used to repair the tire. (→P. 596)

After temporarily repairing the tire with the kit, have the tire repaired or replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Repairs conducted using the emergency tire puncture repair kit are only a temporary measure. Have the tire repaired and replaced as soon as possible.

⚠ WARNING


■ **If you have a flat tire**

Do not continue driving with a flat tire.
Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

Before repairing the tire

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P (Multidrive) or N (manual transmission).
- Stop the engine.
- Turn on the emergency flashers. (→P. 566)
- Check the degree of the tire damage.

A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a nail or screw passing through the tire tread.

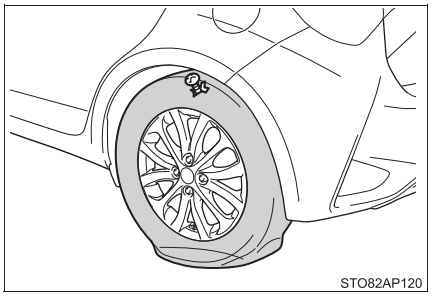
STO82AP120


- Do not remove the nail or screw from the tire. Removing the object may widen the opening and disenable emergency repair with the kit.
- To avoid sealant leakage, move the vehicle until the area of the puncture, if known, is positioned at the top of the tire.

■ **A flat tire that cannot be repaired with the emergency tire puncture repair kit**

In the following cases, the tire cannot be repaired with the emergency tire puncture repair kit. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When the tire is damaged due to driving without sufficient air pressure
- When there are any cracks or damage at any location on the tire, such as on the side wall, except the tread
- When the tire is visibly separated from the wheel
- When the cut or damage to the tread is 4 mm (0.16 in.) long or more
- When the wheel is damaged
- When two or more tires have been punctured
- When more than 2 sharp objects such as nails or screws have passed through the tread on a single tire
- When the sealant has expired


Location of the emergency tire puncture repair kit

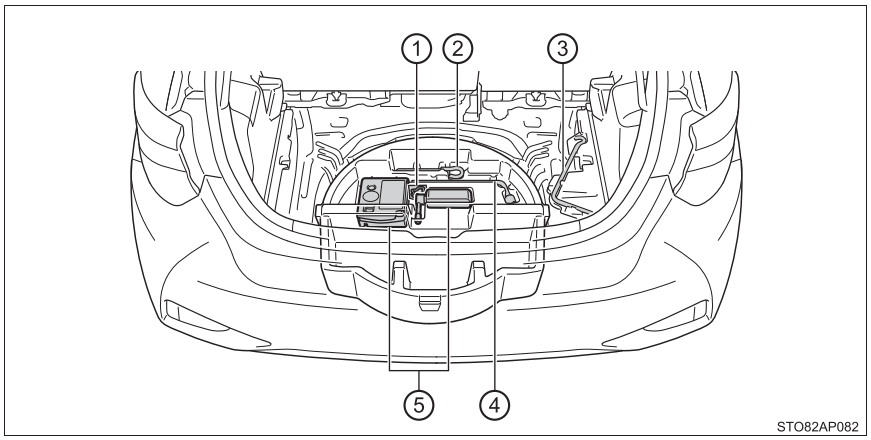

① Wheel cap clip (if equipped)
② Towing eyelet
③ Jack handle*
④ Wheel nut wrench*
⑤ Emergency tire puncture repair kit

*: Use of the jack, jack handle and wheel nut wrench. (if equipped) (→P. 613)
A jack, jack handle and wheel nut wrench can be purchased at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Emergency tire puncture repair kit components

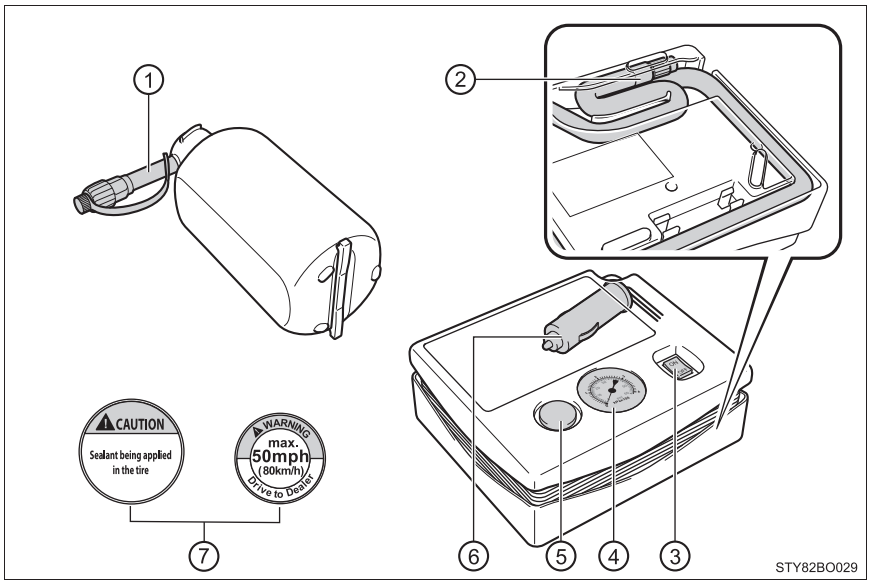


① Nozzle
② Hose
③ Compressor switch
④ Air pressure gauge
⑤ Pressure release button
⑥ Power plug
⑦ Stickers


Taking out the emergency tire puncture repair kit

1 Vehicles with a deck board: Lift the deck board and pull it toward you to remove it. (→P. 462)

2 Remove the luggage floor cover.

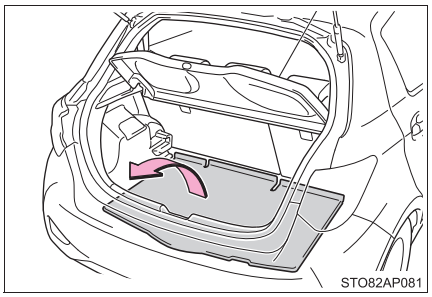

3 Take out the emergency tire puncture repair kit.

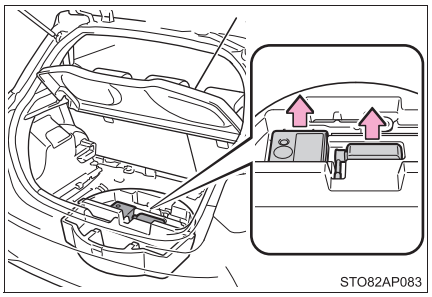


Emergency repair method

1 Take out the repair kit from the tool box.


When taking out the bottle from the original bag, do not tear or discard the bag.

2 Attach the 2 stickers as shown.


Remove any dirt and moisture from the wheel before attaching the label. If it is impossible to attach the label, make sure to tell any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer when you have them repair and replace the tire that sealant is injected.

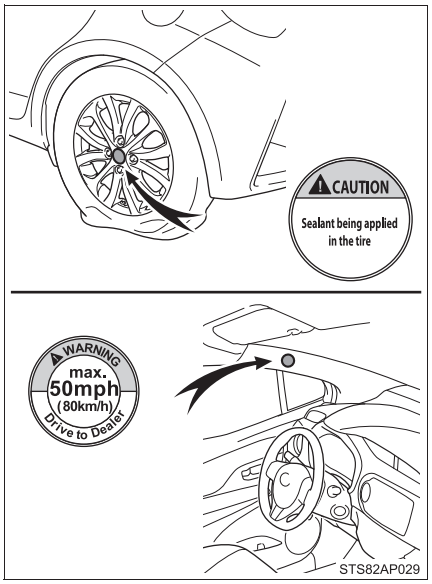

3 Remove the valve cap from the valve of the punctured tire.

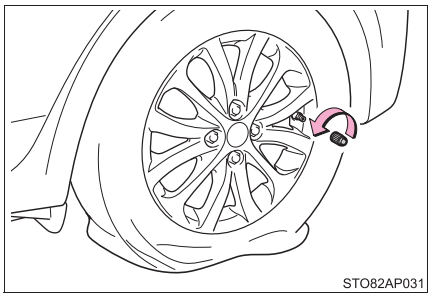


4 Remove the cap from the nozzle.

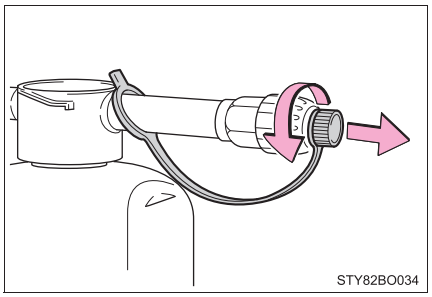


5 Connect the nozzle to the valve.

Screw the end of the nozzle clockwise as far as possible.


The bottle should hang vertically without contacting the ground. If the bottle does not hang vertically, move the vehicle so that the tire valve is located properly.

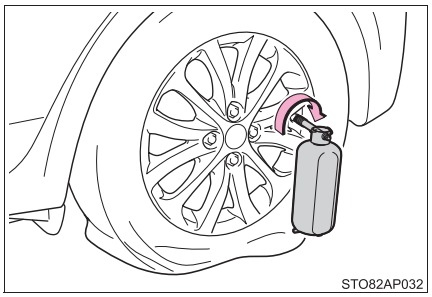
STO82AP032

6 Remove the cap from the bottle.

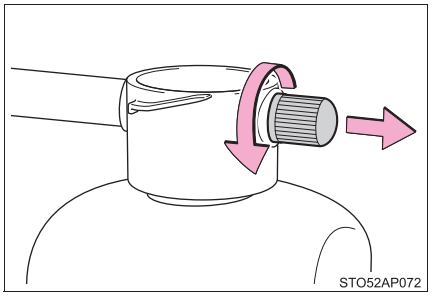

STO52AP072

7 Pull the hose out from the compressor.

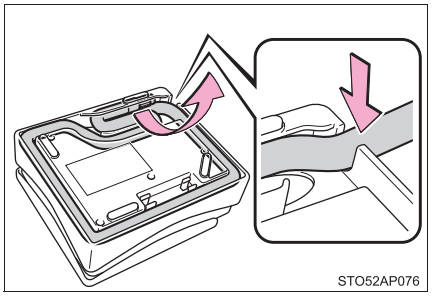

STO52AP076

8 Connect the bottle to the compressor.


Screw the end of the hose clockwise as far as possible.

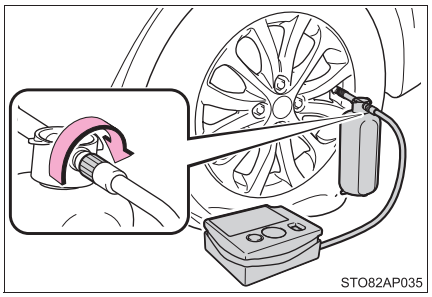
STO82AP035


9 Make sure that the compressor switch is off.

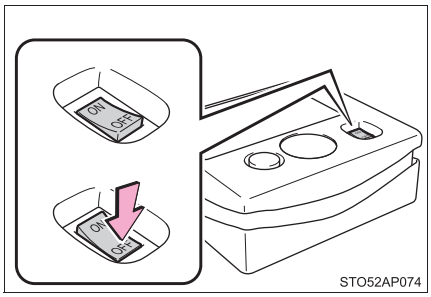

10 Remove the power plug from the compressor.

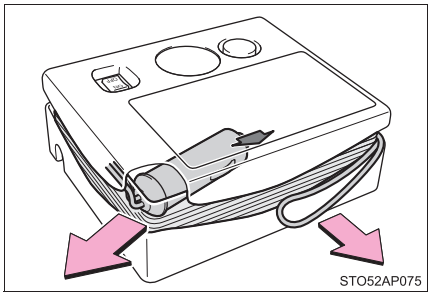


11 Connect the power plug to the power outlet socket or cigarette lighter socket. (→P. 467, 468)

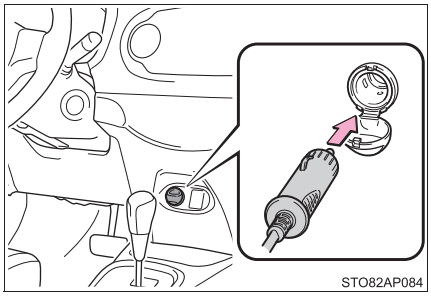


12 Check the specified tire inflation pressure.

Tire inflation pressure is specified on the label in the glove box. (→P. 665)

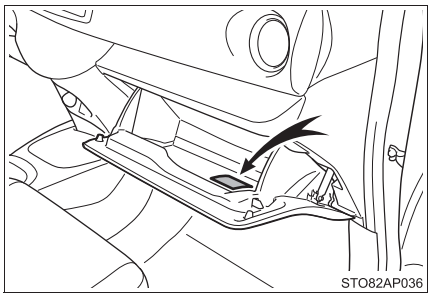

13 Start the engine.

14 To inject the sealant and inflate the tire, turn the compressor switch on.

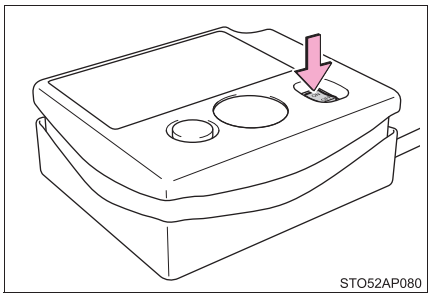

STO52AP080

15 Inflate the tire until the specified air pressure is reached.

① The sealant will be injected and the pressure will surge and then gradually decrease.

② The air pressure gauge will display the actual tire inflation pressure about 1 minute (5 minutes at low temperature) after the switch is turned on.


③ Inflate the tire until the specified air pressure.

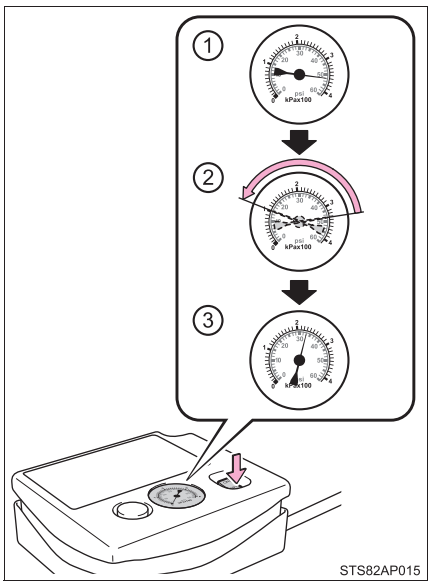

STS82AP015

- If the tire inflation pressure is still lower than the specified point after inflation for 35 minutes with the switch on, the tire is too damaged to be repaired. Turn the compressor switch off and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- If the tire inflation pressure exceeds the specified air pressure, let out some air to adjust the tire inflation pressure. (→P. 606, 665)


16 Turn the compressor off

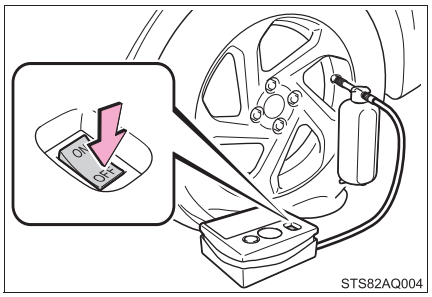


17 Disconnect the nozzle from the valve on the tire and then pull out the power plug from the power outlet socket or cigarette lighter.

Some sealant may leak when the nozzle is removed.

18 Press the button to release pressure from the bottle.

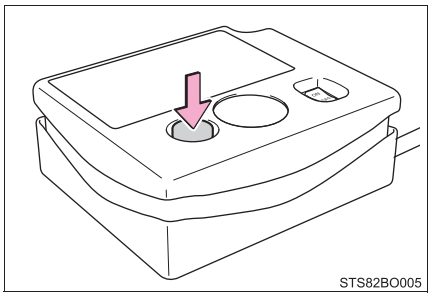


19 Attach the cap to the nozzle.

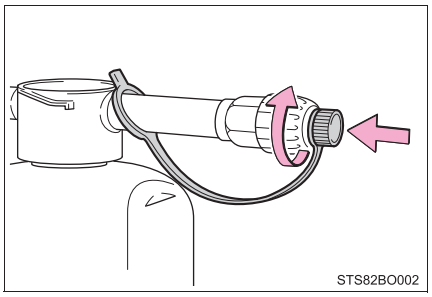

20 Install the valve cap onto the valve of the emergency repaired tire.

21 Disconnect the hose from the bottle and attach the cap to the bottle.


Place the bottle in the original bag and zip it.

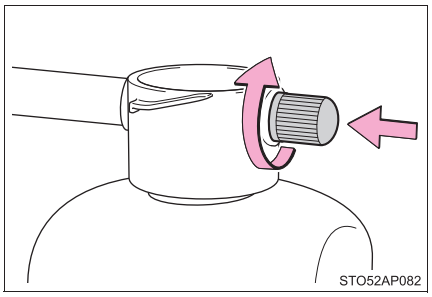


22 Temporarily store the bottle and compressor in the luggage compartment.

23 To spread the liquid sealant evenly within the tire, immediately drive safely for about 5 km (3 miles) below 80 km/h (50 mph).

24 After driving for about 5 km (3 miles), stop your vehicle in a safe place on a hard, flat surface and connect the compressor.

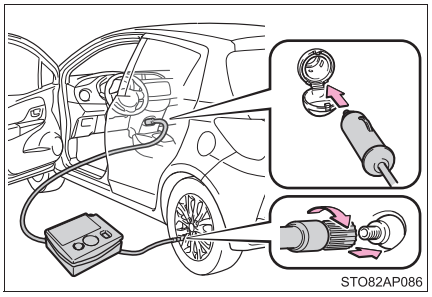
STO82AP086

25 Check the tire inflation pressure.

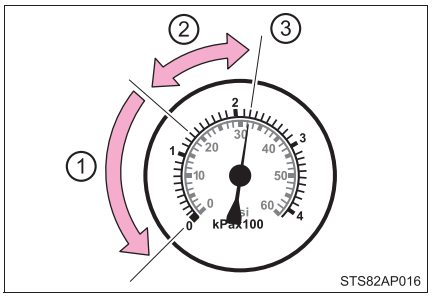

STS82AP016

① If the tire inflation pressure is under 130 kPa (1.3 kgf/cm^2 or bar, 19 psi): The puncture cannot be repaired. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

② If the tire inflation pressure is 130 kPa (1.3 kgf/cm^2 or bar, 19 psi) or higher, but less than the specified air pressure: Proceed to 26.

③ If the tire inflation pressure is the specified air pressure (→P. 665): Proceed to 27.


26 Turn the compressor switch on to inflate the tire until the specified air pressure is reached. Drive for about 5 km (3 miles) and then perform 24.

27 Store the compressor in the luggage compartment.

28 Taking precautions to avoid sudden braking, sudden acceleration and sharp turns, drive carefully at under 80 km/h (50 mph) to the nearest authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for tire repair or replacement.

■ If the tire is inflated to more than the specified air pressure

1 Press the button to let some air out.

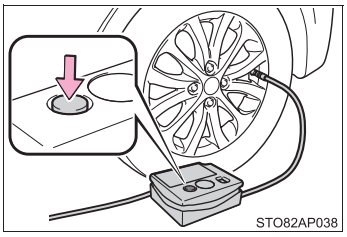

2 Check that the air pressure indicator shows the specified air pressure. If the air pressure is under the designated pressure, turn the compressor switch on again and repeat the inflation procedure until the specified air pressure is reached.

■ After a tire is repaired with the emergency tire puncture repair kit

- The tire pressure warning valve and transmitter should be replaced.
- Even if the tire inflation pressure is at the recommended level, the tire pressure warning light may come on/flash.

■ Note for checking the emergency tire puncture repair kit

Check the sealant expiry date occasionally.
The expiry date is shown on the bottle. Do not use sealant whose expiry date has already passed. Otherwise, repairs conducted using the emergency tire puncture repair kit may not be performed properly.

■ **Emergency tire puncture repair kit**

- The sealant stored in the emergency tire puncture repair kit can be used only once to temporarily repair a single tire. If the sealant has been used and needs to be replaced, purchase a new bottle at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. The compressor is reusable.
- The sealant can be used when the outside temperature is from -30°C (-22°F) to 60°C (140°F).
- The repair kit is exclusively designed for size and type of tires originally installed on your vehicle. Do not use it for tires that a different size than the original ones, or for any other purposes.
- The sealant has a limited lifespan. The expiry date is marked on the bottle. The bottle of sealant should be replaced with a new bottle before the expiry date. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for replacement.
- If the sealant gets on your clothes, it may stain.
- If the sealant adheres to a wheel or the surface of the vehicle body, the stain may not be removable if it is not cleaned at once. Immediately wipe away the sealant with a wet cloth.
- During operation of the repair kit, a loud operation noise is produced. This does not indicate a malfunction.
- Do not use to check or to adjust the tire pressure.

WARNING

■ **Do not drive the vehicle with a flat tire**

Do not continue driving with a flat tire.
Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

Driving with a flat tire may cause a circumferential groove on the side wall. In such a case, the tire may explode when using a repair kit.

■ **Caution while driving**

- Store the repair kit in the luggage room.
  Injuries may result in the event of an accident or sudden braking.
- The repair kit is exclusively only for your vehicle.
  Do not use repair kit on other vehicles, which could lead to an accident causing death or serious injury.
- Do not use repair kit for tires that are different size than the original ones, or for any other purpose. If the tires have not been completely repaired, it could lead to an accident causing death or serious injury.

■ **Precautions for use of the sealant**

- Ingesting the sealant is hazardous to your health. If you ingest sealant, consume as much water as possible, and then immediately consult a doctor.
- If sealant gets in eyes or adheres to skin, immediately wash it off with water. If discomfort persists, consult a doctor.

WARNING

■ **When fixing the flat tire**

- Stop your vehicle in a safe and flat area.
- Do not touch the wheels or the area around the brakes immediately after the vehicle has been driven.
  After the vehicle has been driven, the wheels and the area around the brakes may be extremely hot. Touching these areas with hands, feet or other body parts may result in burns.
- To avoid risk of burst or severe leakage, do not drop or damage the bottle. Visually inspect the bottle before use. Do not use a bottle with shock, crack, scratch, leakage or any other damage. In such case, immediately replace.
- Connect the valve and hose securely with the tire installed on the vehicle. If the hose is not properly connected to the valve, air leakage may occur as sealant may be sprayed out.
- If the hose comes off the valve while inflating the tire, there is a risk that the hose will move abruptly due to air pressure.
- After inflation of the tire has completed, the sealant may splatter when the hose is disconnected or some air is let out of the tire.
- Follow the operation procedure to repair the tire. If the procedures not followed, the sealant may spray out.
- Keep back from the tire while it is being repaired, as there is a chance of it bursting while the repair operation is being performed. If you notice any cracks or deformation of the tire, turn off the compressor switch and stop the repair operation immediately.
- The repair kit may overheat if operated for a long period of time. Do not operate the repair kit continuously for more than 40 minutes.
- Parts of the repair kit become hot during operation. Be careful when handling the repair kit during and after operation. Do not touch the metal part around the connecting area between the bottle and compressor. It will be extremely hot.
- Do not attach the vehicle speed warning sticker to an area other than the one indicated. If the sticker is attached to an area where an SRS airbag is located, such as the pad of the steering wheel, it may prevent the SRS airbag from operating properly.

WARNING

■ **Driving to spread the liquid sealant evenly**

Observe the following precautions to reduce the risk of accidents.
Failing to do so may result in a loss of vehicle control and cause death or serious injury.

- Drive the vehicle carefully at a low speed. Be especially careful when turning and cornering.
- If the vehicle does not drive straight or you feel a pull through the steering wheel, stop the vehicle and check the following.
  - Tire condition. The tire may have separated from the wheel.
  - Tire inflation pressure. If the tire inflation pressure is 130 kPa (1.3 kgf/cm^2 or bar, 19 psi) or less, the tire may be severely damaged.

NOTICE

When performing an emergency repair

- A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a sharp object such as nail or screw passing through the tire tread.
  Do not remove the sharp object from the tire. Removing the object may widen the opening and disenable emergency repair with the repair kit.
- The repair kit is not waterproof. Make sure that the repair kit is not exposed to water, such as when it is being used in the rain.
- Do not put the repair kit directly onto dusty ground such as sand at the side of the road. If the repair kit vacuums up dust etc., a malfunction may occur.
- Do not turn the bottle upside down when using it, as doing so may cause damage to the compressor.

Precautions for the emergency tire puncture repair kit

- The repair kit power source should be 12 V DC suitable for vehicle use. Do not connect the repair kit to any other source.
- If gasoline splatters on the repair kit, the repair kit may deteriorate. Take care not to allow gasoline to contact it.
- Place the repair kit in a storage to prevent it from being exposed to dirt or water.
- Store the repair kit in the luggage room out of reach of children.
- Do not disassemble or modify the repair kit. Do not subject parts such as the air pressure indicator to impacts. This may cause a malfunction.

To avoid damage to the tire pressure warning valves and transmitters (vehicles with a tire pressure warning system)

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop as soon as possible. After use of liquid sealant, make sure to replace the tire pressure warning valve and transmitter when repairing or replacing the tire. (→P. 507)

If you have a flat tire (vehicles with a spare tire)

Your vehicle is equipped with a spare tire. The flat tire can be replaced with the spare tire.

For details about tires: →P. 505

WARNING

■ If you have a flat tire


Do not continue driving with a flat tire.
Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

Before jacking up the vehicle

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P (Multidrive) or R (manual transmission).
- Stop the engine.
- Turn on the emergency flashers. (→P. 566)

Location of the spare tire, jack and tool bag

■ Location

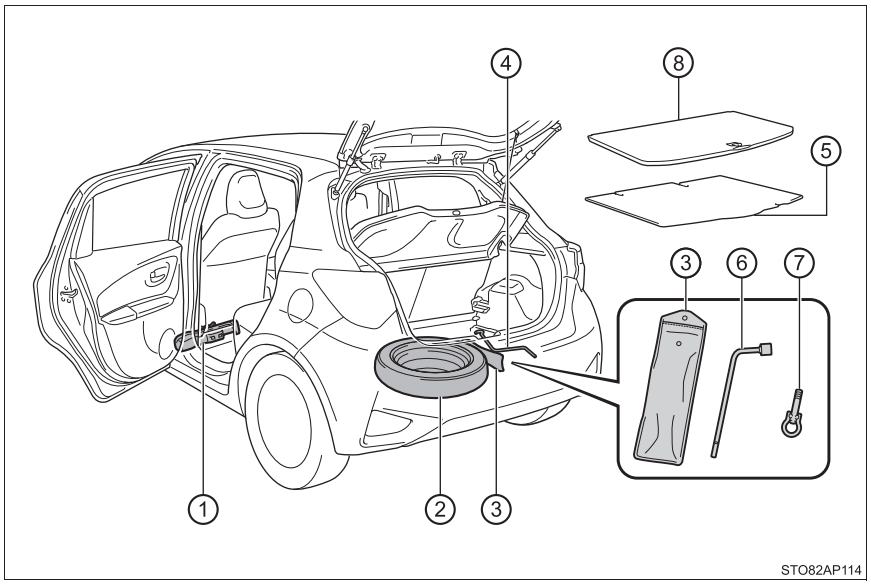

① Jack
② Spare tire
③ Tool bag
④ Jack handle
⑤ Luggage floor cover (if equipped)
⑥ Wheel nut wrench
⑦ Towing eyelet
⑧ Deck board (if equipped)

WARNING


■ **Using the tire jack**

Observe the following precautions.
Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Put the jack properly in its jack point.
- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start the engine or drive the vehicle while the vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- When lowering the vehicle, make sure that there is no-one near the vehicle. If there are people nearby, warn them vocally before lowering.

Taking out the jack


1 Move the front left seat to the front most position and remove the cover.

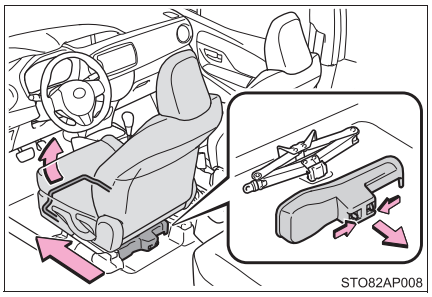

2 Take out the jack.

① For tightening

② For loosening

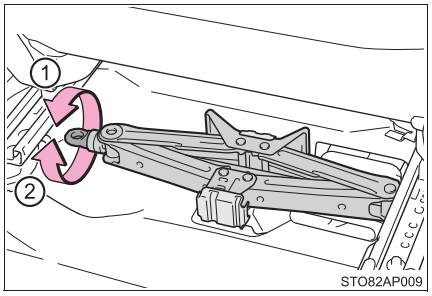


Taking out the spare tire


▶ Vehicles with a compact spare tire

1 Vehicles with a deck board: Lift the deck board and pull it toward you to remove it. (→P. 462)

2 Remove the luggage floor cover.

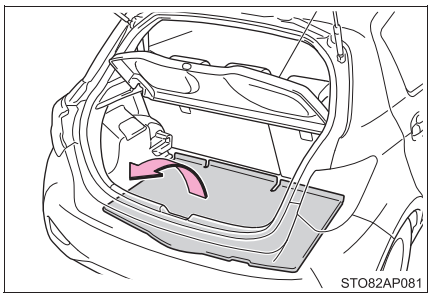


3 Remove the spare wheel cushion, then loosen the center fastener.

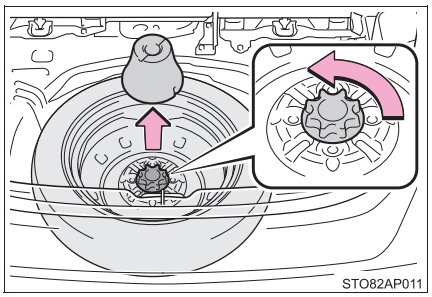

▶ Vehicles with a full-size spare tire


1 Lift the deck board and pull it toward you to remove it. (→P. 462)

2 Loosen the center fastener.

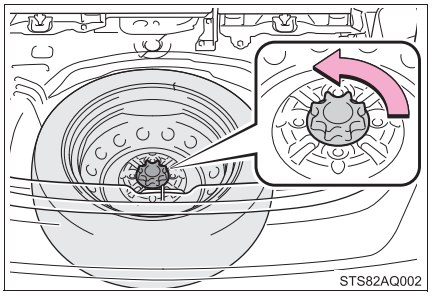

Replacing a flat tire

1 Chock the tires.

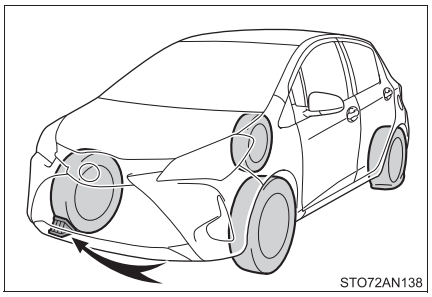


Flat tire		Wheel chock positions
Front	Left-hand side	Behind the rear right-hand side tire
	Right-hand side	Behind the rear left-hand side tire
Rear	Left-hand side	In front of the front right-hand side tire
	Right-hand side	In front of the front left-hand side tire


2 For vehicles with steel wheels, remove the wheel ornament using the wrench.

To protect the wheel ornament, place a rag between the wrench and the wheel ornament.

If the wheel ornament has notches, insert the wrench into the notch and remove the wheel ornament.

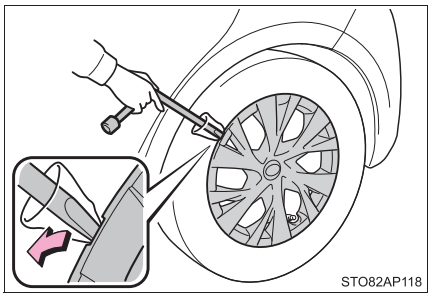


3 Slightly loosen the wheel nuts (one turn).

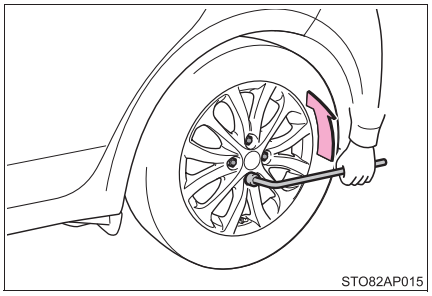


4 Turn the tire jack portion Ⓐ by hand until the notch of the jack is in contact with the jack point.

The jack point guides are located under the rocker panel. They indicate the jack point positions.

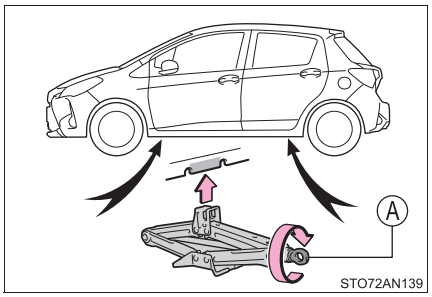


5 Raise the vehicle until the tire is slightly raised off the ground.

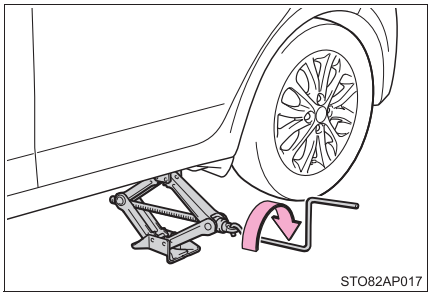

6 Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

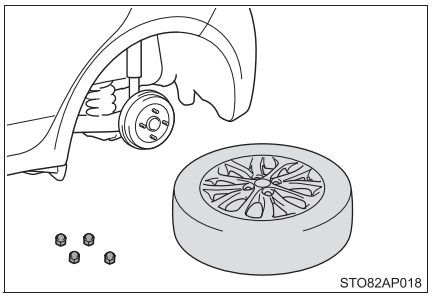

WARNING

■ **Replacing a flat tire**

● Observe the following precautions.
Failure to do so may result in serious injury:

- Do not try to remove the wheel ornament by hand. Take due care in handling the ornament to avoid unexpected personal injury.
- Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.
After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.


● Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.

- Have the wheel nuts tightened with a torque wrench to 103 N·m (10.5 kgf·m, 76 ft·lbf) as soon as possible after changing wheels.
- When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
- If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- When installing the wheel nuts, be sure to install them with the tapered ends facing inward. (→P. 523)

Installing the spare tire


1 Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

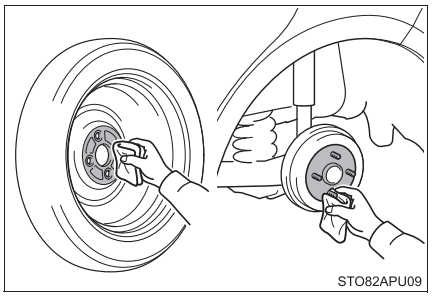


2 Install the tire and loosely tighten each wheel nut by hand by approximately the same amount.


When replacing a steel wheel with a steel wheel (including a compact spare tire), tighten the wheel nuts until the tapered portion comes into loose contact with the disc wheel seat.

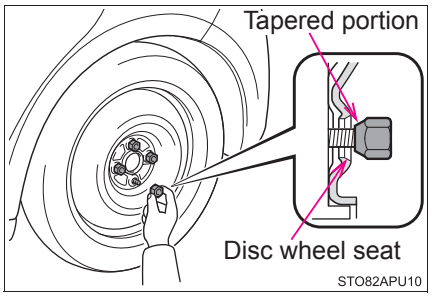


When replacing an aluminum wheel with a compact spare tire, tighten the wheel nuts until the tapered portion comes into loose contact with the disc wheel seat.

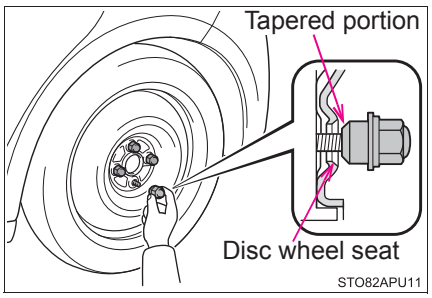

When replacing an aluminum wheel with an aluminum wheel, turn the wheel nuts until the washers come into contact with the disc wheel.

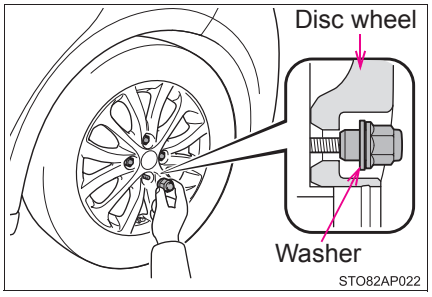


3 Lower the vehicle.

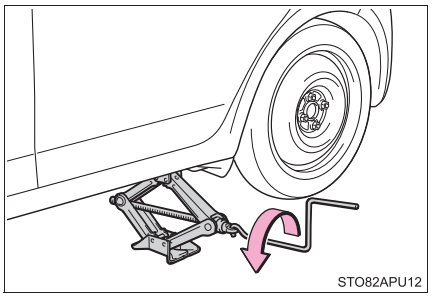

4 Firmly tighten each wheel nut two or three times in the order shown in the illustration.

Tightening torque:
103 N·m (10.5 kgf·m, 76 ft·lbf)


Do not use other tools or any additional leverage other than your hands, such as a hammer, pipe or your foot.

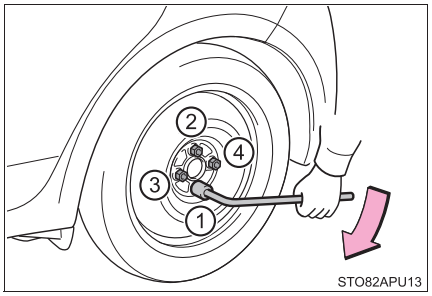

▶ Vehicles with steel wheels (except vehicles with tire pressure warning system or compact spare tire)

5 Reinstall the wheel ornament.


Align the cutout of the wheel ornament with the valve stem as shown.

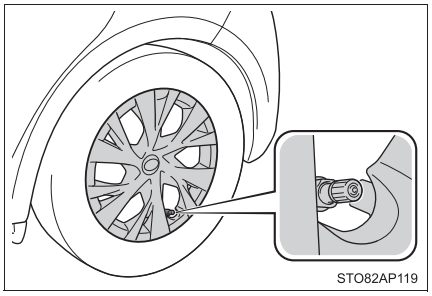

▶ Vehicles with aluminum wheels

5 Remove the center wheel ornament by pushing from the reverse side.

Be careful not to lose the wheel ornament.

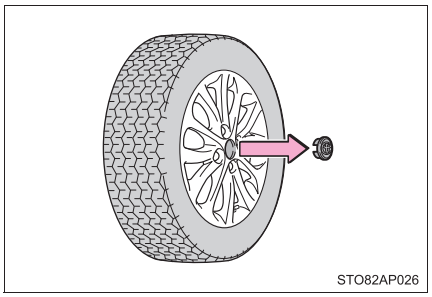

6 Stow the flat tire, tire jack and all tools.

■ **The full-size spare tire (if equipped)**

- On vehicles with a tire pressure warning system: The full-size spare tire is identified by a label with temporary use only information.
  Use the full-size spare tire temporarily, and only in an emergency.
- Make sure to check the tire inflation pressure of the full-size spare tire. (→P. 665)

■ **The compact spare tire (if equipped)**

- The compact spare tire is identified by the label “TEMPORARY USE ONLY” on the tire sidewall.
  Use the compact spare tire temporarily, and only in an emergency.
- Make sure to check the tire inflation pressure of the compact spare tire. (→P. 665)

■ **When using the spare tire (include compact spare tire) (vehicles with a tire pressure warning system)**

As the spare tire is not equipped with a tire pressure warning valve and transmitter, low inflation pressure of the spare tire will not be indicated by the tire pressure warning system. Also, if you replace a flat tire with the spare tire after the tire pressure warning light comes on, the light remains on.

■ **When the compact spare tire is equipped (if equipped)**

The vehicle height may become lower when driving with the compact spare tire compared to when driving with standard tires.

■ **If you have a flat front tire on a road covered with snow or ice (vehicles with compact spare tire)**

Install the compact spare tire on one of the rear wheels of the vehicle. Perform the following steps and fit tire chains to the front tires:

1. Replace a rear tire with the compact spare tire.
2. Replace the flat front tire with the tire removed from the rear of the vehicle.
3. Fit tire chains to the front tires.

CE

Manufacturer's Declaration of Conformity

Manufacturer :
ARIKAN KRİKO A.Ş
Organize Sanayi Bölgesi 2.Cd.26110 ESKİŞEHİR / TURKEY

The EU Directives covered by this Declaration

2006 / 42 / EC Machinery Directive

The product covered by this declaration

JACK SUB-ASSY. PANTOGRAPH

model

0.8 ton , 1.1 ton

The basis on which conformity is being declared

The product identified above complies with the requirements of the Machinery Directive
Directive above by meeting following standards

857 – ISO 8720

The technical documentation required to demonstrate that the product meets the requirement the Machinery Directive has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities.

A sample of the product has been tested by the manufacturer

Technical File No :2010-TOYOTA JACK-ISO8720-1

The CE mark was first applied in:2010

Done at Shizuoka , Japan

Ahmet ARIKAN
General Manager

Signature :

Date of Issue : 24.08.2010

WARNING

■ **When using the full-size spare tire (if equipped)**

- On vehicles with a tire pressure warning system: Replace the full-size spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

■ **When using the compact spare tire (if equipped)**

- Remember that the compact spare tire provided is specifically designed for use with your vehicle. Do not use your compact spare tire on another vehicle.
- Do not use more than one compact spare tire simultaneously.
- Replace the compact spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

■ **When storing the spare tire (if equipped)**

Be careful not to catch fingers or other body parts between the spare tire and the body of the vehicle.

■ **After using the tools and jack**

Before driving, make sure all the tools and jack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

■ **When the compact spare tire is attached (if equipped)**

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- ABS & Brake assist
- VSC*
- TRC*
- EPS
- Automatic High Beam*
- PCS (Pre-Crash Safety system)*
- LDA (Lane Departure Alert)*
- Cruise control*
- Navigation system*

*: If equipped

■ **Speed limit when using the compact spare tire (if equipped)**

Do not drive at speeds in excess of 80 km/h (50 mph) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

NOTICE

Do not drive the vehicle with a flat tire

Do not continue driving with a flat tire.
Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

Be careful when driving over bumps with the compact spare tire installed on the vehicle (if equipped)

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires. Be careful when driving over uneven road surfaces.

Driving with tire chains and the compact spare tire (if equipped)

Do not fit tire chains to the compact spare tire.
Tire chains may damage the vehicle body and adversely affect driving performance.

When replacing the tires (vehicles with a tire pressure warning system)

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

To avoid damage to the tire pressure warning valves and transmitters (if equipped)

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P. 507)

If the engine will not start

If the engine will not start even though correct starting procedures are being followed (→P. 245, 248), consider each of the following points:

The engine will not start even though the starter motor operates normally.

One of the following may be the cause of the problem:

- There may not be sufficient fuel in the vehicle's tank.
  Gasoline engine: Refuel the vehicle.
  Diesel engine: →P. 643
- The engine may be flooded. (gasoline engine)
  Try to restart the engine again following correct starting procedures. (→P. 245, 248)
- There may be a malfunction in the engine immobilizer system. (→P. 86)

The starter motor turns over slowly, the interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem:

- The battery may be discharged. (→P. 632)
- The battery terminal connections may be loose or corroded.

The starter motor does not turn over (vehicles with a smart entry & start system).

The engine starting system may be malfunctioning due to an electrical problem such as an open circuit or a blown fuse. However, an interim measure is available to start the engine. (→P. 628)

The starter motor does not turn over, the interior lights and headlights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem:

- One or both of the battery terminals may be disconnected.
- The battery may be discharged. (→P. 632)
- There may be a malfunction in the steering lock system (vehicles with a smart entry & start system).

  Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer if the problem cannot be repaired, or if repair procedures are unknown.

Emergency start function (vehicles with a smart entry & start system)

When the engine does not start, the following steps can be used as an interim measure to start the engine if the engine switch is functioning normally:

1. Set the parking brake.
2. Shift the shift lever to P (Multidrive) or N (manual transmission).
3. Turn the engine switch to ACCESSORY mode.
4. Press and hold the engine switch for about 15 seconds while depressing the brake pedal (Multidrive) or brake pedal and clutch pedal (manual transmission) firmly.

Even if the engine can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the electronic key does not operate properly (vehicles with a smart entry & start system)


If communication between the electronic key and vehicle is interrupted (→P. 170) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors can be opened and the engine can be started by following the procedure below.

Locking and unlocking the doors

Use the mechanical key (→P. 144) in order to perform the following operations:

① Unlocks all the doors

② Locks all the doors

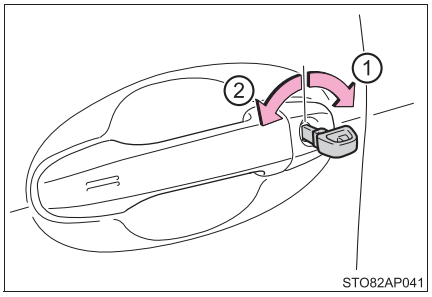


Starting the engine

1 Vehicles with a Multidrive:
Ensure that the shift lever is in P and depress the brake pedal.

Vehicles with a manual transmission:
Ensure that the shift lever is in N and depress the clutch pedal.

2 Touch the Toyota emblem side of the electronic key to the engine switch.

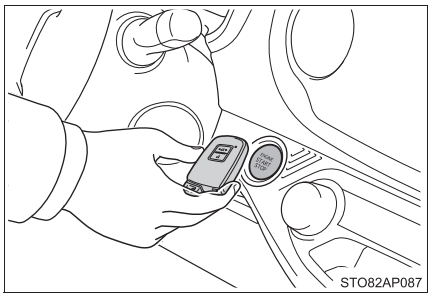

Vehicles with monochrome display: When the electronic key is detected, a buzzer sounds, and then the engine switch will turn to IGNITION ON mode.
Vehicles with color display: When the electronic key is detected, a message is shown on the multi-information display, a buzzer sounds, and then the engine switch will turn to IGNITION ON mode.

When the smart entry & start system is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.

3 Vehicles with monochrome display: Firmly depress the brake pedal (Multidrive) or clutch pedal (manual transmission) and check that  (green) turns on.

Vehicles with color display: Firmly depress the brake pedal (Multidrive) or clutch pedal (manual transmission) and check that  and messages are shown on the multi-information display.

4 Press the engine switch.

In the event that the engine still cannot be started, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Stopping the engine**

Shift the shift lever to P (Multidrive) or N (manual transmission) and press the engine switch as you normally do when stopping the engine.

■ **Replacing the key battery**

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P. 534)

■ **Changing engine switch modes**

Release the brake pedal (Multidrive) or clutch pedal (manual transmission) and press the engine switch in step 3 above.
The engine does not start and modes will be changed each time the switch is pressed. (→P. 250)

■ **When the electronic key does not work properly**

- Make sure that the smart entry & start system has not been deactivated in the customization setting. If it is off, turn the function on.
  (Customizable features: →P. 673)
- Check if battery-saving mode is set. If it is set, cancel the function.
  (→P. 170)

If the vehicle battery is discharged


The following procedures may be used to start the engine if the vehicle's battery is discharged.
You can also call any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.

1 Open the hood. (→P. 485)

2 Connect the jumper cables according to the following procedure:

▶ 1KR-FE engine

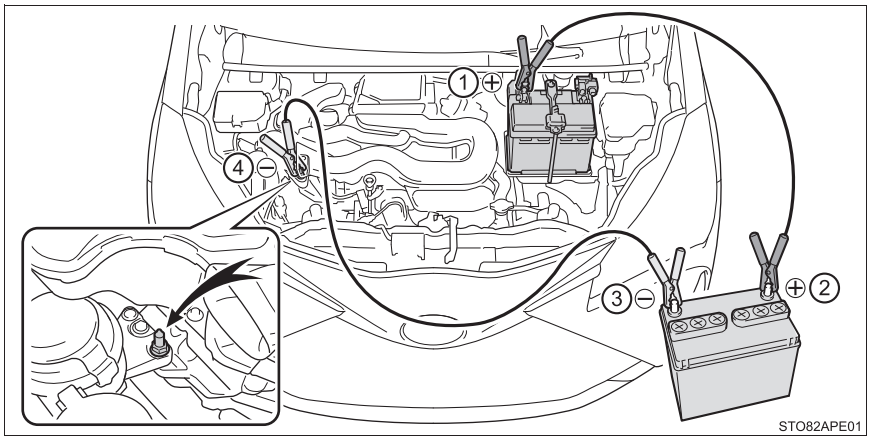


① Connect a positive jumper cable clamp to the positive (+) battery terminal on your vehicle.

② Connect the clamp on the other end of the positive cable to the positive (+) battery terminal on the second vehicle.

③ Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle.

④ Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the battery and any moving parts, as shown in the illustration.

▶ 2NR-FKE engine

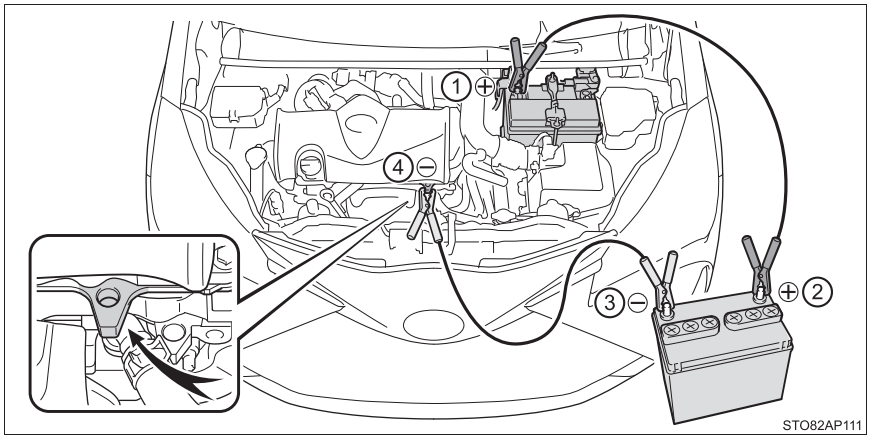


① Connect a positive jumper cable clamp to the positive (+) battery terminal on your vehicle.

② Connect the clamp on the other end of the positive cable to the positive (+) battery terminal on the second vehicle.

③ Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle.

④ Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the battery and any moving parts, as shown in the illustration.

▶ 1ND-TV engine

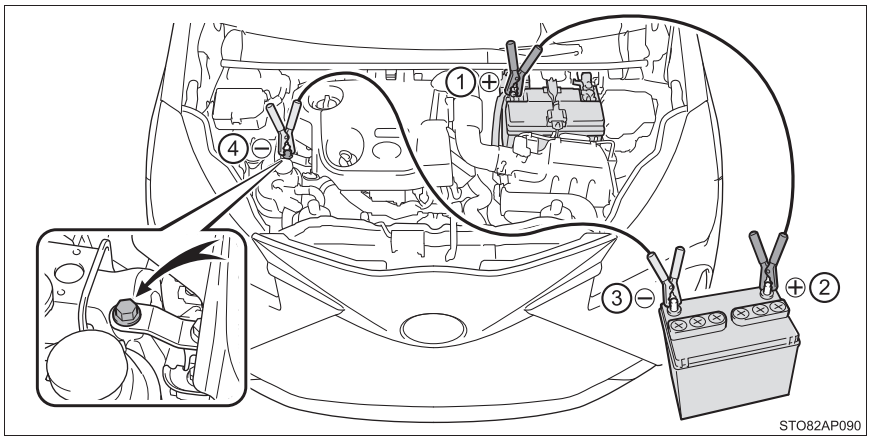

① Connect a positive jumper cable clamp to the positive (+) battery terminal on your vehicle.

② Connect the clamp on the other end of the positive cable to the positive (+) battery terminal on the second vehicle.

③ Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle.

④ Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the battery and any moving parts, as shown in the illustration.

3 Start the engine of the second vehicle. Increase the engine speed slightly and maintain it at that level for approximately 5 minutes to recharge the battery of your vehicle.

4 Vehicles with a smart entry & start system: Open and close any of the doors of your vehicle with the engine switch off.

5 Maintain the engine speed of the second vehicle and turn the engine switch to “ON” position (vehicles without a smart entry & start system) or IGNITION ON mode (vehicles with a smart entry & start system), then start the vehicle’s engine.

6 Once the vehicle’s engine has started, remove the jumper cables in the exact reverse order from which they were connected.

Once the engine starts, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

■ **Starting the engine when the battery is discharged (vehicles with a Multi-drive)**

The engine cannot be started by push-starting.

■ **To prevent battery discharge**

- Turn off the headlights and the audio system while the engine is stopped. (Vehicles with a Stop & Start system: except when the engine is stopped by the Stop & Start system.)
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

■ **Charging the battery**

The electricity stored in the battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the battery may discharge, and the engine may be unable to start. (The battery recharges automatically during driving.)

■ **Precautions when the battery is discharged**

- Vehicles with a smart entry & start system: In some cases, it may not be possible to unlock the doors using the smart entry & start system when the battery is discharged. Use the wireless remote control or the mechanical key to lock or unlock the doors.
- Vehicles with a smart entry & start system: The engine may not start on the first attempt after the battery has recharged but will start normally after the second attempt. This is not a malfunction.
- Vehicles with a smart entry & start system: The engine switch mode is memorized by the vehicle. When the battery is reconnected, the system will return to the mode it was in before the battery was discharged. Before disconnecting the battery, turn the engine switch off.
  If you are unsure what mode the engine switch was in before the battery discharged, be especially careful when reconnecting the battery.
- Vehicles with Stop & Start system: For a while after the battery terminals have been disconnected and reconnected, for a while after the battery has been replaced, the Stop & Start system may not automatically stop the engine for approximately 5 to 60 minutes.

■ **When exchanging the battery (vehicles with Stop & Start system)**

Use a genuine battery specifically designed for use with the Stop & Start system or a battery with equivalent specifications to a genuine battery. If an unsupported battery is used, Stop & Start system functions may be restricted to protect the battery. Also, battery performance may decrease and the engine may not be able to restart. Contact any authorized Toyota retailers or Toyota authorized repairers, or any reliable repairers for details.

■ **When replacing the battery**

- Use a battery that conforms to European regulations.
- Use a battery that the case size is same as the previous one, 20 hour rate capacity (20HR) is equivalent or greater, and performance rating (CCA) is equivalent or greater.

  Check the label on top of the battery for the battery size and specifications (ex. LN2, 60Ah, 520A).

  - If the sizes differ, the battery cannot be properly secured.
  - If the 20 hour rate capacity is low, even if the time period where the vehicle is not used is a short time, the battery may discharge and the engine may not be able to start.
- For details, consult any authorized Toyota retailers or Toyota authorized repairers, or any reliable repairers.

WARNING

■ **Avoiding battery fires or explosions**

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with anything other than the intended terminal.
- Do not allow the other end of the jumper cable connected to the “+” terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and - clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the battery.

■ **Battery precautions**

The battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the battery:

- When working with the battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the battery.

■ **To prevent damage to the vehicle**

Do not pull- or push-start the vehicle as the three-way catalytic converter (gasoline engine) or catalytic converter (diesel engine) may overheat and become a fire hazard.

NOTICE

■ **When handling jumper cables**

When connecting the jumper cables, ensure that they do not become entangled in the cooling fans or engine drive belt.

If your vehicle overheats

The following may indicate that your vehicle is overheating:

- Vehicles with monochrome display: The high engine coolant temperature warning light (→P. 579) comes on or flashes, or a loss of engine power is experienced. (For example, the vehicle speed does not increase.)
  Vehicles with color display:
  - The needle of the engine coolant temperature gauge (→P. 118) enters the red zone or a loss of engine power is experienced. (For example, the vehicles speed does not increase.)
  - The warning message indicating overheat is shown on the multi-information display. (→P. 589)
- Steam comes out from under the hood.

Correction procedures


1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the engine.

2 If you see steam:
Carefully lift the hood after the steam subsides.


If you do not see steam:
Carefully lift the hood.

3 After the engine has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.


▶ 1KR-FE engine

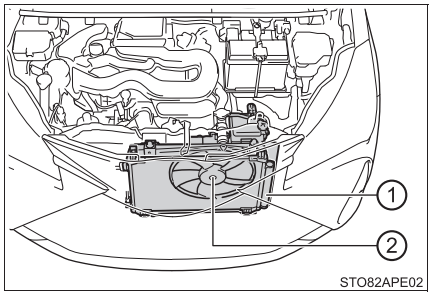

▶ 2NR-FKE engine

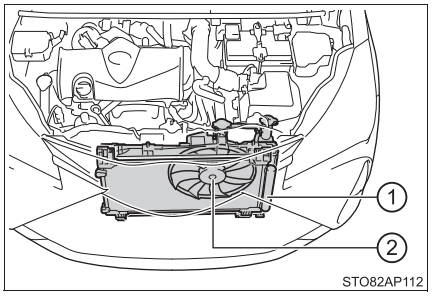

▶ 1ND-TV engine

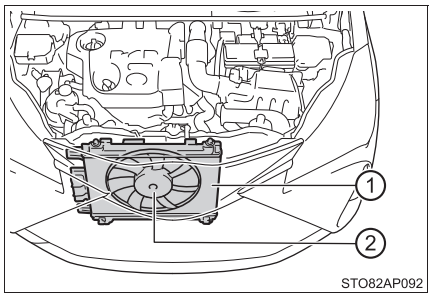


① Radiator

② Cooling fan


If a large amount of coolant leaks, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

4 The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir.


▶ 1KR-FE engine

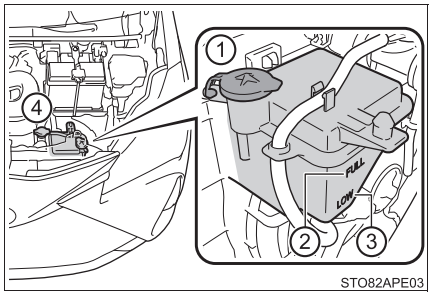

▶ 2NR-FKE engine

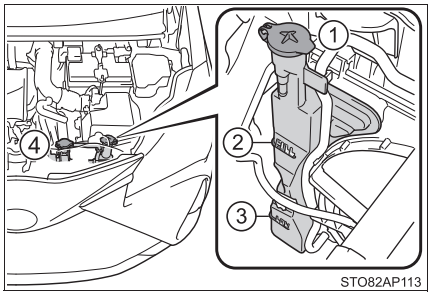

▶ 1ND-TV engine

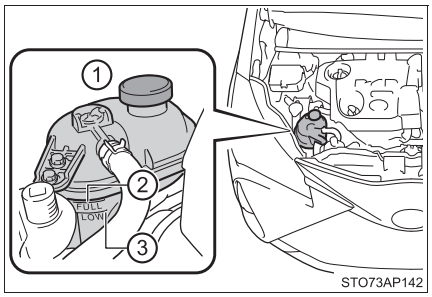


① Reservoir
② “FULL”
③ “LOW”
④ Radiator cap (except for 1ND-TV engine)


5 Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.


▶ 1KR-FE engine

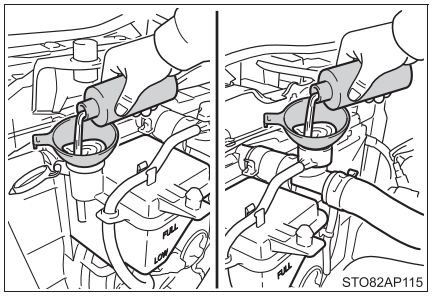

▶ 2NR-FKE engine

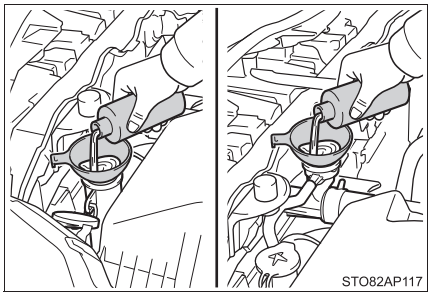

▶ 1ND-TV engine

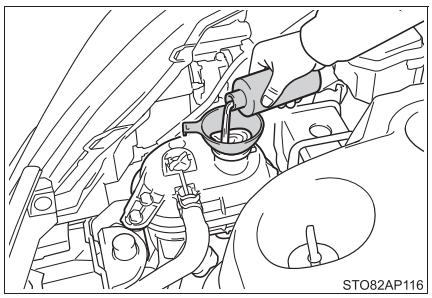

6 Start the engine and turn the air conditioning system on to check that the radiator cooling fan operates and to check for coolant leaks from the radiator or hoses.

The fan operates when the air conditioning system is turned on immediately after a cold start. Confirm that the fan is operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly.
(The fan may not operate in freezing temperatures.)

7 If the fan is not operating:

Stop the engine immediately and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the fan is operating:

Have the vehicle inspected at the nearest authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

WARNING

■ **To prevent an accident or injury when inspecting under the hood of your vehicle**

Observe the following precautions.
Failure to do so may result in serious injury such as burns.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- Keep hands and clothing (especially a tie, a scarf or a muffler) away from the fan and belts while the engine is operating.
- Do not loosen the radiator cap or the coolant reservoir cap while the engine and radiator are hot.

NOTICE

■ **When adding engine coolant**

Add coolant slowly after the engine has cooled down sufficiently. Adding cool coolant to a hot engine too quickly can cause damage to the engine.

■ **To prevent damage to the cooling system**

Observe the following precautions.

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use any coolant additives.


If you run out of fuel and the engine stalls (diesel engine only)

If you run out of fuel and the engine stalls


1 Refuel your vehicle.

2 Pull the rubber strip on the edge to unhook it from the cover, and then push the tabs in and lift the cover off.


▶ Left-hand drive vehicles

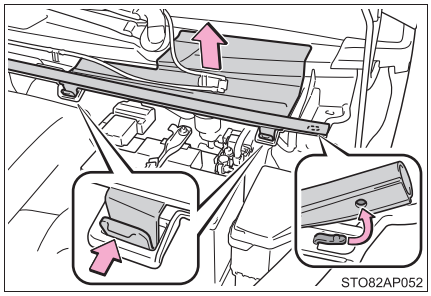

▶ Right-hand drive vehicles

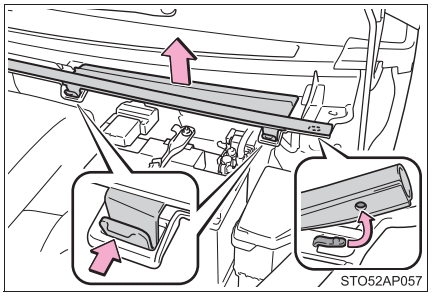


3 To bleed the fuel system, operate the priming pump until you feel more resistance.

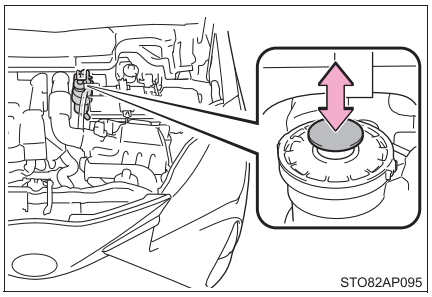


4 Reinstall the cover, and then hook the rubber strip's groove onto the cover.

▶ Left-hand drive vehicles

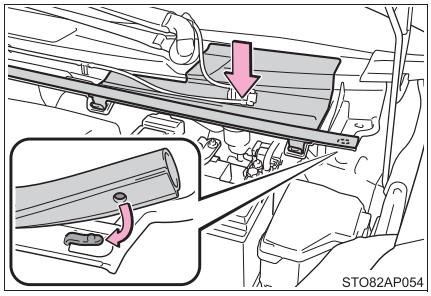

▶ Right-hand drive vehicles

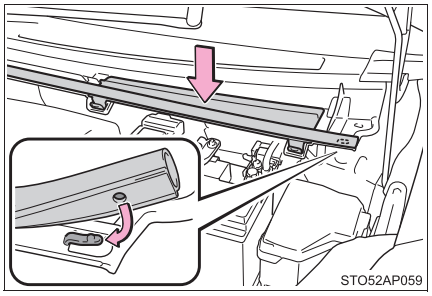

5 Start the engine. (→P. 245, 248)

If the engine does not start after the above steps have been performed, wait for 10 seconds and then try steps 3 and 5 again. If the engine still does not start, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

After starting the engine, depress the accelerator pedal lightly until the engine runs smoothly.

NOTICE

When restarting the engine

- Do not crank the engine before refueling and operating the priming pump. This may damage the engine and fuel system.
- Vehicles without a smart entry & start system: Do not crank the engine for more than 30 seconds at a time. This may overheat the starter and wiring system.


If the vehicle becomes stuck

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

1. Stop the engine. Set the parking brake and shift the shift lever to P (Multidrive) or N (manual transmission).
2. Remove the mud, snow or sand from around the front wheels.
3. Place wood, stones or some other material under the front wheels to help provide traction.
4. Restart the engine.
5. Shift the shift lever to D or R (Multidrive) or 1 or R (manual transmission) and release the parking brake. Then, while exercising caution, depress the accelerator pedal.


When it is difficult to free the vehicle

Press  to turn off TRC.

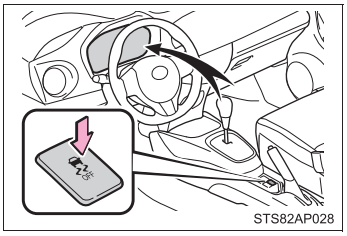

Emergency hooks

When your vehicle becomes stuck and cannot move, the emergency hooks are used for another vehicle to pull your vehicle out in an emergency.
Your vehicle is not designed to tow another vehicle.

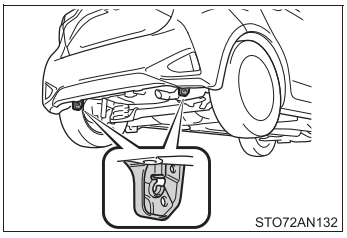

WARNING

When attempting to free a stuck vehicle

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

When shifting the shift lever

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.

NOTICE

To avoid damage to the transmission and other components

- Avoid spinning the front wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

Vehicle specifications 9

9-1. Specifications
Maintenance data (fuel, oil level, etc.).....648
Fuel information 670
9-2. Customization
Customizable features 673
9-3. Items to initialize
Items to initialize 680

Maintenance data (fuel, oil level, etc.)

Dimensions and weights

Overall length		3945 mm (155.3 in.)
Overall width		1695 mm (66.7 in.)
Overall height*1		1510 mm (59.4 in.) 1520 mm (59.8 in.)*2 1530 mm (60.2 in.)*3
Wheelbase		2510 mm (98.8 in.)
Tread	Front	1485 mm (58.5 in.)*4 1475 mm (58.1 in.)*5 1470 mm (57.9 in.)*6 1465 mm (57.6 in.)*7 1460 mm (57.4 in.)*8
	Rear	1470 mm (57.9 in.)*4 1460 mm (57.5 in.)*9 1455 mm (57.2 in.)*7 1445 mm (56.8 in.)*8
Gross vehicle mass	1KR-FE engine	1450 kg (3197 lb.)
	2NR-FKE engine	1545 kg (3406 lb.)
	1ND-TV engine	1565 kg (3450 lb.)
Maximum permissible axle capacity	Front	▶ 1KR-FE engine 825 kg (1819 lb.) ▶ 2NR-FKE engine 850 kg (1874 lb.) ▶ 1ND-TV engine 895 kg (1973 lb.)
	Rear	825 kg (1819 lb.)
Drawbar load		50 kg (110 lb.)

Towing capacity	with brake	▶ 1KR-FE engine 730 kg (1609 lb.) ▶ 2NR-FKE engine 835 kg (1841 lb.) ▶ 1ND-TV engine 760 kg (1675 lb.)
	without brake	▶ 1KR-FE engine 510 kg (1124 lb.)*10 520 kg (1146 lb.)*11 ▶ 2NR-FKE engine 540 kg (1190 lb.)*12 550 kg (1212 lb.)*13 ▶ 1ND-TV engine 550 kg (1212 lb.)
Maximum permissible mass for towing hitch/bracket		19 kg (41 lb.)

*1: Unladen vehicles

*2: Vehicles with rough road package (without raised vehicle height)

*3: Vehicles with rough road package (with raised vehicle height)

*4: 175/65R14, 175/70R14 or 175/65R15 (5J) tires

*5: 175/65R15 (5 1/2J) tires or 185/60R15 tires (vehicles without rough road package)

*6: 185/60R15 tires (vehicles with rough road package)

*7: 16 inch wheels (Type B)

*8: 16 inch wheels (Type A)

*9: 175/65R15 (5 1/2J) or 185/60R15 tires

*10: For 2 occupant models

*11: For 5 occupant models

*12: For 2 occupant models and vehicles with 6 speed manual transmission


*13: For 5 occupant models or vehicles with Multidrive

Vehicle identification


Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Toyota. It is used in registering the ownership of your vehicle.

This number is stamped under the front right seat.

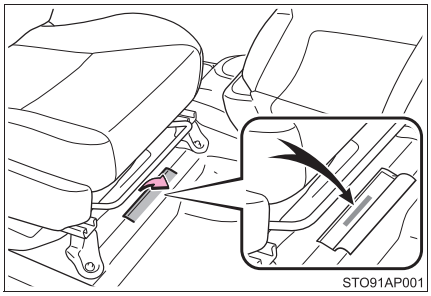


This number is also on the manufacturer's label on the left-hand side of the center pillar.

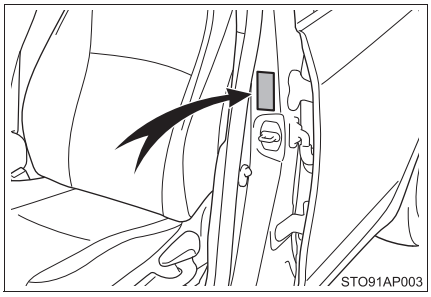


■ **Engine number**

The engine number is stamped on the engine block as shown.


▶ 1KR-FE engine

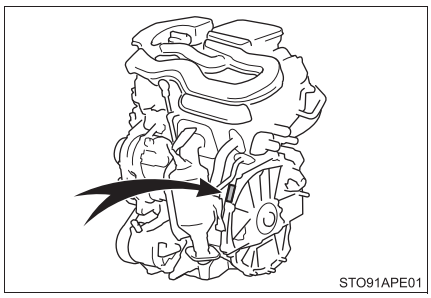

▶ 2NR-FKE engine

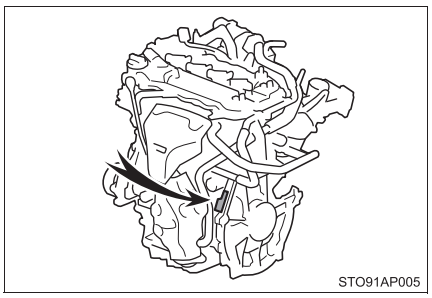

▶ 1ND-TV engine

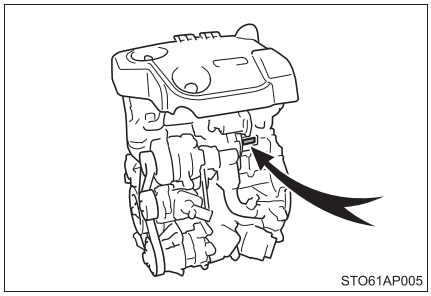

Engine

■ Gasoline engine

▶ 1KR-FE engine

Model	1KR-FE
Type	3-cylinder in line, 4-cycle, gasoline
Bore and stroke	71.0 × 84.0 mm (2.79 × 3.30 in.)
Displacement	998 cm^3 (60.9 cu.in.)
Valve clearance (engine cold)	Intake: 0.145 — 0.235 mm (0.006 — 0.009 in.) Exhaust: 0.275 — 0.365 mm (0.011 — 0.014 in.)
Drive belt tension	Automatic adjustment

▶ 2NR-FKE engine

Model	2NR-FKE
Type	4-cylinder in line, 4-cycle, gasoline
Bore and stroke	72.5 × 90.6 mm (2.85 × 3.57 in.)
Displacement	1496 cm^3 (91.3 cu.in.)
Valve clearance	Automatic adjustment
Drive belt tension	Automatic adjustment

■ Diesel engine

▶ 1ND-TV engine

Model	1ND-TV
Type	4-cylinder in line, 4-cycle, diesel
Bore and stroke	73.0 × 81.5 mm (2.87 × 3.21 in.)
Displacement	1364 cm^3 (83.2 cu.in.)
Valve clearance (engine cold)	Intake: 0.11 — 0.17 mm (0.004 — 0.007 in.) Exhaust: 0.14 — 0.20 mm (0.006 — 0.008 in.)
Drive belt tension	Automatic adjustment

NOTICE

■ Drive belt type (diesel engine)

The high strength drive belt is used for the generator side drive belt. When replacing the drive belt, use Toyota genuine drive belt or equivalent high strength drive belt. If the high strength drive belt is not used, durability of the belt may become less than expected. The high strength drive belt is a belt with Aramid core which has higher strength compared to usually available belts with PET or PEN core.

Fuel

Gasoline engine

Fuel type	When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.  EU area: Unleaded gasoline conforming to European standard EN228 only Except EU area: Unleaded gasoline only
Research Octane Number	95 or higher
Fuel tank capacity (Reference)	42 L (11.1 gal., 9.2 Imp.gal.)

Diesel engine

Fuel type	When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.  EU area: Diesel fuel conforming to European standard EN590 or EN16734 Except EU area: Diesel fuel that contains 10 ppm or less of sulfur Russia only: Diesel fuel confirming to GOST R52368-2005 (sulfur max 10 ppm)
Cetane number	48 or higher
Fuel tank capacity (Reference)	41 L (10.8 gal., 9.0 Imp.gal.)

Lubrication system (gasoline engine)

■ Oil capacity (Drain and refill — reference*)

With filter	▶ 1KR-FE engine 2.8 L (3.0 qt., 2.5 Imp.qt.) ▶ 2NR-FKE engine 3.6 L (3.8 qt., 3.2 Imp.qt.)
Without filter	▶ 1KR-FE engine 2.6 L (2.7 qt., 2.3 Imp.qt.) ▶ 2NR-FKE engine 3.4 L (3.6 qt., 3.0 Imp.qt.)

*: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the engine, wait more than 5 minutes, and check the oil level on the dipstick.

■ Engine oil selection

▶ 1KR-FE engine

“Toyota Genuine Motor Oil” is used in your Toyota vehicle. Toyota recommends the use of approved “Toyota Genuine Motor Oil”. Another motor oil of matching quality can also be used.


Oil grade:

0W-16:
API grade SN “Resource-Conserving” multigrade engine oil
0W-20, 5W-30 and 10W-30:
API grade SL “Energy-Conserving”, SM “Energy-Conserving” or SN “Resource-Conserving”; or ILSAC multigrade engine oil
15W-40:
API grade SL, SM or SN multigrade engine oil

Recommended viscosity (SAE):

SAE 0W-16 is filled into your Toyota vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather.

If SAE 0W-16 oil is not available, SAE 0W-20 oil may be used.
However, it should be replaced with SAE 0W-16 at the next oil change.
If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 0W-16, 0W-20 or 5W-30 engine oil is recommended.

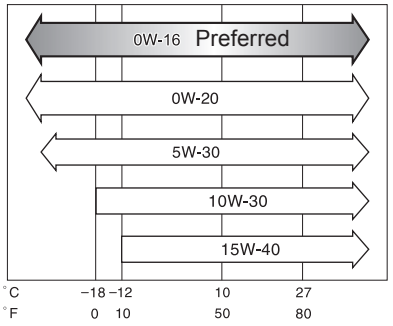

Temperature range anticipated before next oil change


STO91AP008

Oil viscosity (0W-16 is explained here as an example):

- The 0W in 0W-16 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 16 in 0W-16 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container labels:

Either or both API registered marks are added to some oil containers to help you select the oil you should use.

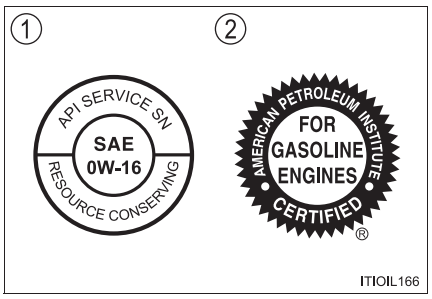

① API Service Symbol

Top portion: “API SERVICE SN” means the oil quality designation by American Petroleum Institute (API).

Center portion: “SAE 0W-16” means the SAE viscosity grade.

Lower portion: “Resource-Conserving” means that the oil has fuel-saving and environmental protection capabilities.

② ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

▶ 2NR-FKE engine

“Toyota Genuine Motor Oil” is used in your Toyota vehicle. Toyota recommends the use of approved “Toyota Genuine Motor Oil”. Another motor oil of matching quality can also be used.

Oil grade:

0W-20, 5W-30 and 10W-30:
API grade SL “Energy-Conserving”, SM “Energy-Conserving” or SN “Resource-Conserving”; or ILSAC multigrade engine oil


15W-40:
API grade SL, SM or SN multigrade engine oil

Recommended viscosity (SAE):

SAE 0W-20 is filled into your Toyota vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather.

If SAE 0W-20 oil is not available, SAE 5W-30 oil may be used. However, it should be replaced with SAE 0W-20 at the next oil change.

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 0W-20 or 5W-30 engine oil is recommended.

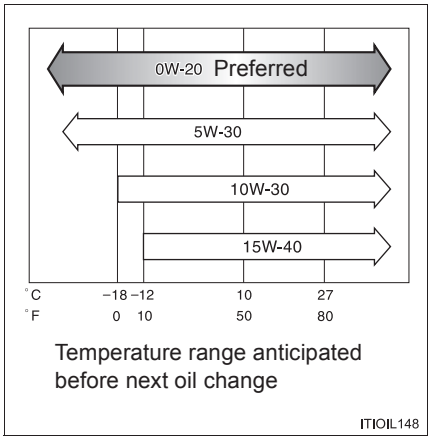


Temperature range anticipated before next oil change

Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container labels:

Either or both API registered marks are added to some oil containers to help you select the oil you should use.

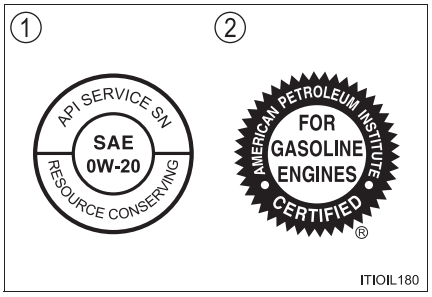

① API Service Symbol

Top portion: “API SERVICE SN” means the oil quality designation by American Petroleum Institute (API).

Center portion: “SAE 0W-20” means the SAE viscosity grade.

Lower portion: “Resource-Conserving” means that the oil has fuel-saving and environmental protection capabilities.

② ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

Lubrication system (diesel engine)

■ Oil capacity (Drain and refill — reference*)

With filter	3.9 L (4.1 qt., 3.4 Imp.qt.)
Without filter	3.5 L (3.7 qt., 3.1 Imp.qt.)

*: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the engine, wait more than 5 minutes, and check the oil level on the dipstick.

■ Engine oil selection


"Toyota Genuine Motor Oil" is used in your Toyota vehicle. Use Toyota approved "Toyota Genuine Motor Oil" or equivalent to satisfy the following grade and viscosity.

Oil grade: API CF-4, CF or ACEA B1, B3, B4, B5 or JASO DL-0

Recommended viscosity (SAE):


SAE 5W-30 is the best choice for good fuel economy and good starting in cold weather.

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 5W-30 engine oil is recommended.

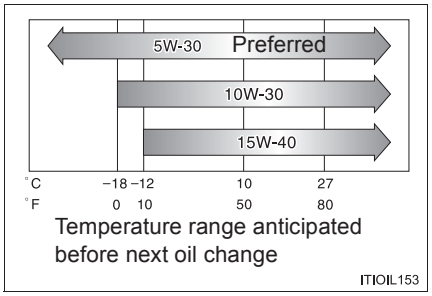

How to read oil container label:

The Japanese Automobile Standard Organization (JASO) DL-0 Mark is added to some oil containers to help you select the oil you should use.

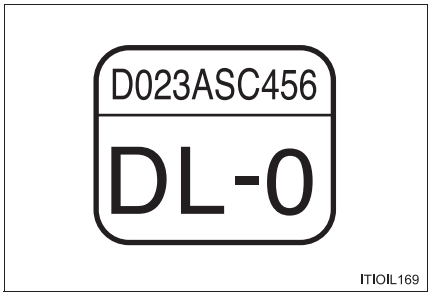

Oil viscosity (5W-30 is explained here as an example):

- The 5W in 5W-30 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 30 in 5W-30 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

Cooling system

■ Gasoline engine

Capacity (Reference)	1KR-FE engine	4.7 L (5.0 qt., 4.1 Imp.qt.)
	2NR-FKE engine	▶ Multidrive 5.7 L (6.0 qt., 5.0 Imp.qt.) ▶ Manual transmission 5.5 L (5.8 qt., 4.8 Imp.qt.)
Coolant type		Use either of the following: • “Toyota Super Long Life Coolant” • A similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

■ Diesel engine

Capacity (Reference)	4.9 L (5.2 qt., 4.3 Imp.qt.)
Coolant type	Use either of the following: • “Toyota Super Long Life Coolant” • A similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

Ignition system (gasoline engine only)

Spark plug	
Make	DENSO FC16HR-Q8
Gap	0.8 mm (0.031 in.)

NOTICE

Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.

Electrical system

Battery Open voltage* at 20°C (68°F):	12.3 V or higher If the specific voltage is lower than the standard value, charge the battery. (*: Voltage is checked 20 minutes after the engine and all lights are turned off.)
Charging rates	5 A max.

Multidrive

Fluid capacity*	7.5 L (7.9 qt., 6.6 Imp.qt.)
Fluid type	Toyota Genuine CVT Fluid FE

*: The fluid capacity is the reference quantity. If replacement is necessary, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

NOTICE

Multidrive fluid type

Using Multidrive fluid other than “Toyota Genuine CVT Fluid FE” may cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage the transmission of your vehicle.

Manual transmission

Gear oil capacity (Reference)	▶ 1KR-FE engine 1.7 L (1.8 qt., 1.5 Imp.qt.) ▶ 2NR-FKE and 1ND-TV engines 2.4 L (2.5 qt., 2.1 Imp.qt.)
Gear oil type	“TOYOTA Genuine Manual Transmission Gear Oil LV GL-4 75W” or equivalent

NOTICE

■ Manual transmission gear oil

- Please be aware that depending on the particular characteristics of the gear oil used or the operating conditions, idle sound, shift feeling and/or fuel efficiency may be different or affected and, in the worst case, damage to the vehicle’s transmission.
  Toyota recommends to use “TOYOTA Genuine Manual Transmission Gear Oil LV GL-4 75W” to achieve optimal performance.
- Your Toyota vehicle is filled with “TOYOTA Genuine Manual Transmission Gear Oil LV GL-4 75W” at the factory.
  Use Toyota approved “TOYOTA Genuine Manual Transmission Gear Oil LV GL-4 75W” or an equivalent oil of matching quality that satisfies the above specifications.
  Please contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further details.

Clutch

Pedal free play	5 — 15 mm (0.2 — 0.6 in.)
Fluid type	SAE J1704 or FMVSS No. 116 DOT 4

Brakes

Pedal clearance*1	64 mm (2.52 in.) Min.
Pedal free play	1 — 6 mm (0.04 — 0.24 in.)
Parking brake lever travel*2	▶ Rear drum brake 5 — 8 clicks ▶ Rear disc brake 4 — 7 clicks
Fluid type	SAE J1704 or FMVSS No. 116 DOT 4

*1: Minimum pedal clearance when depressed with a force of 300 N (31.0 kgf, 67.4 lbf) while the engine is running

*2: Parking brake lever travel when pulled up with a force of 200 N (20.4 kgf, 45.0 lbf)

Steering

Free play	Less than 30 mm (1.2 in.)

Tires and wheels

▶ 14-inch tires (Type A)

Tire size	175/65R14 82T
Tire inflation pressure (Recommended cold tire inflation pressure)	220 kPa (2.2 kgf/cm^2 or bar, 32 psi)
Wheel size	14 × 5J
Wheel nut torque	103 N·m (10.5 kgf·m, 76 ft·lbf)

▶ 14-inch tires (Type B)

Tire size	175/70R14 84S	
Tire inflation pressure (Recommended cold tire inflation pressure)	Front wheel kPa (kgf/cm^2 or bar, psi)	Rear wheel kPa (kgf/cm^2 or bar, psi)
	250 (2.5, 36)	240 (2.4, 35)
Wheel size	14 × 5J	
Wheel nut torque	103 N·m (10.5 kgf·m, 76 ft·lbf)	

▶ 15-inch tires (Type A)

Tire size	175/65R15 84H	
Tire inflation pressure (Recommended cold tire inflation pressure)	Front wheel kPa (kgf/cm^2 or bar, psi)	Rear wheel kPa (kgf/cm^2 or bar, psi)
	Standard tire pressure: 230 (2.3, 33) ECO tire pressure*: 250 (2.5, 36)	Standard tire pressure: 220 (2.2, 32) ECO tire pressure*: 240 (2.4, 35)
Wheel size	15 × 5J, 15 × 5 1/2J	
Wheel nut torque	103 N·m (10.5 kgf·m, 76 ft·lbf)	

*: For some models, ECO tire pressure is shown on the tire pressure label. (→P. 602)
"For optimizing fuel economy, ECO tire pressure is recommended.
Tire pressure affects traveling comfort, road noise and steering characteristics."

▶ 15-inch tires (Type B: vehicles with rough road package)

Tire size	185/60R15 84H		
Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm^2 or bar, psi)	Rear wheel kPa (kgf/cm^2 or bar, psi)
	160 km/h (99 mph) or less	220 (2.2, 32)	220 (2.2, 32)
	More than 160 km/h (99 mph)	240 (2.4, 35)	220 (2.2, 32)
Wheel size	15 × 5 1/2J		
Wheel nut torque	103 N·m (10.5 kgf·m, 76 ft·lbf)		

▶ 15-inch tires (Type C: vehicles without rough road package)

Tire size	185/60R15 84H	
Tire inflation pressure (Recommended cold tire inflation pressure)	Front wheel kPa (kgf/cm^2 or bar, psi)	Rear wheel kPa (kgf/cm^2 or bar, psi)
	Standard tire pressure: 230 (2.3, 33) ECO tire pressure*: 250 (2.5, 36)	Standard tire pressure: 220 (2.2, 32) ECO tire pressure*: 240 (2.4, 35)
Wheel size	15 × 5 1/2J	
Wheel nut torque	103 N·m (10.5 kgf·m, 76 ft·lbf)	

*: For some models, ECO tire pressure is shown on the tire pressure label. (→P. 602)
"For optimizing fuel economy, ECO tire pressure is recommended.
Tire pressure affects traveling comfort, road noise and steering characteristics."

▶ 16-inch tires

Tire size	195/50R16 84V		
Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm^2 or bar, psi)	Rear wheel kPa (kgf/cm^2 or bar, psi)
	160 km/h (99 mph) or less	220 (2.2, 32)	200 (2.0, 29)
	More than 160 km/h (99 mph)	240 (2.4, 35)	210 (2.1, 30)
Wheel size	16 × 6J		
Wheel nut torque	103 N·m (10.5 kgf·m, 76 ft·lbf)		

▶ Compact spare tires

Tire size	T125/70D15 95M, T125/70D16 96M
Tire inflation pressure (Recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm^2 or bar, 60 psi)
Wheel size	15 × 4B, 16 × 4T
Wheel nut torque	103 N·m (10.5 kgf·m, 76 ft·lbf)

■ **When towing a trailer**

Add 20.0 kPa (0.2 kgf/cm^2 or bar, 3 psi) to the recommended tire inflation pressure, and drive at speeds below 100 km/h (62 mph).

Light bulbs

	Light Bulbs	W	Type
Exterior	Halogen headlights Reflector type Projector type	 60/55 55	 A B
	Front fog lights*	19	C
	Front position light/daytime running lights (bulb type)	21/5	D
	Front turn signal lights	21	E
	Side turn signal lights	5	E
	Rear turn signal lights	21	E
	Stop/tail lights (bulb type)	21/5	F
	Back-up light	16	D
	License plate lights	5	D
Interior	Vanity lights*	5	G
	Personal lights/interior light	5	D
	Luggage compartment light	5	G

A: H4 halogen bulbs
B: HIR2 halogen bulbs
C: H16 halogen bulbs
D: Wedge base bulbs (clear)
E: Wedge base bulbs (amber)
F: Single end bulbs (clear)
G: Double end bulbs
*: If equipped

Fuel information

▶ **Gasoline engine**

When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.



EU area:

You must only use unleaded gasoline conforming to European standard EN228.
Select unleaded gasoline with a Research Octane Number of 95 or higher for optimum engine performance.

Except EU area:
You must only use unleaded gasoline.
Select unleaded gasoline with a Research Octane Number of 95 or higher for optimum engine performance.

▶ **Diesel engine**

When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.



EU area:
You must use diesel fuel conforming to European standard EN590 or EN16734.

Except EU area:
You must use only diesel fuel that contains 10 ppm or less of sulfur with a cetane number of 48 or higher.

Russia only:
You must use only diesel fuel with a cetane number of 48 or higher.

You must use only diesel fuel confirming to GOST R52368-2005 (sulfur max 10 ppm).

■ **Use of ethanol blended gasoline in a gasoline engine**

Toyota allows the use of ethanol blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.

■ **If you plan to drive in foreign countries (diesel engine)**

Low sulfur diesel fuel may not be available, so please check the availability with your distributor.

■ **If your engine knocks**

- Consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

⚠ NOTICE

■ **Notice on fuel quality (gasoline engine)**

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use gasoline with metallic additives, for example manganese, iron or lead, otherwise it may cause damage on your engine or emission control system.
- Do not add aftermarket fuel additives which contain metallic additives.
- EU area: Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. The use of these fuels will damage the vehicle’s fuel system. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Except EU area: Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. Your vehicle can use gasoline mixed with 10% max ethanol. The use of fuel with more than 10% ethanol content (E10) will damage the vehicle’s fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not use the methanol blended gasoline such as M15, M85, M100. The use of gasoline containing methanol may cause engine damage or failure.

NOTICE

Notice on fuel quality (diesel engine)

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use a fuel that contains more than 10 ppm of sulfur.
  Use of such a high sulfur fuel may damage the engine.
- EU area: FAME (Fatty Acid Methyl Ester) fuel sold under names such as “B30” or “B100” and fuel containing a large amount of FAME should not be used. The use of these fuels will damage the vehicle’s fuel system. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Except EU area (except Russia): FAME (Fatty Acid Methyl Ester) fuel sold under names such as “B30” or “B100” and fuel containing a large amount of FAME should not be used. Your vehicle can use diesel mixed with 5% max biodiesel FAME (B5). The use of fuel with more than 5% FAME content (B5) will damage the vehicle’s fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Except EU area (Russia):
  FAME (Fatty Acid Methyl Ester) fuel sold under name such as “B30” or “B100” and fuel containing a large amount of FAME should not be used.
  The use of these fuel will damage the vehicle’s fuel system. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed using the multi-information display, on the navigation/multimedia system, or at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Some function settings are changed simultaneously with other functions being customized. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further details.

Customizing vehicle features

When customizing vehicle features, ensure that the vehicle is parked in a safe place with the shift lever in P (Multidrive) or N (manual transmission) and the parking brake set.

Various setting can be changed. Refer to the list of settings that can be changed for details.

■ **Changing using the multi-information display (vehicles with color display)**

1 Press ❮ or ❯ of the meter control switches and select  on the multi-information display.

2 Press ∧ or ∨ of the meter control switches and then press ⊙.

3 Press ∧ or ∨ of the meter control switches, and select the desired setting, and then press ⊙.

■ **Changing on the navigation or multimedia system screen (vehicles with a navigation or multimedia system)**

1 Press ⚙.

2 Select “Vehicle” on the “Setup” screen.
Select the desired item.

Various settings can be changed. Refer to the list of settings that can be changed for details.

Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further details.

① Vehicles with color display: Settings that can be changed using the multi-information display

② Vehicles with a Navigation/Multimedia system: Settings that can be changed using the Navigation/Multimedia system
(For further information on customizing settings using the Navigation/Multimedia system, refer to the “Navigation and multimedia system Owner’s manual”.)

③ Settings that can be changed by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer

Definition of symbols: O = Available, — = Not available

■ **Gauges, meters and multi-information display (→P. 115, P. 118)**

Function		Default setting	Customized setting	①	②	③
Language*1		English	*3	O	O	O
Units*1, 2		km (km/L)	km (L/100 km)	O	O	O
			miles (MPG)	O	O	O
		°C	°F	O	—	O
Eco Driving Indicator Light*4		On	Off	O	—	O
Drive information*1		Elapsed Time	Average Speed	O	—	O
Pop-up display*1	Incoming calls	On	Off	O	—	O
	Ⓐ Duration*5	On	Off	O	—	O
	Ⓐ Status*5	On	Off	O	—	O

*1: Vehicles with color display only

*2: The default setting varies according to countries.

*3: German, French, Spanish, Italian, Portuguese, Dutch, Swedish, Norwegian, Danish, Russian, Finnish, Greek, Polish, Ukrainian, Turkish, Hungarian, Czech, Slovak, Romanian

*4: Vehicles with a Multidrive

*5: Vehicles with a stop & start system

■ **Smart entry & start system* (→P. 154, 167)**

Function	Default setting	Customized setting	①	②	③
Smart entry & start system	ON	OFF	—	O	O
Operation signal (Emergency flashers)	ON	OFF	—	—	O
Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	30 seconds	60 seconds	—	—	O
		120 seconds			
Open door warning function (when locking the vehicle)	ON	OFF	—	—	O
Number of permissible times of continuous smart lock	Twice	Unlimited	—	—	O

*: If equipped

■ **Wireless remote control (→P. 143, 155)**

Function	Default setting	Customized setting	①	②	③
Wireless remote control	ON	OFF	—	—	O
Operation signal (Emergency flashers)	ON	OFF	—	O	O
Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	30 seconds	60 seconds	—	—	O
		120 seconds			
Open door warning buzzer (When locking the vehicle)	ON	OFF	—	—	O

■ **Follow me home system* (→P. 272)**

Function	Default setting	Customized setting	①	②	③
Time elapsed before headlights automatically turn off	30 seconds	60 seconds	—	—	O
		90 seconds			
		120 seconds			

*: If equipped

■ **Automatic light control system (→P. 271)**

Function	Default setting	Customized setting	①	②	③
Light sensor sensitivity	Level 3	Level 1 to 5	—	O	O

■ **PCS (Pre-Crash Safety system)* (→P. 295)**

Function	Default setting	Customized setting	①	②	③
Pre-Crash Safety system	On	Off	O	—	O
Warning timing	Middle	Far	O	—	O
		Near			

*: If equipped

■ **LDA (Lane Departure Alert)* (→P. 312)**

Function	Default setting	Customized setting	①	②	③
Sensitivity	High	Standard	O	—	O

*: If equipped

■ **RSA (Road Sign Assist)* (→P. 324)**

Function	Default setting	Customized setting	①	②	③
RSA system	On	Off	O	—	O
Excess speed	Only visual	Visual and audible	O	—	O
		No notification			
Notification level	2 km/h (1 mph)	5 km/h (3 mph)	O	—	O
		10 km/h (5 mph)			
Others	Only visual	Visual and audible	O	—	O
		No notification			

*: If equipped

■ Illumination (→P. 454)

Function	Default setting	Customized setting	①	②	③
Time elapsed before the interior lights turn off	15 seconds	7.5 seconds	—	O	O
		30 seconds			
Operation when the doors are unlocked	ON	OFF	—	—	O
Operation after the engine switch is turned off	ON	OFF	—	—	O
Operation when you approach the vehicle with the electronic key on your person*	ON	OFF	—	—	O
Interior lights illumination control	ON	OFF	—	—	O

*: Vehicles with a smart entry & start system

WARNING

■ During customization

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

NOTICE

■ During customization

To prevent battery discharge, ensure that the engine is running while customizing features.

Items to initialize

The following item must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

Item	When to initialize	Reference
Engine oil maintenance data*1	After changing engine oil	P. 495
Tire pressure warning system*2	• When rotating the tires on vehicles with differing front and rear tire inflation pressures • When changing tire pressure (such as when changing traveling speed) • When changing the tire size	P. 507

*1: Diesel engine only

*2: If equipped

Index

What to do if...
(Troubleshooting) 682
Alphabetical index 686

For vehicles with navigation system or multimedia system, refer to “Navigation and multimedia system Owner’s manual” for information regarding the equipment listed below.

- Navigation system
- Hands-free system (for cellular phone)
- Rear view monitor system
- Audio system

What to do if... (Troubleshooting)

If you have a problem, check the following before contacting any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

The doors cannot be locked, unlocked, opened or closed



You lose your keys

- If you lose your keys, new genuine keys can be made by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (→P. 145)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately. (→P. 153)



The doors cannot be locked or unlocked

- Is the key battery weak or depleted? (→P. 534)
- Vehicles with a smart entry & start system:
  Is the engine switch in IGNITION ON mode?
  When locking the doors, turn the engine switch off. (→P. 250)
- Vehicles with a smart entry & start system:
  Is the electronic key left inside the vehicle?
  When locking the doors, make sure that you have the electronic key on your person.
- The function may not operate properly due to the condition of the radio wave. (→P. 145, 170)



The rear door cannot be opened

- Is the child-protector lock set?
  The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P. 159)

If you think something is wrong

The engine does not start (vehicles without a smart entry & start system)

- Vehicles with a Multidrive:
  Is the shift lever in P? (→P. 245)
- Vehicles with a manual transmission:
  Did you turn the key while firmly depressing the clutch pedal? (→P. 245)
- Is the battery discharged? (→P. 632)

The engine does not start (vehicles with a smart entry & start system)

- Vehicles with a Multidrive:
  Did you press the engine switch while firmly depressing the brake pedal? (→P. 248)
- Vehicles with a manual transmission:
  Did you press the engine switch while firmly depressing the clutch pedal? (→P. 248)
- Vehicles with a Multidrive:
  Is the shift lever in P? (→P. 248)
- Is the electronic key anywhere detectable inside the vehicle? (→P. 168)
- Is the steering wheel unlocked? (→P. 254)
- Is the electronic key battery weak or depleted?
  In this case, the engine can be started in a temporary way. (→P. 629)
- Is the battery discharged? (→P. 632)

The shift lever cannot be shifted from P even if you depress the brake pedal (vehicles with a Multidrive)

- Vehicles without a smart entry & start system:
  Is the engine switch in the “ON” position?
  If you cannot release the shift lever by depressing the brake pedal with the engine switch in the “ON” position. (→P. 262)
- Vehicles with a smart entry & start system:
  Is the engine switch in IGNITION ON mode?
  If you cannot release the shift lever by depressing the brake pedal with the engine switch in IGNITION ON mode. (→P. 262)

The steering wheel cannot be turned after the engine is stopped

- Vehicles without a smart entry & start system:
  It is locked to prevent theft of the vehicle if the key is pulled from the engine switch. (→P. 246)
- Vehicles with a smart entry & start system:
  It is locked automatically to prevent theft of the vehicle. (→P. 254)

The windows do not open or close by operating the power window switches

- Is the window lock switch pressed?
  The power window except for the one at the driver’s seat cannot be operated if the window lock switch is pressed. (→P. 216)

The engine switch is turned off automatically (vehicles with a smart entry & start system)

- The auto power off function will be operated if the vehicle is left in ACCESSORY or IGNITION ON mode (the engine is not running) for a period of time. (→P. 253)

A warning buzzer sounds during driving

- The seat belt reminder light is flashing
  Is the driver wearing the seat belts? (→P. 582)
- The parking brake indicator is on
  Is the parking brake released? (→P. 578)

Depending on the situation, other types of warning buzzer may also sound. (→P. 578)

A warning buzzer sounds when leaving the vehicle (vehicles with a smart entry & start system)

- Is the electronic key left inside the vehicle?
  Vehicles with color display: Check the message on the multi-information display. (→P. 589)

A warning light turns on (vehicles with monochrome display)

- When a warning light turns on, refer to P. 578.

A warning light turns on or a warning message is displayed (vehicles with color display)

- When a warning light turns on or a warning message is displayed, refer to P. 578, 589.

When a problem has occurred

If you have a flat tire

- Vehicles without a spare tire
  Stop the vehicle in a safe place and repair the flat tire temporarily with the emergency tire puncture repair kit. (→P. 594)
- Vehicles with a spare tire
  Stop the vehicle in a safe place and replace the flat tire with the spare tire. (→P. 612)

The vehicle becomes stuck

- Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow. (→P. 645)

Alphabetical index

A

A/C 434, 442
Air conditioning filter 531
Automatic air conditioning system 442
Manual air conditioning system 434
ABS (Anti-lock Brake System) 350
Function 350
Warning light 579
Air conditioning filter 531
Air conditioning system 434, 442
Air conditioning filter 531
Automatic air conditioning system 442
Manual air conditioning system 434
Airbag manual on-off system ... 56
Airbags 43
Airbag manual on-off system 56
Airbag operating conditions 50
Airbag precautions for your child 45
Airbag warning light 579
Correct driving posture 34
Curtain shield airbag operating conditions 50
Curtain shield airbag precautions 47
General airbag precautions 45
Locations of airbags 43
Modification and disposal of airbags 49
Side airbag operating conditions 50
Side airbag precautions 47
Side and curtain shield airbags operating conditions 50
Side and curtain shield airbags precautions 47
SRS airbags 43
Alarm
Warning buzzer 578
Anchor brackets 60
Antenna
Radio 368, 472
Smart entry & smart system 167
Anti-lock Brake System (ABS) 350
Function 350
Warning light 579
Armrest 469
Ashtray 466
Assist grips 470
Audio system (with a navigation/ multimedia system)*1
Audio system (without a navigation/ multimedia system) 362
Bluetooth® audio 397
CD player 372
iPod 381
MP3/WMA disc 372
Optimal use 366
Radio 368
Steering wheel audio switch 364
USB memory 389
USB port 365
Automatic air conditioning system 442
Air conditioning filter 531
Automatic air conditioning system 442

Automatic High Beam 319
Automatic light control system 274
Auxiliary boxes 463

B

Back door
Back door 161
Luggage compartment light 163
Back-up lights
Replacing light bulb 560
Wattage 669
Battery 500
If the vehicle battery is discharged 632
Preparing and checking before winter 357
Replacing 636
Warning light 578
Bluetooth®*2
Audio system 414
Hands-free system (for cellular phone) 417
Bottle holders 459
Brake
Fluid 664
Parking brake 270
Warning light 578
Brake assist 350
Break-in tips 225
Brightness control
Instrument cluster light control 116, 120

C

Care 472, 476
Aluminum wheels 473
Exterior 472
Interior 476
Seat belts 477
CD player 372
Chains 359
Child restraint system 60
Fixed with a seat belt 60
Fixed with an ISOFIX rigid anchor 70
Points to remember 61
Riding with children 59
Types of child restraint system installation method 65
Using an anchor bracket 83
Junior seats installation 76
Child safety 59
Airbag precautions 45
Back door precautions 164
Battery precautions 501
Child restraint system 60
How your child should wear the seat belt 39
Installing child restraints 65
Power window lock switch 216
Power window precautions 219
Rear door child-protectors 159
Removed key battery precautions 536
Seat belt precautions 40
Seat heater precaution 452

*1: Refer to “Navigation and multimedia system Owner’s manual”.
*2: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Child-protectors **159**
Cigarette lighter **467**
Cleaning **472, 476**
Aluminum wheels 473
Exterior 472
Interior 476
Seat belts 477
Clock **125, 133**
Clutch **663**
Condenser **499**
Coolant **497**
Capacity 661
Checking 497
Preparing and checking before winter 357
Cooling system **497**
Engine overheating 638
CRS (Child Restraint System) **60**
Cruise control **330**
Warning lights 581
Warning messages 333
Cup holders **458**
Curtain shield airbags **43**
Customizable features **673**

D

Daytime running light system **274**
Replacing light bulbs 562
Defogger
Outside rear view mirrors 436, 447
Rear window 436, 447
Windshield 436, 446
Dimensions **648**
Display
Drive information 123, 129
Fuel consumption information 137
Multi-information display 122, 127
RSA (Road Sign Assist) 324
Warning messages 578
Do-it-yourself maintenance **482**
Door lock
Back door 161
Side doors 154
Smart entry & start system 167
Wireless remote control 143
Doors
Back door 161
Door glasses 216
Door lock 154, 161
Open door warning buzzer 168
Open door warning light 582
Outside rear view mirrors 213
Rear door child-protector 159
Side doors 154
Side windows 216
Double locking system **105**
Driver's seat belt reminder light **582**
Driving **222**
Break-in tips 225
Correct driving posture 34
Procedures 222
Winter drive tips 357

E

Eco Driving Indicator Light..... 114
Electric Power Steering (EPS)..... 350
Function 350
Warning light..... 579
Electronic key 142
Battery-saving function 169
If the electronic key does not operate properly 629
Replacing the battery..... 534
Emergency brake signal 350
Emergency flashers..... 566
Emergency, in case of
If a warning message is displayed..... 578
If the electronic key does not operate properly 629
If the engine will not start 627
If the vehicle battery is discharged..... 632
If the warning buzzer sounds..... 578
If the warning light turns on..... 578
If you have a flat tire..... 612, 594
If you lose your keys 145
If you run out of fuel and the engine stalls..... 643
If you think something is wrong..... 576
If your vehicle becomes stuck 645
If your vehicle has to be stopped in an emergency... 567
If your vehicle needs to be towed..... 569
If your vehicle overheats..... 638
Engine
“ACC” position 246
Accessory mode 250
Compartment..... 489
Engine switch..... 245, 248
Hood 485
How to start the engine..... 245, 248
Identification number 651
If the engine will not start..... 627
If you run out of fuel and the engine stalls 643
If your vehicle has to be stopped in an emergency... 567
Ignition switch (engine switch)..... 245, 248
Overheating 638
Engine coolant..... 497
Capacity..... 661
Checking..... 497
Preparing and checking before winter..... 357
Engine coolant temperature warning light..... 579
Engine immobilizer system 86

Engine oil **492**
Capacity 655
Checking 492
Preparing and checking before winter 357
Warning lights 583
Oil pressure warning messages 589
Engine oil maintenance data **495**
Engine switch (ignition switch) **245, 248**
Engine switch light (ignition switch light) **454**
EPS (Electric Power Steering) **350**
Function 350
Warning light 579

F

Flat tire **612, 594**
Floor mats **32**
Fluid
Brake 664
Clutch 663
Multidrive 662
Washer 503
Fog lights **276**
Replacing light bulbs 549, 562
Switch 276
Wattage 669
Follow me home system **272**
Front passenger's seat belt reminder light **582**
Front position lights **271**
Light switch 271
Replacing light bulbs 552
Wattage 669
Front seats **200**
Adjustment 200
Cleaning 476
Correct driving posture 34
Head restraints 206
Seat heaters 452
Front turn signal lights **269**
Replacing light bulbs 553
Turn signal lever 269
Wattage 669
Fuel
Capacity 654
Fuel gauge 115
Fuel pump shut off system 577
If you run out of fuel and the engine stalls 643
Information 670
Refueling 284
Type 654
Warning light 582
Fuel consumption
Average fuel consumption 124
Instantaneous fuel consumption 124
Fuel filter **504, 581**
Fuel filler door **284**
Refueling 284
Fuel pump shut off system **577**
Fuses **538**

G

Gas station information 700
Gauges..... 115
Gear Shift Indicator 267
Glove box 457

H

Hands-free system (for cellular phone)*..... 417
Hazard lights
Switch 566
Head restraints..... 206
Headlights 271
Automatic High Beam 319
Follow me home system 272
Light switch 271
Replacing light bulbs..... 546
Wattage..... 669
Heaters..... 434, 442
Automatic air conditioning system 442
Manual air conditioning system 434
Outside rear view mirrors 436, 447
Seat heaters..... 452
High mounted stoplight
Replacing light bulbs..... 562
Hood..... 485
Open 485
Hooks
Retaining hooks (floor mat)..... 32
Horn 209

I

Identification 650
Engine..... 651
Vehicle 650
Ignition switch (engine switch)..... 245, 248
Ignition switch light (engine switch light) 454
Illuminated entry system 455
Immobilizer system 86
Indicators 112
Initialization
Engine oil maintenance data 495
Items to initialize 680
Tire pressure warning system..... 507
Inside rear view mirror..... 211
Instrument cluster light control..... 116
Intercooler..... 499
Interior lights..... 454
Switch 454
Wattage 669
ISOFIX rigid anchors..... 65

*: For vehicles with navigation/multimedia system, refer to “Navigation and multimedia system Owner’s manual”.

J

Jack
Positioning a floor jack 487
Vehicle-equipped jack 613
Jack handle 613, 597
Jam protection function
Power window 217

K

Keyless entry
Smart entry & start system 167
Wireless remote control 143
Keys 142
Battery-saving function 169
Electronic key 142
Engine switch 245, 248
If the electronic key does not operate properly 629
If you lose your keys 145
Ignition switch 245, 248
Key number plate 142
Keyless entry 143
Mechanical key 144
Replacing the battery 534
Warning buzzer 168
Wireless remote control key 143
Knee airbags 43

L

Lane Departure Alert (LDA) 312
LDA (Lane Departure Alert) 312
Lever
Auxiliary catch lever 485
Hood lock release lever 485
Shift lever 257, 265
Turn signal lever 269
Wiper lever 278, 282
License plate lights 271
Light switch 271
Replacing light bulbs 558
Wattage 669
Light bulbs
Replacing 544
Wattage 669
Lights
Automatic High Beam 319
Engine switch light 454
Fog light switch 276
Follow me home system 272
Headlight switch 271
Ignition switch light 454
Illuminated entry system 455
Interior light 454
Interior lights list 454
Luggage compartment light 163
Personal lights 455
Replacing light bulbs 544
Turn signal lever 269
Vanity lights 465
Wattage 669
Lock steering column 246, 254
Luggage cover 461

M

Maintenance
Do-it-yourself maintenance ... 482
Maintenance data ... 648
Maintenance requirements ... 479
Malfunction indicator lamp ... 579
Manual headlight leveling dial ... 273
Manual transmission ... 265
Oil ... 663
Meter ... 115, 118
Indicators ... 112
Instrument cluster light control ... 116, 120
Meters ... 115, 118
Multi-information display ... 122, 127
Warning lights ... 108
Warning message ... 589
Mirrors
Inside rear view mirror ... 211
Outside rear view mirror defoggers ... 436, 447
Outside rear view mirrors ... 213
Vanity mirrors ... 464
MP3 disc ... 372
Multidrive ... 257
If the shift lever cannot be shifted from P ... 262
Paddle shift switches ... 259, 260
Multi-information display ... 122, 127
Drive information ... 123, 129
Fuel consumption information ... 137
RSA (Road Sign Assist) ... 324
Settings ... 131
Switching the display ... 128
Warning message ... 589
Multimedia system*

N

Navigation system*

O

Odometer ... 123
Oil
Engine oil ... 655
Manual transmission oil ... 663
Opener
Back door ... 162
Fuel filler door ... 286
Hood ... 485
Outside rear view mirrors ... 213
Adjusting and folding ... 213
Outside rear view mirror defoggers ... 436, 447
Outside temperature display ... 118
Overheating ... 638

*: Refer to “Navigation and multimedia system Owner’s manual”.

P

Paddle shift switches 259, 260
Parking brake 270
Operation 270
Parking brake engaged warning buzzer 578
PCS (Pre-Crash Safety system) 295
Function 295
PCS switch 299
Warning light 580
Warning message 310
Personal lights 455
Switch 455
Wattage 669
Portable ashtray 466
Power outlet 468
Power steering 350
Warning light 579
Power windows 216
Jam protection function 217
Operation 216
Window lock switch 216
Pre-Crash Safety system (PCS) 295
Function 295
PCS switch 299
Warning light 580
Warning message 310

R

Radiator 499
Radio 368
Radio data system 370
RDS 370
Rear fog light 276
Replacing light bulbs 562
Switch 276
Wattage 669
Rear passengers' seat belt reminder light 582
Rear seat 203
Folding down the rear seatbacks 203
Rear turn signal lights 269
Replacing light bulbs 556
Turn signal lever 269
Wattage 669
Rear view mirror
Inside rear view mirror 211
Outside rear view mirrors 213
Rear view monitor*
Rear window defogger 436, 447
Rear window wiper 282
Refueling 284
Capacity 654
Fuel types 654
Opening the fuel tank cap 286
Replacing
Electronic key battery 534
Fuses 538
Light bulbs 544
Tires 612, 594
Wireless remote control battery 534
Reset the maintenance data 495
Roof shade 469

S

Seat belt reminder light 582
Seat belts 36
Child restraint system installation 65
Cleaning and maintaining the seat belt 477
Emergency Locking Retractor (ELR) 39
How to wear your seat belt 36
How your child should wear the seat belt 39
Pregnant women, proper seat belt use 40
Reminder light and buzzer 582
Seat belt pretensioners 39
SRS warning light 579
Seat heaters 452
Seats 200, 203
Adjustment 200
Adjustment precautions 202
Child seats/child restraint system installation 65
Cleaning 476
Folding down the rear seatbacks 203
Head restraints 206
Properly sitting in the seat 34
Seat heaters 452
Sensor
Automatic headlight system 274
Automatic High Beam 289
Camera sensor 289
Inside rear view mirror 212
Laser sensor 289
LDA (Lane Departure Alert) 289
PCS (Pre-Crash Safety system) 289
Rain-sensing wind shield wipers 280
RSA (Road Sign Assist) 324
Shift lever 257, 265
If the shift lever cannot be shifted from P 262
Manual transmission 265
Multidrive 257
Shift lock system 261
Side airbags 43
Side doors 154
Side mirrors 213
Adjusting and folding 213
Heaters 436, 447
Side turn signal lights 269
Replacing light bulbs 554
Turn signal lever 269
Wattage 669

*: For vehicles with navigation/multimedia system, refer to “Navigation and multimedia system Owner’s manual”.

Smart entry & start system 167
Antenna location 167
Entry functions 154, 161
Starting the engine 248
Warning lights 581
Warning message 169
Snow tires 357
Spare tire 613
Inflation pressure 665
Storage location 613
Spark plug 662
Specifications 648
Speed limiter 334
Warning lights 581
Speedometer 115, 118
Steering lock 246, 254
Steering wheel 209
Adjustment 209
Audio switches 364
Meter control switches 128
Telephone switches 403
“TRIP” switch 123
Stop & Start system 339
Warning lights 581
Stop lights
Emergency brake signal 350
Replacing light bulbs 556, 562
Wattage 669
Storage feature 456
Stuck
If the vehicle becomes stuck 645
Sun shade
Roof 469
Sun visors 464

Switches
Audio remote control switches 364
Automatic High Beam switch 319
Cruise control switch 330
Door lock switch 158
Emergency flashers switch 566
Engine switch 245, 248
Fog light switch 276
Hazard switch 566
Ignition switch 245, 248
LDA (Lane Departure Alert) switch 313
Light switch 271
Meter control switches 128
Outside rear view mirror switches 213
Paddle shift switches 259, 260
PCS (Pre-Crash Safety system) switch 299
Power door lock switch 158
Power window switches 216
Rear window defogger switch 436, 447
Rear window wiper and washer switch 282
Seat heater switches 452
“SPORT” button 258
Speed limiter switch 334
Stop & Start cancel switch 340
Talk switch*
Telephone switches 403
Tire pressure warning reset switch 508
“TRIP” switch 123
VSC OFF switch 351
Window lock switch 216
Windshield wipers and washer switch 278

T

Tachometer 115, 118
Tail lights 271
Light switch 271
Replacing light bulbs 556, 562
Wattage 669
Talk switch*
Telephone switches 403
Theft deterrent system
Double locking system 105
Engine immobilizer system 86
Tire inflation pressure 525
Maintenance data 665
Warning light 582
Tire pressure warning system 507
Function 507
Initializing 507
Installing tire pressure warning valves and transmitters 507
Registering ID codes 509
Tire pressure warning reset switch 508
Warning light 582
Tires 505
Chains 359
Checking 505
If you have a flat tire 612, 594
Inflation pressure 665
Replacing 612, 594
Rotating tires 506
Size 665
Snow tires 357
Spare tire 612
Tire pressure warning reset switch 508
Warning light 582
Tools 597, 613
Top strap 83
Towing
Emergency towing 569
Towing eyelet 571
Trailer towing 235
Toyota Safety Sense 287
Traction control 350
Trailer towing 235
Transmission 257, 265
If the shift lever cannot be shifted from P 262
Manual transmission 265
Multidrive 257
Paddle shift switches 259, 260
Trip meters 115, 118
Turn signal lights 269
Replacing light bulbs 553, 556
Turn signal lever 269
Wattage 669

*: For vehicles with navigation/multimedia system, refer to “Navigation and multimedia system Owner’s manual”.

U

USB memory 389
USB port 365

V


Vanity lights 465
Wattage..... 669
Vanity mirrors 464
Vehicle identification number 650
Vehicle Stability Control (VSC)..... 350
VSC (Vehicle Stability Control) 350

W

Warning buzzers
Brake system 578
Downshifting 263
Electric power steering..... 579
Key reminder..... 246
LDA (Lane Departure Alert)..... 312
Open door 582
Parking brake..... 578
PCS (Pre-Crash Safety system)..... 295
RSA (Road Sign Assist)..... 324
Seat belt reminder..... 582
Smart entry & start system.... 168
Warning lights..... 110
ABS..... 579
Automatic High Beam indicator..... 581
Brake system 578
Charging system..... 578
Cruise control indicator..... 581
Driver's and front passenger's seat belt reminder light..... 582
Electric power steering system..... 579
Engine coolant temperature..... 579
Engine oil pressure..... 578
Engine system 579
Engine oil change reminder light..... 583
Fuel filter..... 581
High engine coolant temperature..... 579
Lane marker indicators 581
LDA (Lane Departure Alert) indicator..... 581

Low engine oil level....583
Low engine oil pressure....578
Low fuel level....582
Malfunction indicator lamp....579
Master warning....583
Open door....582
PCS (Pre-Crash Safety system)....580
Rear passengers' seat belt reminder lights....582
Slip indicator....580
Smart entry & start system indicator....581
Speed limiter indicator....581
SRS....579
Stop & Start cancel indicator....581
Tire pressure....582
Warning messages....589
Washer....278, 282
Checking....503
Preparing and checking before winter....357
Switch....278, 282
Washing and waxing....472
Weight....648
Wheels....527
Replacing....527
Size....665
Window glasses....216
Window lock switch....216
Windows....216
Power windows....216
Rear window defogger....436, 447
Washer....278
Windshield wipers....278
Intermittent windshield wipers....278
Rain-sensing windshield wipers....279
Winter driving tips....357
Wireless remote control key....143
Battery-saving function....169
Locking/Unlocking....143
Replacing the battery....534
WMA disc....372

GAS STATION INFORMATION

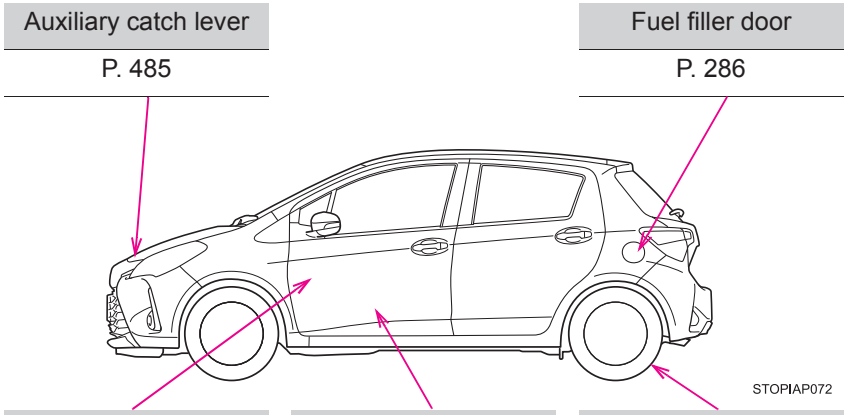

Fuel tank capacity (Reference)	▶ Gasoline engine 42 L (11.1 gal., 9.2 Imp.gal.) ▶ Diesel engine 41 L (10.8 gal., 9.0 Imp.gal.)
Fuel type	P. 654, 670
Cold tire inflation pressure	P. 665
Engine oil capacity (Drain and refill — reference)	P. 655, 660
Engine oil type	P. 656, 660