



SIGNING INTO YOUR SYSTEM

How to log into your system using your credentials.

Logging In:

- 1 Log in using your DecoPac.com credentials by selecting 'My PhotoCake'.
- 2 A screen will appear that will prompt you to sign in.
- 3 Select the box area and a keyboard will appear.
- 4 Enter in the email address and password you use to log in to your DecoPac.com account.
 - Note that the password is case sensitive
 - If you do not remember your email or password, please contact Technology Support for assistance or go to DecoPac.com to reset your credentials.
- 5 Select the arrow symbol to submit the credentials.


Note: Internet connection will time out after 4 hours of inactivity. Simply log in again to reestablish a connection.

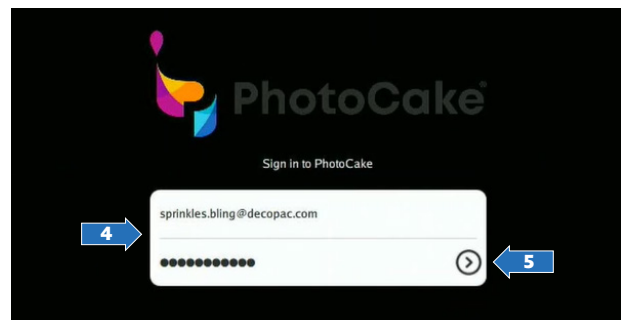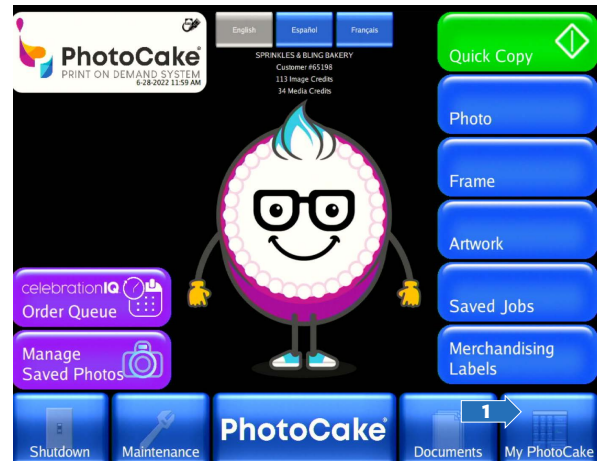

Logging Out:

- 6 Select the 'My PhotoCake' button on the main screen.
- 7 Select 'Logout' in the upper right corner.

Reminder: It is a best practice to shut down the system when not in use.

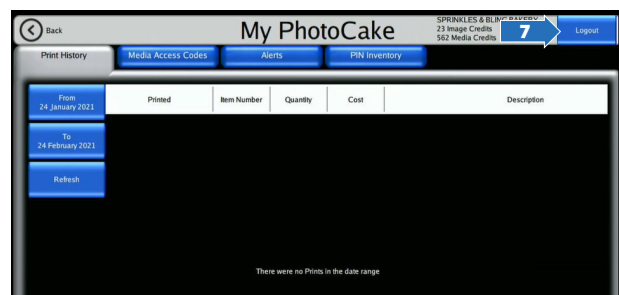

NEED MORE HELP?

Call 1 (800) 644-1228

Press 2 to connect with a PhotoCake Technical Support Representative
Hours: Monday – Friday 7am to 7pm,
Saturday 7am to 2pm


INICIO DE SESIÓN EN TU SISTEMA

Cómo iniciar sesión en tu sistema utilizando tus credenciales.

Cómo iniciar la sesión:

- 1 Inicia sesión utilizando tus credenciales de DecoPac.com seleccionando 'Mi PhotoCake'.
- 2 Aparecerá una pantalla que te pedirá que inicies sesión.
- 3 Selecciona la casilla y aparecerá un teclado.
- 4 Introduce la dirección de correo electrónico y la contraseña que utilizas para acceder a tu cuenta de DecoPac.com.
 - Ten en cuenta que la contraseña es sensible a mayúsculas y minúsculas.
 - Si no recuerdas tu correo electrónico o tu contraseña, ponte en contacto con el servicio de atención al cliente para que te ayude o ve a DecoPac.com para restablecer tus credenciales.
- 5 Selecciona el símbolo de la flecha para enviar las credenciales.

Nota: La conexión a Internet caduca después de 4 horas de inactividad. Simplemente inicie sesión nuevamente para restablecer la conexión.

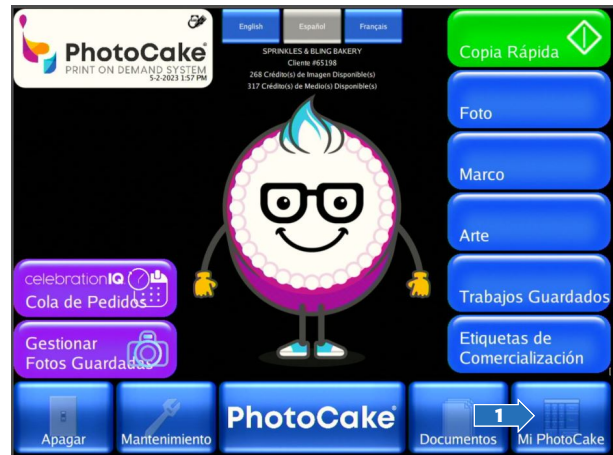

Cierre de sesión:

- 6 Selecciona 'Mi PhotoCake' en la pantalla principal.
- 7 Selecciona 'Cerrar sesión' en la esquina superior derecha.

Recordatorio: Es buena práctica apagar el sistema cuando no esté en uso.



¿NECESITA MÁS AYUDA?

LLAME AL 1 (800) 644-1228

Presione 2 para conectarse con un Técnico de Soporte de PhotoCake
Horas: Lunes – Viernes 7am a 7pm ,
Sabados 7am a 2pm