

Mount on window/door frames and will detect if a window/ or door is opened. The alarm instantly turns ON.....and will automatically shut OFF in approximately 30 seconds.


EASY TO INSTALL:

- Open the battery cover in alarm unit to install the 12V battery
- Stick the alarm unit (large unit) to the door/window frame using double-sided tape.
- Stick the sensor unit (smaller unit) to the window/door with double-sided tape and make sure to align the arrow mark to the arrow mark on the battery cover of large unit. (Fig.1)

NOTE: This product is for either right or left hand sided applications (factory preset at right hand side).

To convert unit to left hand side:

- Open the battery cover (front) by sliding it down.
- Gently pull out the "reed switch box" at right of the battery
- Place the "reed switch box" to the left of the battery and firmly fix into position. (Fig.2)
- Turn switch to ON position, and unit is in standby mode.

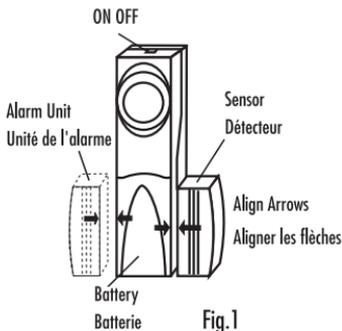

Se fixe sur l'encadrement de la fenêtre ou de la porte et détecte si la porte ou la fenêtre est ouverte. L'alarme se met instantanément en marche... et s'éteint automatiquement après 30 secondes.

FACILE À INSTALLER

- Ouvrir le réceptacle de la batterie dans l'unité de l'alarme pour installer la batterie de 12 V
- Coller l'unité de l'alarme (grande unité) au cadre de la porte ou de la fenêtre avec du ruban adhésif double-face.
- Coller l'unité du détecteur (plus petite unité) à la porte ou à la fenêtre avec du ruban adhésif double-face et bien aligner la flèche avec la flèche du réceptacle de la batterie de la grande unité. (Schéma 1)

REMARQUE : Ce produit peut être utilisé du côté latéral droit ou gauche (programmation en usine pour une utilisation du côté latéral droit).

Pour utiliser l'unité du côté latéral gauche :

- Ouvrir le réceptacle de la batterie (devant) en le glissant vers le bas.
- Tirer doucement sur l'interrupteur à lames souples à droite de la batterie
- Placer l'interrupteur à lames souples à gauche de la batterie et fixer fermement en place. (Schéma 2)
- Allumer l'interrupteur. L'unité se met en mode de veille.

