

National Guard Products Inc.

1-800-647-7874
www.ngp.com



140S Astragal Seal

Install only on outside of outswinging door or inside of inswinging door.

Installation Instructions

1. Cut astragal to length. Cut from one end, not closer than 1" to the adjusting screw. If necessary to shorten more, cut other end.
2. Position seal on door as shown above.
3. Loosely secure the top screws, bottom screws, and center screws.
4. Once properly aligned, tighten these screws, and install remaining screws.
5. Adjust astragal so it does not impede proper closing and latching of the doors.




UL10C Positive Pressure Tested Gasketing Material for Fire Doors.



UL10B Gasketing materials for fire doors,

Intended for application to classified Steel fire doors rated up to 3 hours and wood type fire doors rated up to and including 1 1/2 hours.

5/11

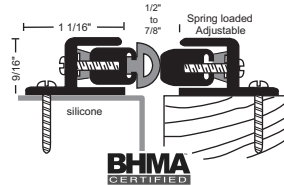

Instale solamente en la parte exterior de una puerta que abra hacia fuera, o en la parte interior de una puerta que abra hacia adentro.

Instrucciones de instalación:

1. Corte el astrágalo al largo requerido. Corte desde un extremo, no más cercano de 1" al tornillo de ajuste. De ser necesario acortar más, corte el otro extremo.
2. Coloque el sello en la puerta según se muestra arriba.
3. Asegure levemente los tornillos superiores, inferiores y centrales.
4. Una vez estén alineados debidamente, apriete estos tornillos e instale los tornillos restantes.
5. Ajuste el astrágalo, de modo que no impida cerrar y correrle el pasador debidamente a las puertas.