
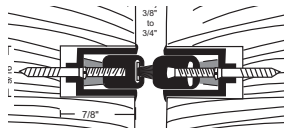


144P/144S Astragal

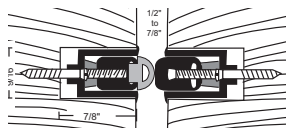

Installation Instructions

1. Cut astragal to length. **NOTE** Cut from one end, no closer than 1" to the adjusting screw. If necessary to cut more, cut other end.
2. Prepare the door by mortising 7/8" deep x 9/16" .
3. Remove gasketing from bar.
4. Remove adjusting screws and inner bar.
5. Position outer case into mortised portion of door.
6. Fasten outer case with screws provided.
7. Replace inner bar and adjusting screws.
8. Replace gasketing.
9. Adjust so astragal does not impede proper closing and latching of doors.

Instrucciones de instalación:

1. Corte el astrágalo al largo deseado. **NOTA:** Corte desde un extremo, de manera que quede un espacio mínimo de 1" hasta el tornillo de ajuste. De ser necesario cortar más, corte por el otro extremo.
2. Prepare la puerta labrando una mortaja de 7/8" de profundidad x 9/16" de ancho para 144P.
3. Remueva material de la barra.
4. Remueva los tornillos de ajuste y la barra interna.
5. Coloque el cajetín externo en la parte de la puerta que tiene la mortaja.
6. Atornille el cajetín externo con los tornillos suministrados.
7. Reemplace la barra interna y los tornillos de ajuste.
8. Reemplace el gasketing.
9. Ajuste de modo que el astrágalo no impida cerrar y correr el pestillo a las puertas debidamente.