


Replaces American Standard
No. 738651-0070A

Reemplaza al modelo No.
738651-0070A

To Replace Valve Seal

1. Shut off water supply to toilet and flush toilet until tank is empty.
2. Disconnect flush valve chain from trip lever.
3. Lift valve up and remove old seal by pulling out of groove and sliding up over valve.
4. Install new seal by sliding down over flush valve and seat in groove.
5. Reattach chain to trip lever.
6. Turn on water supply.

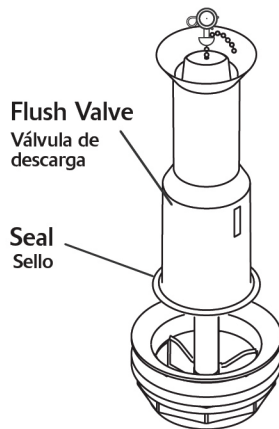

Para reemplazar el sello de la válvula

1. Cierre el suministro de agua hacia el inodoro y descargue el inodoro hasta que el tanque esté vacío.
2. Desconecte la cadena de la válvula de descarga de la palanca de descarga.
3. Levante la válvula y quite el sello viejo jalándolo fuera de la ranura y deslizándolo hacia arriba sobre la válvula.
4. Instale el sello nuevo deslizándolo hacia abajo sobre la válvula de descarga y siéntelo en la ranura.
5. Vuelva a fijar la cadena a la palanca de descarga.
6. Abra el suministro de agua.