# Whirlpool® All Refrigerator


## PRODUCT MODEL NUMBERS

WRF57R18D WSR57R18D
WRR56X18F

**Recommended grounding method**
A 115 Volt, 60 Hz., AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


**NOTE:** Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See “Using the Controls.”

## PRODUCT DIMENSIONS

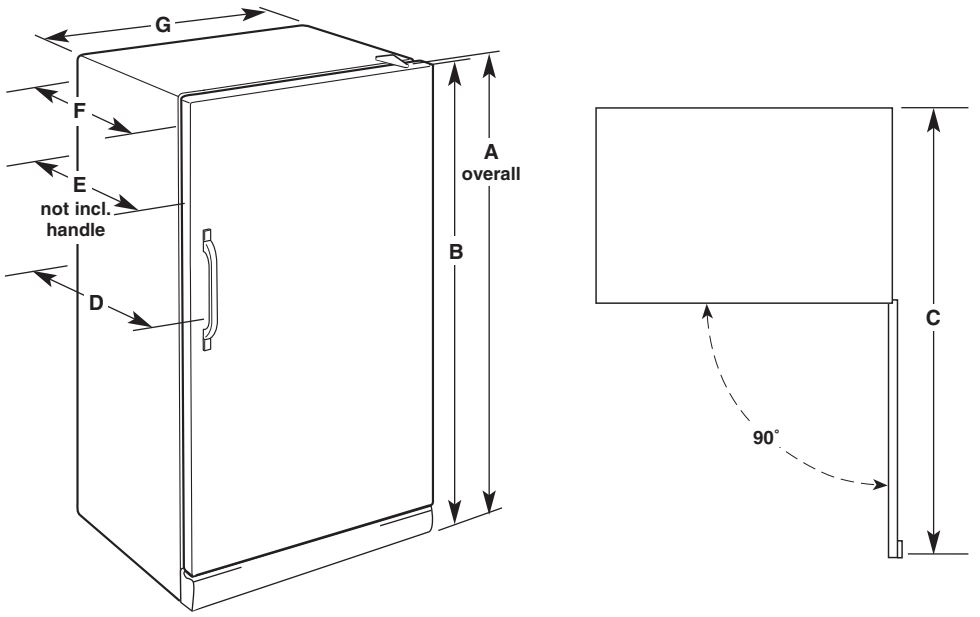


| Model Number | Model Size | Door Swing | Height - Overall “A” | Height - Top of Cabinet “B” | Depth - Door Open 90° “C” | Depth - With Handles “D” | Depth - Without Handles “E” | Depth - Cabinet Only “F” | Width - Cabinet “G” |
|---|---|---|---|---|---|---|---|---|---|
| WRF57R18D WRR56X18F | 17.7 cu. ft. | Right | 66¾" (169.5 cm) | 66¼" (168.3 cm) | 55⅞" (141.9 cm) | 30" (76.2 cm) | 29⅛" (74 cm) | 24⅝" (62.5 cm) | 30¼" (76.8 cm) |
| WSR57R18D | 17.7 cu. ft. | Right | 66¾" (169.5 cm) | 66¼" (168.3 cm) | 55¾" (141.6 cm) | 31¼" (79.4 cm) | 28⅞" (73.3 cm) | 24⅝" (62.5 cm) | 30¼" (76.8 cm) |

## LOCATION REQUIREMENTS

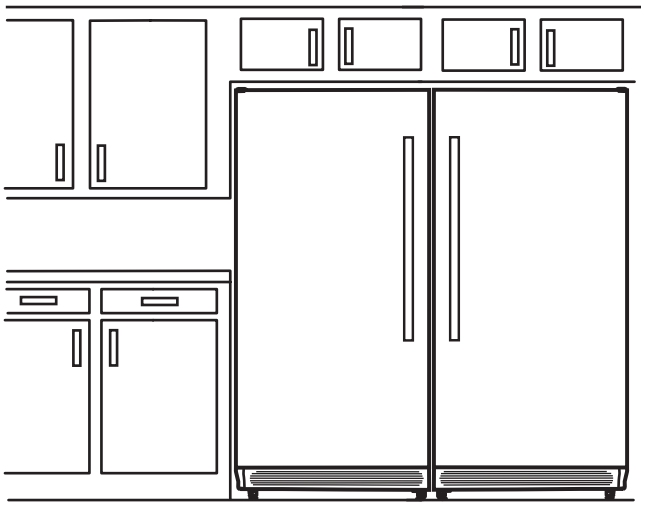

**Ventilation and Clearance**

- This freezer may be installed side by side with another refrigerator or freezer. Allow at least 1" (2.54 cm) between back of cabinet and the wall, and a ¼" (6.4 mm) clearance between the appliances.
- If you are installing your refrigerator next to a fixed wall, leave extra space on the hinge side so the door can open wider.
- Keep flammable materials and vapors, such as gasolline, away from freezer.
- Do not cover the freezer with items such as blankets, sheets, tablecloths, etc. This reduces air circulation.

**Temperature**
Your freezer operates most efficiently when located in an area where the temperature will not fall below 40°F (5°C). Place your freezer in a location where the temperature will not fall below this recommended temperature.

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice.

Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice.

Ref. W10668406B
02/16